

5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS


DISASSEMBLY

HARDWARE LIST

5-1-1. OVERALL SECTION

Note: Please refer to "THE COMBINATION OF CABINET'S COLOR AND SCREW" on page 5-1 about the combination cabinet's color and screw.

Note: キャビネット色とネジの組合わせについては、5-1 ページの "THE COMBINATION OF CABINET'S COLOR AND SCREW" を参照してください。

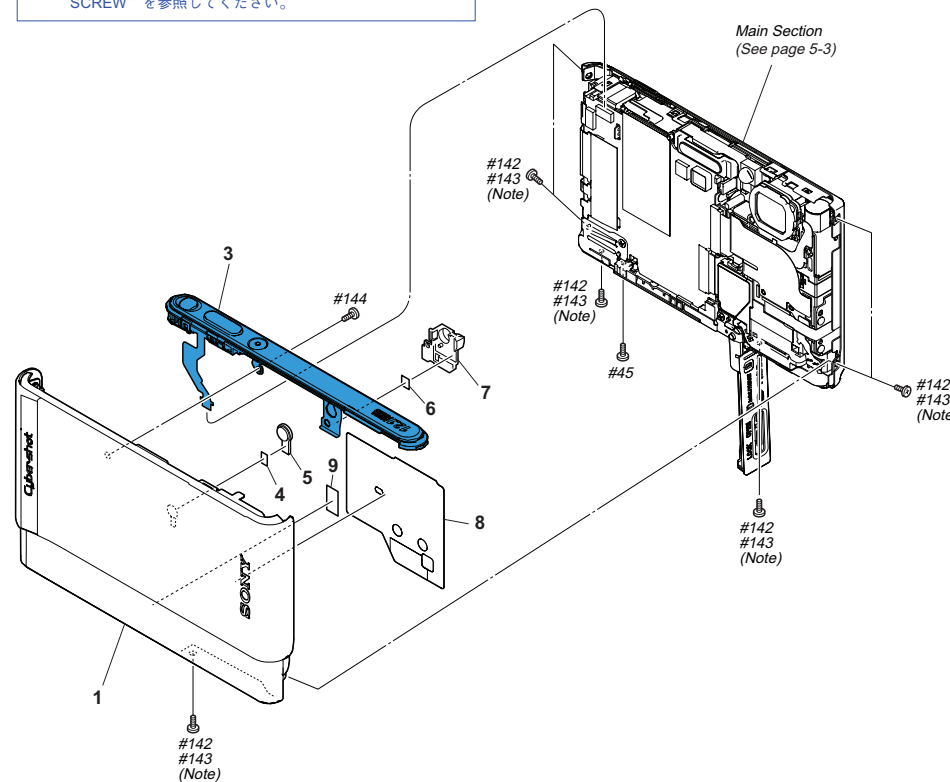

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	X-2348-312-1	CABINET (FRONT) ASSY (S) (SILVER)	4	4-111-393-01	SHEET, AF WINDOW ADHESIVE
1	X-2348-313-1	CABINET (FRONT) ASSY (P) (PINK)	5	4-111-370-01	WINDOW, AF
1	X-2348-314-1	CABINET (FRONT) ASSY (B) (BLACK)	* 6	4-111-399-01	SHEET, PLAY BUTTON ADHESIVE
1	X-2348-315-1	CABINET (FRONT) ASSY (T) (BROWN)	7	4-111-394-01	HOLDER, AF WINDOW
1	X-2348-316-1	CABINET (FRONT) ASSY (L) (BLUE)	8	4-111-395-01	SHEET, LENS FLEXIBLE PROTECTION
1	X-2348-317-1	CABINET (FRONT) ASSY (W) (WHITE)	* 9	4-125-406-01	BT FLEX PROTECT SHEET
3	1-487-205-11	SWITCH BLOCK, CONTROL (RL61230) (SILVER/BLACK/BROWN)	#45	2-587-151-01	SCREW (M1.4), NEW TRUSTAR.P2 (Silver)
3	1-487-205-21	SWITCH BLOCK, CONTROL (RL61230) (PINK)	#142	4-111-392-01	HEAD (NEW TORASUTA) M1.4 (Silver) (Note)
3	1-487-205-31	SWITCH BLOCK, CONTROL (RL61230) (BLUE)	#143	4-111-392-11	HEAD (NEW TORASUTA) M1.4 (Black) (Note)
3	1-487-205-41	SWITCH BLOCK, CONTROL (RL61230) (WHITE)	#144	4-111-392-21	HEAD (NEW TORASUTA) M1.4 (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. ST/REAR SECTION

ns: not supplied

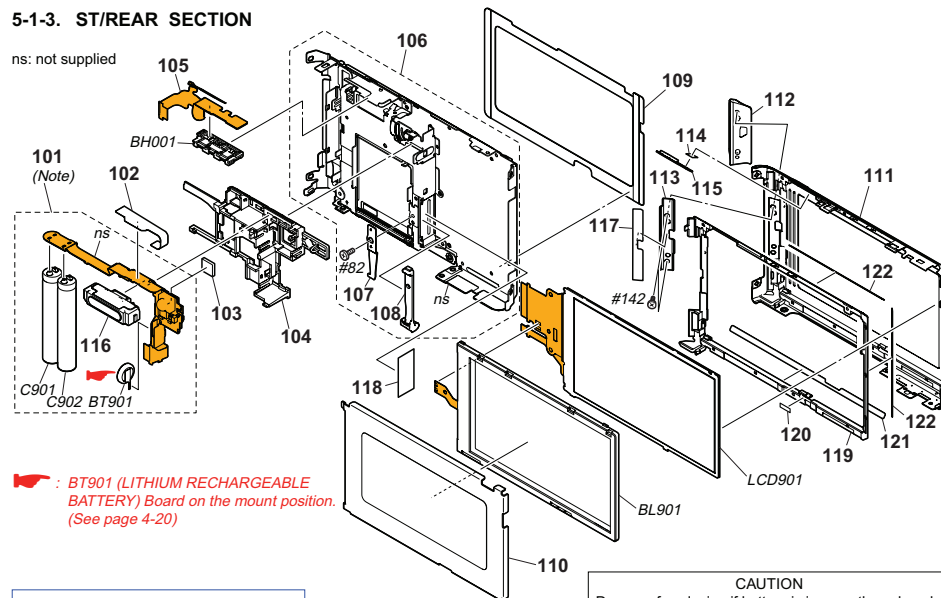

: BT901 (LITHIUM RECHARGEABLE BATTERY) Board on the mount position.
(See page 4-20)

Note: Be sure to read "HELP14" when you install the ST-199 flexible board.

Note: ST-199フレキシブル基板取り付け時は、“HELP14”を必ずお読みください。

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
101	A-1557-173-A	ST-199 FLEXIBLE BOARD, COMPLETE (Note)
* 102	4-111-398-01	CUSHION, ST
103	4-111-387-01	CUSHION, AF
104	4-138-429-01	HOLDER, ST
105	1-877-837-11	BT-044 FLEXIBLE BOARD
106	X-2319-578-1	FRAME ASSY (210)
107	4-111-363-01	SPRING, BT LOCK
108	4-111-362-02	CLAW, BT LOCK
109	4-111-386-01	CUSHION, LCD
* 110	4-111-384-01	FRAME, BL
111	X-2348-318-1	CABINET (REAR) ASSY (S) (SILVER)
111	X-2348-319-1	CABINET (REAR) ASSY (P) (PINK)
111	X-2348-320-1	CABINET (REAR) ASSY (B) (BLACK)
111	X-2348-321-1	CABINET (REAR) ASSY (T) (BROWN)
111	X-2348-322-1	CABINET (REAR) ASSY (L) (BLUE)
111	X-2348-323-1	CABINET (REAR) ASSY (W) (WHITE)
112	4-138-427-01	STRAP (SILVER)
112	4-138-427-11	STRAP (PINK)
112	4-138-427-21	STRAP (BLACK)
112	4-138-427-31	STRAP (BROWN)
112	4-138-427-41	STRAP (BLUE)
112	4-138-427-51	STRAP (WHITE)
113	4-111-373-01	PLATE (G), REAR

Ref. No.	Part No.	Description
* 114	4-111-399-01	SHEET, PLAY BUTTON ADHESIVE
115	4-138-426-01	BUTTON, PLAY (SILVER)
115	4-138-426-11	BUTTON, PLAY (PINK)
115	4-138-426-21	BUTTON, PLAY (BLACK)
115	4-138-426-31	BUTTON, PLAY (BROWN)
115	4-138-426-41	BUTTON, PLAY (BLUE)
115	4-138-426-51	BUTTON, PLAY (WHITE)
Δ 116	1-480-964-11	FLASH UNIT (FL61210)
* 117	4-139-300-01	SHEET, LCD FLEXIBLE PROTECTION
118	4-132-947-01	SHEET, BT FRAME
119	4-111-376-01	HOLDER, LCD
120	4-143-460-01	SHEET, LCD REINFORCEMENT
121	4-111-377-01	SHEET (L), LCD HOLDER ADHESIVE
122	4-111-378-01	SHEET (S), LCD HOLDER ADHESIVE
Δ BH001	1-780-651-11	TERMINAL BOARD, BATTERY
BL901	1-480-913-11	BLOCK, LIGHT GUIDE PLATE (3.0)
Δ BT901	1-756-813-11	LITHIUM RECHARGEABLE BATTERY
Δ * C901	1-114-874-11	CAP, ELECT 28uF 315V
Δ * C902	1-114-873-11	CAP, ELECT 21uF 315V
LCD901	A-1551-533-A	FTS BLOCK ASSY (30SHGU08)
#82	3-272-251-01	SCREW (M1.4), HEAD PRECISION (Silver)
#142	4-111-392-01	HEAD (NEW TORASUTA) M1.4 (Silver)

5-2. ELECTRICAL PARTS LIST

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
	1-877-837-11	BT-044 FLEXIBLE BOARD ***** (BH001 is not included in BT-044 flexible board.) (S001 is not supplied, but this is included in BT-044 flexible board.)
		< BATTERY TERMINAL >
△BH001	1-780-651-11	TERMINAL BOARD, BATTERY
		< SWITCH >
S001	(Not supplied)	SWITCH (▶) (S001 is supplied including in BT-044 flexible board.)

Electrical parts list of the CD-743 flexible board
is not shown.
Page 5-6 is not shown.

Ref. No.	Part No.	Description
	A-1557-173-A	ST-199 FLEXIBLE BOARD, COMPLETE *****
△	1-480-964-11	FLASH UNIT (FL61210)
		< BATTERY >
△ BT901	1-756-813-11	LITHIUM RECHARGEABLE BATTERY
		< CAPACITOR >
* C002	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C003	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
△ C005	1-100-758-11	CERAMIC CHIP 0.047uF 10% 250V
C006	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 50V
△* C901	1-114-874-11	CAP, ELECT 28uF 315V
△* C902	1-114-873-11	CAP, ELECT 21.9uF 315V
		< DIODE >
△ D003	6-501-096-01	DIODE CRF02 (TE85R)
* D004	6-501-861-01	DIODE CL-360S-TD4-X-TL (AF ILLUMINATOR/SELF-TIMER)
		< IC >
△* IC001	6-712-975-01	IC BD4215NUV-E2
		< COIL >
* L001	1-400-820-11	INDUCTOR 2.2uH
		< TRANSISTOR >
△* Q001	6-551-922-01	TRANSISTOR RJP4002ASA-00-Q0
		< RESISTOR >
△ R003	1-216-121-11	METAL CHIP 1M 5% 1/10W
R004	1-218-989-11	METAL CHIP 1M 5% 1/16W
R005	1-218-941-11	METAL CHIP 100 5% 1/16W
		< TRANSFORMER >
△* T001	1-445-491-21	D.C.-D.C.CONVERTER TRANSFORMER

Electrical parts list of the SY-226 board is not shown.
Pages from 5-8 to 5-10 are not shown.


CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。


• Refer to page 5-1 for mark △.

Checking supplied accessories.

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.



**Battery Charger
(BC-CSD)**
 ▲ 1-480-352-12 (J)
 ▲ 1-480-352-22 (US, CND)




**Battery Charger
(BC-CSD)**
 ▲ 1-480-352-32
 (EXCEPT US, CND, J)



Conversion (2P) Adaptor
 ▲ 1-569-008-12
 (E (Except Middle East))



Conversion (2P) Adaptor
 ▲ 1-569-007-12 (JE)




**Rechargeable Battery Pack
(NP-BD1)/Battery Case**
 ▲ A-1310-294-A (J)
 ▲ A-1310-297-A (CH)
 ▲ A-1567-200-A (US, CND)
 ▲ A-1579-841-A
 (EXCEPT US, CND, CH, J)



**Power Cord (Mains Lead)
(EXCEPT US, CND, J)**
 ▲ 1-783-952-71 (AR)
 ▲ 1-832-121-41 (CH)
 ▲ 1-832-169-41 (UK, HK)
 ▲ 1-833-892-41 (KR)
 ▲ 1-834-482-31 (AEP, E)
 ▲ 1-835-983-11 (AUS)
 ▲ 1-836-251-11 (JE)



Instruction Manual
 4-130-941-01 (JAPANESE) (J)
 4-130-941-11 (ENGLISH) (CND, AEP, UK, E, HK, AUS, JE)
 4-130-941-21 (FRENCH, ITALIAN) (CND, AEP)
 4-130-941-31 (SPANISH, PORTUGUESE) (AEP, E, AR, JE)
 4-130-941-41 (GERMAN, DUTCH) (AEP)
 4-130-941-51 (TRADITIONAL CHINESE,
 SIMPLIFIED CHINESE) (E, HK, JE)
 4-130-941-61 (RUSSIAN, UKRAINIAN) (AEP)
 4-130-941-71 (ARABIC, PERSIAN) (E)
 4-130-941-81 (KOREAN) (KR, JE)
 4-130-941-91 (POLISH, CZECH) (AEP)
 4-130-942-11 (HUNGARIAN, SLOVAK) (AEP)
 4-130-942-21 (SWEDISH, FINNISH) (AEP)
 4-130-942-31 (NORWEGIAN, DANISH) (AEP)
 4-130-942-41 (THAI, MALAY) (E)
 4-130-942-51 (TURKISH, GREEK) (AEP)
 4-130-942-61 (ENGLISH, SPANISH) (US)
 4-130-942-71 (SIMPLIFIED CHINESE) (CH)



**USB, A/V Cable for
Multi-use Terminal**
 1-835-875-11




Paint Pen
 2-888-952-01 (Black)
 (BLACK, BROWN Models)
 2-888-952-11 (Gray)
 (SILVER, PINK, BLUE, WHITE Models)



Wrist Strap
 2-050-981-01 (Gray)
 (SILVER, PINK, BLUE, WHITE Models)
 2-050-981-11 (Black)
 (BLACK, BROWN Models)



CD-ROM
 (Cyber-shot application software/
 "Cyber-shot Handbook"/
 "Cyber-shot Step-up Guide")
 4-130-937-01



Cyber-shot Handbook (PDF)


The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Cyber-shot Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.
- (Only for destination Japanese model)
 日本国内については日本語のみが印刷での部品供給可能です。


- | | |
|--------------------------------------|----------------------------|
| 4-130-938-01 (JAPANESE) | * 4-130-939-51 (POLISH) |
| * 4-130-938-11 (ENGLISH) | * 4-130-939-61 (CZECH) |
| * 4-130-938-21 (FRENCH) | * 4-130-939-71 (HUNGARIAN) |
| * 4-130-938-31 (ITALIAN) | * 4-130-939-81 (SLOVAK) |
| * 4-130-938-41 (SPANISH) | * 4-130-939-91 (SWEDISH) |
| * 4-130-938-51 (PORTUGUESE) | * 4-130-940-11 (FINNISH) |
| * 4-130-938-61 (GERMAN) | * 4-130-940-21 (NORWEGIAN) |
| * 4-130-938-71 (DUTCH) | * 4-130-940-31 (DANISH) |
| * 4-130-938-81 (TRADITIONAL CHINESE) | * 4-130-940-41 (THAI) |
| * 4-130-938-91 (SIMPLIFIED CHINESE) | * 4-130-940-51 (MALAY) |
| * 4-130-939-11 (RUSSIAN) | * 4-130-940-61 (TURKISH) |
| * 4-130-939-21 (ARABIC) | * 4-130-940-71 (GREEK) |
| * 4-130-939-31 (PERSIAN) | * 4-130-940-81 (UKRAINIAN) |
| * 4-130-939-41 (KOREAN) | |

HARDWARE LIST (1/9)


#1: M1.7 X 2.5
(Black)
2-635-562-11




#2: M1.7 X 4.0
(Black)
2-635-562-31




#3: M1.7 X 2.5
(Red)
2-660-401-01




#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81




#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01




#6: M1.4 X 1.7
(Silver)
2-598-474-01




#7: M1.7 X 1.6
(Black)
7-627-552-18




#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01




#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21




#10: M1.7 X 4.0
(Silver)
2-599-475-31




#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11




#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21




#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01




#14: M1.7 X 2.5
(Silver)
2-599-475-11




#15: M1.4 X 1.5
(Silver)
3-062-214-01




#16: M1.4 X 2.5
(Silver)
2-586-337-01




#17: M1.7 X 1.5
(Silver)
2-586-389-01




#18: M1.4 X 2.5
(Silver)
2-635-591-21



#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21




#20: M1.4 X 3.0
(Silver)
2-635-591-31




HARDWARE LIST (2/9)


#21: M1.4 X 3.0
(Black)
2-662-396-21




#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01




#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11




#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11




#25: M1.7 X 3.0
(Black)
2-635-562-21




#26: M1.4 X 2.0
(Silver)
2-635-591-11




#27: M1.4 X 2.0
(Black)
2-662-396-11




#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61




#29: M1.4 X 2.5
(Black)
2-662-396-01




#30: M1.2 X 3.5 (Tapping)
(White)
3-086-156-11




#31: M3.0 X 4.0
(Silver)
2-102-434-01




#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01




#33: M3.0 X 6.0
(Silver)
3-077-331-21




#34: M3.0 X 8.0
(Black)
3-077-331-41




#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02




#36: M3.0 X 6.0
(Silver)
4-886-821-11




#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31




#38: M3.0 X 20.0 (Tapping)
(Black)
7-685-651-79























#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09



#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04




HARDWARE LIST (3/9)

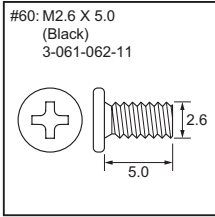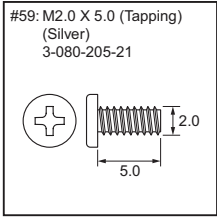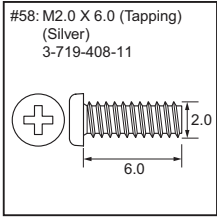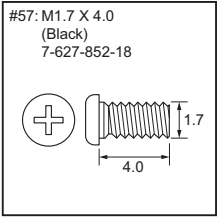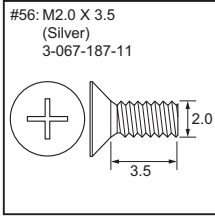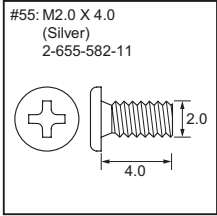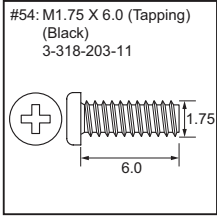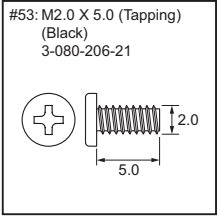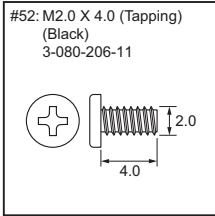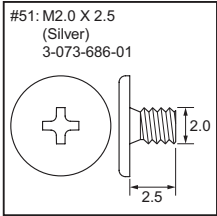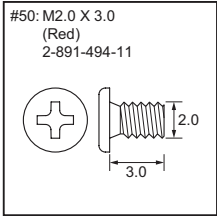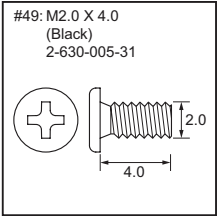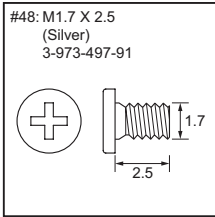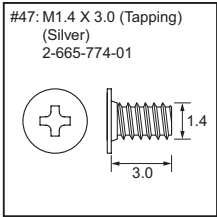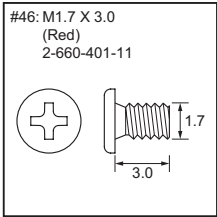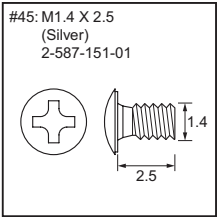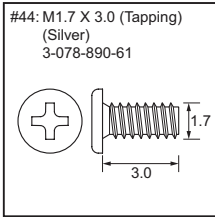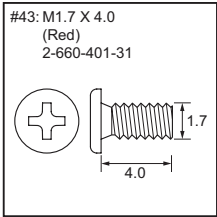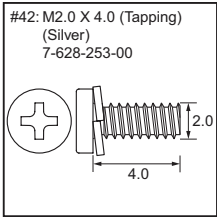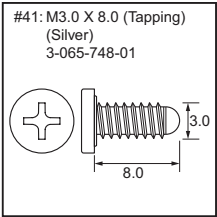


HARDWARE LIST (4/9)


#61: M3.0 X 10.0
(Black)
7-682-549-09




#62: M2.0 X 3.0
(Silver)
3-080-202-21




#63: M5.0 X 12.5
(Black)
3-060-811-21




#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21




#65: M1.4 X 3.5
(Silver)
2-635-591-01




#66: M1.4 X 1.4
(Silver)
2-635-591-41




#67: M1.4 X 2.0
(Silver)
3-389-523-16




#68: M1.7 X 4.0
(Silver)
2-655-581-01




#69: M1.7 X 3.0
(Silver)
2-599-475-21




#70: M1.7 X 5.0
(Silver)
2-599-475-41




#71: M1.4 X 2.0
(Red)
3-208-537-01




#72: M1.4 X 2.0
(Silver)
4-663-621-41




#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61




#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31




#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01




#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11




#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31




#78: M1.4 X 3.5
(Red)
3-208-537-11























#79: M1.4X 2.0
(Silver)
2-587-151-11



#80: M1.4X 2.0
(Black)
3-279-411-01




HARDWARE LIST (5/9)

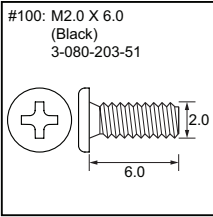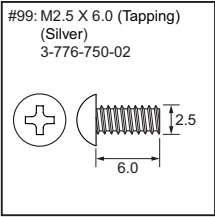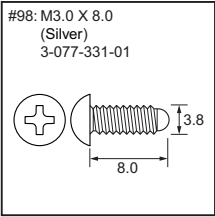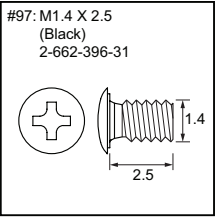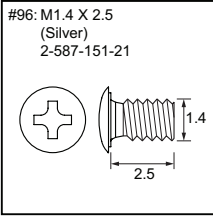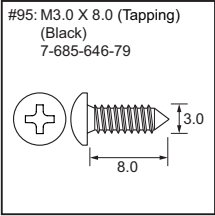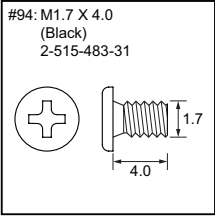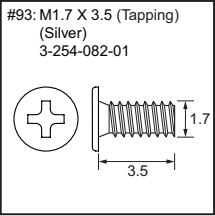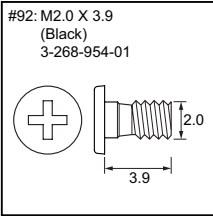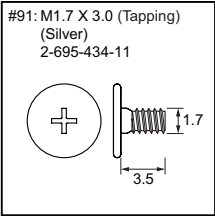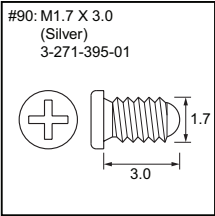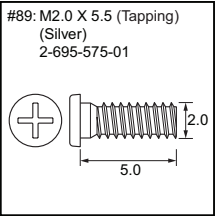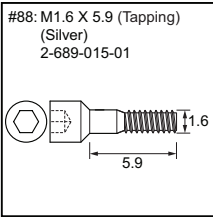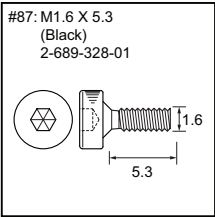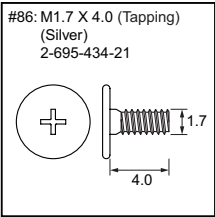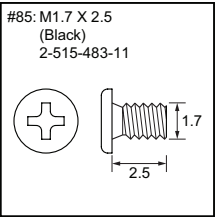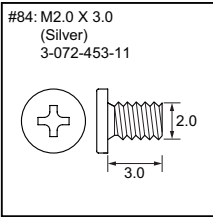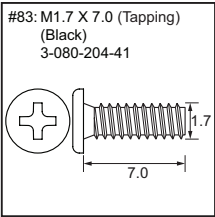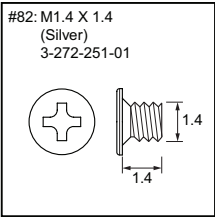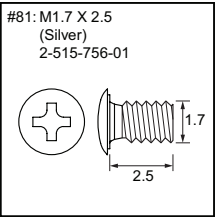


HARDWARE LIST (6/9)


#101: M2.0 X 5.0
(Silver)
7-621-555-39




#102: M2.6 X 8.0
(Black)
7-621-284-30




#103: M2.6 X 10.0
(Silver)
7-685-794-09




#104: M3.0 X 8.0
(Black)
7-682-548-09




#105: M2.0 X 4.0
(Red)
2-891-494-31




#106: M2.0 X 6.0
(Black)
3-713-786-11




#107: M2.0 X 5.0
(Silver)
3-032-750-01




#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01




#109: M1.7 X 3.0
(Black)
2-515-483-21




#110: M2.0 X 3.0
(Black)
2-630-005-21




#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01




#112: M1.4 X 5.0
(Black)
2-178-410-11




#113: M1.7 X 5.0
(Black)
2-635-562-41




#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01




#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51




#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01




#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31




#118: M1.4 X 2.0
(Black)
2-655-580-01



#119: M2.6 X 5.0
(Black)
7-627-556-58




#120: M2.6 X 6.0
(Silver)
7-621-770-67




HARDWARE LIST (7/9)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11




#122: M3.0 X 6.0
(Black)
7-682-547-09




#123: M4.0 X 8.0
(Black)
7-682-561-09




#124: M1.7 X 2.0
(Silver)
2-599-475-01




#125: M1.4 X 3.0
(Black)
3-291-847-01




#126: M2.9 X 3.5
(Black)
3-292-616-01




#127: M3.0 X 25.0
(Black)
7-682-654-09




#128: M4.0 X 12.0
(Black)
3-452-472-01




#129: M3.0 X 12.0
(Black)
7-682-550-09




#130: M2.0 X 4.5 (Tapping)
(Silver)
3-732-817-11




#131: M4.0 X 12.0
(Silver)
3-452-471-01




#132: M2.6 X 6.0
(Black)
4-673-655-01




#133: M3.0 X 6.0
(Black)
3-452-484-01




#134: M2.6 X 7.0
(Black)
3-299-572-01




#135: M2.0 X 2.5
(Black)
7-627-553-28




#136: M1.4 X 4.0 (Tapping)
(Black)
3-065-509-11




#137: M1.7 X 3.0
(Black)
3-090-976-62




#138: M1.4 X 3.5
(Silver)
4-104-078-01



#139: M1.4 X 2.0
(Silver)
2-655-579-01




#140: M1.7 X 2.0
(Black)
2-635-562-01




HARDWARE LIST (8/9)


#141: M2.6 X 5.0 (Tapping)
(Silver)
7-685-791-01




#142: M1.4 X 2.0
(Silver)
4-111-392-01




#143: M1.4 X 2.0
(Black)
4-111-392-11




#144: M1.4 X 1.2
(Silver)
4-111-392-21




#145: M1.4 X 2.4
(Silver)
4-111-248-01




#146: M1.4 X 2.4
(Black)
4-111-248-11




#147: M1.4 X 3.5
(Black)
2-662-396-41




#148: M1.7 X 3.0
(Silver)
3-057-082-21




#149: M1.6 X 7.5 (Tapping)
(Silver)
4-115-505-01




#150: M1.4 X 3.0
(Black)
4-105-150-01




#151: M1.4 X 1.4
(Silver)
3-272-251-11




#152: M1.4 X 2.5
(Black)
4-116-473-11




#153: M1.4 X 1.5
(Silver)
3-059-718-01




#154: M2.6 X 8.0
(Silver)
7-627-556-97




#155: M1.7 X 6.0 (Tapping)
(Black)
3-080-204-31




#156: M1.4 X 4.0
(Silver)
2-635-591-61




#157: M1.7 X 5.0 (Tapping)
(Black)
4-132-562-01




#158: M1.7 X 5.0
(Black)
(Red)
2-660-401-51




#159: M1.4 X 4.0
(Black)
2-662-396-51



#160: M1.4 X 3.0
(Silver)
4-139-851-01



HARDWARE LIST (9/9)

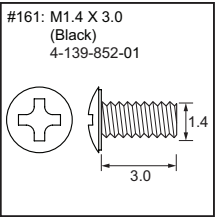

Reverse

985267032.pdf

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2009.02	Official Release	—	—
1.1	2009.03	Revised-1 (A1 DI08-361)	• Correction of Schematic Diagram S.M. revised: Page 4-14	Yes