

SECTION 6
EXPLODED VIEWS


- Note:
- -XX and -X mean standardized parts, so they may have some difference from the original one.
 - Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - The mechanical parts with no reference number in the exploded views are not supplied.

- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)
Parts Color Cabinet's Color
- Accessories are given in the last of the electrical parts list.
- Abbreviation
RU : Russian model

The components identified by mark Δ or dotted line with mark Δ are critical safety. Replace only with part number specified.

The components identified by mark Δ contain confidential information. Strictly follow the instructions whenever components are repaired and/or replaced.


6-1. OVERALL SECTION

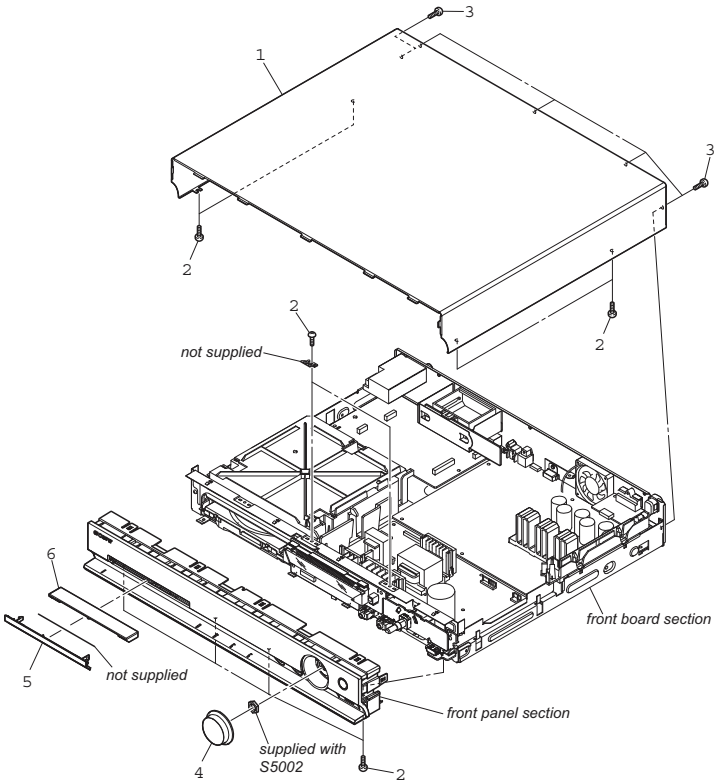

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description
1	4-159-516-12	CASE (DSZ)		4	4-159-500-02	KNOB, VOL (DSZ)
2	3-077-331-21	+BV3 (3-CR)		5	4-159-492-01	PANEL, LOADING
3	3-077-331-11	+BV3 (3-CR)		6	4-159-493-02	BASE, LOADING


HBD-DZ330/DZ710/DZ730

6-2. FRONT PANEL SECTION

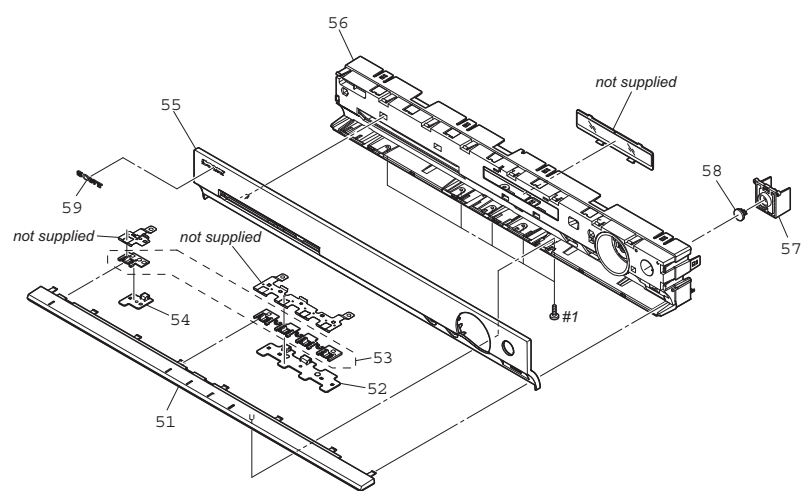

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-159-494-02	ESCUTCHEON (DSZ) (DZ330:AEP)		55	4-159-490-01	WINDOW (DSZ)	
51	4-168-139-12	ESCUTCHEON (DSZ-2) (DZ730)		56	4-159-491-01	BASE, FRONT (DSZ)	
51	4-168-139-22	ESCUTCHEON (DSZ-2) (DZ710)		57	4-159-496-02	BASE, BUTTON (USB)	
51	4-168-139-52	ESCUTCHEON (DSZ-2) (DZ330:UK)		58	4-159-497-01	BUTTON (USB-DSZ)	
52	A-1746-218-A	KEY-SW BOARD, COMPLETE		59	4-160-803-01	EMBLEM, SONY (4.5A)	
53	4-159-495-01	BUTTON (PLAY)		#1	7-685-504-19	SCREW +BTP 2X6 TYPE2 N-S	
54	A-1746-219-A	P-SW BOARD, COMPLETE					

6-3. FRONT BOARDS SECTION

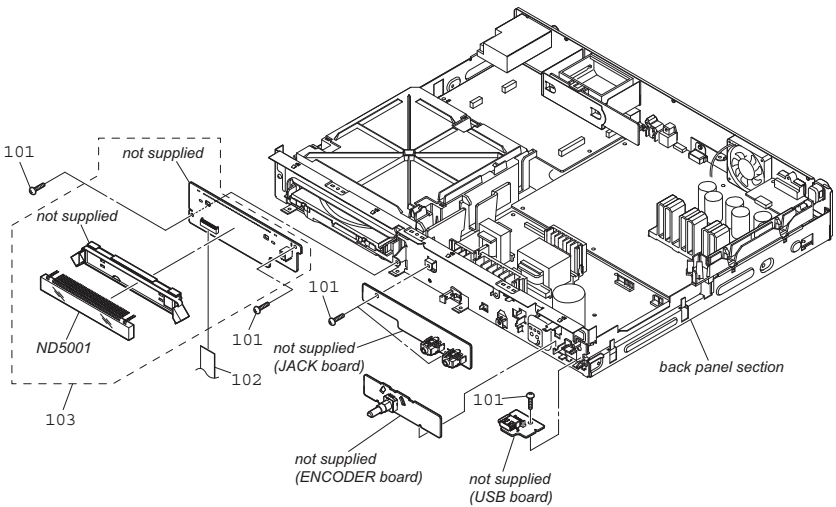


Note: If the wire (flat type) was replaced, fold it some wire (flat type) before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-077-331-21	+BV3 (3-CR)		103	A-1746-449-A	FL BOARD, COMPLETE (DZ710)	
102	1-832-579-21	CABLE, FLEXIBLE FLAT (13 CORE)	(DZ330/DZ730)	103	A-1746-473-A	FL BOARD, COMPLETE (DZ330/DZ730)	
102	1-832-589-21	CABLE, FLEXIBLE FLAT (15 CORE)	(DZ710)	ND5001	1-483-107-21	FLUORESCENT INDICATOR TUBE	

HBD-DZ330/DZ710/DZ730


6-4. BACK PANEL SECTION

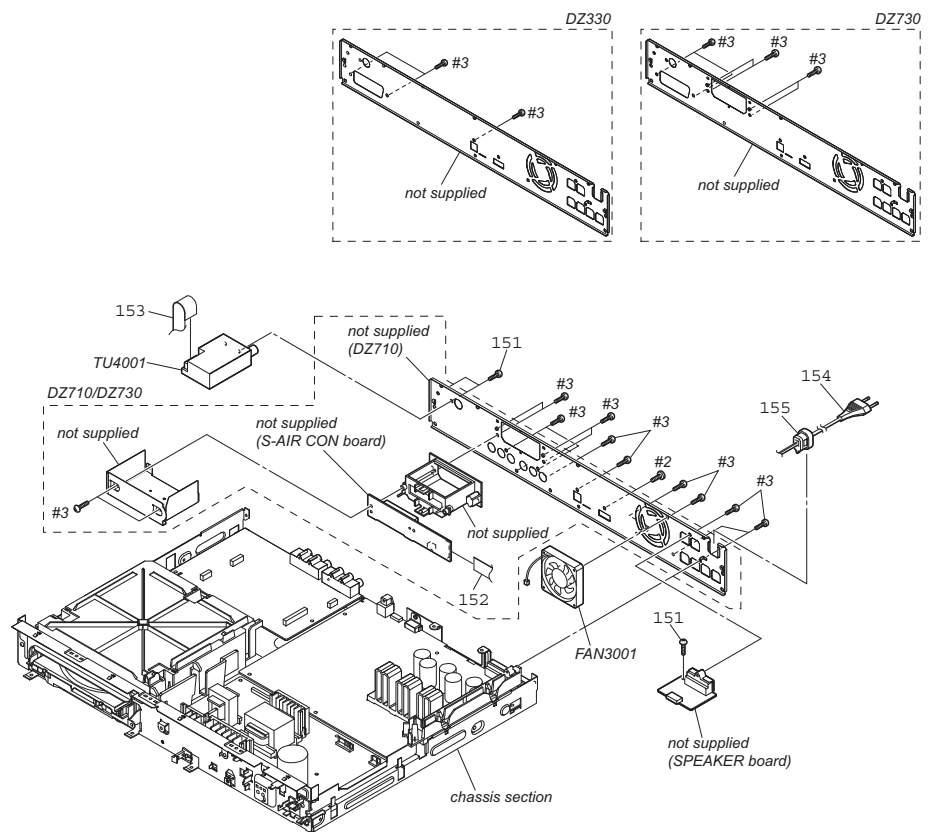

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	3-077-331-21	+BV3 (3-CR)		155	3-703-244-00	BUSHING, CORD (2104)	
152	1-832-576-21	CABLE, FLEXIBLE FLAT (13 CORE)		FAN3001	1-787-396-21	FAN, DC (50 SQUARE)	
		(DZ710/DZ730)		TU4001	1-693-787-11	TUNER (FM) (ANTENNA (COAXIAL 75Ω FM))	
153	1-832-823-21	CABLE, FLEXIBLE FLAT (11 CORE)		#2	7-682-547-04	SCREW +B 3X6	
△ 154	1-834-966-41	CORD, POWER-SUPPLY (AEP,RU)		#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
△ 154	1-835-078-31	CORD, POWER (UK)					

6-5. CHASSIS SECTION

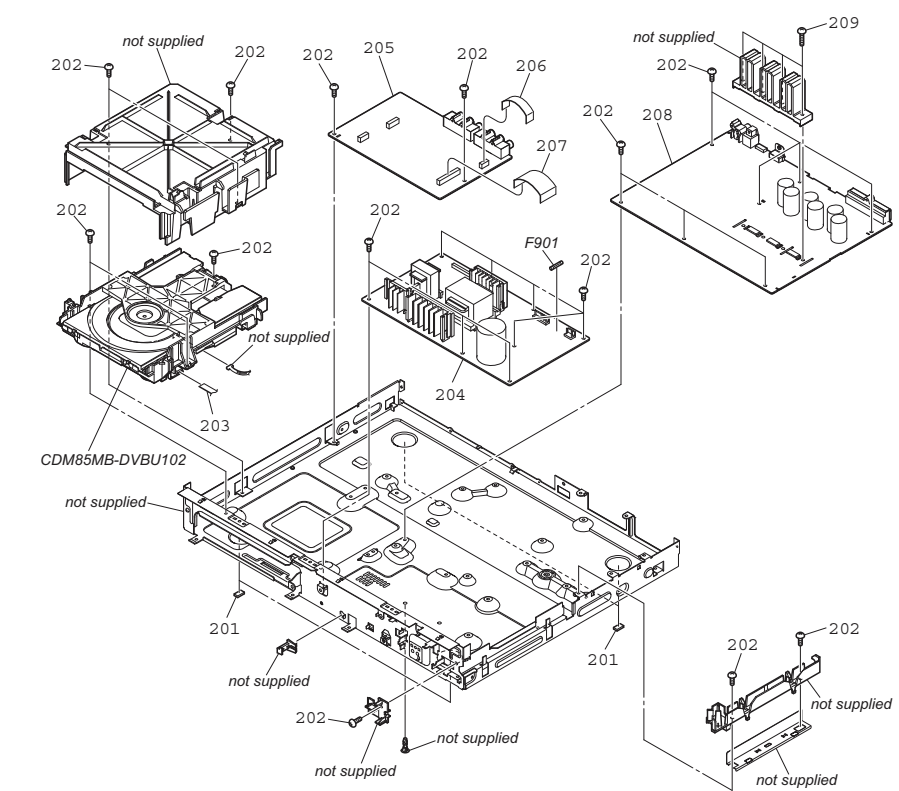


Note: If the wire (flat type) was replaced, fold it some wire (flat type) before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-151-413-01	CUSHION (EGD)		207	1-832-602-21	CABLE, FLEXIBLE FLAT (19 CORE)	
202	3-077-331-21	+BV3 (3-CR)		207	1-832-612-21	CABLE, FLEXIBLE FLAT (21 CORE) (DZ330/DZ710)	
203	1-832-538-21	CABLE, FLEXIBLE FLAT (5 CORE)		208	A-1746-799-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ710)	
204	A-1745-459-A	POWER BOARD, COMPLETE (DZ330)		208	A-1746-800-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ710)	
204	A-1761-519-A	POWER BOARD, COMPLETE (DZ730)		208	A-1746-810-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ710)	
204	A-1761-521-A	POWER BOARD, COMPLETE (DZ710)		208	A-1746-812-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ710)	
205	A-1746-476-A	IO BOARD, COMPLETE (DZ330)		209	3-077-331-11	+BV3 (3-CR)	
205	A-1746-578-A	IO BOARD, COMPLETE (DZ730)		F901	1-576-232-51	FUSE (H.B.C.) (5A/250V)	
205	A-1746-596-A	IO BOARD, COMPLETE (DZ710)					
206	1-832-553-21	CABLE, FLEXIBLE FLAT (9 CORE) (DZ710)					
206	1-832-563-21	CABLE, FLEXIBLE FLAT (11 CORE) (DZ330/DZ730)					

HBD-DZ330/DZ710/DZ730

6-6. DVD MECHANISM DECK SECTION (CDM85MB-DVBU102)

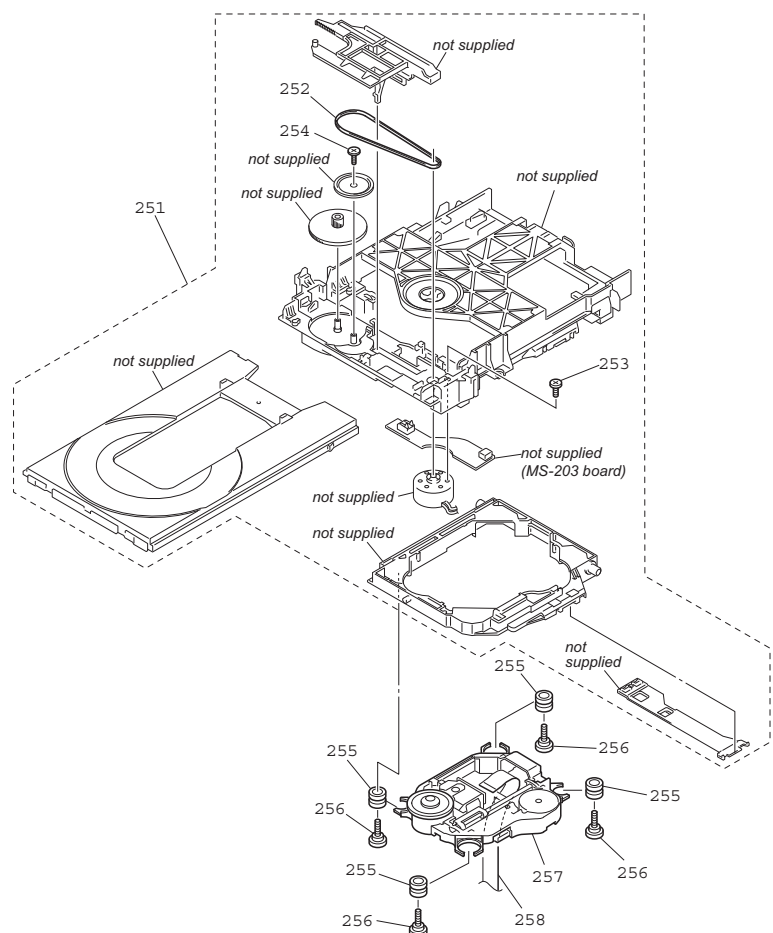

Note: If the wire (flat type) was replaced, fold it some as the wire (flat type) before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-1749-923-A	CDM85 (MB) ASSY		255	2-634-618-01	INSULATOR	
252	3-088-371-01	BELT		256	3-087-599-01	SCREW, INSULATOR	
253	4-974-725-11	SCREW (M1.7X2.5), P		257	8-820-321-12	OPTICAL PICK-UP (KHM-313CAA/C2RP1)	
254	4-674-137-11	SCREW (PTP2X5)		258	1-828-773-51	WIRE (FLAT TYPE) (24 CORE)	

SECTION 7
ELECTRICAL PARTS LIST

ENCODER

- Note:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
 - -XX and -X mean standardized parts, so they may have some difference from the original one.
 - Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
 - CAPACITORS
uF: μ F
COILS
uH: μ H
SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A..., uPA..., μ PA...,
uPB... : μ PB..., uPC..., μ PC...,
uPD... : μ PD...
Abbreviation
RU : Russian model

When indicating parts by reference
ber, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical safety.
Replace only with part number specified.

The components identified by mark Δ contain confidential information.
Strictly follow the instructions whenever components are repaired and/or replaced.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		ENCODER BOARD *****		C5014	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		< CAPACITOR >		C5022	1-126-157-11	ELECT 10uF 20% 16V	
C5029	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C5023	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C5030	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C5026	1-115-156-11	CERAMIC CHIP 1uF 10V	
		< DIODE >		C5027	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V	
D5004	6-502-469-01	LED SLI-325URT31WR (REC TO USB)				< CONNECTOR >	
		< TRANSISTOR >		* CN5001	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P	
Q5002	8-729-028-96	TRANSISTOR DTC114EUA-T106		CN5002	1-779-552-21	CONNECTOR, FFC (LIF (NON-ZIF)) 15P (DZ330)	
		< RESISTOR >		* CN5003	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P (DZ710)	
R5013	1-216-811-11	METAL CHIP 150 5% 1/10W		CN5005	1-779-550-21	CONNECTOR, FFC (LIF (NON-ZIF)) 13P (DZ330)	
R5025	1-216-833-11	METAL CHIP 10K 5% 1/10W		CN5006	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P (DZ330)	
R5026	1-216-837-11	METAL CHIP 22K 5% 1/10W				< DIODE >	
R5027	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		D5001	6-500-848-01	DIODE MC2840-T112-1	
R5028	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		D5002	6-500-848-01	DIODE MC2840-T112-1	
		< SWITCH >		D5003	6-501-729-01	DIODE MAZ8051GLLS0	
S5001	1-762-875-21	SWITCH, KEYBOARD (REC TO USB)		D5005	6-501-817-01	DIODE MA2J1110GLS0	
		< ROTARY ENCODER >		D5006	6-500-848-01	DIODE MC2840-T112-1	
S5002	1-480-136-11	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)				< IC >	
		*****		IC5001	6-702-302-01	IC TK11133CSCL-G	
	A-1746-449-A	FL BOARD, COMPLETE (DZ710)		IC5002	6-713-497-01	IC HT16515	
	A-1746-473-A	FL BOARD, COMPLETE (DZ330/DZ730)		IC5003	6-600-767-01	IC PNA4823M02S0 (IR)	
		*****				< JUMPER RESISTOR >	
		< CAPACITOR >		JR5001	1-216-296-11	SHORT CHIP 0	
C5001	1-100-909-11	CERAMIC CHIP 10uF 10% 6.3V				< COIL >	
C5003	1-126-382-11	ELECT 100uF 20% 16V		L5001	1-410-671-31	INDUCTOR 47uH	
C5004	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		L5002	1-410-671-31	INDUCTOR 47uH	
C5005	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V		L5003	1-410-671-31	INDUCTOR 47uH	
C5006	1-163-037-11	CERAMIC CHIP 0.022uF 10% 50V				< FLUORESCENT INDICATOR TUBE >	
C5007	1-162-974-11	CERAMIC CHIP 0.01uF 50V		ND5001	1-483-107-21	FLUORESCENT INDICATOR TUBE	
C5008	1-119-943-11	ELECT 47uF 20% 50V				< TRANSISTOR >	
C5009	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		Q5001	6-550-065-01	TRANSISTOR CPH5504-TL-E	
C5010	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V				< RESISTOR >	
C5011	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		R5001	1-216-828-11	METAL CHIP 3.9K 5% 1/10W	
C5012	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		R5002	1-216-839-11	METAL CHIP 33K 5% 1/10W	
C5013	1-126-157-11	ELECT 10uF 20% 16V		R5003	1-216-805-11	METAL CHIP 47 5% 1/10W	
				R5004	1-216-805-11	METAL CHIP 47 5% 1/10W	

HBD-DZ330/DZ710/DZ730

FL IO

Ref. No.	Part No.	Description			Remark
R5005	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R5006	1-216-813-11	METAL CHIP	220	5%	1/10W
R5007	1-216-813-11	METAL CHIP	220	5%	1/10W
R5008	1-216-813-11	METAL CHIP	220	5%	1/10W
R5009	1-216-813-11	METAL CHIP	220	5%	1/10W
R5010	1-216-813-11	METAL CHIP	220	5%	1/10W
R5011	1-216-813-11	METAL CHIP	220	5%	1/10W
R5012	1-216-844-11	METAL CHIP	82K	5%	1/10W
R5014	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5015	1-216-809-11	METAL CHIP	100	5%	1/10W
R5016	1-216-809-11	METAL CHIP	100	5%	1/10W
R5017	1-216-809-11	METAL CHIP	100	5%	1/10W
R5018	1-216-805-11	METAL CHIP	47	5%	1/10W
R5019	1-216-835-11	METAL CHIP	15K	5%	1/10W
R5020	1-216-834-11	METAL CHIP	12K	5%	1/10W
R5021	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ710)
R5022	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ710)
R5023	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R5024	1-216-837-11	METAL CHIP	22K	5%	1/10W
< TRANSFORMER >					
T5001	1-443-645-11	TRANSFORMER, DC CONVERTER			

	A-1746-476-A	IO BOARD, COMPLETE (DZ330)			
	A-1746-578-A	IO BOARD, COMPLETE (DZ730)			
	A-1746-596-A	IO BOARD, COMPLETE (DZ710)			

< CAPACITOR >					
C4000	1-126-933-11	ELECT	100uF	20%	16V (DZ330/DZ730)
C4001	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4002	1-126-933-11	ELECT	100uF	20%	16V
C4003	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ330/DZ730)
C4004	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V (DZ330/DZ730)
C4006	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4007	1-126-933-11	ELECT	100uF	20%	16V
C4008	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (DZ330/DZ730)
C4009	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (DZ330/DZ730)
C4009	1-165-908-11	CERAMIC CHIP	1uF	10%	10V (DZ710)
C4010	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ330/DZ730)
C4011	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (DZ330/DZ730)
C4012	1-126-933-11	ELECT	100uF	20%	16V (DZ330/DZ730)
C4013	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (DZ330/DZ730)
C4014	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ330/DZ730)
C4015	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V (DZ730)
C4016	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4017	1-162-927-11	CERAMIC CHIP	100PF	5%	50V (DZ330/DZ730)
C4018	1-126-916-11	ELECT	1000uF	20%	6.3V

Ref. No.	Part No.	Description			Remark
C4019	1-126-965-91	ELECT	22uF	20%	50V (DZ330/DZ710)
C4020	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ330/DZ730)
C4021	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4025	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4026	1-126-933-11	ELECT	100uF	20%	16V
C4027	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4028	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4030	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ710)
C4031	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V (DZ710)
C4032	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4033	1-104-662-91	ELECT	22uF	20%	25V
C4034	1-126-964-11	ELECT	10uF	20%	50V (DZ730)
C4035	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C4036	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ710)
C4038	1-104-662-91	ELECT	22uF	20%	25V
C4039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (DZ730)
C4040	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (DZ330/DZ730)
C4041	1-104-662-91	ELECT	22uF	20%	25V (DZ330/DZ730)
C4042	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C4043	1-104-662-91	ELECT	22uF	20%	25V
C4044	1-126-957-11	ELECT	0.22uF	20%	50V (DZ710)
C4045	1-126-957-11	ELECT	0.22uF	20%	50V (DZ710)
C4046	1-126-933-11	ELECT	100uF	20%	16V
C4047	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4048	1-126-960-11	ELECT	1uF	20%	50V (DZ710)
C4049	1-126-960-11	ELECT	1uF	20%	50V (DZ710)
C4050	1-114-813-11	CERAMIC CHIP	1uF	10%	16V
C4051	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (DZ710)
C4052	1-126-933-11	ELECT	100uF	20%	16V (DZ710)
C4053	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4054	1-114-813-11	CERAMIC CHIP	1uF	10%	16V
C4055	1-104-662-91	ELECT	22uF	20%	25V
C4056	1-104-662-91	ELECT	22uF	20%	25V
C4061	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V (DZ710)
C4062	1-162-923-11	CERAMIC CHIP	47PF	5%	50V (DZ710)
C4063	1-126-964-11	ELECT	10uF	20%	50V (DZ710)
C4064	1-126-933-11	ELECT	100uF	20%	16V
C4065	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (DZ710)
C4067	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4070	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V (DZ710)
C4071	1-126-963-11	ELECT	4.7uF	20%	50V (DZ710)

HBD-DZ330/DZ710/DZ

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C4075	1-126-963-11	ELECT	4.7uF 20% 50V (DZ710)	Q4005	8-729-029-06	TRANSISTOR DTC124EUA-T106 (DZ730)	
C4076	1-126-964-11	ELECT	10uF 20% 50V (DZ710)	Q4006	6-552-200-01	TRANSISTOR RT3N22M-T111-1	
C4077	1-125-891-11	CERAMIC CHIP	0.47uF 10% 10V (DZ710)	Q4007	6-552-200-01	TRANSISTOR RT3N22M-T111-1 (DZ710)	
C4078	1-126-933-11	ELECT	100uF 20% 16V (DZ710)	< RESISTOR >			
C4079	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V (DZ710)	R4000	1-216-815-11	METAL CHIP 330 5% 1/16W (DZ330/DZ730)	
C4081	1-126-963-11	ELECT	4.7uF 20% 50V (DZ710)	R4001	1-216-815-11	METAL CHIP 330 5% 1/16W (DZ330/DZ730)	
C4084	1-126-916-11	ELECT	1000uF 20% 6.3V (DZ710)	R4002	1-216-815-11	METAL CHIP 330 5% 1/16W (DZ330/DZ730)	
< CONNECTOR >				R4003	1-216-849-11	METAL CHIP 220K 5% 1/16W (DZ330/DZ730)	
CN4000	1-816-044-11	CONNECTOR, SQUARE TYPE 21P (EURO AV ㊂ OUTPUT(TO TV)) (DZ330/DZ730)		R4004	1-216-815-11	METAL CHIP 330 5% 1/16W (DZ330/DZ730)	
CN4001	1-779-279-11	CONNECTOR, FFC (LIF (NON-ZIF)) 11P (DZ330/DZ730)		R4005	1-216-837-11	METAL CHIP 22K 5% 1/16W (DZ330/DZ730)	
CN4002	1-779-277-11	CONNECTOR, FFC (LIF (NON-ZIF)) 9P (DZ710)		R4006	1-216-841-11	METAL CHIP 47K 5% 1/16W (DZ330/DZ730)	
CN4003	1-784-921-11	PIN, CONNECTOR 4P (DZ730)		R4007	1-216-821-11	METAL CHIP 1K 5% 1/16W (DZ330/DZ730)	
CN4005	1-779-287-11	CONNECTOR, FFC (LIF (NON-ZIF)) 19P (DZ330/DZ730)		R4008	1-216-833-11	METAL CHIP 10K 5% 1/16W (DZ330/DZ730)	
CN4006	1-779-289-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P (DZ710)		R4009	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (DZ330/DZ730)	
CN4007	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P (DZ330/DZ730)		R4010	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (DZ330/DZ730)	
CN4009	1-568-830-11	CONNECTOR, FFC 11P		R4011	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (DZ330/DZ730)	
CN4011	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P (DZ710)		R4012	1-216-821-11	METAL CHIP 1K 5% 1/16W (DZ330/DZ730)	
< DIODE >				R4013	1-218-827-11	METAL CHIP 150 0.5% 1/16W (DZ330/DZ730)	
D4000	6-501-817-01	DIODE MA2J1110GLS0 (DZ330/DZ730)		R4014	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
D4001	6-501-817-01	DIODE MA2J1110GLS0 (DZ330/DZ730)		R4015	1-216-833-11	METAL CHIP 10K 5% 1/16W (DZ330/DZ730)	
D4002	6-500-848-01	DIODE MC2840-T112-1 (DZ710)		R4016	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
D4003	6-501-728-01	DIODE MAZ8051G0LS0 (DZ730)		R4016	1-218-285-11	METAL CHIP 75 5% 1/16W (DZ330/DZ730)	
D4006	6-501-728-01	DIODE MAZ8051G0LS0 (DZ710)		R4017	1-218-827-11	METAL CHIP 150 0.5% 1/16W (DZ330/DZ730)	
< IC >				R4018	1-216-864-11	SHORT CHIP 0 (DZ710)	
IC4000	6-710-470-01	IC MM1758AFBE		R4019	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
IC4001	6-705-337-01	IC TK11150CSCL-G		R4020	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
IC4002	8-759-430-37	IC MC14052BDTR2 (DZ730)		R4020	1-218-285-11	METAL CHIP 75 5% 1/16W (DZ330/DZ730)	
IC4003	8-759-430-37	IC MC14052BDTR2		R4021	1-216-809-11	METAL CHIP 100 5% 1/16W (DZ330/DZ730)	
IC4004	6-706-078-01	IC M62429FP-TP (DZ710)		R4022	1-216-864-11	SHORT CHIP 0 (DZ330/DZ730)	
IC4005	6-712-744-01	IC TK11190CSCL-G		R4023	1-216-809-11	METAL CHIP 100 5% 1/16W (DZ330/DZ730)	
IC4006	6-713-989-01	IC NJM2783V(Te2) (DZ710)		R4024	1-218-827-11	METAL CHIP 150 0.5% 1/16W (DZ330/DZ730)	
< JACK >				R4025	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
J4000	1-822-283-11	JACK, PIN 3P (COMPONENT VIDEO OUT) (DZ710)		R4026	1-216-864-11	SHORT CHIP 0 (DZ330/DZ730)	
J4001	1-822-280-11	JACK, PIN 3P (VIDEO OUT,TV (AUDIO IN R/L)) (DZ710)		R4027	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
< COIL >				R4027	1-218-285-11	METAL CHIP 75 5% 1/16W (DZ330/DZ730)	
L4000	1-469-525-91	INDUCTOR 10uH		R4028	1-216-864-11	SHORT CHIP 0 (DZ710)	
L4001	1-469-525-91	INDUCTOR 10uH (DZ710)		R4029	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
< TRANSISTOR >				R4030	1-216-811-11	METAL CHIP 150 5% 1/16W (DZ330/DZ730)	
Q4000	8-729-029-14	TRANSISTOR DTC144EUA-T106 (DZ330/DZ730)					
Q4001	8-729-620-13	TRANSISTOR 2SC4154TP-1EF (DZ330/DZ730)					
Q4002	6-551-469-01	TRANSISTOR RT3N33M-T111-1 (DZ330/DZ730)					
Q4003	8-729-029-06	TRANSISTOR DTC124EUA-T106 (DZ330/DZ730)					
Q4004	6-551-691-01	TRANSISTOR RT3P11M-TP-1 (DZ330/DZ730)					

HBD-DZ330/DZ710/DZ730

IO JACK

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R4030	1-218-285-11	METAL CHIP	75	5%	1/10W (DZ710)	R4082	1-216-845-11	METAL CHIP	100K	5%	1/10W
R4031	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R4083	1-216-845-11	METAL CHIP	100K	5%	1/10W
R4032	1-216-821-11	METAL CHIP	1K	5%	1/10W	R4085	1-216-864-11	SHORT CHIP	0 (DZ710)		
R4033	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4086	1-216-864-11	SHORT CHIP	0 (DZ710)		
R4034	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4087	1-216-864-11	SHORT CHIP	0		
R4035	1-216-837-11	METAL CHIP	22K	5%	1/10W	R4088	1-216-864-11	SHORT CHIP	0		
R4036	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4089	1-216-864-11	SHORT CHIP	0		
R4037	1-216-845-11	METAL CHIP	100K	5%	1/10W	R4090	1-216-841-11	METAL CHIP	47K	5%	1/10W (DZ710)
R4038	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4091	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ710)
△ R4039	1-215-865-11	METAL OXIDE	220	5%	1W F (DZ730)	R4092	1-216-864-11	SHORT CHIP	0		
R4041	1-216-837-11	METAL CHIP	22K	5%	1/10W	R4093	1-216-864-11	SHORT CHIP	0		
R4042	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4094	1-216-864-11	SHORT CHIP	0		
R4044	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ730)	R4095	1-216-864-11	SHORT CHIP	0		
R4045	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ730)	R4096	1-216-864-11	SHORT CHIP	0		
R4046	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ330/DZ730)	R4097	1-216-857-11	METAL CHIP	1M	5%	1/10W (DZ710)
R4047	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4100	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)
R4048	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ330/DZ730)	R4101	1-216-864-11	SHORT CHIP	0		
R4049	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4102	1-216-864-11	SHORT CHIP	0		
R4050	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R4105	1-216-839-11	METAL CHIP	33K	5%	1/10W (DZ710)
R4051	1-216-841-11	METAL CHIP	47K	5%	1/10W	R4106	1-216-834-11	METAL CHIP	12K	5%	1/10W (DZ710)
R4053	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R4107	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ710)
R4054	1-216-841-11	METAL CHIP	47K	5%	1/10W	△ R4113	1-215-865-11	METAL OXIDE	220	5%	1W F (DZ710)
R4055	1-216-864-11	SHORT CHIP	0			R4115	1-216-864-11	SHORT CHIP	0		
R4058	1-216-864-11	SHORT CHIP	0			*****					
R4059	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)			JACK BOARD			
R4060	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)			*****			
R4061	1-216-830-11	METAL CHIP	5.6K	5%	1/10W (DZ710)			< CAPACITOR >			
R4062	1-216-830-11	METAL CHIP	5.6K	5%	1/10W (DZ710)	C5101	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R4063	1-216-864-11	SHORT CHIP	0			C5102	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R4064	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R4065	1-216-864-11	SHORT CHIP	0			C5104	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (DZ330/DZ730)
R4066	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5106	1-124-584-00	ELECT	100uF	20%	6.3V
R4067	1-216-821-11	METAL CHIP	1K	5%	1/10W	C5107	1-126-157-11	ELECT	10uF	20%	16V
R4068	1-216-821-11	METAL CHIP	1K	5%	1/10W	C5108	1-126-157-11	ELECT	10uF	20%	16V (DZ330/DZ730)
R4069	1-216-821-11	METAL CHIP	1K	5%	1/10W	C5109	1-126-157-11	ELECT	10uF	20%	16V
R4070	1-216-809-11	METAL CHIP	100	5%	1/10W (DZ710)	C5112	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
R4071	1-216-809-11	METAL CHIP	100	5%	1/10W (DZ710)	C5116	1-164-315-11	CERAMIC CHIP	470PF	5%	50V (DZ330/DZ730)
R4072	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)	C5117	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R4073	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5118	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R4074	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5119	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (DZ330/DZ730)
R4075	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5120	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R4076	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)	C5121	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R4077	1-216-833-11	METAL CHIP	10K	5%	1/10W	C5122	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
R4078	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)	C5123	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V
R4079	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)	C5124	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R4080	1-216-845-11	METAL CHIP	100K	5%	1/10W	C5125	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R4081	1-216-845-11	METAL CHIP	100K	5%	1/10W	C5126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C5127	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C5128	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

HBD-DZ330/DZ710/DZ

JACK KEY-SW M

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Re		
C5129	1-124-584-00	ELECT	100uF	20%	6.3V	R5129	1-216-827-11	METAL CHIP	3.3K	5%	1/1
C5130	1-124-584-00	ELECT	100uF	20%	10V	R5130	1-216-829-11	METAL CHIP	4.7K	5%	1/1
C5131	1-124-589-11	ELECT	47uF	20%	16V	R5131	1-216-827-11	METAL CHIP	3.3K	5%	1/1
		< DIODE >				R5132	1-216-829-11	METAL CHIP	4.7K	5%	1/1
						R5133	1-216-864-11	SHORT CHIP	0 (DZ710)		
D5101	6-500-848-01	DIODE MC2840-T112-1				R5134	1-216-821-11	METAL CHIP	1K	5%	1/1
		< FERRITE BEAD >				R5135	1-216-864-11	SHORT CHIP	0 (DZ330/DZ730)		
FB5101	1-500-236-22	BEAD, FERRITE (CHIP) (1608)				A-1746-218-A	KEY-SW BOARD, COMPLETE				
FB5102	1-500-236-22	BEAD, FERRITE (CHIP) (1608) (DZ330/DZ730)					*****				
FB5103	1-500-236-22	BEAD, FERRITE (CHIP) (1608)					< CONNECTOR >				
		< IC >									
IC5101	8-759-100-96	IC uPC4558G2				* CN5201	1-580-055-21	PIN, CONNECTOR (SMD) 2P			
IC5102	8-759-100-96	IC uPC4558G2				CN5202	1-580-057-11	PIN, CONNECTOR (SMD) 4P			
		< JACK >					< RESISTOR >				
J5101	1-819-878-31	JACK (A.CAL MIC) (DZ330/DZ730)				R5201	1-216-821-11	METAL CHIP	1K	5%	1/1
J5101	1-819-878-31	JACK (MIC 1/A.CAL MIC) (DZ710)				R5202	1-216-809-11	METAL CHIP	100	5%	1/1
J5102	1-819-878-31	JACK (AUDIO IN) (DZ330/DZ730)				R5203	1-216-821-11	METAL CHIP	1K	5%	1/1
J5102	1-819-878-31	JACK (MIC 2) (DZ710)				R5204	1-216-825-11	METAL CHIP	2.2K	5%	1/1
		< TRANSISTOR >					< SWITCH >				
						S5201	1-786-650-21	SWITCH, TACTILE (■)			
Q5101	8-729-620-13	TRANSISTOR 2SC4154TP-1EF (DZ710)				S5202	1-786-650-21	SWITCH, TACTILE (►)			
Q5102	8-729-028-73	TRANSISTOR DTA114EUA-T106 (DZ710)				S5203	1-786-650-21	SWITCH, TACTILE (▲)			
		< RESISTOR >				S5204	1-786-650-21	SWITCH, TACTILE (FUNCTION)			

R5101	1-216-833-11	METAL CHIP	10K	5%	1/10W (DZ710)	Ⓐ	A-1746-799-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ730)			
R5105	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	Ⓐ	A-1746-800-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ730)			
R5106	1-216-826-11	METAL CHIP	2.7K	5%	1/10W						
R5107	1-216-821-11	METAL CHIP	1K	5%	1/10W	Ⓐ	A-1746-810-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ730)			
R5108	1-216-845-11	METAL CHIP	100K	5%	1/10W	Ⓐ	A-1746-812-A	MAIN BOARD, COMPLETE (for SERVICE) (DZ330/DZ730)			

R5109	1-216-845-11	METAL CHIP	100K	5%	1/10W (DZ330/DZ730)		< CAPACITOR >				
R5110	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R5111	1-216-817-11	METAL CHIP	470	5%	1/10W	C303	1-100-742-91	CERAMIC CHIP	2.2uF	20%	10V
R5112	1-216-817-11	METAL CHIP	470	5%	1/10W (DZ330/DZ730)	C304	1-126-923-91	ELECT	220uF	20%	10V
R5113	1-216-817-11	METAL CHIP	470	5%	1/10W	C305	1-100-742-91	CERAMIC CHIP	2.2uF	20%	10V
						C308	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C309	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5115	1-216-864-11	SHORT CHIP	0								
R5116	1-216-837-11	METAL CHIP	22K	5%	1/10W (DZ330/DZ730)	C310	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5117	1-216-837-11	METAL CHIP	22K	5%	1/10W	C311	1-126-964-11	ELECT	10uF	20%	50V
R5118	1-216-835-11	METAL CHIP	15K	5%	1/10W	C313	1-126-964-11	ELECT	10uF	20%	50V
R5119	1-216-837-11	METAL CHIP	22K	5%	1/10W	C314	1-126-964-11	ELECT	10uF	20%	50V
						C315	1-126-923-91	ELECT	220uF	20%	10V
R5120	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ330/DZ730)	C316	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R5121	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ330/DZ730)	C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
						C318	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R5121	1-216-864-11	SHORT CHIP	0 (DZ710)			C319	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5122	1-216-837-11	METAL CHIP	22K	5%	1/10W	C320	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R5123	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R5124	1-216-857-11	METAL CHIP	1M	5%	1/10W	C321	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5125	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C323	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5126	1-216-821-11	METAL CHIP	1K	5%	1/10W (DZ330/DZ730)	C325	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C326	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V
						C327	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V
R5126	1-216-835-11	METAL CHIP	15K	5%	1/10W (DZ710)	C329	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5127	1-216-821-11	METAL CHIP	1K	5%	1/10W	C333	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
						C334	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R5128	1-216-821-11	METAL CHIP	1K	5%	1/10W	C471	1-104-658-91	ELECT	100uF	20%	10V
						C476	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

HBD-DZ330/DZ710/DZ730

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C504	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1120	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C505	1-104-658-91	ELECT	100uF	20%	10V	C1121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C509	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1122	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C511	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1123	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C512	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1124	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C513	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1125	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C514	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C515	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1127	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C516	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1129	1-100-909-11	CERAMIC CHIP	10uF	10%	6.3V
C517	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1130	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C518	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1132	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C519	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1133	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C520	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1135	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V
C521	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1136	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C522	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1137	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C523	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V	C1138	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C524	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1139	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C525	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C527	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	C1144	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C528	1-104-656-11	ELECT	2200uF	20%	6.3V	C1145	1-126-964-11	ELECT	10uF	20%	50V
C529	1-104-658-91	ELECT	100uF	20%	10V	C1146	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C530	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1147	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C531	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1148	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C532	1-126-933-11	ELECT	100uF	20%	16V	C1149	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C536	1-104-655-91	ELECT	470uF	20%	6.3V	C1151	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C537	1-104-658-91	ELECT	100uF	20%	10V	C1152	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C538	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1153	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C539	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1154	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C540	1-126-933-11	ELECT	100uF	20%	16V	C1155	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C541	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1156	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C543	1-126-965-91	ELECT	22uF	20%	50V	C1158	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C545	1-104-658-91	ELECT	100uF	20%	10V	C1159	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C546	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1160	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C550	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1161	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C552	1-126-933-11	ELECT	100uF	20%	16V	C1162	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C553	1-126-935-11	ELECT	470uF	20%	16V	C1163	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C554	1-162-923-11	CERAMIC CHIP	47PF	5%	50V	C1164	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C555	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C1165	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C556	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C1169	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C701	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1170	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C705	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1171	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C706	1-165-708-11	ELECT CHIP	47uF	20%	6.3V	C1172	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C707	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1174	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C708	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1175	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1101	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1176	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1102	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1177	1-126-923-91	ELECT	220uF	20%	10V
C1105	1-126-947-11	ELECT	47uF	20%	35V	C1179	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1106	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1180	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1108	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1181	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1109	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1182	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1110	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1183	1-128-934-11	CERAMIC CHIP	0.33uF	20%	10V
C1111	1-104-658-91	ELECT	100uF	20%	10V	C1184	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1112	1-126-947-11	ELECT	47uF	20%	35V	C1186	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1113	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1187	1-126-947-11	ELECT	47uF	20%	35V
C1114	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1190	1-104-658-91	ELECT	100uF	20%	10V
C1115	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1191	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1116	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1192	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1117	1-126-947-11	ELECT	47uF	20%	35V	C1193	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1118	1-126-947-11	ELECT	47uF	20%	35V	C1195	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1119	1-126-947-11	ELECT	47uF	20%	35V	C1197	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

HBD-DZ330/DZ710/DZ

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C1198	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C3016	1-126-947-11	ELECT	47uF 20% 35V
C1199	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V				(DZ330/
C1503	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3016	1-165-726-31	ELECT	56uF 20% 16V
C1504	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				(
C1505	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3017	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3018	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1506	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V	C3019	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1507	1-126-964-11	ELECT	10uF 20% 50V				
C1508	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3020	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1509	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3021	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1510	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3022	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3023	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1511	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3024	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1512	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
C1513	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3025	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1514	1-126-964-11	ELECT	10uF 20% 50V	C3026	1-126-947-11	ELECT	47uF 20% 35V
C1516	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C3027	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3028	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1518	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3029	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1520	1-126-947-11	ELECT	47uF 20% 35V				
C1522	1-164-730-11	CERAMIC CHIP	0.0012uF 10% 50V	C3030	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1523	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C3031	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1524	1-110-563-11	CERAMIC CHIP	0.068uF 10% 16V	C3032	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3033	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1525	1-100-436-91	CERAMIC CHIP	0.033uF 10% 25V	C3034	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1601	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
		(UK)		C3035	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1602	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C3036	1-126-947-11	ELECT	47uF 20% 35V
		(UK)					(DZ330/
C1725	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C3036	1-165-726-31	ELECT	56uF 20% 16V
C1727	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				(
				C3037	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1729	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V	C3038	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1730	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V				
C1731	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V	C3039	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C1732	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3051	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C1733	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V	C3052	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
				C3054	1-104-658-91	ELECT	100uF 20% 10V
C1734	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C3055	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C1735	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
C2100	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C3056	1-126-923-91	ELECT	220uF 20% 10V
C2102	1-126-923-91	CERAMIC CHIP	0.1uF 10% 16V	C3057	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C2108	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C3058	1-162-909-11	CERAMIC CHIP	4PF 0.25PF 50V
				C3060	1-162-909-11	CERAMIC CHIP	4PF 0.25PF 50V
C2109	1-104-658-91	ELECT	100uF 20% 10V	C3071	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C2110	1-104-658-91	ELECT	100uF 20% 10V				
C2112	1-126-923-91	ELECT	220uF 20% 10V	C3091	1-126-934-11	ELECT	220uF 20% 16V
C2114	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3100	1-112-831-31	ELECT	2200uF 20% 35V
C2115	1-100-909-11	CERAMIC CHIP	10uF 10% 6.3V				(
				C3100	1-126-953-11	ELECT	2200uF 20% 35V
C2116	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				(DZ330/
C2117	1-100-909-11	CERAMIC CHIP	10uF 10% 6.3V	C3102	1-114-885-51	FILM	1uF 5% 50V
C2118	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3103	1-112-246-11	ELECT	100uF 20% 35V
C2119	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V				
C2130	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C3104	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
				C3105	1-100-436-91	CERAMIC CHIP	0.033uF 10% 25V
C2502	1-164-172-11	CERAMIC CHIP	0.0056uF 10% 25V	C3106	1-114-869-11	CERAMIC CHIP	2.2uF 10% 6.3V
C2503	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C3109	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C3000	1-126-933-11	ELECT	100uF 20% 16V	C3110	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C3001	1-126-947-11	ELECT	47uF 20% 35V				
C3002	1-100-597-91	CERAMIC CHIP	0.1uF 10% 25V	C3111	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3112	1-114-885-51	FILM	1uF 5% 50V
C3003	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C3113	1-112-246-11	ELECT	100uF 20% 35V
C3005	1-126-964-11	ELECT	10uF 20% 50V	C3114	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C3010	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3115	1-100-436-91	CERAMIC CHIP	0.033uF 10% 25V
C3011	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
C3012	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3121	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
				C3122	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C3013	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3123	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C3014	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3150	1-112-831-31	ELECT	2200uF 20% 35V
C3015	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				(

HBD-DZ330/DZ710/DZ730

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C3150	1-126-953-11	ELECT	2200uF	20%	35V (DZ330/DZ730)	C3309	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3152	1-114-885-51	FILM	1uF	5%	50V	C3310	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3153	1-112-246-11	ELECT	100uF	20%	35V	C3311	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3154	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3312	1-114-885-51	FILM	1uF	5%	50V
C3155	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	C3313	1-112-246-11	ELECT	100uF	20%	35V
C3156	1-114-869-11	CERAMIC CHIP	2.2uF	10%	6.3V	C3314	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3159	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3315	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V
C3160	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3321	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3161	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3322	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3162	1-114-885-51	FILM	1uF	5%	50V	C3323	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3163	1-112-246-11	ELECT	100uF	20%	35V	C3400	1-112-831-31	ELECT	2200uF	20%	35V (DZ710)
C3164	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3400	1-126-953-11	ELECT	2200uF	20%	35V (DZ330/DZ730)
C3165	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	C3402	1-114-885-51	FILM	1uF	5%	50V
C3200	1-112-831-31	ELECT	2200uF	20%	35V (DZ710)	C3403	1-112-246-11	ELECT	100uF	20%	35V
C3201	1-126-952-11	ELECT	1000uF	20%	35V (DZ330/DZ730)	C3404	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3202	1-114-885-51	FILM	1uF	5%	50V	C3405	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V
C3203	1-112-246-11	ELECT	100uF	20%	35V	C3406	1-114-869-11	CERAMIC CHIP	2.2uF	10%	6.3V
C3204	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3409	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3205	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	C3410	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3206	1-114-869-11	CERAMIC CHIP	2.2uF	10%	6.3V	C3411	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3207	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3412	1-114-885-51	FILM	1uF	5%	50V
C3208	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3413	1-112-246-11	ELECT	100uF	20%	35V
C3209	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3414	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3210	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3415	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V
C3211	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3551	1-115-871-11	ELECT	1uF	20%	50V
C3212	1-114-885-51	FILM	1uF	5%	50V	C3552	1-126-964-11	ELECT	10uF	20%	50V
C3213	1-112-246-11	ELECT	100uF	20%	35V	C3553	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3214	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3556	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3215	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	C3561	1-126-947-11	ELECT	47uF	20%	35V
C3221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3901	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3902	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3223	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3903	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3250	1-112-831-31	ELECT	2200uF	20%	35V (DZ710)	C3905	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3251	1-126-952-11	ELECT	1000uF	20%	35V (DZ330/DZ730)	C3906	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3252	1-114-885-51	FILM	1uF	5%	50V	C3907	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3253	1-112-246-11	ELECT	100uF	20%	35V	C3908	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3254	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3911	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3255	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	C3912	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3256	1-114-869-11	CERAMIC CHIP	2.2uF	10%	6.3V	C3913	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3257	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3914	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3258	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C3915	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3259	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C3916	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3260	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3917	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3261	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3918	1-114-323-11	CERAMIC CHIP	0.01uF	10%	50V
C3262	1-114-885-51	FILM	1uF	5%	50V	< CONNECTOR >					
C3263	1-112-246-11	ELECT	100uF	20%	35V	CN306	1-779-281-11	CONNECTOR, FFC (LIF (NON-ZIF)) 13P (DZ710/DZ730)			
C3264	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	CN471	1-820-113-41	CONNECTOR, FFC/FPC 11P (DZ330/DZ730)			
C3265	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	CN472	1-820-112-41	CONNECTOR, FFC/FPC 9P (DZ710)			
C3300	1-112-831-31	ELECT	2200uF	20%	35V (DZ710)	CN504	1-820-117-41	CONNECTOR, FFC/FPC 19P (DZ330/DZ730)			
C3300	1-126-953-11	ELECT	2200uF	20%	35V (DZ330/DZ730)	CN505	1-820-119-41	CONNECTOR, FFC/FPC 21P (DZ710)			
C3302	1-114-885-51	FILM	1uF	5%	50V	CN506	1-820-115-41	CONNECTOR, FFC/FPC 15P (DZ710)			
C3303	1-112-246-11	ELECT	100uF	20%	35V	CN507	1-785-468-41	CONNECTOR, FFC/FPC 13P (DZ330/DZ730)			
C3304	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	CN508	1-784-861-51	CONNECTOR, FFC (LIF (NON-ZIF)) 9P			
C3305	1-100-436-91	CERAMIC CHIP	0.033uF	10%	25V	CN1101	1-815-763-32	CONNECTOR, FFC/FPC 24P			
C3306	1-100-909-11	CERAMIC CHIP	10uF	10%	6.3V	CN1105	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P			
						CN1501	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P			

HBD-DZ330/DZ710/DZ

Ref. No.	Part No.	Description	Remark
CN1502	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P	
CN1701	(Not supplied)	CONNECTOR, HDMI 19P (HDMI OUT (ARC))	
CN2101	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
CN3000	1-564-704-41	PIN, CONNECTOR (SMALL TYPE) 2P	
< DIODE >			
D502	6-501-817-01	DIODE MA2J1110GLS0	
D503	6-501-817-01	DIODE MA2J1110GLS0	
D505	6-501-817-01	DIODE MA2J1110GLS0	
D2101	6-501-749-01	DIODE MAZ8082G0LS0	
D2102	6-501-592-01	DIODE EDZCTE616.8B	
D2103	6-501-592-01	DIODE EDZCTE616.8B	
D3071	6-500-335-01	DIODE MC2838-T112-1	
D3072	6-501-817-01	DIODE MA2J1110GLS0	
D3101	6-501-696-01	DIODE RSA39LTE25	
D3102	6-501-696-01	DIODE RSA39LTE25	
D3151	6-501-696-01	DIODE RSA39LTE25	
D3152	6-501-696-01	DIODE RSA39LTE25	
D3201	6-501-696-01	DIODE RSA39LTE25	
D3202	6-501-696-01	DIODE RSA39LTE25	
D3251	6-501-696-01	DIODE RSA39LTE25	
D3252	6-501-696-01	DIODE RSA39LTE25	
D3301	6-501-696-01	DIODE RSA39LTE25	
D3302	6-501-696-01	DIODE RSA39LTE25	
D3401	6-501-696-01	DIODE RSA39LTE25	
D3402	6-501-696-01	DIODE RSA39LTE25	
D3551	6-500-848-01	DIODE MC2840-T112-1	
D9712	6-501-817-01	DIODE MA2J1110GLS0	
< FERRITE BEAD >			
FB472	1-469-094-21	FERRITE, EMI (SMD) (1608) (DZ710/DZ730)	
FB473	1-469-094-21	FERRITE, EMI (SMD) (1608) (DZ710/DZ730)	
* FB1106	1-400-973-21	INDUCTOR (EMI FERRITE)	
* FB1107	1-400-973-21	INDUCTOR (EMI FERRITE)	
* FB1108	1-400-973-21	INDUCTOR (EMI FERRITE)	
* FB1109	1-400-973-21	INDUCTOR (EMI FERRITE)	
* FB1111	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1112	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1113	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1115	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1116	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1117	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB1118	1-400-974-21	INDUCTOR (EMI FERRITE)	
* FB2101	1-400-973-21	INDUCTOR (EMI FERRITE)	
* FB2103	1-400-973-21	INDUCTOR (EMI FERRITE)	
FB2104	1-469-379-11	FERRITE, EMI (SMD) (2012)	
FB2105	1-469-379-11	FERRITE, EMI (SMD) (2012)	
FB2120	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2121	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2122	1-469-118-21	FERRITE, EMI (SMD) (1608)	
FB2125	1-469-118-21	FERRITE, EMI (SMD) (1608)	
< IC >			
IC303	6-710-554-01	IC PCM1808PWR	
IC304	8-759-825-15	IC LC89056W-E	
IC307	8-759-680-48	IC TC7WH157FK(TE85R)	
IC471	6-707-853-01	IC TC74LCX541FT(EKJ)	
IC502	6-600-466-01	IC TORX147L(SONY)	
(TV (DIGITAL IN OPTICAL))			
IC503	A-1748-165-A	IC R5F364AEDFA (for SERVICE)	

Ref. No.	Part No.	Description	Remark
IC504	6-705-338-01	IC TK11250CMCL-G	
IC506	6-705-203-01	IC S-80935CNMC-G85T2G	
IC507	(Not supplied)	IC MM1665AHBE	
IC509	6-712-613-01	IC SI-3010KM-TLS	
IC510	6-709-584-01	IC MM1663DHBE	
IC701	6-709-888-01	IC TC7WHU04FK(T5RSOYF)	
IC1101	6-714-722-01	IC CXD9927R-B (UK)	
IC1101	6-714-723-01	IC CXD9917R-B (AEP RU)	
IC1102	6-715-434-01	IC MX29LV320DBT1-70-OHI-1002CE	
IC1103	(Not supplied)	IC BR24S64F-WE2	
IC1104	6-714-642-01	IC EM638165 TSA-6G	
IC1105	6-702-302-01	IC TK11133CSCL-G	
IC1107	6-702-302-01	IC TK11133CSCL-G	
IC1110	6-707-739-01	IC MM1661JTRE	
IC1501	(Not supplied)	IC BD8203EFV-E2	
IC1601	6-713-555-01	IC MFI341S2161 (UK)	
IC1705	8-759-592-47	IC TC7SZ08FU(TE85R)	
IC1707	6-705-337-01	IC TK11150CSCL-G	
IC1708	6-702-302-01	IC TK11133CSCL-G	
IC3010	6-705-979-01	IC CXD9788AR	
IC3020	6-705-979-01	IC CXD9788AR	
IC3030	6-705-979-01	IC CXD9788AR	
IC3050	6-714-743-01	IC MM3404A18URE	
IC3051	6-706-492-01	IC TC7SHU04FU(T5RSOJF)	
IC3100	6-714-477-01	IC CXD9981TN	
IC3200	6-714-477-01	IC CXD9981TN	
IC3300	6-714-477-01	IC CXD9981TN	
< COIL >			
L301	1-469-525-91	INDUCTOR 10uH	
L302	1-469-525-91	INDUCTOR 10uH	
L303	1-469-525-91	INDUCTOR 10uH	
L471	1-469-527-91	INDUCTOR 47uH	
L501	1-469-525-91	INDUCTOR 10uH	
L1701	1-457-374-21	COIL, COMMON MODE CHOKE	
L1702	1-457-374-21	COIL, COMMON MODE CHOKE	
L1703	1-457-374-21	COIL, COMMON MODE CHOKE	
L1704	1-457-374-21	COIL, COMMON MODE CHOKE	
L2101	1-457-374-21	COIL, COMMON MODE CHOKE	
L3000	1-469-527-91	INDUCTOR 47uH	
L3051	1-469-525-91	INDUCTOR 10uH	
L3052	1-469-525-91	INDUCTOR 10uH	
L3053	1-469-525-91	INDUCTOR 10uH	
L3101	1-457-579-11	COIL, CHOKE 10uH	
L3151	1-457-579-11	COIL, CHOKE 10uH	
L3201	1-457-579-11	COIL, CHOKE 10uH	
L3251	1-457-579-11	COIL, CHOKE 10uH	
L3301	1-457-579-11	COIL, CHOKE 10uH	
L3401	1-457-579-11	COIL, CHOKE 10uH	
L3901	1-457-078-11	COIL, AIR-CORE	
L3902	1-457-077-11	COIL, AIR-CORE	
L3903	1-457-078-11	COIL, AIR-CORE	
L3904	1-457-077-11	COIL, AIR-CORE	
L3905	1-457-078-11	COIL, AIR-CORE	
L3906	1-457-077-11	COIL, AIR-CORE	
L3907	1-457-078-11	COIL, AIR-CORE	
L3908	1-457-077-11	COIL, AIR-CORE	
< TRANSISTOR >			
Q501	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	

Note: When IC507, IC1103 and IC1501 on the Main board are damaged, please exchange the new Main board for the Main board which IC damaged.

HBD-DZ330/DZ710/DZ730

MAIN

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
Q502	6-551-272-01	TRANSISTOR	RT3CLLM				R392	1-216-833-11	METAL CHIP	10K	5%	1/10W	
Q1101	6-552-279-01	FET	RT3K66M-T111-1				R393	1-216-833-11	METAL CHIP	10K	5%	1/10W	
Q1102	6-550-653-01	TRANSISTOR	QST8TR				R394	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q1103	8-729-029-06	TRANSISTOR	DTC124EUA-T106				R403	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q1701	6-552-279-01	FET	RT3K66M-T111-1										(DZ710/DZ730)
Q2101	6-551-272-01	TRANSISTOR	RT3CLLM				R409	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q3000	8-729-111-29	TRANSISTOR	2SD1616A-K				R410	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q3001	6-551-272-01	TRANSISTOR	RT3CLLM				R412	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q3101	6-551-271-01	TRANSISTOR	RT3AMMM				R413	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q3151	6-551-271-01	TRANSISTOR	RT3AMMM				R471	1-216-864-11	SHORT CHIP	0			
							R472	1-216-801-11	METAL CHIP	22	5%	1/10W	
Q3201	6-551-271-01	TRANSISTOR	RT3AMMM										
Q3202	6-551-271-01	TRANSISTOR	RT3AMMM				R473	1-216-801-11	METAL CHIP	22	5%	1/10W	
Q3301	6-551-271-01	TRANSISTOR	RT3AMMM				R474	1-216-801-11	METAL CHIP	22	5%	1/10W	
Q3401	6-551-271-01	TRANSISTOR	RT3AMMM				R479	1-216-805-11	METAL CHIP	47	5%	1/10W	
Q3551	8-729-620-13	TRANSISTOR	2SC4154TP-1EF				R480	1-216-805-11	METAL CHIP	47	5%	1/10W	
							R481	1-216-805-11	METAL CHIP	47	5%	1/10W	
Q3552	6-551-272-01	TRANSISTOR	RT3CLLM										
Q9730	6-551-714-01	FET	INK0001AC1-T112A-1				R482	1-216-805-11	METAL CHIP	47	5%	1/10W	
		< RESISTOR >					R483	1-216-805-11	METAL CHIP	47	5%	1/10W	(DZ330)
							R486	1-216-805-11	METAL CHIP	47	5%	1/10W	(DZ330)
R301	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R487	1-216-805-11	METAL CHIP	47	5%	1/10W	
R302	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R488	1-216-864-11	SHORT CHIP	0			
R303	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R489	1-216-805-11	METAL CHIP	47	5%	1/10W	(DZ710/DZ730)
R304	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R489	1-216-864-11	SHORT CHIP	0 (DZ330)			
R305	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R490	1-216-805-11	METAL CHIP	47	5%	1/10W	(DZ710/DZ730)
							R490	1-216-864-11	SHORT CHIP	0 (DZ330)			
R306	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R506	1-216-809-11	METAL CHIP	100	5%	1/10W	
R307	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R507	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710)
R308	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R508	1-216-809-11	METAL CHIP	100	5%	1/10W	
R309	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R509	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710)
R310	1-216-809-11	METAL CHIP	100	5%	1/10W	(DZ710/DZ730)	R510	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R511	1-234-372-11	RES, NETWORK	100X4 (1005)			
							R512	1-234-372-11	RES, NETWORK	100X4 (1005)			
R316	1-216-801-11	METAL CHIP	22	5%	1/10W		R519	1-234-372-11	RES, NETWORK	100X4 (1005)			
R317	1-216-801-11	METAL CHIP	22	5%	1/10W		R531	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	(UK)
R318	1-216-801-11	METAL CHIP	22	5%	1/10W								
R319	1-216-801-11	METAL CHIP	22	5%	1/10W		R531	1-216-841-11	METAL CHIP	47K	5%	1/10W	(DZ710)
R329	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
							R532	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	(DZ710)
R330	1-216-839-11	METAL CHIP	33K	5%	1/10W								
R331	1-216-805-11	METAL CHIP	47	5%	1/10W		R532	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	(AEP)
R332	1-216-805-11	METAL CHIP	47	5%	1/10W								
R333	1-216-864-11	SHORT CHIP	0				R532	1-216-841-11	METAL CHIP	47K	5%	1/10W	(UK)
R334	1-216-809-11	METAL CHIP	100	5%	1/10W								
R335	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		R534	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R340	1-216-809-11	METAL CHIP	100	5%	1/10W		R535	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	(DZ330)
R341	1-216-809-11	METAL CHIP	100	5%	1/10W								
R342	1-216-809-11	METAL CHIP	100	5%	1/10W		R535	1-216-841-11	METAL CHIP	47K	5%	1/10W	(DZ710/DZ730)
R359	1-216-864-11	SHORT CHIP	0										
							R536	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	(DZ710)
R360	1-216-864-11	SHORT CHIP	0										
R363	1-216-833-11	METAL CHIP	10K	5%	1/10W		R536	1-216-833-11	METAL CHIP	10K	5%	1/10W	(DZ730)
R365	1-216-833-11	METAL CHIP	10K	5%	1/10W								
R368	1-216-809-11	METAL CHIP	100	5%	1/10W		R536	1-216-841-11	METAL CHIP	47K	5%	1/10W	(DZ330)
R370	1-216-857-11	METAL CHIP	1M	5%	1/10W								
							R540	1-216-809-11	METAL CHIP	100	5%	1/10W	
R371	1-216-815-11	METAL CHIP	330	5%	1/10W		R541	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R373	1-216-809-11	METAL CHIP	100	5%	1/10W								
R376	1-216-864-11	SHORT CHIP	0				R542	1-216-833-11	METAL CHIP	10K	5%	1/10W	

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R543	1-216-809-11	METAL CHIP	100	5%	1/10W	R1113	1-211-977-11	METAL CHIP	22	0.5%	1/1
R544	1-216-809-11	METAL CHIP	100	5%	1/10W	R1114	1-216-845-11	METAL CHIP	100K	5%	1/1
R545	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1115	1-211-977-11	METAL CHIP	22	0.5%	1/1
R548	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1116	1-216-821-11	METAL CHIP	1K	5%	1/1
R553	1-216-809-11	METAL CHIP	100	5%	1/10W	R1117	1-216-841-11	METAL CHIP	47K	5%	1/1
					(DZ710)						
R554	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1118	1-216-801-11	METAL CHIP	22	5%	1/1
R555	1-234-372-11	RES, NETWORK	100X4 (1005)			R1120	1-216-801-11	METAL CHIP	22	5%	1/1
R563	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1121	1-216-801-11	METAL CHIP	22	5%	1/1
R564	1-216-864-11	SHORT CHIP	0			R1123	1-216-864-11	SHORT CHIP	0		
R569	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1124	1-216-841-11	METAL CHIP	47K	5%	1/1
R572	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1125	1-216-805-11	METAL CHIP	47	5%	1/1
R574	1-216-864-11	SHORT CHIP	0 (DZ710)			R1132	1-216-845-11	METAL CHIP	100K	5%	1/1
R577	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1133	1-216-864-11	SHORT CHIP	0		
R579	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R1134	1-216-809-11	METAL CHIP	100	5%	1/1
R581	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						(DZ330)
						R1135	1-216-821-11	METAL CHIP	1K	5%	1/1
R582	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1136	1-216-835-11	METAL CHIP	15K	5%	1/1
R583	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R1138	1-216-809-11	METAL CHIP	100	5%	1/1
R584	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						(DZ330)
R585	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1140	1-216-829-11	METAL CHIP	4.7K	5%	1/1
R591	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1141	1-216-855-11	METAL CHIP	680K	5%	1/1
						R1142	1-216-845-11	METAL CHIP	100K	5%	1/1
R592	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1146	1-216-805-11	METAL CHIP	47	5%	1/1
R596	1-216-845-11	METAL CHIP	100K	5%	1/10W	R1151	1-216-833-11	METAL CHIP	10K	5%	1/1
R597	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1154	1-216-809-11	METAL CHIP	100	5%	1/1
R598	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1155	1-216-809-11	METAL CHIP	100	5%	1/1
R599	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1156	1-216-809-11	METAL CHIP	100	5%	1/1
R603	1-234-372-11	RES, NETWORK	100X4 (1005)			R1159	1-216-805-11	METAL CHIP	47	5%	1/1
R607	1-216-809-11	METAL CHIP	100	5%	1/10W	R1160	1-216-805-11	METAL CHIP	47	5%	1/1
R609	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1161	1-216-801-11	METAL CHIP	22	5%	1/1
R614	1-216-809-11	METAL CHIP	100	5%	1/10W	R1162	1-216-805-11	METAL CHIP	47	5%	1/1
R615	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1163	1-216-805-11	METAL CHIP	47	5%	1/1
R620	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W	R1164	1-216-805-11	METAL CHIP	47	5%	1/1
R621	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1165	1-216-805-11	METAL CHIP	47	5%	1/1
R622	1-218-885-11	METAL CHIP	39K	0.5%	1/10W	R1171	1-216-809-11	METAL CHIP	100	5%	1/1
R623	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1176	1-216-833-11	METAL CHIP	10K	5%	1/1
R624	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1183	1-216-805-11	METAL CHIP	47	5%	1/1
R625	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R626	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R1184	1-216-805-11	METAL CHIP	47	5%	1/1
R627	1-216-809-11	METAL CHIP	100	5%	1/10W	R1185	1-216-805-11	METAL CHIP	47	5%	1/1
R628	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1186	1-216-821-11	METAL CHIP	1K	5%	1/1
R629	1-216-809-11	METAL CHIP	100	5%	1/10W	R1191	1-216-821-11	METAL CHIP	1K	5%	1/1
						R1192	1-216-821-11	METAL CHIP	1K	5%	1/1
R636	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1193	1-216-821-11	METAL CHIP	1K	5%	1/1
R638	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1198	1-216-809-11	METAL CHIP	100	5%	1/1
R640	1-216-809-11	METAL CHIP	100	5%	1/10W	R1501	1-216-821-11	METAL CHIP	1K	5%	1/1
R701	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1502	1-216-821-11	METAL CHIP	1K	5%	1/1
R711	1-216-849-11	METAL CHIP	220K	5%	1/10W	R1503	1-216-821-11	METAL CHIP	1K	5%	1/1
R712	1-216-864-11	SHORT CHIP	0			R1504	1-216-829-11	METAL CHIP	4.7K	5%	1/1
R713	1-216-817-11	METAL CHIP	470	5%	1/10W	R1507	1-216-821-11	METAL CHIP	1K	5%	1/1
R715	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1508	1-216-821-11	METAL CHIP	1K	5%	1/1
R717	1-216-807-11	METAL CHIP	68	5%	1/10W	R1512	1-218-887-11	METAL CHIP	47K	0.5%	1/1
R718	1-216-807-11	METAL CHIP	68	5%	1/10W	R1513	1-218-879-11	METAL CHIP	22K	0.5%	1/1
R1101	1-216-809-11	METAL CHIP	100	5%	1/10W	R1517	1-216-815-11	METAL CHIP	330	5%	1/1
R1103	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W	R1518	1-218-883-11	METAL CHIP	33K	0.5%	1/1
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1519	1-218-877-11	METAL CHIP	18K	0.5%	1/1
R1106	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1521	1-218-893-11	METAL CHIP	82K	0.5%	1/1
R1107	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1525	1-218-875-11	METAL CHIP	15K	0.5%	1/1
R1108	1-216-857-11	METAL CHIP	1M	5%	1/10W						
R1109	1-216-864-11	SHORT CHIP	0			R1526	1-216-835-11	METAL CHIP	15K	5%	1/1
R1110	1-216-841-11	METAL CHIP	47K	5%	1/10W	R1527	1-216-833-11	METAL CHIP	10K	5%	1/1
R1111	1-216-809-11	METAL CHIP	100	5%	1/10W	R1529	1-216-864-11	SHORT CHIP	0		
R1112	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R1532	1-216-833-11	METAL CHIP	10K	5%	1/1

HBD-DZ330/DZ710/DZ730

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R1535	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3012	1-216-817-11	METAL CHIP	470	5%	1/10W
R1536	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3013	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1537	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W	R3014	1-216-801-11	METAL CHIP	22	5%	1/10W
R1538	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3015	1-216-805-11	METAL CHIP	47	5%	1/10W
R1539	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3016	1-216-809-11	METAL CHIP	100	5%	1/10W
R1540	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R3020	1-216-817-11	METAL CHIP	470	5%	1/10W
R1541	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3021	1-216-805-11	METAL CHIP	47	5%	1/10W
R1542	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R3022	1-216-817-11	METAL CHIP	470	5%	1/10W
R1543	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3024	1-216-801-11	METAL CHIP	22	5%	1/10W
R1544	1-216-797-11	METAL CHIP	10	5%	1/10W	R3025	1-216-805-11	METAL CHIP	47	5%	1/10W
R1605	1-216-809-11	METAL CHIP	100	5%	1/10W (UK)	R3026	1-216-809-11	METAL CHIP	100	5%	1/10W
R1730	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3030	1-216-817-11	METAL CHIP	470	5%	1/10W
R1742	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3032	1-216-817-11	METAL CHIP	470	5%	1/10W
R1743	1-216-864-11	SHORT CHIP	0 (DZ710/DZ730)			R3033	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1744	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DZ330)	R3034	1-216-801-11	METAL CHIP	22	5%	1/10W
R1749	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3035	1-216-805-11	METAL CHIP	47	5%	1/10W
R1750	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3036	1-216-809-11	METAL CHIP	100	5%	1/10W
R1751	1-216-864-11	SHORT CHIP	0			R3040	1-216-864-11	SHORT CHIP	0		
R1752	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3041	1-216-864-11	SHORT CHIP	0		
R1757	1-216-864-11	SHORT CHIP	0			R3042	1-216-864-11	SHORT CHIP	0		
R1781	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3043	1-216-864-11	SHORT CHIP	0		
R1782	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3044	1-216-864-11	SHORT CHIP	0		
R2101	1-218-841-11	METAL CHIP	560	0.5%	1/10W	R3045	1-216-864-11	SHORT CHIP	0		
R2103	1-216-864-11	SHORT CHIP	0 (DZ710)			R3051	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2110	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3052	1-216-857-11	METAL CHIP	1M	5%	1/10W
R2114	1-216-801-11	METAL CHIP	22	5%	1/10W	R3053	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2115	1-216-864-11	SHORT CHIP	0			R3054	1-216-805-11	METAL CHIP	47	5%	1/10W
R2120	1-216-809-11	METAL CHIP	100	5%	1/10W	R3059	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2129	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3060	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2130	1-216-809-11	METAL CHIP	100	5%	1/10W	R3065	1-216-809-11	METAL CHIP	100	5%	1/10W
R2131	1-216-809-11	METAL CHIP	100	5%	1/10W	R3074	1-216-805-11	METAL CHIP	47	5%	1/10W
R2136	1-216-805-11	METAL CHIP	47	5%	1/10W	R3075	1-216-805-11	METAL CHIP	47	5%	1/10W
R2150	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3076	1-216-805-11	METAL CHIP	47	5%	1/10W
R2151	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3080	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2152	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3091	1-216-864-11	SHORT CHIP	0		
R2155	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3092	1-216-864-11	SHORT CHIP	0		
R2156	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3093	1-216-864-11	SHORT CHIP	0		
R2157	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3094	1-216-864-11	SHORT CHIP	0		
R2158	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3095	1-216-864-11	SHORT CHIP	0		
R2159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3096	1-216-864-11	SHORT CHIP	0		
R2160	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3101	1-216-805-11	METAL CHIP	47	5%	1/10W
R2167	1-216-864-11	SHORT CHIP	0			R3102	1-216-805-11	METAL CHIP	47	5%	1/10W
R2168	1-216-815-11	METAL CHIP	330	5%	1/10W	R3103	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2178	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3104	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2179	1-216-809-11	METAL CHIP	100	5%	1/10W	R3105	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2180	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3121	1-216-821-11	METAL CHIP	1K	5%	1/10W
R2184	1-216-809-11	METAL CHIP	100	5%	1/10W	R3122	1-216-837-11	METAL CHIP	22K	5%	1/10W
R2185	1-216-809-11	METAL CHIP	100	5%	1/10W	R3123	1-216-791-11	METAL CHIP	3.3	5%	1/10W
R2191	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3126	1-216-864-11	SHORT CHIP	0		
R2192	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3151	1-216-805-11	METAL CHIP	47	5%	1/10W
R2193	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3152	1-216-805-11	METAL CHIP	47	5%	1/10W
R2194	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3153	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3001	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3154	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3002	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3155	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3003	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R3201	1-216-805-11	METAL CHIP	47	5%	1/10W
R3004	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R3202	1-216-805-11	METAL CHIP	47	5%	1/10W
R3006	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3203	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3010	1-216-817-11	METAL CHIP	470	5%	1/10W	R3204	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3011	1-216-805-11	METAL CHIP	47	5%	1/10W	R3205	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R3221	1-216-821-11	METAL CHIP	1K	5%	1/10W

MAIN MS-203 P-SW POV

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Ref. No.
R3222	1-216-837-11	METAL CHIP	22K	5%	1/10W			MS-203 BOARD					
R3223	1-216-791-11	METAL CHIP	3.3	5%	1/10W			*****					
R3226	1-216-864-11	SHORT CHIP	0					< CONNECTOR >					
R3251	1-216-805-11	METAL CHIP	47	5%	1/10W								
R3252	1-216-805-11	METAL CHIP	47	5%	1/10W								
R3253	1-216-845-11	METAL CHIP	100K	5%	1/10W		CN001	1-815-412-11	CONNECTOR, FFC/FPC 5P				
R3254	1-216-845-11	METAL CHIP	100K	5%	1/10W			< SWITCH >					
R3255	1-216-845-11	METAL CHIP	100K	5%	1/10W								
R3301	1-216-805-11	METAL CHIP	47	5%	1/10W		S001	1-786-693-11	SWITCH, DETECTION (CHUCK/TRAY DETE				
R3302	1-216-805-11	METAL CHIP	47	5%	1/10W			*****					
R3303	1-216-845-11	METAL CHIP	100K	5%	1/10W			A-1746-219-A	P-SW BOARD, COMPLETE				
R3304	1-216-845-11	METAL CHIP	100K	5%	1/10W			*****					
R3305	1-216-845-11	METAL CHIP	100K	5%	1/10W			< CAPACITOR >					
R3321	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R3322	1-216-837-11	METAL CHIP	22K	5%	1/10W		C5301	1-162-927-11	CERAMIC CHIP 100PF 5% 50V				
R3323	1-216-791-11	METAL CHIP	3.3	5%	1/10W			< CONNECTOR >					
R3326	1-216-864-11	SHORT CHIP	0										
R3401	1-216-805-11	METAL CHIP	47	5%	1/10W		* CN5301	1-580-055-21	PIN, CONNECTOR (SMD) 2P				
R3402	1-216-805-11	METAL CHIP	47	5%	1/10W			< SWITCH >					
R3403	1-216-845-11	METAL CHIP	100K	5%	1/10W								
R3404	1-216-845-11	METAL CHIP	100K	5%	1/10W		S5301	1-786-650-21	SWITCH, TACTILE (1/16")				
R3405	1-216-845-11	METAL CHIP	100K	5%	1/10W			*****					
R3551	1-216-845-11	METAL CHIP	100K	5%	1/10W			A-1745-459-A	POWER BOARD, COMPLETE (DZ330)				
R3552	1-216-837-11	METAL CHIP	22K	5%	1/10W			A-1761-519-A	POWER BOARD, COMPLETE (DZ730)				
R3553	1-216-833-11	METAL CHIP	10K	5%	1/10W			A-1761-521-A	POWER BOARD, COMPLETE (DZ710)				
R3554	1-216-845-11	METAL CHIP	100K	5%	1/10W			*****					
R3558	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W			7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3				
R3561	1-216-841-11	METAL CHIP	47K	5%	1/10W			< CAPACITOR >					
R3562	1-218-883-11	METAL CHIP	33K	0.5%	1/10W								
R3563	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W								
R9941	1-216-838-11	METAL CHIP	27K	5%	1/10W		△ C901	1-114-594-11	FILM 0.22uF 10% 310V	10%	310V		
R9942	1-216-838-11	METAL CHIP	27K	5%	1/10W		△ C902	1-114-594-11	FILM 0.22uF 10% 310V	10%	310V		
R9945	1-216-813-11	METAL CHIP	220	5%	1/10W		△ C903	1-114-346-21	ELECT(BLOCK) 330uF 20% 450V	20%	450V		
R9946	1-216-864-11	SHORT CHIP	0									(DZ330/730/710)	
		< NETWORK RESISTOR >					△ C903	1-114-347-21	ELECT(BLOCK) 330uF 20% 450V	20%	450V		
RB1103	1-234-371-21	RES, NETWORK 47X4 (1005)					△ C905	1-116-393-11	FILM 0.0033uF 5% 400V	5%	400V		
RB1104	1-234-371-21	RES, NETWORK 47X4 (1005)					△ C906	1-117-815-11	FILM 0.001uF 3% 1.5V	3%	1.5V		
RB1105	1-234-371-21	RES, NETWORK 47X4 (1005)					C907	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	10%	50V		
RB1106	1-234-371-21	RES, NETWORK 47X4 (1005)					C908	1-107-909-11	ELECT 47uF 20% 50V	20%	50V		
RB1109	1-234-371-21	RES, NETWORK 47X4 (1005)					C909	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	10%	50V		
RB1110	1-234-371-21	RES, NETWORK 47X4 (1005)					C910	1-126-965-91	ELECT 22uF 20% 50V	20%	50V		
RB1111	1-234-371-21	RES, NETWORK 47X4 (1005)					C916	1-116-078-11	CERAMIC CHIP 1uF 10% 50V	10%	50V		
RB1112	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)					△ C918	1-112-887-51	CERAMIC 0.01uF 20% 250V	20%	250V		
RB1113	1-234-400-21	CONDUCTOR, NETWORK 0X4 (1005)					△ C920	1-112-887-51	CERAMIC 0.01uF 20% 250V	20%	250V		
RB1114	1-234-370-21	RES, NETWORK 22X4 (1005)					△ C921	1-117-220-81	CERAMIC 150PF 5% 2K	5%	2K		
RB1115	1-234-370-21	RES, NETWORK 22X4 (1005)					C922	1-112-300-91	CERAMIC CHIP 4.7uF 10% 10V	10%	10V		
		< TERMINAL BOARD >					C923	1-162-959-11	CERAMIC CHIP 330PF 5% 50V	5%	50V		
TB3901	1-780-840-11	TERMINAL BOARD (SPEAKER) 4P (SPEAKERS (FRONT R,FRONT L,SUBWOOFER,CENTER))					△ C924	1-116-393-11	FILM 0.0033uF 5% 400V	5%	400V		
		< VIBRATOR >					C925	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	10%	25V		
							△ C926	1-107-930-91	ELECT 22uF 20% 100V	20%	100V		
							C927	1-112-223-11	ELECT 3300uF 20% 10V	20%	10V		
X301	1-814-382-11	QUARTZ CRYSTAL UNITS (24.576MHz)					C928	1-112-232-11	ELECT 2700uF 20% 16V	20%	16V		
X501	1-795-058-21	VIBRATOR, CERAMIC (5MHz)					C929	1-112-241-21	ELECT 1000uF 20% 25V	20%	25V		
X1101	1-814-381-11	QUARTZ CRYSTAL UNITS (27MHz)					C932	1-114-994-11	ELECT 2200uF 20% 35V	20%	35V		
X3051	1-814-266-11	VIBRATOR, CRYSTAL (49.152MHz)					C933	1-114-994-11	ELECT 2200uF 20% 35V	20%	35V		
		*****					C934	1-126-953-11	ELECT 2200uF 20% 35V	20%	35V		
												(DZ330/730/710)	
							C935	1-114-323-11	CERAMIC CHIP 0.01uF 10% 50V	10%	50V		
							C936	1-114-323-11	CERAMIC CHIP 0.01uF 10% 50V	10%	50V		

HBD-DZ330/DZ710/DZ730

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C937	1-100-756-91	CERAMIC CHIP	0.047uF 10% 50V	DZ951	8-719-083-71	DIODE UDZSUSTE-1730B	
△ C938	1-112-869-51	CERAMIC	470PF 10% 250V	DZ954	8-719-083-71	DIODE UDZSUSTE-1730B	
C939	1-136-165-00	FILM	0.1uF 5% 50V	< TERMINAL BOARD >			
C940	1-112-228-21	ELECT	1000uF 20% 16V	EB901	1-537-770-21	TERMINAL BOARD, GROUND	
C942	1-126-941-11	ELECT	470uF 20% 25V	EB904	1-537-770-21	TERMINAL BOARD, GROUND	
C943	1-126-934-11	ELECT	220uF 20% 16V (DZ330/DZ730)	EB907	1-537-770-21	TERMINAL BOARD, GROUND	
C943	1-126-935-11	ELECT	470uF 20% 16V (DZ710)	< FUSE >			
C950	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ F945	1-576-794-11	FUSE, MICRO (1608) 2A	
C951	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	< HOLDER FUSE >			
△ C963	1-112-869-51	CERAMIC	470PF 10% 250V	FH901	1-533-217-41	HOLDER, FUSE	
△ C964	1-112-869-51	CERAMIC	470PF 10% 250V	FH902	1-533-217-41	HOLDER, FUSE	
C971	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	< RESISTOR >			
C972	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ FR929	1-246-373-11	FUSIBLE 1 10% 1/2W F	
C973	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	< IC >			
C975	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ IC901	6-707-742-01	IC STR-F8168-LF1352	
C976	1-126-933-11	ELECT	100uF 20% 16V	IC921	6-714-671-01	IC STR-Y6763	
C981	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	IC923	6-711-947-01	IC MM1431CURE	
C983	1-100-756-91	CERAMIC CHIP	0.047uF 10% 50V	IC932	6-711-947-01	IC MM1431CURE	
C984	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC941	6-712-613-01	IC SI-3010KM-TLS	
C987	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V (DZ710/DZ730)	< COIL >			
C990	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L931	1-457-878-65	COIL, CHOKE 2.2uH	
C991	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L954	1-457-578-11	COIL, CHOKE 10uH	
C992	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	L956	1-457-578-11	COIL, CHOKE 10uH	
C993	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L963	1-469-525-91	INDUCTOR 10uH	
△ C994	1-112-869-51	CERAMIC	470PF 10% 250V	L964	1-457-725-11	COIL, CHOKE 4.7uH	
C997	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V (DZ330/DZ730)	L967	1-457-725-11	COIL, CHOKE 4.7uH	
C997	1-116-078-11	CERAMIC CHIP	1uF 10% 50V (DZ710)	< LINE FILTER >			
C998	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	△ LF901	1-457-054-21	COIL, LINE FILTER	
< CONNECTOR >				△ LF902	1-457-054-21	COIL, LINE FILTER	
CN901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P		< PHOTO COUPLER >			
CN904	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P		△ PC901	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-W	
* CN906	1-764-334-11	PLUG, CONNECTOR 11P		△ PC902	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-W	
CN908	1-564-505-11	PLUG, CONNECTOR 2P (DZ710/DZ730)		△ PC903	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-W	
< DIODE >				< TRANSISTOR >			
D901	8-719-082-57	DIODE D5SBA60F01		Q901	8-729-201-53	TRANSISTOR 2SA1015-GR	
D902	8-719-063-74	DIODE D1NL20U-TR2		Q922	6-550-702-01	TRANSISTOR 2SC3243-TP-E	
D906	6-501-817-01	DIODE MA2J1110GLS0		Q943	8-729-029-14	TRANSISTOR DTC144EUA-T106	
D907	6-501-817-01	DIODE MA2J1110GLS0		Q945	6-552-458-01	FET 2SK3577-T1B-AT	
D908	6-501-817-01	DIODE MA2J1110GLS0		Q949	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
D909	6-501-817-01	DIODE MA2J1110GLS0		Q950	8-729-029-14	TRANSISTOR DTC144EUA-T106	
D910	6-501-817-01	DIODE MA2J1110GLS0		Q969	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF	
D913	6-500-241-01	DIODE SRS03		< RESISTOR >			
D914	6-501-817-01	DIODE MA2J1110GLS0		△ R901	1-240-938-91	METAL 1.5M 5% 1/2W F	
D931	6-501-849-01	DIODE FMX-22SL		△ R903	1-250-297-65	METAL OXIDE 100K 5% 3W F	
D942	6-502-518-01	DIODE 50PQSA065-FA9		△ R904	1-250-297-65	METAL OXIDE 100K 5% 3W F	
D943	8-719-080-53	DIODE RK36LF-B3		R905	1-216-797-11	METAL CHIP 10 5% 1/10W	
D946	8-719-030-25	DIODE EG01CV0		R906	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
D954	8-719-080-59	DIODE EK19-V0		R907	1-216-833-11	METAL CHIP 10K 5% 1/10W	
D955	8-719-080-59	DIODE EK19-V0		R908	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
DZ901	6-501-782-01	DIODE MAZ8180GMLS0					
DZ902	6-502-231-01	DIODE MAZ8220GLLS0					
DZ903	6-501-787-01	DIODE MAZ8220GMLS0					
DZ905	6-501-792-01	DIODE MAZ8300GMLS0					
DZ915	6-501-760-01	DIODE MAZ8100GMLS0					

POWER S-AIR CON SPEAKER U

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Re
R909	1-216-833-11	METAL CHIP	10K	5%	1/10W				S-AIR CON BOARD (DZ710/DZ730)				
R910	1-216-825-11	METAL CHIP	2.2K	5%	1/10W				*****				
R911	1-216-813-11	METAL CHIP	220	5%	1/10W				< CONNECTOR >				
△ R912	1-216-363-00	METAL OXIDE	0.33	5%	2W	F	CN100	1-779-550-21	CONNECTOR, FFC (LIF (NON-ZIF)) 13P				
△ R914	1-220-891-11	METAL	0.1	10%	5W	F	CN102	1-564-517-11	PLUG, CONNECTOR 2P				
							CN103	1-821-744-11	CONNECTOR, CARD EDGE 30P (EZW-T10)				
△ R916	1-250-297-65	METAL OXIDE	100K	5%	3W	F			< TRANSISTOR >				
R917	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		Q100	8-729-029-14	TRANSISTOR DTC144EUA-T106				
R919	1-216-837-11	METAL CHIP	22K	5%	1/10W		Q101	6-550-363-01	TRANSISTOR 2SB1690KT146				
△ R922	1-250-262-41	METAL	0.39	5%	2W	F			< RESISTOR >				
R923	1-218-879-11	METAL CHIP	22K	0.5%	1/10W		R100	1-216-817-11	METAL CHIP	470	5%	1/10W	
R925	1-216-797-11	METAL CHIP	10	5%	1/10W		R101	1-216-817-11	METAL CHIP	470	5%	1/10W	
R926	1-218-847-11	METAL CHIP	1K	0.5%	1/10W		R102	1-216-817-11	METAL CHIP	470	5%	1/10W	
R931	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W		R103	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R932	1-218-879-11	METAL CHIP	22K	0.5%	1/10W		R104	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R933	1-216-821-11	METAL CHIP	1K	5%	1/10W		R105	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R934	1-216-821-11	METAL CHIP	1K	5%	1/10W		R106	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R935	1-216-821-11	METAL CHIP	1K	5%	1/10W		R107	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R936	1-216-853-11	METAL CHIP	470K	5%	1/10W		R108	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R937	1-218-871-11	METAL CHIP	10K	0.5%	1/10W				*****				
R938	1-218-847-11	METAL CHIP	1K	0.5%	1/10W				SPEAKER BOARD				

R939	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W				< CAPACITOR >				
R940	1-218-871-11	METAL CHIP	10K	0.5%	1/10W		C5401	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R941	1-218-895-11	METAL CHIP	100K	0.5%	1/10W		C5402	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R942	1-218-871-11	METAL CHIP	10K	0.5%	1/10W		C5403	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R945	1-216-837-11	METAL CHIP	22K	5%	1/10W		C5404	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
							C5405	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
R946	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		C5406	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
R949	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		C5407	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
R951	1-218-875-11	METAL CHIP	15K	0.5%	1/10W		C5408	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
R952	1-216-864-11	SHORT CHIP	0						< CONNECTOR >				
R954	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W		* CN5401	1-564-519-11	PLUG, CONNECTOR 4P				
R955	1-216-821-11	METAL CHIP	1K	5%	1/10W				< COIL >				
R956	1-216-817-11	METAL CHIP	470	5%	1/10W		L5401	1-457-077-11	COIL, AIR-CORE				
R957	1-216-841-11	METAL CHIP	47K	5%	1/10W		L5402	1-457-078-11	COIL, AIR-CORE				
R958	1-216-821-11	METAL CHIP	1K	5%	1/10W		L5403	1-457-077-11	COIL, AIR-CORE				
R959	1-218-871-11	METAL CHIP	10K	0.5%	1/10W		L5404	1-457-078-11	COIL, AIR-CORE				
R962	1-216-864-11	SHORT CHIP	0						< TERMINAL BOARD >				
R963	1-218-839-11	METAL CHIP	470	0.5%	1/10W								
R965	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W								
R966	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R967	1-216-821-11	METAL CHIP	1K	5%	1/10W								
R972	1-218-871-11	METAL CHIP	10K	0.5%	1/10W								
R974	1-216-827-11	METAL CHIP	3.3K	5%	1/10W								
R976	1-216-833-11	METAL CHIP	10K	5%	1/10W								
R978	1-216-829-11	METAL CHIP	4.7K	5%	1/10W								
R992	1-216-793-11	METAL CHIP	4.7	5%	1/10W								
R998	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W								
R999	1-218-871-11	METAL CHIP	10K	0.5%	1/10W								
									</				

HBD-DZ330/DZ710/DZ730

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
102	1-832-579-21	CABLE, FLEXIBLE FLAT (13 CORE)	(DZ330/DZ730)
102	1-832-589-21	CABLE, FLEXIBLE FLAT (15 CORE)	(DZ710)
152	1-832-576-21	CABLE, FLEXIBLE FLAT (13 CORE)	(DZ710/DZ730)
153	1-832-823-21	CABLE, FLEXIBLE FLAT (11 CORE)	
△ 154	1-834-966-41	CORD, POWER-SUPPLY (AEP,RU)	
△ 154	1-835-078-31	CORD, POWER (UK)	
203	1-832-538-21	CABLE, FLEXIBLE FLAT (5 CORE)	
206	1-832-553-21	CABLE, FLEXIBLE FLAT (9 CORE)	(DZ710)
206	1-832-563-21	CABLE, FLEXIBLE FLAT (11 CORE)	(DZ330/DZ730)
207	1-832-602-21	CABLE, FLEXIBLE FLAT (19 CORE)	(DZ330/DZ730)
207	1-832-612-21	CABLE, FLEXIBLE FLAT (21 CORE)	(DZ710)
△ 257	8-820-321-12	OPTICAL PICK-UP (KHM-313CAA/C2RP1)	
258	1-828-773-51	WIRE (FLAT TYPE) (24 CORE)	
△ F901	1-576-232-51	FUSE (H.B.C.) (5A/250V)	
FAN3001	1-787-396-21	FAN, DC (50 SQUARE)	
TU4001	1-693-787-11	TUNER (FM) (ANTENNA (COAXIAL 75Ω FM))	

HBD-DZ330/DZ710/DZ

MEMO

HBD-DZ330/DZ710/DZ730

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]