

SECTION 7 EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
 - AUS : Australian model
 - G : German model
 - SP : Singapore model
 - MX : Mexican model
 - AR : Argentina model
 - TW : Taiwan model
 - AED : North European model

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

7-1. CABINET SECTION

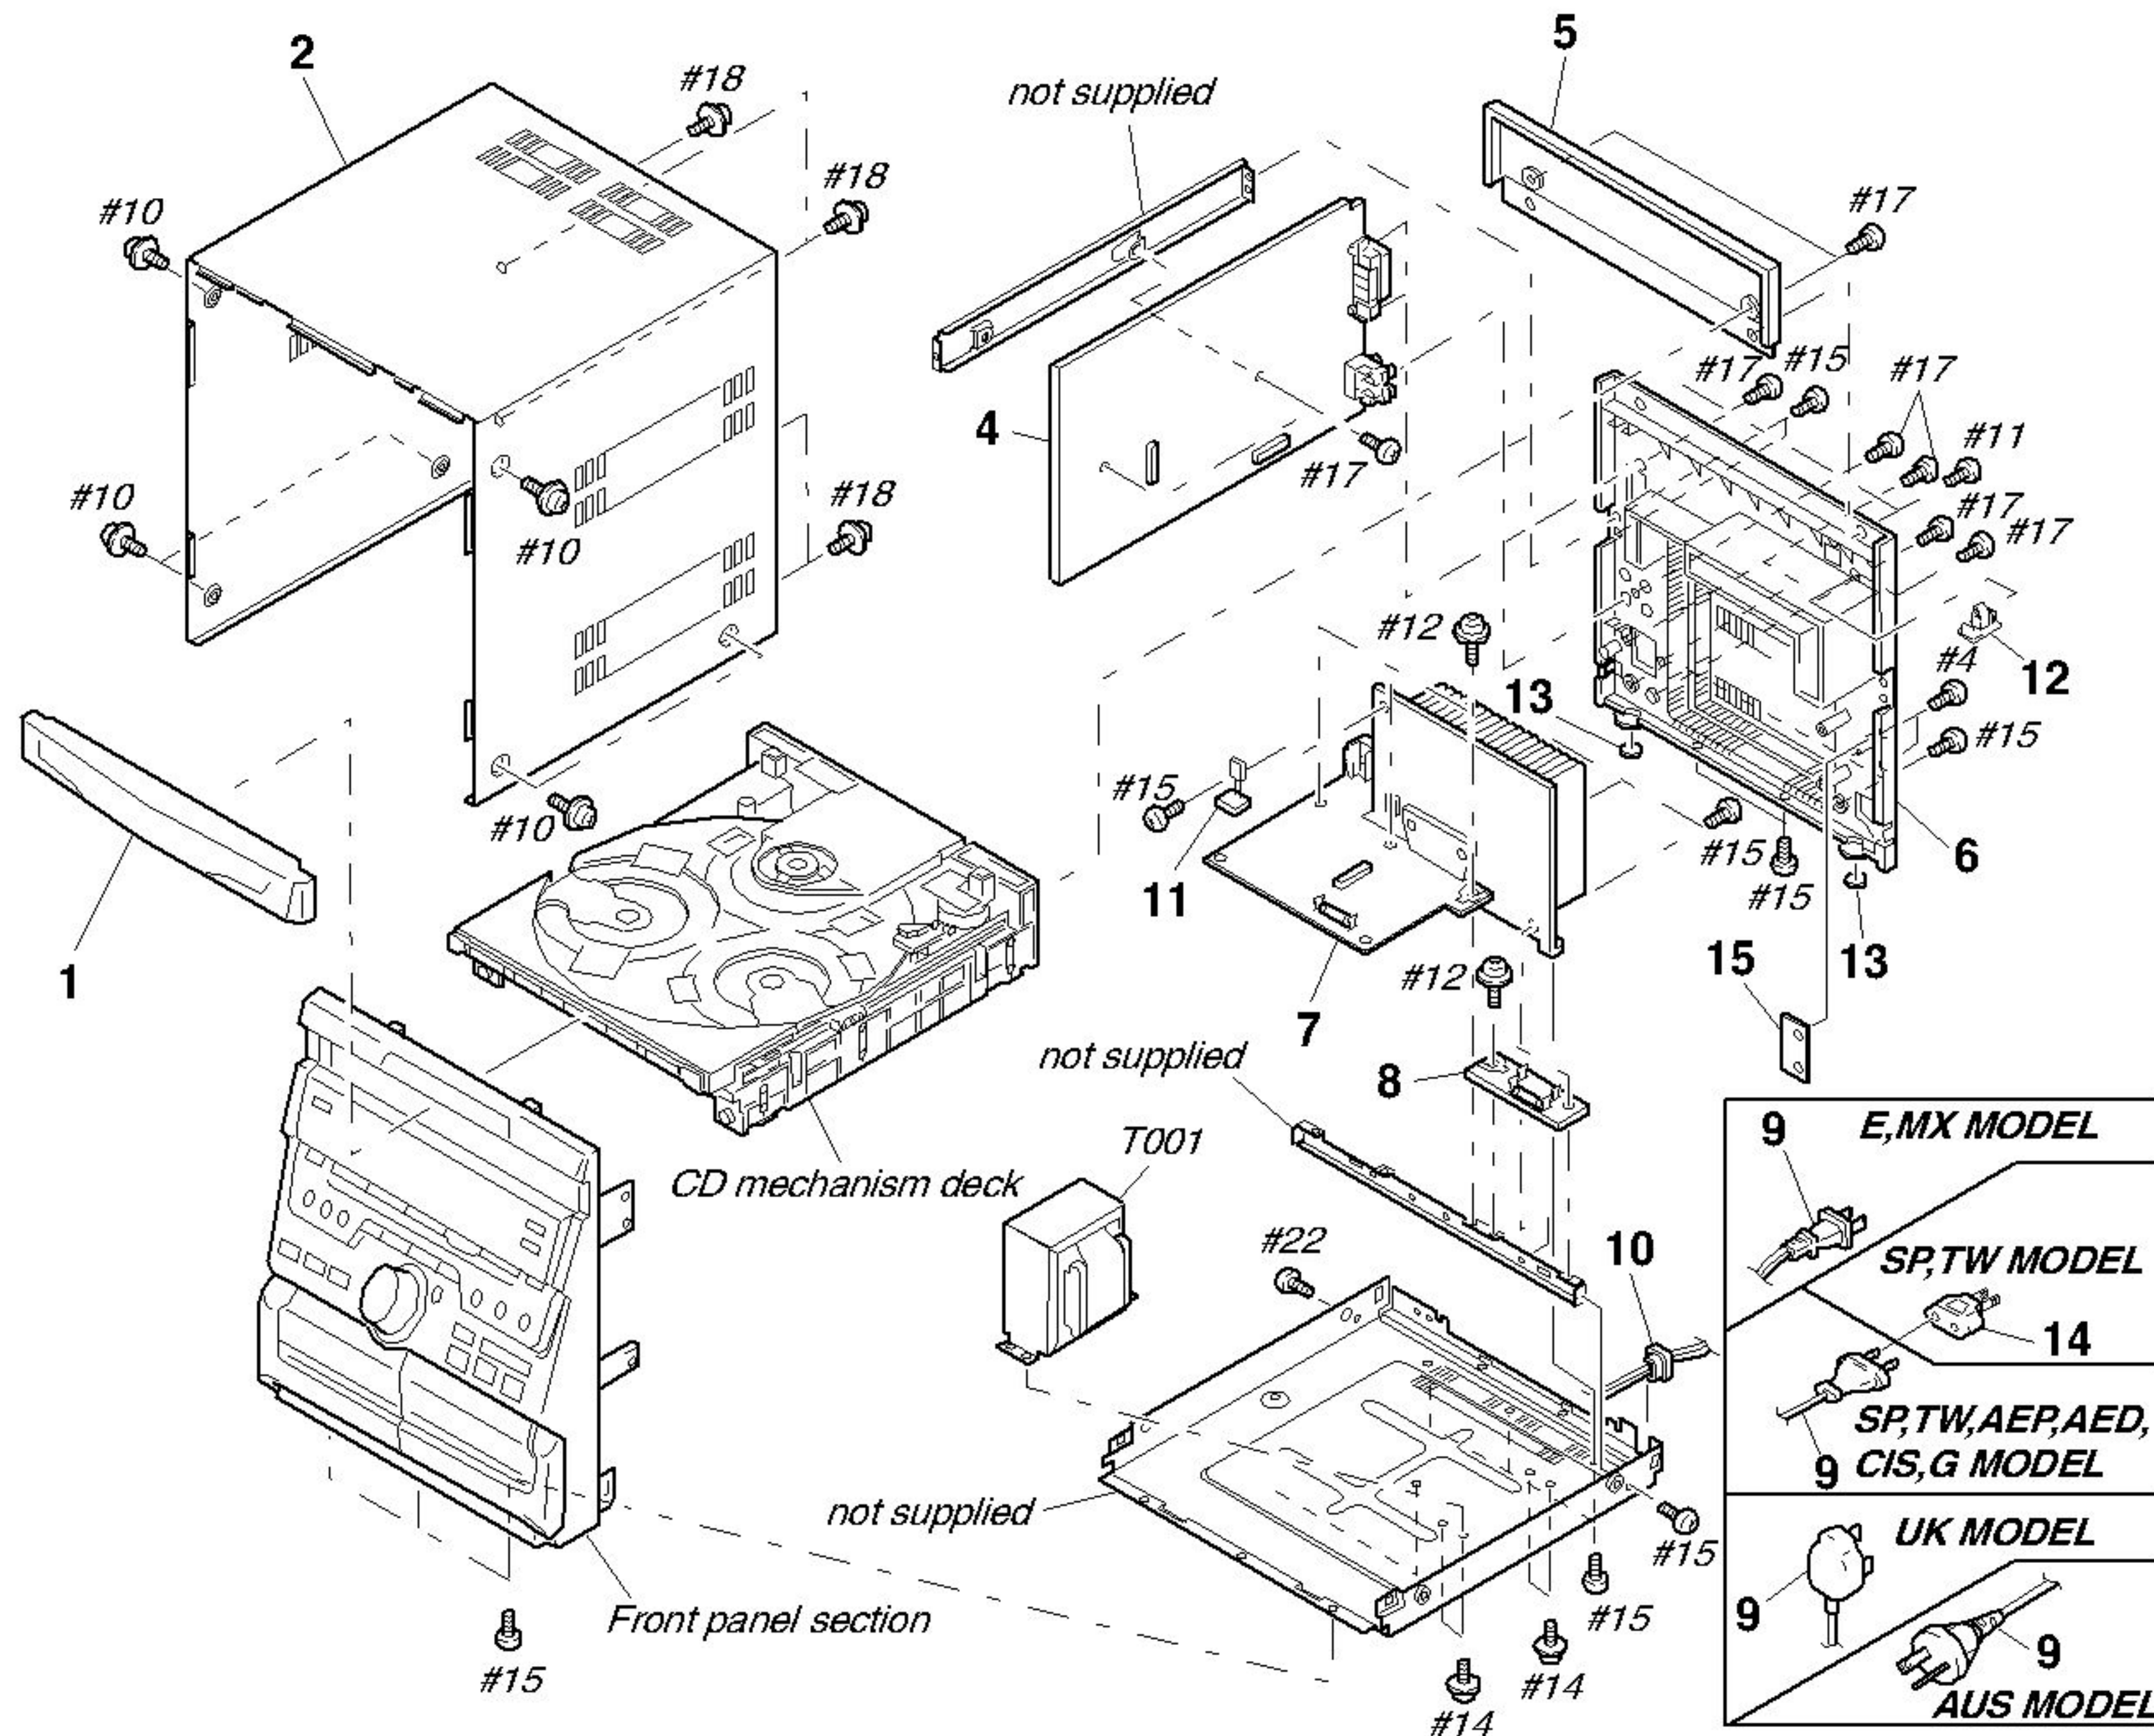

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-220-797-01	DOOR,CD (RXD3)		$\triangle$ 9	1-555-795-00	CORD, POWER (GRX20:SP,TW/RXD3:AED,AEP,CIS,G)	
1	4-221-607-01	DOOR,CD (GRX20)		$\triangle$ 9	1-696-572-21	CORD, POWER (RXD3:UK)	
2	4-220-799-01	COVER, TOP		$\triangle$ 9	1-696-966-11	CORD, POWER (GRX20:AUS)	
4	A-4426-302-A	MAIN BOARD ,COMPLETE (RXD3)		$\triangle$ 9	1-783-941-41	CORD, POWER (GRX20:AR)	
4	A-4426-303-A	MAIN BOARD ,COMPLETE (GRX20)		10	3-703-244-21	BUSHING, CORD	
* 5	4-210-591-01	CABINET (A), REAR		11	1-674-554-11	TR BOARD	
6	4-221-603-01	CABINET, REAR (RXD3)		12	1-674-794-11	PHOTO SOCKET BOARD	
6	4-221-604-01	CABINET, REAR (GRX20:AUS)		13	4-220-602-01	RUBBER, FOOT	
6	4-221-605-01	CABINET, REAR (GRX20:AR,E,SP,TW)		$\triangle$ 14	1-569-008-21	ADAPTOR, CONVERSION 2P (SP,TW)	
6	4-221-606-01	CABINET, REAR (GRX20:MX)		15	1-674-880-11	AC SWITCH BOARD (GRX20:AR,E,MX,SP,TW)	
7	A-4426-292-A	AMPLIFIER BOARD ,COMPLETE (RXD3)		$\triangle$ T001	1-433-917-11	TRANSFORMER, POWER (GRX20:MX)	
7	A-4426-293-A	AMPLIFIER BOARD ,COMPLETE (GRX20:AUS)		$\triangle$ T001	1-433-918-11	TRANSFORMER, POWER (RXD3)	
7	A-4426-294-A	AMPLIFIER BOARD ,COMPLETE (GRX20:AR,E,MX,SP,TW)		$\triangle$ T001	1-433-919-11	TRANSFORMER, POWER (GRX20:AR,E,SP,TW)	
8	1-674-558-11	FUSE BOARD		$\triangle$ T001	1-433-920-11	TRANSFORMER, POWER (GRX20:AUS)	
$\triangle$ 9	1-551-506-99	CORD, POWER (GRX20:E,MX)					