

SECTION 8 EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts

Example:

KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑
Parts Color Cabinet's Color

- Abbreviation

AR : Argentina model

AUS : Australian model

E2 : 120V AC area in E model

E51 : Chilean and Peruvian models

KR : Korean model

MX : Mexican model


RU : Russian model

SP : Singapore model

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of the electrical parts list.

8-1. OVERALL SECTION

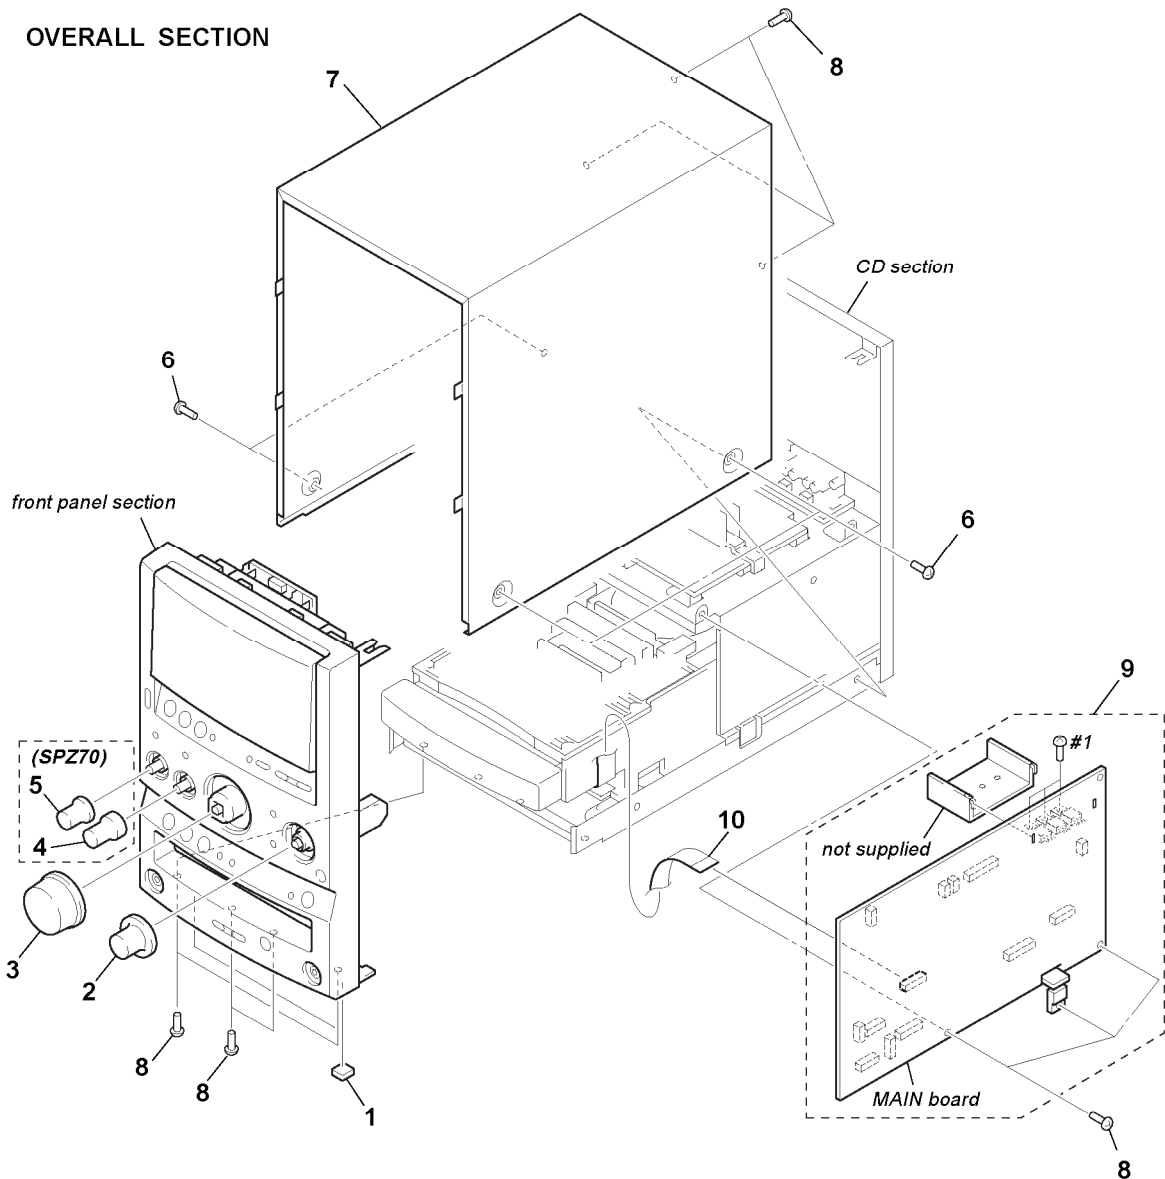


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-681-452-01	FOOT (CUSHION)		9	A-1166-993-A	MAIN BOARD, COMPLETE (SPZ70: RU)	
2	2-659-060-01	KNOB (JOG) (SPZ70)		9	A-1167-004-A	MAIN BOARD, COMPLETE (SPZ50: AEP, UK)	
2	2-659-060-11	KNOB (JOG) (SPZ50)		9	A-1167-017-A	MAIN BOARD, COMPLETE (SPZ50: RU)	
3	2-659-059-01	KNOB (VOL)		9	A-1171-390-A	MAIN BOARD, COMPLETE	
4	2-659-057-01	KNOB (BAS) (SPZ70)				(SPZ70: E2, E51, MX, AR)	
5	2-659-058-01	KNOB (TRE) (SPZ70)		9	A-1171-419-A	MAIN BOARD, COMPLETE	
6	3-363-099-11	SCREW (CASE 3 TP2)				(SPZ50: SP, KR, AUS)	
7	2-659-063-01	CASE		10	1-831-938-21	CABLE, FLEXIBLE FLAT (13 CORE)	
8	3-252-829-01	SCREW (B3), (+) BV TAPPING		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
9	A-1166-883-A	MAIN BOARD, COMPLETE (SPZ70: AEP, UK)					

8-2. FRONT PANEL SECTION

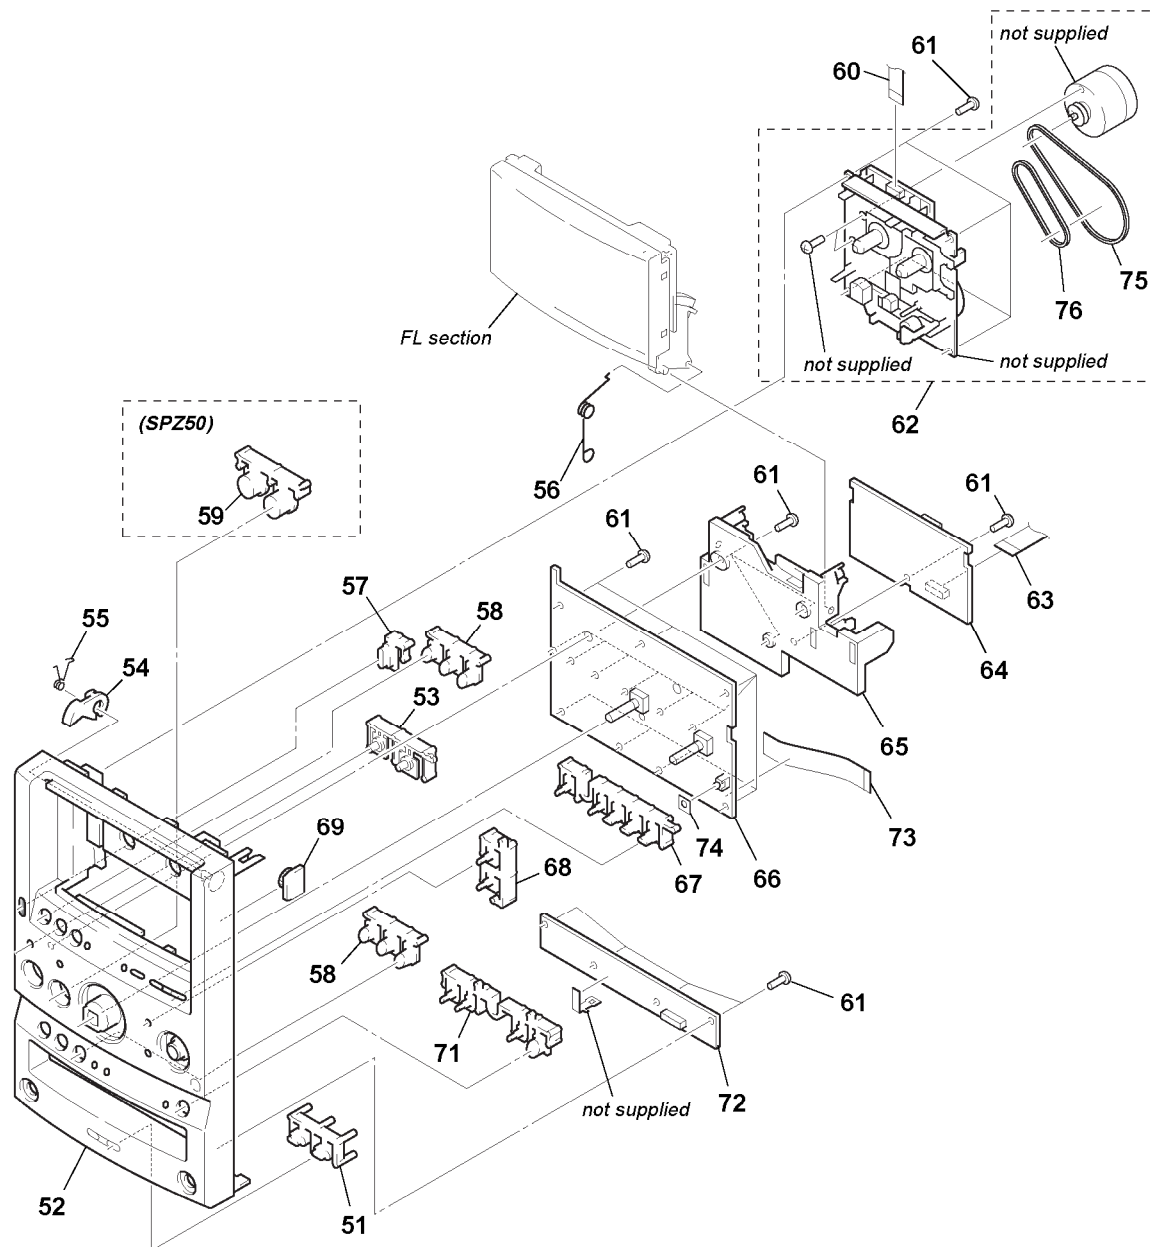


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	2-659-048-01	BUTTON (REC)		63	1-831-928-21	CABLE, FLEXIBLE FLAT (11 CORE)	
52	X-2109-480-1	PANEL (SERVICE) ASSY, FRONT (SPZ70)		64	A-1166-888-A	TC BOARD, COMPLETE	
52	X-2109-481-1	PANEL (SERVICE) ASSY, FRONT (SPZ50)		65	2-659-040-01	BASE (TC HOLDER)	
53	X-2109-287-1	BUTTON (DSGX) (SPZ50) ASSY (SPZ50)		66	A-1166-880-A	PANEL BOARD, COMPLETE (SPZ70)	
53	X-2109-289-1	BUTTON (DSGX) (SPZ70) ASSY (SPZ70)		66	A-1167-002-A	PANEL BOARD, COMPLETE (SPZ50)	
54	4-231-825-01	CAM (B), HEART		67	2-659-043-01	BUTTON (FUNCTION)	
55	4-231-841-01	SPRING (HEART CAM-B)		68	2-659-046-01	BUTTON (DIRECTION)	
56	2-659-068-01	SPRING (CASSETTE)		69	4-244-530-01	DAMPER	
57	2-659-041-01	BUTTON (POWER)		71	2-659-047-01	BUTTON (PLAY MODE)	
58	X-2109-479-1	BUTTON (CAP) ASSY (SPZ70)		72	A-1166-881-A	HP A-IN BOARD, COMPLETE	
58	2-666-034-01	BUTTON (DISC) (SPZ50)		73	1-831-996-21	CABLE, FLEXIBLE FLAT (11 CORE) (SPZ50)	
59	2-659-045-01	BUTTON (BAS/TRE) (SPZ50)		73	1-832-431-21	CABLE, FLEXIBLE FLAT (17 CORE) (SPZ70)	
60	1-832-430-21	CABLE, FLEXIBLE FLAT (7 CORE)		74	2-681-451-01	SHEET (RM)	
61	4-951-620-01	SCREW (2.6X8), +BVTP		75	2-683-561-01	BELT (SF)	
62	1-797-503-11	DECK, MECHANICAL (CFP42601)		76	2-685-676-01	BELT (FR)	

8-3. FL SECTION

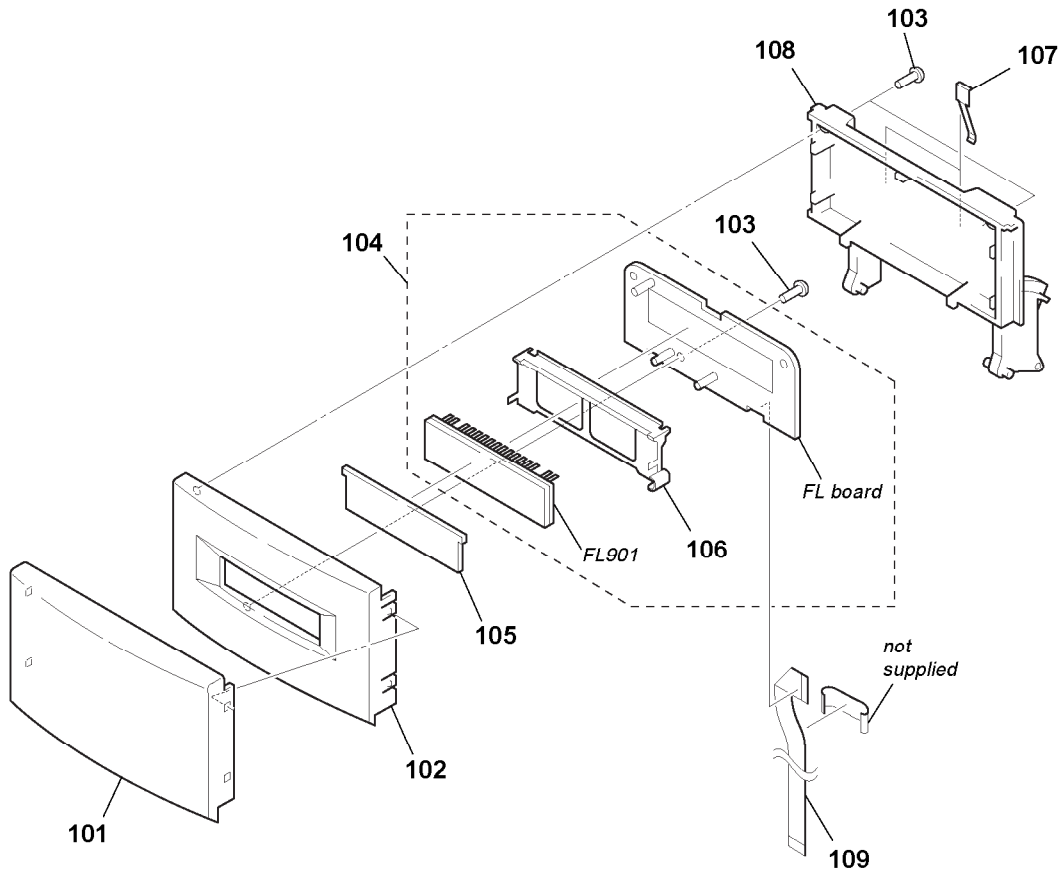


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	2-659-036-01	WINDOW (FL) (SPZ70: AEP, UK)		105	2-659-054-01	FILTER (FL)	
101	2-659-036-11	WINDOW (FL) (SPZ70: RU, E2, E51, MX, AR)		106	2-659-053-01	HOLDER (FL)	
101	2-659-036-21	WINDOW (FL) (SPZ50: AEP, UK)		107	2-584-676-01	SPRING (TC), PLATE	
101	2-659-036-31	WINDOW (FL) (SPZ50: RU, SP, KR, AUS)		108	2-659-039-01	HOLDER (TC)	
102	2-659-037-01	BASE (FL)		109	1-831-922-21	CABINET, FLUORESCENT (9 CORF)	
103	4-951-620-01	SCREW (2.6X8), +BVTP		FL901	1-519-874-11	INDICATOR TUBE, FLUORESCENT	
104	A-1166-879-A	FL BOARD, COMPLETE					

8-4. CD SECTION

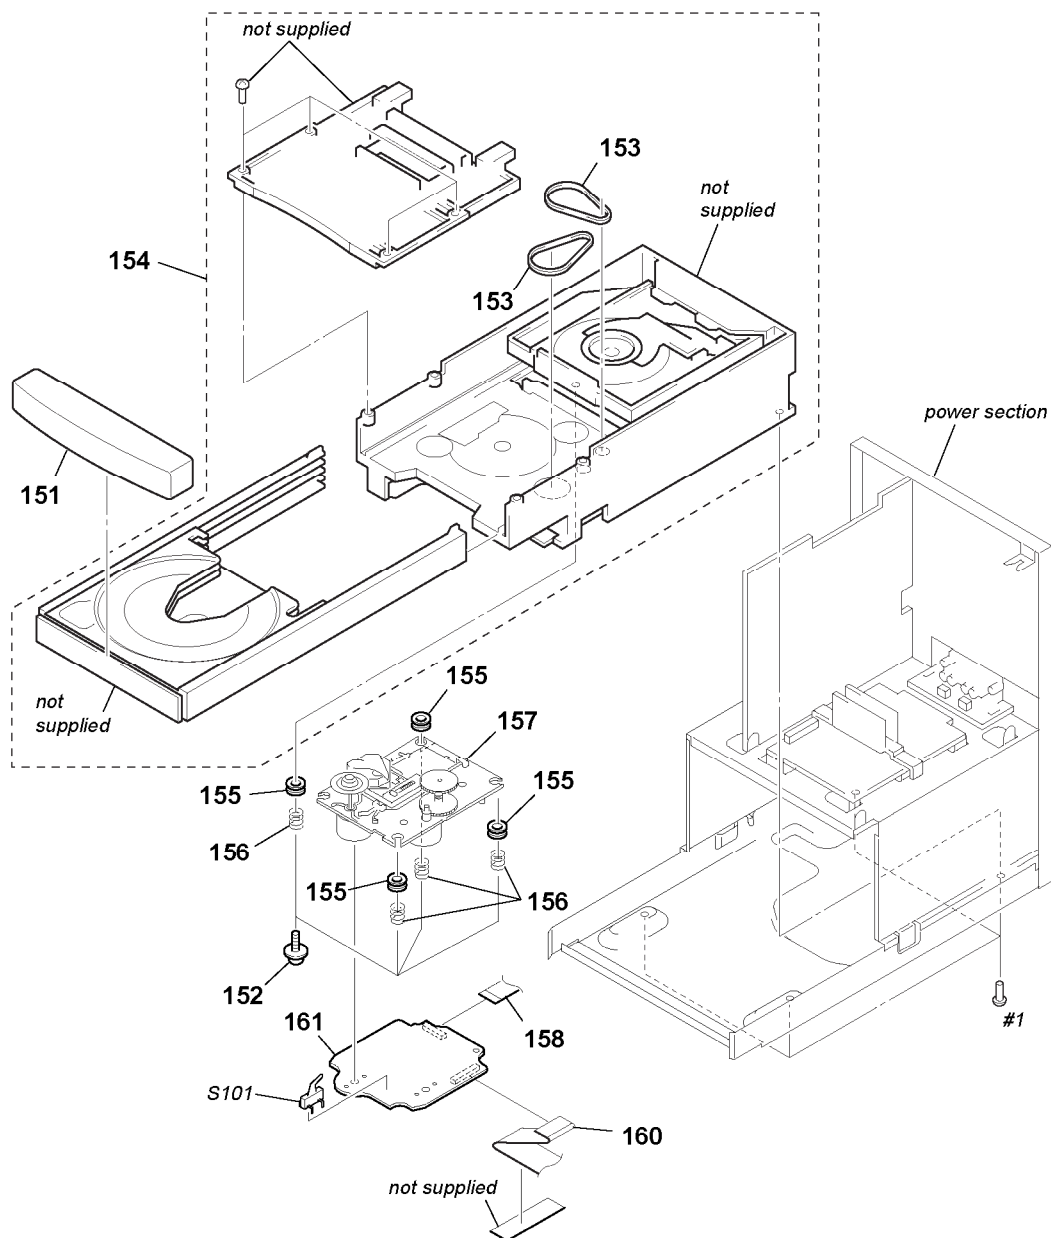

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	2-659-049-01	LID (CD)		▲ 157	A-4735-357-A	OPTICAL PICK-UP DEVICE (KSM-213DCP)	
152	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING		158	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
153	2-632-062-01	BELT (DLM3A)		160	1-828-382-21	WIRE (FLAT TYPE) (23 CORE)	
154	1-797-193-12	MECHANICAL, CD (DLM3A)		161	A-1134-279-A	CD BOARD, COMPLETE	
155	4-227-549-11	INSULATOR					
156	4-227-045-31	SPRING (INSULATOR), COIL		S101	1-771-853-11	SWITCH, DETECTION (LIMIT)	
				#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

8-5. POWER SECTION

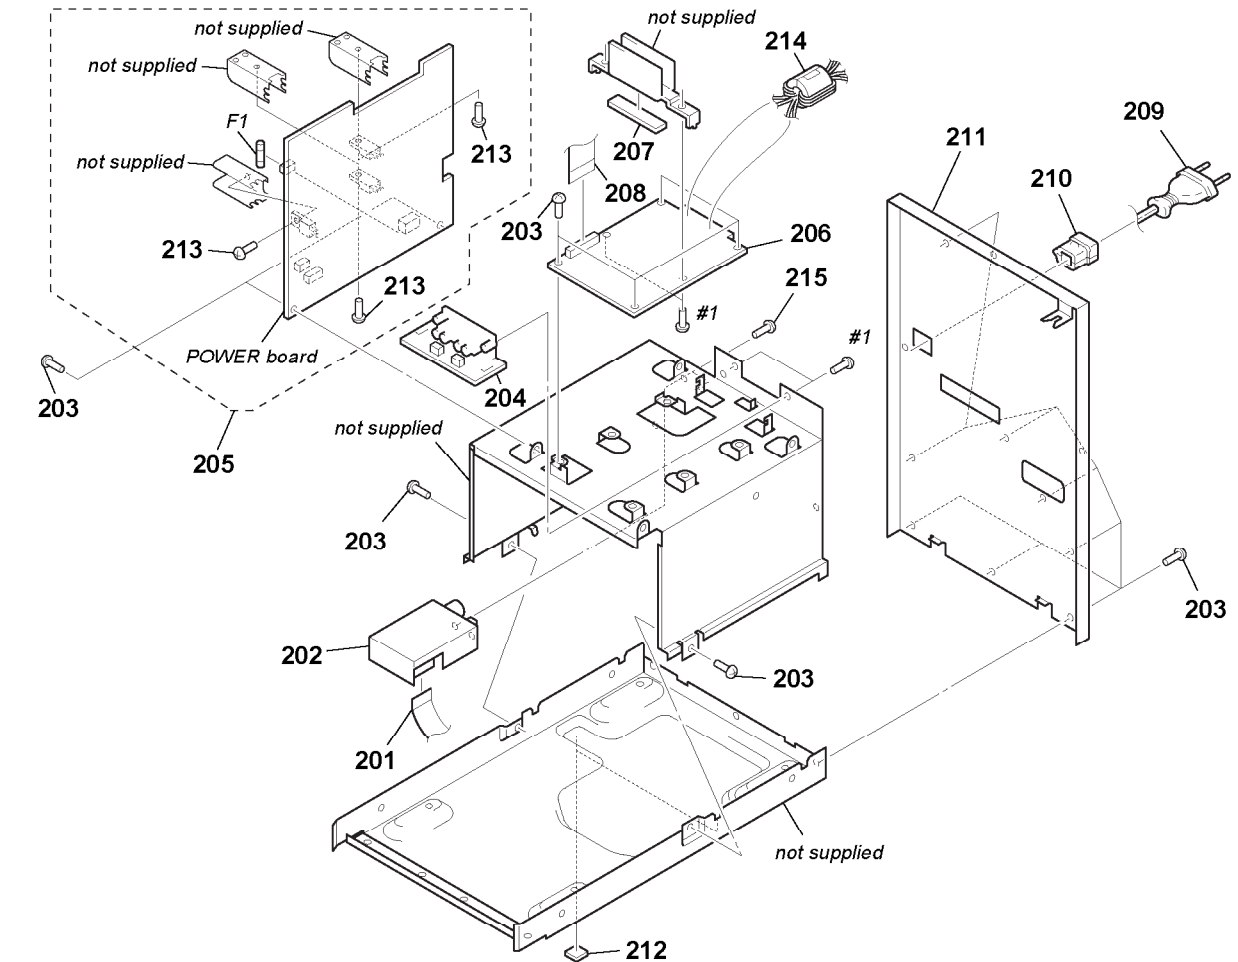

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	1-832-434-21	CABLE, FLEXIBLE FLAT (11 CORE) (SPZ50: AEP, UK/SPZ70: AEP, UK)		△ 209	1-829-387-11	CORD, POWER (SPZ70: AR)	
201	1-832-435-21	CABLE, FLEXIBLE FLAT (9 CORE) (SPZ50: RU, SP, KR, AUS/SPZ70: RU, E2, E51, MX, AR)		△ 209	1-830-188-11	CORD, POWER (SPZ50: AEP, RU, SP/SPZ70: AEP, RU, E51)	
202	1-693-710-11	TUNER (FM/AM) (SPZ50: RU, KR/SPZ70: RU)		210	3-703-244-00	BUSHING (2104), CORD (SPZ50/SPZ70: AEP, UK, RU, E51, AR)	
202	1-693-711-11	TUNER (FM/AM) (SPZ50: SP, AUS/SPZ70: E2, E51, MX, AR)		* 210	3-703-571-12	BUSHING (S) (4516), CORD (SPZ70: E2, MX)	
202	1-693-712-11	TUNER (FM/AM) (SPZ50: AEP, UK/SPZ70: AEP, UK)		211	2-659-064-01	PANEL, BACK (SPZ70: AEP, UK)	
203	3-252-829-01	SCREW (B3), (+) BV TAPPING		211	2-659-064-11	PANEL, BACK (SPZ70: E2)	
204	A-1166-886-A	SP BOARD, COMPLETE		211	2-659-064-21	PANEL, BACK (SPZ70: MX)	
205	A-1166-887-A	POWER BOARD, COMPLETE (SPZ70: AR)		211	2-659-064-31	PANEL, BACK (SPZ70: E51)	
205	A-1167-006-A	POWER BOARD, COMPLETE (SPZ50: SP, KR, AUS)		211	2-659-064-41	PANEL, BACK (SPZ70: AR)	
205	A-1171-392-A	POWER BOARD, COMPLETE (SPZ70: E2, E51)		211	2-659-064-61	PANEL, BACK (SPZ70: RU)	
205	A-1173-190-A	POWER BOARD, COMPLETE (SPZ70: MX)		211	2-670-256-01	PANEL, BACK (SPZ50: AEP, UK)	
205	A-1191-115-A	POWER BOARD, COMPLETE (SPZ70: AEP, UK, RU)		211	2-670-256-11	PANEL, BACK (SPZ50: SP)	
205	A-1191-116-A	POWER BOARD, COMPLETE (SPZ50: AEP, UK, RU)		211	2-670-256-21	PANEL, BACK (SPZ50: AUS)	
205	A-1191-116-A	POWER BOARD, COMPLETE (SPZ50: AEP, UK, RU)		211	2-670-256-31	PANEL, BACK (SPZ50: KR)	
206	A-1166-890-A	AMP BOARD, COMPLETE (SPZ70)		211	2-670-256-41	PANEL, BACK (SPZ50: RU)	
206	A-1167-008-A	AMP BOARD, COMPLETE (SPZ50)		212	4-233-372-02	FOOT (FELT)	
207	2-514-691-01	SHEET, RADIATION		213	3-254-142-01	SCREW (B3), (+) BV TAPPING (SPZ50: AEP, UK, RU/SPZ70: AEP, UK, RU)	
208	1-831-951-21	CABLE, FLEXIBLE FLAT (19 CORE)		213	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3 (SPZ50: SP, KR, AUS/SPZ70: E2, E51, MX, AR)	
△ 209	1-769-079-41	CORD, POWER (SPZ50: KR)		214	1-400-932-11	FILTER, CLAMP	
△ 209	1-769-744-81	CORD, POWER (SPZ50: UK/SPZ70: UK)		215	4-951-620-01	SCREW (2.6X8), +BVTP	
△ 209	1-775-790-71	CORD, POWER (SPZ50: AUS)		△ F1	1-576-232-51	FUSE (5A/250V)	
△ 209	1-827-226-31	CORD, POWER (SPZ70: E2, MX)		#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	