

SECTION 6
EXPLODED VIEWS


NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

- Abbreviation
SP : Singapore model
MX : Mexican model
AR : Argentina model
AUS : Australian model
EE : East European model


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

6-1. TOP COVER SECTION

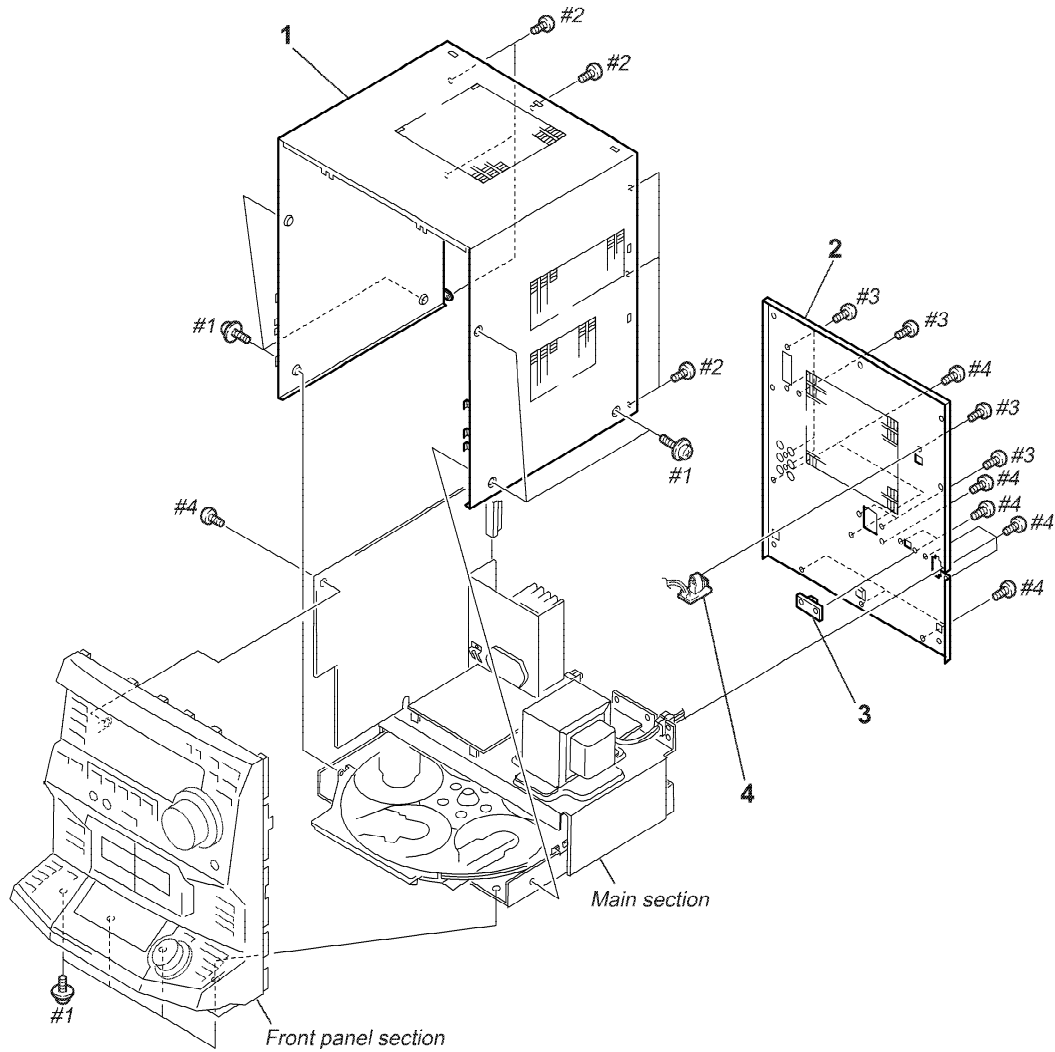


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-221-012-01	COVER, TOP		2	4-222-143-01	PANEL, REAR(DR3:AUS)	
* 1	4-211-556-01	COVER, TOP(DR330)		2	4-222-144-01	PANEL, REAR(DR3:MX)	
2	4-222-140-01	PANEL, REAR(XB200:AEP,UK)		2	4-222-145-01	PANEL, REAR(DR330)	
2	4-222-141-01	PANEL, REAR(XB200:EE,CIS)		3	1-674-880-11	AC SWITCH BOARD (DR3:E,SP,AR)	
2	4-222-142-01	PANEL, REAR(DR3:E,SP,AR)		4	1-675-425-11	PHOTO SOCKET BOARD	

6-2. CD DOOR SECTION

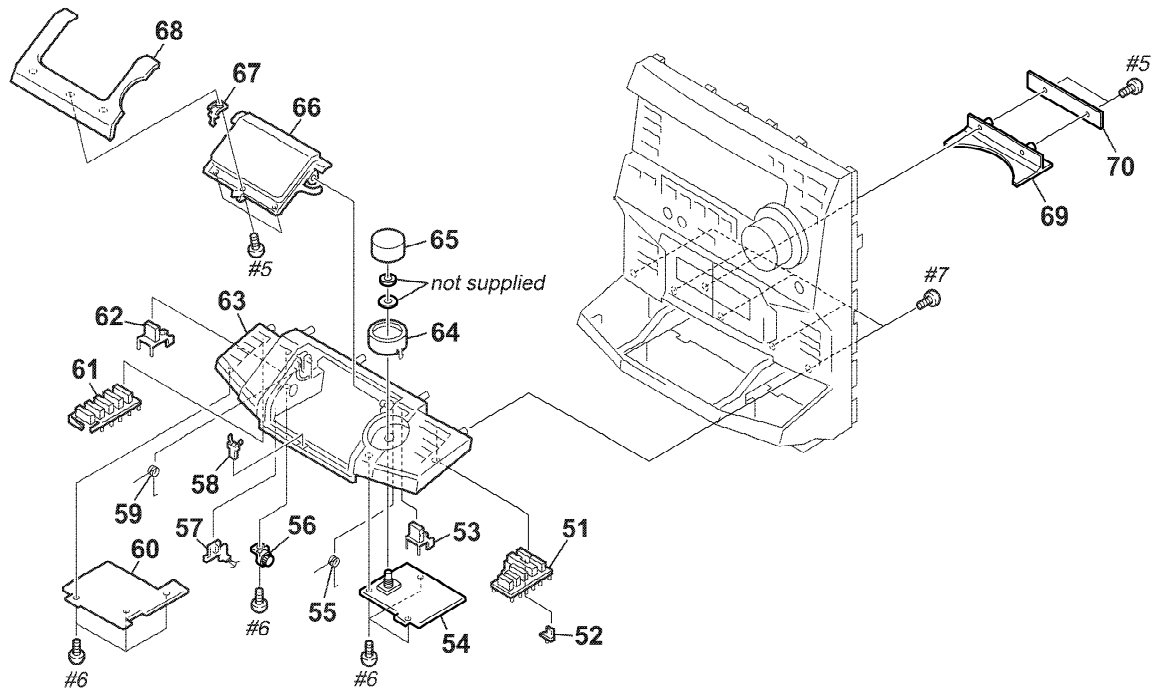


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-221-007-01	BUTTON, CD PLAY(DR3,XB200)		62	4-221-005-01	BUTTON, CD EDIT(DR3,XB200)	
51	4-222-126-01	BUTTON, CD PLAY(DR330)		62	4-222-124-01	BUTTON, CD EDIT(DR330)	
52	4-221-008-01	LENS, CD PLAY BUTTON		63	4-220-995-01	PANEL, CD FRONT(DR3,XB200)	
53	4-221-006-01	BUTTON, CD SKIP(DR3,XB200)		63	4-222-120-01	PANEL, CD FRONT(DR330)	
53	4-222-125-01	BUTTON, CD SKIP(DR330)		64	4-221-002-01	RING, AMS	
54	1-674-635-11	AMS BOARD		65	4-221-003-01	KNOB, AMS(DR3,XB200)	
55	4-221-011-01	SPRING (R), CD DOOR		65	4-222-122-01	KNOB, AMS(DR330)	
56	4-211-920-01	DAMPER (PG-5), GEAR		66	4-220-996-01	WINDOW, CD DOOR	
57	1-674-632-11	CD SW BOARD		67	4-221-009-01	HOOK, CD DOOR	
58	4-221-128-01	LOCK		68	4-221-001-01	DOOR, CD(DR3,XB200)	
59	4-221-010-01	SPRING (L), CD DOOR		68	4-222-121-01	DOOR, CD(DR330)	
60	1-674-634-11	CD KEY BOARD		69	4-211-914-01	LENS, CD DOOR	
61	4-221-004-01	BUTTON, CD DISC(DR3,XB200)		70	1-674-637-11	LED BOARD	
61	4-222-123-01	BUTTON, CD DISC(DR330)					

6-3. PANEL SECTION

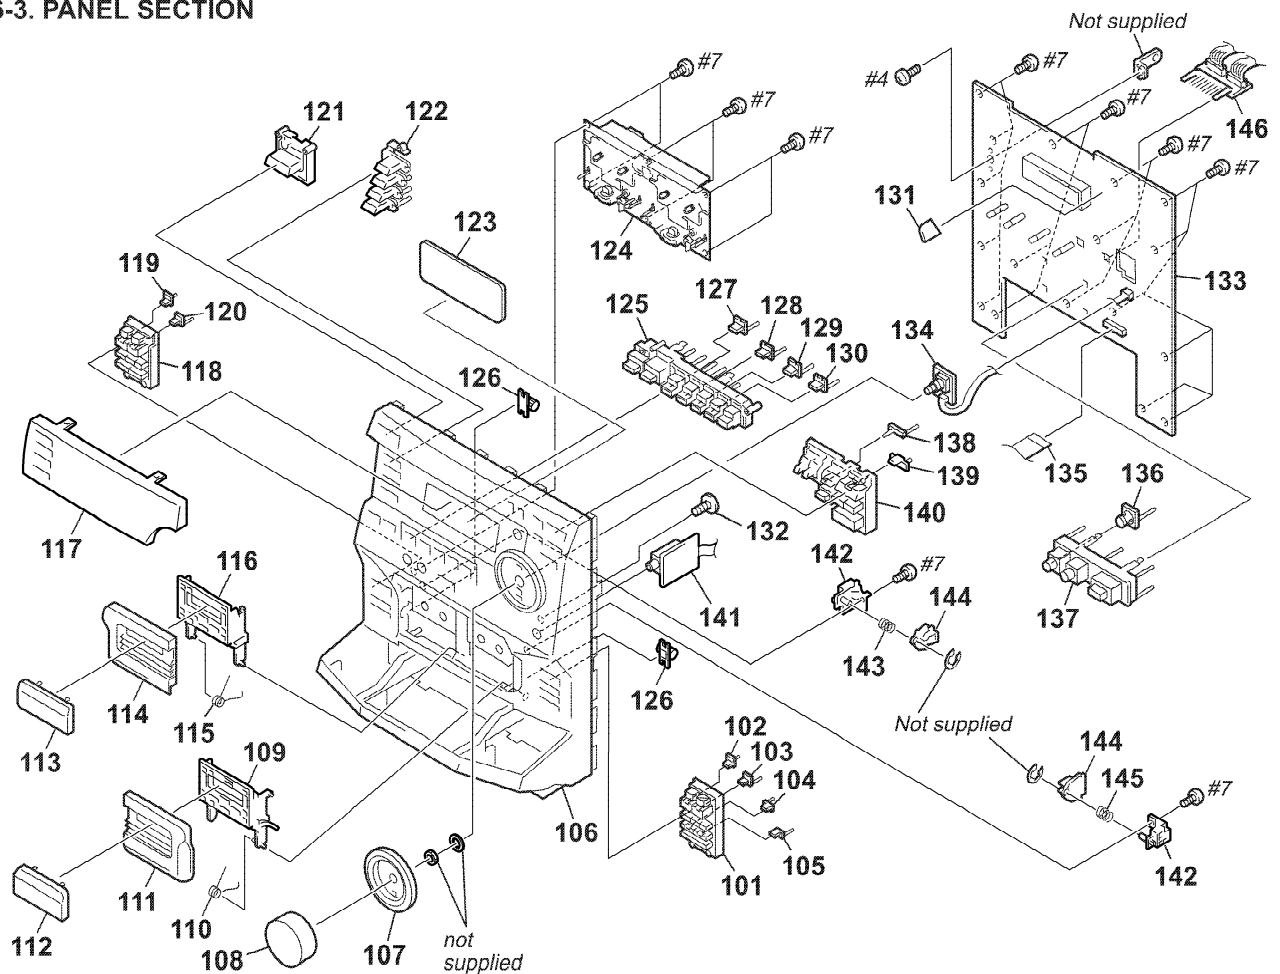

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	4-221-028-01	BUTTON (R), CASS(DR3,XB200)		122	4-221-023-01	BUTTON, CLOCK	
101	4-222-130-01	BUTTON (R), CASS(DR330)		123	4-220-987-01	PLATE, DISPLAY	
102	4-221-034-01	LENS (A), CASS BUTTON (R)		124	1-772-164-11	DECK, MECH	
103	4-221-035-01	LENS (B), CASS BUTTON (R)		125	4-221-024-01	BUTTON, MODE	
104	4-221-036-01	LENS (C), CASS BUTTON (R)		126	4-220-992-01	DAMPER (GRAY), GEAR	
105	4-221-037-01	LENS (D), CASS BUTTON (R)		127	4-221-038-01	LENS, ROCK BUTTON	
106	4-221-014-01	PANEL, FRONT(DR3,XB200)		128	4-221-039-01	LENS, POP BUTTON	
106	4-222-131-01	PANEL, FRONT(DR330)		129	4-220-985-01	LENS, JAZZ BUTTON	
107	4-221-000-01	RING, VR		130	4-220-986-01	LENS, SALSA BUTTON	
108	4-221-026-01	KNOB, VOLUME(DR3,XB200)		131	1-674-633-11	REM BOARD	
108	4-222-128-01	KNOB, VOLUME(DR330)		132	3-306-734-01	SCREW (M3 × 12), TAPPING	
109	4-221-016-01	HOLDER (R), CASS DOOR		133	A-4426-395-A	FRONT BOARD, COMPLETE(XB200)	
110	4-220-989-01	SPRING (R), CASS		133	A-4426-396-A	FRONT BOARD, COMPLETE(DR3:E)	
111	4-222-135-01	DOOR (R), CASSETTE(XB200)		133	A-4426-397-A	FRONT BOARD, COMPLETE(DR3:AUS)	
111	4-222-136-01	DOOR (R), CASSETTE(DR3)		133	A-4426-398-A	FRONT BOARD, COMPLETE(DR3:AR)	
111	4-222-137-01	DOOR (R), CASSETTE(DR330)		133	A-4426-400-A	FRONT BOARD, COMPLETE(DR3:MX,DR330)	
112	4-220-998-01	WINDOW (R), CASS DOOR		133	A-4426-399-A	FRONT BOARD, COMPLETE(DR3:SP)	
113	4-220-997-01	WINDOW (L), CASS DOOR		134	1-674-631-11	VR BOARD	
114	4-222-132-01	DOOR (L), CASSETTE(XB200)		135	1-783-579-11	WIRE (FLAT TYPE) (16 CORE)	
114	4-222-133-01	DOOR (L), CASSETTE(DR3)		136	4-221-031-01	LENS, GROOVE BUTTON	
114	4-222-134-01	DOOR (L), CASSETTE(DR330)		137	4-221-025-01	BUTTON, SURROUND(DR3,XB200)	
115	4-220-988-01	SPRING (L), CASS		137	4-222-127-01	BUTTON, SURROUND(DR330)	
116	4-221-015-01	HOLDER (L), CASS DOOR		138	4-221-030-01	LENS, ENTER BUTTON	
117	4-220-999-01	WINDOW, DISPLAY		139	4-221-029-01	LENS, TUNER BUTTON	
118	4-221-027-01	BUTTON (L), CASS(DR3,XB200)		140	4-221-022-01	BUTTON, TUNER(DR3,XB200)	
118	4-222-129-01	BUTTON (L), CASS(DR330)		140	4-222-139-01	BUTTON, TUNER(DR330)	
119	4-221-033-01	LENS (B), CASS BUTTON (L)		142	4-220-990-01	HOLDER, EJECT	
120	4-221-032-01	LENS (A), CASS BUTTON (L)		143	4-220-994-01	SPRING (R), PUSHING	
121	4-221-021-01	BUTTON, POWER (DR3,XB200)		144	4-220-991-01	LEVER, EJECT	
121	4-222-138-01	BUTTON, POWER(DR330)		145	4-220-993-01	SPRING (L), PUSHING	
				146	1-675-424-11	CONNECTOR BOARD	


6-4. MAIN SECTION

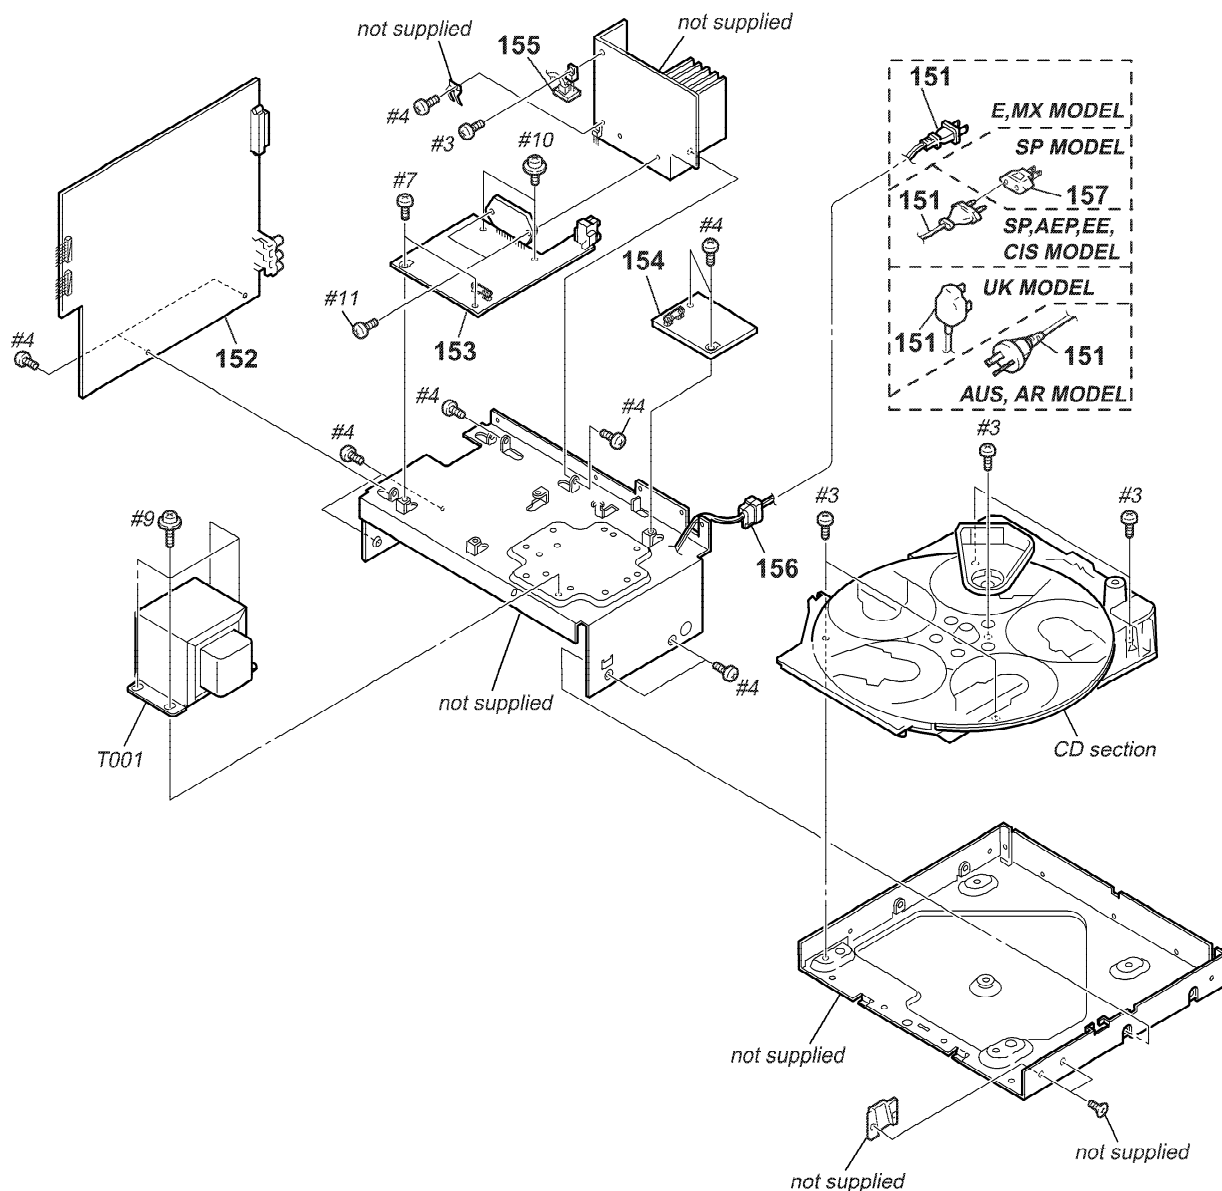

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
△ 151	1-551-506-99	CORD, POWER(DR3:E,MX,DR330)		153	A-4426-419-A	POWER (AMP) BOARD, COMPLETE (DR3:MX,DR330)	
△ 151	1-555-795-00	CORD, POWER(DR3:SP/XB200:AEP,EE,CIS)		154	1-674-638-11	POWER SUPPLY BOARD	
△ 151	1-696-572-21	CORD, POWER(XB200:UK)		155	1-674-642-11	TR BOARD	
△ 151	1-696-966-11	CORD, POWER(DR3:AUS)		156	3-703-244-21	BUSHING, CORD	
△ 151	1-783-941-51	CORD, POWER(DR3:AR)		△ 157	1-569-008-21	ADAPTOR, CONVERSION 2P (SP)	
152	A-4426-407-A	MAIN BOARD, COMPLETE(XB200)		△ T001	1-433-921-11	TRANSFORMER, POWER(DR3:MX,DR330)	
152	A-4426-408-A	MAIN BOARD, COMPLETE(DR3:E,SP,AR)		△ T001	1-433-922-11	TRANSFORMER, POWER(XB200)	
152	A-4426-409-A	MAIN BOARD, COMPLETE(DR3:AUS)		△ T001	1-433-923-11	TRANSFORMER, POWER(DR3:E,SP,AR)	
152	A-4426-410-A	MAIN BOARD, COMPLETE(DR3:MX,DR330)		△ T001	1-433-924-11	TRANSFORMER, POWER(DR3:AUS)	
153	A-4426-417-A	POWER (AMP) BOARD, COMPLETE(XB200)					
153	A-4426-418-A	POWER (AMP) BOARD, COMPLETE (DR3:E,SP,AR,AUS)					


The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

6-5. CD MECHANISM SECTION

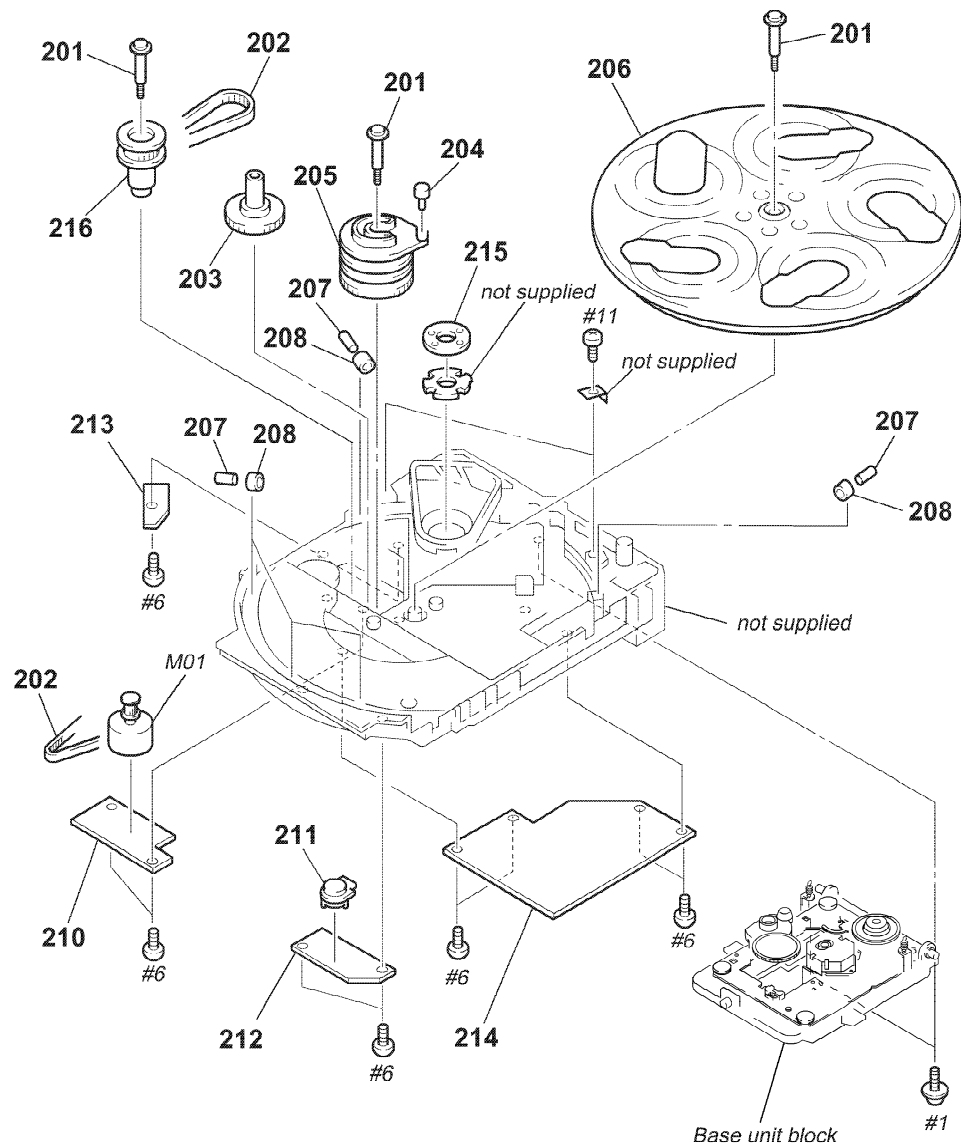

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	4-987-976-01	SCREW,STEP		210	1-675-422-11	MOTOR BOARD	
202	4-944-490-01	BELT(TIMING)		211	4-223-441-01	INDICATOR	
203	4-223-449-01	GEAR (MID)		212	1-675-423-11	DISC NO BOARD	
204	4-223-447-01	ROLLER(CAM)		213	1-675-421-11	CD SENSOR BOARD	
205	4-978-420-01	CAM(HOLDER)		214	A-4426-810-A	CD DECORD BOARD, COMPLETE	
206	4-223-440-01	TABLE, DISC		215	4-223-452-11	MAGNET	
207	4-934-376-01	SHAFT (ROLLER)		216	4-223-439-11	PULLEY	
208	4-223-450-01	ROLLER		M01	1-541-632-11	MOTOR DC	

6-6. BASE UNIT SECTION (KSM-213ECM)

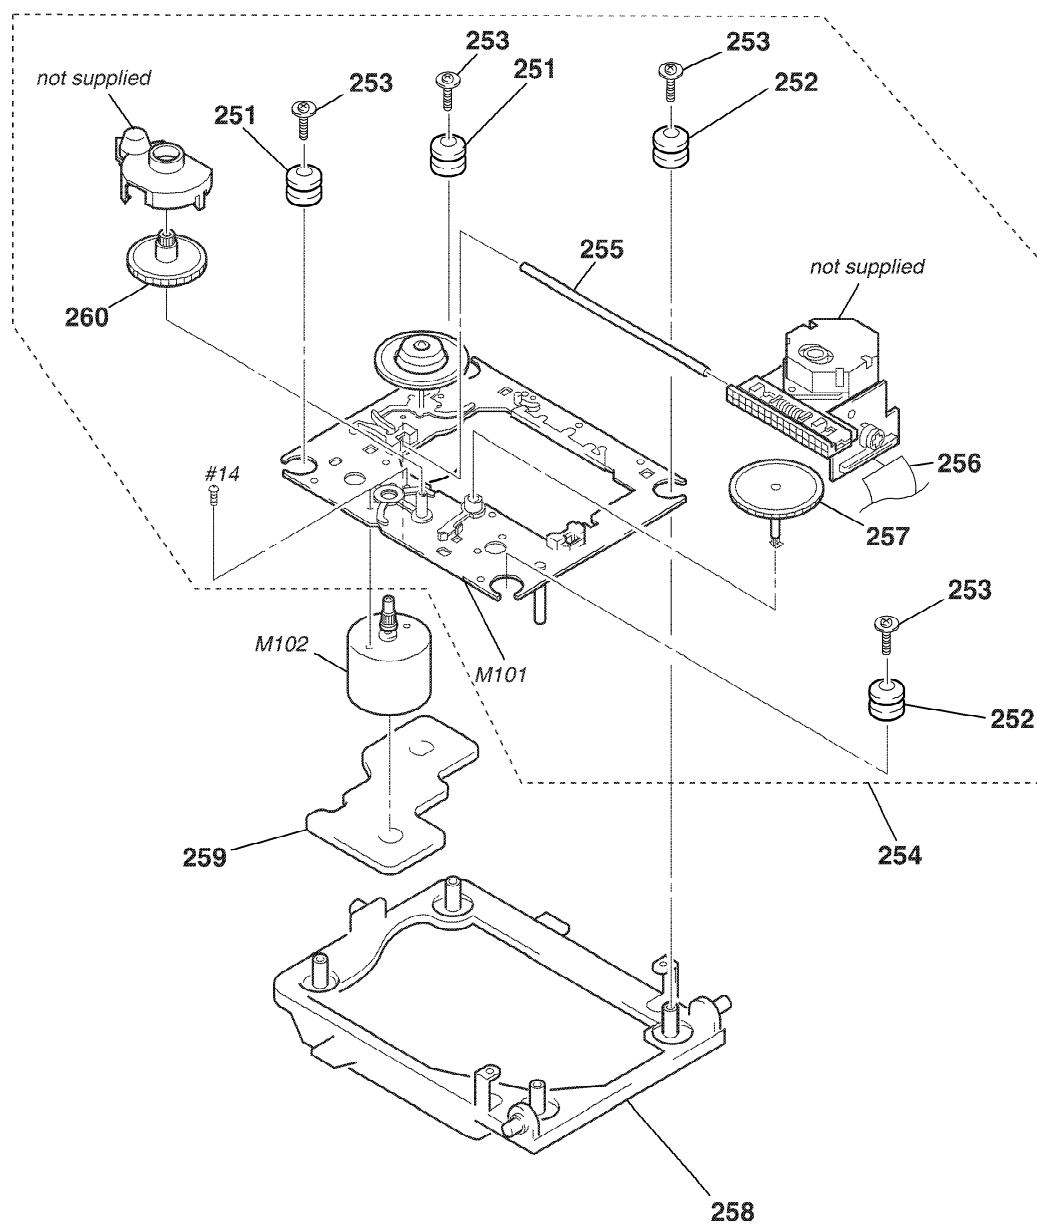

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
251	4-223-456-01	DAMPER(GR)		257	2-626-907-01	GEAR (A)(S)	
252	4-223-457-01	DAMPER(RD)		258	4-992-164-01	BASE, KSM MECHANICAL	
253	3-319-501-51	SCREW(+ PTPWH) (2.6 × 16)		259	1-675-422-11	MOTOR(6P)(C)BOARD	
△ 254	8-820-054-03	OPTICAL PICK-UP KSM-213ECM/C2NP		260	2-627-003-02	GEAR (B)	
255	4-223-455-01	SHAFT(CAM)		M101	X-2625-877-1	MOTOR ASSY (SPINDLE)	
256	1-783-740-11	WIRE(FLAT TYPE) (16 CORE)		M102	X-2625-769-1	MOTOR ASSY (SLED)	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

SECTION 7
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F

- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- Abbreviation
SP : Singapore model
MX : Mexican model
AR : Argentina model
AUS: Australian model
EE : East European model

- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	1-674-880-11	AC SWITCH BOARD (DR3.E,SP,AR) *****		C13	1-162-305-11	CERAMIC 0.0068uF 20%	16V
		< SWITCH >		C14	1-164-206-41	CERAMIC 0.047uF 99%	50V
S001	1-771-477-11	SELECTOR, VOLTAGE (VOLTAGE SELECTOR) *****		C15	1-161-494-00	CERAMIC 0.022uF	25V
	1-674-635-11	AMS BOARD *****		C16	1-164-159-11	CERAMIC 0.1uF	50V
		< LED >		C17	1-104-665-11	ELECT 100uF 20%	10V
LED616	8-719-304-83	LED SEL2410G (CD, $\blacktriangleright\blacksquare$)		C18	1-104-665-11	ELECT 100uF 20%	10V
		< RESISTOR >		C19	1-164-159-11	CERAMIC 0.1uF	50V
R663	1-247-835-11	CARBON 1.5K 5% 1/4W		C20	1-162-302-11	CERAMIC 0.0022uF 20%	16V
R664	1-247-839-11	CARBON 2.2K 5% 1/4W		C21	1-164-159-11	CERAMIC 0.1uF	50V
R665	1-247-843-11	CARBON 3.3K 5% 1/4W		C22	1-164-159-11	CERAMIC 0.1uF	50V
R666	1-247-847-11	CARBON 4.7K 5% 1/4W		C23	1-164-159-11	CERAMIC 0.1uF	50V
R667	1-249-428-11	CARBON 8.2K 5% 1/4W F		C24	1-126-963-11	ELECT 4.7uF 20%	50V
R668	1-249-431-11	CARBON 15K 5% 1/4W		C25	1-130-489-11	MYLAR 0.033uF 5%	50V
		< SWITCH >		C26	1-130-486-00	MYLAR 0.018uF 10%	50V
S645	1-762-875-11	SWITCH, KEYBOARD (CD, $\blacktriangleright\blacksquare$)		C27	1-162-199-31	CERAMIC 10PF 5%	50V
S646	1-762-875-11	SWITCH, KEYBOARD (CD, $\blacksquare$)		C28	1-130-493-00	MYLAR 0.068uF 5%	50V
S647	1-762-875-11	SWITCH, KEYBOARD (DISC SKIP)		C29	1-126-962-11	ELECT 3.3uF 20%	50V
S648	1-762-875-11	SWITCH, KEYBOARD (CD, $\blacktriangleright\blacktriangleright$)		C30	1-162-215-31	CERAMIC 47PF 5%	50V
S649	1-762-875-11	SWITCH, KEYBOARD (CD, $\blacktriangleleft\blacktriangleleft$)		C31	1-164-159-11	CERAMIC 0.1uF	50V
S650	1-762-875-11	SWITCH, KEYBOARD (PLAY MODE)		C32	1-164-159-11	CERAMIC 0.1uF	50V
S651	1-762-875-11	SWITCH, KEYBOARD (REPEAT)		C33	1-104-665-11	ELECT 100uF 20%	10V
		< VARIABLE RESISTOR >		C41	1-126-964-11	ELECT 10uF 20%	50V
VR602	1-475-841-11	ENCODER (AMS) *****		C42	1-126-964-11	ELECT 10uF 20%	50V
A-4426-810-A	CD DECORD BOARD, COMPLETE *****			C51	1-126-927-11	ELECT 2200uF 20%	10V
		< CAPACITOR >		C52	1-164-159-11	CERAMIC 0.1uF	50V
C01	1-104-665-11	ELECT 100uF 20% 10V		C53	1-162-305-11	CERAMIC 0.0068uF 20%	16V
C02	1-130-489-11	MYLAR 0.033uF 5% 50V		C54	1-130-483-00	MYLAR 0.01uF 5%	50V
C03	1-162-306-11	CERAMIC 0.01uF 20% 16V		C56	1-137-380-11	FILM 0.47uF 5%	50V
C04	1-130-489-11	MYLAR 0.033uF 5% 50V		C57	1-162-306-11	CERAMIC 0.01uF 20%	16V
C05	1-162-306-11	CERAMIC 0.01uF 20% 16V		C59	1-162-290-31	CERAMIC 470PF 10%	50V
C06	1-128-551-11	ELECT 22uF 20% 25V		C60	1-162-286-31	CERAMIC 220PF 10%	50V
C07	1-162-203-31	CERAMIC 15PF 5% 50V		C61	1-137-378-11	FILM 0.22uF 5%	50V
C08	1-164-159-11	CERAMIC 0.1uF	50V	C62	1-162-306-11	CERAMIC 0.01uF 20%	16V
C11	1-162-600-11	CERAMIC 0.0047uF 20% 16V		C63	1-164-159-11	CERAMIC 0.1uF	50V
C12	1-162-306-11	CERAMIC 0.01uF 20% 16V		C64	1-104-665-11	ELECT 100uF 20%	10V
				C65	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C66	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C67	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C68	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C69	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C70	1-164-159-11	CERAMIC 0.1uF	50V
				C71	1-164-159-11	CERAMIC 0.1uF	50V
				C72	1-104-665-11	ELECT 100uF 20%	10V
				C73	1-162-209-31	CERAMIC 27PF 5%	50V
				C74	1-162-209-31	CERAMIC 27PF 5%	50V
				C75	1-161-494-00	CERAMIC 0.022uF 25V	
				C81	1-162-284-31	CERAMIC 150PF 10%	50V
				C82	1-162-284-31	CERAMIC 150PF 10%	50V
				C83	1-162-292-31	CERAMIC 680PF 10%	50V
				C84	1-162-292-31	CERAMIC 680PF 10%	50V

CD DECORD

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C85	1-126-963-11	ELECT 4.7uF 20%	50V	R17	1-249-439-11	CARBON 68K 5%	1/4W
C86	1-126-963-11	ELECT 4.7uF 20%	50V	R18	1-247-879-11	CARBON 100K 5%	1/4W
C87	1-162-294-31	CERAMIC 0.001uF 10%	50V	R19	1-247-883-00	CARBON 150K 5%	1/4W
C88	1-162-294-31	CERAMIC 0.001uF 10%	50V	R20	1-247-891-00	CARBON 330K 5%	1/4W
C89	1-161-494-00	CERAMIC 0.022uF	25V	R23	1-247-855-11	CARBON 10K 5%	1/4W
C90	1-161-494-00	CERAMIC 0.022uF	25V	R24	1-249-428-11	CARBON 8.2K 5%	1/4W F
C91	1-126-934-11	ELECT 220uF 20%	10V	R25	1-247-899-11	CARBON 680K 5%	1/4W
C92	1-126-934-11	ELECT 220uF 20%	10V	R26	1-247-879-11	CARBON 100K 5%	1/4W
C93	1-164-159-11	CERAMIC 0.1uF	50V	R27	1-247-896-11	CARBON 510K 5%	1/4W
C94	1-126-934-11	ELECT 220uF 20%	10V	R29	1-249-439-11	CARBON 68K 5%	1/4W
C95	1-126-934-11	ELECT 220uF 20%	10V	R30	1-247-871-11	CARBON 47K 5%	1/4W
C96	1-162-294-31	CERAMIC 0.001uF 10%	50V	R32	1-247-883-00	CARBON 150K 5%	1/4W
C97	1-162-294-31	CERAMIC 0.001uF 10%	50V	R33	1-249-430-11	CARBON 12K 5%	1/4W
C98	1-162-294-31	CERAMIC 0.001uF 10%	50V	R34	1-247-876-11	CARBON 75K 5%	1/4W
C20A	1-130-493-00	MYLAR 0.068uF 5%	50V	R35	1-247-879-11	CARBON 100K 5%	1/4W
C80L	1-164-159-11	CERAMIC 0.1uF	50V	R36	1-247-885-00	CARBON 180K 5%	1/4W
C80R	1-164-159-11	CERAMIC 0.1uF	50V	R41	1-249-427-11	CARBON 6.8K 5%	1/4W F
< CONNECTOR >				R42	1-247-847-11	CARBON 4.7K 5%	1/4W
CN01	1-580-475-11	SOCKET, CONNECTOR 16P		R43	1-249-413-11	CARBON 470 5%	1/4W F
* CN02	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		R44	1-247-871-11	CARBON 47K 5%	1/4W
< DIODE >				R45	1-247-863-11	CARBON 22K 5%	1/4W
D05	8-719-010-41	DIODE UZ-5.6BSA		R46	1-247-855-11	CARBON 10K 5%	1/4W
D06	8-719-062-09	DIODE SEL2815A-CD		R48	1-247-855-11	CARBON 10K 5%	1/4W
< IC >				R49	1-247-855-11	CARBON 10K 5%	1/4W
IC01	8-752-082-14	IC CXA1992BR		R50	1-247-863-11	CARBON 22K 5%	1/4W
IC02	8-752-384-13	IC CXD2589Q		R52	1-247-871-11	CARBON 47K 5%	1/4W
IC03	8-759-429-31	IC BA5941FP		R53	1-247-867-11	CARBON 33K 5%	1/4W
IC04	8-759-234-75	IC TC74HC4094AP		R54	1-247-863-11	CARBON 22K 5%	1/4W
IC05	8-759-365-94	IC TA8409S		R55	1-249-427-11	CARBON 6.8K 5%	1/4W F
< COIL >				R56	1-247-867-11	CARBON 33K 5%	1/4W
L02	1-410-509-11	INDUCTOR 10uH		R58	1-247-871-11	CARBON 47K 5%	1/4W
L03	1-410-330-11	INDUCTOR 22uH		R59	1-247-843-11	CARBON 3.3K 5%	1/4W
L05	1-408-104-00	INDUCTOR 1mH		R60	1-249-417-11	CARBON 1K 5%	1/4W F
< TRANSISTOR >				R61	1-247-855-11	CARBON 10K 5%	1/4W
Q01	8-729-195-23	TRANSISTOR 2SA952-L		R62	1-247-903-00	CARBON 1M 5%	1/4W
Q03	8-729-195-23	TRANSISTOR 2SA952-L		R63	1-247-887-00	CARBON 220K 5%	1/4W
Q04	8-729-142-46	TRANSISTOR 2SC2001-L1		R64	1-247-855-11	CARBON 10K 5%	1/4W
Q07	8-729-194-57	TRANSISTOR 2SC945TP-P		R65	1-247-871-11	CARBON 47K 5%	1/4W
Q09	8-729-194-57	TRANSISTOR 2SC945TP-P		R66	1-249-417-11	CARBON 1K 5%	1/4W F
Q10	8-729-194-57	TRANSISTOR 2SC945TP-P		R67	1-249-417-11	CARBON 1K 5%	1/4W F
Q11	8-729-119-76	TRANSISTOR 2SA733TP-P		R68	1-249-417-11	CARBON 1K 5%	1/4W F
Q12	8-729-119-76	TRANSISTOR 2SA733TP-P		R69	1-249-417-11	CARBON 1K 5%	1/4W F
Q13	8-729-194-57	TRANSISTOR 2SC945TP-P		R70	1-249-417-11	CARBON 1K 5%	1/4W F
Q14	8-729-194-57	TRANSISTOR 2SC945TP-P		R71	1-247-807-11	CARBON 100 5%	1/4W
< RESISTOR >				R73	1-249-442-11	CARBON 510 5%	1/4W
R01	1-249-393-11	CARBON 10 5%	1/4W F	R74	1-247-903-00	CARBON 1M 5%	1/4W
R05	1-247-855-11	CARBON 10K 5%	1/4W	R75	1-247-871-11	CARBON 47K 5%	1/4W
R06	1-249-430-11	CARBON 12K 5%	1/4W	R81	1-249-430-11	CARBON 12K 5%	1/4W
R07	1-247-903-00	CARBON 1M 5%	1/4W	R82	1-249-430-11	CARBON 12K 5%	1/4W
R10	1-247-887-00	CARBON 220K 5%	1/4W	R83	1-249-430-11	CARBON 12K 5%	1/4W
R11	1-247-883-00	CARBON 150K 5%	1/4W	R84	1-249-430-11	CARBON 12K 5%	1/4W
R13	1-247-879-11	CARBON 100K 5%	1/4W	R85	1-249-430-11	CARBON 12K 5%	1/4W
R14	1-249-439-11	CARBON 68K 5%	1/4W	R86	1-249-430-11	CARBON 12K 5%	1/4W
R15	1-249-439-11	CARBON 68K 5%	1/4W	R87	1-247-839-11	CARBON 2.2K 5%	1/4W
R16	1-249-439-11	CARBON 68K 5%	1/4W	R88	1-247-839-11	CARBON 2.2K 5%	1/4W
				R89	1-247-847-11	CARBON 4.7K 5%	1/4W
				R90	1-247-847-11	CARBON 4.7K 5%	1/4W
				R91	1-249-412-11	CARBON 390 5%	1/4W F
				R92	1-247-855-11	CARBON 10K 5%	1/4W
				R93	1-249-411-11	CARBON 330 5%	1/4W

CD DECORD

CD KEY

CD SENSOR

CD SW

CONNECTOR

DISC NO

FRONT

Ref. No.	Part No.	Description	Remarks
R94	1-249-417-11	CARBON 1K 5%	1/4W F
R95	1-249-417-11	CARBON 1K 5%	1/4W F
R96	1-249-417-11	CARBON 1K 5%	1/4W F
R97	1-249-417-11	CARBON 1K 5%	1/4W F
R98	1-249-417-11	CARBON 1K 5%	1/4W F
R77L	1-247-855-11	CARBON 10K 5%	1/4W
R77R	1-247-855-11	CARBON 10K 5%	1/4W
R78L	1-247-855-11	CARBON 10K 5%	1/4W
R78R	1-247-855-11	CARBON 10K 5%	1/4W
R79L	1-247-855-11	CARBON 10K 5%	1/4W
R79R	1-247-855-11	CARBON 10K 5%	1/4W
R80L	1-247-855-11	CARBON 10K 5%	1/4W
R80R	1-247-855-11	CARBON 10K 5%	1/4W
< VIBRATOR >			
XTL01	1-567-908-11	VIBRATOR, CRYSTAL 16.9344MHz	

	1-674-634-11	CD KEY BOARD	

< RESISTOR >			
R651	1-249-431-11	CARBON 15K 5%	1/4W
R652	1-247-835-11	CARBON 1.5K 5%	1/4W
R658	1-247-839-11	CARBON 2.2K 5%	1/4W
R659	1-247-843-11	CARBON 3.3K 5%	1/4W
R660	1-247-847-11	CARBON 4.7K 5%	1/4W
R661	1-249-428-11	CARBON 8.2K 5%	1/4W F
R662	1-249-418-11	CARBON 1.2K 5%	1/4W F
< SWITCH >			
S639	1-762-875-11	SWITCH, KEYBOARD (DISC 1)	
S640	1-762-875-11	SWITCH, KEYBOARD (DISC 2)	
S641	1-762-875-11	SWITCH, KEYBOARD (DISC 3)	
S642	1-762-875-11	SWITCH, KEYBOARD (DISC 4)	
S643	1-762-875-11	SWITCH, KEYBOARD (DISC 5)	
S644	1-762-875-11	SWITCH, KEYBOARD (EDIT)	

	1-675-421-11	CD SENSOR BOARD	

< RESISTOR >			
R47	1-249-416-11	CARBON 820 5%	1/4W F
< SENSOR >			
SENS01	8-749-924-18	PHOTO INTERRUPTER RPI-1391	

	1-674-632-11	CD SW BOARD	

< SWITCH >			
S653	1-771-169-11	SWITCH (DOOR)	

	1-675-424-11	CONNECTOR BOARD	

< CONNECTOR >			
* CN11	1-770-334-11	PIN, CONNECTOR (PC BOARD) 17P	

Ref. No.	Part No.	Description	Remarks
	1-675-423-11	DISC NO BOARD	

< RESISTOR >			
R04	1-247-862-11	CARBON 20K 5%	1/4W

A-4426-395-A		FRONT BOARD, COMPLETE (XB200)	

A-4426-396-A		FRONT BOARD, COMPLETE (DR3:E)	

A-4426-397-A		FRONT BOARD, COMPLETE (DR3:AUS)	

A-4426-398-A		FRONT BOARD, COMPLETE (DR3:AR)	

A-4426-399-A		FRONT BOARD, COMPLETE (DR3:SP)	

A-4426-400-A		FRONT BOARD, COMPLETE (DR3:MX/DR330)	

< CAPACITOR >			
C601	1-126-960-11	ELECT 1uF 20%	50V
C602	1-126-933-11	ELECT 100uF 20%	16V
C603	1-126-916-11	ELECT 1000uF 20%	6.3V
(DR3:MX,AR,AUS/DR330/XB200)			
C604	1-161-494-00	CERAMIC 0.022uF	25V
C605	1-104-664-11	ELECT 47uF 20%	10V
C606	1-164-159-11	CERAMIC 0.1uF	50V
C608	1-126-958-11	ELECT 0.33uF 20%	50V
C609	1-164-159-11	CERAMIC 0.1uF	50V
C610	1-126-964-11	ELECT 10uF 20%	50V
C611	1-161-494-00	CERAMIC 0.022uF	25V
C612	1-162-286-31	CERAMIC 220PF 10%	50V
C613	1-102-962-00	CERAMIC 30PF 5%	50V
C614	1-102-962-00	CERAMIC 30PF 5%	50V
C615	1-162-286-31	CERAMIC 220PF 10%	50V
C616	1-164-159-11	CERAMIC 0.1uF	50V
C618	1-162-286-31	CERAMIC 220PF 10%	50V
C619	1-162-286-31	CERAMIC 220PF 10%	50V
C620	1-162-286-31	CERAMIC 220PF 10%	50V
C621	1-162-282-31	CERAMIC 100PF 10%	50V
C622	1-162-286-31	CERAMIC 220PF 10%	50V
C623	1-162-286-31	CERAMIC 220PF 10%	50V
C624	1-162-286-31	CERAMIC 220PF 10%	50V
C625	1-126-964-11	ELECT 10uF 20%	50V
C626	1-161-494-00	CERAMIC 0.022uF	25V
C627	1-162-286-31	CERAMIC 220PF 10%	50V
C628	1-162-286-31	CERAMIC 220PF 10%	50V
C629	1-162-294-31	CERAMIC 0.001uF 10%	50V
C630	1-162-294-31	CERAMIC 0.001uF 10%	50V
C631	1-126-964-11	ELECT 10uF 20%	50V
C632	1-161-494-00	CERAMIC 0.022uF	25V
C633	1-162-294-31	CERAMIC 0.001uF 10%	50V
C634	1-126-964-11	ELECT 10uF 20%	50V
C635	1-126-964-11	ELECT 10uF 20%	50V
C636	1-161-494-00	CERAMIC 0.022uF	25V
C637	1-162-294-31	CERAMIC 0.001uF 10%	50V
C638	1-162-294-31	CERAMIC 0.001uF 10%	50V
C639	1-162-294-31	CERAMIC 0.001uF 10%	50V
C640	1-104-664-11	ELECT 47uF 20%	10V
C643	1-126-959-11	ELECT 0.47uF 20%	50V
C644	1-164-206-41	CERAMIC 0.047uF 99%	50V

FRONT

Ref. No.	Part No.	Description	Remarks
C645	1-126-957-11	ELECT 0.22uF 20%	50V
C646	1-126-957-11	ELECT 0.22uF 20%	50V
C647	1-162-306-11	CERAMIC 0.01uF 20%	16V
C648	1-126-957-11	ELECT 0.22uF 20%	50V
C649	1-162-302-11	CERAMIC 0.0022uF 20%	16V
C650	1-137-352-11	FILM 0.033uF 5%	100V
C651	1-126-957-11	ELECT 0.22uF 20%	50V
C653	1-162-293-31	CERAMIC 820PF 10%	50V
C654	1-126-957-11	ELECT 0.22uF 20%	50V
C655	1-126-957-11	ELECT 0.22uF 20%	50V
C658	1-162-286-31	CERAMIC 220PF 10%	50V
C659	1-162-286-31	CERAMIC 220PF 10%	50V
C660	1-162-286-31	CERAMIC 220PF 10%	50V
C661	1-162-286-31	CERAMIC 220PF 10%	50V
C662	1-162-286-31	CERAMIC 220PF 10%	50V
C663	1-126-934-11	ELECT 220uF 20%	16V
C664	1-126-934-11	ELECT 220uF 20%	16V
C665	1-162-286-31	CERAMIC 220PF 10%	50V
C667	1-162-286-31	CERAMIC 220PF 10%	50V
C668	1-126-933-11	ELECT 100uF 20%	16V
C669	1-164-206-41	CERAMIC 0.047uF 99%	50V
C670	1-164-206-41	CERAMIC 0.047uF 99%	50V
C671	1-126-960-11	ELECT 1uF 20%	50V
C672	1-162-286-31	CERAMIC 220PF 10%	50V
C673	1-126-963-11	ELECT 4.7uF 20%	50V
< CONNECTOR >			
* CN603	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P	
* CN606	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	
CN607	1-568-835-21	SOCKET, CONNECTOR 16P	
< DIODE >			
D601	8-719-031-85	DIODE 1N4002L	
D602	8-719-031-85	DIODE 1N4002L	
D603	8-719-991-33	DIODE 1SS133T-77	
D604	8-719-991-33	DIODE 1SS133T-77	
D605	8-719-947-12	DIODE UZ-4.7BSA	
D607	8-719-991-33	DIODE 1SS133T-77 (DR3:E,AUS/XB200)	
D606	8-719-991-33	DIODE 1SS133T-77 (DR3:MX/DR330)	
D608	8-719-991-33	DIODE 1SS133T-77 (DR3:MX/DR330)	
D609	8-719-991-33	DIODE 1SS133T-77 (DR3:MX,AUS/DR330/XB200)	
D611	8-719-991-33	DIODE 1SS133T-77 (DR3:AUS/XB200)	
D612	8-719-991-33	DIODE 1SS133T-77 (DR3:SP)	
D613	8-719-991-33	DIODE 1SS133T-77	
D614	8-719-991-33	DIODE 1SS133T-77	
D615	8-719-991-33	DIODE 1SS133T-77	
D616	8-719-991-33	DIODE 1SS133T-77	
D617	8-719-991-33	DIODE 1SS133T-77	
D618	8-719-991-33	DIODE 1SS133T-77	
D619	8-719-991-33	DIODE 1SS133T-77	
D620	8-719-991-33	DIODE 1SS133T-77	
D621	8-719-991-33	DIODE 1SS133T-77	
D622	8-719-991-33	DIODE 1SS133T-77	
D624	8-719-991-33	DIODE 1SS133T-77	
D723	8-719-991-33	DIODE 1SS133T-77	
D730	8-719-991-33	DIODE 1SS133T-77	
D731	8-719-991-33	DIODE 1SS133T-77	
< FLUORESCENT INDICATOR >			
FLD601	1-517-840-31	INDICATOR TUBE, FLUORESCENT	

Ref. No.	Part No.	Description	Remarks
< IC >			
IC601	8-759-595-06	IC LC866540A-5K40	
IC602	8-759-275-23	IC BU2092	
IC603	8-759-473-61	IC BU2114	
IC604	8-759-000-49	IC TC4066BP	
IC606	8-759-916-52	IC TC74HC165AP	
IC607	8-759-234-75	IC TC74HC4094AP	
< COIL >			
L601	1-414-151-11	INDUCTOR 470uH	
< LED >			
LED601	8-719-062-09	LED SEL2815A-CD (ENTER/NEXT9	
LED602	8-719-303-02	LED SEL2510C (TUNER/BAND)	
LED603	8-719-028-38	LED SEL2215R-TP1 (GROOVE)	
LED605	8-719-052-46	LED SEL1450EKM-TP5 (SALSA)	
LED606	8-719-052-46	LED SEL1450EKM-TP5 (JAZZ)	
LED607	8-719-052-46	LED SEL1450EKM-TP5 (POPS)	
LED608	8-719-052-46	LED SEL1450EKM-TP5 (ROCK)	
LED610	8-719-028-38	LED SEL2215R-TP1 (● REC)	
LED611	8-719-062-09	LED SEL2815A-CD (■ PAUSE)	
LED612	8-719-303-02	LED SEL2510C (TAPE B, ◀)	
LED613	8-719-303-02	LED SEL2510C (TAPE B, ▶)	
LED614	8-719-303-02	LED SEL2510C (TAPE A, ◀)	
LED615	8-719-303-02	LED SEL2510C (TAPE A, ▶)	
< TRANSISTOR >			
Q601	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q602	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q603	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q604	8-729-119-76	TRANSISTOR 2SA733-P	
Q605	8-729-194-57	TRANSISTOR 2SC945TP-P (DR3:SP)	
Q606	8-729-026-29	TRANSISTOR 2SJ346 (DR3:SP)	
Q607	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q608	8-729-026-29	TRANSISTOR 2SJ346	
Q609	8-729-026-29	TRANSISTOR 2SJ346	
Q610	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q611	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q612	8-729-194-57	TRANSISTOR 2SC945TP-P	
Q613	8-729-993-43	TRANSISTOR 2SA934R	
Q614	8-729-993-43	TRANSISTOR 2SA934R	
Q615	8-729-993-43	TRANSISTOR 2SA934R	
< RESISTOR >			
R601	1-247-871-11	CARBON 47K 5%	1/4W
R602	1-249-417-11	CARBON 1K 5%	1/4W F
R603	1-249-417-11	CARBON 1K 5%	1/4W F
R604	1-247-871-11	CARBON 47K 5%	1/4W
R605	1-247-871-11	CARBON 47K 5%	1/4W
R606	1-249-417-11	CARBON 1K 5%	1/4W F
R607	1-249-431-11	CARBON 15K 5%	1/4W
R608	1-247-871-11	CARBON 47K 5%	1/4W
R609	1-247-855-11	CARBON 10K 5%	1/4W
R610	1-247-855-11	CARBON 10K 5%	1/4W
R611	1-247-855-11	CARBON 10K 5%	1/4W
R612	1-247-855-11	CARBON 10K 5%	1/4W
R613	1-247-855-11	CARBON 10K 5%	1/4W
R614	1-247-855-11	CARBON 10K 5%	1/4W
R615	1-247-855-11	CARBON 10K 5%	1/4W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R616	1-247-855-11	CARBON	10K	5%	1/4W	R703	1-249-410-11	CARBON	270	5%	1/4W F
R617	1-247-807-11	CARBON	100	5%	1/4W	R704	1-247-855-11	CARBON	10K	5%	1/4W
R618	1-247-807-11	CARBON	100	5%	1/4W	R705	1-249-417-11	CARBON	1K	5%	1/4W F
R619	1-247-827-11	CARBON	680	5%	1/4W	R706	1-247-855-11	CARBON	10K	5%	1/4W
R620	1-249-416-11	CARBON	820	5%	1/4W F	R707	1-247-855-11	CARBON	10K	5%	1/4W
R621	1-249-418-11	CARBON	1.2K	5%	1/4W F	R709	1-247-871-11	CARBON	47K	5%	1/4W
R622	1-247-835-11	CARBON	1.5K	5%	1/4W	R710	1-247-895-00	CARBON	470K	5%	1/4W
R623	1-247-839-11	CARBON	2.2K	5%	1/4W	R711	1-247-835-11	CARBON	1.5K	5%	1/4W
R624	1-247-843-11	CARBON	3.3K	5%	1/4W	R713	1-247-871-11	CARBON	47K	5%	1/4W
R625	1-247-847-11	CARBON	4.7K	5%	1/4W	R714	1-247-895-00	CARBON	470K	5%	1/4W
R626	1-249-428-11	CARBON	8.2K	5%	1/4W F	R715	1-247-835-11	CARBON	1.5K	5%	1/4W
R627	1-249-430-11	CARBON	12K	5%	1/4W	R717	1-247-871-11	CARBON	47K	5%	1/4W
R628	1-249-434-11	CARBON	27K	5%	1/4W	R718	1-247-895-00	CARBON	470K	5%	1/4W
R629	1-247-827-11	CARBON	680	5%	1/4W	R719	1-247-835-11	CARBON	1.5K	5%	1/4W
R630	1-249-416-11	CARBON	820	5%	1/4W F	R721	1-247-871-11	CARBON	47K	5%	1/4W
R631	1-249-418-11	CARBON	1.2K	5%	1/4W F	R722	1-247-895-00	CARBON	470K	5%	1/4W
R632	1-247-835-11	CARBON	1.5K	5%	1/4W	R723	1-247-871-11	CARBON	47K	5%	1/4W
R633	1-247-839-11	CARBON	2.2K	5%	1/4W	R724	1-247-895-00	CARBON	470K	5%	1/4W
R634	1-247-843-11	CARBON	3.3K	5%	1/4W	R725	1-247-847-11	CARBON	4.7K	5%	1/4W
R635	1-247-847-11	CARBON	4.7K	5%	1/4W	R726	1-247-847-11	CARBON	4.7K	5%	1/4W
R636	1-249-428-11	CARBON	8.2K	5%	1/4W F	R727	1-247-847-11	CARBON	4.7K	5%	1/4W
R637	1-249-431-11	CARBON	15K	5%	1/4W	R728	1-247-863-11	CARBON	22K	5%	1/4W
R639	1-247-827-11	CARBON	680	5%	1/4W	R729	1-247-863-11	CARBON	22K	5%	1/4W
R640	1-249-416-11	CARBON	820	5%	1/4W F	R730	1-247-855-11	CARBON	10K	5%	1/4W
R641	1-249-418-11	CARBON	1.2K	5%	1/4W F	R731	1-247-847-11	CARBON	4.7K	5%	1/4W
R642	1-247-835-11	CARBON	1.5K	5%	1/4W	R732	1-247-847-11	CARBON	4.7K	5%	1/4W
R643	1-247-839-11	CARBON	2.2K	5%	1/4W	R733	1-247-847-11	CARBON	4.7K	5%	1/4W
R644	1-247-843-11	CARBON	3.3K	5%	1/4W	R734	1-247-847-11	CARBON	4.7K	5%	1/4W
R645	1-247-847-11	CARBON	4.7K	5%	1/4W	R735	1-249-417-11	CARBON	1K	5%	1/4W F
R646	1-249-428-11	CARBON	8.2K	5%	1/4W F	R736	1-249-417-11	CARBON	1K	5%	1/4W F
R647	1-249-431-11	CARBON	15K	5%	1/4W	R737	1-247-847-11	CARBON	4.7K	5%	1/4W
R648	1-247-827-11	CARBON	680	5%	1/4W	R738	1-247-839-11	CARBON	2.2K	5%	1/4W
R649	1-249-416-11	CARBON	820	5%	1/4W F	R739	1-247-855-11	CARBON	10K	5%	1/4W
R653	1-247-827-11	CARBON	680	5%	1/4W	R741	1-247-839-11	CARBON	2.2K	5%	1/4W
R654	1-249-416-11	CARBON	820	5%	1/4W F	R745	1-249-417-11	CARBON	1K	5%	1/4W F
R670	1-247-855-11	CARBON	10K	5%	1/4W (DR3:SP)	R746	1-249-417-11	CARBON	1K	5%	1/4W F
R675	1-247-871-11	CARBON	47K	5%	1/4W	R747	1-247-839-11	CARBON	2.2K	5%	1/4W
R676	1-247-855-11	CARBON	10K	5%	1/4W	R748	1-247-839-11	CARBON	2.2K	5%	1/4W
R678	1-247-855-11	CARBON	10K	5%	1/4W	R749	1-247-846-11	CARBON	4.3K	5%	1/4W
R679	1-247-855-11	CARBON	10K	5%	1/4W	R750	1-249-417-11	CARBON	1K	5%	1/4W F
R681	1-249-410-11	CARBON	270	5%	1/4W F	R751	1-249-410-11	CARBON	270	5%	1/4W F
R682	1-249-410-11	CARBON	270	5%	1/4W F	R752	1-249-410-11	CARBON	270	5%	1/4W F
R683	1-249-410-11	CARBON	270	5%	1/4W F	R756	1-247-839-11	CARBON	2.2K	5%	1/4W
R684	1-249-410-11	CARBON	270	5%	1/4W F	R757	1-247-839-11	CARBON	2.2K	5%	1/4W
R685	1-247-855-11	CARBON	10K	5%	1/4W	R758	1-247-835-11	CARBON	1.5K	5%	1/4W
R687	1-249-410-11	CARBON	270	5%	1/4W F	R759	1-249-418-11	CARBON	1.2K	5%	1/4W F
R688	1-249-410-11	CARBON	270	5%	1/4W F	R761	1-247-871-11	CARBON	47K	5%	1/4W
R689	1-249-410-11	CARBON	270	5%	1/4W F	R762	1-247-879-11	CARBON	100K	5%	1/4W
R690	1-249-410-11	CARBON	270	5%	1/4W F	R763	1-247-879-11	CARBON	100K	5%	1/4W
R691	1-249-410-11	CARBON	270	5%	1/4W F	R764	1-247-887-00	CARBON	220K	5%	1/4W
R692	1-249-410-11	CARBON	270	5%	1/4W F	R770	1-247-847-11	CARBON	4.7K	5%	1/4W
R693	1-249-407-11	CARBON	150	5%	1/4W F	R771	1-247-855-11	CARBON	10K	5%	1/4W
R694	1-249-407-11	CARBON	150	5%	1/4W F	R772	1-247-847-11	CARBON	4.7K	5%	1/4W
R695	1-249-410-11	CARBON	270	5%	1/4W F	R773	1-249-417-11	CARBON	1K	5%	1/4W F
R697	1-249-407-11	CARBON	150	5%	1/4W F	< SWITCH >					
R698	1-249-407-11	CARBON	150	5%	1/4W F	S601	1-762-875-11	SWITCH, KEYBOARD (TAPE A, ►)			
R699	1-249-407-11	CARBON	150	5%	1/4W F	S602	1-762-875-11	SWITCH, KEYBOARD (TAPE A, ◀)			
R700	1-249-407-11	CARBON	150	5%	1/4W F	S603	1-762-875-11	SWITCH, KEYBOARD (TAPE A, ■)			
R701	1-247-847-11	CARBON	4.7K	5%	1/4W	S604	1-762-875-11	SWITCH, KEYBOARD (TAPE A, ◀◀)			
R702	1-249-410-11	CARBON	270	5%	1/4W F	S605	1-762-875-11	SWITCH, KEYBOARD (TAPE A, ►►)			

FRONT

H/P

LED

MAIN

Ref. No.	Part No.	Description	Remarks
S606	1-762-875-11	SWITCH, KEYBOARD (TAPE B, ►)	
S607	1-762-875-11	SWITCH, KEYBOARD (TAPE B, ◀)	
S608	1-762-875-11	SWITCH, KEYBOARD (TAPE B, ■)	
S609	1-762-875-11	SWITCH, KEYBOARD (TAPE B, ►►)	
S610	1-762-875-11	SWITCH, KEYBOARD (TAPE B, ◀◀)	
S611	1-762-875-11	SWITCH, KEYBOARD (■ PAUSE)	
S612	1-762-875-11	SWITCH, KEYBOARD (TUNING +)	
S613	1-762-875-11	SWITCH, KEYBOARD (TUNING -)	
S614	1-762-875-11	SWITCH, KEYBOARD (ROCK)	
S615	1-762-875-11	SWITCH, KEYBOARD (POPS)	
S616	1-762-875-11	SWITCH, KEYBOARD (JAZZ)	
S617	1-762-875-11	SWITCH, KEYBOARD (SALSA)	
S618	1-762-875-11	SWITCH, KEYBOARD (FLAT)	
S619	1-762-875-11	SWITCH, KEYBOARD (STEREO/MONO)	
S620	1-762-875-11	SWITCH, KEYBOARD (DBFB)	
S621	1-762-875-11	SWITCH, KEYBOARD (SURROUND)	
S622	1-762-875-11	SWITCH, KEYBOARD (FUNCTION)	
S623	1-762-875-11	SWITCH, KEYBOARD (POWER)	
S624	1-762-875-11	SWITCH, KEYBOARD (CLOCK SET)	
S625	1-762-875-11	SWITCH, KEYBOARD (DAIL)	
S626	1-762-875-11	SWITCH, KEYBOARD (TIMER REC)	
S627	1-762-875-11	SWITCH, KEYBOARD (SLEEP)	
S628	1-762-875-11	SWITCH, KEYBOARD (DISPLAY/DEMO)	
S629	1-762-875-11	SWITCH, KEYBOARD (SPECTRUM ANALYZER)	
S630	1-762-875-11	SWITCH, KEYBOARD (TUNER MEMORY)	
S631	1-762-875-11	SWITCH, KEYBOARD (ENTER/NEXT)	
S632	1-762-875-11	SWITCH, KEYBOARD (TUNER/BAND)	
S633	1-762-875-11	SWITCH, KEYBOARD (TUNING MODE)	
S634	1-762-875-11	SWITCH, KEYBOARD (GROONE)	
S635	1-762-875-11	SWITCH, KEYBOARD (DIRECTION)	
S636	1-762-875-11	SWITCH, KEYBOARD (DOLBY NR)	
S637	1-762-875-11	SWITCH, KEYBOARD (● REC)	
S638	1-762-875-11	SWITCH, KEYBOARD (CD SYNCHRO)	
< ADJUSTABLE RESISTOR >			
SFR601	1-228-991-00	RES, ADJ, METAL 2.2K	
< VIBRATOR >			
X601	1-579-743-11	VIBRATOR, CRYSTAL 6MHz	

	1-674-641-11	H/P BOARD	

< JACK >			
JK701	1-569-612-11	JACK, MINIATURE (PHONES)	

	1-674-637-11	LED BOARD	

< LED >			
D07	8-719-301-44	LED SEL2410E-C-TP (CASEETTE BOX BACK LIGHT)	
D08	8-719-301-44	LED SEL2410E-C-TP (CASEETTE BOX BACK LIGHT)	
D09	8-719-301-44	LED SEL2410E-C-TP (CASEETTE BOX BACK LIGHT)	
D10	8-719-301-44	LED SEL2410E-C-TP (CASEETTE BOX BACK LIGHT)	

Ref. No.	Part No.	Description	Remarks
< RESISTOR >			
R448	1-249-409-11	CARBON 220 5% 1/4W F (DR3:E,MX,AR/DR330/XB200)	

A-4426-407-A		MAIN BOARD, COMPLETE (XB200)	

A-4426-408-A		MAIN BOARD, COMPLETE (DR3:E,SP,AR)	

A-4426-409-A		MAIN BOARD, COMPLETE (DR3:AUS)	

A-4426-410-A		MAIN BOARD, COMPLETE (DR3:MX/DR330)	

< CAPACITOR >			
C107	1-162-306-11	CERAMIC 0.01uF 20% 16V (XB200)	
C108	1-126-933-11	ELECT 100uF 20% 16V	
C113	1-164-159-11	CERAMIC 0.1uF 50V	
C114	1-164-159-11	CERAMIC 0.1uF 50V	
C115	1-164-206-41	CERAMIC 0.047uF 99% 50V	
C116	1-130-467-00	MYLAR 470PF 5% 50V	
C117	1-162-206-31	CERAMIC 20PF 5% 50V	
C118	1-126-933-11	ELECT 100uF 20% 16V	
C120	1-161-494-00	CERAMIC 0.022uF 25V	
C121	1-162-211-31	CERAMIC 33PF 5% 50V	
C122	1-126-960-11	ELECT 1uF 20% 50V	
C123	1-126-959-11	ELECT 0.47uF 20% 50V	
C124	1-162-206-31	CERAMIC 20PF 5% 50V	
C125	1-126-960-11	ELECT 1uF 20% 50V	
C126	1-164-206-41	CERAMIC 0.047uF 99% 50V	
C127	1-126-964-11	ELECT 10uF 20% 50V	
C128	1-161-494-00	CERAMIC 0.022uF 25V	
C129	1-126-964-11	ELECT 10uF 20% 50V	
C130	1-137-352-11	FILM 0.033uF 5% 100V	
C131	1-137-352-11	FILM 0.033uF 5% 100V	
C132	1-137-504-11	FILM 150PF 5% 50V	
C133	1-137-504-11	FILM 150PF 5% 50V	
C135	1-162-293-31	CERAMIC 820PF 10% 50V	
C137	1-126-963-11	ELECT 4.7uF 20% 50V	
C138	1-137-397-11	FILM 0.047uF 5% 100V	
C139	1-161-494-00	CERAMIC 0.022uF 25V	
C140	1-126-933-11	ELECT 100uF 20% 16V	
C141	1-161-494-00	CERAMIC 0.022uF 25V	
C142	1-126-933-11	ELECT 100uF 20% 16V	
C143	1-137-401-11	FILM 0.22uF 5% 100V	
C144	1-137-393-11	FILM 0.01uF 5% 100V	
C146	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C148	1-161-494-00	CERAMIC 0.022uF 25V	
C149	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C150	1-164-159-11	CERAMIC 0.1uF 50V	
C151	1-128-551-11	ELECT 22uF 20% 25V	
C152	1-162-282-31	CERAMIC 100PF 10% 50V	
C154	1-164-159-11	CERAMIC 0.1uF 50V	
C155	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C156	1-102-516-11	CERAMIC 27PF 5% 50V	
C157	1-102-516-11	CERAMIC 27PF 5% 50V	
C158	1-104-664-11	ELECT 47uF 20% 16V	
C159	1-162-306-11	CERAMIC 0.01uF 20% 16V	
C160	1-126-963-11	ELECT 4.7uF 20% 50V	
C161	1-126-963-11	ELECT 4.7uF 20% 50V	

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C162	1-161-494-00	CERAMIC	0.022uF		25V	C236	1-126-961-11	ELECT	2.2uF	20%	50V
C163	1-161-494-00	CERAMIC	0.022uF		25V	C237	1-109-889-11	ELECT	1uF	20%	50V
C164	1-126-962-11	ELECT	3.3uF	20%	50V	C238	1-126-933-11	ELECT	100uF	20%	16V
C165	1-162-306-11	CERAMIC	0.01uF	20%	16V	C239	1-162-302-11	CERAMIC	0.0022uF	30%	16V
C166	1-162-306-11	CERAMIC	0.01uF	20%	16V	C240	1-162-286-31	CERAMIC	220PF	10%	50V
					(XB200)						
C167	1-162-199-31	CERAMIC	10PF	5%	50V	C241	1-137-352-11	FILM	0.033uF	5%	100V
					(XB200)	C242	1-137-352-11	FILM	0.033uF	5%	100V
C177	1-161-494-00	CERAMIC	0.022uF		25V	C243	1-107-357-11	FILM	0.47uF	5%	100V
C179	1-162-294-31	CERAMIC	0.001uF	10%	50V	C244	1-107-357-11	FILM	0.47uF	5%	100V
C185	1-162-306-11	CERAMIC	0.01uF	20%	16V	C245	1-161-494-00	CERAMIC	0.022uF		25V
C186	1-162-306-11	CERAMIC	0.01uF	20%	16V						
C187	1-161-494-00	CERAMIC	0.022uF		25V	C246	1-161-494-00	CERAMIC	0.022uF		25V
C188	1-126-963-11	ELECT	4.7uF	20%	50V	C248	1-126-961-11	ELECT	2.2uF	20%	50V
C189	1-162-600-11	CERAMIC	0.0047uF	30%	16V	C249	1-126-961-11	ELECT	2.2uF	20%	50V
C193	1-162-290-31	CERAMIC	470PF	10%	50V	C250	1-164-159-11	CERAMIC	0.1uF		50V
					(XB200)	C251	1-126-963-11	ELECT	4.7uF	20%	50V
C194	1-162-286-31	CERAMIC	220PF	10%	50V	C252	1-126-963-11	ELECT	4.7uF	20%	50V
						C255	1-164-159-11	CERAMIC	0.1uF		50V
C195	1-162-286-31	CERAMIC	220PF	10%	50V	C256	1-126-961-11	ELECT	2.2uF	20%	50V
C196	1-162-286-31	CERAMIC	220PF	10%	50V	C257	1-126-961-11	ELECT	2.2uF	20%	50V
C197	1-162-286-31	CERAMIC	220PF	10%	50V	C260	1-164-159-11	CERAMIC	0.1uF		50V
C198	1-126-959-11	ELECT	0.47uF	20%	50V						
C199	1-162-282-31	CERAMIC	100PF	10%	50V	C301	1-126-961-11	ELECT	2.2uF	20%	50V
					(XB200)	C302	1-126-961-11	ELECT	2.2uF	20%	50V
C201	1-162-302-11	CERAMIC	0.0022uF	30%	16V	C303	1-162-288-31	CERAMIC	330PF	10%	50V
C202	1-162-302-11	CERAMIC	0.0022uF	30%	16V	C304	1-162-288-31	CERAMIC	330PF	10%	50V
C203	1-162-282-31	CERAMIC	100PF	10%	50V	C305	1-162-286-31	CERAMIC	220PF	10%	50V
C204	1-162-282-31	CERAMIC	100PF	10%	50V						
C205	1-162-290-31	CERAMIC	470PF	10%	50V	C306	1-162-286-31	CERAMIC	220PF	10%	50V
						C307	1-162-288-31	CERAMIC	330PF	10%	50V
C206	1-162-290-31	CERAMIC	470PF	10%	50V	C308	1-162-288-31	CERAMIC	330PF	10%	50V
C207	1-162-294-31	CERAMIC	0.001uF	10%	50V	C309	1-126-961-11	ELECT	2.2uF	20%	50V
C208	1-162-294-31	CERAMIC	0.001uF	10%	50V	C310	1-126-961-11	ELECT	2.2uF	20%	50V
C209	1-162-302-11	CERAMIC	0.0022uF	30%	16V						
C210	1-162-302-11	CERAMIC	0.0022uF	30%	16V	C311	1-126-933-11	ELECT	100uF	20%	16V
						C312	1-126-933-11	ELECT	100uF	20%	16V
C211	1-102-128-00	CERAMIC	0.0082uF	10%	50V	C313	1-162-288-31	CERAMIC	330PF	10%	50V
C212	1-102-128-00	CERAMIC	0.0082uF	10%	50V	C314	1-162-288-31	CERAMIC	330PF	10%	50V
C213	1-126-959-11	ELECT	0.47uF	20%	50V	C315	1-137-399-11	FILM	0.1uF	5%	100V
C214	1-126-959-11	ELECT	0.47uF	20%	50V						
C215	1-126-933-11	ELECT	100uF	20%	16V	C316	1-137-399-11	FILM	0.1uF	5%	100V
						C317	1-137-399-11	FILM	0.1uF	5%	100V
C216	1-126-933-11	ELECT	100uF	20%	16V	C318	1-137-399-11	FILM	0.1uF	5%	100V
C217	1-162-294-31	CERAMIC	0.001uF	10%	50V	C319	1-162-282-31	CERAMIC	100PF	10%	50V
C218	1-162-294-31	CERAMIC	0.001uF	10%	50V	C320	1-162-282-31	CERAMIC	100PF	10%	50V
C219	1-126-959-11	ELECT	0.47uF	20%	50V						
C220	1-126-959-11	ELECT	0.47uF	20%	50V	C321	1-126-933-11	ELECT	100uF	20%	16V
						C322	1-126-933-11	ELECT	100uF	20%	16V
C221	1-126-961-11	ELECT	2.2uF	20%	50V	C323	1-126-960-11	ELECT	1uF	20%	50V
C222	1-126-961-11	ELECT	2.2uF	20%	50V	C324	1-126-960-11	ELECT	1uF	20%	50V
C223	1-104-664-11	ELECT	47uF	20%	16V	C325	1-126-963-11	ELECT	4.7uF	20%	50V
C224	1-126-964-11	ELECT	10uF	20%	50V						
C225	1-126-964-11	ELECT	10uF	20%	50V	C327	1-126-934-11	ELECT	220uF	20%	16V
						C328	1-126-961-11	ELECT	2.2uF	20%	50V
C226	1-104-664-11	ELECT	47uF	20%	16V	C329	1-126-961-11	ELECT	2.2uF	20%	50V
C227	1-126-961-11	ELECT	2.2uF	20%	50V	C330	1-126-933-11	ELECT	100uF	20%	16V
C228	1-126-961-11	ELECT	2.2uF	20%	50V	C333	1-126-933-11	ELECT	100uF	20%	16V
C229	1-162-199-31	CERAMIC	10PF	5%	50V						
C230	1-162-199-31	CERAMIC	10PF	5%	50V	C334	1-126-933-11	ELECT	100uF	20%	16V
						C335	1-161-494-00	CERAMIC	0.022uF		25V
C231	1-126-961-11	ELECT	2.2uF	20%	50V	C336	1-126-933-11	ELECT	100uF	20%	16V
C232	1-126-961-11	ELECT	2.2uF	20%	50V	C337	1-126-934-11	ELECT	220uF	20%	16V
C233	1-126-962-11	ELECT	3.3uF	20%	50V	C338	1-161-494-00	CERAMIC	0.022uF		25V
C234	1-126-962-11	ELECT	3.3uF	20%	50V						
C235	1-126-961-11	ELECT	2.2uF	20%	50V	C339	1-161-494-00	CERAMIC	0.022uF		25V
						C340	1-126-933-11	ELECT	100uF	20%	16V
						C341	1-126-933-11	ELECT	100uF	20%	16V
						C342	1-164-159-11	CERAMIC	0.1uF		50V
						C343	1-161-494-00	CERAMIC	0.022uF		25V

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C345	1-109-953-11	ELECT	2.2uF 20% 50V	C862	1-126-964-11	ELECT	10uF 20% 50V
C346	1-137-401-11	FILM	0.22uF 5% 100V	C863	1-126-964-11	ELECT	10uF 20% 50V
C347	1-162-294-31	CERAMIC	0.001uF 10% 50V	C864	1-126-964-11	ELECT	10uF 20% 50V
C801	1-162-292-31	CERAMIC	680PF 10% 50V	C865	1-162-290-31	CERAMIC	470PF 10% 50V
C802	1-162-292-31	CERAMIC	680PF 10% 50V	C866	1-162-290-31	CERAMIC	470PF 10% 50V
C803	1-162-292-31	CERAMIC	680PF 10% 50V	C867	1-128-551-11	ELECT	22uF 20% 25V
C804	1-162-292-31	CERAMIC	680PF 10% 50V	C868	1-126-964-11	ELECT	10uF 20% 50V
C805	1-164-159-11	CERAMIC	0.1uF 50V	C869	1-126-956-11	ELECT	0.1uF 20% 50V
C806	1-126-933-11	ELECT	100uF 20% 16V	C870	1-126-956-11	ELECT	0.1uF 20% 50V
C807	1-126-963-11	ELECT	4.7uF 20% 50V	C875	1-136-298-00	FILM	0.0033uF 5% 100V
C808	1-126-963-11	ELECT	4.7uF 20% 50V	C876	1-161-494-00	CERAMIC	0.022uF 25V
C809	1-126-960-11	ELECT	1uF 20% 50V	C877	1-126-961-11	ELECT	2.2uF 20% 50V
C811	1-126-964-11	ELECT	10uF 20% 50V	C880	1-137-391-11	FILM	0.0047uF 5% 100V
C812	1-126-964-11	ELECT	10uF 20% 50V	C881	1-136-298-00	FILM	0.0033uF 5% 100V
C813	1-162-288-31	CERAMIC	330PF 10% 50V	C882	1-137-350-11	FILM	0.015uF 5% 100V
C814	1-162-288-31	CERAMIC	330PF 10% 50V	C883	1-162-292-31	CERAMIC	680PF 10% 50V
C815	1-162-288-31	CERAMIC	330PF 10% 50V	C884	1-162-292-31	CERAMIC	680PF 10% 50V
C816	1-162-288-31	CERAMIC	330PF 10% 50V	C885	1-162-286-31	CERAMIC	220PF 10% 50V
C817	1-162-306-11	CERAMIC	0.01uF 20% 16V	C886	1-162-286-31	CERAMIC	220PF 10% 50V
C818	1-162-306-11	CERAMIC	0.01uF 20% 16V	C887	1-130-481-00	MYLAR	0.0068uF 5% 50V
C819	1-126-963-11	ELECT	4.7uF 20% 50V	C888	1-104-664-11	ELECT	47uF 20% 16V
C820	1-126-963-11	ELECT	4.7uF 20% 50V	C891	1-126-960-11	ELECT	1uF 20% 50V
C821	1-162-293-31	CERAMIC	820PF 10% 50V	C892	1-162-219-31	CERAMIC	68PF 5% 50V
C822	1-162-293-31	CERAMIC	820PF 10% 50V	C893	1-162-219-31	CERAMIC	68PF 5% 50V
C823	1-162-282-31	CERAMIC	100PF 10% 50V	C894	1-126-963-11	ELECT	4.7uF 20% 50V
C824	1-162-282-31	CERAMIC	100PF 10% 50V	C895	1-126-963-11	ELECT	4.7uF 20% 50V
C825	1-164-159-11	CERAMIC	0.1uF 50V	C896	1-104-664-11	ELECT	47uF 20% 16V
C826	1-126-933-11	ELECT	100uF 20% 16V	C901	1-164-159-11	CERAMIC	0.1uF 50V
C827	1-126-964-11	ELECT	10uF 20% 50V	C902	1-164-159-11	CERAMIC	0.1uF 50V
C828	1-104-664-11	ELECT	47uF 20% 16V	C903	1-126-960-11	ELECT	1uF 20% 50V
C829	1-126-934-11	ELECT	220uF 20% 16V	C904	1-126-960-11	ELECT	1uF 20% 50V
C830	1-126-933-11	ELECT	100uF 20% 16V	C905	1-126-959-11	ELECT	0.47uF 20% 50V
C831	1-126-960-11	ELECT	1uF 20% 50V	C906	1-126-933-11	ELECT	100uF 20% 16V
C832	1-126-960-11	ELECT	1uF 20% 50V	C907	1-126-956-11	ELECT	0.1uF 20% 50V
C833	1-162-282-31	CERAMIC	100PF 10% 50V	C908	1-126-956-11	ELECT	0.1uF 20% 50V
C834	1-162-282-31	CERAMIC	100PF 10% 50V	C921	1-126-964-11	ELECT	10uF 20% 50V
C835	1-162-287-31	CERAMIC	270PF 10% 50V	C922	1-126-964-11	ELECT	10uF 20% 50V
C836	1-162-287-31	CERAMIC	270PF 10% 50V	C925	1-126-964-11	ELECT	10uF 20% 50V
C837	1-162-287-31	CERAMIC	270PF 10% 50V	< FILTER >			
C838	1-162-287-31	CERAMIC	270PF 10% 50V	CF101	1-567-415-71	FILTER, CERAMIC (XB200)	
C839	1-126-960-11	ELECT	1uF 20% 50V	CF101	1-567-390-11	FILTER, CERAMIC 10.7M (DR3/DR330)	
C840	1-126-960-11	ELECT	1uF 20% 50V	CF102	1-567-415-11	FILTER, CERAMIC (DR3/DR330)	
C841	1-164-736-31	CERAMIC	0.0012uF 10% 50V	CF102	1-567-415-71	FILTER, CERAMIC (XB200)	
C842	1-164-736-31	CERAMIC	0.0012uF 10% 50V	CF103	1-527-996-11	FILTER, CERAMIC	
C845	1-162-285-31	CERAMIC	180PF 10% 50V	CF104	1-567-415-71	FILTER, CERAMIC	
C846	1-162-285-31	CERAMIC	180PF 10% 50V	< CONNECTOR >			
C847	1-126-960-11	ELECT	1uF 20% 50V	* CN301	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P	
C848	1-126-960-11	ELECT	1uF 20% 50V	< DIODE >			
C849	1-126-933-11	ELECT	100uF 20% 16V	D101	8-719-911-19	DIODE 1SS133	
C851	1-109-889-11	ELECT	1uF 20% 50V	D102	8-719-911-19	DIODE 1SS133	
C852	1-109-889-11	ELECT	1uF 20% 50V	D103	8-719-911-19	DIODE 1SS133	
C853	1-102-120-00	CERAMIC	0.0018uF 10% 50V	D104	8-719-911-19	DIODE 1SS133	
C854	1-102-120-00	CERAMIC	0.0018uF 10% 50V	D107	8-719-053-11	DIODE KV1560-TL34	
C855	1-126-964-11	ELECT	10uF 20% 50V	D109	8-719-911-19	DIODE 1SS133	
C856	1-126-964-11	ELECT	10uF 20% 50V	D110	8-719-010-41	DIODE UZ-5.6BSA	
C857	1-126-933-11	ELECT	100uF 20% 16V	D111	8-719-911-19	DIODE 1SS133	
C858	1-126-933-11	ELECT	100uF 20% 16V	D301	8-719-911-19	DIODE 1SS133	
C859	1-126-956-11	ELECT	0.1uF 20% 50V	D302	8-719-911-19	DIODE 1SS133	
C860	1-126-956-11	ELECT	0.1uF 20% 50V				
C861	1-126-964-11	ELECT	10uF 20% 50V				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D303	8-719-010-73	DIODE UZ-12BSA		Q201	8-729-194-57	TRANSISTOR 2SC945TP-P	
D304	8-719-010-45	DIODE UZ-6.2BSA		Q202	8-729-194-57	TRANSISTOR 2SC945TP-P	
D305	8-719-911-19	DIODE 1SS133		Q203	8-729-194-57	TRANSISTOR 2SC945TP-P	
D306	8-719-911-19	DIODE 1SS133		Q204	8-729-194-57	TRANSISTOR 2SC945TP-P	
D307	8-719-010-45	DIODE UZ-6.2BSA		Q205	8-729-026-29	TRANSISTOR 2SJ346	
D308	8-719-010-45	DIODE UZ-6.2BSA		Q206	8-729-194-57	TRANSISTOR 2SC945TP-P	
D802	8-719-911-19	DIODE 1SS133		Q207	8-729-194-57	TRANSISTOR 2SC945TP-P	
D803	8-719-911-19	DIODE 1SS133		Q208	8-729-194-57	TRANSISTOR 2SC945TP-P	
D804	8-719-911-19	DIODE 1SS133		Q209	8-729-194-57	TRANSISTOR 2SC945TP-P	
D805	8-719-911-19	DIODE 1SS133		Q210	8-729-026-29	TRANSISTOR 2SJ346	
D806	8-719-911-19	DIODE 1SS133		Q301	8-729-194-57	TRANSISTOR 2SC945TP-P	
D807	8-719-911-19	DIODE 1SS133		Q302	8-729-194-57	TRANSISTOR 2SC945TP-P	
D808	8-719-911-19	DIODE 1SS133		Q303	8-729-194-57	TRANSISTOR 2SC945TP-P	
D811	8-719-911-19	DIODE 1SS133		Q304	8-729-194-57	TRANSISTOR 2SC945TP-P	
D812	8-719-911-19	DIODE 1SS133		Q305	8-729-224-62	TRANSISTOR 2SK246-GR	
		< FRONTEND >		Q306	8-729-026-29	TRANSISTOR 2SJ346	
FE101	1-693-422-11	FRONT END		Q308	8-729-232-32	TRANSISTOR 2SA965-O/Y(TPE6)	
		< IC >		Q309	8-729-140-96	TRANSISTOR 2SC2060-R	
				Q310	8-729-140-96	TRANSISTOR 2SC2060-R	
IC102	8-759-590-14	IC LA1833L		Q801	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC103	8-759-590-13	IC LC72131D		Q802	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC201	8-759-595-07	IC M62443FP		Q803	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC202	8-759-634-51	IC NJM4558D		Q804	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC203	8-759-000-49	IC TC4066BP		Q805	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC301	8-759-634-51	IC NJM4558D		Q806	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC302	8-759-634-51	IC NJM4558D		Q807	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC303	8-759-634-51	IC NJM4558D		Q808	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC801	8-759-206-23	IC TA7784P		Q809	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC802	8-759-545-67	IC TA8135P		Q810	8-729-194-57	TRANSISTOR 2SC945TP-P	
IC803	8-752-056-08	IC CXA1551P		Q811	8-729-194-57	TRANSISTOR 2SC945TP-P	
		< JACK >		Q812	8-729-194-57	TRANSISTOR 2SC945TP-P	
JK101	1-694-092-21	TERMINAL BOARD (SPEAKER)(DR3/DR330)		Q813	8-729-194-57	TRANSISTOR 2SC945TP-P	
JK101	1-694-126-11	TERMINAL BOARD (SPEAKER)(XB200)		Q814	8-729-194-57	TRANSISTOR 2SC945TP-P	
JK201	1-779-688-11	JACK, PIN 6P (MD/VIDEO IN/OUT,PHONO IN)		Q815	8-729-194-57	TRANSISTOR 2SC945TP-P	
		< COIL >		Q816	8-729-142-46	TRANSISTOR 2SC2001-L1	
L104	1-411-901-11	COIL, ANTENNA		Q817	8-729-142-46	TRANSISTOR 2SC2001-L1	
L105	1-429-555-11	TRANSFORMER, MW OSC		Q822	8-729-194-57	TRANSISTOR 2SC945TP-P	
L106	1-412-507-11	INDUCTOR 47uH		Q823	8-729-119-76	TRANSISTOR 2SA733TP-P	
L108	1-412-503-11	INDUCTOR 22uH		Q825	8-729-194-57	TRANSISTOR 2SC945TP-P	
L109	1-410-521-11	INDUCTOR 100uH (XB200)		Q826	8-729-194-57	TRANSISTOR 2SC945TP-P	
L113	1-412-503-11	INDUCTOR 22uH		Q829	8-729-194-57	TRANSISTOR 2SC945TP-P	
L114	1-412-503-11	INDUCTOR 22uH		Q830	8-729-119-76	TRANSISTOR 2SA733TP-P	
L301	1-408-096-00	INDUCTOR 470uH		Q831	8-729-194-57	TRANSISTOR 2SC945TP-P	
L801	1-410-775-11	INDUCTOR 10mH		Q832	8-729-194-57	TRANSISTOR 2SC945TP-P	
L802	1-410-775-11	INDUCTOR 10mH		Q833	8-729-194-57	TRANSISTOR 2SC945TP-P	
L803	1-236-147-11	FILTER, LOW PASS				< RESISTOR >	
L804	1-236-147-11	FILTER, LOW PASS		R104	1-249-409-11	CARBON 220 5%	1/4W F
L805	1-239-597-11	FILTER, LOW PASS		R105	1-249-417-11	CARBON 1K 5%	1/4W F
L806	1-239-597-11	FILTER, LOW PASS		R106	1-247-807-11	CARBON 100 5%	1/4W
L808	1-408-096-00	INDUCTOR 470uH		R106	1-247-849-11	CARBON 5.6K 5%	1/4W
L809	1-433-412-11	TRANSFORMER, BIAS OSCILLATION		R107	1-249-427-11	CARBON 6.8K 5%	1/4W F
		< TRANSISTOR >		R112	1-247-698-11	CARBON 68 5%	1/4W F
Q101	8-729-015-41	TRANSISTOR 2SC1675-T1		R113	1-249-417-11	CARBON 1K 5%	1/4W F
Q108	8-729-041-83	TRANSISTOR 2SK544E		R114	1-247-871-11	CARBON 47K 5%	1/4W
Q114	8-729-026-29	TRANSISTOR 2SJ346		R115	1-249-417-11	CARBON 1K 5%	1/4W F
Q116	8-729-194-57	TRANSISTOR 2SC945TP-P		R116	1-249-397-11	CARBON 22 5%	1/4W F
Q117	8-729-194-57	TRANSISTOR 2SC945TP-P		R117	1-247-839-11	CARBON 2.2K 5%	1/4W
				R118	1-247-807-11	CARBON 100 5%	1/4W
				R119	1-249-410-11	CARBON 270 5%	1/4W F
				R120	1-247-843-11	CARBON 3.3K 5%	1/4W
				R121	1-247-855-11	CARBON 10K 5%	1/4W

MAIN

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R123	1-249-428-11	CARBON	8.2K	5%	1/4W F	R232	1-247-839-11	CARBON	2.2K	5%	1/4W
R124	1-247-843-11	CARBON	3.3K	5%	1/4W	R233	1-249-427-11	CARBON	6.8K	5%	1/4W F
R126	1-249-417-11	CARBON	1K	5%	1/4W F	R234	1-249-427-11	CARBON	6.8K	5%	1/4W F
R127	1-249-417-11	CARBON	1K	5%	1/4W F	R235	1-214-945-00	METAL	2.2M	1%	1/2W
R128	1-249-431-11	CARBON	15K	5%	1/4W	R236	1-214-945-00	METAL	2.2M	1%	1/2W
R129	1-249-431-11	CARBON	15K	5%	1/4W	R237	1-249-418-11	CARBON	1.2K	5%	1/4W F
R130	1-249-405-11	CARBON	100	5%	1/4W F	R238	1-249-418-11	CARBON	1.2K	5%	1/4W F
R131	1-249-417-11	CARBON	1K	5%	1/4W F	R239	1-249-413-11	CARBON	470	5%	1/4W F
R132	1-247-855-11	CARBON	10K	5%	1/4W	R240	1-247-871-11	CARBON	47K	5%	1/4W
R133	1-247-849-11	CARBON	5.6K	5%	1/4W	R241	1-249-417-11	CARBON	1K	5%	1/4W F
R134	1-247-855-11	CARBON	10K	5%	1/4W	R242	1-247-839-11	CARBON	2.2K	5%	1/4W
R135	1-249-417-11	CARBON	1K	5%	1/4W F	R243	1-247-847-11	CARBON	4.7K	5%	1/4W
R136	1-247-879-11	CARBON	100K	5%	1/4W	R244	1-247-847-11	CARBON	4.7K	5%	1/4W
R137	1-247-855-11	CARBON	10K	5%	1/4W	R245	1-249-427-11	CARBON	6.8K	5%	1/4W F
R138	1-247-807-11	CARBON	100	5%	1/4W	R246	1-249-427-11	CARBON	6.8K	5%	1/4W F
R139	1-247-855-11	CARBON	10K	5%	1/4W	R247	1-247-835-11	CARBON	1.5K	5%	1/4W
R140	1-247-855-11	CARBON	10K	5%	1/4W	R248	1-247-835-11	CARBON	1.5K	5%	1/4W
R141	1-249-417-11	CARBON	1K	5%	1/4W F	R249	1-247-835-11	CARBON	1.5K	5%	1/4W
R142	1-249-417-11	CARBON	1K	5%	1/4W F	R250	1-247-835-11	CARBON	1.5K	5%	1/4W
R143	1-249-417-11	CARBON	1K	5%	1/4W F	R251	1-247-871-11	CARBON	47K	5%	1/4W
R144	1-249-411-11	CARBON	330	5%	1/4W	R252	1-247-871-11	CARBON	47K	5%	1/4W
R147	1-247-835-11	CARBON	1.5K	5%	1/4W	R253	1-247-839-11	CARBON	2.2K	5%	1/4W
R151	1-247-843-11	CARBON	3.3K	5%	1/4W	R254	1-247-839-11	CARBON	2.2K	5%	1/4W
R155	1-247-843-11	CARBON	3.3K	5%	1/4W	R255	1-249-417-11	CARBON	1K	5%	1/4W F
R156	1-247-863-11	CARBON	22K	5%	1/4W	R256	1-249-417-11	CARBON	1K	5%	1/4W F
R157	1-247-863-11	CARBON	22K	5%	1/4W	R257	1-247-847-11	CARBON	4.7K	5%	1/4W
R167	1-249-411-11	CARBON	330	5%	1/4W (XB200)	R258	1-247-855-11	CARBON	10K	5%	1/4W
R172	1-247-847-11	CARBON	4.7K	5%	1/4W	R259	1-247-855-11	CARBON	10K	5%	1/4W
R173	1-249-432-11	CARBON	18K	5%	1/4W	R260	1-247-871-11	CARBON	47K	5%	1/4W
R174	1-249-409-11	CARBON	220	5%	1/4W F	R301	1-249-417-11	CARBON	1K	5%	1/4W F
R180	1-249-431-11	CARBON	15K	5%	1/4W	R302	1-249-417-11	CARBON	1K	5%	1/4W F
R201	1-249-417-11	CARBON	1K	5%	1/4W F	R303	1-247-879-11	CARBON	100K	5%	1/4W
R202	1-249-417-11	CARBON	1K	5%	1/4W F	R304	1-247-879-11	CARBON	100K	5%	1/4W
R203	1-249-417-11	CARBON	1K	5%	1/4W F	R305	1-247-855-11	CARBON	10K	5%	1/4W
R204	1-249-417-11	CARBON	1K	5%	1/4W F	R306	1-247-855-11	CARBON	10K	5%	1/4W
R205	1-247-855-11	CARBON	10K	5%	1/4W	R307	1-247-849-11	CARBON	5.6K	5%	1/4W
R206	1-247-855-11	CARBON	10K	5%	1/4W	R308	1-247-849-11	CARBON	5.6K	5%	1/4W
R207	1-247-879-11	CARBON	100K	5%	1/4W	R309	1-249-417-11	CARBON	1K	5%	1/4W F
R208	1-247-879-11	CARBON	100K	5%	1/4W	R310	1-249-417-11	CARBON	1K	5%	1/4W F
R209	1-247-825-11	CARBON	560	5%	1/4W	R311	1-249-417-11	CARBON	1K	5%	1/4W F
R210	1-247-825-11	CARBON	560	5%	1/4W	R312	1-249-417-11	CARBON	1K	5%	1/4W F
R211	1-247-867-11	CARBON	33K	5%	1/4W	R313	1-247-871-11	CARBON	47K	5%	1/4W
R212	1-247-867-11	CARBON	33K	5%	1/4W	R314	1-247-871-11	CARBON	47K	5%	1/4W
R213	1-247-893-11	CARBON	390K	5%	1/4W	R315	1-249-432-11	CARBON	18K	5%	1/4W
R214	1-247-893-11	CARBON	390K	5%	1/4W	R316	1-249-432-11	CARBON	18K	5%	1/4W
R215	1-247-839-11	CARBON	2.2K	5%	1/4W	R317	1-247-855-11	CARBON	10K	5%	1/4W
R216	1-247-839-11	CARBON	2.2K	5%	1/4W	R318	1-247-855-11	CARBON	10K	5%	1/4W
R217	1-247-835-11	CARBON	1.5K	5%	1/4W	R319	1-249-440-11	CARBON	82K	5%	1/4W
R218	1-247-835-11	CARBON	1.5K	5%	1/4W	R320	1-249-440-11	CARBON	82K	5%	1/4W
R219	1-249-413-11	CARBON	470	5%	1/4W F	R321	1-247-887-00	CARBON	220K	5%	1/4W
R220	1-249-413-11	CARBON	470	5%	1/4W F	R322	1-247-887-00	CARBON	220K	5%	1/4W
R221	1-247-839-11	CARBON	2.2K	5%	1/4W	R323	1-247-839-11	CARBON	2.2K	5%	1/4W
R222	1-247-839-11	CARBON	2.2K	5%	1/4W	R324	1-247-839-11	CARBON	2.2K	5%	1/4W
R223	1-247-835-11	CARBON	1.5K	5%	1/4W	R325	1-247-871-11	CARBON	47K	5%	1/4W
R224	1-247-835-11	CARBON	1.5K	5%	1/4W	R326	1-247-871-11	CARBON	47K	5%	1/4W
R225	1-247-855-11	CARBON	10K	5%	1/4W	R327	1-249-417-11	CARBON	1K	5%	1/4W F
R227	1-247-855-11	CARBON	10K	5%	1/4W	R328	1-249-417-11	CARBON	1K	5%	1/4W F
R228	1-249-417-11	CARBON	1K	5%	1/4W F	R329	1-247-871-11	CARBON	47K	5%	1/4W
R229	1-247-879-11	CARBON	100K	5%	1/4W	R330	1-247-847-11	CARBON	4.7K	5%	1/4W
R231	1-247-839-11	CARBON	2.2K	5%	1/4W	R331	1-247-855-11	CARBON	10K	5%	1/4W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R332	1-247-855-11	CARBON	10K	5%	1/4W	R845	1-247-863-11	CARBON	22K	5%	1/4W
R333	1-247-871-11	CARBON	47K	5%	1/4W	R846	1-247-863-11	CARBON	22K	5%	1/4W
R334	1-247-871-11	CARBON	47K	5%	1/4W	R847	1-249-417-11	CARBON	1K	5%	1/4W F
R337	1-247-863-11	CARBON	22K	5%	1/4W	R848	1-249-417-11	CARBON	1K	5%	1/4W F
R338	1-249-420-11	CARBON	1.8K	5%	1/4W F	R849	1-214-941-00	METAL	1.5M	1%	1/2W
R339	1-247-903-00	CARBON	1M	5%	1/4W	R850	1-247-855-11	CARBON	10K	5%	1/4W
R344	1-249-418-11	CARBON	1.2K	5%	1/4W F	R851	1-247-855-11	CARBON	10K	5%	1/4W
R345	1-249-413-11	CARBON	470	5%	1/4W F	R852	1-247-903-00	CARBON	1M	5%	1/4W
R346	1-215-880-11	METAL OXIDE	10	5%	2W F	R853	1-247-903-00	CARBON	1M	5%	1/4W
R347	1-249-417-11	CARBON	1K	5%	1/4W F	R854	1-247-847-11	CARBON	4.7K	5%	1/4W
R350	1-249-418-11	CARBON	1.2K	5%	1/4W F	R855	1-247-847-11	CARBON	4.7K	5%	1/4W
R351	1-249-424-11	CARBON	3.9K	5%	1/4W F	R856	1-247-841-11	CARBON	2.7K	5%	1/4W
R352	1-247-879-11	CARBON	100K	5%	1/4W	R857	1-247-841-11	CARBON	2.7K	5%	1/4W
R353	1-247-871-11	CARBON	47K	5%	1/4W	R858	1-247-849-11	CARBON	5.6K	5%	1/4W
R354	1-249-409-11	CARBON	220	5%	1/4W F	R859	1-247-849-11	CARBON	5.6K	5%	1/4W
R355	1-247-847-11	CARBON	4.7K	5%	1/4W	R860	1-249-417-11	CARBON	1K	5%	1/4W F
R356	1-249-413-11	CARBON	470	5%	1/4W F	R861	1-249-430-11	CARBON	12K	5%	1/4W
R357	1-249-413-11	CARBON	470	5%	1/4W F	R862	1-249-430-11	CARBON	12K	5%	1/4W
R801	1-249-393-11	CARBON	10	5%	1/4W F	R863	1-247-839-11	CARBON	2.2K	5%	1/4W
R802	1-249-393-11	CARBON	10	5%	1/4W F	R864	1-247-839-11	CARBON	2.2K	5%	1/4W
R803	1-247-855-11	CARBON	10K	5%	1/4W	R865	1-249-430-11	CARBON	12K	5%	1/4W
R804	1-247-855-11	CARBON	10K	5%	1/4W	R866	1-249-430-11	CARBON	12K	5%	1/4W
R805	1-247-855-11	CARBON	10K	5%	1/4W	R867	1-247-879-11	CARBON	100K	5%	1/4W
R806	1-247-855-11	CARBON	10K	5%	1/4W	R868	1-249-431-11	CARBON	15K	5%	1/4W
R807	1-249-434-11	CARBON	27K	5%	1/4W	R869	1-249-431-11	CARBON	15K	5%	1/4W
R808	1-249-417-11	CARBON	1K	5%	1/4W F	R870	1-247-855-11	CARBON	10K	5%	1/4W
R810	1-247-855-11	CARBON	10K	5%	1/4W	R871	1-247-855-11	CARBON	10K	5%	1/4W
R811	1-247-847-11	CARBON	4.7K	5%	1/4W	R872	1-247-867-11	CARBON	33K	5%	1/4W
R812	1-247-839-11	CARBON	2.2K	5%	1/4W	R873	1-247-867-11	CARBON	33K	5%	1/4W
R814	1-249-427-11	CARBON	6.8K	5%	1/4W F	R874	1-247-839-11	CARBON	2.2K	5%	1/4W
R815	1-249-427-11	CARBON	6.8K	5%	1/4W F	R875	1-247-839-11	CARBON	2.2K	5%	1/4W
R816	1-247-891-00	CARBON	330K	5%	1/4W	R876	1-249-439-11	CARBON	68K	5%	1/4W
R817	1-247-891-00	CARBON	330K	5%	1/4W	R877	1-249-439-11	CARBON	68K	5%	1/4W
R818	1-247-871-11	CARBON	47K	5%	1/4W	R878	1-249-432-11	CARBON	18K	5%	1/4W
R819	1-247-871-11	CARBON	47K	5%	1/4W	R880	1-249-409-11	CARBON	220	5%	1/4W F
R820	1-249-431-11	CARBON	15K	5%	1/4W	R881	1-247-855-11	CARBON	10K	5%	1/4W
R821	1-249-431-11	CARBON	15K	5%	1/4W	R883	1-249-417-11	CARBON	1K	5%	1/4W F
R822	1-249-434-11	CARBON	27K	5%	1/4W	R884	1-249-417-11	CARBON	1K	5%	1/4W F
R823	1-249-434-11	CARBON	27K	5%	1/4W	R887	1-247-843-11	CARBON	3.3K	5%	1/4W
R824	1-247-843-11	CARBON	3.3K	5%	1/4W	R888	1-247-855-11	CARBON	10K	5%	1/4W
R825	1-247-843-11	CARBON	3.3K	5%	1/4W	R889	1-247-847-11	CARBON	4.7K	5%	1/4W
R826	1-247-825-11	CARBON	560	5%	1/4W	R890	1-247-839-11	CARBON	2.2K	5%	1/4W
R827	1-249-436-11	CARBON	39K	5%	1/4W	R891	1-247-855-11	CARBON	10K	5%	1/4W
R828	1-249-409-11	CARBON	220	5%	1/4W F	R892	1-247-855-11	CARBON	10K	5%	1/4W
R829	1-249-431-11	CARBON	15K	5%	1/4W	R893	1-249-381-11	CARBON	1	5%	1/4W F
R830	1-249-427-11	CARBON	6.8K	5%	1/4W F	R894	1-249-399-11	CARBON	33	5%	1/4W F
R831	1-247-855-11	CARBON	10K	5%	1/4W	R895	1-249-431-11	CARBON	15K	5%	1/4W
R832	1-247-855-11	CARBON	10K	5%	1/4W	R896	1-249-431-11	CARBON	15K	5%	1/4W
R833	1-247-855-11	CARBON	10K	5%	1/4W	R897	1-247-855-11	CARBON	10K	5%	1/4W
R834	1-247-879-11	CARBON	100K	5%	1/4W	R898	1-249-401-11	CARBON	47	5%	1/4W F
R835	1-247-879-11	CARBON	100K	5%	1/4W	R899	1-249-401-11	CARBON	47	5%	1/4W F
R836	1-249-420-11	CARBON	1.8K	5%	1/4W F	R901	1-247-703-11	CARBON	180	5%	1/4W F
R837	1-249-417-11	CARBON	1K	5%	1/4W F	R905	1-249-438-11	CARBON	56K	5%	1/4W
R838	1-249-417-11	CARBON	1K	5%	1/4W F	R906	1-247-847-11	CARBON	4.7K	5%	1/4W
R839	1-249-428-11	CARBON	8.2K	5%	1/4W F	R907	1-247-855-11	CARBON	10K	5%	1/4W
R840	1-249-428-11	CARBON	8.2K	5%	1/4W F	R911	1-247-855-11	CARBON	10K	5%	1/4W
R841	1-247-889-00	CARBON	270K	5%	1/4W	R912	1-247-855-11	CARBON	10K	5%	1/4W
R842	1-247-889-00	CARBON	270K	5%	1/4W	R913	1-247-839-11	CARBON	2.2K	5%	1/4W
R843	1-247-849-11	CARBON	5.6K	5%	1/4W	R914	1-247-871-11	CARBON	47K	5%	1/4W
R844	1-247-849-11	CARBON	5.6K	5%	1/4W	R915	1-247-871-11	CARBON	47K	5%	1/4W

MAIN	MOTOR	MOTOR (6P) (S)	POWER SUPPLY	POWER (AMP)
-------------	--------------	-----------------------	---------------------	--------------------

Ref. No.	Part No.	Description	Remarks
R916	1-247-899-11	CARBON 680K 5%	1/4W
R917	1-247-885-00	CARBON 180K 5%	1/4W
R918	1-249-411-11	CARBON 330 5%	1/4W
R919	1-247-855-11	CARBON 10K 5%	1/4W
R920	1-247-899-11	CARBON 680K 5%	1/4W
R921	1-247-885-00	CARBON 180K 5%	1/4W
R922	1-249-417-11	CARBON 1K 5%	1/4W F
R923	1-247-855-11	CARBON 10K 5%	1/4W
R924	1-247-855-11	CARBON 10K 5%	1/4W
R925	1-247-879-11	CARBON 100K 5%	1/4W
R926	1-249-409-11	CARBON 220 5%	1/4W F
R930	1-247-839-11	CARBON 2.2K 5%	1/4W
R931	1-247-863-11	CARBON 22K 5%	1/4W
< ADJUSTABLE RESISTOR >			
SFR101	1-228-995-00	RES, ADJ, METAL22K	
SFR801	1-228-990-00	RES, ADJ, METAL1K	
SFR802	1-228-990-00	RES, ADJ, METAL1K	
SFR803	1-228-995-00	RES, ADJ, METAL22K	
SFR804	1-228-995-00	RES, ADJ, METAL22K	
SFR805	1-228-995-00	RES, ADJ, METAL22K	
SFR806	1-228-995-00	RES, ADJ, METAL22K	
SFR807	1-228-998-00	RES, ADJ, METAL220K	
SFR808	1-228-998-00	RES, ADJ, METAL220K	
< TRANSFORMER >			
T102	1-429-554-11	TRANSFORMER, AM IFT	
< TRIMMER >			
TC102	1-141-304-21	CAP, TRIMMER 10PF	
< VIBRATOR >			
X101	1-579-585-11	VIBRATOR, CRYSTAL 7.2MHz	

	1-675-422-11	MOTOR BOARD	

< CAPACITOR >			
C43	1-164-159-11	CERAMIC 0.1uF	50V
< SWITCH >			
S06	1-762-587-11	SWITCH, PUSH (1 KEY)	

*	1-675-422-11	MOTOR (6P) (C) BOARD	

< CONNECTOR >			
CN03	1-564-722-11	PIN, CONNECTOR (SMALL TYPE) 6P	
< MOTOR >			
M101	X-2625-877-1	MOTOR ASSY (SPINDLE)	
M102	X-2625-769-1	MOTOR ASSY (SLED)	
< SWITCH >			
S05	1-572-085-11	SWITCH, LEAF (LIMIT)	

Ref. No.	Part No.	Description	Remarks
	1-674-638-11	POWER SUPPLY BOARD	*****
	1-533-293-11	FUSE HOLDER	
< FUSE >			
△F702	1-532-464-31	FUSE 2.5A 250V (DR3: AUS, XB200)	
△F702	1-532-505-31	FUSE 5A 250V (DR3: E,SP,AR)	
△F702	1-576-109-11	FUSE 5A 125V (DR3: MX,DR330)	
△F703	1-532-464-31	FUSE 2.5A 250V (DR3: E,SP,AR)	

A-4426-417-A		POWER(AMP) BOARD, COMPLETE (XB200)	*****
A-4426-418-A		POWER(AMP) BOARD, COMPLETE (DR3:E,SP,AR,AUS)	*****
A-4426-419-A		POWER(AMP) BOARD, COMPLETE (DR3:MX/DR330)	*****
	1-533-293-11	FUSE HOLDER	
< CAPACITOR >			
C703	1-162-290-31	CERAMIC 470PF 10%	50V
C704	1-162-290-31	CERAMIC 470PF 10%	50V
C705	1-126-964-11	ELECT 10uF 20%	50V
C706	1-126-964-11	ELECT 10uF 20%	50V
C707	1-128-563-11	ELECT 100uF 20%	100V
C708	1-128-563-11	ELECT 100uF 20%	100V
C709	1-164-159-11	CERAMIC 0.1uF	50V
C710	1-128-563-11	ELECT 100uF 20%	100V
C711	1-128-563-11	ELECT 100uF 20%	100V
C713	1-162-199-31	CERAMIC 10PF 5%	50V
C714	1-162-199-31	CERAMIC 10PF 5%	50V
C717	1-137-351-11	FILM 0.022uF 5%	100V
C718	1-137-351-11	FILM 0.022uF 5%	100V
C719	1-164-159-11	CERAMIC 0.1uF	50V
C721	1-137-399-11	FILM 0.1uF 5%	100V
C722	1-137-399-11	FILM 0.1uF 5%	100V
C724	1-137-393-11	FILM 0.01uF 5%	100V
C725	1-126-235-11	ELECT 100uF 20%	16V
C726	1-126-933-11	ELECT 100uF 20%	16V
C727	1-161-494-00	CERAMIC 0.022uF	25V
C728	1-126-963-11	ELECT 4.7uF 20%	50V
C734	1-161-494-00	CERAMIC 0.022uF	25V
C735	1-126-949-11	ELECT 220uF 20%	35V
C736	1-161-494-00	CERAMIC 0.022uF	25V
C737	1-126-948-11	ELECT 100uF 20%	35V
C738	1-161-494-00	CERAMIC 0.022uF	25V
C739	1-126-935-11	ELECT 470uF 20%	16V
C740	1-161-494-00	CERAMIC 0.022uF	25V
C741	1-104-482-11	ELECT 4700uF 20%	63V
C742	1-104-482-11	ELECT 4700uF 20%	63V
C743	1-102-129-00	CERAMIC 10000PF 10%	50V
C744	1-102-129-00	CERAMIC 10000PF 10%	50V
C745	1-102-129-00	CERAMIC 10000PF 10%	50V
C746	1-102-129-00	CERAMIC 10000PF 10%	50V
C747	1-161-494-00	CERAMIC 0.022uF	25V

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

POWER (AMP)

Ref. No.	Part No.	Description	Remarks
C748	1-161-494-00	CERAMIC 0.022uF	25V
C749	1-161-494-00	CERAMIC 0.022uF	25V
C750	1-161-494-00	CERAMIC 0.022uF	25V
C751	1-126-943-11	ELECT 2200uF 20%	25V
C752	1-126-933-11	ELECT 100uF 20%	16V
C753	1-161-494-00	CERAMIC 0.022uF	25V
C754	1-161-494-00	CERAMIC 0.022uF	25V
C755	1-161-494-00	CERAMIC 0.022uF	25V
C756	1-126-934-11	ELECT 220uF 20%	16V
C757	1-126-934-11	ELECT 220uF 20%	16V
C758	1-161-494-00	CERAMIC 0.022uF	25V
C759	1-109-952-11	ELECT 0.47uF 20%	50V
C762	1-126-959-11	ELECT 0.47uF 20%	50V
C763	1-126-933-11	ELECT 100uF 20%	16V
C764	1-104-664-11	ELECT 47uF 20%	16V
< CONNECTOR >			
* CN701	1-564-715-11	PIN, CONNECTOR (SMALL TYPE)13P	
CN702	1-564-707-11	PIN, CONNECTOR (SMALL TYPE) 5P	
* CN703	1-564-510-11	PLUG, CONNECTOR 7P	
< DIODE >			
D701	8-719-027-23	DIODE GBU6D	
D702	8-719-010-73	DIODE UZ-12BSA	
D703	8-719-011-06	DIODE UZ-27BSA	
D704	8-719-010-61	DIODE UZ-9.1BSA	
D705	8-719-031-85	DIODE 1N4002L	
D706	8-719-031-85	DIODE 1N4002L	
D707	8-719-031-85	DIODE 1N4002L	
D708	8-719-031-85	DIODE 1N4002L	
D709	8-719-031-85	DIODE 1N4002L	
D710	8-719-911-19	DIODE 1SS133	
D712	8-719-911-19	DIODE 1SS133	
D713	8-719-911-19	DIODE 1SS133	
D714	8-719-911-19	DIODE 1SS133	
D715	8-719-911-19	DIODE 1SS133	
D716	8-719-911-19	DIODE 1SS133	
D717	8-719-911-19	DIODE 1SS133	
D718	8-719-911-19	DIODE 1SS133	
D719	8-719-911-19	DIODE 1SS133	
< FUSE >			
△F701	1-532-388-31	FUSE 2A 250V (EXCEPT MX)	
△F701	1-576-104-11	FUSE 2A 250V (MX)	
< IC >			
IC701	8-749-015-46	IC STK407-100E (DR3/DR330)	
IC701	8-749-015-45	IC STK407-090E (XB200)	
IC702	8-759-111-68	IC uPC1237HA	
< TERMINAL >			
JK703	1-694-443-11	TERMINAL BOARD (SPEAKER)	
< COIL >			
L702	1-420-872-00	COIL, AIR CORE (XB200)	
L703	1-420-872-00	COIL, AIR CORE (XB200)	

Ref. No.	Part No.	Description	Remarks
< TRANSISTOR >			
Q702	8-729-188-23	TRANSISTOR 2SD882-P	
Q703	8-729-200-36	TRANSISTOR 2SA966-Y	
Q704	8-729-048-99	TRANSISTOR 2SK2541	
Q705	8-729-048-99	TRANSISTOR 2SK2541	
Q706	8-729-231-55	TRANSISTOR 2SC2878-A	
Q707	8-729-231-55	TRANSISTOR 2SC2878-A	
Q708	8-729-108-19	TRANSISTOR 2SA988TP-EA	
Q709	8-729-231-55	TRANSISTOR 2SC2878-A	
Q710	8-729-231-55	TRANSISTOR 2SC2878-A	
Q711	8-729-184-53	TRANSISTOR 2SC1841TP-EA	
Q712	8-729-184-53	TRANSISTOR 2SC1841TP-EA	
Q713	8-729-026-29	TRANSISTOR 2SJ346	
< RESISTOR >			
R701	1-249-438-11	CARBON 56K 5%	1/4W
R702	1-249-438-11	CARBON 56K 5%	1/4W
R703	1-247-839-11	CARBON 2.2K 5%	1/4W
R704	1-247-839-11	CARBON 2.2K 5%	1/4W
R705	1-249-438-11	CARBON 56K 5%	1/4W
R706	1-249-438-11	CARBON 56K 5%	1/4W
R707	1-247-839-11	CARBON 2.2K 5%	1/4W
R708	1-247-839-11	CARBON 2.2K 5%	1/4W
R709	1-249-438-11	CARBON 56K 5%	1/4W
R710	1-249-438-11	CARBON 56K 5%	1/4W
R711	1-249-405-11	CARBON 100 5%	1/4W F
R712	1-249-417-11	CARBON 1K 5%	1/4W F
R713	1-249-417-11	CARBON 1K 5%	1/4W F
R714	1-249-405-11	CARBON 100 5%	1/4W F
R715	1-249-431-11	CARBON 15K 5%	1/4W
R716	1-249-431-11	CARBON 15K 5%	1/4W
R719	1-220-890-11	METAL 0.22 10%	3W
R720	1-220-890-11	METAL 0.22 10%	3W
R721	1-247-879-11	CARBON 100K 5%	1/4W
R722	1-247-879-11	CARBON 100K 5%	1/4W
R723	1-215-429-00	METAL 2.2K 1%	1/4W
R724	1-215-429-00	METAL 2.2K 1%	1/4W
R725	1-247-843-11	CARBON 3.3K 5%	1/4W
R726	1-247-843-11	CARBON 3.3K 5%	1/4W
R727	1-249-430-11	CARBON 12K 5%	1/4W
R728	1-249-430-11	CARBON 12K 5%	1/4W
R729	1-247-839-11	CARBON 2.2K 5%	1/4W
R730	1-247-871-11	CARBON 47K 5%	1/4W
R731	1-247-887-00	CARBON 220K 5%	1/4W
R732	1-249-417-11	CARBON 1K 5%	1/4W F
R733	1-249-438-11	CARBON 56K 5%	1/4W
R734	1-247-847-11	CARBON 4.7K 5%	1/4W
R735	1-249-455-11	CARBON 4.7 5%	1/4W
R736	1-249-455-11	CARBON 4.7 5%	1/4W
R737	1-247-784-00	CARBON 11 5%	1/4W (XB200)

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

POWER (AMP)	REM	PHOTO SOCKET	TR	VR
-------------	-----	--------------	----	----

Ref. No.	Part No.	Description	Remarks
R738	1-247-784-00	CARBON	11 5% 1/4W (XB200)
R739	1-215-857-11	METAL OXIDE	10 5% 1W F
R740	1-216-450-00	METAL OXIDE	82 5% 2W F (DR3/DR330)
R740	1-214-828-00	METAL	33 1% 1/2W (XB200)
R742	1-249-413-11	CARBON	470 5% 1/4W F
R743	1-249-418-11	CARBON	1.2K 5% 1/4W F
R744	1-249-411-11	CARBON	330 5% 1/4W
R747	1-247-847-11	CARBON	4.7K 5% 1/4W
R748	1-247-855-11	CARBON	10K 5% 1/4W
R749	1-247-841-11	CARBON	2.7K 5% 1/4W
R750	1-247-839-11	CARBON	2.2K 5% 1/4W
R751	1-247-862-11	CARBON	20K 5% 1/4W
R752	1-247-855-11	CARBON	10K 5% 1/4W
R753	1-247-855-11	CARBON	10K 5% 1/4W
R754	1-247-895-00	CARBON	470K 5% 1/4W
R760	1-247-863-11	CARBON	22K 5% 1/4W
R761	1-247-855-11	CARBON	10K 5% 1/4W
R762	1-247-903-00	CARBON	1M 5% 1/4W
R763	1-247-879-11	CARBON	100K 5% 1/4W
R764	1-249-417-11	CARBON	1K 5% 1/4W F
R765	1-247-863-11	CARBON	22K 5% 1/4W
R766	1-247-863-11	CARBON	22K 5% 1/4W
< RELAY >			
RL701	1-515-921-11	RELAY (12V)	

	1-674-633-11	REM BOARD	*****
< CAPACITOR >			
C666	1-126-966-11	ELECT	33uF 20% 16V
< SENSOR >			
RM601	8-749-013-84	IC SPS-447-1 (REMOTE SENSOR)	

	1-675-425-11	PHOTO SOCKET BOARD	*****
< CAPACITOR >			
C76	1-164-159-11	CERAMIC	0.1uF 50V
C76A	1-164-159-11	CERAMIC	0.1uF 50V
< PHOTOINTERRUPTER >			
PH01	8-749-923-04	ICTOTX178A	
< RESISTOR >			
R76	1-249-417-11	CARBON	1K 5% 1/4W F

Ref. No.	Part No.	Description	Remarks
	1-674-642-11	TR BOARD	*****
< TRANSISTOR >			
Q701	8-729-822-89	TRANSISTOR	2SD1667

	1-674-631-11	VR BOARD	*****
< VARIABLE RESISTOR >			
VR601	1-475-841-11	ENCODER (VOLUME)	*****

MISCELLANEOUS			

124	1-772-164-11	DECK, MECH	
135	1-783-579-11	WIRE (FLAT TYPE) (16 CORE)	
△ 151	1-551-506-99	CORD, POWER(DR3:E,MX,DR330)	
△ 151	1-555-795-00	CORD, POWER(DR3:SP/XB200:AEP,EE,CIS)	
△ 151	1-696-572-21	CORD, POWER(XB200:UK)	
△ 151	1-696-966-11	CORD, POWER(DR3:AUS)	
△ 151	1-783-941-51	CORD, POWER(DR3:AR)	
△ 254	8-820-054-03	OPTICAL PICK UP KSM-213ECM	
256	1-783-740-11	WIRE(FLAT TYPE) (16 CORE)	
M01	1-541-632-11	MOTOR DC	
M101	X-2625-877-1	MOTOR ASSY (SPINDLE)	
M102	X-2625-769-1	MOTOR ASSY (SLED)	
△ T001	1-433-921-11	TRANSFORMER, POWER(DR3:MX,DR330)	
△ T001	1-433-922-11	TRANSFORMER, POWER(XB200)	
△ T001	1-433-923-11	TRANSFORMER, POWER(DR3:E,SP,AR)	
△ T001	1-433-924-11	TRANSFORMER, POWER(DR3:AUS)	

HARDWARELIST			

#1	7-685-903-21	SCREW +PTPWH 3 × 8 (TYPE2)	
#2	7-685-871-09	SCREW +BVTT 3 × 6 (S)	
#3	7-682-549-09	SCREW +B 3 × 10	
#4	7-685-871-01	SCREW +BVTT 3 × 6 (S)	
#5	7-685-863-09	SCREW +BVTT 2.6 × 8 (S)	
#6	7-685-646-79	SCREW +BVTP 3 × 8 TYPE2 TT(B)	
#7	7-685-647-79	SCREW, TAPPING	
#9	7-682-904-11	SCREW +PWH 4 × 8	
#10	7-681-000-61	SCREW +PWH M3 × 8	
#11	7-685-902-11	SCREW +PWH 2.6 × 6	
#14	7-621-255-15	SCREW +P 2 × 3	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.