

SECTION 6 EXPLODED VIEWS

NOTE :


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

6-1. SCREEN, COVERS

- : 2-580-640-01 SCREW, +BVTP2 4X16
- : 7-685-648-79 SCREW +BVTP 3X12 TYPE2 IT-3
- ★ : 2-580-654-01 SCREW, +PWTP2 4X16

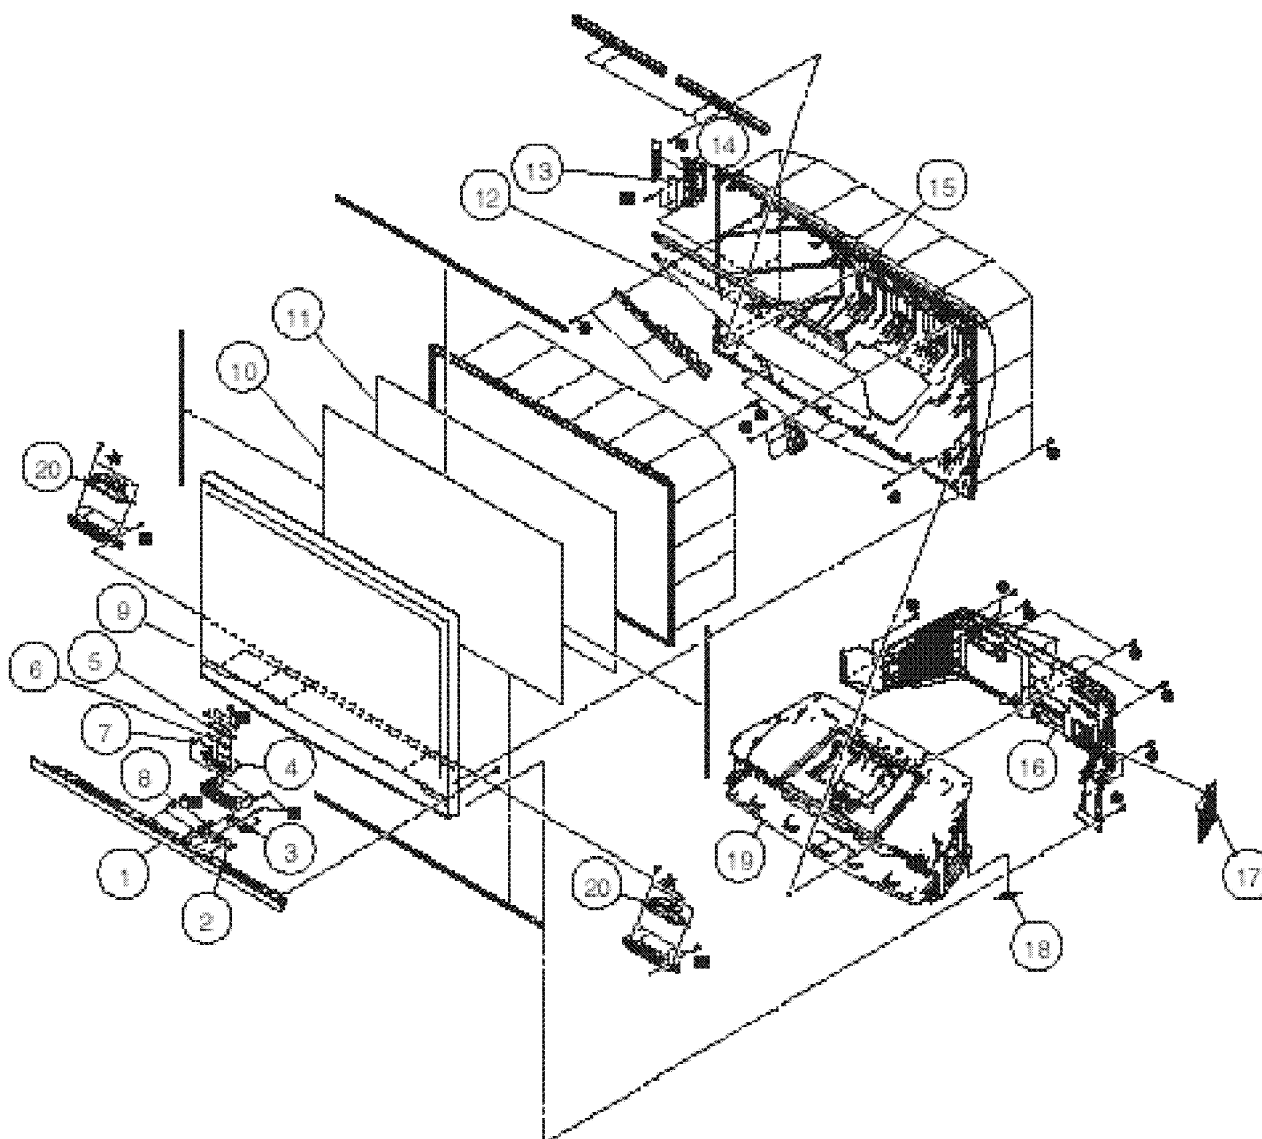


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	2-631-808-61	GRILLE, SPEAKER (50)		11	2-678-225-01	PLATE (50F), DIFFUSION	
2	2-590-913-11	BUTTON, POWER		12	A-1127-074-A	MIRROR (IRP) ASSY	
3	*A-1192-355-A	H2 BOARD, COMPLETE		13	*A-1192-356-A	H3 BOARD, COMPLETE	
4	2-590-915-21	TRAY, CONTROL		14	*2-637-136-01	BRACKET H3 (50)	
5	*A-1192-354-A	H1 BOARD, COMPLETE		15	2-590-907-33	COVER, MIRROR (50)	
6	2-590-914-11	BUTTON, MULTI		16	2-631-704-01	COVER, REAR	
7	2-593-048-01	DAMPER		17	2-591-156-21	DOOR, LAMP	
8	2-593-049-01	LATCH ASSY		18	4-097-548-01	CUSHION, FOOT	
9	X-2149-292-1	FRAME ASSY, SCREEN (50)	(KDF-50E2000)	19	2-630-699-03	CABINET, BOTTOM	
	X-2067-114-1	FRAME ASSY, SCREEN (50)	(KDF-50E2010)	20	1-826-436-11	LOUDSPEAKER (13X7CM)	
10	2-678-224-21	PLATE (50L), DIFFUSION					

6-2. CHASSIS ASSEMBLY

- : 7-685-648-79 SCREW +BVTP 3X12 TYPE2 IT-3
● : 7-685-663-79 SCREW +BVTP 4X16 TYPE2 IT-3

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

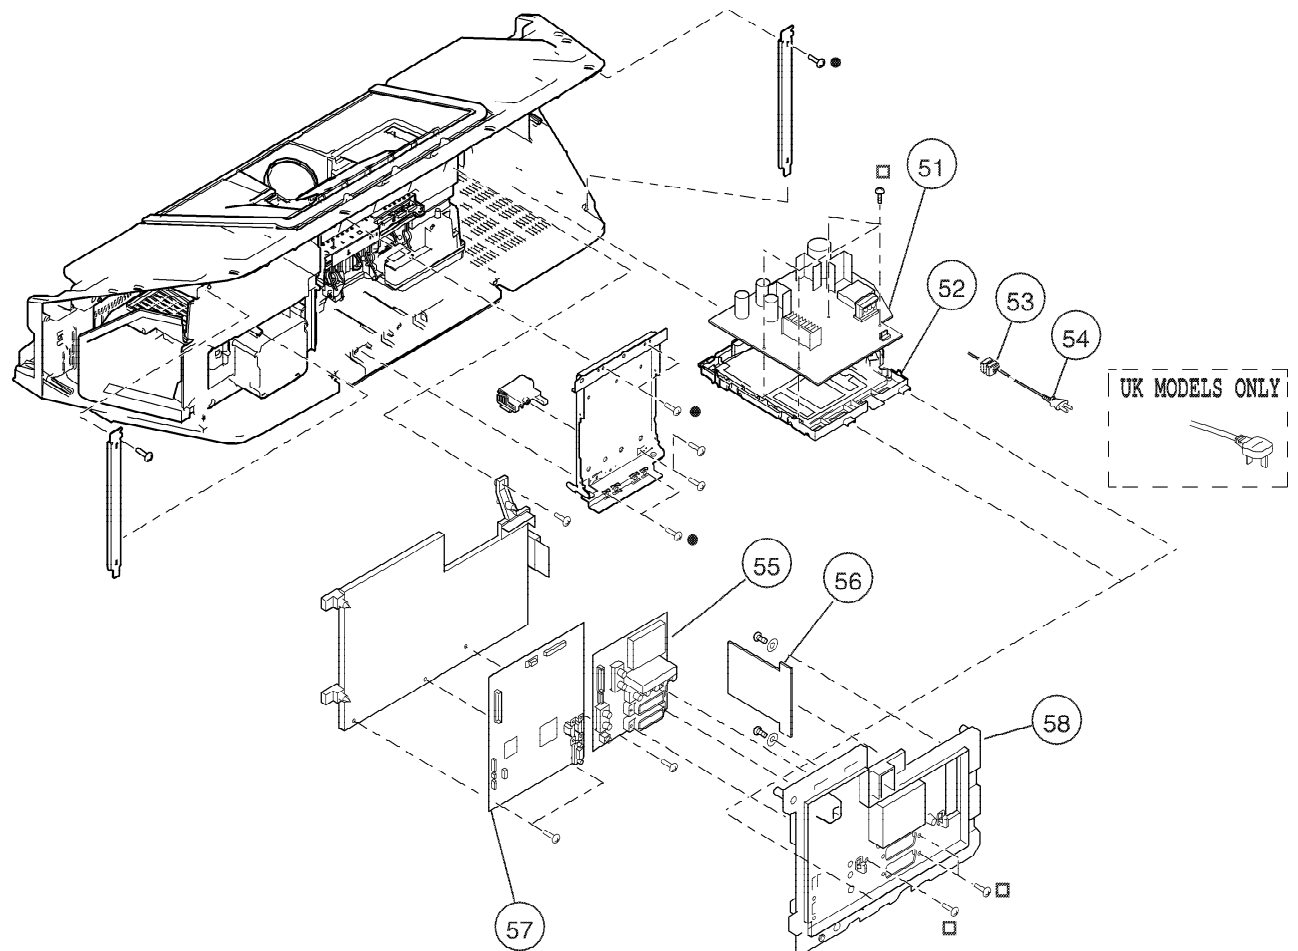


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	*A-1192-353-A	AG BOARD, COMPLETE		55	*A-1192-366-A	J BOARD, COMPLETE	
52	*2-593-078-41	BRACKET, G		56	*A-1192-367-A	X BOARD, COMPLETE	
53	4-065-070-01	HOLDER, AC CORD		57	*A-1192-813-A	TBD BOARD, COMPLETE	
54	Δ 1-823-715-21	CORD, POWER	KDF-50E2000/2010 (AEP)	58	*2-695-222-01	BRACKET, TERMINAL	
	Δ 1-776-204-32	CORD, POWER (FILTER)	KDF-50E2000/2010 (UK)				

6-2. OPTICS UNIT BLOCK ASSEMBLY AND LAMP ASSEMBLY

- : 7-685-648-79 SCREW +BVTP 3X12 TYPE2 IT-3
- : 2-580-640-01 SCREW, +BVTP2 4X16

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

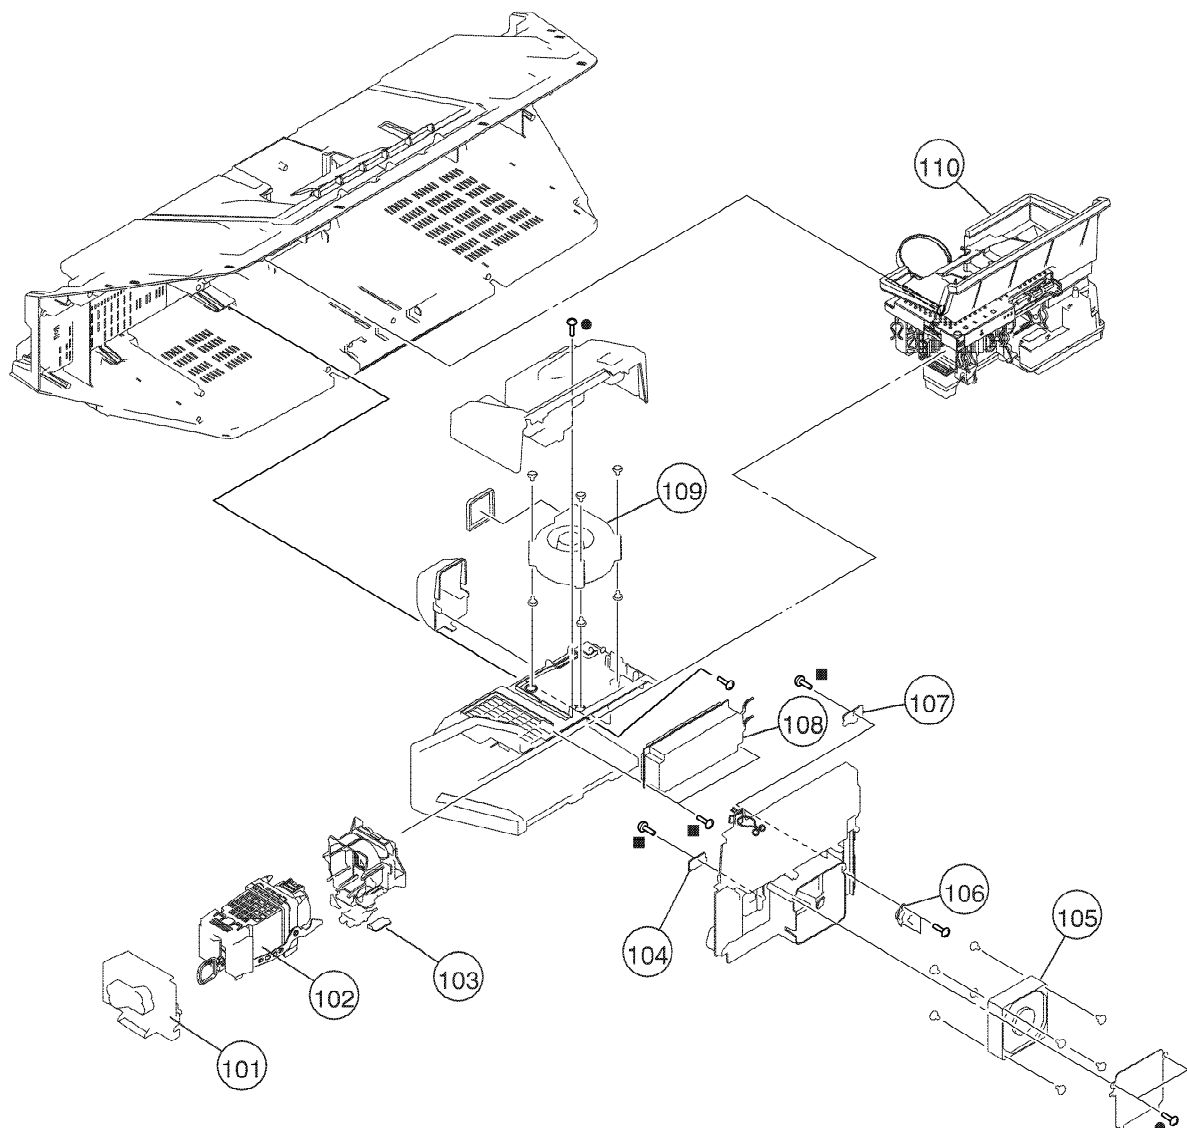

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	2-591-156-21	DOOR, LAMP		108	1-474-012-11	POWER SUPPLY BLOCK	
102	A-1127-024-A	LAMP BLOCK ASSY		109	Δ 1-787-374-11	D.C. FAN	
103	*A-1192-358-A	T2 BOARD, COMPLETE		110	A-1199-615-A	OPTICS UNIT BLOCK ASSY	
104	*A-1192-357-A	T1 BOARD, COMPLETE		Note: The C board and optics block must be aligned as a unit so the C board cannot be ordered separately. If required please order A-1199-615-A OPTICS UNIT BLOCK ASSY			
105	Δ 1-787-373-11	D.C. FAN					
106	1-576-951-11	THERMOSTAT					
107	*A-1199-676-A	S2 BOARD, COMPLETE					

SECTION 7 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	Page
S2 BOARD COMPLETE Parts List :	73
C BOARD COMPLETE Parts List :	73
H3 BOARD COMPLETE Parts List :	79
J BOARD COMPLETE Parts List :	79
X BOARD COMPLETE Parts List :	83
TBD BOARD COMPLETE Parts List :	84
AG BOARD COMPLETE Parts List :	97
T1 BOARD COMPLETE Parts List :	100
T2 BOARD COMPLETE Parts List :	100
H2 BOARD COMPLETE Parts List :	100
H1 BOARD COMPLETE Parts List :	101
MISCELLANEOUS	101
ACCESSORIES AND CONNECTORS :	101
REMOTE COMMANDER:	101

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1199-676-A S2 Board, Complete							
		< CAPACITOR >					
C1060	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C1399	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
		< CONNECTOR >		C2046	1-164-156-11	CERAMIC CHIP 0.1UF	25V
CN1060	*1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD) 5P		C2047	1-164-505-11	CERAMIC CHIP 2.2UF	16V
		< IC >		C2048	1-164-156-11	CERAMIC CHIP 0.1UF	25V
IC1060	8-759-476-80	IC LM75CIMX-3		C2049	1-117-370-11	CERAMIC CHIP 10UF	10V
		< COIL >					
L1060	1-414-754-11	INDUCTOR 10UH		C2050	1-164-505-11	CERAMIC CHIP 2.2UF	16V
		< RESISTOR >		C2052	1-117-370-11	CERAMIC CHIP 10UF	10V
R1060	1-216-805-11	METAL CHIP 47 5% 1/10W		C2501	1-164-156-11	CERAMIC CHIP 0.1UF	25V
R1061	1-216-805-11	METAL CHIP 47 5% 1/10W		C2502	1-117-370-11	CERAMIC CHIP 10UF	10V
R1063	1-216-864-11	SHORT CHIP 0		C2503	1-164-156-11	CERAMIC CHIP 0.1UF	25V
R1066	1-216-864-11	SHORT CHIP 0					
R1067	1-216-864-11	SHORT CHIP 0		C2505	1-164-156-11	CERAMIC CHIP 0.1UF	25V
*A-1192-365-A C Board, Complete				C2506	1-164-505-11	CERAMIC CHIP 2.2UF	16V
		< CAPACITOR >		C2507	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1300	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C2509	1-117-370-11	CERAMIC CHIP 10UF	10V
C1301	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2510	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1302	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V				
C1303	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C2512	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1304	1-125-837-91	CERAMIC CHIP 1UF	10% 6.3V	C2513	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1306	1-125-837-91	CERAMIC CHIP 1UF	10% 6.3V	C2514	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1307	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2515	1-128-992-21	ELECT CHIP 47UF	20% 25V
C1308	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C2516	1-165-585-21	ELECT CHIP 47UF	20% 25V
C1309	1-128-992-21	ELECT CHIP 47UF	20% 25V				
C1310	1-125-837-91	CERAMIC CHIP 1UF	10% 6.3V	C2517	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1322	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C2518	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C1350	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2519	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C1351	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2520	1-165-585-21	ELECT CHIP 47UF	20% 25V
C1366	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2521	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1375	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V				
C1376	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C2522	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1377	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2523	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1378	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C2524	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1379	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2527	1-128-992-21	ELECT CHIP 47UF	20% 25V
C1380	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2529	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1381	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V				
C1382	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C2530	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1383	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C2531	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1390	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2551	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1398	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C2552	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2553	1-128-992-21	ELECT CHIP 47UF	20% 25V
				C2554	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2555	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2556	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2557	1-128-992-21	ELECT CHIP 47UF	20% 25V
				C2558	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2601	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2602	1-117-370-11	CERAMIC CHIP 10UF	10V
				C2603	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2605	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2606	1-164-505-11	CERAMIC CHIP 2.2UF	16V
				C2607	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2609	1-117-370-11	CERAMIC CHIP 10UF	10V
				C2610	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2612	1-164-156-11	CERAMIC CHIP 0.1UF	25V
				C2613	1-164-156-11	CERAMIC CHIP 0.1UF	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C2615	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2709	1-117-370-11	CERAMIC CHIP 10UF	10V
C2616	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C2710	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2617	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2712	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2618	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C2713	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2619	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C2715	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2620	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C2716	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2621	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2717	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2622	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2718	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C2623	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2719	1-164-505-11	CERAMIC CHIP 2.2UF	16V
C2624	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2720	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2625	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2721	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2626	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2722	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2627	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	C2723	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2628	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2724	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2629	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2725	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2630	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2726	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C2631	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2727	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C2632	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2728	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C2651	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2729	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2652	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2730	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C2653	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2731	1-165-884-91	CERAMIC CHIP 2.2UF	10% 6.3V
C2654	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2732	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C2655	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2801	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2656	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2802	1-128-992-21	ELECT CHIP 47UF	20% 25V
C2657	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2804	1-128-992-21	ELECT CHIP 47UF	20% 25V
C2658	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2836	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V
C2659	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2837	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V
C2661	1-128-992-21	ELECT CHIP 47UF	20% 25V	C2838	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V
C2662	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C2839	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V
C2663	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3011	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2664	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3013	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2665	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3017	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2666	1-165-585-21	ELECT CHIP 47UF	20% 25V	C3018	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
C2678	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3019	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2679	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3021	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2681	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3025	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2682	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3026	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2684	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3027	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2685	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3029	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2694	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3033	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2697	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3034	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2698	1-100-159-91	CERAMIC CHIP 22UF	10% 6.3V	C3035	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2699	1-165-884-91	CERAMIC CHIP 2.2UF	10% 6.3V	C3037	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2700	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C3056	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C2701	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3057	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
C2702	1-117-370-11	CERAMIC CHIP 10UF	10V	C3061	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2703	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3062	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2705	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3101	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C2706	1-164-505-11	CERAMIC CHIP 2.2UF	16V	C3102	1-115-156-11	CERAMIC CHIP 1UF	10V
C2707	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3103	1-164-156-11	CERAMIC CHIP 0.1UF	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3104	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	FB3004	1-400-244-11	FERRITE	0UH
C3105	1-164-156-11	CERAMIC CHIP 0.1UF	25V	FB3005	1-414-760-21	FERRITE	0UH
C3106	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	FB3006	1-400-244-11	FERRITE	0UH
C3201	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB3007	1-414-760-21	FERRITE	0UH
C3202	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB3008	1-400-244-11	FERRITE	0UH
C3203	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB3009	1-414-760-21	FERRITE	0UH
C3204	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB3010	1-400-244-11	FERRITE	0UH
C3205	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB3201	1-414-921-11	FERRITE	0UH
C3206	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB3202	1-414-921-11	FERRITE	0UH
C3207	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB3203	1-414-921-11	FERRITE	0UH
C3208	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	< FILTER >			
C3209	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FL3001	1-233-830-11	FERRITE	37UH
C3210	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FL3003	1-233-830-11	FERRITE	37UH
< CONNECTOR >				FL3007	1-233-830-11	FERRITE	37UH
CN1306	*1-691-591-11	PIN, CONNECTOR (1.5MM) (SMD) 8P		FL3008	1-233-830-11	FERRITE	37UH
CN2551	1-784-640-52	CONNECTOR, FFC (ZIF) 22P		< IC >			
CN2601	1-784-640-52	CONNECTOR, FFC (ZIF) 22P		IC1300	8-759-369-73	IC NJM4556AM	
CN2651	1-784-640-52	CONNECTOR, FFC (ZIF) 22P		IC1301	8-759-701-01	IC NJM2904M	
CN3001	*1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD) 5P		IC1302	8-759-701-01	IC NJM2904M	
CN3002	*1-764-643-21	PIN, CONNECTOR (SMD) 11P		IC1303	6-701-197-01	IC MC74VHC1GT66DFT1	
CN3004	*1-760-388-11	CONNECTOR PIN (SMD) 9P		IC1304	8-759-701-01	IC NJM2904M	
CN3200	*1-819-817-11	CONNECTOR (RECEPTACLE) 14P		IC2006	8-759-490-41	IC TC74VHCT541AFT (EL)	
< DIODE >				IC2007	8-759-490-41	IC TC74VHCT541AFT (EL)	
D1300	8-719-081-97	DIODE MMDL914T1		IC2501	8-752-106-13	IC CXA7001R-T6	
D1320	8-719-069-55	DIODE UDZSTE-175.6B		IC2601	8-752-106-13	IC CXA7001R-T6	
D1321	6-500-697-01	DIODE UDZSTE-173.3B		IC2614	6-706-960-01	IC CXD9809GF	
< FERRITE BEAD >				IC2701	8-752-106-13	IC CXA7001R-T6	
FB2010	1-414-921-11	FERRITE	0UH	IC2801	8-759-388-31	IC PQ20VZ1UJ00H	
FB2012	1-414-921-11	FERRITE	0UH	IC3101	6-703-695-01	IC S-80827CNMC-B8MT2G	
FB2501	1-414-921-11	FERRITE	0UH	IC3102	6-704-067-01	IC M24128-BWMN6T(A)	
FB2502	1-414-921-11	FERRITE	0UH	IC3200	6-701-870-01	IC THC63LVDF84B-T	
FB2504	1-414-921-11	FERRITE	0UH	< COIL >			
FB2505	1-414-921-11	FERRITE	0UH	L1300	1-414-754-11	INDUCTOR	10UH
FB2506	1-414-921-11	FERRITE	0UH	L1301	1-414-754-11	INDUCTOR	10UH
FB2601	1-414-921-11	FERRITE	0UH	L1302	1-414-754-11	INDUCTOR	10UH
FB2602	1-414-921-11	FERRITE	0UH	L1310	1-414-754-11	INDUCTOR	10UH
FB2603	1-414-921-11	FERRITE	0UH	L2501	1-414-754-11	INDUCTOR	10UH
FB2604	1-414-921-11	FERRITE	0UH	L2502	1-414-754-11	INDUCTOR	10UH
FB2651	1-414-921-11	FERRITE	0UH	L2504	1-414-754-11	INDUCTOR	10UH
FB2653	1-414-921-11	FERRITE	0UH	L2505	1-414-754-11	INDUCTOR	10UH
FB2654	1-414-921-11	FERRITE	0UH	L2506	1-414-754-11	INDUCTOR	10UH
FB2701	1-414-921-11	FERRITE	0UH	L2601	1-414-754-11	INDUCTOR	10UH
FB2702	1-414-921-11	FERRITE	0UH	L2602	1-414-754-11	INDUCTOR	10UH
FB2704	1-414-921-11	FERRITE	0UH	L2603	1-414-754-11	INDUCTOR	10UH
FB3001	1-414-760-21	FERRITE	0UH	L2604	1-414-754-11	INDUCTOR	10UH
FB3002	1-400-244-11	FERRITE	0UH	L2605	1-414-754-11	INDUCTOR	10UH
FB3003	1-414-760-21	FERRITE	0UH	L2606	1-469-549-21	INDUCTOR	1UH

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L2607	1-469-549-21	INDUCTOR	1UH	JR3013	1-216-864-11	SHORT CHIP	0
L2651	1-414-754-11	INDUCTOR	10UH	JR3014	1-216-864-11	SHORT CHIP	0
L2652	1-414-754-11	INDUCTOR	10UH	JR3015	1-216-864-11	SHORT CHIP	0
L2701	1-414-754-11	INDUCTOR	10UH				
L2702	1-414-754-11	INDUCTOR	10UH	R1300	1-414-760-21	FERRITE	0UH
				R1301	1-414-760-21	FERRITE	0UH
L2704	1-414-754-11	INDUCTOR	10UH	R1302	1-414-760-21	FERRITE	0UH
L3001	1-409-556-11	INDUCTOR	47UH	R1303	1-414-760-21	FERRITE	0UH
L3004	1-409-556-11	INDUCTOR	47UH	R1304	1-414-760-21	FERRITE	0UH
L3011	1-409-556-11	INDUCTOR	47UH				
L3012	1-409-556-11	INDUCTOR	47UH	R1305	1-414-760-21	FERRITE	0UH
				R1306	1-216-841-11	METAL CHIP	47K 5% 1/10W
L3101	1-412-029-11	INDUCTOR	10UH	R1307	1-216-837-11	METAL CHIP	22K 5% 1/10W
L3201	1-456-583-11	INDUCTOR	0UH	R1308	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
L3202	1-456-583-11	INDUCTOR	0UH	R1309	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
L3203	1-456-583-11	INDUCTOR	0UH				
L3204	1-456-583-11	INDUCTOR	0UH	R1310	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R1311	1-216-817-11	METAL CHIP	470 5% 1/10W
L3205	1-456-583-11	INDUCTOR	0UH	R1312	1-216-845-11	METAL CHIP	100K 5% 1/10W
				R1313	1-218-901-11	METAL CHIP	180K 0.5% 1/10W
				R1314	1-216-849-11	METAL CHIP	220K 5% 1/10W
< TRANSISTOR >							
Q1300	8-729-010-29	TRANSISTOR MSD601-RST1		R1315	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
Q1301	8-729-010-29	TRANSISTOR MSD601-RST1		R1316	1-218-897-11	METAL CHIP	120K 0.5% 1/10W
Q1302	8-729-010-29	TRANSISTOR MSD601-RST1		R1317	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q1303	8-729-010-05	TRANSISTOR MSB709-RT1		R1318	1-216-864-11	SHORT CHIP	0
Q1304	8-729-010-05	TRANSISTOR MSB709-RT1		R1319	1-216-805-11	METAL CHIP	47 5% 1/10W
Q1305	8-729-010-29	TRANSISTOR MSD601-RST1		R1321	1-216-841-11	METAL CHIP	47K 5% 1/10W
Q1306	8-729-010-29	TRANSISTOR MSD601-RST1		R1322	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q2502	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1323	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q2504	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1324	1-216-857-11	METAL CHIP	1M 5% 1/10W
Q2602	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1325	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q2604	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1326	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
Q2606	8-729-027-43	TRANSISTOR DTC114EKA-T146		R1327	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q2702	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1328	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
Q2704	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R1329	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3101	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		R1330	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3102	8-729-027-23	TRANSISTOR DTA114EKA-T146		R1331	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R1334	1-216-864-11	SHORT CHIP	0
				R1336	1-216-797-11	METAL CHIP	10 5% 1/10W
				R1337	1-216-821-11	METAL CHIP	1K 5% 1/10W
				R1338	1-216-821-11	METAL CHIP	1K 5% 1/10W
< RESISTOR >							
JR3000	1-216-864-11	SHORT CHIP	0				
JR3001	1-216-864-11	SHORT CHIP	0				
JR3002	1-216-864-11	SHORT CHIP	0	R1339	1-218-843-11	METAL CHIP	680 0.5% 1/10W
JR3003	1-216-864-11	SHORT CHIP	0	R1344	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR3004	1-216-864-11	SHORT CHIP	0	R1348	1-216-817-11	METAL CHIP	470 5% 1/10W
				R1350	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR3005	1-216-864-11	SHORT CHIP	0	R1352	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
JR3006	1-216-864-11	SHORT CHIP	0				
JR3007	1-216-864-11	SHORT CHIP	0	R1353	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR3008	1-216-864-11	SHORT CHIP	0	R1354	1-216-864-11	SHORT CHIP	0
JR3009	1-216-864-11	SHORT CHIP	0	R1355	1-216-819-11	METAL CHIP	680 5% 1/10W
				R1356	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
JR3010	1-216-864-11	SHORT CHIP	0	R1358	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
JR3011	1-216-864-11	SHORT CHIP	0				
JR3012	1-216-864-11	SHORT CHIP	0	R1359	1-218-871-11	METAL CHIP	10K 0.5% 1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R1361	1-218-898-11	METAL CHIP	130K	0.5%	1/10W	R2538	1-216-804-11	METAL CHIP	39	5%	1/10W
R1363	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2541	1-216-797-11	METAL CHIP	10	5%	1/10W
R1365	1-218-898-11	METAL CHIP	130K	0.5%	1/10W	R2543	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1366	1-218-875-11	METAL CHIP	15K	0.5%	1/10W	R2545	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1367	1-218-895-11	METAL CHIP	100K	0.5%	1/10W	R2548	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R1368	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R2549	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R1369	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R2553	1-216-797-11	METAL CHIP	10	5%	1/10W
R1370	1-216-849-11	METAL CHIP	220K	5%	1/10W	R2601	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1371	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2602	1-216-864-11	SHORT CHIP	0		
R1372	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2603	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1373	1-216-839-11	METAL CHIP	33K	5%	1/10W	R2604	1-216-813-11	METAL CHIP	220	5%	1/10W
R1374	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2605	1-216-864-11	SHORT CHIP	0		
R1387	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2606	1-216-805-11	METAL CHIP	47	5%	1/10W
R1398	1-414-760-21	FERRITE	0UH			R2607	1-216-805-11	METAL CHIP	47	5%	1/10W
R1399	1-414-760-21	FERRITE	0UH			R2608	1-216-864-11	SHORT CHIP	0		
R2059	1-216-864-11	SHORT CHIP	0			R2610	1-216-864-11	SHORT CHIP	0		
R2060	1-216-809-11	METAL CHIP	100	5%	1/10W	R2612	1-216-864-11	SHORT CHIP	0		
R2061	1-216-809-11	METAL CHIP	100	5%	1/10W	R2613	1-216-864-11	SHORT CHIP	0		
R2062	1-216-809-11	METAL CHIP	100	5%	1/10W	R2614	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W
R2063	1-216-864-11	SHORT CHIP	0			R2615	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R2064	1-216-797-11	METAL CHIP	10	5%	1/10W	R2617	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R2065	1-216-797-11	METAL CHIP	10	5%	1/10W	R2618	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R2066	1-216-797-11	METAL CHIP	10	5%	1/10W	R2619	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R2067	1-216-797-11	METAL CHIP	10	5%	1/10W	R2620	1-216-864-11	SHORT CHIP	0		
R2094	1-216-797-11	METAL CHIP	10	5%	1/10W	R2621	1-216-864-11	SHORT CHIP	0		
R2095	1-216-797-11	METAL CHIP	10	5%	1/10W	R2624	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2501	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2625	1-216-864-11	SHORT CHIP	0		
R2502	1-216-864-11	SHORT CHIP	0			R2626	1-216-864-11	SHORT CHIP	0		
R2503	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2627	1-216-864-11	SHORT CHIP	0		
R2504	1-216-813-11	METAL CHIP	220	5%	1/10W	R2630	1-216-864-11	SHORT CHIP	0		
R2505	1-216-805-11	METAL CHIP	47	5%	1/10W	R2631	1-216-864-11	SHORT CHIP	0		
R2506	1-216-805-11	METAL CHIP	47	5%	1/10W	R2632	1-216-864-11	SHORT CHIP	0		
R2507	1-216-864-11	SHORT CHIP	0			R2633	1-216-804-11	METAL CHIP	39	5%	1/10W
R2508	1-216-864-11	SHORT CHIP	0			R2634	1-216-804-11	METAL CHIP	39	5%	1/10W
R2509	1-216-864-11	SHORT CHIP	0			R2635	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R2511	1-216-864-11	SHORT CHIP	0			R2636	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R2512	1-216-864-11	SHORT CHIP	0			R2638	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R2513	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W	R2642	1-216-797-11	METAL CHIP	10	5%	1/10W
R2514	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R2644	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2516	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R2646	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R2517	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R2649	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R2519	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R2650	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R2520	1-216-864-11	SHORT CHIP	0			R2656	1-216-797-11	METAL CHIP	10	5%	1/10W
R2521	1-216-864-11	SHORT CHIP	0			R2665	1-216-864-11	SHORT CHIP	0		
R2523	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2668	1-216-864-11	SHORT CHIP	0		
R2524	1-216-864-11	SHORT CHIP	0			R2674	1-216-864-11	SHORT CHIP	0		
R2525	1-216-864-11	SHORT CHIP	0			R2677	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2526	1-216-864-11	SHORT CHIP	0			R2701	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2529	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R2702	1-216-864-11	SHORT CHIP	0		
R2537	1-216-804-11	METAL CHIP	39	5%	1/10W	R2703	1-216-833-11	METAL CHIP	10K	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R2704	1-216-805-11	METAL CHIP	47	5%	1/10W	R3026	1-216-864-11	SHORT CHIP	0		
R2705	1-216-805-11	METAL CHIP	47	5%	1/10W	R3027	1-216-864-11	SHORT CHIP	0		
R2706	1-216-864-11	SHORT CHIP	0			R3101	1-216-841-11	METAL CHIP	47K	5%	1/10W
R2707	1-216-864-11	SHORT CHIP	0			R3102	1-216-819-11	METAL CHIP	680	5%	1/10W
R2708	1-216-864-11	SHORT CHIP	0			R3104	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2710	1-216-864-11	SHORT CHIP	0			R3106	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2711	1-216-864-11	SHORT CHIP	0			R3107	1-216-805-11	METAL CHIP	47	5%	1/10W
R2712	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W	R3109	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2713	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R3110	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2715	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3111	1-216-805-11	METAL CHIP	47	5%	1/10W
R2716	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R3113	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2717	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R3176	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R2718	1-216-864-11	SHORT CHIP	0			R3200	1-218-668-11	METAL CHIP	100	0.5%	1/10W
R2719	1-216-864-11	SHORT CHIP	0			R3201	1-218-668-11	METAL CHIP	100	0.5%	1/10W
R2722	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3202	1-218-668-11	METAL CHIP	100	0.5%	1/10W
R2723	1-216-864-11	SHORT CHIP	0			R3203	1-216-801-11	METAL CHIP	22	5%	1/10W
R2724	1-216-864-11	SHORT CHIP	0			R3204	1-218-668-11	METAL CHIP	100	0.5%	1/10W
R2725	1-216-864-11	SHORT CHIP	0			R3205	1-218-668-11	METAL CHIP	100	0.5%	1/10W
R2728	1-216-804-11	METAL CHIP	39	5%	1/10W	R3206	1-216-801-11	METAL CHIP	22	5%	1/10W
R2729	1-216-804-11	METAL CHIP	39	5%	1/10W	R3207	1-216-845-11	METAL CHIP	100K	5%	1/10W
R2730	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3208	1-216-805-11	METAL CHIP	47	5%	1/10W
R2731	1-216-801-11	METAL CHIP	22	5%	1/10W	< RESISTOR CHIP >					
R2732	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2013	1-233-796-11	RES, NETWORK			(1608)
R2733	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	RB2501	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2734	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2502	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2735	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2503	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2736	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2553	1-233-782-91	RES, NETWORK	10		(1608)
R2737	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2601	1-233-782-91	RES, NETWORK	10		(1608)
R2738	1-216-864-11	SHORT CHIP	0			RB2602	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2739	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2603	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2740	1-216-797-11	METAL CHIP	10	5%	1/10W	RB2604	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2741	1-216-864-11	SHORT CHIP	0			RB2629	1-233-785-91	RES, NETWORK	100		(1608)
R2742	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	RB2630	1-233-785-91	RES, NETWORK	100		(1608)
R2743	1-216-805-11	METAL CHIP	47	5%	1/10W	RB2631	1-233-785-91	RES, NETWORK	100		(1608)
R2744	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	RB2633	1-234-372-11	RES, NETWORK	100		(1005X4)
R2745	1-216-809-11	METAL CHIP	100	5%	1/10W	RB2634	1-234-372-11	RES, NETWORK	100		(1005X4)
R2746	1-216-809-11	METAL CHIP	100	5%	1/10W	RB2635	1-233-785-91	RES, NETWORK	100		(1608)
R2747	1-216-789-11	METAL CHIP	2.2	5%	1/10W	RB2636	1-234-372-11	RES, NETWORK	100		(1005X4)
R2748	1-216-789-11	METAL CHIP	2.2	5%	1/10W	RB2637	1-234-372-11	RES, NETWORK	100		(1005X4)
R2749	1-216-809-11	METAL CHIP	100	5%	1/10W	RB2640	1-233-785-91	RES, NETWORK	100		(1608)
R2750	1-216-797-11	METAL CHIP	10	5%	1/10W	RB2641	1-234-372-11	RES, NETWORK	100		(1005X4)
R2751	1-216-813-11	METAL CHIP	220	5%	1/10W	RB2642	1-234-372-11	RES, NETWORK	100		(1005X4)
R2752	1-216-809-11	METAL CHIP	100	5%	1/10W	RB2653	1-233-782-91	RES, NETWORK	10		(1608)
R2753	1-216-809-11	METAL CHIP	100	5%	1/10W	RB2701	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2754	1-216-864-11	SHORT CHIP	0			RB2702	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2801	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	RB2703	1-233-574-11	RES, CHIP NETWORK	10		(3216)
R2802	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	RB3102	1-233-784-91	RES, NETWORK	47		(1608)
R2803	1-216-864-11	SHORT CHIP	0			RB3104	1-233-789-11	RES, NETWORK	10K		(1608)
R3017	1-216-864-11	SHORT CHIP	0								
R3019	1-216-864-11	SHORT CHIP	0								

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB3201	1-233-575-11	RES, CHIP NETWORK 22	(3216)	D4303	8-719-069-60	DIODE UDZSTE-179.1B	
RB3202	1-233-575-11	RES, CHIP NETWORK 22	(3216)	D4304	8-719-069-60	DIODE UDZSTE-179.1B	
RB3203	1-233-575-11	RES, CHIP NETWORK 22	(3216)			< SOCKET >	
RB3204	1-233-575-11	RES, CHIP NETWORK 22	(3216)				
RB3205	1-233-575-11	RES, CHIP NETWORK 22	(3216)	J2901	1-750-264-31	JACK	
				J4300	1-580-443-11	JACK, PIN 3P	
RB3206	1-233-796-11	RES, NETWORK	(1608)			< RESISTOR >	
RB3207	1-233-796-11	RES, NETWORK	(1608)				
RB3208	1-233-796-11	RES, NETWORK	(1608)				
RB3209	1-233-575-11	RES, CHIP NETWORK 22	(3216)	R2901	1-220-259-11	METAL CHIP 150 5%	1/4W
TP2012	1-535-757-11	CHIP, CHECKER		R2902	1-220-259-11	METAL CHIP 150 5%	1/4W
				R2903	1-220-259-11	METAL CHIP 150 5%	1/4W
TP2013	1-535-757-11	CHIP, CHECKER		R2904	1-220-259-11	METAL CHIP 150 5%	1/4W
TP2014	1-535-757-11	CHIP, CHECKER		R4301	1-216-864-11	SHORT CHIP 0	
TP2015	1-535-757-11	CHIP, CHECKER					
TP2016	1-535-757-11	CHIP, CHECKER		R4302	1-216-811-11	METAL CHIP 150 5%	1/10W
TP2017	1-535-757-11	CHIP, CHECKER		R4303	1-218-285-11	METAL CHIP 75 5%	1/10W
				R4304	1-216-821-11	METAL CHIP 1K 5%	1/10W
TP2018	1-535-757-11	CHIP, CHECKER		R4305	1-216-811-11	METAL CHIP 150 5%	1/10W
TP2019	1-535-757-11	CHIP, CHECKER		R4306	1-216-821-11	METAL CHIP 1K 5%	1/10W
TP2020	1-535-757-11	CHIP, CHECKER					
TP2021	1-535-757-11	CHIP, CHECKER		R4307	1-216-864-11	SHORT CHIP 0	
TP2024	1-535-757-11	CHIP, CHECKER		R4308	1-216-864-11	SHORT CHIP 0	
				R4309	1-216-853-11	METAL CHIP 470K 5%	1/10W
TP2025	1-535-757-11	CHIP, CHECKER		R4310	1-216-809-11	METAL CHIP 100 5%	1/10W
				R4311	1-216-864-11	SHORT CHIP 0	
				R4312	1-216-853-11	METAL CHIP 470K 5%	1/10W
*A-1192-356-A H3 Board, Complete						< VARISTOR >	
		< CAPACITOR >		VD4301	1-803-974-21	VARISTOR, CHIP	(1608)
C2902	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	VD4302	1-803-974-21	VARISTOR, CHIP	(1608)
C2903	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C2904	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C2905	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C2930	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C2931	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C4301	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V				
C4302	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V				
C4303	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V				
C4304	1-164-505-11	CERAMIC CHIP 2.2UF	16V				
C4305	1-164-505-11	CERAMIC CHIP 2.2UF	16V				
C4306	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C4307	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V				
C4308	1-165-908-11	CERAMIC CHIP 1UF	10% 10V				
C4309	1-165-908-11	CERAMIC CHIP 1UF	10% 10V				
		< CONNECTOR >					
CN4303	*1-564-512-11	PLUG, CONNECTOR 9P					
CN4304	1-565-666-12	TERMINAL, S 4P					
CN9856	*1-816-976-51	PLUG, CONNECTOR 5P					
CN9857	*1-564-507-11	PLUG, CONNECTOR 4P					
		< DIODE >					
D4301	8-719-977-28	DIODE DTZ10B					
D4302	8-719-977-28	DIODE DTZ10B					

***A-1192-366-A J Board, Complete**

< CAPACITOR >

C1000	1-126-947-11	ELECT 47UF	20.00% 35V
C1001	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1100	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C1102	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V
C1103	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V
C1104	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1105	1-126-968-11	ELECT 100UF	20.00% 50V
C1106	1-126-916-11	ELECT 1000UF	20.00% 6.3V
C1107	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1108	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1200	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1202	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C1203	1-104-662-91	ELECT 22UF	20.00% 25V
C1204	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C1205	1-164-392-11	CERAMIC CHIP 390PF	5.00% 50V
C1206	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C1207	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C1208	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	< CONNECTOR >			
C1209	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	CN1000	1-564-508-11	PLUG, CONNECTOR 5P	
C1210	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	CN1101	1-695-915-11	TAB (CONTACT)	
C1211	1-131-664-91	CERAMIC CHIP 0.15UF	10% 10V	CN2021	*1-417-602-11	SOCKET 21PIN	
C1213	1-165-176-11	CERAMIC CHIP 0.047UF	10.00% 16V	CN2022	1-819-390-51	FFC/FPC CONNECTOR (ZIF) 49P	
C1216	1-162-919-11	CERAMIC CHIP 22PF	5.00% 50V	CN2023	*1-417-602-11	SOCKET 21PIN	
C1218	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	CN2024	1-778-648-52	CONNECTOR, FFC (ZIF) 20P	
C1219	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V	CN2025	1-816-979-51	PLUG, CONNECTOR 8P	
C1220	1-162-928-11	CERAMIC CHIP 120PF	5.00% 50V	CN6500	1-695-915-11	TAB (CONTACT)	
C1221	1-164-388-91	CERAMIC CHIP 270PF	5.00% 50V	< DIODE >			
C1222	1-162-915-11	CERAMIC CHIP 10PF	0.50PF 50V	D1100	8-719-069-55	DIODE UDZSTE-175.6B	
C1223	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D1102	8-719-069-55	DIODE UDZSTE-175.6B	
C1226	1-162-961-11	CERAMIC CHIP 330PF	10.00% 50V	D1107	8-719-069-55	DIODE UDZSTE-175.6B	
C1227	1-126-933-11	ELECT 100UF	20.00% 16V	D1108	8-719-069-55	DIODE UDZSTE-175.6B	
C2000	1-126-933-11	ELECT 100UF	20.00% 16V	D1200	8-719-050-38	DIODE M1MA152WK-T1	
C2025	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	D2021	8-719-083-82	DIODE UDZS-TE17-12B	
C2026	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2022	8-719-083-82	DIODE UDZS-TE17-12B	
C2027	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	D2023	8-719-083-82	DIODE UDZS-TE17-12B	
C2028	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2024	8-719-083-82	DIODE UDZS-TE17-12B	
C2043	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2025	8-719-083-63	DIODE UDZSTE-1713B	
C2044	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2026	8-719-069-60	DIODE UDZSTE-179.1B	
C2048	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D2027	8-719-069-60	DIODE UDZSTE-179.1B	
C2049	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D2028	8-719-069-60	DIODE UDZSTE-179.1B	
C2053	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2029	8-719-069-55	DIODE UDZSTE-175.6B	
C2054	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2030	8-719-069-60	DIODE UDZSTE-179.1B	
C2055	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2031	8-719-069-60	DIODE UDZSTE-179.1B	
C2056	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2037	8-719-069-60	DIODE UDZSTE-179.1B	
C2057	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2038	8-719-069-60	DIODE UDZSTE-179.1B	
C2058	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2039	8-719-069-60	DIODE UDZSTE-179.1B	
C2059	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2040	8-719-069-60	DIODE UDZSTE-179.1B	
C2060	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2041	8-719-069-60	DIODE UDZSTE-179.1B	
C2065	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	D2042	8-719-069-60	DIODE UDZSTE-179.1B	
C2066	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2043	8-719-069-60	DIODE UDZSTE-179.1B	
C2067	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	D2044	8-719-069-60	DIODE UDZSTE-179.1B	
C2068	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2045	8-719-083-63	DIODE UDZSTE-1713B	
C2069	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2046	8-719-069-60	DIODE UDZSTE-179.1B	
C2070	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2047	8-719-069-60	DIODE UDZSTE-179.1B	
C2071	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D2048	8-719-069-60	DIODE UDZSTE-179.1B	
C2072	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D2049	8-719-069-55	DIODE UDZSTE-175.6B	
C2073	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2050	8-719-069-60	DIODE UDZSTE-179.1B	
C2074	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D2052	8-719-083-63	DIODE UDZSTE-1713B	
C2079	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2058	8-719-069-60	DIODE UDZSTE-179.1B	
C2080	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D2059	8-719-069-60	DIODE UDZSTE-179.1B	
C2081	1-164-156-11	CERAMIC CHIP 0.1UF	25V	D2061	8-719-069-60	DIODE UDZSTE-179.1B	
C2084	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D2062	8-719-069-60	DIODE UDZSTE-179.1B	
C2085	1-117-370-11	CERAMIC CHIP 10UF	10V	D2063	8-719-069-60	DIODE UDZSTE-179.1B	
C2086	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D2064	8-719-069-60	DIODE UDZSTE-179.1B	
C2087	1-117-370-11	CERAMIC CHIP 10UF	10V	D2065	8-719-069-55	DIODE UDZSTE-175.6B	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D2066	8-719-069-55	DIODE UDZSTE-175.6B		< RESISTOR >			
D2067	8-719-069-55	DIODE UDZSTE-175.6B		R1001	1-216-864-11	SHORT CHIP	0
D2068	8-719-069-60	DIODE UDZSTE-179.1B		R1002	1-216-809-11	METAL CHIP	100 5% 1/10W
D2069	8-719-069-55	DIODE UDZSTE-175.6B		R1003	1-216-864-11	SHORT CHIP	0
D2070	8-719-069-55	DIODE UDZSTE-175.6B		R1004	1-216-809-11	METAL CHIP	100 5% 1/10W
D2071	8-719-069-55	DIODE UDZSTE-175.6B		R1006	1-216-809-11	METAL CHIP	100 5% 1/10W
< FERRITE BEAD >				R1007	1-216-864-11	SHORT CHIP	0
FB1100	1-469-185-11	FERRITE	0UH	R1008	1-216-809-11	METAL CHIP	100 5% 1/10W
FB1101	1-469-185-11	FERRITE	0UH	R1009	1-216-809-11	METAL CHIP	100 5% 1/10W
< IC >				R1048	1-216-864-11	SHORT CHIP	0
IC1000	6-704-465-01	IC MC74LVX8053DTR2		R1049	1-216-864-11	SHORT CHIP	0
IC1200	6-704-747-01	IC TDA9886TS/V4,118		R1050	1-216-864-11	SHORT CHIP	0
IC2000	8-759-385-76	IC MC14052 BDR2		R1010	1-216-864-11	SHORT CHIP	0
< SOCKET >				R1101	1-216-864-11	SHORT CHIP	0
J2021	1-819-327-11	PHONO JACK 2P		R1102	1-216-049-11	RES-CHIP	1K 5% 1/10W
J2022	1-819-327-11	PHONO JACK 2P		R1201	1-216-835-11	METAL CHIP	15K 5% 1/10W
J2023	1-820-021-11	JACK		R1202	1-216-821-11	METAL CHIP	1K 5% 1/10W
J2024	1-819-354-11	PHONO JACK 5P		R1203	1-216-837-11	METAL CHIP	22K 5% 1/10W
< COIL >				R1204	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
L1000	1-414-934-21	INDUCTOR	10UH	R1206	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
L1100	1-412-987-31	INDUCTOR	4.7UH	R1207	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
L1101	1-412-987-31	INDUCTOR	4.7UH	R1208	1-216-864-11	SHORT CHIP	0
L1102	1-414-580-21	INDUCTOR	100NH	R1210	1-216-817-11	METAL CHIP	470 5% 1/10W
L1103	1-414-580-21	INDUCTOR	100NH	R1212	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
L1104	1-414-580-21	INDUCTOR	100NH	R1213	1-216-811-11	METAL CHIP	150 5% 1/10W
L1105	1-414-580-21	INDUCTOR	100NH	R1214	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
L1107	1-414-934-21	INDUCTOR	10UH	R1215	1-216-817-11	METAL CHIP	470 5% 1/10W
L1200	1-414-934-21	INDUCTOR	10UH	R1216	1-216-834-11	METAL CHIP	12K 5% 1/10W
L1201	1-410-993-42	INDUCTOR	1UH	R1217	1-216-864-11	SHORT CHIP	0
L1223	1-410-509-11	INDUCTOR	10UH	R1218	1-216-809-11	METAL CHIP	100 5% 1/10W
L2000	1-414-934-21	INDUCTOR	10UH	R1219	1-216-864-11	SHORT CHIP	0
< TRANSISTOR >				R1220	1-216-809-11	METAL CHIP	100 5% 1/10W
Q1200	8-729-010-29	TRANSISTOR MSD601-RST1		R1221	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q1201	8-729-421-19	TRANSISTOR UN2213		R1222	1-216-813-11	METAL CHIP	220 5% 1/10W
Q1202	8-729-421-19	TRANSISTOR UN2213		R1223	1-216-824-11	METAL CHIP	1.8K 5% 1/10W
Q1203	8-729-422-33	TRANSISTOR 2SD601A-Q-TX		R1224	1-216-809-11	METAL CHIP	100 5% 1/10W
Q1204	8-729-421-19	TRANSISTOR UN2213		R1225	1-216-864-11	SHORT CHIP	0
Q1205	8-729-010-05	TRANSISTOR MSB709-RT1		R1226	1-216-819-11	METAL CHIP	680 5% 1/10W
Q2000	8-729-010-29	TRANSISTOR MSD601-RST1		R1228	1-216-864-11	SHORT CHIP	0
Q2001	8-729-010-29	TRANSISTOR MSD601-RST1		R1229	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
Q2002	8-729-010-05	TRANSISTOR MSB709-RT1		R1230	1-216-822-11	METAL CHIP	1.2K 5% 1/10W
Q2003	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R1232	1-216-807-11	METAL CHIP	68 5% 1/10W
Q2004	8-729-010-05	TRANSISTOR MSB709-RT1		R1233	1-216-807-11	METAL CHIP	68 5% 1/10W
Q2005	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R1234	1-216-814-11	METAL CHIP	270 5% 1/10W
				R1235	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
				R1237	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R1238	1-216-864-11	SHORT CHIP	0
				R1239	1-216-812-11	METAL CHIP	180 5% 1/10W
				R1240	1-216-801-11	METAL CHIP	22 5% 1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R1241	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2043	1-216-864-11	SHORT CHIP	0		
R1251	1-216-864-11	SHORT CHIP	0			R2044	1-216-864-11	SHORT CHIP	0		
R1252	1-216-864-11	SHORT CHIP	0			R2045	1-216-864-11	SHORT CHIP	0		
R1301	1-216-864-11	SHORT CHIP	0			R2046	1-216-864-11	SHORT CHIP	0		
R1302	1-216-864-11	SHORT CHIP	0			R2047	1-216-864-11	SHORT CHIP	0		
R1305	1-216-864-11	SHORT CHIP	0			R2048	1-216-864-11	SHORT CHIP	0		
R1306	1-216-864-11	SHORT CHIP	0			R2049	1-216-864-11	SHORT CHIP	0		
R1307	1-216-864-11	SHORT CHIP	0			R2050	1-216-864-11	SHORT CHIP	0		
R1308	1-216-864-11	SHORT CHIP	0			R2051	1-216-864-11	SHORT CHIP	0		
R2000	1-216-809-11	METAL CHIP	100	5%	1/10W	R2052	1-216-864-11	SHORT CHIP	0		
R2001	1-216-809-11	METAL CHIP	100	5%	1/10W	R2053	1-216-864-11	SHORT CHIP	0		
R2002	1-216-809-11	METAL CHIP	100	5%	1/10W	R2054	1-216-864-11	SHORT CHIP	0		
R2003	1-216-809-11	METAL CHIP	100	5%	1/10W	R2055	1-216-864-11	SHORT CHIP	0		
R2004	1-216-864-11	SHORT CHIP	0			R2056	1-216-864-11	SHORT CHIP	0		
R2005	1-216-864-11	SHORT CHIP	0			R2057	1-216-864-11	SHORT CHIP	0		
R2006	1-216-809-11	METAL CHIP	100	5%	1/10W	R2058	1-216-864-11	SHORT CHIP	0		
R2007	1-216-864-11	SHORT CHIP	0			R2059	1-216-864-11	SHORT CHIP	0		
R2008	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R2060	1-216-864-11	SHORT CHIP	0		
R2009	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R2061	1-216-864-11	SHORT CHIP	0		
R2010	1-216-809-11	METAL CHIP	100	5%	1/10W	R2062	1-216-864-11	SHORT CHIP	0		
R2011	1-216-809-11	METAL CHIP	100	5%	1/10W	R2063	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2012	1-216-809-11	METAL CHIP	100	5%	1/10W	R2064	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2013	1-216-809-11	METAL CHIP	100	5%	1/10W	R2065	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2014	1-216-809-11	METAL CHIP	100	5%	1/10W	R2066	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2015	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2067	1-216-025-11	RES-CHIP	100	5%	1/10W
R2016	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2068	1-216-033-00	RES-CHIP	220	5%	1/10W
R2017	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2069	1-216-025-11	RES-CHIP	100	5%	1/10W
R2018	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2070	1-216-025-11	RES-CHIP	100	5%	1/10W
R2019	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2071	1-216-025-11	RES-CHIP	100	5%	1/10W
R2020	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2072	1-216-022-00	RES-CHIP	75	5%	1/10W
R2022	1-216-815-11	METAL CHIP	330	5%	1/10W	R2073	1-216-025-11	RES-CHIP	100	5%	1/10W
R2023	1-216-049-11	RES-CHIP	1K	5%	1/10W	R2074	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2024	1-216-815-11	METAL CHIP	330	5%	1/10W	R2075	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2025	1-216-049-11	RES-CHIP	1K	5%	1/10W	R2076	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2026	1-216-022-00	RES-CHIP	75	5%	1/10W	R2077	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2028	1-216-022-00	RES-CHIP	75	5%	1/10W	R2078	1-216-864-11	SHORT CHIP	0		
R2029	1-216-022-00	RES-CHIP	75	5%	1/10W	R2079	1-216-864-11	SHORT CHIP	0		
R2030	1-216-022-00	RES-CHIP	75	5%	1/10W	R2080	1-216-864-11	SHORT CHIP	0		
R2031	1-216-022-00	RES-CHIP	75	5%	1/10W	R2081	1-216-864-11	SHORT CHIP	0		
R2032	1-216-815-11	METAL CHIP	330	5%	1/10W	R2083	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2033	1-216-815-11	METAL CHIP	330	5%	1/10W	R2084	1-216-853-11	METAL CHIP	470K	5%	1/10W
R2034	1-216-813-11	METAL CHIP	220	5%	1/10W	R2085	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2035	1-216-864-11	SHORT CHIP	0			R2086	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2036	1-216-813-11	METAL CHIP	220	5%	1/10W	R2087	1-216-022-00	RES-CHIP	75	5%	1/10W
R2037	1-216-864-11	SHORT CHIP	0			R2088	1-216-022-00	RES-CHIP	75	5%	1/10W
R2038	1-216-864-11	SHORT CHIP	0			R2089	1-216-022-00	RES-CHIP	75	5%	1/10W
R2039	1-216-864-11	SHORT CHIP	0			R2090	1-216-022-00	RES-CHIP	75	5%	1/10W
R2040	1-216-864-11	SHORT CHIP	0			R2091	1-216-022-00	RES-CHIP	75	5%	1/10W
R2041	1-216-864-11	SHORT CHIP	0			R2092	1-216-815-11	METAL CHIP	330	5%	1/10W
R2042	1-216-864-11	SHORT CHIP	0			R2093	1-216-049-11	RES-CHIP	1K	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK
R2094	1-216-815-11	METAL CHIP	330	5%	1/10W	< FILTER >			
R2095	1-216-049-11	RES-CHIP	1K	5%	1/10W	SW1200	1-795-617-11	SAW FILTER	
R2097	1-216-864-11	SHORT CHIP	0			SW1201	1-767-083-11	FILTER, SURFACE WAVE	
R2098	1-216-864-11	SHORT CHIP	0			< TUNER >			
R2099	1-216-864-11	SHORT CHIP	0			TU1300	8-597-585-00	TUNER, FSS BTP-HC401	
R2100	1-216-864-11	SHORT CHIP	0			< CRYSTAL >			
R2101	1-216-853-11	METAL CHIP	470K	5%	1/10W	X1200	1-767-704-11	VIBRATOR, CRYSTAL	
R2102	1-216-853-11	METAL CHIP	470K	5%	1/10W	*A-1192-367-A X Board, Complete			
R2103	1-216-853-11	METAL CHIP	470K	5%	1/10W	< CONNECTOR >			
R2104	1-216-853-11	METAL CHIP	470K	5%	1/10W	CN5800	*1-818-483-52	FFC/FPC CONNECTOR (ZIF) 80P	
R2105	1-216-025-11	RES-CHIP	100	5%	1/10W	CN5801	*1-793-769-21	CONNECTOR, CARD (PCMCIA CARD)	
R2106	1-216-033-00	RES-CHIP	220	5%	1/10W	< RESISTOR >			
R2107	1-216-025-11	RES-CHIP	100	5%	1/10W	R5800	1-218-990-81	SHORT CHIP	0
R2108	1-216-025-11	RES-CHIP	100	5%	1/10W	R5801	1-218-990-81	SHORT CHIP	0
R2109	1-216-025-11	RES-CHIP	100	5%	1/10W	R5802	1-218-990-81	SHORT CHIP	0
R2110	1-216-022-00	RES-CHIP	75	5%	1/10W	R5803	1-218-990-81	SHORT CHIP	0
R2111	1-216-025-11	RES-CHIP	100	5%	1/10W	R5804	1-218-990-81	SHORT CHIP	0
R2112	1-216-809-11	METAL CHIP	100	5%	1/10W	R5805	1-218-990-81	SHORT CHIP	0
R2113	1-216-809-11	METAL CHIP	100	5%	1/10W	R5806	1-218-990-81	SHORT CHIP	0
R2114	1-216-809-11	METAL CHIP	100	5%	1/10W	R5807	1-218-990-81	SHORT CHIP	0
R2115	1-216-853-11	METAL CHIP	470K	5%	1/10W	R5808	1-218-990-81	SHORT CHIP	0
R2116	1-216-853-11	METAL CHIP	470K	5%	1/10W	R5809	1-218-990-81	SHORT CHIP	0
R2117	1-216-864-11	SHORT CHIP	0			R5810	1-218-990-81	SHORT CHIP	0
R2118	1-216-864-11	SHORT CHIP	0			R5811	1-218-990-81	SHORT CHIP	0
R2119	1-216-029-00	RES-CHIP	150	5%	1/10W	R5812	1-218-990-81	SHORT CHIP	0
R2120	1-216-029-00	RES-CHIP	150	5%	1/10W	R5813	1-218-990-81	SHORT CHIP	0
R2121	1-216-029-00	RES-CHIP	150	5%	1/10W	R5814	1-218-990-81	SHORT CHIP	0
R2122	1-216-025-11	RES-CHIP	100	5%	1/10W	R5815	1-218-990-81	SHORT CHIP	0
R2123	1-216-049-11	RES-CHIP	1K	5%	1/10W	R5816	1-218-990-81	SHORT CHIP	0
R2124	1-216-029-00	RES-CHIP	150	5%	1/10W	R5817	1-218-990-81	SHORT CHIP	0
R2125	1-216-029-00	RES-CHIP	150	5%	1/10W	R5818	1-218-990-81	SHORT CHIP	0
R2126	1-216-029-00	RES-CHIP	150	5%	1/10W	R5819	1-218-990-81	SHORT CHIP	0
R2127	1-216-049-11	RES-CHIP	1K	5%	1/10W	R5820	1-218-990-81	SHORT CHIP	0
R2129	1-216-864-11	SHORT CHIP	0			R5821	1-218-990-81	SHORT CHIP	0
R2132	1-216-864-11	SHORT CHIP	0			R5822	1-218-990-81	SHORT CHIP	0
R2134	1-216-840-11	METAL CHIP	39K	5%	1/10W	R5823	1-218-990-81	SHORT CHIP	0
R2135	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5824	1-218-990-81	SHORT CHIP	0
R2136	1-216-811-11	METAL CHIP	150	5%	1/10W	R5825	1-218-990-81	SHORT CHIP	0
R2137	1-216-817-11	METAL CHIP	470	5%	1/10W	R5826	1-218-990-81	SHORT CHIP	0
R2138	1-216-811-11	METAL CHIP	150	5%	1/10W	R5827	1-218-990-81	SHORT CHIP	0
R2139	1-216-811-11	METAL CHIP	150	5%	1/10W	R5828	1-218-990-81	SHORT CHIP	0
R2140	1-216-817-11	METAL CHIP	470	5%	1/10W	R5829	1-218-990-81	SHORT CHIP	0
R2141	1-216-811-11	METAL CHIP	150	5%	1/10W	R5830	1-218-990-81	SHORT CHIP	0
R2142	1-216-840-11	METAL CHIP	39K	5%	1/10W				
R2143	1-216-833-11	METAL CHIP	10K	5%	1/10W				
R2145	1-216-864-11	SHORT CHIP	0						
R2147	1-216-864-11	SHORT CHIP	0						

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R5831	1-218-990-81	SHORT CHIP	0	C3011	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5832	1-218-990-81	SHORT CHIP	0	C3012	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5833	1-218-990-81	SHORT CHIP	0	C3013	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5834	1-218-990-81	SHORT CHIP	0	C3014	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5835	1-218-990-81	SHORT CHIP	0	C3015	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5836	1-218-990-81	SHORT CHIP	0	C3016	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5837	1-218-990-81	SHORT CHIP	0	C3017	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V
R5838	1-218-990-81	SHORT CHIP	0	C3018	1-164-156-11	CERAMIC CHIP 0.1UF	25V
R5839	1-218-990-81	SHORT CHIP	0	C3019	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5840	1-218-990-81	SHORT CHIP	0	C3020	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5841	1-218-990-81	SHORT CHIP	0	C3021	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5842	1-218-990-81	SHORT CHIP	0	C3022	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5843	1-218-990-81	SHORT CHIP	0	C3023	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5844	1-218-990-81	SHORT CHIP	0	C3024	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5845	1-218-990-81	SHORT CHIP	0	C3025	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5846	1-218-990-81	SHORT CHIP	0	C3026	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5847	1-218-990-81	SHORT CHIP	0	C3027	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5848	1-218-990-81	SHORT CHIP	0	C3028	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5849	1-218-990-81	SHORT CHIP	0	C3029	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5850	1-218-990-81	SHORT CHIP	0	C3030	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5851	1-218-990-81	SHORT CHIP	0	C3031	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5852	1-218-990-81	SHORT CHIP	0	C3032	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5853	1-218-990-81	SHORT CHIP	0	C3033	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5854	1-218-990-81	SHORT CHIP	0	C3035	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5855	1-218-990-81	SHORT CHIP	0	C3040	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5856	1-218-990-81	SHORT CHIP	0	C3041	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
R5857	1-218-990-81	SHORT CHIP	0	C3042	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5858	1-218-990-81	SHORT CHIP	0	C3043	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
R5859	1-218-990-81	SHORT CHIP	0	C3044	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
R5860	1-218-990-81	SHORT CHIP	0	C3045	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5861	1-218-990-81	SHORT CHIP	0	C3048	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R5862	1-218-990-81	SHORT CHIP	0	C3049	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R5863	1-218-990-81	SHORT CHIP	0	C3050	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5864	1-218-990-81	SHORT CHIP	0	C3051	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
R5865	1-218-990-81	SHORT CHIP	0	C3052	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R5866	1-218-990-81	SHORT CHIP	0	C3053	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
R5867	1-218-990-81	SHORT CHIP	0	C3054	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
R5868	1-218-990-81	SHORT CHIP	0	C3055	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
*A-1192-813-A TBD Board, Complete				C3056	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V
< CAPACITOR >				C3057	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3001	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3058	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3002	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3059	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3003	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3060	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3004	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3063	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3005	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3070	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3007	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C3071	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3008	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C3072	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C3010	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C3073	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
				C3074	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
				C3075	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3076	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V	C4222	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C3078	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4223	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C3080	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C4224	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C3081	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V	C4225	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3082	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C4226	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C3083	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C4227	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C3085	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C4228	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3086	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C4229	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3089	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C4230	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3090	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C4231	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C3092	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	C4232	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3094	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4233	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3095	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4250	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3096	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4251	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3097	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C4252	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3114	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4253	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3115	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C4254	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3116	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	C4255	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3131	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4256	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3200	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C4257	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3201	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C4258	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3300	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C4259	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3301	1-164-388-91	CERAMIC CHIP 270PF	5.00% 50V	C4260	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3302	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C4263	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3303	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C4265	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C3350	1-162-928-11	CERAMIC CHIP 120PF	5.00% 50V	C4270	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C3353	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V	C4271	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C4000	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C5040	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4200	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C5041	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4201	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C5042	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C4202	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C5043	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4203	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C5044	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C4204	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5045	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C4205	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5046	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C4206	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5047	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4207	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5048	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4208	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5049	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4209	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5050	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4210	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5051	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4211	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5052	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4212	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5054	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4213	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5055	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4214	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5056	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4215	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5057	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C4216	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5058	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4217	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5059	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4218	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5060	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4219	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5061	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C4220	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5062	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C4221	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5063	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5064	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5690	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5065	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5691	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5066	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5692	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5067	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C5693	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5068	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5695	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5069	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5696	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5070	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5697	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5071	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5698	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5072	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5699	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5073	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5700	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5630	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	C5701	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5631	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	C5702	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5632	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5703	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C5633	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5750	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5634	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5751	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5635	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5752	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5636	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5753	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5637	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5754	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5638	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5755	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5646	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C5756	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5650	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5757	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5651	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5758	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5652	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5759	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5653	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5760	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5654	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5761	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C5655	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5762	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5656	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5763	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5660	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C5764	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5661	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C5765	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5662	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C5766	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5663	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	C5767	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5664	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5780	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5665	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5781	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5666	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	C5782	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C5667	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5783	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
C5668	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5785	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V
C5669	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5786	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V
C5670	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C5787	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5671	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5789	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V
C5672	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5790	1-104-905-11	DOUBLE LAYER 0.22F	5.5V
C5673	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5791	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
C5674	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5792	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C5675	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5793	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5680	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5794	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5682	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C5795	1-165-822-91	CERAMIC CHIP 1UF	25V
C5683	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5796	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5684	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5797	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5685	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5798	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5686	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5799	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C5689	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C5800	1-117-720-11	CERAMIC CHIP 4.7UF	10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5801	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6536	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C5803	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6538	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C5804	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C6539	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C5805	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C6543	1-127-573-11	CERAMIC CHIP 1UF	10% 16V
C5806	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	C6545	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C5807	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C6547	1-127-573-11	CERAMIC CHIP 1UF	10% 16V
C5808	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6549	1-127-573-11	CERAMIC CHIP 1UF	10% 16V
C5809	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6553	1-117-370-11	CERAMIC CHIP 10UF	10V
C5810	1-126-392-11	ELECT CHIP 100UF	20.00% 6.3V	C6554	1-117-370-11	CERAMIC CHIP 10UF	10V
C5811	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C6555	1-117-370-11	CERAMIC CHIP 10UF	10V
C5812	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C6556	1-117-370-11	CERAMIC CHIP 10UF	10V
C5813	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6557	1-117-370-11	CERAMIC CHIP 10UF	10V
C5814	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	C6558	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C5815	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C6559	1-117-370-11	CERAMIC CHIP 10UF	10V
C5816	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6560	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C5840	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	C6561	1-117-370-11	CERAMIC CHIP 10UF	10V
C5841	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C6562	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C5843	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V	C6563	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C5844	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6564	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6300	1-164-489-11	CERAMIC CHIP 0.22UF	10.00% 16V	C6565	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6500	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6566	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6501	1-162-974-11	CERAMIC CHIP 0.01UF	50V	C6567	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6502	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6572	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C6503	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6581	1-109-982-11	CERAMIC CHIP 1UF	10.00% 10V
C6504	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6582	1-107-823-11	CERAMIC CHIP 0.47UF	10.00% 16V
C6505	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6600	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C6506	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6601	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C6507	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6602	1-162-953-11	CERAMIC CHIP 100PF	5.00% 50V
C6508	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6603	1-162-953-11	CERAMIC CHIP 100PF	5.00% 50V
C6509	1-137-894-21	ELECT CHIP 470UF	20% 25V	C6604	1-162-953-11	CERAMIC CHIP 100PF	5.00% 50V
C6510	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C8907	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6511	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C8922	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C6512	1-162-974-11	CERAMIC CHIP 0.01UF	50V	C8923	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6513	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C9060	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6515	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	< CONNECTOR >			
C6516	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	CN3000	*1-766-376-11	PIN, CONNECTOR (1.5MM) (SMD) 9P	
C6517	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	CN3001	*1-818-324-21	CONNECTOR (RECEPTACLE) 14P	
C6518	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	CN3002	1-779-884-11	CONNECTOR 4P	
C6519	1-162-974-11	CERAMIC CHIP 0.01UF	50V	CN3003	1-784-254-11	CONNECTOR 10P	
C6520	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	CN3004	*1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD) 5P	
C6522	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	CN3005	1-819-390-51	FFC/FPC CONNECTOR (ZIF) 49P	
C6523	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	CN3006	1-778-648-52	CONNECTOR, FFC (ZIF) 20P	
C6524	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	CN3007	1-784-254-11	CONNECTOR 10P	
C6525	1-165-671-21	ELECT CHIP 470UF	20% 6.3V	CN3008	1-779-936-51	CONNECTOR, FFC/FPC 18P	
C6526	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	CN4000	*1-817-804-11	CONNECTOR, D SUB 15P	
C6528	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	CN4200	*1-820-208-11	HDMI CONNECTOR	
C6529	1-165-671-21	ELECT CHIP 470UF	20% 6.3V	CN4201	*1-820-208-11	HDMI CONNECTOR	
C6530	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	CN5751	*1-818-483-52	FFC/FPC CONNECTOR (ZIF) 80P	
C6532	1-110-530-11	ELECT CHIP 1000UF	20% 6.3V	CN5883	1-820-209-11	MEMORY STICK CONNECTOR	
C6535	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

TBD

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
CN6500	*1-819-441-11	PWB HEADER, 13P		FB3014	1-414-445-11	FERRITE	0UH
CN6501	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD) 6P		FB3016	1-414-760-21	FERRITE	0UH
CN6502	*1-779-268-21	PIN, CONNECTOR (1.5MM) (SMD) 11P		FB3099	1-414-760-21	FERRITE	0UH
< DIODE >				FB3241	1-414-760-21	FERRITE	0UH
D3004	8-719-050-38	DIODE M1MA152WK-T1		FB3242	1-414-760-21	FERRITE	0UH
D3005	8-719-036-94	DIODE RD5.6SB-T1		FB3243	1-414-760-21	FERRITE	0UH
D3009	8-719-081-97	DIODE MMDL914T1		FB3244	1-414-760-21	FERRITE	0UH
D3010	8-719-081-97	DIODE MMDL914T1		FB3245	1-414-760-21	FERRITE	0UH
D3011	8-719-081-97	DIODE MMDL914T1		FB4003	1-400-141-22	FERRITE	0UH
D3012	8-719-081-97	DIODE MMDL914T1		FB4200	1-414-234-22	FERRITE	0UH
D3015	8-719-081-97	DIODE MMDL914T1		FB4201	1-414-234-22	FERRITE	0UH
D3016	8-719-069-55	DIODE UDZSTE-175.6B		FB5040	1-400-244-11	FERRITE	0UH
D3017	8-719-069-60	DIODE UDZSTE-179.1B		FB5041	1-400-244-11	FERRITE	0UH
D4000	8-719-073-39	DIODE HZU5.6GTRF		FB5612	1-400-833-21	FERRITE	0UH
D4001	8-719-073-39	DIODE HZU5.6GTRF		FB5613	1-400-833-21	FERRITE	0UH
D4002	8-719-073-39	DIODE HZU5.6GTRF		FB5614	1-400-833-21	FERRITE	0UH
D4003	8-719-801-78	DIODE 1SS184		FB5615	1-400-833-21	FERRITE	0UH
D4202	8-719-404-50	DIODE MA111-TX		FB5616	1-400-833-21	FERRITE	0UH
D4203	8-719-404-50	DIODE MA111-TX		FB5617	1-400-833-21	FERRITE	0UH
D4204	8-719-404-50	DIODE MA111-TX		FB5618	1-400-807-21	FERRITE	0UH
D4206	8-719-404-50	DIODE MA111-TX		FB5619	1-400-807-21	FERRITE	0UH
D5780	8-719-041-97	DIODE MA113-(TX)		FB5620	1-400-807-21	FERRITE	0UH
D5840	8-719-066-11	DIODE 1PS184-115		FB5621	1-400-807-21	FERRITE	0UH
D6500	8-719-081-67	DIODE M1FM3		FB5622	1-400-833-21	FERRITE	0UH
D6501	8-719-081-67	DIODE M1FM3		FB5623	1-400-833-21	FERRITE	0UH
D6502	6-500-696-01	DIODE UDZSTE-173.0B		FB5624	1-400-833-21	FERRITE	0UH
D6504	8-719-081-97	DIODE MMDL914T1		FB5630	1-469-869-21	FERRITE	0UH
D6505	8-719-081-97	DIODE MMDL914T1		FB5634	1-400-244-11	FERRITE	0UH
D6506	6-501-336-01	DIODE RSX201L-30TE25		FB5635	1-400-244-11	FERRITE	0UH
D6507	8-719-080-41	DIODE RB063L-30TE25		FB5636	1-469-869-21	FERRITE	0UH
D6508	8-719-081-97	DIODE MMDL914T1		FB5637	1-469-869-21	FERRITE	0UH
D6509	6-500-294-01	DIODE PTZ-TE25-3.9B		FB5640	1-400-834-11	FERRITE	0UH
D6510	6-500-253-01	DIODE RB053L-30TE25		FB5646	1-400-834-11	FERRITE	0UH
D6512	6-500-253-01	DIODE RB053L-30TE25		FB5647	1-469-869-21	FERRITE	0UH
D6513	6-500-294-01	DIODE PTZ-TE25-3.9B		FB5680	1-400-244-11	FERRITE	0UH
D6514	6-500-295-01	DIODE PTZ-TE25-5.6B		FB5681	1-400-244-11	FERRITE	0UH
D6515	8-719-083-63	DIODE UDZSTE-1713B		FB5750	1-469-869-21	FERRITE	0UH
D6516	8-719-081-99	DIODE MM3Z13VT1		FB5751	1-469-869-21	FERRITE	0UH
D6518	8-719-066-10	DIODE 1PS181-115		FB5780	1-400-244-11	FERRITE	0UH
D6519	8-719-081-97	DIODE MMDL914T1		FB5781	1-400-244-11	FERRITE	0UH
D6520	8-719-066-10	DIODE 1PS181-115		FB5782	1-400-244-11	FERRITE	0UH
D6600	8-719-081-97	DIODE MMDL914T1		FB5907	1-400-834-11	FERRITE	0UH
< FUSE >				FB5908	1-400-834-11	FERRITE	0UH
F4000	Δ 1-576-646-11	FUSE	0.5A 50V	FB5909	1-400-834-11	FERRITE	0UH
< FERRITE BEAD >				FB5910	1-400-834-11	FERRITE	0UH
FB3013	1-414-445-11	FERRITE	0UH	FB5911	1-400-834-11	FERRITE	0UH
				FB5912	1-400-834-11	FERRITE	0UH
				FB5913	1-400-834-11	FERRITE	0UH
				FB5914	1-400-834-11	FERRITE	0UH
				FB5915	1-400-834-11	FERRITE	0UH

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB5916	1-400-244-11	FERRITE	0UH	IC6501	6-702-142-01	IC PQ1CY1032ZP	
FB5917	1-400-244-11	FERRITE	0UH	IC6502	6-706-046-01	IC TK11185CSCL-G	
FB6500	1-469-324-21	FERRITE	0UH	IC6503	6-702-142-01	IC PQ1CY1032ZP	
FB6501	1-469-324-21	FERRITE	0UH	IC6505	6-709-932-01	IC MM3141CNRE	
FB6502	1-469-775-21	FERRITE	0UH	IC6600	8-759-648-57	IC PST600IML	
FB6510	1-414-760-21	FERRITE	0UH	< COIL >			
FB6511	1-414-760-21	FERRITE	0UH	L3000	1-456-984-11	INDUCTOR	0UH
FB6512	1-414-760-21	FERRITE	0UH	L3001	1-456-984-11	INDUCTOR	0UH
FB6513	1-469-869-21	FERRITE	0UH	L3002	1-456-984-11	INDUCTOR	0UH
FB6514	1-469-869-21	FERRITE	0UH	L3003	1-456-984-11	INDUCTOR	0UH
FB6515	1-469-869-21	FERRITE	0UH	L3004	1-456-984-11	INDUCTOR	0UH
< IC >				L3350	1-412-990-41	INDUCTOR	8.2UH
IC3000	8-759-082-60	IC TC7S66FU		L4208	1-414-394-11	INDUCTOR	2.2UH
IC3001	6-706-419-01	IC LM393DT (A)		L4212	1-414-394-11	INDUCTOR	2.2UH
IC3002	6-701-173-01	IC MC74LVXT4053DTR2		L4213	1-414-394-11	INDUCTOR	2.2UH
IC3004	6-704-573-01	IC M24C32-WMN6T (B)		L4214	1-414-394-11	INDUCTOR	2.2UH
IC3005	6-703-175-01	IC PST3629UL		L4215	1-414-394-11	INDUCTOR	2.2UH
IC3006	6-806-613-01	IC VCT6973G		L4216	1-414-394-11	INDUCTOR	2.2UH
IC3008	8-752-072-94	IC CXA1875AM-T4		L4217	1-414-394-11	INDUCTOR	2.2UH
IC4000	6-704-600-01	IC M24C02-WMN6T (B)		L4220	*1-813-308-11	INDUCTOR	0UH
IC4200	6-704-001-01	IC BR24L02F-WE2		L4221	*1-813-308-11	INDUCTOR	0UH
IC4201	6-709-806-01	IC IP4776CZ38		L4222	*1-813-308-11	INDUCTOR	0UH
IC4202	6-709-602-01	IC TDA9974AHS/8/C112		L4223	*1-813-308-11	INDUCTOR	0UH
IC4203	6-704-001-01	IC BR24L02F-WE2		L4262	1-414-394-11	INDUCTOR	2.2UH
IC4204	6-709-806-01	IC IP4776CZ38		L4263	1-414-394-11	INDUCTOR	2.2UH
IC5040	8-753-264-52	IC CXD1968R-T6		L5040	1-469-842-21	INDUCTOR	0.47UH
IC5630	6-709-214-01	IC UPD61123F1-100-KA3-A		L5041	1-412-058-11	INDUCTOR	10UH
IC5680	6-705-336-01	IC K9F2808U0C-PCB0T		L5042	1-412-058-11	INDUCTOR	10UH
IC5681	6-707-809-01	IC EDD1216AATA-6B-E		L5043	1-412-058-11	INDUCTOR	10UH
IC5682	6-708-916-01	IC ICS7150MLFT		L5044	1-412-058-11	INDUCTOR	10UH
IC5750	8-759-644-48	IC 74LVC541APW		L5045	1-412-058-11	INDUCTOR	10UH
IC5751	8-759-644-48	IC 74LVC541APW		L5046	1-412-058-11	INDUCTOR	10UH
IC5752	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		L5630	1-414-398-11	INDUCTOR	10UH
IC5753	8-759-644-48	IC 74LVC541APW		L6500	1-416-511-11	INDUCTOR	47UH
IC5754	6-708-132-01	IC 74LVC14APW		L6501	1-416-511-11	INDUCTOR	47UH
IC5755	8-759-644-48	IC 74LVC541APW		L6502	1-457-242-11	INDUCTOR	47UH
IC5756	8-759-644-48	IC 74LVC541APW		L6503	1-414-398-11	INDUCTOR	10UH
IC5757	8-759-644-48	IC 74LVC541APW		L6504	1-424-976-21	INDUCTOR	47UH
IC5758	6-707-853-01	IC TC74LCX541FT (EKJ)		L6505	1-457-242-11	INDUCTOR	47UH
IC5759	8-759-298-91	IC 74LVT245PW-T		L6506	1-424-976-21	INDUCTOR	47UH
IC5780	6-700-108-01	IC RV5C387A-E2-FB		L6508	1-424-922-21	INDUCTOR	10UH
IC5781	6-703-271-01	IC TAR5S50 (TE85R)		L6510	1-416-948-21	INDUCTOR	10UH
IC5782	6-707-808-01	IC WM8727GED/RV		L6512	1-416-511-11	INDUCTOR	47UH
IC5783	8-759-701-40	IC NJM3404AM-T1		L6514	1-412-026-11	INDUCTOR	1UH
IC5784	6-706-106-01	IC NCP1117STAT3		L6515	1-412-026-11	INDUCTOR	1UH
IC5785	6-708-603-01	IC PQ070XNA1ZPH		L6516	1-412-026-11	INDUCTOR	1UH
IC5786	6-705-790-01	IC LM3525MX-H/J5000395		L6517	1-414-394-11	INDUCTOR	2.2UH
IC6500	6-702-142-01	IC PQ1CY1032ZP		L6518	1-412-026-11	INDUCTOR	1UH
				L6519	1-412-026-11	INDUCTOR	1UH

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

TBD

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L6520	1-412-026-11	INDUCTOR	1UH	Q6503	8-729-010-25	TRANSISTOR MSD601-RT1	
L6521	1-412-026-11	INDUCTOR	1UH	Q6504	8-729-421-22	TRANSISTOR UN2211	
L6522	1-412-026-11	INDUCTOR	1UH	Q6505	8-729-010-25	TRANSISTOR MSD601-RT1	
L6523	1-412-026-11	INDUCTOR	1UH	Q6506	8-729-010-25	TRANSISTOR MSD601-RT1	
L6524	1-412-026-11	INDUCTOR	1UH	Q6507	8-729-010-25	TRANSISTOR MSD601-RT1	
L6525	1-412-026-11	INDUCTOR	1UH	Q6508	8-729-010-25	TRANSISTOR MSD601-RT1	
L6526	1-414-394-11	INDUCTOR	2.2UH	Q6509	8-729-046-04	TRANSISTOR FDS6690A	
L6527	1-414-394-11	INDUCTOR	2.2UH	Q6510	8-729-421-22	TRANSISTOR UN2211	
L6528	1-412-026-11	INDUCTOR	1UH	Q6512	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
< PROTECTOR MODULE >				Q6514	8-729-010-05	TRANSISTOR MSB709-RT1	
PS6500	Δ 1-576-736-41	IC LINK	3.15A 24V	Q6516	8-729-010-29	TRANSISTOR MSD601-RST1	
PS6501	Δ 1-576-736-41	IC LINK	3.15A 24V	Q6600	8-729-010-29	TRANSISTOR MSD601-RST1	
PS6502	Δ 1-576-736-41	IC LINK	3.15A 24V	< RESISTOR >			
< TRANSISTOR >				JR5600	1-216-295-91	SHORT CHIP	0
Q3000	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		JR5601	1-218-990-81	SHORT CHIP	0
Q3001	8-729-421-22	TRANSISTOR UN2211		JR5602	1-218-990-81	SHORT CHIP	0
Q3002	8-729-927-99	TRANSISTOR 2SC4617R		R3000	1-216-864-11	SHORT CHIP	0
Q3003	8-729-927-99	TRANSISTOR 2SC4617R		R3001	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3004	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R3002	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
Q3008	8-729-045-62	TRANSISTOR 2SK2158-T2B		R3003	1-216-864-11	SHORT CHIP	0
Q3009	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R3004	1-216-864-11	SHORT CHIP	0
Q3010	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R3006	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3011	8-729-045-62	TRANSISTOR 2SK2158-T2B		R3015	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
Q3012	8-729-422-29	TRANSISTOR 2SD601A-S		R3016	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q3013	8-729-422-29	TRANSISTOR 2SD601A-S		R3019	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3014	8-729-422-29	TRANSISTOR 2SD601A-S		R3020	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q3015	8-729-422-29	TRANSISTOR 2SD601A-S		R3021	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3016	8-729-421-19	TRANSISTOR UN2213		R3022	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3018	8-729-050-10	TRANSISTOR PMBF170-215		R3023	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3300	8-729-010-05	TRANSISTOR MSB709-RT1		R3024	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3301	8-729-421-19	TRANSISTOR UN2213		R3026	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3350	8-729-010-05	TRANSISTOR MSB709-RT1		R3027	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q3351	8-729-010-29	TRANSISTOR MSD601-RST1		R3028	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q4200	8-729-421-22	TRANSISTOR UN2211		R3029	1-216-841-11	METAL CHIP	47K 5% 1/10W
Q4201	8-729-421-22	TRANSISTOR UN2211		R3030	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q4204	8-729-421-22	TRANSISTOR UN2211		R3031	1-216-864-11	SHORT CHIP	0
Q4211	8-729-010-29	TRANSISTOR MSD601-RST1		R3032	1-216-849-11	METAL CHIP	220K 5% 1/10W
Q4212	8-729-010-29	TRANSISTOR MSD601-RST1		R3035	1-216-864-11	SHORT CHIP	0
Q5780	8-729-010-05	TRANSISTOR MSB709-RT1		R3036	1-216-864-11	SHORT CHIP	0
Q5840	8-729-027-43	TRANSISTOR DTC114EKA-T146		R3037	1-216-864-11	SHORT CHIP	0
Q5842	8-729-027-43	TRANSISTOR DTC114EKA-T146		R3038	1-216-864-11	SHORT CHIP	0
Q5920	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R3039	1-216-864-11	SHORT CHIP	0
Q5921	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R3042	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q5922	8-729-028-86	TRANSISTOR DTA143EUA-T106		R3043	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q5923	8-729-907-00	TRANSISTOR DTC114EU		R3046	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q6500	8-729-421-22	TRANSISTOR UN2211		R3048	1-216-864-11	SHORT CHIP	0
Q6501	8-729-421-22	TRANSISTOR UN2211		R3049	1-216-864-11	SHORT CHIP	0
Q6502	8-729-421-22	TRANSISTOR UN2211		R3050	1-216-864-11	SHORT CHIP	0

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3051	1-216-864-11	SHORT CHIP	0			R3116	1-218-823-11	METAL CHIP	100	0.5%	1/10W
R3052	1-216-864-11	SHORT CHIP	0			R3117	1-216-864-11	SHORT CHIP	0		
R3053	1-216-864-11	SHORT CHIP	0			R3119	1-216-864-11	SHORT CHIP	0		
R3054	1-216-864-11	SHORT CHIP	0			R3121	1-216-864-11	SHORT CHIP	0		
R3059	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3124	1-216-864-11	SHORT CHIP	0		
R3061	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R3126	1-216-864-11	SHORT CHIP	0		
R3062	1-216-809-11	METAL CHIP	100	5%	1/10W	R3128	1-216-809-11	METAL CHIP	100	5%	1/10W
R3063	1-216-809-11	METAL CHIP	100	5%	1/10W	R3133	1-216-809-11	METAL CHIP	100	5%	1/10W
R3064	1-216-809-11	METAL CHIP	100	5%	1/10W	R3138	1-216-809-11	METAL CHIP	100	5%	1/10W
R3067	1-216-809-11	METAL CHIP	100	5%	1/10W	R3139	1-216-864-11	SHORT CHIP	0		
R3068	1-216-809-11	METAL CHIP	100	5%	1/10W	R3140	1-216-809-11	METAL CHIP	100	5%	1/10W
R3069	1-216-809-11	METAL CHIP	100	5%	1/10W	R3142	1-216-809-11	METAL CHIP	100	5%	1/10W
R3071	1-216-809-11	METAL CHIP	100	5%	1/10W	R3146	1-216-864-11	SHORT CHIP	0		
R3073	1-216-809-11	METAL CHIP	100	5%	1/10W	R3147	1-216-864-11	SHORT CHIP	0		
R3074	1-216-809-11	METAL CHIP	100	5%	1/10W	R3149	1-216-864-11	SHORT CHIP	0		
R3075	1-216-809-11	METAL CHIP	100	5%	1/10W	R3150	1-216-809-11	METAL CHIP	100	5%	1/10W
R3076	1-216-809-11	METAL CHIP	100	5%	1/10W	R3156	1-216-817-11	METAL CHIP	470	5%	1/10W
R3077	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3159	1-216-817-11	METAL CHIP	470	5%	1/10W
R3078	1-216-809-11	METAL CHIP	100	5%	1/10W	R3163	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3079	1-216-864-11	SHORT CHIP	0			R3175	1-216-864-11	SHORT CHIP	0		
R3080	1-216-864-11	SHORT CHIP	0			R3177	1-216-809-11	METAL CHIP	100	5%	1/10W
R3081	1-216-864-11	SHORT CHIP	0			R3178	1-216-809-11	METAL CHIP	100	5%	1/10W
R3083	1-216-864-11	SHORT CHIP	0			R3180	1-216-809-11	METAL CHIP	100	5%	1/10W
R3084	1-216-864-11	SHORT CHIP	0			R3181	1-216-809-11	METAL CHIP	100	5%	1/10W
R3085	1-216-864-11	SHORT CHIP	0			R3182	1-216-809-11	METAL CHIP	100	5%	1/10W
R3087	1-216-864-11	SHORT CHIP	0			R3183	1-216-809-11	METAL CHIP	100	5%	1/10W
R3088	1-216-864-11	SHORT CHIP	0			R3184	1-216-809-11	METAL CHIP	100	5%	1/10W
R3089	1-216-809-11	METAL CHIP	100	5%	1/10W	R3185	1-216-809-11	METAL CHIP	100	5%	1/10W
R3090	1-216-809-11	METAL CHIP	100	5%	1/10W	R3186	1-216-809-11	METAL CHIP	100	5%	1/10W
R3091	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3187	1-216-809-11	METAL CHIP	100	5%	1/10W
R3092	1-216-864-11	SHORT CHIP	0			R3188	1-216-864-11	SHORT CHIP	0		
R3093	1-216-864-11	SHORT CHIP	0			R3190	1-216-864-11	SHORT CHIP	0		
R3094	1-216-864-11	SHORT CHIP	0			R3191	1-216-864-11	SHORT CHIP	0		
R3095	1-216-864-11	SHORT CHIP	0			R3192	1-216-864-11	SHORT CHIP	0		
R3096	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3193	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3097	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3195	1-216-864-11	SHORT CHIP	0		
R3098	1-216-864-11	SHORT CHIP	0			R3196	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3100	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3198	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R3101	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3200	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3103	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3201	1-216-864-11	SHORT CHIP	0		
R3104	1-216-864-11	SHORT CHIP	0			R3202	1-216-864-11	SHORT CHIP	0		
R3105	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3203	1-216-864-11	SHORT CHIP	0		
R3106	1-218-891-11	METAL CHIP	68K	0.5%	1/10W	R3204	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3107	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3205	1-216-864-11	SHORT CHIP	0		
R3108	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R3209	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3109	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3111	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3213	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R3113	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3215	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R3114	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3216	1-216-864-11	SHORT CHIP	0		
R3115	1-218-823-11	METAL CHIP	100	0.5%	1/10W	R3219	1-216-825-11	METAL CHIP	2.2K	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3220	1-216-864-11	SHORT CHIP	0			R3291	1-216-864-11	SHORT CHIP	0		
R3221	1-216-864-11	SHORT CHIP	0			R3292	1-216-864-11	SHORT CHIP	0		
R3222	1-216-809-11	METAL CHIP	100	5%	1/10W	R3293	1-216-809-11	METAL CHIP	100	5%	1/10W
R3224	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R3299	1-216-813-11	METAL CHIP	220	5%	1/10W
R3225	1-216-864-11	SHORT CHIP	0			R3300	1-216-817-11	METAL CHIP	470	5%	1/10W
R3229	1-216-864-11	SHORT CHIP	0			R3301	1-216-837-11	METAL CHIP	22K	5%	1/10W
R3230	1-216-864-11	SHORT CHIP	0			R3302	1-216-849-11	METAL CHIP	220K	5%	1/10W
R3231	1-216-864-11	SHORT CHIP	0			R3303	1-216-839-11	METAL CHIP	33K	5%	1/10W
R3233	1-216-864-11	SHORT CHIP	0			R3304	1-216-839-11	METAL CHIP	33K	5%	1/10W
R3240	1-216-817-11	METAL CHIP	470	5%	1/10W	R3305	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3246	1-216-864-11	SHORT CHIP	0			R3310	1-216-809-11	METAL CHIP	100	5%	1/10W
R3247	1-216-864-11	SHORT CHIP	0			R3311	1-216-809-11	METAL CHIP	100	5%	1/10W
R3249	1-216-817-11	METAL CHIP	470	5%	1/10W	R3320	1-216-864-11	SHORT CHIP	0		
R3250	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3321	1-216-864-11	SHORT CHIP	0		
R3251	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3350	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3253	1-216-864-11	SHORT CHIP	0			R3351	1-216-805-11	METAL CHIP	47	5%	1/10W
R3254	1-216-864-11	SHORT CHIP	0			R3352	1-216-864-11	SHORT CHIP	0		
R3255	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3355	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3257	1-218-990-81	SHORT CHIP	0			R3356	1-216-864-11	SHORT CHIP	0		
R3259	*1-216-821-11	METAL CHIP	1K	5%	1/10W	R3370	1-216-864-11	SHORT CHIP	0		
R3260	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3371	1-216-864-11	SHORT CHIP	0		
R3262	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R3372	1-216-864-11	SHORT CHIP	0		
R3263	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3373	1-216-864-11	SHORT CHIP	0		
R3264	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3387	1-216-864-11	SHORT CHIP	0		
R3265	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R3388	1-216-864-11	SHORT CHIP	0		
R3266	1-216-817-11	METAL CHIP	470	5%	1/10W	R3389	1-216-864-11	SHORT CHIP	0		
R3267	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3390	1-216-809-11	METAL CHIP	100	5%	1/10W
R3268	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R3392	1-216-809-11	METAL CHIP	100	5%	1/10W
R3269	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3393	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3270	1-216-864-11	SHORT CHIP	0			R3394	1-216-841-11	METAL CHIP	47K	5%	1/10W
R3271	1-216-864-11	SHORT CHIP	0			R3395	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3272	1-216-864-11	SHORT CHIP	0			R3396	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3273	1-216-864-11	SHORT CHIP	0			R3397	1-216-809-11	METAL CHIP	100	5%	1/10W
R3274	1-216-864-11	SHORT CHIP	0			R4000	1-216-805-11	METAL CHIP	47	5%	1/10W
R3275	1-216-864-11	SHORT CHIP	0			R4001	1-216-805-11	METAL CHIP	47	5%	1/10W
R3276	1-216-864-11	SHORT CHIP	0			R4004	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3277	1-216-864-11	SHORT CHIP	0			R4005	1-216-833-11	METAL CHIP	10K	5%	1/10W
R3278	1-216-864-11	SHORT CHIP	0			R4006	1-216-805-11	METAL CHIP	47	5%	1/10W
R3279	1-216-864-11	SHORT CHIP	0			R4007	1-216-805-11	METAL CHIP	47	5%	1/10W
R3280	1-216-864-11	SHORT CHIP	0			R4008	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3281	1-216-864-11	SHORT CHIP	0			R4009	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3282	1-216-864-11	SHORT CHIP	0			R4010	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3283	1-216-864-11	SHORT CHIP	0			R4011	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3284	1-216-864-11	SHORT CHIP	0			R4012	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3285	1-216-864-11	SHORT CHIP	0			R4013	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R3286	1-216-864-11	SHORT CHIP	0			R4014	1-216-821-11	METAL CHIP	1K	5%	1/10W
R3287	1-216-864-11	SHORT CHIP	0			R4015	1-216-864-11	SHORT CHIP	0		
R3288	1-216-864-11	SHORT CHIP	0			R4016	1-216-864-11	SHORT CHIP	0		
R3289	1-216-864-11	SHORT CHIP	0			R4017	1-216-864-11	SHORT CHIP	0		
R3290	1-216-864-11	SHORT CHIP	0			R4018	1-216-864-11	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4019	1-216-864-11	SHORT CHIP	0			R5049	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4020	1-216-845-11	METAL CHIP	100K	5%	1/10W	R5050	1-218-941-81	RES-CHIP	100	5%	1/16W
R4202	1-216-821-11	METAL CHIP	1K	5%	1/10W	R5051	1-218-941-81	RES-CHIP	100	5%	1/16W
R4203	1-216-821-11	METAL CHIP	1K	5%	1/10W	R5053	1-218-937-11	RES-CHIP	47	5%	1/16W
R4204	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5054	1-218-941-81	RES-CHIP	100	5%	1/16W
R4205	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R5055	1-218-941-81	RES-CHIP	100	5%	1/16W
R4206	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R5056	1-216-864-11	SHORT CHIP	0		
R4208	1-216-809-11	METAL CHIP	100	5%	1/10W	R5057	1-218-941-81	RES-CHIP	100	5%	1/16W
R4209	1-216-809-11	METAL CHIP	100	5%	1/10W	R5058	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4210	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R5060	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4211	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R5061	1-218-941-81	RES-CHIP	100	5%	1/16W
R4212	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5062	1-218-941-81	RES-CHIP	100	5%	1/16W
R4214	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5063	1-218-941-81	RES-CHIP	100	5%	1/16W
R4215	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R5064	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4216	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R5625	1-218-990-81	SHORT CHIP	0		
R4217	1-216-809-11	METAL CHIP	100	5%	1/10W	R5626	1-218-990-81	SHORT CHIP	0		
R4218	1-216-809-11	METAL CHIP	100	5%	1/10W	R5629	1-218-990-81	SHORT CHIP	0		
R4219	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5630	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4220	1-216-809-11	METAL CHIP	100	5%	1/10W	R5631	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4221	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R5632	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4222	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R5633	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4232	1-216-809-11	METAL CHIP	100	5%	1/10W	R5634	1-218-941-81	RES-CHIP	100	5%	1/16W
R4235	1-216-809-11	METAL CHIP	100	5%	1/10W	R5635	1-218-941-81	RES-CHIP	100	5%	1/16W
R4236	1-216-809-11	METAL CHIP	100	5%	1/10W	R5636	1-218-941-81	RES-CHIP	100	5%	1/16W
R4237	1-216-809-11	METAL CHIP	100	5%	1/10W	R5637	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4239	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R5638	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4240	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R5639	1-218-941-81	RES-CHIP	100	5%	1/16W
R4241	1-216-809-11	METAL CHIP	100	5%	1/10W	R5640	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4242	1-216-809-11	METAL CHIP	100	5%	1/10W	R5641	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4243	1-216-864-11	SHORT CHIP	0			R5644	1-218-941-81	RES-CHIP	100	5%	1/16W
R4244	1-216-864-11	SHORT CHIP	0			R5645	1-218-941-81	RES-CHIP	100	5%	1/16W
R4245	1-216-839-11	METAL CHIP	33K	5%	1/10W	R5646	1-218-941-81	RES-CHIP	100	5%	1/16W
R4246	1-216-864-11	SHORT CHIP	0			R5647	1-218-941-81	RES-CHIP	100	5%	1/16W
R4248	1-216-864-11	SHORT CHIP	0			R5648	1-218-990-81	SHORT CHIP	0		
R4250	1-216-864-11	SHORT CHIP	0			R5652	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4252	1-216-809-11	METAL CHIP	100	5%	1/10W	R5653	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4253	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5654	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4254	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5655	1-218-937-11	RES-CHIP	47	5%	1/16W
R4255	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5656	1-218-937-11	RES-CHIP	47	5%	1/16W
R4256	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5657	1-218-937-11	RES-CHIP	47	5%	1/16W
R4271	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5661	1-218-937-11	RES-CHIP	47	5%	1/16W
R4272	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5663	1-220-174-11	RES-CHIP	200	5%	1/16W
R4273	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5664	1-220-174-11	RES-CHIP	200	5%	1/16W
R4274	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5665	1-220-174-11	RES-CHIP	200	5%	1/16W
R5040	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5666	1-220-174-11	RES-CHIP	200	5%	1/16W
R5041	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5667	1-220-174-11	RES-CHIP	200	5%	1/16W
R5043	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5668	1-220-174-11	RES-CHIP	200	5%	1/16W
R5044	1-218-941-81	RES-CHIP	100	5%	1/16W	R5669	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R5045	1-218-941-81	RES-CHIP	100	5%	1/16W	R5671	1-208-679-11	METAL CHIP	680	0.5%	1/16W
R5046	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5673	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5674	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R5758	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5676	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5759	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5677	1-218-990-81	SHORT CHIP	0			R5760	1-218-941-81	RES-CHIP	100	5%	1/16W
R5681	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5763	1-218-941-81	RES-CHIP	100	5%	1/16W
R5683	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5764	1-218-941-81	RES-CHIP	100	5%	1/16W
R5684	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5765	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5686	1-218-949-11	RES-CHIP	470	5%	1/16W	R5780	1-216-809-11	METAL CHIP	100	5%	1/10W
R5687	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5781	1-216-809-11	METAL CHIP	100	5%	1/10W
R5689	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5782	1-218-945-11	RES-CHIP	220	5%	1/16W
R5691	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5783	1-216-809-11	METAL CHIP	100	5%	1/10W
R5693	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5784	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5695	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5786	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W
R5697	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5789	1-216-813-11	METAL CHIP	220	5%	1/10W
R5699	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5791	1-218-990-81	SHORT CHIP	0		
R5701	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5792	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5703	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5793	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5706	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5794	1-218-972-11	RES-CHIP	39K	5%	1/16W
R5707	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5795	1-218-972-11	RES-CHIP	39K	5%	1/16W
R5710	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5796	1-218-968-11	RES-CHIP	18K	5%	1/16W
R5712	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5797	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5714	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5798	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5715	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5799	1-218-968-11	RES-CHIP	18K	5%	1/16W
R5717	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5800	1-218-967-11	RES-CHIP	15K	5%	1/16W
R5720	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5801	1-218-967-11	RES-CHIP	15K	5%	1/16W
R5722	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5802	1-218-968-11	RES-CHIP	18K	5%	1/16W
R5723	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5803	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5726	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5804	1-218-968-11	RES-CHIP	18K	5%	1/16W
R5727	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5805	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5729	1-218-939-11	RES-CHIP	68	5%	1/16W	R5806	1-220-174-11	RES-CHIP	200	5%	1/16W
R5730	1-218-941-11	RES-CHIP	100	5%	1/16W	R5807	1-218-941-81	RES-CHIP	100	5%	1/16W
R5731	1-218-941-11	RES-CHIP	100	5%	1/16W	R5808	1-218-941-81	RES-CHIP	100	5%	1/16W
R5732	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5809	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5733	1-218-937-11	RES-CHIP	47	5%	1/16W	R5810	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5734	1-218-939-11	RES-CHIP	68	5%	1/16W	R5811	1-218-935-11	RES-CHIP	33	5%	1/16W
R5735	1-218-941-81	RES-CHIP	100	5%	1/16W	R5812	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5736	1-218-941-81	RES-CHIP	100	5%	1/16W	R5813	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5737	1-218-941-81	RES-CHIP	100	5%	1/16W	R5814	1-218-990-81	SHORT CHIP	0		
R5738	1-218-941-81	RES-CHIP	100	5%	1/16W	R5840	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5739	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5843	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5740	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5845	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5744	1-218-949-11	RES-CHIP	470	5%	1/16W	R5847	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5745	1-218-949-11	RES-CHIP	470	5%	1/16W	R5852	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5750	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5853	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5751	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5857	1-218-941-81	RES-CHIP	100	5%	1/16W
R5752	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5861	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5753	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5862	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5754	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5863	1-218-990-81	SHORT CHIP	0		
R5755	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5864	1-218-990-81	SHORT CHIP	0		
R5756	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5865	1-218-990-81	SHORT CHIP	0		
R5757	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5884	1-218-953-11	RES-CHIP	1K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK
R5885	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5980	1-218-990-81	SHORT CHIP	0
R5886	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5981	1-218-990-81	SHORT CHIP	0
R5887	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5982	1-218-990-81	SHORT CHIP	0
R5888	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5983	1-218-990-81	SHORT CHIP	0
R5889	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5984	1-218-990-81	SHORT CHIP	0
R5890	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5985	1-218-990-81	SHORT CHIP	0
R5891	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5986	1-218-990-81	SHORT CHIP	0
R5892	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5987	1-218-990-81	SHORT CHIP	0
R5893	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5988	1-218-990-81	SHORT CHIP	0
R5895	1-218-941-81	RES-CHIP	100	5%	1/16W	R5989	1-218-990-81	SHORT CHIP	0
R5896	1-218-941-81	RES-CHIP	100	5%	1/16W	R5990	1-218-990-81	SHORT CHIP	0
R5897	1-218-941-81	RES-CHIP	100	5%	1/16W	R5991	1-218-990-81	SHORT CHIP	0
R5902	1-218-941-81	RES-CHIP	100	5%	1/16W	R5992	1-216-864-11	SHORT CHIP	0
R5903	1-218-941-81	RES-CHIP	100	5%	1/16W	R5993	1-216-864-11	SHORT CHIP	0
R5904	1-218-941-81	RES-CHIP	100	5%	1/16W	R5994	1-216-864-11	SHORT CHIP	0
R5905	1-218-941-81	RES-CHIP	100	5%	1/16W	R5995	1-216-864-11	SHORT CHIP	0
R5906	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5996	1-216-864-11	SHORT CHIP	0
R5922	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5997	1-216-864-11	SHORT CHIP	0
R5923	1-216-833-11	METAL CHIP	10K	5%	1/10W	R5998	1-216-864-11	SHORT CHIP	0
R5925	1-216-864-11	SHORT CHIP	0			R5999	1-216-864-11	SHORT CHIP	0
R5927	1-216-864-11	SHORT CHIP	0			R6000	1-216-864-11	SHORT CHIP	0
R5930	1-218-941-81	RES-CHIP	100	5%	1/16W	R6001	1-216-864-11	SHORT CHIP	0
R5950	1-218-990-81	SHORT CHIP	0			R6002	1-216-864-11	SHORT CHIP	0
R5951	1-218-990-81	SHORT CHIP	0			R6003	1-216-864-11	SHORT CHIP	0
R5954	1-218-990-81	SHORT CHIP	0			R6004	1-216-864-11	SHORT CHIP	0
R5955	1-218-990-81	SHORT CHIP	0			R6005	1-216-864-11	SHORT CHIP	0
R5956	1-218-990-81	SHORT CHIP	0			R6006	1-216-864-11	SHORT CHIP	0
R5957	1-218-990-81	SHORT CHIP	0			R6007	1-216-864-11	SHORT CHIP	0
R5958	1-218-990-81	SHORT CHIP	0			R6008	1-216-864-11	SHORT CHIP	0
R5959	1-218-990-81	SHORT CHIP	0			R6009	1-216-864-11	SHORT CHIP	0
R5960	1-216-864-11	SHORT CHIP	0			R6010	1-216-864-11	SHORT CHIP	0
R5961	1-216-864-11	SHORT CHIP	0			R6011	1-216-864-11	SHORT CHIP	0
R5962	1-216-864-11	SHORT CHIP	0			R6012	1-216-864-11	SHORT CHIP	0
R5963	1-216-864-11	SHORT CHIP	0			R6013	1-216-864-11	SHORT CHIP	0
R5964	1-216-864-11	SHORT CHIP	0			R6014	1-216-864-11	SHORT CHIP	0
R5965	1-218-990-81	SHORT CHIP	0			R6015	1-216-864-11	SHORT CHIP	0
R5966	1-218-990-81	SHORT CHIP	0			R6016	1-216-864-11	SHORT CHIP	0
R5967	1-218-990-81	SHORT CHIP	0			R6017	1-216-864-11	SHORT CHIP	0
R5968	1-218-990-81	SHORT CHIP	0			R6018	1-216-864-11	SHORT CHIP	0
R5969	1-218-990-81	SHORT CHIP	0			R6019	1-216-864-11	SHORT CHIP	0
R5970	1-218-990-81	SHORT CHIP	0			R6020	1-216-864-11	SHORT CHIP	0
R5971	1-218-990-81	SHORT CHIP	0			R6021	1-216-864-11	SHORT CHIP	0
R5972	1-218-990-81	SHORT CHIP	0			R6022	1-216-864-11	SHORT CHIP	0
R5973	1-216-864-11	SHORT CHIP	0			R6023	1-216-864-11	SHORT CHIP	0
R5974	1-216-864-11	SHORT CHIP	0			R6024	1-216-864-11	SHORT CHIP	0
R5975	1-218-990-81	SHORT CHIP	0			R6025	1-216-864-11	SHORT CHIP	0
R5976	1-218-990-81	SHORT CHIP	0			R6026	1-216-864-11	SHORT CHIP	0
R5977	1-218-990-81	SHORT CHIP	0			R6027	1-216-864-11	SHORT CHIP	0
R5978	1-218-990-81	SHORT CHIP	0			R6028	1-216-864-11	SHORT CHIP	0
R5979	1-218-990-81	SHORT CHIP	0			R6029	1-216-864-11	SHORT CHIP	0

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6300	1-216-845-11	METAL CHIP	100K	5%	1/10W	R9040	1-216-864-11	SHORT CHIP	0		
R6500	1-216-833-11	METAL CHIP	10K	5%	1/10W	R9041	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6501	1-216-833-11	METAL CHIP	10K	5%	1/10W	R9042	1-216-809-11	METAL CHIP	100	5%	1/10W
R6502	1-216-833-11	METAL CHIP	10K	5%	1/10W	R9044	1-216-864-11	SHORT CHIP	0		
R6508	1-216-833-11	METAL CHIP	10K	5%	1/10W	R9045	1-216-864-11	SHORT CHIP	0		
								< RESISTOR CHIP >			
R6511	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB4205	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6512	1-216-864-11	SHORT CHIP	0			RB4206	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6513	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W	RB4208	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6514	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W	RB4209	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6515	1-218-873-11	METAL CHIP	12K	0.5%	1/10W	RB4211	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6516	1-218-877-11	METAL CHIP	18K	0.5%	1/10W						
R6521	1-218-860-11	METAL CHIP	3.6K	0.5%	1/10W	RB4212	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6522	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W	RB4261	1-233-796-11	RES, NETWORK		(1608)	
R6523	1-218-862-11	METAL CHIP	4.3K	0.5%	1/10W	RB4262	1-233-796-11	RES, NETWORK		(1608)	
R6524	1-218-850-11	METAL CHIP	1.3K	0.5%	1/10W	RB4263	1-233-796-11	RES, NETWORK		(1608)	
						RB4264	1-233-796-11	RES, NETWORK		(1608)	
R6529	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	RB5040	1-234-371-21	RES, NETWORK	47	(1005X4)	
R6539	1-216-847-11	METAL CHIP	150K	5%	1/10W	RB5041	1-234-371-21	RES, NETWORK	47	(1005X4)	
R6540	1-216-839-11	METAL CHIP	33K	5%	1/10W	RB5680	1-234-702-11	RES, NETWORK	68	(1005X4)	
R6547	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB5681	1-234-702-11	RES, NETWORK	68	(1005X4)	
R6548	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB5682	1-234-372-11	RES, NETWORK	100	(1005X4)	
R6549	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6550	1-216-864-11	SHORT CHIP	0			RB5683	1-234-372-11	RES, NETWORK	100	(1005X4)	
R6551	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB5684	1-234-372-11	RES, NETWORK	100	(1005X4)	
R6552	1-216-864-11	SHORT CHIP	0			RB5685	1-234-372-11	RES, NETWORK	100	(1005X4)	
R6554	1-216-864-11	SHORT CHIP	0			RB5686	1-234-372-11	RES, NETWORK	100	(1005X4)	
						RB5687	1-234-702-11	RES, NETWORK	68	(1005X4)	
R6555	1-216-864-11	SHORT CHIP	0								
R6556	1-216-864-11	SHORT CHIP	0			RB5688	1-234-702-11	RES, NETWORK	68	(1005X4)	
R6558	1-216-864-11	SHORT CHIP	0			RB5689	1-239-409-11	NETWORK RESISTOR (CHIP)	47		
R6559	1-216-864-11	SHORT CHIP	0								
R6560	1-216-864-11	SHORT CHIP	0					< SWITCH >			
R6568	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	S3000	1-572-921-11	SWITCH, KEY BOARD			
R6569	1-216-833-11	METAL CHIP	10K	5%	1/10W	S3001	1-572-921-11	SWITCH, KEY BOARD			
R6570	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R6572	1-216-833-11	METAL CHIP	10K	5%	1/10W			< VARISTOR >			
R6573	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6574	1-216-797-11	METAL CHIP	10	5%	1/10W	VD4000	1-803-974-21	VARISTOR, CHIP		(1608)	
R6577	1-216-864-11	SHORT CHIP	0			VD4001	1-803-974-21	VARISTOR, CHIP		(1608)	
R6578	1-216-864-11	SHORT CHIP	0			VD4002	1-803-974-21	VARISTOR, CHIP		(1608)	
R6581	1-216-864-11	SHORT CHIP	0			VD4003	1-803-974-21	VARISTOR, CHIP		(1608)	
R6600	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W	VD4004	1-803-974-21	VARISTOR, CHIP		(1608)	
								< CRYSTAL >			
R6601	1-218-901-11	METAL CHIP	180K	0.5%	1/10W	X3000	1-813-531-11	OSCILLATOR, CRYSTAL UNIT			
R6602	1-216-864-11	SHORT CHIP	0			X3001	1-813-806-21	OSCILLATOR, CRYSTAL			
R6604	1-218-857-11	METAL CHIP	2.7K	0.5%	1/10W	X5040	1-813-547-11	QUARTZ CRYSTAL UNIT			
R6605	1-216-864-11	SHORT CHIP	0			X5680	1-813-055-11	QUARTZ CRYSTAL UNIT			
R6606	1-216-833-11	METAL CHIP	10K	5%	1/10W	X5780	1-781-696-31	VIBRATOR, CRYSTAL			
R9032	1-216-864-11	SHORT CHIP	0								
R9034	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R9035	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R9036	1-216-864-11	SHORT CHIP	0								
R9039	1-216-864-11	SHORT CHIP	0								

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.



REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1192-353-A AG Board, Complete				C1672	1-161-830-00	CERAMIC 0.0047UF	500V
A1	4-382-854-01	SCREW (M3X8), P, SW (+)		C3000	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
A2	4-382-854-01	SCREW (M3X8), P, SW (+)		C3001	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
A3	4-382-854-01	SCREW (M3X8), P, SW (+)		C3002	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
A4	4-382-854-01	SCREW (M3X8), P, SW (+)		C3003	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
A5	4-382-854-01	SCREW (M3X8), P, SW (+)		C3004	1-164-156-11	CERAMIC CHIP 0.1UF	25V
A6	4-382-854-01	SCREW (M3X8), P, SW (+)		C6061	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V
< CAPACITOR >				C6062	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C1000	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C6200 Δ	1-161-964-91	CERAMIC 0.0047UF	250V
C1002	1-164-156-11	CERAMIC CHIP 0.1UF	25V	C6201	1-109-879-11	CERAMIC 22PF	5.00% 2KV
C1601	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6202	1-107-905-11	ELECT 4.7UF	20% 50V
C1604 Δ	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C6203	1-107-906-11	ELECT 10UF	20% 50V
C1605 Δ	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C6204	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C1607 Δ	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C6205	1-107-909-11	ELECT 47UF	20% 50V
C1608 Δ	1-104-571-91	CERAMIC 0.0015UF	10.00% 2KV	C6206	1-104-331-11	CERAMIC 0.0022UF	10.00% 1KV
C1609	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6207	1-162-115-00	CERAMIC 330PF	10.00% 1KV
C1612	1-117-753-11	ELECT (BLOCK) 470UF	20% 450V	C6208	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C1613	1-126-964-11	ELECT 10UF	20.00% 50V	C6210	1-131-872-91	CERAMIC CHIP 1000PF	10% 630V
C1614	1-126-967-11	ELECT 47UF	20.00% 50V	C6211	1-128-945-31	ELECT 1000UF	20% 10V
C1615	1-126-948-11	ELECT 100UF	20.00% 35V	C6212	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C1618	1-136-497-81	FILM 0.1UF	5.00% 50V	C6214	1-128-526-11	ELECT 100UF	20% 25V
C1620	1-107-902-11	ELECT 1UF	20% 50V	C6215	1-128-526-11	ELECT 100UF	20% 25V
C1622	1-126-961-11	ELECT 2.2UF	20.00% 50V	C6216 Δ	1-161-964-91	CERAMIC 0.0047UF	250V
C1623	1-136-479-11	FILM 0.001UF	5.00% 100V	C6219	1-100-780-31	ELECT 22UF	20% 450V
C1624	1-126-963-11	ELECT 4.7UF	20.00% 50V	C6220	1-107-909-11	ELECT 47UF	20% 50V
C1626	1-113-924-11	CERAMIC 0.0047UF	20.00% 250V	C6221	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1627	1-125-969-91	CERAMIC 680PF	10.00% 1KV	C6235	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1628	1-125-969-91	CERAMIC 680PF	10.00% 1KV	C6236	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1629	1-135-946-22	FILM 47000PF	3% 800V	C6238	1-128-526-11	ELECT 100UF	20% 25V
C1630	1-126-939-11	ELECT 10000UF	20.00% 16V	C6239	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1631	1-107-914-11	ELECT 1000UF	20% 50V	C6257	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1632	1-126-964-11	ELECT 10UF	20.00% 50V	C6259	1-104-665-11	ELECT 100UF	20.00% 25V
C1634	1-119-940-51	ELECT 4700UF	20.00% 50V	C6260	1-164-156-11	CERAMIC CHIP 0.1UF	25V
C1639	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C6300	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V
C1640	1-107-888-11	ELECT 47UF	20% 25V	C6301	1-126-960-11	ELECT 1UF	20.00% 50V
C1642	1-107-906-11	ELECT 10UF	20% 50V	C6302	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V
C1648	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6303	1-126-960-11	ELECT 1UF	20.00% 50V
C1652	1-107-906-11	ELECT 10UF	20% 50V	C6304	1-104-666-11	ELECT 220UF	20.00% 25V
C1653	1-107-909-11	ELECT 47UF	20% 50V	C6307	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C1655	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C6308	1-126-952-11	ELECT 1000UF	20.00% 35V
C1656	1-163-009-91	CERAMIC CHIP 0.001UF	10.00% 50V	C6309	1-126-952-11	ELECT 1000UF	20.00% 35V
C1659	1-137-194-81	FILM 0.47UF	5.00% 50V	C6310	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C1660 Δ	1-165-530-11	MYLAR 0.47UF	10 275V	C6311	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C1661 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6312	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C1662 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6313	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C1664 Δ	1-165-530-11	MYLAR 0.47UF	10 275V	C6315	1-164-346-11	CERAMIC CHIP 1UF	16V
C1670	1-125-497-11	ELECT (BLOCK) 100UF	20% 400V	C6316	1-107-907-11	ELECT 22UF	20% 50V
C1671	1-125-497-11	ELECT (BLOCK) 100UF	20% 400V				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.



REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< CONNECTOR >							
CN1601	Δ *1-580-843-11	PIN, CONNECTOR (POWER)		D6207	8-719-081-97	DIODE MMDL914T1	
CN1602	*1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P		D6208	8-719-081-97	DIODE MMDL914T1	
CN1603	*1-816-974-51	PLUG, CONNECTOR 3P		D6209	8-719-081-97	DIODE MMDL914T1	
CN1605	1-695-915-11	TAB (CONTACT)		D6302	8-719-069-55	DIODE UDZSTE-175.6B	
CN1606	1-695-915-11	TAB (CONTACT)		< FUSE >			
CN1610	1-695-915-11	TAB (CONTACT)		F1601	Δ 1-576-232-51	FUSE 5A 250V	
CN1611	1-695-915-11	TAB (CONTACT)		FH1601	Δ 1-533-725-11	FUSE HOLDER 0A 0V	
CN1612	1-695-915-11	TAB (CONTACT)		< IC >			
CN3000	1-779-944-21	PLUG, CONNECTOR (PC BOARD) 4P		IC1002	6-710-120-01	IC PCA9511AD	
CN3002	1-816-984-71	PLUG, CONNECTOR 7P		IC1003	8-752-072-94	IC CXA1875AM-T4	
CN3003	*1-816-977-51	PLUG, CONNECTOR 6P		IC1010	6-707-223-01	IC LM75BIM-5/NOPB	
CN3004	*1-816-979-51	PLUG, CONNECTOR 8P		IC1601	6-705-810-01	IC MCZ3001DB	
CN3005	*1-564-512-11	PLUG, CONNECTOR 9P		IC1602	8-759-198-31	IC UPC1093J-1-T	
CN4000	1-785-703-21	PIN, CONNECTOR (PC BOARD) 6P		IC6103	6-709-368-01	IC MM1431ATT (CN)	
CN5000	1-785-701-21	PIN, CONNECTOR (PC BOARD) 3P		IC6200	6-600-279-01	IC STR-A6169	
CN6000	1-785-704-21	PIN, CONNECTOR (PC BOARD) 7P		IC6201	8-759-586-17	IC TL1431CZ-AP	
CN6204	1-695-915-11	TAB (CONTACT)		IC6203	8-759-098-24	IC PQ30RV11J00H	
CN6300	*1-564-507-11	PLUG, CONNECTOR 4P		IC6205	8-759-098-24	IC PQ30RV11J00H	
< DIODE >				IC6210	8-759-520-49	IC PQ30RV21J00H	
D1601	8-719-054-36	DIODE FCH10A06		IC6211	8-759-648-57	IC PST600IML	
D1602	6-500-067-01	DIODE GSIB460L/45		IC6300	8-759-831-57	IC TDA7495S	
D1607	8-719-979-64	DIODE UF4005/23		< COIL >			
D1608	8-719-060-90	DIODE S2L60F		L1000	1-414-754-11	INDUCTOR 10UH	
D1609	8-719-063-73	DIODE D1NL20U-TR		L1600	Δ 1-457-315-11	INDUCTOR 0UH	
D1612	8-719-060-90	DIODE S2L60F		L1601	1-412-525-31	INDUCTOR 10UH	
D1613	8-719-081-97	DIODE MMDL914T1		L1602	1-469-578-11	FERRITE 1.1UH	
D1616	8-719-081-97	DIODE MMDL914T1		L1603	1-469-578-11	FERRITE 1.1UH	
D1617	8-719-081-97	DIODE MMDL914T1		L1609	1-406-659-11	INDUCTOR 10UH	
D1618	8-719-081-97	DIODE MMDL914T1		L1616	1-406-984-11	INDUCTOR 1.5MH	
D1619	8-719-083-82	DIODE UDZS-TE17-12B		< PHOTOCOUPLER >			
D1620	8-719-054-36	DIODE FCH10A06		PH1601	Δ 6-600-187-01	PHOTO COUPLER PC123Y22J00F	
D1621	8-719-018-84	DIODE D2S6M		PH6002	Δ 6-600-187-01	PHOTO COUPLER PC123Y22J00F	
D1624	8-719-060-88	DIODE D4SBS6		PH6200	Δ 6-600-187-01	PHOTO COUPLER PC123Y22J00F	
D1631	8-719-081-97	DIODE MMDL914T1		< PROTECTOR MODULE >			
D1632	1-216-295-91	SHORT CHIP 0		PS1600	Δ 1-576-288-32	IC LINK 10A 90V	
D1635	8-719-060-90	DIODE S2L60F		PS6202	Δ 1-801-549-21	IC LINK 4A 0V	
D1636	8-719-060-90	DIODE S2L60F		< TRANSISTOR >			
D3001	8-719-050-38	DIODE M1MA152WK-T1		Q1603	8-729-010-29	TRANSISTOR MSD601-RST1	
D6000	8-719-081-97	DIODE MMDL914T1		Q1604	8-729-010-05	TRANSISTOR MSB709-RT1	
D6001	8-719-081-97	DIODE MMDL914T1		Q1605	8-729-010-29	TRANSISTOR MSD601-RST1	
D6002	8-719-081-97	DIODE MMDL914T1		Q1606	8-729-052-32	TRANSISTOR IRFIE7N50A-LF31	
D6034	8-719-082-03	DIODE MM3Z15VT1		Q1607	8-729-052-32	TRANSISTOR IRFIE7N50A-LF31	
D6200	8-719-083-60	DIODE UDZSTE-174.7B		Q6300	8-729-010-29	TRANSISTOR MSD601-RST1	
D6201	8-719-081-97	DIODE MMDL914T1					
D6203	8-719-948-45	DIODE ERA22-08					
D6204	8-719-080-75	DIODE M1FL20U-4063					
D6205	8-719-077-76	DIODE D2SB60A-F04					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

AG

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q6301	8-729-010-29	TRANSISTOR MSD601-RST1		R1631	1-216-073-91	RES-CHIP 10K 5%	1/10W
Q6302	8-729-010-29	TRANSISTOR MSD601-RST1		R1632	1-216-797-11	METAL CHIP 10 5%	1/10W
Q6303	8-729-010-05	TRANSISTOR MSB709-RT1		R1633	1-216-073-91	RES-CHIP 10K 5%	1/10W
< RESISTOR >				R1634	1-216-797-11	METAL CHIP 10 5%	1/10W
JR6313	1-216-295-91	SHORT CHIP 0		R1635	1-216-073-91	RES-CHIP 10K 5%	1/10W
JR6314	1-216-295-91	SHORT CHIP 0		R1638	1-202-965-11	METAL 0.02 10%	2W
JR6315	1-216-295-91	SHORT CHIP 0		R1641	1-216-049-11	RES-CHIP 1K 5%	1/10W
JR6316	1-216-295-91	SHORT CHIP 0		R1642	1-216-057-00	RES-CHIP 2.2K 5%	1/10W
R1000	1-216-805-11	METAL CHIP 47 5%	1/10W	R1643	1-218-853-11	METAL CHIP 1.8K 0.5%	1/10W
R1001	1-216-805-11	METAL CHIP 47 5%	1/10W	R1644	1-216-025-11	RES-CHIP 100 5%	1/10W
R1003	1-216-864-11	SHORT CHIP 0		R1645	1-216-017-91	RES-CHIP 47 5%	1/10W
R1004	1-216-864-11	SHORT CHIP 0		R1646	1-218-873-11	METAL CHIP 12K 0.5%	1/10W
R1005	1-216-864-11	SHORT CHIP 0		R1647	1-216-041-00	RES-CHIP 470 5%	1/10W
R1008	1-216-864-11	SHORT CHIP 0		R1649	1-216-049-11	RES-CHIP 1K 5%	1/10W
R1009	1-216-864-11	SHORT CHIP 0		R1650	1-218-839-11	METAL CHIP 470 0.5%	1/10W
R1012	1-216-833-11	METAL CHIP 10K 5%	1/10W	R1651 Δ	1-205-998-11	METAL 1 5%	10W
R1013	1-216-833-11	METAL CHIP 10K 5%	1/10W	R1652 Δ	1-205-998-11	METAL 1 5%	10W
R1015	1-216-833-11	METAL CHIP 10K 5%	1/10W	R1654	1-260-288-11	CARBON 0.47 5%	1/2W
R1016	1-216-833-11	METAL CHIP 10K 5%	1/10W	R1655	1-260-288-11	CARBON 0.47 5%	1/2W
R1021	1-216-864-11	SHORT CHIP 0		R1656	1-215-904-11	METAL OXIDE 100K 5%	2W
R1023	1-216-864-11	SHORT CHIP 0		R1657	1-215-904-11	METAL OXIDE 100K 5%	2W
R1024	1-216-809-11	METAL CHIP 100 5%	1/10W	R1662 Δ	1-218-265-11	METAL 8.2M 5%	1W
R1025	1-216-809-11	METAL CHIP 100 5%	1/10W	R1664	1-216-295-91	SHORT CHIP 0	
R1026	1-216-864-11	SHORT CHIP 0		R3001	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1028	1-216-864-11	SHORT CHIP 0		R3002	1-216-833-11	METAL CHIP 10K 5%	1/10W
R1029	1-216-864-11	SHORT CHIP 0		R3003	1-216-841-11	METAL CHIP 47K 5%	1/10W
R1030	1-216-864-11	SHORT CHIP 0		R6001	1-218-760-11	METAL CHIP 220K 0.5%	1/10W
R1045	1-216-809-11	METAL CHIP 100 5%	1/10W	R6002	1-218-760-11	METAL CHIP 220K 0.5%	1/10W
R1046	1-216-809-11	METAL CHIP 100 5%	1/10W	R6003	1-208-830-11	METAL CHIP 100K 0.5%	1/10W
R1049	1-216-864-11	SHORT CHIP 0		R6005	1-208-846-11	METAL CHIP 470K 0.5%	1/10W
R1052	1-216-864-11	SHORT CHIP 0		R6006	1-218-760-11	METAL CHIP 220K 0.5%	1/10W
R1601	1-245-494-21	METAL 2.2M 2%	1/4W	R6007	1-218-760-11	METAL CHIP 220K 0.5%	1/10W
R1602	1-245-494-21	METAL 2.2M 2%	1/4W	R6008	1-208-846-11	METAL CHIP 470K 0.5%	1/10W
R1607	1-249-417-11	CARBON 1K 5%	1/4W	R6009	1-218-887-11	METAL CHIP 47K 0.5%	1/10W
R1613 Δ	1-220-778-31	FUSIBLE 0.1 10%	1/2W	R6108	1-218-893-11	METAL CHIP 82K 0.5%	1/10W
R1616	1-249-393-11	CARBON 10 5%	1/4W	R6110	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R1617	1-249-389-11	CARBON 4.7 5%	1/4W	R6111	1-216-864-11	SHORT CHIP 0	
R1618	1-260-288-11	CARBON 0.47 5%	1/2W	R6112	1-216-864-11	SHORT CHIP 0	
R1619 Δ	1-220-886-11	FUSIBLE 0.1 10%	1W	R6113	1-216-821-11	METAL CHIP 1K 5%	1/10W
R1620	1-216-073-91	RES-CHIP 10K 5%	1/10W	R6200	1-249-381-11	CARBON 1 5%	1/4W
R1621	1-216-065-91	RES-CHIP 4.7K 5%	1/10W	R6201	1-216-353-00	METAL OXIDE 2.2 5%	1W
R1622	1-216-073-91	RES-CHIP 10K 5%	1/10W	R6202	1-216-864-11	SHORT CHIP 0	
R1623	1-216-049-11	RES-CHIP 1K 5%	1/10W	R6203	1-216-864-11	SHORT CHIP 0	
R1625	1-245-478-21	METAL 470K 1%	1/4W	R6204	1-249-393-11	CARBON 10 5%	1/4W
R1626	1-245-478-21	METAL 470K 1%	1/4W	R6205	1-243-725-21	METAL OXIDE 100K 5%	1W
R1628	1-208-810-11	METAL CHIP 15K 0.5%	1/10W	R6206	1-216-817-11	METAL CHIP 470 5%	1/10W
R1629	1-218-871-11	METAL CHIP 10K 0.5%	1/10W	R6207	1-216-821-11	METAL CHIP 1K 5%	1/10W
R1630	1-216-073-91	RES-CHIP 10K 5%	1/10W	R6208	1-216-864-11	SHORT CHIP 0	
				R6209	1-216-839-11	METAL CHIP 33K 5%	1/10W
				R6210	1-218-871-11	METAL CHIP 10K 0.5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK								
R6211	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	*A-1192-357-A T1 Board, Complete											
R6214	1-216-846-11	METAL CHIP	120K	5%	1/10W	< CONNECTOR >											
R6215	1-216-844-11	METAL CHIP	82K	5%	1/10W	CN4306	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P	< SWITCH >								
R6216	1-218-897-11	METAL CHIP	120K	0.5%	1/10W				S4320	1-786-591-11	SWITCH, MICRO						
R6217	1-218-901-11	METAL CHIP	180K	0.5%	1/10W							*A-1192-358-A T2 Board, Complete					
R6218	1-216-864-11	SHORT CHIP	0									< CONNECTOR >					
R6219	1-216-864-11	SHORT CHIP	0			CN4340	*1-564-518-11	PLUG, CONNECTOR 3P	< SWITCH >								
R6221	1-218-883-11	METAL CHIP	33K	0.5%	1/10W				S4340	1-786-591-11	SWITCH, MICRO						
R6222	1-218-907-11	METAL CHIP	330K	0.5%	1/10W	*A-1192-355-A H2 Board, Complete											
R6223	1-218-901-11	METAL CHIP	180K	0.5%	1/10W	< CAPACITOR >											
R6224	1-218-897-11	METAL CHIP	120K	0.5%	1/10W	C2700	1-164-156-11	CERAMIC CHIP 0.1UF	25V								
R6225	1-218-897-11	METAL CHIP	120K	0.5%	1/10W												
R6226	1-218-897-11	METAL CHIP	120K	0.5%	1/10W	C9001	1-119-667-11	CERAMIC CHIP 22UF	10V								
R6227	1-218-875-11	METAL CHIP	15K	0.5%	1/10W												
R6256	1-216-841-11	METAL CHIP	47K	5%	1/10W	C9002	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V							
R6262	1-216-834-11	METAL CHIP	12K	5%	1/10W												
R6263	1-216-833-11	METAL CHIP	10K	5%	1/10W	< CONNECTOR >											
R6264	1-216-833-11	METAL CHIP	10K	5%	1/10W	CN1700	*1-564-525-11	PLUG, CONNECTOR 10P	< DIODE >								
R6267	1-216-833-11	METAL CHIP	10K	5%	1/10W				D1700	8-719-069-55	DIODE UDZSTE-175.6B						
R6300	1-216-049-11	RES-CHIP	1K	5%	1/10W	< IC >											
R6302	1-216-073-91	RES-CHIP	10K	5%	1/10W	IC1700	6-703-744-01	IC GP1UE26SXXOF	< TRANSISTOR >								
R6303	1-216-837-11	METAL CHIP	22K	5%	1/10W				Q1010	8-729-010-29	TRANSISTOR MSD601-RST1						
R6304	1-208-810-11	METAL CHIP	15K	0.5%	1/10W	< RESISTOR >											
R6305	1-216-073-91	RES-CHIP	10K	5%	1/10W	Q1011	8-729-010-29	TRANSISTOR MSD601-RST1	Q1012	8-729-010-29	TRANSISTOR MSD601-RST1						
R6306	1-208-810-11	METAL CHIP	15K	0.5%	1/10W												
R6307	1-249-417-11	CARBON	1K	5%	1/4W	Q1013	8-729-010-29	TRANSISTOR MSD601-RST1	< RELAY >								
R6308	1-216-821-11	METAL CHIP	1K	5%	1/10W				RY1601	1-755-388-11	RELAY (AC POWER)						
R6309	1-216-049-11	RES-CHIP	1K	5%	1/10W	< TRANSFORMER >											
R6313	1-216-864-11	SHORT CHIP	0			T1603	1-435-512-21	TRANSFORMER, CONVERTER (PIT)	T1605	1-433-488-31	TRANSFORMER, LINE FILTER						
R6314	1-216-845-11	METAL CHIP	100K	5%	1/10W												
R6315	1-216-845-11	METAL CHIP	100K	5%	1/10W	< THERMISTOR >											
R6316	1-216-837-11	METAL CHIP	22K	5%	1/10W	TH6200	1-803-586-41	THERMISTOR	< VARISTOR >								
R6317	1-216-833-11	METAL CHIP	10K	5%	1/10W				VD1601	1-804-995-11	VARISTOR						
R6318	1-216-833-11	METAL CHIP	10K	5%	1/10W	< TRANSISTOR >											
						Q1013	8-729-010-29	TRANSISTOR MSD601-RST1	R6310	1-216-864-11	SHORT CHIP 0						
						Q1011	8-729-010-29	TRANSISTOR MSD601-RST1	R6311	1-216-833-11	METAL CHIP 10K 5% 1/10W						
						Q1012	8-729-010-29	TRANSISTOR MSD601-RST1	R6312	1-216-833-11	METAL CHIP 10K 5% 1/10W						
						Q1013	8-729-010-29	TRANSISTOR MSD601-RST1	R6313	1-216-817-11	METAL CHIP 470 5% 1/10W						
						< RESISTOR >											
						R6314	1-216-813-11	METAL CHIP 220 5% 1/10W	< RELAY >								
									RY1601	1-755-388-11	RELAY (AC POWER)						
						< TRANSISTOR >											
						Q1010	8-729-010-29	TRANSISTOR MSD601-RST1	T1603	1-435-512-21	TRANSFORMER, CONVERTER (PIT)						
						Q1011	8-729-010-29	TRANSISTOR MSD601-RST1	T1605	1-433-488-31	TRANSFORMER, LINE FILTER						
						Q1012	8-729-010-29	TRANSISTOR MSD601-RST1	T6200	1-443-312-11	TRANSFORMER, CONVERTER (SBT)						
						< THERMISTOR >											
						TH6200	1-803-586-41	THERMISTOR	< VARISTOR >								
									VD1601	1-804-995-11	VARISTOR						
						< TRANSISTOR >											
						Q1013	8-729-010-29	TRANSISTOR MSD601-RST1	VD1602	1-804-995-11	VARISTOR						

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

H2

H1

REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6315	1-216-817-11	METAL CHIP	470	5%	1/10W
R6316	1-216-817-11	METAL CHIP	470	5%	1/10W
R6317	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6318	1-216-813-11	METAL CHIP	220	5%	1/10W
R6319	1-216-813-11	METAL CHIP	220	5%	1/10W
R6320	1-216-017-91	RES-CHIP	47	5%	1/10W
R6321	1-216-817-11	METAL CHIP	470	5%	1/10W
R6322	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6323	1-218-837-11	METAL CHIP	390	0.5%	1/10W
R6324	1-216-864-11	SHORT CHIP	0		

< SWITCH >

S1000	1-692-431-21	SWITCH, TACTILE			
-------	--------------	-----------------	--	--	--

***A-1192-354-A H1 Board, Complete**

< CAPACITOR >

C4401	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
-------	--------------	--------------------	--------	-----	--

< CONNECTOR >

CN4401	*1-564-519-11	PLUG, CONNECTOR 4P			
--------	---------------	--------------------	--	--	--

< RESISTOR >

R4420	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R4421	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R4422	1-218-843-11	METAL CHIP	680	0.5%	1/10W
R4423	1-218-834-11	METAL CHIP	300	0.5%	1/10W
R4424	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R4425	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W

< SWITCH >

S4400	1-692-431-21	SWITCH, TACTILE			
S4402	1-692-431-21	SWITCH, TACTILE			
S4403	1-692-431-21	SWITCH, TACTILE			
S4404	1-692-431-21	SWITCH, TACTILE			
S4405	1-692-431-21	SWITCH, TACTILE			

S4406	1-692-431-21	SWITCH, TACTILE			
-------	--------------	-----------------	--	--	--

< VARISTOR >

VD4401	1-803-974-21	VARISTOR, CHIP	(1608)		
--------	--------------	----------------	--------	--	--

REF.NO.	PART.NO	DESCRIPTION	REMARK
---------	---------	-------------	--------

MISCELLANEOUS

1-519-833-21	LAMP		
1-474-012-11	EUC120DP/51		
8-597-585-00	TUNER, FSS BTP-HC401		
1-576-951-11	THERMOSTAT		
1-787-373-11	D.C. FAN		

8-835-864-11	MOTOR, DC SFF22B/C-NP		
8-835-873-01	MOTOR, DC SFF24A/C-NP		

Δ	1-776-204-32	CORD, POWER FILTER (50E2000/2010UK)	
Δ	1-823-715-21	CORD, POWER (50E2000/2010AEP)	

1-826-436-11	LOUDSPEAKER (13X7CM)		
1-769-175-21	ANTENNA CABLE		

ACCESSORIES AND CONNECTORS

*1-829-683-51	LEAD WIRE WITH CONNECTOR (LVDS)		
*1-833-234-11	LEAD WIRE WITH CONNECTOR (LVDS) TBD:CN3001-C:CN3200		
1-910-026-08	XA CONNECTOR (D2) 6p		
*1-910-029-08	CONNECTOR ASSY 8P GHR-ZHR		
1-910-026-13	BD CONNECTOR ASSY (WHT) 2P		

*1-910-026-54	FFC 20P	TBD:CN3006-J:CN2024	
*1-910-029-03	FFC 49P FOLDED	TBD:CN3005-J:CN2022	
*1-910-029-04	FFC 80P FOLDED	X:CN5800-TBD:CN5751	
*1-910-029-05	CONNECTOR ASSY 5P ZHR-GHR	TBD:CN3004-BALLAST	
*1-910-029-06	HARNESS ASSY 4 ENDS		

*1-910-029-07	LIGHTNING CABLE	AG:CN1610-J:CN6500	
*1-910-029-10	HARNESS ASSY 4 ENDS		
*1-910-029-11	HARNESS ASSY		
*1-910-029-12	CONNECTOR ASSY 3P VHR-VHR	AG:CN1602-BALLAST	
*1-910-029-13	CONNECTOR ASSY 11P ZHR-ZHR	TBD:CN6502-C:CN3002	

*1-910-029-14	CONNECTOR ASSY 5P ZHR-ZHR	C:CN3001-S2:CN1060	
*1-910-029-09	SPEAKER HARNESS	H3:CN9857-SPEAKERS	
*2-695-226-41	INSTRUCTION MANUAL (ENGLISH) (50E2000UK/2010UK)		

*2-695-226-11	INSTRUCTION MANUAL (ENGLISH/GERMAN/DUTCH/ PORTUGUESE/NORWEGIAN) (50E2000AEP/2010AEP)		
---------------	---	--	--

*2-695-226-21	INSTRUCTION MANUAL (FRENCH/ITALIAN/SPANISH/ FINNISH) (50E2000AEP/2010AEP)		
---------------	--	--	--

*2-695-226-31	INSTRUCTION MANUAL (SWEDISH/DANISH/GREEK/ RUSSIAN/POLISH) (50E2000AEP/2010AEP)		
---------------	---	--	--

REMOTE COMMANDER

1-479-847-11	REMOTE COMMANDER (RM-ED-007)		
--------------	------------------------------	--	--

