

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.


5-1. CHASSIS

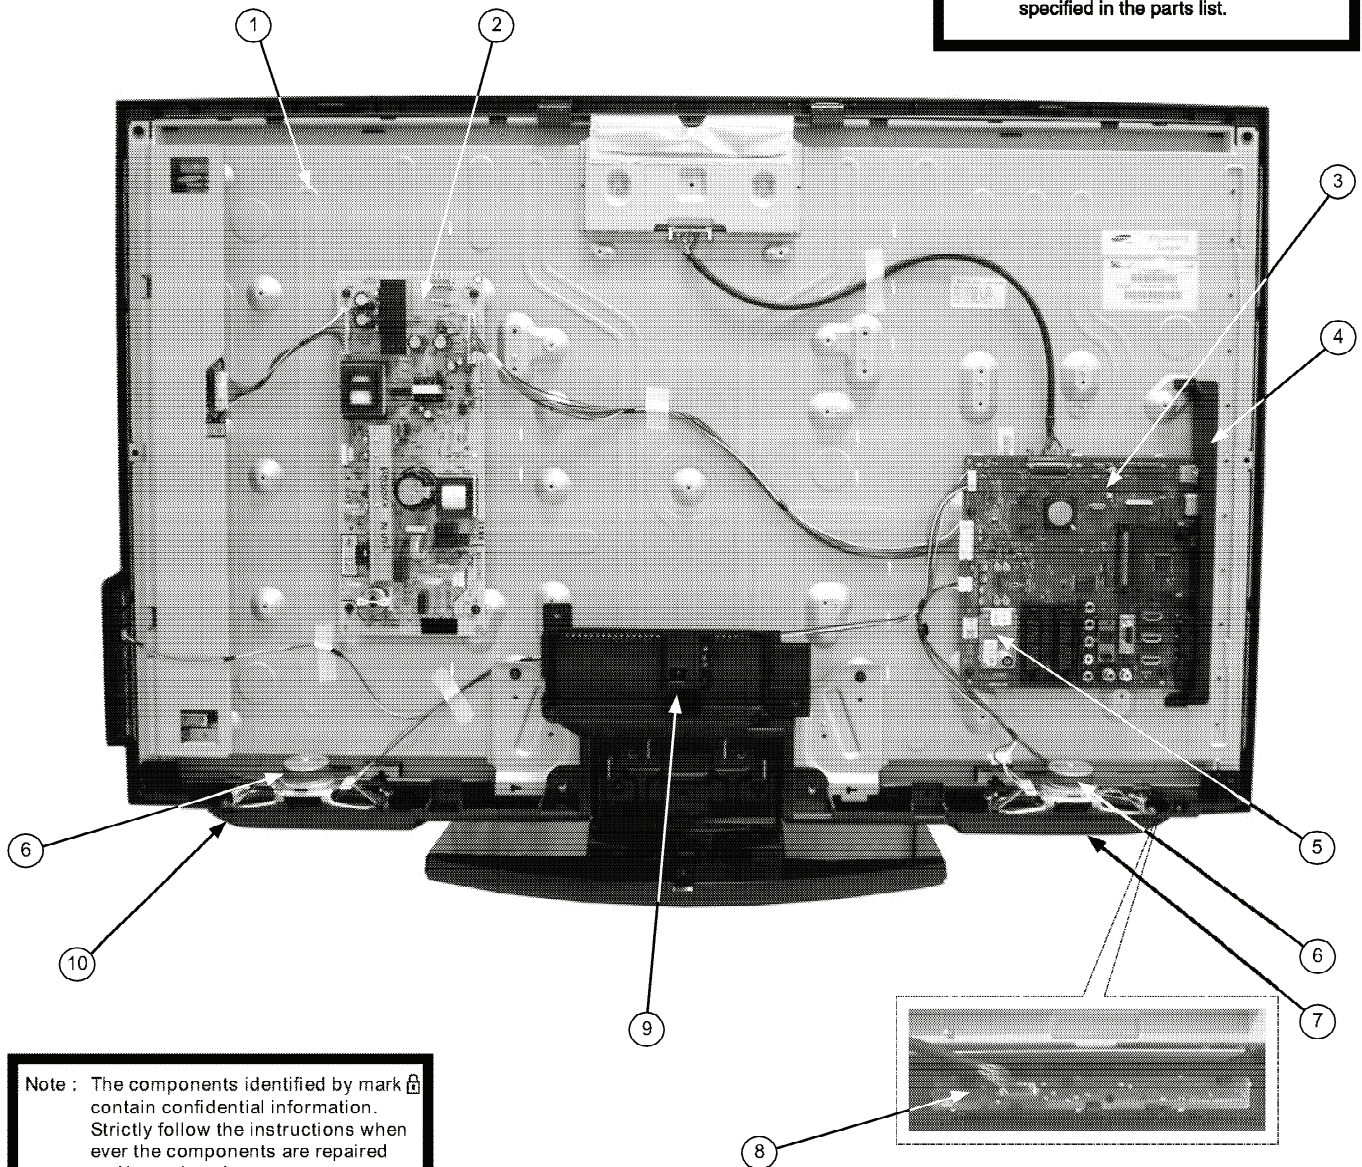

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-811-059-11	LCD PANEL (S32TSP)	32 inches	7	4-164-507-01	BRACKET, SP (32L)	32 inches
	Δ 1-811-060-11	LCD PANEL (S40TSP)	40 inches		4-166-119-11	BRACKET, SP (40L)	40 inches
2	1-474-208-11	STATIC CONVERTER(TV)	32 inches	8	A-1763-559-A	HLR BOARD, COMPLETE	
	1-474-201-21	STATIC CONVERTER(TV)	40 inches	9	4-164-509-02	COVER, UNDER (32)	32 inches
3	 A-1763-564-A	BEN BOARD, COMPLETE			4-166-123-11	COVER, UNDER (37)	40 inches
4	4-166-268-22	BRACKET, SIDE JACK		10	4-164-506-01	BRACKET, SP (32R)	32 inches
5	8-597-735-00	UNIVERSAL SIL-TU SUT-AE102T			4-166-120-11	BRACKET, SP (40R)	40 inches
6	1-858-364-11	LOUDSPEAKER(4.5x12.5cm)					

5-1. CHASSIS Cont.

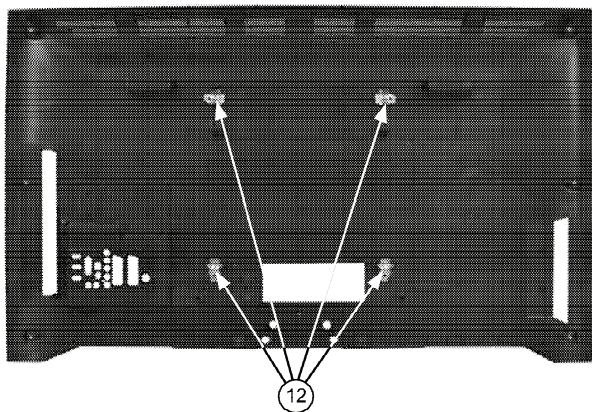

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

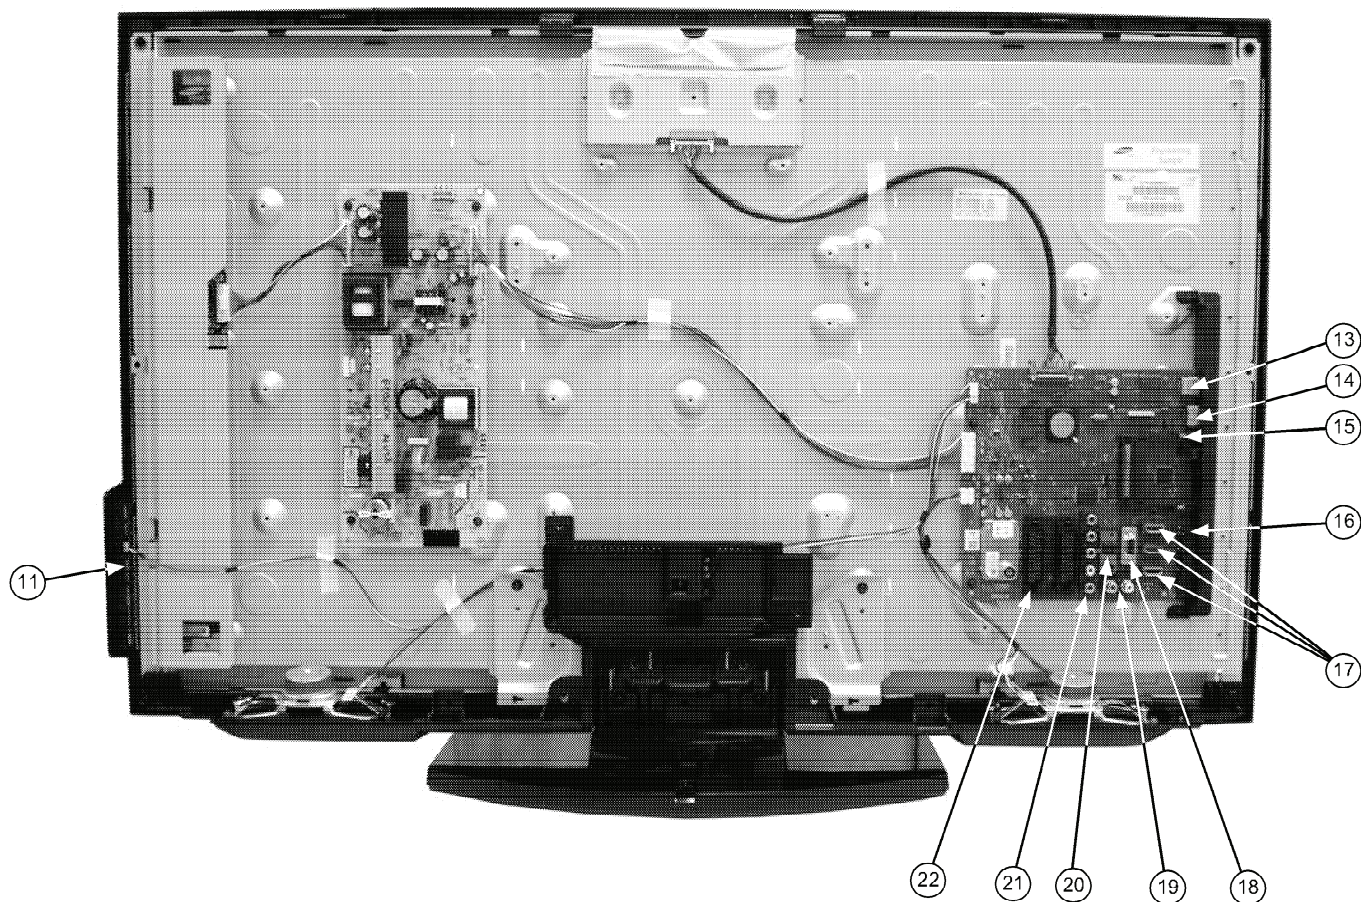


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
11	A-1765-913-A	H2LS BOARD, COMPLETE		17	1-822-638-11	HDMI CONNECTOR	
12	4-164-279-01	BRACKET, VESA (S)		18	1-842-087-11	D SUB CONNECTOR	
13	1-821-834-12	USB CONNECTOR		19	1-822-524-31	PHONO JACK 2P	
14	1-822-637-11	HDMI CONNECTOR		20	1-822-954-11	PHONO BLOCK, OPTICAL OUT	
15	1-822-579-31	CARD CONNECTOR (PCMCIA CARD)		21	1-822-523-11	PHONO JACK 5P	
16	1-822-581-22	MULTIPLE PHONO JACK 4P		22	1-822-580-21	CONNECTOR DUAL SCART	

5-2. BEZEL ASSY & STAND ASSY

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numero specifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.



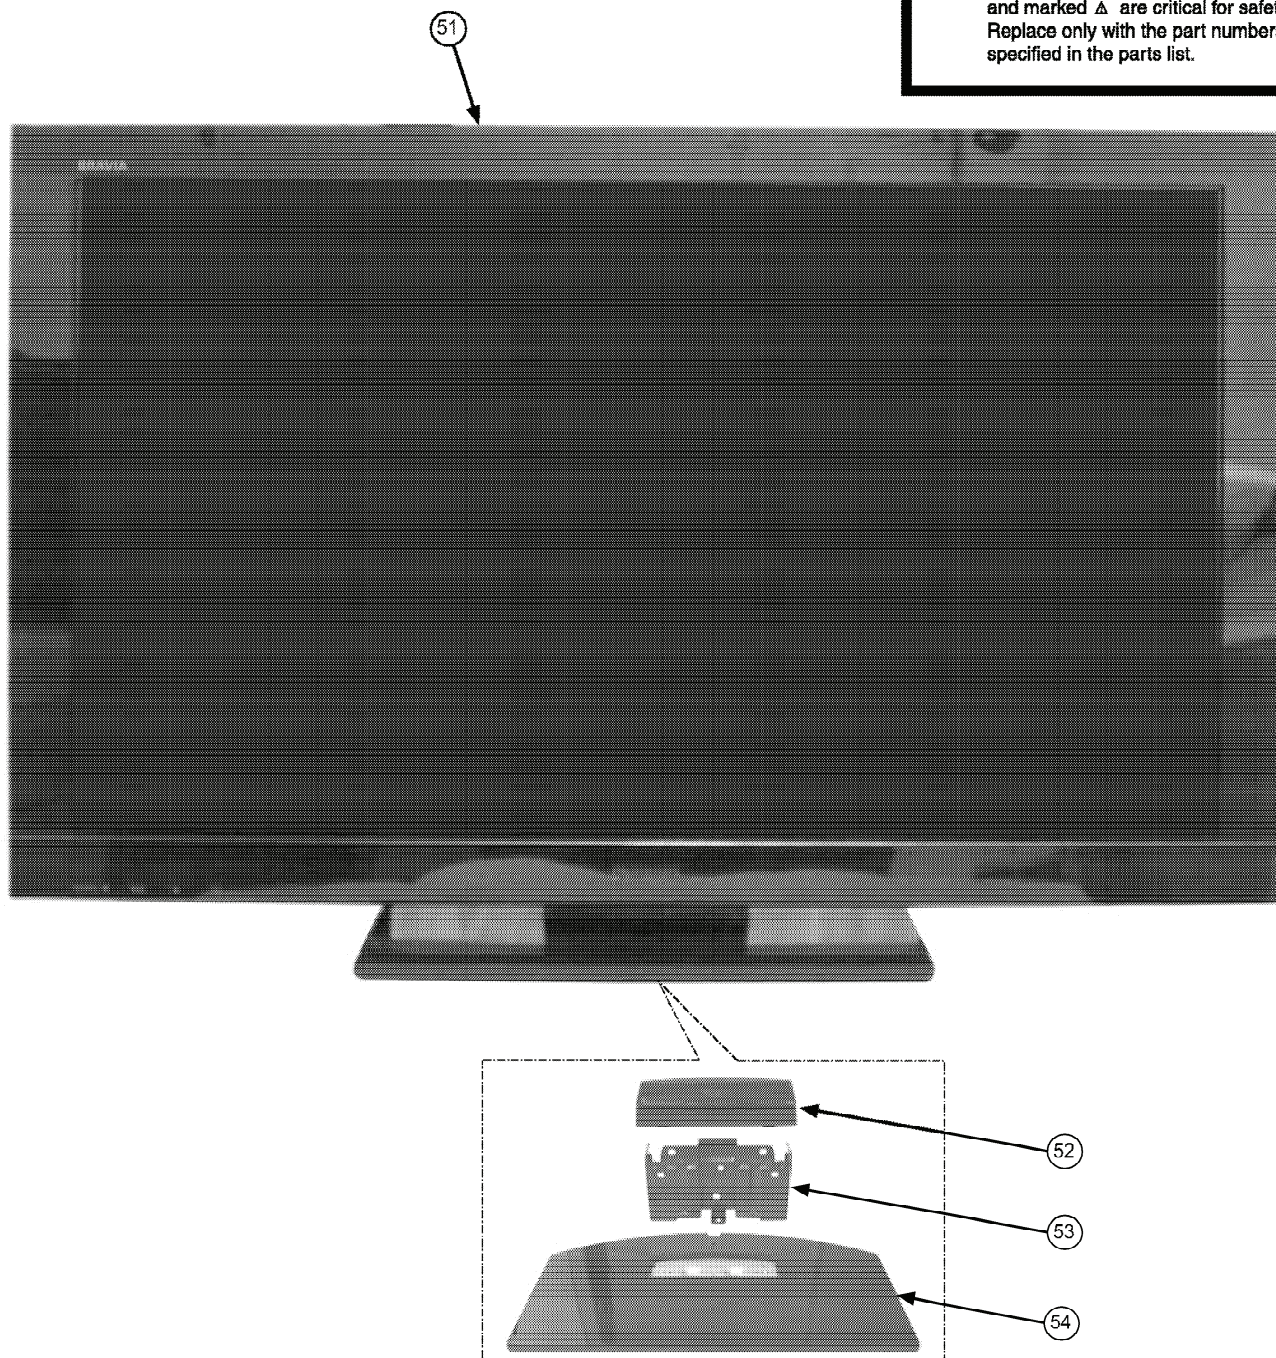


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2547-156-1	BEZEL (CON32) ASSY	32 inches	53	4-158-354-01	NECK (M3B)	32 inches
	X-2547-123-1	BEZEL (CON40) ASSY	40 inches		4-171-686-01	NECK (ML3B)	40 inches
52	4-158-400-11	COVER, NECK (M3B)	32 inches	54	X-2541-850-1	BASE (M3B) ASSY	32 inches
	4-171-690-01	COVER, NECK (ML3B)	40 inches		X-2541-851-1	BASE (ML3B) ASSY	40 inches

5-3. REAR COVER ASSY & POWER SUPPLY CORDS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

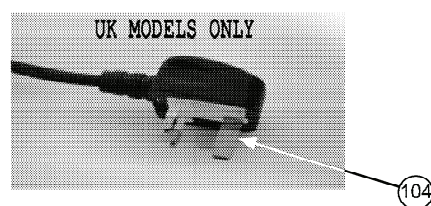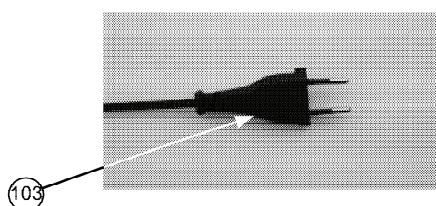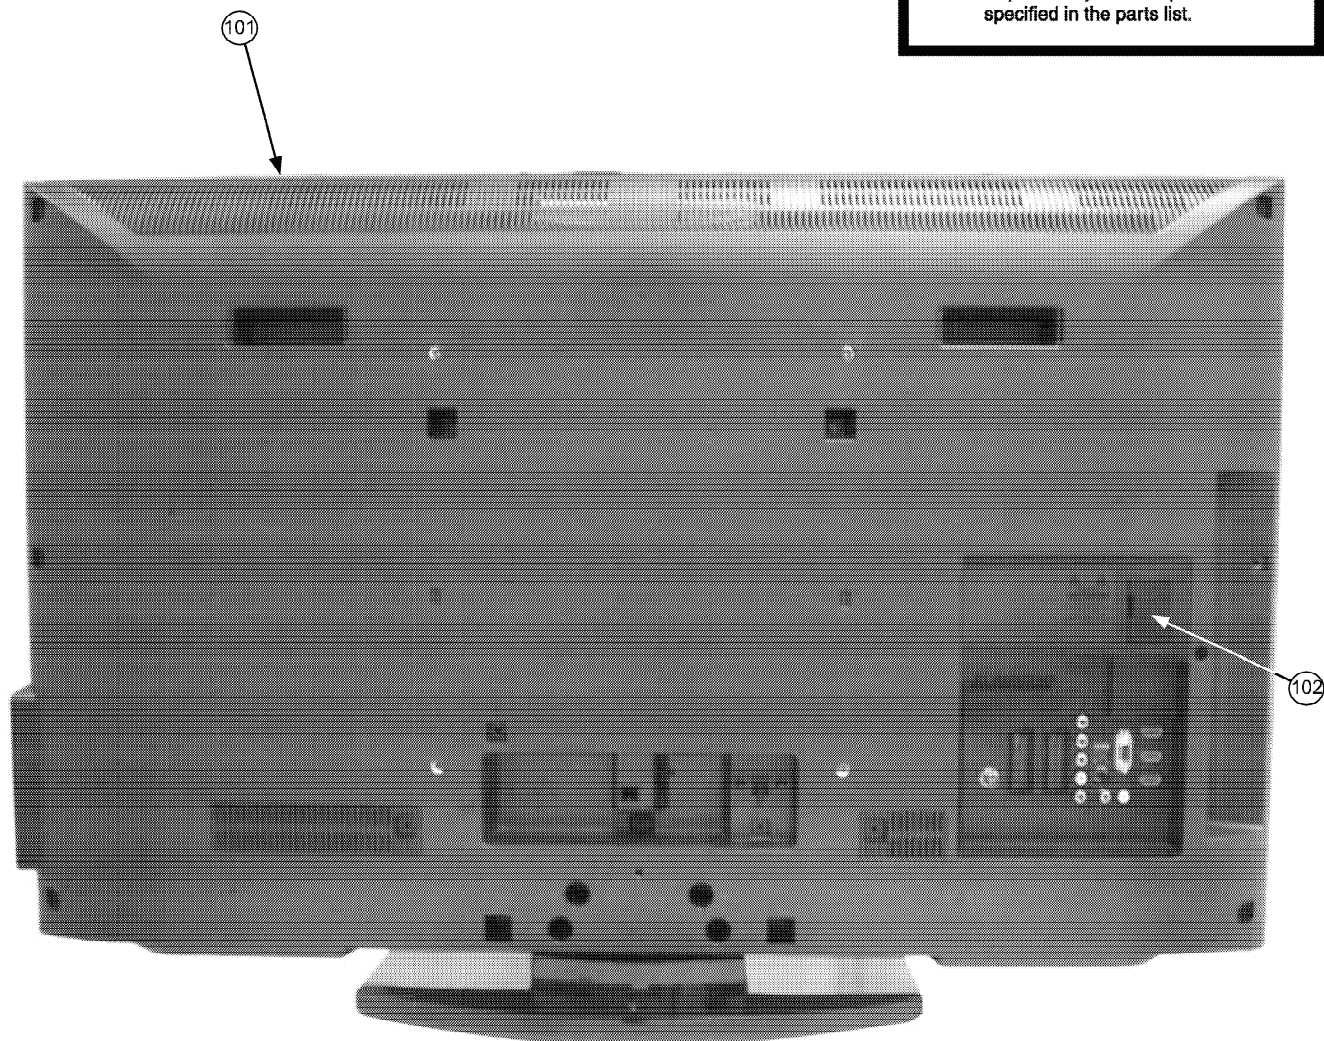

REF.NO.	PART.NO	DESCRIPTION	REMARK
101	X-2547-155-1	REAR COVER (CON32) ASSY	32 inches
	X-2547-124-1	REAR COVER (CON40) ASSY	40 inches
102	*3-106-546-51	ECS COVER	

REF.NO.	PART.NO	DESCRIPTION	REMARK
103	Δ 1-837-454-11	POWER-SUPPLY CORD (AEP)	32/40 inches
104	Δ 1-837-455-11	POWER-SUPPLY CORD (UK)	32/40 inches

SECTION 6 PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	<u>Page</u>
ACCESSORIES AND CONNECTORS :	21
REMOTE COMMANDER :	21

Note: To ensure safety and reliability it is Sony policy that boards should not be repaired in the field, as a result all boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual.

Note : Items marked “**” are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS							
32 INCHES							
	1-837-622-11	FLEXIBLE FLAT CABLE (TCON-BEN(CN4301))					
	*1-910-060-73	CONNECTOR ASSY 15P (G2L(CN6401-BEN(CN6006))					
	*1-910-060-76	MULTI HARNESS SPEAKER BEN(CN6007/7901) - HLR-H2LS-SPEAKERS)					
	*1-910-060-77	CONNECTOR ASSY 14P (G2L(CN6402)-INVERTER)					
40 INCHES							
	1-837-624-11	FLEXIBLE FLAT CABLE (TCON-BEN(CN4301))					
	*1-910-060-80	CONNECTOR ASSY 15P (G2M(CN6401-BEN(CN6006))					
	*1-910-060-83	MULTI HARNESS SPEAKER BEN(CN6007/7901) - HLR-H2LS-SPEAKERS)					
	*1-910-060-84	CONNECTOR ASSY 14P (G2M(CN6402)-INVERTER)					
INSTRUCTION MANUALS							
	*4-168-148-11	INSTRUCTION MANUAL (UK) ENGLISH					
	*4-168-148-21	INSTRUCTION MANUAL (AEP) GERMAN/SPANISH/ FRENCH/ITALIAN/DUTCH/PORTUGUESE					
	*4-168-148-31	INSTRUCTION MANUAL (AEP) BULGARIAN/CZECH/ DANISH/FINNISH/GREEK/HUNGARIAN/NORWEGIAN/ POLISH/ROMAINIAN/SWEDISH/SLOVAK/TURKISH					
REMOTE COMMANDER							
	1-487-828-11	REMOTE COMMANDER (RM-ED022)					

