

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

5-1. CHASSIS (26/32 Inches)

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

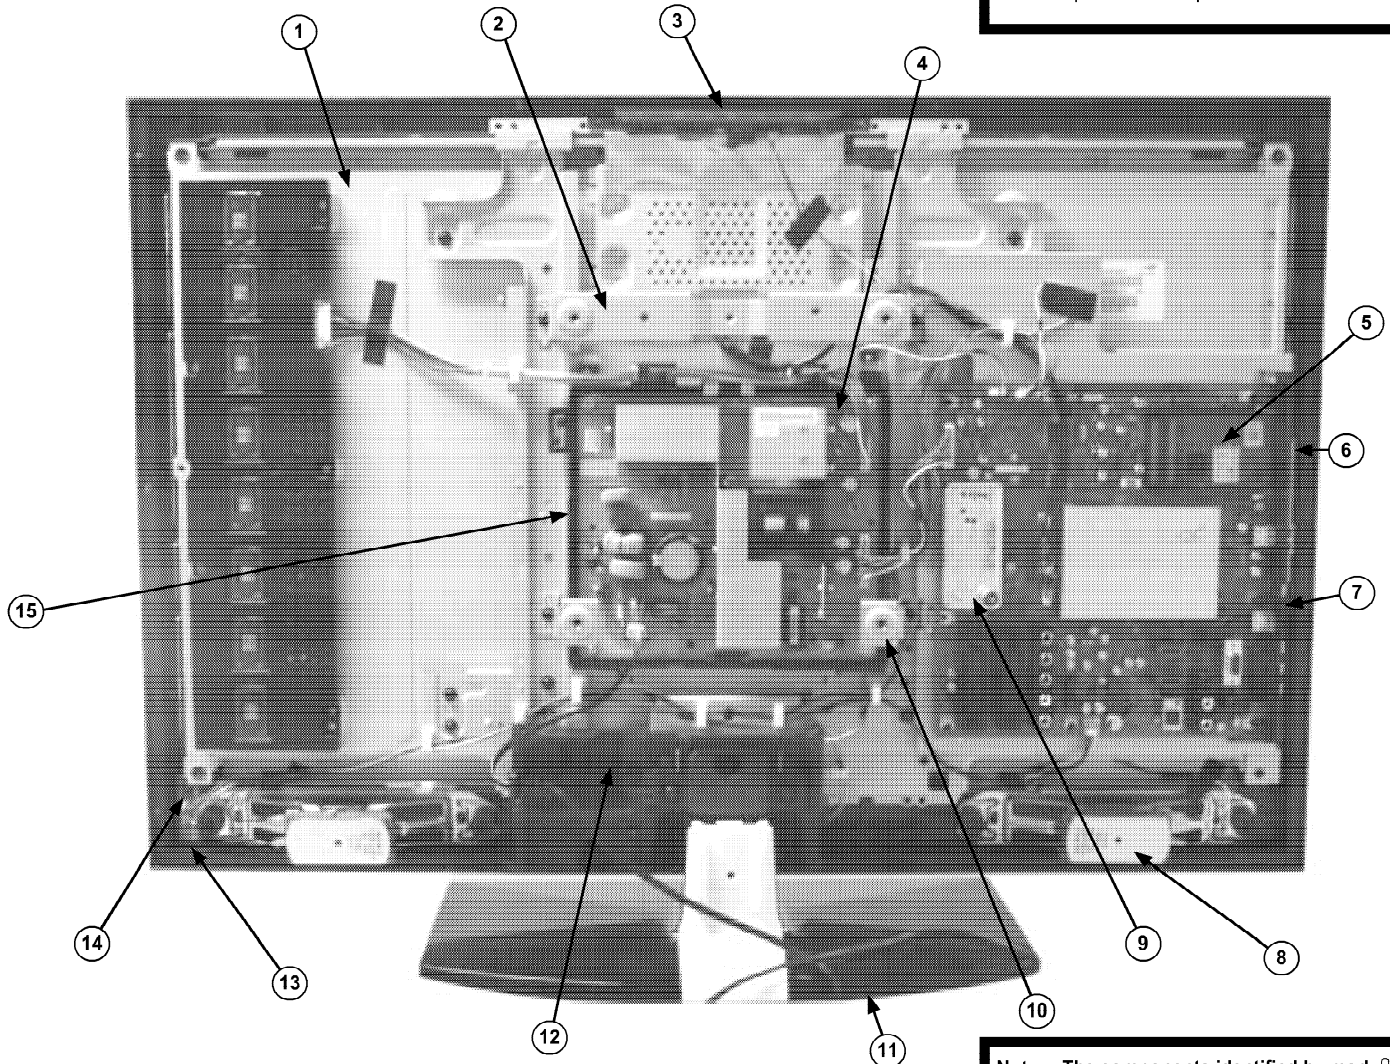


Note : The components identified by mark Δ contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-802-613-11	LCD PANEL (26 INCH WXGA TFT)	26 inches	10	3-298-273-01	FRAME, VESA (BOTTOM)	26 inches
	Δ 1-802-648-12	LCD PANEL (32 INCH FHD TFT)	32 inches		3-298-054-01	FRAME, VESA (BOTTOM)	32 inches
2	3-298-272-01	FRAME, VESA (TOP)	26 inches	11	X-2318-066-1	STAND (26E) ASSY	26 inches
	3-298-050-01	FRAME, VESA (TOP)	32 inches		X-2318-085-1	STAND (M_EE) ASSY	32 inches
3	Δ 1-480-708-11	SWITCH UNIT		12	3-290-055-01	UNDERCOVER (26EE)	26 inches
4	1-474-096-11	G1D BOARD, COMPLETE	26 inches		3-290-054-01	UNDERCOVER (32EE)	32 inches
	1-474-099-11	G1D BOARD, COMPLETE	32 inches	13	3-290-050-01	GUIDE LIGHT	
5	Δ *A-1556-412-A	BE1 BOARD, COMPLETE	26 inches	14	*A-1545-984-A	H2 BOARD, COMPLETE	
	Δ *A-1556-411-A	BE1 BOARD, COMPLETE	32 inches	15	*3-298-255-01	BRACKET, G1 (26/32)	26/32 inches
6	*4-101-356-02	CARD, DUMMY					
7	X-2189-647-1	SIDE JACK BRACKET ASSY (AEP)					
8	1-826-648-11	LOUDSPEAKER (4.2X15CM)	26/32 inches				
9	8-597-641-00	TUNER UNIT, DIGITAL BTD-HF411T					

5-2. CHASSIS (40 Inches)

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

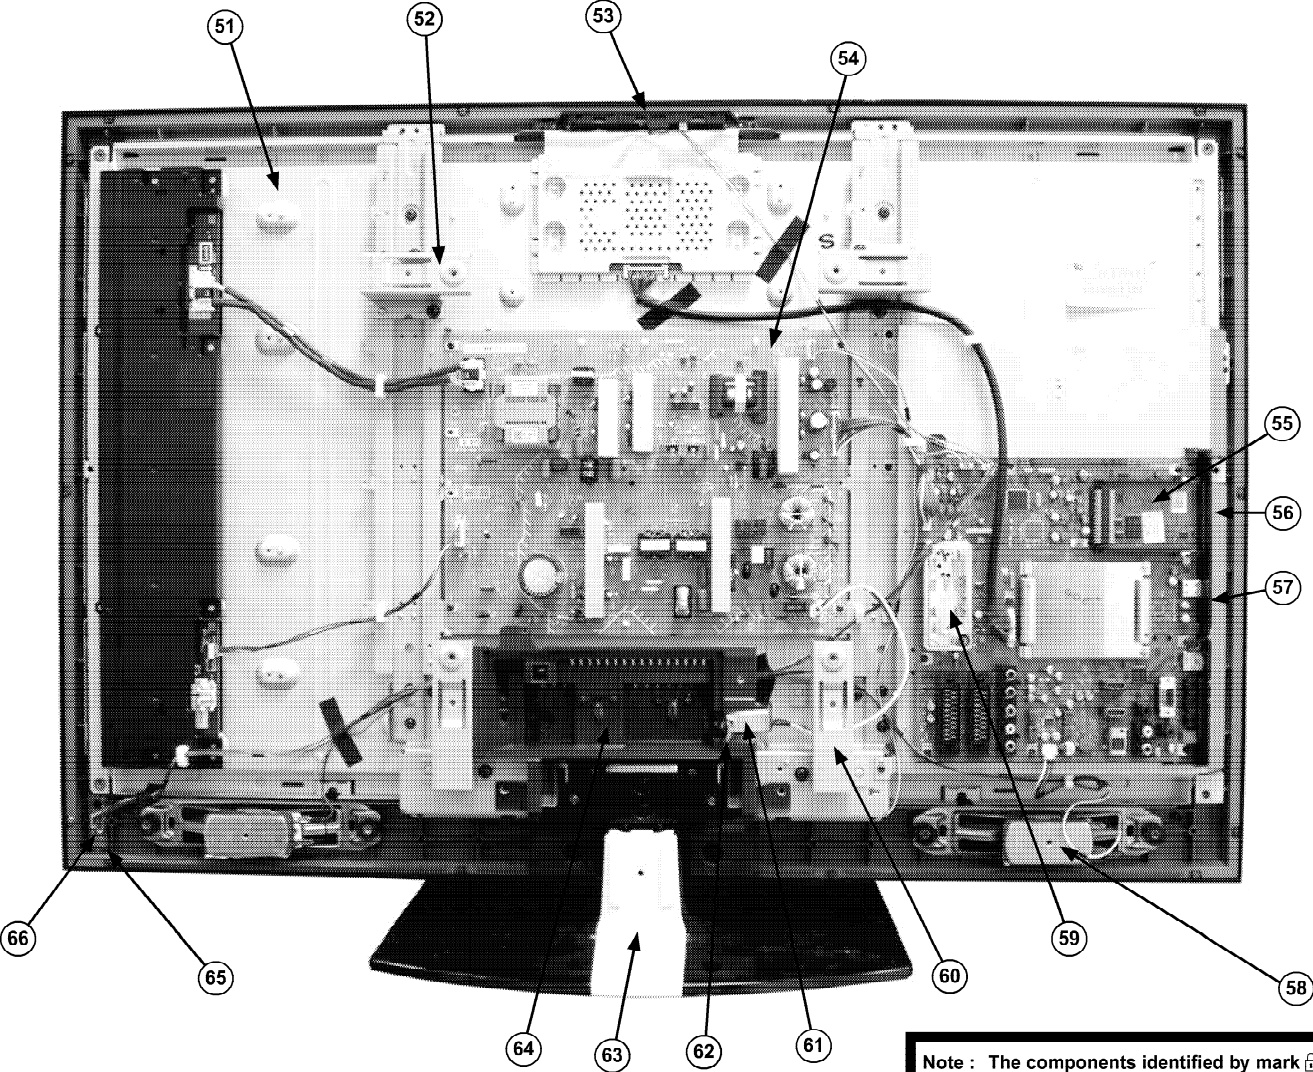


Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	Δ 1-802-664-12	LCD PANEL (40 INCH FHD TFT)	40 inches	64	3-290-053-01	UNDERCOVER (40EE)	40 inches
52	3-284-384-01	FRAME, VESA (TOP)	40 inches	65	3-290-050-01	GUIDE LIGHT	
53	Δ 1-480-708-11	SWITCH UNIT		66	*A-1545-984-A	H2 BOARD, COMPLETE	
54	*A-1548-233-A	IP5 BOARD, COMPLETE	40 inches				
55	 *A-1544-103-A	BE1 BOARD, COMPLETE	40 inches				
56	*4-101-356-02	CARD, DUMMY					
57	X-2189-647-1	SIDE JACK BRACKET ASSY (AEP)					
58	1-826-919-11	LOUDSPEAKER (4.2X15CM)	40 inches				
59	8-597-641-00	TUNER UNIT, DIGITAL BTD-HF411T					
60	3-298-056-01	FRAME, VESA (BOTTOM)	40 inches				
61	Δ 1-821-909-11	INLET, AC (2 PIN)	40 inches				
62	Δ 3-298-060-01	BRACKET, AC INLET	40 inches				
63	X-2318-084-1	STAND (ML_EE) ASSY	40 inches				

5-3. BEZEL & FRAME ASSY

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.


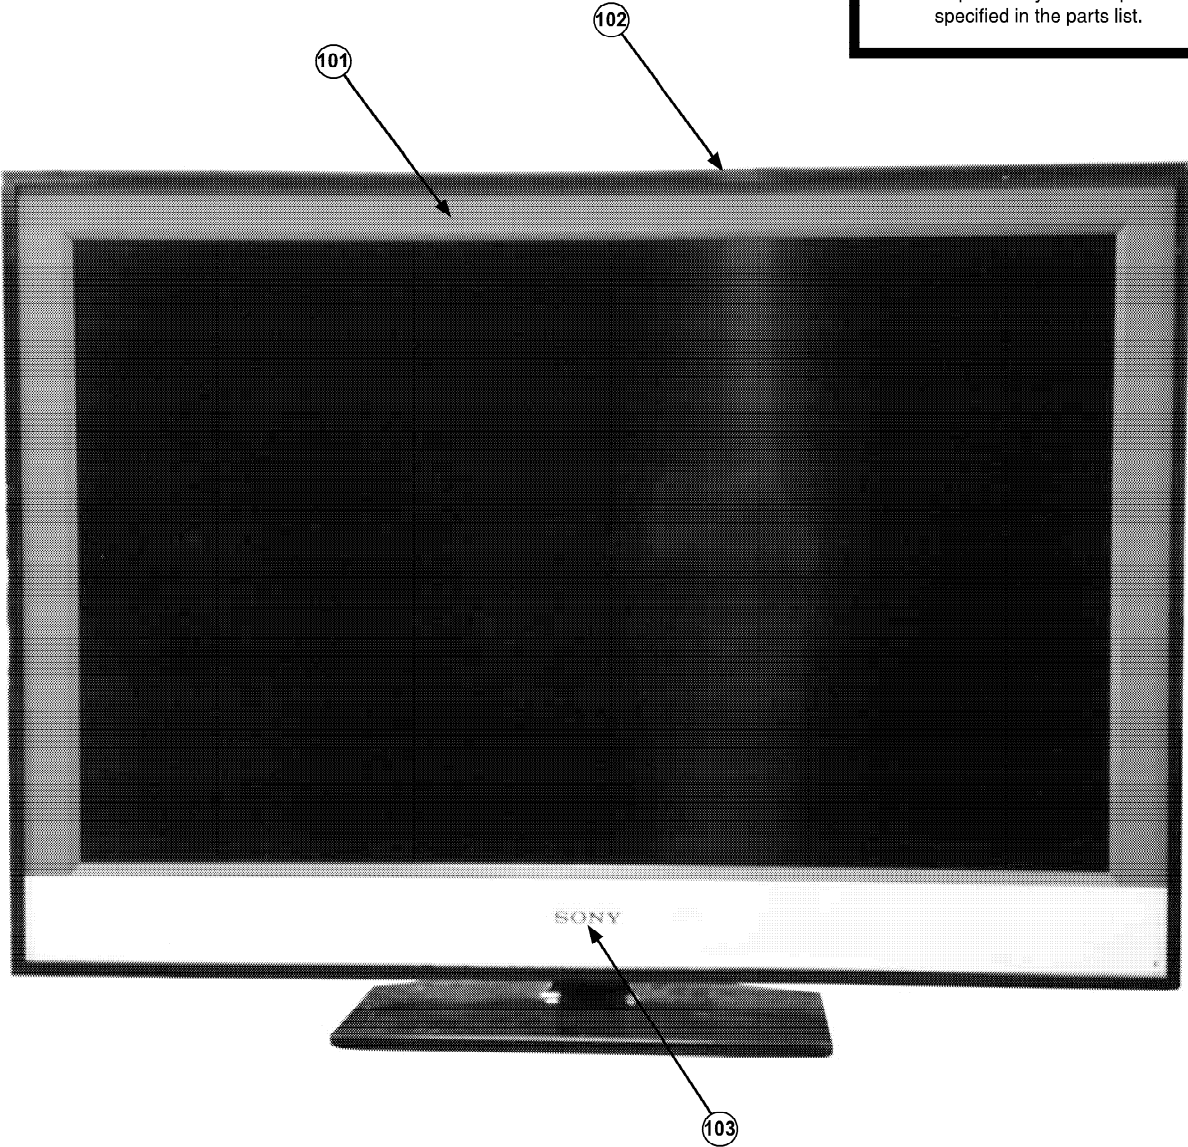


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	X-2190-038-1	BEZEL, ASSY (26EE)	26 inches				
	X-2190-039-1	BEZEL, ASSY (32EE)	32 inches				
	X-2190-040-1	BEZEL, ASSY (40EE)	40 inches				
102	X-2190-042-1	FRAME, ASSY (26EE)	26 inches				
	X-2190-043-1	FRAME, ASSY (32EE)	32 inches				
	X-2190-044-1	FRAME, ASSY (40EE)	40 inches				
103	1-480-680-11	ILLUMINATION MODULE					

5-4. REAR COVER & POWER SUPPLY CORDS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

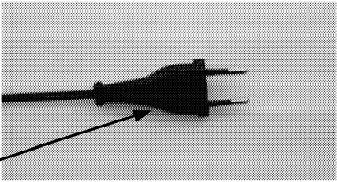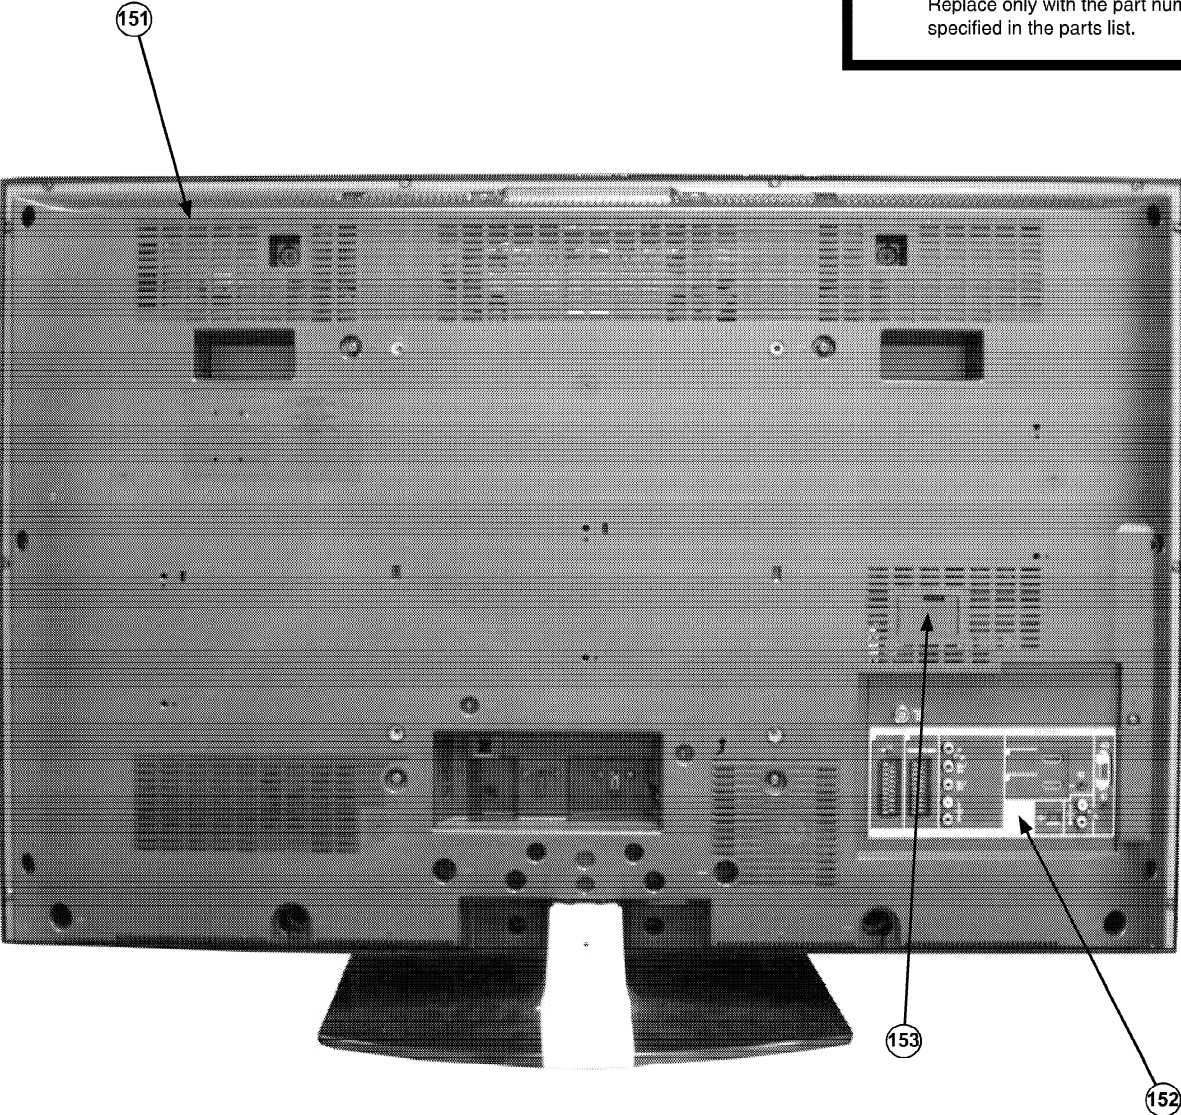

REF.NO.	PART.NO	DESCRIPTION	REMARK
151	3-288-312-01	COVER, REAR (26EE)	26 inches
	3-288-311-01	COVER, REAR (32EE)	32 inches
	3-288-309-01	COVER, REAR (40EE)	40 inches
152	*3-298-011-01	LABEL, REAR TERMINAL	
153	3-106-546-01	COVER,ECS	

NOTE :

If ordering item 151 (Rear cover) please order item 152 (Label,rear terminal) as well.

REF.NO.	PART.NO	DESCRIPTION	REMARK
154	Δ 1-833-265-21	POWER-SUPPLY CORD	(26" AEP)
	Δ 1-832-132-41	POWER-SUPPLY CORD	(32" AEP)
	Δ 1-835-200-11	POWER-SUPPLY CORD	(40" AEP)
155	Δ 1-832-170-51	POWER-SUPPLY CORD	(26" UK)
	Δ 1-835-341-11	POWER-SUPPLY CORD	(32" UK)
	Δ 1-835-165-11	POWER SUPPLY CORD	(40" UK)

SECTION 6

ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	Page
BE1 BOARD COMPLETE Parts List :	44
H2 BOARD COMPLETE Parts List :	60
ACCESSORIES AND CONNECTORS :	61
REMOTE COMMANDER :	61

Note: To ensure safety and reliability it is Sony policy that power supply boards should not be repaired at component level in the field as a result... The G1D and IP5 boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
 * A-1556-412-A	BE1 Board, Complete (26 Inches)			C2227	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
 * A-1556-411-A	BE1 Board, Complete (32 Inches)			C2228	1-135-366-11	ELECT CHIP 100UF	20% 16V
 * A-1544-103-A	BE1 Board, Complete (40 Inches)			C2229	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V
< CAPACITOR >				C2230	1-135-366-11	ELECT CHIP 100UF	20% 16V
				C2231	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C1001	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2236	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1002	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2237	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1003	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1004	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1006	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C2240	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C1009	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2244	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C1010	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2245	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C1011	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2246	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1012	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2247	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1017	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2249	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C1018	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2250	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1019	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C2251	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1020	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2254	1-114-407-21	ELECT CHIP 4.7UF	20% 50V
C1021	1-100-766-21	ELECT CHIP 47UF	20% 16V	C2255	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C1022	1-100-766-21	ELECT CHIP 47UF	20% 16V	C2256	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1025	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2257	1-165-882-91	CERAMIC CHIP 2.2UF	50V
C1026	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2258	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1027	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2259	1-165-621-91	CERAMIC CHIP 0.1UF	50V
C1028	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2260	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1029	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2261	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1030	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2268	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1031	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2269	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1036	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2270	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1037	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2275	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1038	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C3014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3026	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C1040	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C3027	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2200	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3028	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2201	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3029	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2202	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C3030	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2205	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3031	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2206	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3032	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2208	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C3033	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2210	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	C3072	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2211	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3073	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3075	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3076	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2216	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	C3077	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2217	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3078	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3079	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2219	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C3406	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3407	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2223	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3417	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2225	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3418	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2226	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C3419	1-112-781-11	CERAMIC CHIP 1UF	10% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C3420	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C4046	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3426	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4047	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3427	1-114-407-21	ELECT CHIP 4.7UF	20%	50V	C4049	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3428	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4051	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3429	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C4053	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3430	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4055	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3431	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4057	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3442	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4059	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3443	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4061	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3446	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4063	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3447	1-114-193-11	ELECT CHIP 470UF	20%	25V	C4065	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3448	1-112-800-11	ELECT CHIP 100UF	20%	35V	C4067	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3449	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C4070	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3450	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4071	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3451	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4072	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3452	1-112-800-11	ELECT CHIP 100UF	20%	35V	C4073	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3453	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C4074	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3458	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4075	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3459	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4076	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3464	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4077	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3465	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4078	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3466	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4079	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3467	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C4502	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3469	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4510	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3470	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3480	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3482	1-100-767-21	ELECT CHIP 220UF	20%	16V	C4517	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C3484	1-112-065-11	CERAMIC CHIP 4.7UF	10%	16V	C4518	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4003	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4519	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4006	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4520	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4521	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4009	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4522	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4012	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4523	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4013	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4524	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4525	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4016	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4527	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4017	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4528	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4019	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4529	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4021	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4532	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4023	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4533	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4025	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4534	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4027	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4535	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4030	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4710	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4031	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4711	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V
C4033	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4712	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V
C4035	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4718	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4038	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4723	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4039	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4724	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4042	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4726	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4043	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4727	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
C4728	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5033	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4729	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5034	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4730	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V		C5035	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4731	1-114-399-21	ELECT CHIP 47UF	20%	6.3V		C5036	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4732	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5038	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4733	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5039	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4734	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5040	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4735	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5041	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4736	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5043	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4737	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5044	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4738	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5045	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4739	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5046	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4740	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5047	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4741	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5049	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4742	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5050	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4743	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5051	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4744	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5052	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4745	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V		C5058	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4747	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5060	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4748	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V		C5062	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4750	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5064	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	
C4751	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V		C5065	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4753	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5067	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	
C4754	1-112-774-11	CERAMIC CHIP 470PF	10%	50V		C5068	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C4755	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5069	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C4756	1-112-774-11	CERAMIC CHIP 470PF	10%	50V		C5074	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	
C4757	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5075	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C5006	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5076	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5078	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C5008	1-114-327-11	CERAMIC CHIP 1UF	10%	16V		C5079	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	
C5009	1-114-327-11	CERAMIC CHIP 1UF	10%	16V		C5084	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C5011	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5087	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5013	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5088	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5014	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5091	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5015	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5092	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5016	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5093	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5017	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5094	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5018	1-112-774-11	CERAMIC CHIP 470PF	10%	50V		C5095	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5019	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5096	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5020	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5097	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5021	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5098	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5023	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5099	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5024	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5100	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5026	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5101	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5027	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V		C5102	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5028	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V		C5103	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	
C5029	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5104	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5030	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V		C5500	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	
C5031	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V		C5501	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C5032	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C5502	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5504	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V	C6428	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5505	1-164-842-11	CERAMIC CHIP 2PF	0.25PF 50V	C6429	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5506	1-164-843-11	CERAMIC CHIP 3PF	0.25PF 50V	C6430	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C5507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6431	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5508	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C6432	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C5509	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6434	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5510	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6435	1-135-366-11	ELECT CHIP 100UF	20% 16V
C5511	1-104-905-11	DOUBLE LAYER 0.22F	5.5V	C6436	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5512	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C6437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5513	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C6438	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5514	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6439	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5515	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6440	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6441	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5517	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6442	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5519	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6445	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C5520	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6447	1-127-772-81	CERAMIC CHIP 0.033UF	10% 10V
C5523	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6448	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C5524	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6449	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5525	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6450	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C5526	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6451	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C5527	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6452	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C5528	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6454	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5532	1-100-765-21	ELECT CHIP 10UF	20% 16V	C6456	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5534	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5542	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C6460	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6470	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6471	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6401	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C6472	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6474	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6476	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6406	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		C6479	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6407	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6483	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6408	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6486	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6409	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C6487	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C6410	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6488	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6411	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6489	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6412	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6494	1-112-786-11	ELECT CHIP 330UF	20% 4V
C6413	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6498	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C6414	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6499	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6415	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6501	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6416	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6502	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6417	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6418	1-164-940-11	CERAMIC CHIP 0.0033UF	10.00% 16V	C6514	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6419	1-100-766-21	ELECT CHIP 47UF	20% 16V	C6516	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C6421	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6517	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C6422	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6519	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6423	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6522	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6525	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6426	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6530	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6427	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6531	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6532	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7024	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6535	1-112-786-11	ELECT CHIP 330UF	20% 4V	C7026	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6536	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7027	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6537	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C7028	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7029	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6545	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7030	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6570	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7034	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6571	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7035	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6572	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7036	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6573	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6574	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7038	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6575	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7039	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6576	1-114-410-21	CERAMIC CHIP 680PF	2% 50V	C7040	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6577	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7041	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6578	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7043	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6579	1-112-786-11	ELECT CHIP 330UF	20% 4V	C7044	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6580	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7045	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6581	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7100	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6582	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7101	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6584	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7102	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C6585	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C7103	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6586	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V	C7104	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C6587	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7105	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C6596	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V	C7106	1-164-856-81	CERAMIC CHIP 18PF	5.00% 50V
C6597	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C7107	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6598	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7108	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6599	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7109	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6608	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V	C7110	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V
C7000	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7111	1-114-296-11	ELECT CHIP 820UF	20% 6.3V
C7001	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7002	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7113	1-100-767-21	ELECT CHIP 220UF	20% 16V
C7003	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7004	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7115	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7005	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7200	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7006	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7201	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7007	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7202	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7008	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7203	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7009	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7204	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7010	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7205	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7011	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7206	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7013	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7207	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7014	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7015	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7210	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7017	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7211	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7018	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7212	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7019	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7020	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7214	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7021	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7022	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7216	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7023	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7217	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7717	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8030	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8031	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8032	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8035	1-135-366-11	ELECT CHIP 100UF	20% 16V
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8201	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8203	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8204	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8205	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7228	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8206	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7229	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8207	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7230	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8208	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8209	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7232	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8216	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7233	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7235	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7236	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8226	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7237	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8227	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8228	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8229	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7240	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8230	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7241	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7242	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8232	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7243	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8235	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7244	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8237	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7245	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8238	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C7246	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8239	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C7300	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C8240	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7301	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C8241	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7302	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C8242	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8243	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7401	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8244	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7402	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8245	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7403	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C8246	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7404	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C8247	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7405	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8248	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7406	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8249	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7407	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8250	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7703	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8251	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7708	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8252	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7709	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8253	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7710	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8254	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7711	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8256	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7712	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8258	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7713	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8260	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C7714	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
C7715	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V				
C7716	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< CONNECTOR >				D3400	6-501-732-01	DIODE MAZ8056G0LS0	
CN1000	1-821-054-11	21PIN SOCKET		D3401	6-501-732-01	DIODE MAZ8056G0LS0	
CN1001	1-821-054-11	21PIN SOCKET		D3403	6-500-335-01	DIODE MC2838-T112-1	
CN2200	1-779-884-11	CONNECTOR 4P		D3404	6-501-817-01	DIODE MA2J1110GLS0	
CN3001	1-821-013-11	D SUB CONNECTOR		D3405	6-501-817-01	DIODE MA2J1110GLS0	
CN3004	1-821-844-11	OPTICAL OUT CONNECTOR		D3406	6-501-619-01	DIODE PZU9.1B2	
CN3400	1-819-460-11	HEADER ASSEMBLY FOR PWB 4P		D3407	6-502-172-01	DI UMZ5.6KTL	
CN4500	1-821-819-11	HDMI CONNECTOR		D4502	6-500-335-01	DIODE MC2838-T112-1	
CN4502	1-821-645-11	CONNECTOR, HDMI		D4505	6-500-335-01	DIODE MC2838-T112-1	
CN4503	1-821-819-11	HDMI CONNECTOR		D4506	6-500-335-01	DIODE MC2838-T112-1	
CN5500	1-818-714-21	HEADER ASSEMBLY 20P		D5501	6-501-817-01	DIODE MA2J1110GLS0	
CN5502	1-784-254-11	CONNECTOR 10P		D5503	6-501-818-01	DIODE MA2J1130GLS0	
CN5503	1-779-936-51	CONNECTOR, FFC/FPC 18P		D5504	8-719-058-24	DIODE RB501V-40TE-17	
CN6401	1-819-797-11	HEADER ASSEMBLY FOR PWB 13P		D5505	6-501-817-01	DIODE MA2J1110GLS0	
CN6402	1-819-474-11	HEADER ASSEMBLY FOR PWB 6P		D5506	6-501-817-01	DIODE MA2J1110GLS0	
CN7100	1-817-109-11	CONNECTOR, USB (A)		D5507	6-500-335-01	DIODE MC2838-T112-1	
CN7501	1-820-209-11	MEMORY STICK CONNECTOR		D5508	6-500-335-01	DIODE MC2838-T112-1	
CN7700	*1-793-769-22	CONNECTOR, CARD (PCMCIA CARD)		D5510	6-502-172-01	DI UMZ5.6KTL	
CN8000	1-819-784-21	PIN, CONNECTOR 50P		D5520	6-501-614-01	DIODE PZU5.6B2	
CN8001	1-784-254-11	CONNECTOR 10P		D5521	6-500-335-01	DIODE MC2838-T112-1	
< DIODE >				D5522	6-500-335-01	DIODE MC2838-T112-1	
D1000	8-719-058-24	DIODE RB501V-40TE-17		D5523	8-719-058-24	DIODE RB501V-40TE-17	
D1001	6-502-177-01	DI UMZ9.1KTL		D5524	8-719-058-24	DIODE RB501V-40TE-17	
D1002	6-502-177-01	DI UMZ9.1KTL		D5525	8-719-058-24	DIODE RB501V-40TE-17	
D1003	6-502-177-01	DI UMZ9.1KTL		D5526	8-719-058-24	DIODE RB501V-40TE-17	
D1004	6-501-623-01	DIODE PZU13B2		D6401	6-501-614-01	DIODE PZU5.6B2	
D1005	6-502-180-01	DI UMZ12KTL		D6404	6-500-334-01	DIODE MC2836-T112-1	
D1006	6-502-177-01	DI UMZ9.1KTL		D6406	6-501-528-01	DIODE 1SMA5915BT3G	
D1007	6-502-177-01	DI UMZ9.1KTL		D6407	6-501-528-01	DIODE 1SMA5915BT3G	
D1008	6-502-177-01	DI UMZ9.1KTL		D6408	6-501-817-01	DIODE MA2J1110GLS0	
D1009	6-502-177-01	DI UMZ9.1KTL		D6409	6-500-295-01	DIODE PTZ-TE25-5.6B	
D1010	6-501-623-01	DIODE PZU13B2		D6412	6-501-528-01	DIODE 1SMA5915BT3G	
D1011	6-502-177-01	DI UMZ9.1KTL		D6414	6-501-614-01	DIODE PZU5.6B2	
D1012	6-501-619-01	DIODE PZU9.1B2		D6418	6-500-334-01	DIODE MC2836-T112-1	
D1013	6-502-180-01	DI UMZ12KTL		D6431	6-501-528-01	DIODE 1SMA5915BT3G	
D1014	6-502-180-01	DI UMZ12KTL		D6432	6-500-334-01	DIODE MC2836-T112-1	
D3000	6-502-180-01	DI UMZ12KTL		D6433	6-500-334-01	DIODE MC2836-T112-1	
D3002	6-502-180-01	DI UMZ12KTL		D7100	6-500-335-01	DIODE MC2838-T112-1	
D3011	6-501-614-01	DIODE PZU5.6B2		D7101	6-500-701-01	DIODE PGB1010603NR	
D3014	6-500-335-01	DIODE MC2838-T112-1		D7102	6-500-701-01	DIODE PGB1010603NR	
D3027	6-502-180-01	DI UMZ12KTL		D7400	8-719-053-07	DIODE SML-310MTT86	
D3029	6-502-180-01	DI UMZ12KTL		D7401	8-719-053-07	DIODE SML-310MTT86	
D3055	6-501-620-01	DIODE PZU10B2		D7402	8-719-053-07	DIODE SML-310MTT86	
D3056	6-502-180-01	DI UMZ12KTL		D7403	8-719-053-07	DIODE SML-310MTT86	
D3057	6-502-177-01	DI UMZ9.1KTL		D8202	6-500-335-01	DIODE MC2838-T112-1	
D3058	6-502-180-01	DI UMZ12KTL		D8210	6-502-177-01	DI UMZ9.1KTL	
D3059	6-502-180-01	DI UMZ12KTL		D8212	6-502-177-01	DI UMZ9.1KTL	
D3060	6-501-619-01	DIODE PZU9.1B2		D8213	6-502-177-01	DI UMZ9.1KTL	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ET2200	1-780-482-11	EARTH TERMINAL		FB6400	1-400-915-21	FERRITE	OUH
ET2201	1-780-482-11	EARTH TERMINAL		FB6401	1-400-089-21	FERRITE	OUH
ET5001	1-694-974-21	CONTACT TERMINAL		FB6402	1-400-834-11	FERRITE	OUH
ET5002	1-694-974-21	CONTACT TERMINAL		FB6403	1-400-089-21	FERRITE	OUH
ET5003	1-694-974-21	CONTACT TERMINAL		FB6404	1-400-834-11	FERRITE	OUH
ET5004	1-694-974-21	CONTACT TERMINAL		FB6405	1-400-834-11	FERRITE	OUH
ET5006	1-694-974-21	CONTACT TERMINAL		FB6406	1-400-089-21	FERRITE	OUH
ET6400	1-780-482-11	EARTH TERMINAL		FB6407	1-400-834-11	FERRITE	OUH
ET6401	1-780-482-11	EARTH TERMINAL		FB6409	1-400-089-21	FERRITE	OUH
ET6402	1-780-482-11	EARTH TERMINAL		FB6410	1-400-915-21	FERRITE	OUH
ET6403	1-780-482-11	EARTH TERMINAL		FB6411	1-400-915-21	FERRITE	OUH
ET6404	1-780-482-11	EARTH TERMINAL		FB6412	1-400-915-21	FERRITE	OUH
ET6405	1-780-482-11	EARTH TERMINAL		FB6413	1-400-089-21	FERRITE	OUH
ET6406	1-780-482-11	EARTH TERMINAL		FB6414	1-400-915-21	FERRITE	OUH
				FB6415	1-400-915-21	FERRITE	OUH
< FUSE >				FB6417	1-400-089-21	FERRITE	OUH
F3000	Δ 1-576-646-11	FUSE	0.5A 50V	FB6418	1-400-915-21	FERRITE	OUH
F3401	Δ 1-576-933-21	FUSE	5A 24V	FB7100	1-400-382-11	FERRITE	OUH
< FERRITE BEAD >				FB7101	1-400-382-11	FERRITE	OUH
FB2200	1-469-869-21	FERRITE	OUH	FB7102	1-400-382-11	FERRITE	OUH
FB2201	1-400-834-11	FERRITE	OUH	FB7500	1-400-807-21	FERRITE	OUH
FB2202	1-400-834-11	FERRITE	OUH	FB7709	1-469-869-21	FERRITE	OUH
FB2203	1-400-834-11	FERRITE	OUH	FB8200	1-414-760-21	FERRITE	OUH
FB2204	1-400-834-11	FERRITE	OUH	< FILTER >			
FB2205	1-400-834-11	FERRITE	OUH	FL5000	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2206	1-400-834-11	FERRITE	OUH	FL5003	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2207	1-400-834-11	FERRITE	OUH	FL5008	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2208	1-400-834-11	FERRITE	OUH	FL5010	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2209	1-400-834-11	FERRITE	OUH	FL5011	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2210	1-400-834-11	FERRITE	OUH	FL5012	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2211	1-400-834-11	FERRITE	OUH	FL5013	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2214	1-400-591-22	FERRITE	OUH	FL5015	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2215	1-400-834-11	FERRITE	OUH	FL5016	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2216	1-400-462-21	FERRITE	OUH	FL5019	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2218	1-400-834-11	FERRITE	OUH	FL5023	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB3004	1-400-141-22	FERRITE	OUH	FL5024	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB3006	1-400-834-11	FERRITE	OUH	< IC >			
FB3007	1-400-244-11	FERRITE	OUH	IC1000	6-701-173-01	IC MC74LVXT4053DTR2	
FB3080	1-469-869-21	FERRITE	OUH	IC2200	6-709-257-01	IC 74LVC4066PW	
FB3406	1-400-089-21	FERRITE	OUH	IC2202	6-709-932-01	IC MM3141CNRE	
FB3407	1-400-089-21	FERRITE	OUH	IC2203	6-709-607-01	IC LA5795T-TLM-E	
FB3408	1-400-089-21	FERRITE	OUH	IC3000	6-704-600-01	IC M24C02-WMN6T(B)	
FB3409	1-400-089-21	FERRITE	OUH	IC3004	8-759-242-64	IC TC4W53F	
FB4000	1-400-244-11	FERRITE	OUH	IC3400	6-710-904-01	IC TPA3100D2PHPR	
FB4001	1-400-244-11	FERRITE	OUH	IC4001	6-711-262-01	IC HYB18TC256160BF-3S	
FB4500	1-400-693-21	FERRITE	OUH	IC4002	6-711-262-01	IC HYB18TC256160BF-3S	
FB4502	1-400-693-21	FERRITE	OUH	IC4500	6-704-600-01	IC M24C02-WMN6T(B)	
FB4503	1-400-693-21	FERRITE	OUH				
FB4504	1-400-141-22	FERRITE	OUH				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC4504	6-704-600-01	IC M24C02-WMN6T(B)		L2207	1-412-058-11	INDUCTOR	10UH
IC4505	6-704-600-01	IC M24C02-WMN6T(B)		L2208	1-412-058-11	INDUCTOR	10UH
IC4508	8-753-282-08	IC CXB1444R-T6		L2209	1-469-549-21	INDUCTOR	1UH
IC4509	6-711-332-01	IC TC7SG17FU (TE85R,F)		L2210	1-469-549-21	INDUCTOR	1UH
IC5500	6-704-573-01	IC M24C32-WMN6T(B)		L2211	1-469-549-21	INDUCTOR	1UH
IC5502	6-712-337-01	IC PCA8563T/4		L2212	1-469-555-21	INDUCTOR	10UH
IC5503	6-704-573-01	IC M24C32-WMN6T(B)		L3401	1-457-429-11	INDUCTOR	22UH
IC5504	6-703-175-01	IC PST3629UL		L3402	1-457-429-11	INDUCTOR	22UH
IC5505	6-804-648-01	IC MB90F334APMC-GE1		L3403	1-457-429-11	INDUCTOR	22UH
IC5507	6-712-527-01	IC MM3154XURE		L3406	1-457-429-11	INDUCTOR	22UH
IC6401	6-712-744-01	IC TK11190CSCL-G		L5502	1-414-754-11	INDUCTOR	10UH
IC6402	6-710-922-01	IC BD9853AFV-E2		L5503	1-412-054-21	INDUCTOR	2.2UH
IC6403	6-710-922-01	IC BD9853AFV-E2		L6400	1-457-455-11	INDUCTOR	10UH
IC6405	6-711-145-01	IC TPS51124RGER		L6401	1-457-455-11	INDUCTOR	10UH
IC6570	6-712-749-01	IC MM1701YHBE		L6402	1-414-398-11	INDUCTOR	10UH
IC6571	6-710-949-01	IC SN0608006PWPR		L6403	1-457-439-11	INDUCTOR	4.7UH
IC6572	6-712-787-01	IC MM1701VHBE		L6404	1-457-439-11	INDUCTOR	4.7UH
IC6573	6-706-419-01	IC LM393DT (A)		L6405	1-457-439-11	INDUCTOR	4.7UH
IC7000	6-712-788-01	IC UPD61300F1-220-LU2-A		L6406	1-457-455-11	INDUCTOR	10UH
IC7100	6-703-175-01	IC PST3629UL		L6407	1-457-439-11	INDUCTOR	4.7UH
IC7101	6-711-288-01	IC MIC2005-0.5YM6TR		L6408	1-457-455-11	INDUCTOR	10UH
IC7200	6-712-189-01	IC EDE5116AJBG-6E-E		L6409	1-457-455-11	INDUCTOR	10UH
IC7201	6-712-189-01	IC EDE5116AJBG-6E-E		L6410	1-457-455-11	INDUCTOR	10UH
IC7300	6-710-648-01	IC NAND256W3A2BN6F		L6411	1-457-455-11	INDUCTOR	10UH
IC7701	6-707-850-01	IC TC74LCX245FT(EKJ)		L6412	1-457-455-11	INDUCTOR	10UH
IC7704	6-707-853-01	IC TC74LCX541FT(EKJ)		L6413	1-457-455-11	INDUCTOR	10UH
IC7705	6-707-853-01	IC TC74LCX541FT(EKJ)		L6417	1-457-455-11	INDUCTOR	10UH
IC7706	6-707-853-01	IC TC74LCX541FT(EKJ)		L6418	1-457-455-11	INDUCTOR	10UH
IC7707	6-707-853-01	IC TC74LCX541FT(EKJ)		L6419	1-457-455-11	INDUCTOR	10UH
IC7708	6-707-853-01	IC TC74LCX541FT(EKJ)		L7100	1-457-374-21	INDUCTOR	0UH
IC7709	6-707-853-01	IC TC74LCX541FT(EKJ)		L7400	1-412-058-11	INDUCTOR	10UH
IC7710	6-711-288-01	IC MIC2005-0.5YM6TR		L8000	1-457-539-11	INDUCTOR	0UH
IC8200	8-753-299-00	IC CXA3767R-T6		L8001	1-457-539-11	INDUCTOR	0UH
< SOCKET >				L8002	1-457-539-11	INDUCTOR	0UH
J1000	1-821-055-12	PHONO JACK 5P		L8003	1-457-539-11	INDUCTOR	0UH
J3000	1-820-765-11	PHONO JACK 2P		L8004	1-457-539-11	INDUCTOR	0UH
J3001	1-821-826-11	JACK (SMALL TYPE)		L8005	1-457-539-11	INDUCTOR	0UH
J3002	1-821-826-11	JACK (SMALL TYPE)		L8012	1-400-180-21	FERRITE	0UH
J3005	1-821-115-11	PHONO JACK (RIGHT ANGLE) 3P		L8200	1-412-058-11	INDUCTOR	10UH
J8200	1-815-325-11	JACK		L8203	1-412-058-11	INDUCTOR	10UH
< COIL >				L8204	1-412-058-11	INDUCTOR	10UH
L2200	1-412-058-11	INDUCTOR	10UH	L8205	1-412-058-11	INDUCTOR	10UH
L2201	1-469-549-21	INDUCTOR	1UH	L8206	1-412-058-11	INDUCTOR	10UH
L2202	1-412-058-11	INDUCTOR	10UH	< PROTECTOR MODULE >			
L2203	1-412-058-11	INDUCTOR	10UH	PS6400 Δ	1-576-736-41	IC LINK	3.15A 24V
L2204	1-412-058-11	INDUCTOR	10UH	PS6401 Δ	1-576-736-41	IC LINK	3.15A 24V
L2206	1-412-058-11	INDUCTOR	10UH	PS6402 Δ	1-576-736-41	IC LINK	3.15A 24V
				PS6403 Δ	1-576-736-41	IC LINK	3.15A 24V
				PS6404 Δ	1-576-736-41	IC LINK	3.15A 24V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
PS6407	Δ 1-576-736-41	IC LINK	3.15A 24V	Q6413	6-551-456-01	TRANSISTOR RTR020P02TL	
< TRANSISTOR >				Q6414	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
Q1000	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		Q6415	6-550-718-01	TRANSISTOR RSR025N03TL	
Q1001	8-729-029-14	TRANSISTOR DTC144EUA-T106		Q6416	8-729-028-28	TRANSISTOR 2SK2036(TE85L)	
Q1002	6-551-775-01	TR 2SA2122G0LS0		Q6417	6-551-775-01	TR 2SA2122G0LS0	
Q1003	6-551-776-01	TR 2SC5950G0LS0		Q6418	6-551-986-01	TR RT3DL1M-T111A-1F	
Q1006	6-551-943-01	TR RT3XBBM-T111-1		Q6419	8-729-028-96	TRANSISTOR DTC114EUA-T106	
Q1007	6-551-775-01	TR 2SA2122G0LS0		Q6421	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q1008	6-551-776-01	TR 2SC5950G0LS0		Q6423	8-729-028-96	TRANSISTOR DTC114EUA-T106	
Q2201	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6427	6-550-369-01	TRANSISTOR TPC8109(TE12L)	
Q2202	6-551-904-01	TR RT3S03M-T111-1		Q6430	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2203	6-551-904-01	TR RT3S03M-T111-1		Q6431	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2204	6-551-904-01	TR RT3S03M-T111-1		Q6434	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2205	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6436	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2207	6-550-871-01	TRANSISTOR 2SA2048TL QR		Q6437	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2208	6-550-871-01	TRANSISTOR 2SA2048TL QR		Q6440	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2209	8-729-027-44	TRANSISTOR DTC114TKA-T146		Q6441	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2212	8-729-620-13	TRANSISTOR 2SC4154TP-1EF		Q6443	6-551-986-01	TR RT3DL1M-T111A-1F	
Q3400	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF		Q6446	6-551-639-01	TRANSISTOR RTR040N03TL	
Q3401	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6447	6-551-639-01	TRANSISTOR RTR040N03TL	
Q4500	6-551-904-01	TR RT3S03M-T111-1		Q7100	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q4501	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q7101	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q4502	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q7400	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4503	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q7401	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4700	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		Q7402	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4701	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		Q7403	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4702	8-729-028-96	TRANSISTOR DTC114EUA-T106		Q8000	8-729-028-96	TRANSISTOR DTC114EUA-T106	
Q4703	8-729-028-86	TRANSISTOR DTA143EUA-T106		Q8200	6-551-943-01	TR RT3XBBM-T111-1	
Q5500	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF		Q8210	6-551-943-01	TR RT3XBBM-T111-1	
Q5501	8-729-028-73	TRANSISTOR DTA114EUA-T106		Q8212	6-551-943-01	TR RT3XBBM-T111-1	
Q5503	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		< RESISTOR >			
Q5504	8-729-028-28	TRANSISTOR 2SK2036(TE85L)		R1000	1-218-957-11	RES-CHIP 2.2K 5%	1/16W
Q5506	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1001	1-218-965-11	RES-CHIP 10K 5%	1/16W
Q5508	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1002	1-218-965-11	RES-CHIP 10K 5%	1/16W
Q5510	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1016	1-218-953-11	RES-CHIP 1K 5%	1/16W
Q5511	6-551-776-01	TR 2SC5950G0LS0		R1017	1-218-953-11	RES-CHIP 1K 5%	1/16W
Q5512	6-551-776-01	TR 2SC5950G0LS0		R1018	1-208-860-81	METAL CHIP 75 0.5%	1/16W
Q6400	8-729-028-73	TRANSISTOR DTA114EUA-T106		R1020	1-211-990-11	METAL CHIP 75 0.5%	1/10W
Q6401	6-551-986-01	TR RT3DL1M-T111A-1F		R1021	1-216-809-11	METAL CHIP 100 5%	1/10W
Q6403	6-551-986-01	TR RT3DL1M-T111A-1F		R1022	1-216-813-11	METAL CHIP 220 5%	1/10W
Q6404	6-551-986-01	TR RT3DL1M-T111A-1F		R1023	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q6407	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R1024	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q6408	6-551-456-01	TRANSISTOR RTR020P02TL		R1025	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q6409	6-551-123-01	TRANSISTOR RSS065N03FU7TB		R1026	1-216-811-11	METAL CHIP 150 5%	1/10W
Q6410	6-550-718-01	TRANSISTOR RSR025N03TL		R1027	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q6411	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R1028	1-218-949-11	RES-CHIP 470 5%	1/16W
Q6412	6-551-123-01	TRANSISTOR RSS065N03FU7TB		R1029	1-216-811-11	METAL CHIP 150 5%	1/10W
				R1030	1-218-971-11	RES-CHIP 33K 5%	1/16W
				R1031	1-218-965-11	RES-CHIP 10K 5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R1033	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R2234	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1036	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2242	1-218-937-11	RES-CHIP	47	5%	1/16W
R1037	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2250	1-218-990-81	SHORT CHIP	0		
R1038	1-211-990-11	METAL CHIP	75	0.5%	1/10W	R2251	1-218-941-81	RES-CHIP	100	5%	1/16W
R1039	1-216-809-11	METAL CHIP	100	5%	1/10W	R2253	1-216-864-11	SHORT CHIP	0		
R1040	1-218-941-81	RES-CHIP	100	5%	1/16W	R2255	1-218-990-81	SHORT CHIP	0		
R1041	1-218-941-81	RES-CHIP	100	5%	1/16W	R2257	1-218-990-81	SHORT CHIP	0		
R1042	1-218-941-81	RES-CHIP	100	5%	1/16W	R2258	1-218-990-81	SHORT CHIP	0		
R1043	1-216-853-11	METAL CHIP	470K	5%	1/10W	R2259	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1044	1-216-813-11	METAL CHIP	220	5%	1/10W	R2266	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1045	1-218-985-11	RES-CHIP	470K	5%	1/16W	R3010	1-218-990-81	SHORT CHIP	0		
R1046	1-218-985-11	RES-CHIP	470K	5%	1/16W	R3011	1-218-990-81	SHORT CHIP	0		
R1047	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3012	1-218-990-81	SHORT CHIP	0		
R1048	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3019	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1049	1-216-811-11	METAL CHIP	150	5%	1/10W	R3029	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1050	1-216-853-11	METAL CHIP	470K	5%	1/10W	R3035	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1052	1-216-809-11	METAL CHIP	100	5%	1/10W	R3040	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1054	1-218-949-11	RES-CHIP	470	5%	1/16W	R3041	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1055	1-216-811-11	METAL CHIP	150	5%	1/10W	R3042	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1056	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3043	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1057	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3100	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1058	1-218-971-11	RES-CHIP	33K	5%	1/16W	R3101	1-218-941-81	RES-CHIP	100	5%	1/16W
R1059	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3107	1-218-941-81	RES-CHIP	100	5%	1/16W
R1060	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R3108	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1061	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R3109	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1062	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R3110	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1063	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R3111	1-216-853-11	METAL CHIP	470K	5%	1/10W
R1064	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3112	1-216-809-11	METAL CHIP	100	5%	1/10W
R1066	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3113	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1068	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3117	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1070	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3119	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1073	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3203	1-218-990-81	SHORT CHIP	0		
R1074	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3204	1-218-990-81	SHORT CHIP	0		
R1076	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3207	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1078	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3208	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1081	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3407	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1083	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3408	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1085	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R3415	1-218-971-11	RES-CHIP	33K	5%	1/16W
R2204	1-218-949-11	RES-CHIP	470	5%	1/16W	R3416	1-218-971-11	RES-CHIP	33K	5%	1/16W
R2207	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3427	1-218-990-81	SHORT CHIP	0		
R2208	1-218-981-91	RES-CHIP	220K	5%	1/16W	R3431	1-218-990-81	SHORT CHIP	0		
R2213	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3432	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2216	1-218-971-11	RES-CHIP	33K	5%	1/16W	R3434	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2218	1-218-971-11	RES-CHIP	33K	5%	1/16W	R3453	1-218-981-91	RES-CHIP	220K	5%	1/16W
R2219	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3455	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2222	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3456	1-218-969-11	RES-CHIP	22K	5%	1/16W
R2225	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3457	1-218-949-11	RES-CHIP	470	5%	1/16W
R2227	1-218-949-11	RES-CHIP	470	5%	1/16W	R3458	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2229	1-218-949-11	RES-CHIP	470	5%	1/16W	R3459	1-218-941-81	RES-CHIP	100	5%	1/16W
R2233	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3460	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4000	1-218-943-11	RES-CHIP	150	5%	1/16W	R5502	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4003	1-218-943-11	RES-CHIP	150	5%	1/16W	R5503	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4010	1-218-933-11	RES-CHIP	22	5%	1/16W	R5504	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4011	1-218-933-11	RES-CHIP	22	5%	1/16W	R5505	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4012	1-218-933-11	RES-CHIP	22	5%	1/16W	R5506	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4013	1-218-933-11	RES-CHIP	22	5%	1/16W	R5508	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4014	1-218-935-11	RES-CHIP	33	5%	1/16W	R5509	1-218-941-81	RES-CHIP	100	5%	1/16W
R4015	1-218-935-11	RES-CHIP	33	5%	1/16W	R5512	1-218-941-81	RES-CHIP	100	5%	1/16W
R4016	1-218-935-11	RES-CHIP	33	5%	1/16W	R5514	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4017	1-218-935-11	RES-CHIP	33	5%	1/16W	R5518	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4018	1-218-935-11	RES-CHIP	33	5%	1/16W	R5522	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4019	1-218-935-11	RES-CHIP	33	5%	1/16W	R5527	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4020	1-218-933-11	RES-CHIP	22	5%	1/16W	R5528	1-243-975-11	METAL CHIP	4.7M	5%	1/16W
R4021	1-218-933-11	RES-CHIP	22	5%	1/16W	R5530	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4022	1-218-933-11	RES-CHIP	22	5%	1/16W	R5531	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4023	1-218-933-11	RES-CHIP	22	5%	1/16W	R5533	1-218-945-11	RES-CHIP	220	5%	1/16W
R4028	1-218-933-11	RES-CHIP	22	5%	1/16W	R5541	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4029	1-218-933-11	RES-CHIP	22	5%	1/16W	R5542	1-218-970-11	RES-CHIP	27K	5%	1/16W
R4032	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5544	1-218-990-81	SHORT CHIP	0		
R4033	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5555	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4034	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5563	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4035	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5568	1-218-941-81	RES-CHIP	100	5%	1/16W
R4500	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5569	1-218-945-11	RES-CHIP	220	5%	1/16W
R4502	1-218-967-11	RES-CHIP	15K	5%	1/16W	R5570	1-218-941-81	RES-CHIP	100	5%	1/16W
R4512	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5571	1-218-941-81	RES-CHIP	100	5%	1/16W
R4513	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5572	1-218-933-11	RES-CHIP	22	5%	1/16W
R4514	1-218-967-11	RES-CHIP	15K	5%	1/16W	R5574	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4515	1-218-967-11	RES-CHIP	15K	5%	1/16W	R5576	1-218-941-81	RES-CHIP	100	5%	1/16W
R4525	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5578	1-218-941-81	RES-CHIP	100	5%	1/16W
R4528	1-218-977-11	RES-CHIP	100K	5%	1/16W	R5590	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4529	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R5592	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4533	1-218-941-81	RES-CHIP	100	5%	1/16W	R5604	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4534	1-218-941-81	RES-CHIP	100	5%	1/16W	R5614	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4535	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5616	1-218-941-81	RES-CHIP	100	5%	1/16W
R4537	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5617	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4538	1-218-981-91	RES-CHIP	220K	5%	1/16W	R5621	1-218-941-81	RES-CHIP	100	5%	1/16W
R4540	1-218-981-91	RES-CHIP	220K	5%	1/16W	R5623	1-218-941-81	RES-CHIP	100	5%	1/16W
R4541	1-218-981-91	RES-CHIP	220K	5%	1/16W	R5629	1-218-941-81	RES-CHIP	100	5%	1/16W
R4542	1-218-941-81	RES-CHIP	100	5%	1/16W	R5630	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4708	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5631	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R4709	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5639	1-218-941-81	RES-CHIP	100	5%	1/16W
R4728	1-218-990-81	SHORT CHIP	0			R5643	1-218-941-81	RES-CHIP	100	5%	1/16W
R4756	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5644	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4757	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R5646	1-218-941-81	RES-CHIP	100	5%	1/16W
R5016	1-216-864-11	SHORT CHIP	0			R5647	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5020	1-216-864-11	SHORT CHIP	0			R5649	1-218-941-81	RES-CHIP	100	5%	1/16W
R5021	1-216-864-11	SHORT CHIP	0			R5655	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5022	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R5656	1-218-949-11	RES-CHIP	470	5%	1/16W
R5024	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R5669	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5501	1-216-864-11	SHORT CHIP	0			R5670	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5671	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6474	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5674	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6475	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5675	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6476	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W
R5676	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6477	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5677	1-218-941-81	RES-CHIP	100	5%	1/16W	R6479	1-218-939-11	RES-CHIP	68	5%	1/16W
R5678	1-218-941-81	RES-CHIP	100	5%	1/16W	R6489	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5680	1-218-941-81	RES-CHIP	100	5%	1/16W	R6490	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5684	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6491	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5685	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6495	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5686	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6496	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5689	1-218-941-81	RES-CHIP	100	5%	1/16W	R6497	1-218-941-81	RES-CHIP	100	5%	1/16W
R5690	1-218-941-81	RES-CHIP	100	5%	1/16W	R6499	1-218-983-11	RES-CHIP	330K	5%	1/16W
R5700	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6500	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5702	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6508	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R6401	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6509	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6402	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6524	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6403	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6533	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6405	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6538	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R6408	1-218-941-81	RES-CHIP	100	5%	1/16W	R6542	1-208-910-11	METAL CHIP	9.1K	0.5%	1/16W
R6409	1-218-969-11	RES-CHIP	22K	5%	1/16W	R6545	1-218-974-11	RES-CHIP	56K	5%	1/16W
R6411	1-216-809-11	METAL CHIP	100	5%	1/10W	R6551	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6415	1-216-864-11	SHORT CHIP	0			R6553	1-216-791-11	METAL CHIP	3.3	5%	1/10W
R6416	1-218-949-11	RES-CHIP	470	5%	1/16W	R6554	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R6417	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6555	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6418	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R6561	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R6419	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6562	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6420	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6565	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6421	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R6568	1-218-941-11	RES-CHIP	100	5%	1/16W
R6423	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6583	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6424	1-218-943-11	RES-CHIP	150	5%	1/16W	R6585	1-218-982-11	RES-CHIP	270K	5%	1/16W
R6426	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	R6603	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6427	1-218-941-11	RES-CHIP	100	5%	1/16W	R6609	1-218-967-11	RES-CHIP	15K	5%	1/16W
R6428	1-208-890-11	METAL CHIP	1.3K	0.5%	1/16W	R6610	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6430	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6611	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6432	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R6623	1-216-864-11	SHORT CHIP	0		
R6437	1-218-990-81	SHORT CHIP	0			R6624	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6439	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6625	1-218-941-81	RES-CHIP	100	5%	1/16W
R6443	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R6630	1-216-791-11	METAL CHIP	3.3	5%	1/10W
R6454	1-218-941-81	RES-CHIP	100	5%	1/16W	R6631	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R6455	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6632	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R6459	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R6633	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R6461	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R6634	1-218-941-81	RES-CHIP	100	5%	1/16W
R6462	1-218-941-11	RES-CHIP	100	5%	1/16W	R7100	1-218-941-81	RES-CHIP	100	5%	1/16W
R6463	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R7103	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6466	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7104	1-218-941-81	RES-CHIP	100	5%	1/16W
R6467	1-208-671-11	METAL CHIP	330	0.5%	1/16W	R7107	1-218-949-11	RES-CHIP	470	5%	1/16W
R6468	1-208-883-81	METAL CHIP	680	0.5%	1/16W	R7108	1-218-937-11	RES-CHIP	47	5%	1/16W
R6469	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R7109	1-218-937-11	RES-CHIP	47	5%	1/16W
R6470	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7110	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R6473	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7111	1-220-884-81	METAL CHIP	39	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R7112	1-218-949-11	RES-CHIP	470	5%	1/16W	R7408	1-220-180-11	RES-CHIP	620	5%	1/16W
R7113	1-208-688-11	METAL CHIP	1.6K	0.5%	1/16W	R7409	1-220-174-11	RES-CHIP	200	5%	1/16W
R7114	1-218-967-11	RES-CHIP	15K	5%	1/16W	R7410	1-220-174-11	RES-CHIP	200	5%	1/16W
R7115	1-218-967-11	RES-CHIP	15K	5%	1/16W	R7411	1-220-174-11	RES-CHIP	200	5%	1/16W
R7121	1-218-990-81	SHORT CHIP	0			R7412	1-208-866-11	METAL CHIP	130	0.5%	1/16W
R7122	1-218-937-11	RES-CHIP	47	5%	1/16W	R7414	1-218-990-81	SHORT CHIP	0		
R7202	1-218-943-11	RES-CHIP	150	5%	1/16W	R7503	1-218-937-11	RES-CHIP	47	5%	1/16W
R7203	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R7507	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7204	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R7509	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7205	1-218-933-11	RES-CHIP	22	5%	1/16W	R7510	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7206	1-218-933-11	RES-CHIP	22	5%	1/16W	R7513	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7207	1-218-933-11	RES-CHIP	22	5%	1/16W	R7516	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7208	1-218-933-11	RES-CHIP	22	5%	1/16W	R7518	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7209	1-218-933-11	RES-CHIP	22	5%	1/16W	R7520	1-218-937-11	RES-CHIP	47	5%	1/16W
R7211	1-218-943-11	RES-CHIP	150	5%	1/16W	R7522	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7215	1-218-943-11	RES-CHIP	150	5%	1/16W	R7523	1-218-937-11	RES-CHIP	47	5%	1/16W
R7219	1-218-929-11	RES-CHIP	10	5%	1/16W	R7524	1-218-937-11	RES-CHIP	47	5%	1/16W
R7220	1-218-929-11	RES-CHIP	10	5%	1/16W	R7525	1-218-937-11	RES-CHIP	47	5%	1/16W
R7300	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7526	1-218-937-11	RES-CHIP	47	5%	1/16W
R7302	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7530	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7305	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7531	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7306	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7712	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7308	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7718	1-218-937-11	RES-CHIP	47	5%	1/16W
R7310	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7722	1-218-941-81	RES-CHIP	100	5%	1/16W
R7312	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7723	1-218-941-81	RES-CHIP	100	5%	1/16W
R7313	1-218-949-11	RES-CHIP	470	5%	1/16W	R7724	1-218-941-81	RES-CHIP	100	5%	1/16W
R7315	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7725	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7317	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7726	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7319	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7727	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7321	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7729	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7324	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7730	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7326	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7731	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7328	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7733	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7329	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7734	1-218-937-11	RES-CHIP	47	5%	1/16W
R7330	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7735	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7331	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7736	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7333	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8004	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7334	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8007	1-218-990-81	SHORT CHIP	0		
R7337	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8008	1-218-941-81	RES-CHIP	100	5%	1/16W
R7338	1-218-949-11	RES-CHIP	470	5%	1/16W	R8009	1-218-935-11	RES-CHIP	33	5%	1/16W
R7339	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8010	1-218-935-11	RES-CHIP	33	5%	1/16W
R7341	1-218-949-11	RES-CHIP	470	5%	1/16W	R8011	1-218-935-11	RES-CHIP	33	5%	1/16W
R7400	1-218-948-11	RES-CHIP	390	5%	1/16W	R8012	1-218-935-11	RES-CHIP	33	5%	1/16W
R7401	1-218-948-11	RES-CHIP	390	5%	1/16W	R8013	1-218-935-11	RES-CHIP	33	5%	1/16W
R7402	1-218-948-11	RES-CHIP	390	5%	1/16W	R8014	1-218-935-11	RES-CHIP	33	5%	1/16W
R7403	1-218-948-11	RES-CHIP	390	5%	1/16W	R8015	1-218-935-11	RES-CHIP	33	5%	1/16W
R7404	1-218-941-81	RES-CHIP	100	5%	1/16W	R8016	1-218-935-11	RES-CHIP	33	5%	1/16W
R7405	1-218-941-81	RES-CHIP	100	5%	1/16W	R8017	1-218-935-11	RES-CHIP	33	5%	1/16W
R7406	1-218-941-81	RES-CHIP	100	5%	1/16W	R8018	1-218-935-11	RES-CHIP	33	5%	1/16W
R7407	1-218-941-81	RES-CHIP	100	5%	1/16W	R8019	1-218-935-11	RES-CHIP	33	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK
R8020	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1001	1-234-382-21	RES, NETWORK 220K	(1005X4)
R8021	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1002	1-239-678-81	RESISTOR, NETWORK 220	
R8022	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1005	1-234-372-11	RES, NETWORK 100	(1005X4)
R8023	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1007	1-239-674-81	RESISTOR, NETWORK 100	
R8024	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1008	1-239-682-11	RESISTOR, NETWORK 470	
R8025	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1010	1-239-678-81	RESISTOR, NETWORK 220	
R8026	1-218-935-11	RES-CHIP	33	5%	1/16W	RB1011	1-234-372-11	RES, NETWORK 100	(1005X4)
R8027	1-218-935-11	RES-CHIP	33	5%	1/16W	RB2200	1-239-670-81	RESISTOR, NETWORK 47	
R8028	1-218-935-11	RES-CHIP	33	5%	1/16W	RB2201	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
R8029	1-218-935-11	RES-CHIP	33	5%	1/16W	RB2202	1-239-674-81	RESISTOR, NETWORK 100	
R8030	1-218-935-11	RES-CHIP	33	5%	1/16W	RB2203	1-239-666-81	RESISTOR, NETWORK 22	
R8031	1-218-935-11	RES-CHIP	33	5%	1/16W	RB2263	1-239-694-81	RESISTOR, NETWORK 4.7K	
R8032	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3005	1-239-698-11	RESISTOR, NETWORK 10K	
R8033	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3006	1-239-674-81	RESISTOR, NETWORK 100	
R8034	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3010	1-239-686-11	RESISTOR, NETWORK 1K	
R8035	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3011	1-239-686-11	RESISTOR, NETWORK 1K	
R8036	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3021	1-239-674-81	RESISTOR, NETWORK 100	
R8037	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3023	1-239-686-11	RESISTOR, NETWORK 1K	
R8038	1-218-935-11	RES-CHIP	33	5%	1/16W	RB3024	1-239-678-81	RESISTOR, NETWORK 220	
R8039	1-218-941-81	RES-CHIP	100	5%	1/16W	RB3400	1-234-381-11	RES, NETWORK 100K	(1005X4)
R8042	1-218-941-81	RES-CHIP	100	5%	1/16W	RB3401	1-234-382-21	RES, NETWORK 220K	(1005X4)
R8043	1-218-941-81	RES-CHIP	100	5%	1/16W	RB3402	1-239-674-81	RESISTOR, NETWORK 100	
R8048	1-218-937-11	RES-CHIP	47	5%	1/16W	RB4012	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
R8050	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4013	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
R8051	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4014	1-242-963-21	RES, NETWORK 33	(1005X4)
R8052	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4015	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8078	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4016	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8081	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	RB4017	1-234-370-21	RES, NETWORK 22	(1005X4)
R8082	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	RB4018	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8086	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4019	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8089	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4020	1-234-370-21	RES, NETWORK 22	(1005X4)
R8092	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4501	1-239-674-81	RESISTOR, NETWORK 100	
R8094	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4502	1-239-700-81	RESISTOR, NETWORK 15K	
R8098	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4512	1-239-674-81	RESISTOR, NETWORK 100	
R8100	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4513	1-239-674-81	RESISTOR, NETWORK 100	
R8102	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4514	1-239-700-81	RESISTOR, NETWORK 15K	
R8104	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB4515	1-239-700-81	RESISTOR, NETWORK 15K	
R8108	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4528	1-239-670-81	RESISTOR, NETWORK 47	
R8109	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4529	1-239-686-11	RESISTOR, NETWORK 1K	
R8207	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	RB4702	1-239-674-81	RESISTOR, NETWORK 100	
R8208	1-218-941-81	RES-CHIP	100	5%	1/16W	RB4703	1-239-674-81	RESISTOR, NETWORK 100	
R8215	1-218-949-11	RES-CHIP	470	5%	1/16W	RB4704	1-239-701-81	RESISTOR, NETWORK 18K	
R8216	1-218-949-11	RES-CHIP	470	5%	1/16W	RB4705	1-239-701-81	RESISTOR, NETWORK 18K	
R8235	1-218-945-11	RES-CHIP	220	5%	1/16W	RB4706	1-239-674-81	RESISTOR, NETWORK 100	
R8236	1-218-945-11	RES-CHIP	220	5%	1/16W	RB4707	1-234-723-11	RES, NETWORK 75	(1005X4)
R8237	1-218-945-11	RES-CHIP	220	5%	1/16W	RB4708	1-239-701-81	RESISTOR, NETWORK 18K	
< RESISTOR CHIP >						RB4709	1-239-701-81	RESISTOR, NETWORK 18K	
RB1000	1-234-382-21	RES, NETWORK 220K	(1005X4)			RB4711	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
						RB4712	1-234-371-21	RES, NETWORK 47	(1005X4)
						RB5001	1-239-674-81	RESISTOR, NETWORK 100	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB5002	1-239-674-81	RESISTOR, NETWORK 100		RB7402	1-234-372-11	RES, NETWORK 100	(1005X4)
RB5003	1-239-674-81	RESISTOR, NETWORK 100		RB7404	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5500	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7500	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5501	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5502	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7503	1-239-670-81	RESISTOR, NETWORK 47	
RB5503	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7504	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5504	1-234-377-21	RES, NETWORK 4.7K	(1005X4)	RB7505	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5506	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7506	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5507	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7508	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5508	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB7509	1-239-670-81	RESISTOR, NETWORK 47	
RB5509	1-239-674-81	RESISTOR, NETWORK 100		RB7511	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5510	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7513	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5511	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7517	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5512	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB7518	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5514	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7520	1-239-670-81	RESISTOR, NETWORK 47	
RB5515	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB7521	1-239-670-81	RESISTOR, NETWORK 47	
RB5516	1-239-674-81	RESISTOR, NETWORK 100		RB7522	1-239-670-81	RESISTOR, NETWORK 47	
RB5517	1-239-698-11	RESISTOR, NETWORK 10K		RB7523	1-239-698-11	RESISTOR, NETWORK 10K	
RB5518	1-239-674-81	RESISTOR, NETWORK 100		RB7524	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5520	1-239-674-81	RESISTOR, NETWORK 100		RB7706	1-239-698-11	RESISTOR, NETWORK 10K	
RB5521	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7707	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5522	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7709	1-239-698-11	RESISTOR, NETWORK 10K	
RB5523	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7712	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5524	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7713	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5525	1-239-674-81	RESISTOR, NETWORK 100		RB7714	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5526	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7715	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5527	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7716	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5528	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7717	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5530	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB8005	1-239-674-81	RESISTOR, NETWORK 100	
RB6401	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	RB8006	1-239-674-81	RESISTOR, NETWORK 100	
RB6403	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8007	1-239-674-81	RESISTOR, NETWORK 100	
RB6404	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8008	1-239-674-81	RESISTOR, NETWORK 100	
RB6405	1-239-698-11	RESISTOR, NETWORK 10K		RB8009	1-234-372-11	RES, NETWORK 100	(1005X4)
RB6406	1-239-698-11	RESISTOR, NETWORK 10K		RB8010	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7100	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8011	1-239-674-81	RESISTOR, NETWORK 100	
RB7103	1-239-698-11	RESISTOR, NETWORK 10K		RB8012	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7104	1-239-670-81	RESISTOR, NETWORK 47		RB8014	1-239-674-81	RESISTOR, NETWORK 100	
RB7105	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8015	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7200	1-234-370-21	RES, NETWORK 22	(1005X4)	RB8016	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7201	1-234-702-11	RES, NETWORK 68	(1005X4)	RB8017	1-239-674-81	RESISTOR, NETWORK 100	
RB7202	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB8018	1-239-690-81	RESISTOR, NETWORK 2.2K	
RB7203	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB8201	1-239-674-81	RESISTOR, NETWORK 100	
RB7300	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8210	1-239-674-81	RESISTOR, NETWORK 100	
RB7301	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8213	1-239-674-81	RESISTOR, NETWORK 100	
RB7302	1-239-670-81	RESISTOR, NETWORK 47		RB8214	1-239-674-81	RESISTOR, NETWORK 100	
RB7303	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8215	1-239-674-81	RESISTOR, NETWORK 100	
RB7304	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8216	1-239-674-81	RESISTOR, NETWORK 100	
RB7305	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8217	1-239-674-81	RESISTOR, NETWORK 100	
RB7306	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8220	1-239-682-11	RESISTOR, NETWORK 470	
RB7400	1-239-694-81	RESISTOR, NETWORK 4.7K		RB8222	1-239-698-11	RESISTOR, NETWORK 10K	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB8223	1-234-372-11	RES, NETWORK 100	(1005X4)	< DIODE >			
RB8224	1-234-372-11	RES, NETWORK 100	(1005X4)	D302	8-719-085-26	DIODE CL-165HR/SYG-D-T	
RB8225	1-234-372-11	RES, NETWORK 100	(1005X4)	D304	6-501-614-01	DIODE PZU5.6B2	
RB8226	1-234-372-11	RES, NETWORK 100	(1005X4)	D305	8-719-085-26	DIODE CL-165HR/SYG-D-T	
RB8227	1-234-372-11	RES, NETWORK 100	(1005X4)	D308	6-500-817-01	DIODE (LED) SML-512UWT86	
RB8228	1-234-372-11	RES, NETWORK 100	(1005X4)	D402	6-501-614-01	DIODE PZU5.6B2	
TP6400	1-535-757-11	CHIP, CHECKER		< IC >			
TP6401	1-535-757-11	CHIP, CHECKER		IC311	6-600-681-01	IC RS-770N	
< VARISTOR >				< PHOTO DIODE >			
VD1000	1-802-078-11	VARISTOR (SMD)		PH001	6-600-680-01	PHOTO DIODE BH1690FVC-TR	
VD1001	1-802-078-11	VARISTOR (SMD)		< TRANSISTOR >			
VD1002	1-802-078-11	VARISTOR (SMD)		Q301	6-551-815-01	TR UNR52A1G0LS0	
VD3000	1-802-078-11	VARISTOR (SMD)		Q302	6-551-815-01	TR UNR52A1G0LS0	
VD3004	1-802-078-11	VARISTOR (SMD)		Q303	6-551-815-01	TR UNR52A1G0LS0	
VD3005	1-802-078-11	VARISTOR (SMD)		Q304	6-551-815-01	TR UNR52A1G0LS0	
VD3006	1-802-078-11	VARISTOR (SMD)		Q305	6-551-815-01	TR UNR52A1G0LS0	
VD3007	1-802-493-21	VARISTOR, NETWORK (1005X2)		Q401	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF	
VD4500	1-802-078-11	VARISTOR (SMD)		< RESISTOR >			
VD4501	1-802-078-11	VARISTOR (SMD)		R301	1-216-815-11	METAL CHIP 330 5% 1/10W	
VD4502	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R302	1-216-819-11	METAL CHIP 680 5% 1/10W	
VD4503	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R303	1-216-815-11	METAL CHIP 330 5% 1/10W	
VD4504	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R304	1-216-819-11	METAL CHIP 680 5% 1/10W	
VD4505	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R305	1-216-823-11	METAL CHIP 1.5K 5% 1/10W	
VD4506	1-802-078-11	VARISTOR (SMD)		R311	1-216-817-11	METAL CHIP 470 5% 1/10W	
VD4507	1-802-078-11	VARISTOR (SMD)		R312	1-216-805-11	METAL CHIP 47 5% 1/10W	
VD4509	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R314	1-216-817-11	METAL CHIP 470 5% 1/10W	
VD4510	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R403	1-216-864-11	SHORT CHIP 0	
VD4511	1-802-078-11	VARISTOR (SMD)		R405	1-216-821-11	METAL CHIP 1K 5% 1/10W	
VD4512	1-802-078-11	VARISTOR (SMD)		R406	1-216-839-11	METAL CHIP 33K 5% 1/10W	
VD7100	1-804-988-21	VARISTOR, CHIP	(1608)	R407	1-216-833-11	METAL CHIP 10K 5% 1/10W	
< CRYSTAL >				R408	1-216-864-11	SHORT CHIP 0	
X5500	1-813-784-21	VIBRATOR, CRYSTAL		R409	1-216-847-11	METAL CHIP 150K 5% 1/10W	
X5501	1-795-537-21	VIBRATOR, CRYSTAL		R411	1-216-823-11	METAL CHIP 1.5K 5% 1/10W	
X7100	1-814-145-11	QUARTS CRYSTAL UNIT		R412	1-216-864-11	SHORT CHIP 0	
X7101	1-813-990-11	QUARTS CRYSTAL 30MHZ		< CAPACITOR >			
X8000	1-781-867-21	VIBRATOR, CRYSTAL		C311	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
< CONNECTOR >				C312	1-119-667-11	CERAMIC CHIP 22UF 10V	
CN301	1-820-187-11	HEADER ASSEMBLY (PRINT PWB) 10P		C404	1-114-399-21	ELECT CHIP 47UF 20% 6.3V	
				C405	1-107-826-11	CERAMIC CHIP 0.1UF 10% 16V	
				C406	1-112-781-11	CERAMIC CHIP 1UF 10% 10V	

* A-1545-984-A H2 Board, Complete

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS							
	*1-835-147-11	CONNECTOR ASSY, MDF61 (IP5-BALANCER)	(40 inches)				
	*1-835-210-11	LVDS HARNESS (32) (TCON-CN8000(BE1))	(32 inches)				
	*1-910-045-34	CONNECTOR ASSY 13P (CN6401(BE1)-CN602(G1D)/ CN6150(IP5))	(32/40 inches)				
	*1-910-045-35	CONNECTOR ASSY 13P (CN6401(BE1)-CN602(G1D))	(26 inches)				
	*1-910-045-37	CONNECTOR ASSY 14P (INVERTER-CN6402(BE1)/ CN601(G1D))	(32 inches)				
	*1-910-045-39	CONNECTOR ASSY 5P (CN6402(BE1)-CN6154(IP5))	(40 inches)				
	*1-910-045-41	CONNECTOR ASSY 7P (INVERTER-CN6701(IP5))	(40 inches)				
	*1-910-045-46	SP CONNECTOR ASSY 4 (CN3400(BE1)-SP	(26/32 inches)				
	*1-910-045-47	SP CONNECTOR ASSY 4 (CN3400(BE1)-SP	(40 inches)				
	*1-910-045-58	CONNECTOR ASSY 20P (CN5500(BE1)-CN301(H2)/ LOGO/SWITCH UNIT)	(26 inches)				
	*1-910-045-59	CONNECTOR ASSY 20P (CN5500(BE1)-CN301(H2)/ LOGO/SWITCH UNIT)	(32 inches)				
	*1-910-046-12	CONNECTOR ASSY 14P (INVERTER-CN6402(BE1)/ CN601(G1D))	(26 inches)				
	*1-910-046-62	CONNECTOR ASSY 20P (CN5500(BE1)-CN301(H2)/ LOGO/SWITCH UNIT)	(40 inches)				
	*1-966-061-11	HARNESS WITH CONNECTOR (LVDS) (TCON- CN8000(BE1))	(40 inches)				
	*1-966-065-11	HARNESS WITH CONNECTOR (LVDS) (TCON- CN8000(BE1))	(26 inches)				
	*3-298-243-12	INSTRUCTION MANUAL (UK) ENGLISH					
	*3-298-243-22	INSTRUCTION MANUAL (AEP) GERMAN/FRENCH/ITALIAN/DUTCH					
	*3-298-243-32	INSTRUCTION MANUAL (AEP) SPANISH/PORTUGUESE/GREEK					
	*3-298-243-42	INSTRUCTION MANUAL (AEP) ENGLISH/RUSSIAN/ POLISH/CZECH/SLOVAK/HUNGARIAN					
	*3-298-243-52	INSTRUCTION MANUAL (AEP) NORWEGIAN/SWEDISH/ FINNISH/DANISH/TURKISH					
REMOTE COMMANDER							
	1-480-778-21	REMOTE COMMANDER (RM-ED011W)					

