


SECTION 5 EXPLODED VIEWS

NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

5-1. CHASSIS

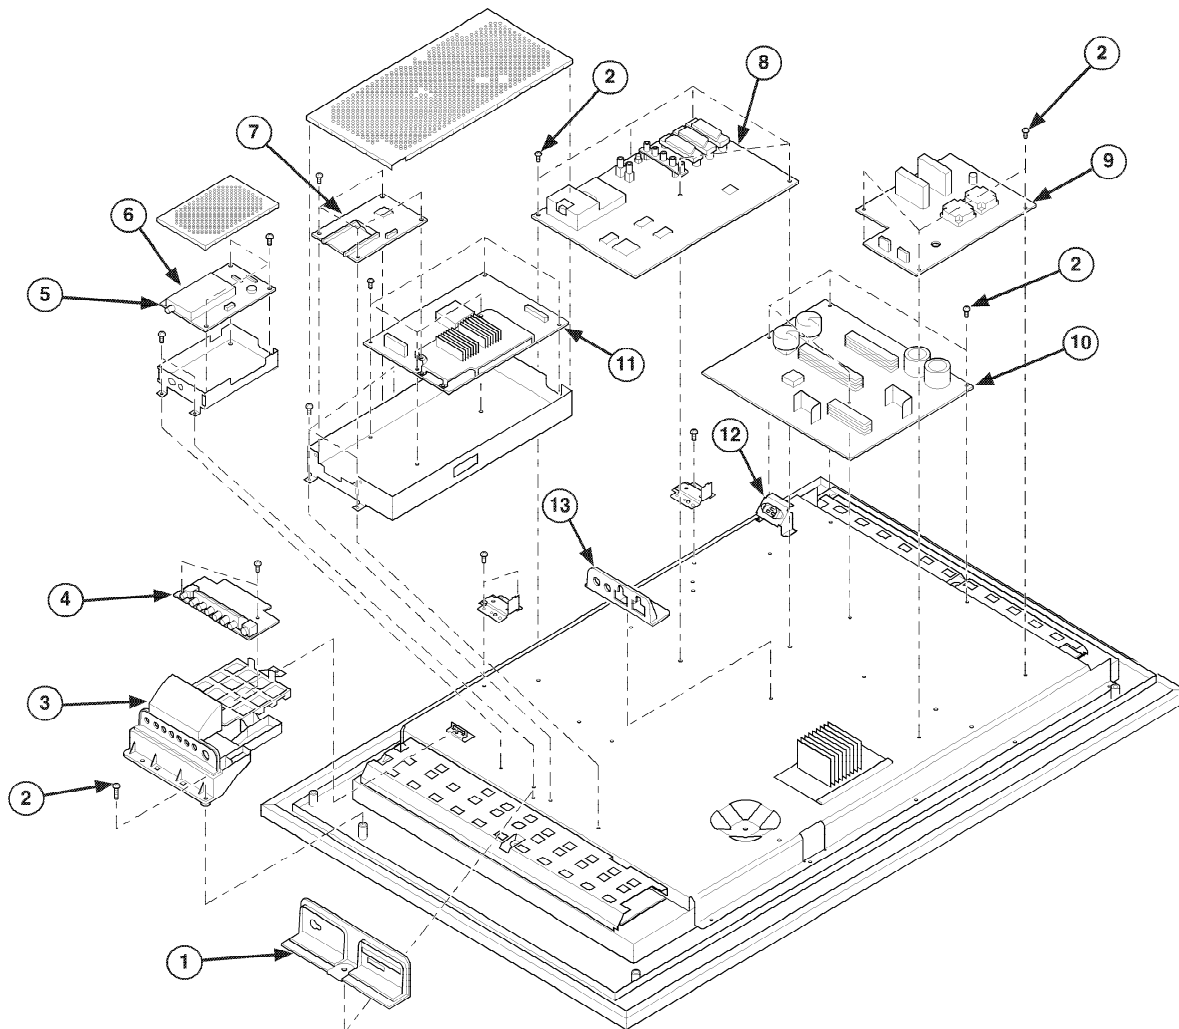

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.


Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	X-2148-536-3	DTT HOLDER ASSY		8	*A-1212-791-A	AE BOARD COMPLETE	
2	2-580-637-01	SCREW, +BVST 4X12		9	*A-1197-882-B	D1 BOARD COMPLETE	
3	X-2149-059-1	SIDE TERMINAL ASSY		10	*A-1217-644-A	G1 BOARD COMPLETE	
4	*A-1171-666-A	H2 BOARD COMPLETE		11	*A-1223-527-A	B2 BOARD COMPLETE	
5	*A-1173-184-B	TUE BOARD COMPLETE		12	Δ 1-818-098-21	INLET, AC (WITH NOISE FILTER)	
6	8-597-571-00	TUNER UNIT, DIGITAL BTD-HF431Z		13	2-673-537-01	HOLDER, HDMI TERMINAL	
7	*A-1189-655-B	FXE BOARD COMPLETE					

5-2. REAR COVER and STAND


Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

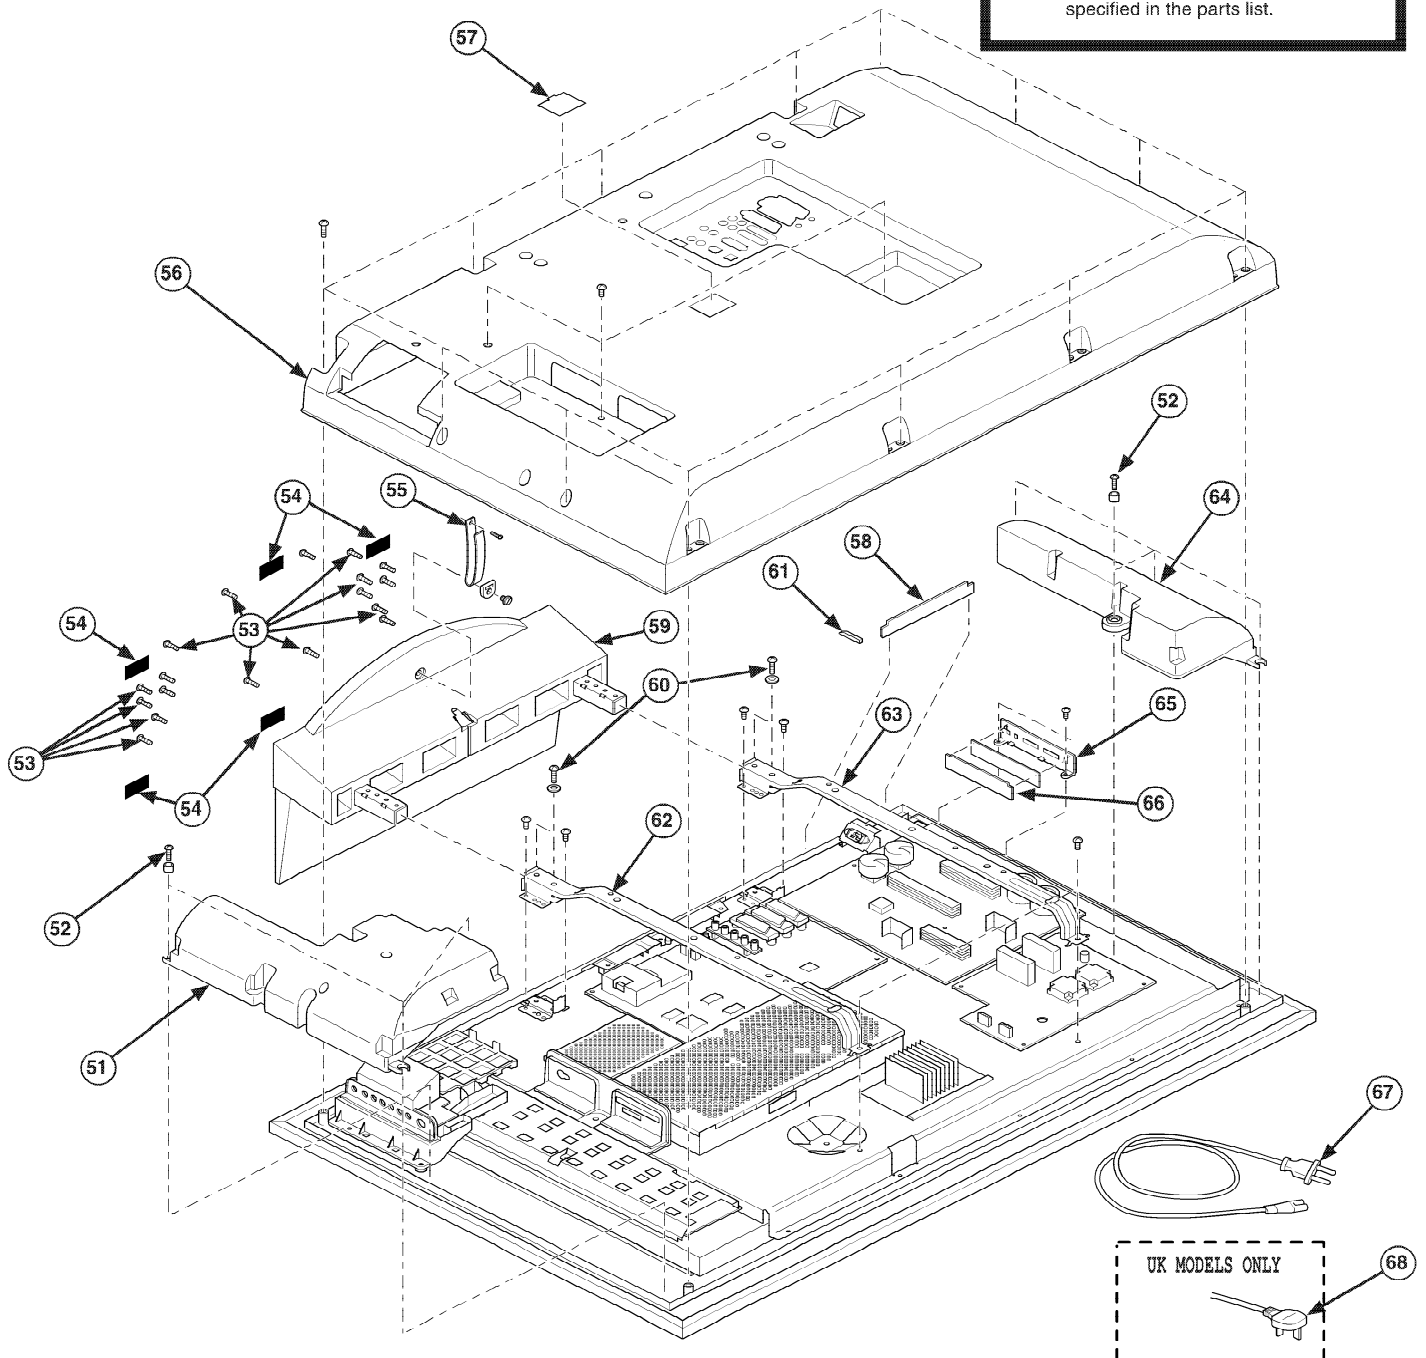

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	1-826-477-11	LOUDSPEAKER		59	2-637-578-42	COVER, STAND (BLUE)	
52	2-580-654-01	SCREW, +PWT2 4X16			2-637-578-52	COVER, STAND (BROWN)	
53	2-580-606-01	SCREW, +PSW M5X8		60	2-580-637-01	SCREW, +BVST 4X12	
54	2-349-110-02	CUSHION (FOOT)		61	2-678-148-02	IR GUIDE	
55	X-2102-511-2	BAG ASSY, RUDDER LOCK		62	X-2109-242-2	ARM ASSY (L)	
56	X-2109-241-1	REAR CABINET ASSY (40)		63	X-2109-243-2	ARM ASSY (R)	
57	2-673-535-02	SERVICE COVER		64	1-826-477-21	LOUDSPEAKER	
58	*A-1171-667-A	H3 BOARD COMPLETE		65	A-1203-856-A	CONTROL BUTTON BLOCK ASSY	
59	2-637-578-02	COVER, STAND (SILVER)		66	*A-1171-665-A	H1 BOARD COMPLETE	
	2-637-578-12	COVER, STAND (WHITE)		67	Δ 1-833-696-11	CORD SET, POWER (AEP MODEL)	
	2-637-578-22	COVER, STAND (BLACK)		68	Δ 1-833-695-11	CORD SET, POWER (UK MODEL)	
	2-637-578-32	COVER, STAND (RED)					

5-3. SCREEN ASSY

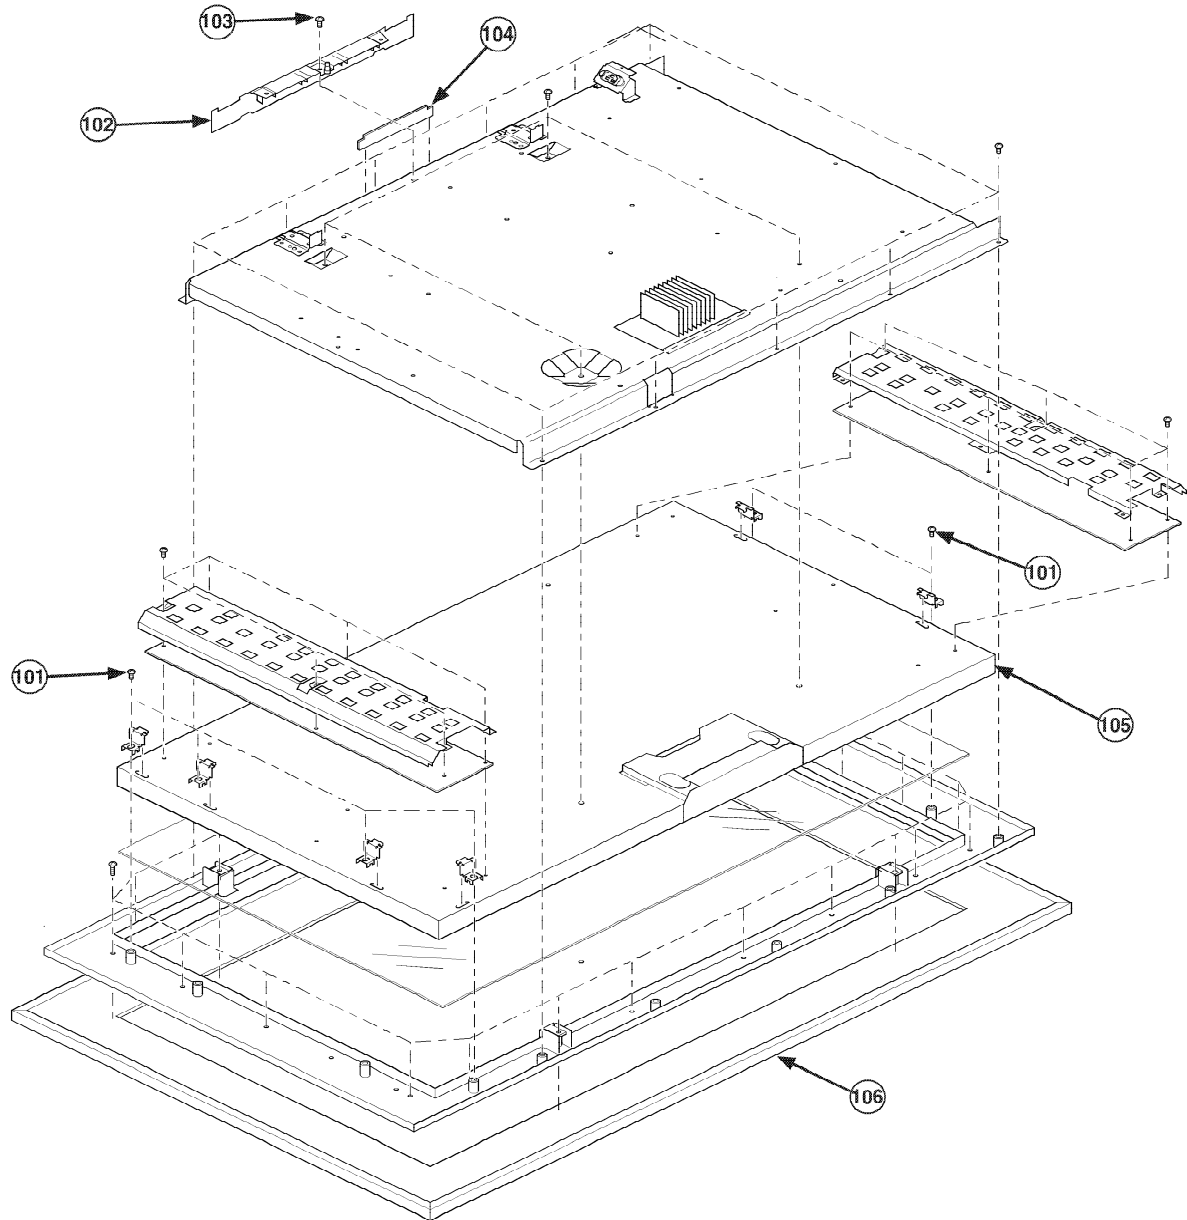

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	2-580-640-01	SCREW, +BVTP2 4X16		106	X-2109-327-1	BEZEL ASSY (40) (SILVER)	
102	X-2149-440-1	UNDER COVER ASSY			X-2149-034-1	BEZEL ASSY (40) (WHITE)	
103	2-580-637-01	SCREW, +BVST 4X12			X-2149-035-1	BEZEL ASSY (40) (BLACK)	
104	*A-1171-668-A	H4 BOARD COMPLETE			X-2176-051-1	BEZEL ASSY (40) (RED)	
105	1-802-198-12	LCD PANEL (40 INCH FHD+TFT)			X-2176-052-1	BEZEL ASSY (40) (BLUE)	
					X-2176-053-1	BEZEL ASSY (40) (BROWN)	

SECTION 6 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	Page
TUE BOARD COMPLETE Parts List :	88
H1 BOARD COMPLETE Parts List :	89
H3 BOARD COMPLETE Parts List :	89
H4 BOARD COMPLETE Parts List :	90
H2 BOARD COMPLETE Parts List :	90
FXE BOARD COMPLETE Parts List :	91
B2 BOARD COMPLETE Parts List :	96
AE BOARD COMPLETE Parts List :	114
G1 BOARD COMPLETE Parts List :	133
D1 BOARD COMPLETE Parts List :	136
MISCELLANEOUS :	139
ACCESSORIES AND CONNECTORS :	139
REMOTE COMMANDER :	140

Note : Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1173-184-B TUE Board, Complete				< CONNECTOR >			
< CAPACITOR >				CN3802	1-819-339-11	HEADER ASSEMBLY FOR PWB 12P	
C3803	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	CN3900	1-695-915-11	TAB (CONTACT)	
C3814	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN3901	*1-820-235-21	HEADER ASSEMBLY 30P	
C3815	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	CN3903	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P	
C3819	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	CN3904	*1-819-474-11	HEADER ASSEMBLY FOR PWB 6P	
C3821	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	CN3907	1-780-336-11	EARTH TERMINAL	
C3834	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	< DIODE >			
C3900	1-100-611-91	CERAMIC CHIP 22UF	20% 6.3V	D3900	8-719-083-87	DIODE UDZS-TE17-33B	
C3901	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	< FERRITE BEAD >			
C3902	1-164-947-11	CERAMIC CHIP 0.01UF	50V	FB3901	1-469-869-21	FERRITE	0UH
C3903	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB3902	1-469-869-21	FERRITE	0UH
C3904	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB3903	1-469-869-21	FERRITE	0UH
C3906	1-164-947-11	CERAMIC CHIP 0.01UF	50V	FB3909	1-469-869-21	FERRITE	0UH
C3907	1-135-366-11	ELECT CHIP 100UF	20% 16V	< FILTER >			
C3909	1-128-991-21	ELECT CHIP 10UF	20% 50V	FL3800	1-239-899-21	FERRITE	0UH
C3910	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	< IC >			
C3911	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	IC3802	6-706-106-01	IC NCP1117STAT3	
C3914	1-164-947-11	CERAMIC CHIP 0.01UF	50V	IC3900	6-709-257-01	IC 74LVC4066PW	
C3917	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	< COIL >			
C3918	1-135-595-11	ELECT 100UF	20% 6.3V	L3804	1-400-175-21	INDUCTOR	47UH
C3919	1-135-595-11	ELECT 100UF	20% 6.3V	L3805	1-410-993-42	INDUCTOR	1UH
C3920	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	L3900	1-412-006-31	INDUCTOR	10UH
C3921	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	L3902	*1-424-924-21	COIL, POWER	
C3923	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	L3903	1-410-993-42	INDUCTOR	1UH
C3924	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	L3904	1-412-989-11	INDUCTOR	6.8UH
C3926	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	< TRANSISTOR >			
C3927	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3900	8-729-027-43	TRANSISTOR DTC114EKA-T146	
C3929	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3901	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3930	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3902	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3931	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3903	6-550-871-01	TRANSISTOR 2SA2048TL QR	
C3932	1-115-566-11	CERAMIC CHIP 4.7UF	10.00% 10V	Q3904	6-550-871-01	TRANSISTOR 2SA2048TL QR	
C3933	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3905	6-550-871-01	TRANSISTOR 2SA2048TL QR	
C3935	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	Q3906	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3937	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	Q3907	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R	
C3941	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	< RESISTOR >			
C3942	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	R3810	1-208-683-11	METAL CHIP 1K 0.5% 1/16W	
C3945	1-115-566-11	CERAMIC CHIP 4.7UF	10.00% 10V	R3812	1-218-948-11	RES-CHIP 390 5% 1/16W	
C3946	1-115-566-11	CERAMIC CHIP 4.7UF	10.00% 10V	R3813	1-218-937-11	RES-CHIP 47 5% 1/16W	
C3947	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	R3900	1-216-295-91	SHORT CHIP 0	
C3948	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	R3901	1-218-990-81	SHORT CHIP 0	
C3950	1-100-611-91	CERAMIC CHIP 22UF	20% 6.3V				
C3951	1-128-405-11	ELECT CHIP 22UF	20% 50V				
C3952	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V				
C3953	1-100-053-21	ELECT CHIP 220UF	20% 6.3V				
C3954	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V				
C3955	1-164-936-11	CERAMIC CHIP 680PF	10.00% 50V				
C3956	1-164-936-11	CERAMIC CHIP 680PF	10.00% 50V				

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3902	1-218-938-11	RES-CHIP	56	5%	1/16W	R3997	1-218-933-11	RES-CHIP	22	5%	1/16W
R3903	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3998	1-218-933-11	RES-CHIP	22	5%	1/16W
R3904	1-218-937-11	RES-CHIP	47	5%	1/16W	< RESISTOR CHIP >					
R3906	1-216-821-11	METAL CHIP	1K	5%	1/10W	RB3900	1-234-371-21	RES, NETWORK	47	(1005X4)	
R3907	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB3901	1-234-371-21	RES, NETWORK	47	(1005X4)	
R3908	1-218-937-11	RES-CHIP	47	5%	1/16W	RB3902	1-234-371-21	RES, NETWORK	47	(1005X4)	
R3909	1-218-965-11	RES-CHIP	10K	5%	1/16W	< TUNER >					
R3911	1-218-990-81	SHORT CHIP	0			TU3901	8-597-571-00	TUNER UNIT, DIGITAL LTD-HF431Z			
R3913	1-218-965-11	RES-CHIP	10K	5%	1/16W	*A-1171-665-A H1 Board, Complete					
R3918	1-218-941-81	RES-CHIP	100	5%	1/16W	< CAPACITOR >					
R3919	1-218-941-81	RES-CHIP	100	5%	1/16W	C3000	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R3921	1-218-941-81	RES-CHIP	100	5%	1/16W	C3001	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R3922	1-218-941-81	RES-CHIP	100	5%	1/16W	< CONNECTOR >					
R3924	1-218-933-11	RES-CHIP	22	5%	1/16W	CN3000	*1-819-472-11	HEADER ASSEMBLY FOR PWB 2P			
R3925	1-218-933-11	RES-CHIP	22	5%	1/16W	CN3001	*1-819-476-11	HEADER ASSEMBLY FOR PWB 8P			
R3926	1-218-941-81	RES-CHIP	100	5%	1/16W	< DIODE >					
R3927	1-218-965-11	RES-CHIP	10K	5%	1/16W	D3001	8-719-914-44	DIODE DAP202K			
R3929	1-218-990-81	SHORT CHIP	0			< RESISTOR >					
R3930	1-218-990-81	SHORT CHIP	0			R3000	1-218-670-11	METAL CHIP	120	0.5%	1/10W
R3938	1-218-941-81	RES-CHIP	100	5%	1/16W	R3001	1-218-672-11	METAL CHIP	150	0.5%	1/10W
R3943	1-218-949-11	RES-CHIP	470	5%	1/16W	R3002	1-218-678-11	METAL CHIP	270	0.5%	1/10W
R3945	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3003	1-218-686-11	METAL CHIP	560	0.5%	1/10W
R3946	1-218-949-11	RES-CHIP	470	5%	1/16W	R3004	1-218-696-11	METAL CHIP	1.5K	0.5%	1/10W
R3947	1-218-929-11	RES-CHIP	10	5%	1/16W	< SWITCH >					
R3948	1-218-929-11	RES-CHIP	10	5%	1/16W	S3000	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3950	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	S3001	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3951	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	S3002	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3952	1-218-937-11	RES-CHIP	47	5%	1/16W	S3003	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3953	1-218-941-81	RES-CHIP	100	5%	1/16W	S3004	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3958	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	S3005	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3959	1-218-953-11	RES-CHIP	1K	5%	1/16W	S3006	1-572-595-11	SWITCH, TACTIL (REFLOW TYPE)			
R3960	1-218-953-11	RES-CHIP	1K	5%	1/16W	< VARISTOR >					
R3961	1-218-965-11	RES-CHIP	10K	5%	1/16W	VD3000	1-803-974-21	VARISTOR, CHIP	(1608)		
R3962	1-218-969-11	RES-CHIP	22K	5%	1/16W	VD3001	1-803-974-21	VARISTOR, CHIP	(1608)		
R3967	1-218-941-81	RES-CHIP	100	5%	1/16W	*A-1171-667-A H3 Board, Complete					
R3970	1-218-953-11	RES-CHIP	1K	5%	1/16W	A3001	2-686-289-02	LED HOLDER			
R3971	1-218-969-11	RES-CHIP	22K	5%	1/16W	A3002	2-686-289-02	LED HOLDER			
R3973	1-218-990-81	SHORT CHIP	0			A3003	2-686-289-02	LED HOLDER			
R3974	1-218-990-81	SHORT CHIP	0								
R3980	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3981	1-218-933-11	RES-CHIP	22	5%	1/16W						
R3982	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R3983	1-218-990-81	SHORT CHIP	0								
R3984	1-218-990-81	SHORT CHIP	0								
R3985	1-218-990-81	SHORT CHIP	0								
R3986	1-218-990-81	SHORT CHIP	0								
R3987	1-218-990-81	SHORT CHIP	0								
R3988	1-218-990-81	SHORT CHIP	0								
R3989	1-218-990-81	SHORT CHIP	0								
R3996	1-218-990-81	SHORT CHIP	0								

H3

H4

H2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< CAPACITOR >				R3203	1-216-807-11	METAL CHIP 68 5%	1/10W
C3202	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	R3204	1-216-864-11	SHORT CHIP 0	
C3203	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3206	1-216-815-11	METAL CHIP 330 5%	1/10W
C3205	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3207	1-216-807-11	METAL CHIP 68 5%	1/10W
C3209	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	R3209	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
C3210	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3211	1-216-851-11	METAL CHIP 330K 5%	1/10W
C3211	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	R3212	1-216-851-11	METAL CHIP 330K 5%	1/10W
C3212	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3213	1-216-833-11	METAL CHIP 10K 5%	1/10W
C3213	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V	R3214	1-216-839-11	METAL CHIP 33K 5%	1/10W
< CONNECTOR >				R3215	1-216-821-11	METAL CHIP 1K 5%	1/10W
CN3200	*1-819-464-11	HEADER ASSEMBLY FOR PWB 2P		R3217	1-216-864-11	SHORT CHIP 0	
CN3201	*1-819-470-11	HEADER ASSEMBLY FOR PWB 11P		R3218	1-216-805-11	METAL CHIP 47 5%	1/10W
< DIODE >				R3219	1-216-833-11	METAL CHIP 10K 5%	1/10W
D3200	6-501-502-01	DIODE FR5366X		R3220	1-216-817-11	METAL CHIP 470 5%	1/10W
D3201	6-500-672-11	DIODE TLRMHGH48M (SONY)		R3221	1-216-864-11	SHORT CHIP 0	
D3202	6-500-672-11	DIODE TLRMHGH48M (SONY)		R3222	1-216-864-11	SHORT CHIP 0	
D3203	6-500-028-01	DIODE MM3Z9V1ST1		*A-1171-668-A H4 Board, Complete			
D3204	6-500-028-01	DIODE MM3Z9V1ST1		A005	4-101-331-01	HOLDER (M7), LED	
D3205	6-500-028-01	DIODE MM3Z9V1ST1		< CAPACITOR >			
D3206	6-500-028-01	DIODE MM3Z9V1ST1		C3300	1-126-395-11	ELECT CHIP 22UF 20.00% 16V	
D3207	6-500-028-01	DIODE MM3Z9V1ST1		< CONNECTOR >			
D3208	6-500-028-01	DIODE MM3Z9V1ST1		CN3301	*1-819-445-11	HEADER ASSEMBLY FOR PWB 3P	
D3210	6-500-028-01	DIODE MM3Z9V1ST1		< DIODE >			
< IC >				D3307	6-501-198-01	DIODE NSPW500BS-A0-M	
IC3200	6-600-447-01	IC TPS853 (SONY)		D3310	6-501-198-01	DIODE NSPW500BS-A0-M	
IC3201	6-600-502-01	IC GPIUE26RKOVF		D3313	6-501-198-01	DIODE NSPW500BS-A0-M	
< TRANSISTOR >				< TRANSISTOR >			
Q3200	8-729-028-91	TRANSISTOR DTA144EUA-T106		Q3300	8-729-907-00	TRANSISTOR DTC114EU	
Q3201	8-729-029-14	TRANSISTOR DTC144EUA-T106		Q3303	8-729-907-00	TRANSISTOR DTC114EU	
Q3202	8-729-907-00	TRANSISTOR DTC114EU		Q3306	8-729-907-00	TRANSISTOR DTC114EU	
Q3203	8-729-907-00	TRANSISTOR DTC114EU		< RESISTOR >			
Q3204	8-729-907-00	TRANSISTOR DTC114EU		R3300	1-216-809-11	METAL CHIP 100 5%	1/10W
Q3205	8-729-907-00	TRANSISTOR DTC114EU		R3303	1-216-809-11	METAL CHIP 100 5%	1/10W
Q3206	6-550-586-01	TRANSISTOR 2PA1576R-115		R3306	1-216-809-11	METAL CHIP 100 5%	1/10W
Q3207	8-729-907-00	TRANSISTOR DTC114EU		*A-1171-666-A H2 Board, Complete			
Q3208	6-550-586-01	TRANSISTOR 2PA1576R-115		< CAPACITOR >			
Q3209	8-729-028-73	TRANSISTOR DTA114EUA-T106		C3100	1-124-779-00	ELECT CHIP 10UF 20.00% 16V	
Q3210	8-729-028-73	TRANSISTOR DTA114EUA-T106		C3101	1-124-779-00	ELECT CHIP 10UF 20.00% 16V	
Q3211	8-729-028-73	TRANSISTOR DTA114EUA-T106		C3106	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V	
Q3212	8-729-028-73	TRANSISTOR DTA114EUA-T106		C3110	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V	
< RESISTOR >				C3112	1-162-926-11	CERAMIC CHIP 82PF 5.00% 50V	
R3200	1-216-828-11	METAL CHIP 3.9K 5%	1/10W				
R3201	1-216-864-11	SHORT CHIP 0					
R3202	1-216-815-11	METAL CHIP 330 5%	1/10W				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3113	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	R3115	1-216-813-11	METAL CHIP 220 5%	1/10W
C3115	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V	R3118	1-216-813-11	METAL CHIP 220 5%	1/10W
C3116	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	R3119	1-216-813-11	METAL CHIP 220 5%	1/10W
C3117	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	R3120	1-216-813-11	METAL CHIP 220 5%	1/10W
< CONNECTOR >				R3122	1-216-801-11	METAL CHIP 22 5%	1/10W
CN3100	*1-818-714-21	HEADER ASSEMBLY 20P		R3123	1-216-809-11	METAL CHIP 100 5%	1/10W
CN3101	1-695-915-11	TAB (CONTACT)		R3124	1-216-864-11	SHORT CHIP 0	
CN3102	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P		R3125	1-216-864-11	SHORT CHIP 0	
CN3103	1-784-646-11	TERMINAL, S		R3126	1-216-864-11	SHORT CHIP 0	
< DIODE >				R3127	1-216-809-11	METAL CHIP 100 5%	1/10W
D3100	8-719-977-28	DIODE DTZ10B		R3128	1-216-813-11	METAL CHIP 220 5%	1/10W
D3101	8-719-977-28	DIODE DTZ10B		R3129	1-216-813-11	METAL CHIP 220 5%	1/10W
D3102	6-500-254-01	DIODE MM3Z7V5T1		R3130	1-216-813-11	METAL CHIP 220 5%	1/10W
D3103	8-719-977-28	DIODE DTZ10B		R3132	1-216-801-11	METAL CHIP 22 5%	1/10W
< FERRITE BEAD >				R3133	1-218-665-11	METAL CHIP 75 0.5%	1/10W
FB3100	1-400-333-21	FERRITE 0UH		R3135	1-216-801-11	METAL CHIP 22 5%	1/10W
FB3101	1-400-333-21	FERRITE 0UH		R3136	1-216-864-11	SHORT CHIP 0	
FB3102	1-481-051-21	FERRITE 0UH		R3138	1-216-864-11	SHORT CHIP 0	
FB3103	1-481-051-21	FERRITE 0UH		R3140	1-216-864-11	SHORT CHIP 0	
FB3104	1-481-051-21	FERRITE 0UH		R3142	1-216-864-11	SHORT CHIP 0	
FB3105	1-216-864-11	SHORT CHIP 0		R3143	1-216-864-11	SHORT CHIP 0	
FB3106	1-400-461-21	FERRITE 0UH		< VARISTOR >			
FB3107	1-216-864-11	SHORT CHIP 0		VD3100	1-803-974-21	VARISTOR, CHIP	(1608)
FB3108	1-216-864-11	SHORT CHIP 0		VD3101	1-803-974-21	VARISTOR, CHIP	(1608)
< SOCKET >				VD3102	1-803-974-21	VARISTOR, CHIP	(1608)
J3100	1-819-355-11	PHONO JACK 3P		VD3103	1-803-974-21	VARISTOR, CHIP	(1608)
J3101	1-819-356-11	PHONO JACK 3P		VD3104	1-803-974-21	VARISTOR, CHIP	(1608)
J3102	1-815-325-11	JACK		VD3105	1-803-974-21	VARISTOR, CHIP	(1608)
< COIL >				VD3106	1-803-974-21	VARISTOR, CHIP	(1608)
L3101	1-400-669-21	INDUCTOR 0UH		VD3107	1-803-974-21	VARISTOR, CHIP	(1608)
L3102	1-400-669-21	INDUCTOR 0UH		VD3108	1-803-974-21	VARISTOR, CHIP	(1608)
L3103	1-400-669-21	INDUCTOR 0UH		VD3109	1-803-974-21	VARISTOR, CHIP	(1608)
< RESISTOR >				VD3110	1-803-974-21	VARISTOR, CHIP	(1608)
R3102	1-216-864-11	SHORT CHIP 0		*A-1189-655-B FXE Board, Complete			
R3103	1-216-813-11	METAL CHIP 220 5%	1/10W		2-580-625-01	SCREW, +B M2X8	
R3105	1-216-813-11	METAL CHIP 220 5%	1/10W	A7300	*1-815-640-21	CONNECTOR, CARD (PCMCIA CARD)	
R3106	1-216-851-11	METAL CHIP 330K 5%	1/10W	< CAPACITOR >			
R3107	1-216-851-11	METAL CHIP 330K 5%	1/10W	C7100	1-117-720-11	CERAMIC CHIP 4.7UF	10V
R3108	1-216-813-11	METAL CHIP 220 5%	1/10W	C7101	1-117-720-11	CERAMIC CHIP 4.7UF	10V
R3109	1-216-813-11	METAL CHIP 220 5%	1/10W	C7102	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
R3110	1-216-813-11	METAL CHIP 220 5%	1/10W	C7103	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
R3111	1-216-813-11	METAL CHIP 220 5%	1/10W	C7104	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
R3113	1-216-813-11	METAL CHIP 220 5%	1/10W	C7105	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
R3114	1-216-813-11	METAL CHIP 220 5%	1/10W	C7106	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
				C7107	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7108	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7308	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7109	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7309	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7110	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7310	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7111	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7311	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C7112	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7312	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7113	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7313	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7114	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7314	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7115	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7401	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C7116	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7402	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7117	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7404	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7118	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7405	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7119	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7406	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7120	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7407	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V
C7121	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7409	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7122	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7410	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7123	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7411	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C7124	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7412	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C7125	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7413	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7127	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7414	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7128	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7415	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7129	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7416	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7130	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7420	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C7133	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7421	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C7140	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7422	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C7141	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7423	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C7143	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7424	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C7144	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7425	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7145	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7426	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7146	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7427	1-117-720-11	CERAMIC CHIP 4.7UF	10V
C7147	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7428	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7200	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7429	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C7202	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7430	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C7203	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7431	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C7204	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7432	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7205	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7500	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7206	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7501	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7207	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7502	1-165-875-11	CERAMIC CHIP 10UF	10% 10V
C7208	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7503	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7209	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7504	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C7210	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7505	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7211	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7506	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V
C7212	1-117-720-11	CERAMIC CHIP 4.7UF	10V	C7507	1-127-931-21	ELECT CHIP 470UF	20% 16V
C7300	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7508	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7301	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C7510	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C7302	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7511	1-112-672-81	CERAMIC CHIP 330PF	5% 50V
C7303	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7512	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7304	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7513	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C7305	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7514	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7306	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7515	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C7307	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C7516	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7517	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	< DIODE >			
C7518	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V	D7402	8-719-066-11	DIODE 1PS184-115	
C7519	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V	D7502	8-719-069-29	DIODE RB520S-30TE61	
C7520	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	D7503	8-719-078-04	DIODE EC31QS03L-TE12L	
C7521	1-163-037-11	CERAMIC CHIP 0.022UF	10.00% 50V	D7505	6-500-754-01	DIODE D1FM3	
C7522	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	D7506	6-500-294-01	DIODE PTZ-TE25-3.9B	
C7523	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	D7507	6-500-294-01	DIODE PTZ-TE25-3.9B	
C7524	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	D7508	8-719-069-29	DIODE RB520S-30TE61	
C7525	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	< FERRITE BEAD >			
C7527	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	FB7100	1-400-834-11	FERRITE	OUH
C7528	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	FB7101	1-469-869-21	FERRITE	OUH
C7530	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7103	1-400-834-11	FERRITE	OUH
C7531	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	FB7104	1-469-869-21	FERRITE	OUH
C7532	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7105	1-469-869-21	FERRITE	OUH
C7533	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7107	1-400-834-11	FERRITE	OUH
C7534	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7200	1-400-834-11	FERRITE	OUH
C7535	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7201	1-400-834-11	FERRITE	OUH
C7536	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7300	1-400-834-11	FERRITE	OUH
C7537	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7301	1-400-834-11	FERRITE	OUH
C7538	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7302	1-400-834-11	FERRITE	OUH
C7539	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	FB7303	1-400-834-11	FERRITE	OUH
C7540	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	FB7304	1-400-834-11	FERRITE	OUH
C7541	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB7305	1-400-834-11	FERRITE	OUH
C7542	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB7306	1-400-834-11	FERRITE	OUH
C7543	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	FB7307	1-400-834-11	FERRITE	OUH
C7544	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	FB7308	1-469-869-21	FERRITE	OUH
C7547	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	FB7309	1-400-834-11	FERRITE	OUH
C7548	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	FB7401	1-400-834-11	FERRITE	OUH
C7551	1-164-938-11	CERAMIC CHIP 0.0015UF	10.00% 50V	FB7402	1-400-834-11	FERRITE	OUH
C7552	1-164-938-11	CERAMIC CHIP 0.0015UF	10.00% 50V	FB7501	1-469-869-21	FERRITE	OUH
C7553	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7502	1-469-869-21	FERRITE	OUH
C7554	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	FB7503	1-469-869-21	FERRITE	OUH
C7555	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7504	1-414-554-21	FERRITE	OUH
C7556	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7505	1-414-554-21	FERRITE	OUH
C7557	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7506	1-469-869-21	FERRITE	OUH
C7558	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7508	1-469-869-21	FERRITE	OUH
C7559	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7509	1-400-834-11	FERRITE	OUH
C7560	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7510	1-400-834-11	FERRITE	OUH
C7561	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7511	1-400-834-11	FERRITE	OUH
C7562	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	FB7512	1-400-834-11	FERRITE	OUH
< CONNECTOR >				FB7513	1-400-834-11	FERRITE	OUH
CN7300	*1-815-641-11	CONNECTOR, CARD (PCMCIA CARD)		FB7514	1-400-834-11	FERRITE	OUH
CN7401	*1-817-717-61	CONNECTOR, BOARD TO BOARD 80P		FB7515	1-400-834-11	FERRITE	OUH
CN7402	1-820-209-11	MEMORY STICK CONNECTOR		FB7516	1-400-834-11	FERRITE	OUH
CN7501	*1-820-235-11	HEADER ASSEMBLY 30P		FB7517	1-400-834-11	FERRITE	OUH
CN7502	1-780-336-11	EARTH TERMINAL		FB7518	1-400-834-11	FERRITE	OUH
CN7503	1-780-336-11	EARTH TERMINAL		FB7519	1-400-834-11	FERRITE	OUH
				FB7520	1-400-834-11	FERRITE	OUH

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

FXE

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB7521	1-400-834-11	FERRITE	0UH	< RESISTOR >			
FB7522	1-400-834-11	FERRITE	0UH	R7102	1-218-990-81	SHORT CHIP	0
FB7523	1-400-834-11	FERRITE	0UH	R7107	1-218-937-11	RES-CHIP	47 5% 1/16W
< IC >				R7108	1-218-937-11	RES-CHIP	47 5% 1/16W
IC7101	6-708-916-01	IC ICS7150MLFT		R7111	1-218-937-11	RES-CHIP	47 5% 1/16W
IC7102	6-709-214-01	IC UPD61123F1-100-KA3-A		R7112	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7200	6-705-336-01	IC K9F2808U0C-PCB0T		R7114	1-218-937-11	RES-CHIP	47 5% 1/16W
IC7201	6-706-350-01	IC EDD2516AKTA-6B-E		R7115	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7300	6-706-482-01	IC TC7SH00FU(T5RSOYJF)		R7117	1-218-937-11	RES-CHIP	47 5% 1/16W
IC7301	8-759-298-91	IC 74LVT245PW-T		R7119	1-220-174-11	RES-CHIP	200 5% 1/16W
IC7302	6-708-132-01	IC 74LVC14APW		R7120	1-220-174-11	RES-CHIP	200 5% 1/16W
IC7303	8-759-644-48	IC 74LVC541APW		R7121	1-220-174-11	RES-CHIP	200 5% 1/16W
IC7304	8-759-644-48	IC 74LVC541APW		R7122	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7305	8-759-644-48	IC 74LVC541APW		R7123	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7306	8-759-644-48	IC 74LVC541APW		R7125	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC7307	8-759-644-48	IC 74LVC541APW		R7126	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC7308	8-759-644-48	IC 74LVC541APW		R7129	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7309	6-705-790-01	IC LM3525MX-H/J5000395		R7130	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7310	6-706-482-01	IC TC7SH00FU(5RSOYJF)		R7131	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7401	6-703-175-01	IC PST3629UL		R7132	1-218-941-81	RES-CHIP	100 5% 1/16W
IC7403	6-707-808-01	IC WM8727GED/RV		R7136	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7404	8-759-701-40	IC NJM3404AM-T1		R7138	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7405	6-703-271-01	IC TAR5S50 (TE85R)		R7139	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7500	6-706-884-01	IC BD9851EFV-E2		R7140	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7501	6-708-603-01	IC PQ070XNA1ZPH		R7141	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC7502	6-706-106-01	IC NCP1117STAT3		R7142	1-218-965-11	RES-CHIP	10K 5% 1/16W
< COIL >				R7143	1-218-965-11	RES-CHIP	10K 5% 1/16W
L7100	1-414-398-11	INDUCTOR	10UH	R7144	1-208-908-11	METAL CHIP	7.5K 0.5% 1/16W
L7400	1-412-008-31	INDUCTOR	15UH	R7145	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
L7401	1-412-008-31	INDUCTOR	15UH	R7147	1-208-675-11	METAL CHIP	470 0.5% 1/16W
L7402	1-412-008-31	INDUCTOR	15UH	R7148	1-218-947-11	RES-CHIP	330 5% 1/16W
L7500	1-424-922-21	INDUCTOR	10UH	R7149	1-218-947-11	RES-CHIP	330 5% 1/16W
L7501	1-424-922-21	INDUCTOR	10UH	R7150	1-218-947-11	RES-CHIP	330 5% 1/16W
< PROTECTOR MODULE >				R7151	1-218-941-81	RES-CHIP	100 5% 1/16W
PS7500 Δ	1-533-651-41	IC LINK	1.6A 24V	R7152	1-218-937-11	RES-CHIP	47 5% 1/16W
< TRANSISTOR >				R7154	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q7402	8-729-027-43	TRANSISTOR DTC114EKA-T146		R7155	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q7403	8-729-027-43	TRANSISTOR DTC114EKA-T146		R7158	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q7410	8-729-010-05	TRANSISTOR MSB709-RT1		R7159	1-218-990-81	SHORT CHIP	0
Q7411	8-729-010-05	TRANSISTOR MSB709-RT1		R7163	1-218-937-11	RES-CHIP	47 5% 1/16W
Q7412	8-729-010-05	TRANSISTOR MSB709-RT1		R7164	1-218-937-11	RES-CHIP	47 5% 1/16W
Q7500	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R7165	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q7501	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R7166	1-218-937-11	RES-CHIP	47 5% 1/16W
				R7167	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R7168	1-218-937-11	RES-CHIP	47 5% 1/16W
				R7169	1-218-937-11	RES-CHIP	47 5% 1/16W
				R7170	1-218-990-81	SHORT CHIP	0
				R7171	1-218-990-81	SHORT CHIP	0
				R7173	1-218-965-11	RES-CHIP	10K 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R7174	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7310	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7177	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7311	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7178	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7312	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7179	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7314	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7180	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7315	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7181	1-218-937-11	RES-CHIP	47	5%	1/16W	R7316	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7183	1-218-990-81	SHORT CHIP	0			R7317	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7200	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7318	1-218-937-11	RES-CHIP	47	5%	1/16W
R7201	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7319	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7203	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7320	1-218-937-11	RES-CHIP	47	5%	1/16W
R7205	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7321	1-218-937-11	RES-CHIP	47	5%	1/16W
R7206	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7322	1-218-937-11	RES-CHIP	47	5%	1/16W
R7207	1-218-949-11	RES-CHIP	470	5%	1/16W	R7323	1-218-937-11	RES-CHIP	47	5%	1/16W
R7208	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7324	1-218-937-11	RES-CHIP	47	5%	1/16W
R7209	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7325	1-218-945-11	RES-CHIP	220	5%	1/16W
R7211	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7400	1-218-990-81	SHORT CHIP	0		
R7212	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7401	1-218-990-81	SHORT CHIP	0		
R7213	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7403	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7214	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7405	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7215	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7407	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7216	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7408	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7217	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7409	1-218-937-11	RES-CHIP	47	5%	1/16W
R7218	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7410	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7221	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7411	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7222	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7412	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7224	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7413	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7227	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7414	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7228	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7415	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7229	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7416	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7232	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7417	1-218-990-81	SHORT CHIP	0		
R7233	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7418	1-218-941-81	RES-CHIP	100	5%	1/16W
R7235	1-218-939-11	RES-CHIP	68	5%	1/16W	R7421	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7236	1-218-939-11	RES-CHIP	68	5%	1/16W	R7423	1-218-941-81	RES-CHIP	100	5%	1/16W
R7237	1-218-941-81	RES-CHIP	100	5%	1/16W	R7425	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7238	1-218-941-81	RES-CHIP	100	5%	1/16W	R7426	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R7239	1-218-941-81	RES-CHIP	100	5%	1/16W	R7427	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R7240	1-218-941-81	RES-CHIP	100	5%	1/16W	R7428	1-218-972-11	RES-CHIP	39K	5%	1/16W
R7241	1-218-941-11	RES-CHIP	100	5%	1/16W	R7429	1-218-972-11	RES-CHIP	39K	5%	1/16W
R7242	1-218-941-11	RES-CHIP	100	5%	1/16W	R7430	1-208-712-11	METAL CHIP	16K	0.5%	1/16W
R7243	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7431	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7248	1-218-941-81	RES-CHIP	100	5%	1/16W	R7432	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7300	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7433	1-208-712-11	METAL CHIP	16K	0.5%	1/16W
R7301	1-218-941-81	RES-CHIP	100	5%	1/16W	R7435	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R7303	1-218-941-81	RES-CHIP	100	5%	1/16W	R7436	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R7304	1-218-937-11	RES-CHIP	47	5%	1/16W	R7437	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R7305	1-218-937-11	RES-CHIP	47	5%	1/16W	R7438	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R7306	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7439	1-218-941-81	RES-CHIP	100	5%	1/16W
R7307	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7440	1-218-941-81	RES-CHIP	100	5%	1/16W
R7308	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7456	1-218-945-11	RES-CHIP	220	5%	1/16W
R7309	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7457	1-218-945-11	RES-CHIP	220	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R7458	1-218-945-11	RES-CHIP	220 5% 1/16W	*A-1223-527-A B2 Board, Complete			
R7468	1-218-990-81	SHORT CHIP	0		6-806-793-01	IC S29JL032H70TFI010-FIX-BE101	
R7469	1-218-990-81	SHORT CHIP	0				
R7470	1-218-990-81	SHORT CHIP	0	A4702	4-098-157-01	HEAT SINK (DTT)	
R7471	1-218-990-81	SHORT CHIP	0				
R7472	1-218-990-81	SHORT CHIP	0			< CAPACITOR >	
R7502	1-218-985-11	RES-CHIP	470K 5% 1/16W	C4000	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
R7504	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W	C4001	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7505	1-208-679-11	METAL CHIP	680 0.5% 1/16W	C4002	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7506	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	C4003	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7507	1-208-712-11	METAL CHIP	16K 0.5% 1/16W	C4004	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7508	1-208-923-11	METAL CHIP	33K 0.5% 1/16W	C4005	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7509	1-208-711-11	METAL CHIP	15K 0.5% 1/16W	C4006	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
R7510	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	C4009	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
R7511	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	C4010	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
R7514	1-218-965-11	RES-CHIP	10K 5% 1/16W	C4011	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
R7515	1-218-985-11	RES-CHIP	470K 5% 1/16W	C4012	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
R7516	1-208-909-11	METAL CHIP	8.2K 0.5% 1/16W	C4013	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
R7517	1-208-931-11	METAL CHIP	68K 0.5% 1/16W	C4014	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7518	1-208-923-11	METAL CHIP	33K 0.5% 1/16W	C4015	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
R7519	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	C4016	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
R7522	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W	C4017	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
R7525	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	C4018	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
R7526	1-218-935-11	RES-CHIP	33 5% 1/16W	C4020	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
R7527	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	C4022	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
R7530	1-208-687-11	METAL CHIP	1.5K 0.5% 1/16W	C4026	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
R7531	1-208-661-11	METAL CHIP	120 0.5% 1/16W	C4029	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
R7532	1-208-890-11	METAL CHIP	1.3K 0.5% 1/16W	C4030	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
R7533	1-220-234-11	METAL CHIP	4.7 10% 1/4W	C4031	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
R7534	1-220-234-11	METAL CHIP	4.7 10% 1/4W	C4032	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
< RESISTOR CHIP >				C4033	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
RB7100	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C4200	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
RB7101	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C4300	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7102	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C4301	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7103	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C4302	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7104	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C4303	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7200	1-234-702-11	RES, NETWORK 68	(1005X4)	C4304	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7201	1-234-702-11	RES, NETWORK 68	(1005X4)	C4305	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7202	1-234-372-11	RES, NETWORK 100	(1005X4)	C4306	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
RB7203	1-234-372-11	RES, NETWORK 100	(1005X4)	C4307	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
RB7204	1-234-372-11	RES, NETWORK 100	(1005X4)	C4311	1-162-969-11	CERAMIC CHIP 0.0068UF	10.00% 25V
RB7205	1-234-702-11	RES, NETWORK 68	(1005X4)	C4317	1-162-969-11	CERAMIC CHIP 0.0068UF	10.00% 25V
RB7206	1-234-702-11	RES, NETWORK 68	(1005X4)	C4318	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V
RB7207	1-234-372-11	RES, NETWORK 100	(1005X4)	C4319	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V
RB7208	1-234-372-11	RES, NETWORK 100	(1005X4)	C4322	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
< CRYSTAL >				C4323	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
X7101	1-813-055-11	QUARTZ CRYSTAL UNIT		C4324	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
				C4325	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
				C4326	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4327	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V	C4399	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4328	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4400	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4329	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4401	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4330	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4331	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4332	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4404	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4333	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4405	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4334	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C4406	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4335	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C4407	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4336	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C4408	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4337	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C4409	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4338	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C4410	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4339	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V	C4416	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4340	1-115-416-11	CERAMIC CHIP 0.001UF	5.00% 25V	C4417	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4341	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C4418	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4343	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C4419	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4345	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C4420	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4347	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4422	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4348	1-100-118-21	ELECT CHIP 82UF	20% 16V	C4424	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4349	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4425	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4350	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4426	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4351	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4428	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4352	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4430	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4354	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C4433	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4355	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C4436	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4356	1-115-414-11	CERAMIC CHIP 820PF	5.00% 25V	C4437	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4357	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C4438	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4361	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C4439	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4363	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4440	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4364	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C4442	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4367	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C4443	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4369	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4444	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4370	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4446	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4371	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V	C4500	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C4372	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4501	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C4373	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4502	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C4374	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4503	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C4375	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C4504	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C4377	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4505	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C4379	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4506	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4380	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C4507	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C4381	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4508	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4383	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C4509	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4384	1-100-118-21	ELECT CHIP 82UF	20% 16V	C4510	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4385	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	C4511	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4391	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C4512	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4393	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C4513	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4394	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C4514	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C4395	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C4515	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C4396	1-126-412-11	ELECT CHIP 220UF	20.00% 4V	C4519	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4521	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C4813	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4523	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C4814	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4524	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C4815	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4525	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4816	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4526	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C4817	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4528	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C4818	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4529	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C4819	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4532	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4820	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4533	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C4821	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4534	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4822	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4535	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	C4823	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4536	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4824	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4537	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4825	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4538	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4826	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4539	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4827	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4540	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4828	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4541	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4829	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4542	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4830	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4543	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4831	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4544	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4832	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4545	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4833	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4546	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4834	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4552	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4835	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4553	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4836	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4554	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4837	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4555	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4838	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4556	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4839	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4557	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4840	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4558	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4841	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4561	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4842	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4562	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4843	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4563	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4844	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4564	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4847	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4565	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4849	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4566	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4850	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4568	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4851	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4569	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4853	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4570	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4854	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4572	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C4855	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4800	1-131-661-21	ELECT CHIP 100UF	20% 10V	C4856	1-131-661-21	ELECT CHIP 100UF	20% 10V
C4802	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4857	1-131-661-21	ELECT CHIP 100UF	20% 10V
C4804	1-131-661-21	ELECT CHIP 100UF	20% 10V	C4858	1-131-661-21	ELECT CHIP 100UF	20% 10V
C4805	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4859	1-131-661-21	ELECT CHIP 100UF	20% 10V
C4806	1-131-661-21	ELECT CHIP 100UF	20% 10V	C4860	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4807	1-131-661-21	ELECT CHIP 100UF	20% 10V	C4861	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4808	1-131-661-21	ELECT CHIP 100UF	20% 10V	C4862	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4809	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4863	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4810	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4864	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4811	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4865	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4812	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C4866	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4867	1-100-908-11	CERAMIC CHIP 1UF	10% 6.3V	C5022	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4868	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	C5023	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4869	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5024	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4870	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5025	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4871	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5026	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4872	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5027	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4873	1-131-661-21	ELECT CHIP 100UF	20% 10V	C5028	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4875	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5029	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4876	1-131-661-21	ELECT CHIP 100UF	20% 10V	C5030	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4877	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5031	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4878	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5032	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4879	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5033	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4880	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5034	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4883	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5035	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4885	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5036	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4886	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5037	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4887	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5038	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4888	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4889	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5040	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4890	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5041	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4891	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5042	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V
C4892	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5043	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V
C4893	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5046	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V
C4894	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5047	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C4895	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5100	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4896	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5101	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4897	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5102	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C4898	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5103	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5000	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5104	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5001	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5105	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5002	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5106	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5003	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5107	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5004	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5108	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5005	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5109	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5006	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5110	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5007	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5111	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5008	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5112	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5009	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5113	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5010	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5114	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5011	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5115	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5012	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5116	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5013	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5117	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5014	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5118	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5015	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5119	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5016	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5120	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5017	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5121	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5018	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5122	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5019	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5123	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5020	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5124	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5021	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C5125	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5126	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5177	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5127	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5178	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5128	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5179	1-164-848-11	CERAMIC CHIP 8PF	0.50PF 50V
C5129	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5180	1-164-848-11	CERAMIC CHIP 8PF	0.50PF 50V
C5130	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5181	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V
C5131	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5182	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5132	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5183	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C5133	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5184	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5134	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5185	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5135	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5186	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5136	1-165-880-21	ELECT CHIP 220UF	20.00% 2.5V	C5187	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5137	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5189	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5138	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5191	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5139	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5192	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5140	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5193	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5141	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5195	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5142	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C5196	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5143	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5197	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5144	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5198	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5145	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5199	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5146	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5203	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5147	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5204	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5148	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5205	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5149	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5206	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5150	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5207	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5151	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5300	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5152	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C5301	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5153	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5302	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5154	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5303	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5155	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5304	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5156	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5305	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5157	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5306	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5158	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5307	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5159	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5309	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5160	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5311	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5161	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5312	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5162	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5313	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5163	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5314	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5164	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5315	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5165	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5316	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5166	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5317	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5167	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5318	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5168	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C5319	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5170	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C5320	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5171	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C5321	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5172	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5322	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5173	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5324	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5174	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5325	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5175	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5326	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5176	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5327	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5328	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5389	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5329	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5391	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5330	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5392	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5331	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5393	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5332	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5394	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5333	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5395	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5334	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5396	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
C5335	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5397	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5336	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5398	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5337	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5399	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5338	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5401	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5339	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5403	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5340	1-126-390-11	ELECT CHIP 22UF	20.00% 6.3V	C5404	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5341	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5406	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5342	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5413	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
C5343	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5502	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5344	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5503	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5345	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5346	1-126-412-11	ELECT CHIP 220UF	20.00% 4V	C5505	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V
C5347	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5506	1-162-917-11	CERAMIC CHIP 15PF	5.00% 50V
C5348	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5508	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5349	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5509	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5350	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5510	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5351	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5511	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5352	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5512	1-100-756-91	CERAMIC CHIP 0.047UF	50V
C5353	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5513	1-100-756-91	CERAMIC CHIP 0.047UF	50V
C5354	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5514	1-100-756-91	CERAMIC CHIP 0.047UF	50V
C5355	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5515	1-100-436-91	CERAMIC CHIP 0.033UF	10% 25V
C5356	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5517	1-100-756-91	CERAMIC CHIP 0.047UF	50V
C5357	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5518	1-100-436-91	CERAMIC CHIP 0.033UF	10% 25V
C5358	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5519	1-100-756-91	CERAMIC CHIP 0.047UF	50V
C5359	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5520	1-100-436-91	CERAMIC CHIP 0.033UF	10% 25V
C5360	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5521	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5361	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5522	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5362	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5523	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5363	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5524	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5364	1-126-412-11	ELECT CHIP 220UF	20.00% 4V	C5525	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5368	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5526	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5369	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5527	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5370	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5528	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5371	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5529	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5372	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5530	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5373	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5531	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5375	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5532	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5376	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5533	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5377	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5534	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5378	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	C5535	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5379	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5536	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5380	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5604	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5381	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C5605	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5606	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5837	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5607	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5838	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5608	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5839	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5609	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5840	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5610	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5841	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5611	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5842	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5612	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5843	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5613	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C5844	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5615	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5845	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5616	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5851	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5617	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5852	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5629	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5853	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5630	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C5854	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5800	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C5855	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5801	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5856	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5802	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	C5857	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5803	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5858	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5804	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5859	1-131-661-21	ELECT CHIP 100UF	20% 10V
C5805	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5865	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5806	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5866	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5807	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5867	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5808	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5868	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5809	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5900	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5810	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5901	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C5811	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5902	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5812	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5903	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5813	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5904	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C5814	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5905	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5815	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5906	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5816	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5907	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5817	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5908	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5818	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5909	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5819	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5910	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5820	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5911	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5821	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5912	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5822	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5913	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5823	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5914	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V
C5824	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5915	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5825	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5916	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5826	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5917	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C5827	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5918	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5828	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5919	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5829	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5920	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5830	1-131-661-21	ELECT CHIP 100UF	20% 10V	C5921	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5831	1-131-661-21	ELECT CHIP 100UF	20% 10V	C5922	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5832	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C5923	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C5833	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C5924	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V
C5834	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C5925	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C5835	1-165-989-11	CERAMIC CHIP 10UF	10% 6.3V	C5926	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V
C5836	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C5927	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

B2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5928	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	D4521	8-719-081-97	DIODE MMDL914T1	
< CONNECTOR >				D4522	8-719-050-38	DIODE M1MA152WK-T1	
CN4001	*1-819-461-11	HEADER ASSEMBLY FOR PWB 4P		D4523	8-719-050-38	DIODE M1MA152WK-T1	
CN4002	1-819-862-11	CONNECTOR, BOARD TO BOARD 140P		D5100	8-719-045-61	DIODE SEC1901C	
CN4003	*1-819-476-11	HEADER ASSEMBLY FOR PWB 8P		< FUSE >			
CN4004	*1-820-550-11	HEADER ASSEMBLY FOR PWB 12P		F4000	Δ 1-576-603-21	FUSE 3.15A 24V	
CN4201	*1-817-738-61	CONNECTOR, BOARD TO BOARD 80P		F4300	Δ 1-576-611-21	FUSE 0.8A 32V	
CN4500	*1-818-400-11	HDMI CONNECTOR		F4301	Δ 1-576-603-21	FUSE 3.15A 24V	
CN4501	*1-818-400-11	HDMI CONNECTOR		F4302	Δ 1-576-603-21	FUSE 3.15A 24V	
CN5900	*1-820-443-11	HEADER ASSEMBLY FOR PWB 51P		F4303	Δ 1-576-603-21	FUSE 3.15A 24V	
< DIODE >				F4304	Δ 1-576-611-21	FUSE 0.8A 32V	
D4300	8-719-069-29	DIODE RB520S-30TE61		< FERRITE BEAD >			
D4301	8-719-069-29	DIODE RB520S-30TE61		FB4000	1-400-580-21	FERRITE 0UH	
D4302	8-719-078-04	DIODE EC31QS03L-TE12L		FB4001	1-400-580-21	FERRITE 0UH	
D4303	8-719-078-04	DIODE EC31QS03L-TE12L		FB4003	1-400-499-21	FERRITE 0UH	
D4304	8-719-078-04	DIODE EC31QS03L-TE12L		FB4004	1-400-580-21	FERRITE 0UH	
D4305	8-719-078-04	DIODE EC31QS03L-TE12L		FB4005	1-400-580-21	FERRITE 0UH	
D4306	6-501-528-01	DIODE 1SMA5915BT3G		FB4200	1-400-499-21	FERRITE 0UH	
D4307	6-501-528-01	DIODE 1SMA5915BT3G		FB4300	1-414-554-21	FERRITE 0UH	
D4308	6-501-528-01	DIODE 1SMA5915BT3G		FB4301	1-414-554-21	FERRITE 0UH	
D4309	6-501-528-01	DIODE 1SMA5915BT3G		FB4302	1-414-554-21	FERRITE 0UH	
D4310	8-719-069-29	DIODE RB520S-30TE61		FB4303	1-414-554-21	FERRITE 0UH	
D4311	8-719-069-29	DIODE RB520S-30TE61		FB4304	1-400-580-21	FERRITE 0UH	
D4312	8-719-056-82	DIODE UDZ-TE-17-6.2B		FB4305	1-400-580-21	FERRITE 0UH	
D4313	8-719-069-29	DIODE RB520S-30TE61		FB4307	1-400-580-21	FERRITE 0UH	
D4315	8-719-078-04	DIODE EC31QS03L-TE12L		FB4308	1-400-580-21	FERRITE 0UH	
D4317	6-501-528-01	DIODE 1SMA5915BT3G		FB4309	1-414-554-21	FERRITE 0UH	
D4318	6-501-529-01	DIODE 1SMA5920BT3G		FB4311	1-414-554-21	FERRITE 0UH	
D4500	6-500-701-01	DIODE PGB1010603NR		FB4312	1-400-580-21	FERRITE 0UH	
D4501	6-500-701-01	DIODE PGB1010603NR		FB4314	1-400-580-21	FERRITE 0UH	
D4502	6-500-701-01	DIODE PGB1010603NR		FB4500	1-414-554-21	FERRITE 0UH	
D4503	6-500-701-01	DIODE PGB1010603NR		FB4501	1-400-382-11	FERRITE 0UH	
D4504	6-500-701-01	DIODE PGB1010603NR		FB4502	1-400-499-21	FERRITE 0UH	
D4505	6-500-701-01	DIODE PGB1010603NR		FB4503	1-400-382-11	FERRITE 0UH	
D4506	8-719-081-97	DIODE MMDL914T1		FB4504	1-400-382-11	FERRITE 0UH	
D4507	8-719-081-97	DIODE MMDL914T1		FB4505	1-400-382-11	FERRITE 0UH	
D4508	6-500-701-01	DIODE PGB1010603NR		FB4506	1-400-499-21	FERRITE 0UH	
D4509	6-500-701-01	DIODE PGB1010603NR		FB4507	1-400-382-11	FERRITE 0UH	
D4511	6-500-701-01	DIODE PGB1010603NR		FB4508	1-400-382-11	FERRITE 0UH	
D4512	6-500-701-01	DIODE PGB1010603NR		FB4800	1-400-382-11	FERRITE 0UH	
D4514	6-500-701-01	DIODE PGB1010603NR		FB4801	1-400-382-11	FERRITE 0UH	
D4515	6-500-701-01	DIODE PGB1010603NR		FB4802	1-400-382-11	FERRITE 0UH	
D4516	6-500-701-01	DIODE PGB1010603NR		FB4803	1-400-382-11	FERRITE 0UH	
D4517	6-500-701-01	DIODE PGB1010603NR		FB4804	1-400-499-21	FERRITE 0UH	
D4518	6-500-701-01	DIODE PGB1010603NR		FB5000	1-400-499-21	FERRITE 0UH	
D4519	6-500-701-01	DIODE PGB1010603NR		FB5001	1-400-382-11	FERRITE 0UH	
D4520	8-719-081-97	DIODE MMDL914T1		FB5002	1-400-382-11	FERRITE 0UH	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB5003	1-400-382-11	FERRITE	OUH	IC4504	8-759-596-34	IC SN74LV4053APWR	
FB5004	1-400-382-11	FERRITE	OUH	IC4505	8-753-255-97	IC CXB1441R-T4	
FB5005	1-400-382-11	FERRITE	OUH	IC4506	6-708-703-01	IC SII9011CTU	
FB5100	1-400-580-21	FERRITE	OUH	IC4800	8-753-270-44	IC CXD3814GB-TL	
FB5101	1-400-580-21	FERRITE	OUH	IC4802	6-706-873-01	IC MT48LC4M16A2P-75:G	
FB5102	1-400-580-21	FERRITE	OUH	IC4803	6-705-529-01	IC LMH6658MMX/J5000172	
FB5103	1-400-580-21	FERRITE	OUH	IC4804	6-706-180-01	IC SN74LVC2G53DCUR	
FB5104	1-400-580-21	FERRITE	OUH	IC4807	8-759-549-01	IC SN74LV125APWR	
FB5105	1-400-580-21	FERRITE	OUH	IC5000	8-753-250-46	IC CXD2097BQ-1	
FB5106	1-400-580-21	FERRITE	OUH	IC5001	6-707-786-01	IC IS42S16100C1-7TL-TR	
FB5107	1-400-499-21	FERRITE	OUH	IC5002	8-759-549-01	IC SN74LV125APWR	
FB5300	1-400-580-21	FERRITE	OUH	IC5003	6-709-646-01	IC TLC2933AIPWR	
FB5301	1-400-580-21	FERRITE	OUH	IC5102	6-708-754-01	IC CY223922XC-380T	
FB5302	1-400-580-21	FERRITE	OUH	IC5103	6-705-019-01	IC PST3620UL	
FB5305	1-400-382-11	FERRITE	OUH	IC5104	8-759-592-49	IC TC7SZ125FU(TE85R)	
FB5306	1-400-382-11	FERRITE	OUH	IC5105	8-759-592-49	IC TC7SZ125FU(TE85R)	
FB5307	1-400-382-11	FERRITE	OUH	IC5107	8-753-239-54	IC CXD4709GB	
FB5401	1-400-499-21	FERRITE	OUH	IC5300	6-707-822-01	IC EM6A9320BI-5MG	
FB5402	1-400-499-21	FERRITE	OUH	IC5301	6-807-010-01	IC S29JL032H70TFI010-FIX-BE102	
FB5404	1-400-499-21	FERRITE	OUH	IC5302	6-707-822-01	IC EM6A9320BI-5MG	
FB5501	1-400-499-21	FERRITE	OUH	IC5304	6-707-373-01	IC TPS51100DGQR	
FB5502	1-400-499-21	FERRITE	OUH	IC5401	6-701-025-01	IC SN74LVC16244ADGGR	
FB5503	1-400-499-21	FERRITE	OUH	IC5403	6-704-099-01	IC TC7WZ08FK(TE85R)	
FB5601	1-400-499-21	FERRITE	OUH	IC5404	8-759-549-01	IC SN74LV125APWR	
FB5602	1-400-461-21	FERRITE	OUH	IC5408	6-701-917-01	IC TC7PA34FU(TE85R)	
FB5607	1-400-461-21	FERRITE	OUH	IC5500	6-708-641-01	IC SAA7115AHL/V1	
FB5800	1-400-382-11	FERRITE	OUH	IC5601	6-807-041-01	IC MB90F334APMC-G-9009E1	
FB5801	1-400-382-11	FERRITE	OUH	IC5602	8-759-596-29	IC SN74LV4066APWR	
FB5802	1-400-499-21	FERRITE	OUH	IC5603	6-704-067-01	IC M24128-BWMN6T(A)	
FB5901	1-400-461-21	FERRITE	OUH	IC5801	6-707-347-01	IC CXD9816AGG	
FB5902	1-400-461-21	FERRITE	OUH	IC5900	6-708-704-01	IC THC63LVD1023	
FB5903	1-400-461-21	FERRITE	OUH				
FB5904	1-400-461-21	FERRITE	OUH			< SOCKET >	
FB5908	1-400-461-21	FERRITE	OUH				
		< FILTER >		J4500	1-820-464-11	PHONO JACK 2P	
FL4801	1-813-815-21	LOWPASS FILTER				< COIL >	
		< IC >		L4300	1-424-918-21	INDUCTOR	10UH
IC4200	6-702-982-01	IC TC7SA00FU(TE85R)		L4301	1-424-918-21	INDUCTOR	10UH
IC4300	6-706-884-01	IC BD9851EFV-E2		L4302	1-424-918-21	INDUCTOR	10UH
IC4301	6-706-884-01	IC BD9851EFV-E2		L4303	1-424-918-21	INDUCTOR	10UH
IC4302	6-705-646-01	IC MB39A116PFT-G-BND-ERE1		L4304	1-456-065-21	INDUCTOR	22UH
IC4303	6-706-884-01	IC BD9851EFV-E2		L4306	1-419-630-21	INDUCTOR	4.7UH
IC4305	6-708-603-01	IC PQ070XNA1ZPH		L4307	1-456-787-21	INDUCTOR	10UH
IC4500	6-704-600-01	IC M24C02-WMN6T(B)		L4800	1-469-549-21	INDUCTOR	1UH
IC4501	6-704-600-01	IC M24C02-WMN6T(B)		L4801	1-469-549-21	INDUCTOR	1UH
IC4502	6-708-758-01	IC PCA9517DP.118		L4802	1-469-549-21	INDUCTOR	1UH
IC4503	6-708-758-01	IC PCA9517DP.118		L4803	1-469-549-21	INDUCTOR	1UH
				L4805	1-469-555-21	INDUCTOR	10UH
				L4806	1-469-555-21	INDUCTOR	10UH

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L4807	1-469-549-21	INDUCTOR	1UH	Q4802	6-550-586-01	TRANSISTOR 2PA1576R-115	
L4808	1-469-555-21	INDUCTOR	10UH	Q4804	6-550-585-01	TRANSISTOR 2PC4081R-115	
L5000	1-469-555-21	INDUCTOR	10UH	Q4805	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5001	1-469-555-21	INDUCTOR	10UH	Q4810	6-550-585-01	TRANSISTOR 2PC4081R-115	
L5100	1-469-553-21	INDUCTOR	4.7UH	Q4811	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5101	1-469-555-21	INDUCTOR	10UH	Q4812	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5500	1-412-058-11	INDUCTOR	10UH	Q4813	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5501	1-412-058-11	INDUCTOR	10UH	Q4814	6-550-585-01	TRANSISTOR 2PC4081R-115	
L5502	1-412-058-11	INDUCTOR	10UH	Q4815	6-550-585-01	TRANSISTOR 2PC4081R-115	
L5503	1-412-058-11	INDUCTOR	10UH	Q4816	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5900	1-469-555-21	INDUCTOR	10UH	Q4817	6-550-585-01	TRANSISTOR 2PC4081R-115	
L5901	1-469-555-21	INDUCTOR	10UH	Q4818	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5902	1-456-583-11	INDUCTOR	0UH	Q4819	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5903	1-469-555-21	INDUCTOR	10UH	Q5002	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5904	1-456-583-11	INDUCTOR	0UH	Q5100	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5905	1-456-583-11	INDUCTOR	0UH	Q5400	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5906	1-456-583-11	INDUCTOR	0UH	Q5500	8-729-905-35	TRANSISTOR 2SC4081-R	
L5907	1-456-583-11	INDUCTOR	0UH	Q5501	8-729-905-35	TRANSISTOR 2SC4081-R	
L5908	1-456-583-11	INDUCTOR	0UH	Q5502	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5909	1-456-583-11	INDUCTOR	0UH	Q5503	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5910	1-456-583-11	INDUCTOR	0UH	Q5601	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5911	1-456-583-11	INDUCTOR	0UH	Q5602	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L5912	1-456-583-11	INDUCTOR	0UH	Q5603	6-550-586-01	TRANSISTOR 2PA1576R-115	
L5913	1-456-583-11	INDUCTOR	0UH	< RESISTOR >			
L5914	1-456-583-11	INDUCTOR	0UH	R4004	1-218-990-81	SHORT CHIP	0
< TRANSISTOR >				R4005	1-218-933-11	RES-CHIP	22 5% 1/16W
Q4300	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4006	1-218-933-11	RES-CHIP	22 5% 1/16W
Q4301	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4007	1-218-955-11	RES-CHIP	1.5K 5% 1/16W
Q4302	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4008	1-218-973-11	RES-CHIP	47K 5% 1/16W
Q4303	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4009	1-218-959-11	RES-CHIP	3.3K 5% 1/16W
Q4304	6-550-586-01	TRANSISTOR 2PA1576R-115		R4010	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
Q4305	6-550-585-01	TRANSISTOR 2PC4081R-115		R4011	1-218-990-81	SHORT CHIP	0
Q4306	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R4012	1-218-990-81	SHORT CHIP	0
Q4308	6-550-222-01	TRANSISTOR IRF7335D1-TR		R4023	1-218-990-81	SHORT CHIP	0
Q4500	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4025	1-218-990-81	SHORT CHIP	0
Q4501	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4026	1-218-990-81	SHORT CHIP	0
Q4502	8-729-025-28	TRANSISTOR 2SK1828		R4033	1-218-990-81	SHORT CHIP	0
Q4503	8-729-025-28	TRANSISTOR 2SK1828		R4034	1-218-990-81	SHORT CHIP	0
Q4504	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4036	1-218-990-81	SHORT CHIP	0
Q4505	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4037	1-218-990-81	SHORT CHIP	0
Q4506	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4038	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
Q4507	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4039	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
Q4508	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4040	1-218-990-81	SHORT CHIP	0
Q4509	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4041	1-218-990-81	SHORT CHIP	0
Q4510	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4045	1-218-990-81	SHORT CHIP	0
Q4511	8-729-028-99	TRANSISTOR DTC114YUA-T106		R4046	1-218-990-81	SHORT CHIP	0
Q4512	8-729-028-96	TRANSISTOR DTC114EUA-T106		R4047	1-218-990-81	SHORT CHIP	0
Q4800	8-729-159-65	TRANSISTOR 2SD596-DV5		R4048	1-218-990-81	SHORT CHIP	0
Q4801	8-729-162-45	TRANSISTOR 2SB624-BV5		R4051	1-218-990-81	SHORT CHIP	0

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R4052	1-218-990-81	SHORT CHIP	0	R4113	1-216-864-11	SHORT CHIP	0
R4053	1-218-990-81	SHORT CHIP	0	R4114	1-216-864-11	SHORT CHIP	0
R4054	1-218-990-81	SHORT CHIP	0	R4115	1-216-864-11	SHORT CHIP	0
R4055	1-218-990-81	SHORT CHIP	0	R4116	1-216-864-11	SHORT CHIP	0
R4056	1-218-990-81	SHORT CHIP	0	R4117	1-216-864-11	SHORT CHIP	0
R4057	1-218-990-81	SHORT CHIP	0	R4118	1-216-864-11	SHORT CHIP	0
R4058	1-218-990-81	SHORT CHIP	0	R4119	1-216-864-11	SHORT CHIP	0
R4059	1-218-990-81	SHORT CHIP	0	R4120	1-216-864-11	SHORT CHIP	0
R4060	1-218-990-81	SHORT CHIP	0	R4121	1-216-864-11	SHORT CHIP	0
R4061	1-218-990-81	SHORT CHIP	0	R4122	1-216-864-11	SHORT CHIP	0
R4062	1-218-990-81	SHORT CHIP	0	R4205	1-218-990-81	SHORT CHIP	0
R4063	1-218-990-81	SHORT CHIP	0	R4206	1-218-990-81	SHORT CHIP	0
R4064	1-218-990-81	SHORT CHIP	0	R4207	1-218-990-81	SHORT CHIP	0
R4065	1-218-990-81	SHORT CHIP	0	R4208	1-218-990-81	SHORT CHIP	0
R4068	1-218-990-81	SHORT CHIP	0	R4209	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4069	1-218-990-81	SHORT CHIP	0	R4210	1-218-990-81	SHORT CHIP	0
R4070	1-218-990-81	SHORT CHIP	0	R4214	1-218-990-81	SHORT CHIP	0
R4071	1-218-990-81	SHORT CHIP	0	R4215	1-218-990-81	SHORT CHIP	0
R4072	1-218-990-81	SHORT CHIP	0	R4216	1-218-935-11	RES-CHIP	33 5% 1/16W
R4073	1-218-990-81	SHORT CHIP	0	R4222	1-218-939-11	RES-CHIP	68 5% 1/16W
R4074	1-218-990-81	SHORT CHIP	0	R4223	1-218-939-11	RES-CHIP	68 5% 1/16W
R4076	1-218-990-81	SHORT CHIP	0	R4224	1-218-935-11	RES-CHIP	33 5% 1/16W
R4077	1-218-990-81	SHORT CHIP	0	R4225	1-218-990-81	SHORT CHIP	0
R4079	1-218-990-81	SHORT CHIP	0	R4226	1-218-990-81	SHORT CHIP	0
R4081	1-218-990-81	SHORT CHIP	0	R4230	1-218-990-81	SHORT CHIP	0
R4082	1-218-990-81	SHORT CHIP	0	R4231	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4084	1-218-990-81	SHORT CHIP	0	R4232	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4085	1-218-990-81	SHORT CHIP	0	R4234	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
R4086	1-218-990-81	SHORT CHIP	0	R4235	1-218-956-11	RES-CHIP	1.8K 5% 1/16W
R4089	1-218-990-81	SHORT CHIP	0	R4236	1-218-950-11	RES-CHIP	560 5% 1/16W
R4090	1-218-990-81	SHORT CHIP	0	R4237	1-218-990-81	SHORT CHIP	0
R4091	1-218-990-81	SHORT CHIP	0	R4238	1-218-990-81	SHORT CHIP	0
R4092	1-218-990-81	SHORT CHIP	0	R4239	1-218-990-81	SHORT CHIP	0
R4093	1-218-990-81	SHORT CHIP	0	R4240	1-218-990-81	SHORT CHIP	0
R4095	1-218-990-81	SHORT CHIP	0	R4241	1-218-990-81	SHORT CHIP	0
R4096	1-218-990-81	SHORT CHIP	0	R4242	1-218-990-81	SHORT CHIP	0
R4097	1-218-990-81	SHORT CHIP	0	R4243	1-218-990-81	SHORT CHIP	0
R4098	1-218-990-81	SHORT CHIP	0	R4244	1-218-990-81	SHORT CHIP	0
R4099	1-218-990-81	SHORT CHIP	0	R4245	1-218-990-81	SHORT CHIP	0
R4100	1-218-990-81	SHORT CHIP	0	R4246	1-218-990-81	SHORT CHIP	0
R4101	1-218-990-81	SHORT CHIP	0	R4271	1-218-990-81	SHORT CHIP	0
R4102	1-218-990-81	SHORT CHIP	0	R4273	1-218-939-11	RES-CHIP	68 5% 1/16W
R4103	1-218-990-81	SHORT CHIP	0	R4306	1-218-985-11	RES-CHIP	470K 5% 1/16W
R4104	1-218-990-81	SHORT CHIP	0	R4308	1-218-985-11	RES-CHIP	470K 5% 1/16W
R4105	1-218-990-81	SHORT CHIP	0	R4310	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4106	1-218-990-81	SHORT CHIP	0	R4311	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4107	1-218-990-81	SHORT CHIP	0	R4321	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4108	1-218-990-81	SHORT CHIP	0	R4322	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4109	1-218-950-11	RES-CHIP	560 5% 1/16W	R4324	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W
R4112	1-216-864-11	SHORT CHIP	0	R4325	1-208-923-11	METAL CHIP	33K 0.5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4326	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4398	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4327	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R4404	1-216-864-11	SHORT CHIP	0		
R4328	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R4405	1-216-864-11	SHORT CHIP	0		
R4329	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4406	1-216-864-11	SHORT CHIP	0		
R4332	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4407	1-216-864-11	SHORT CHIP	0		
R4333	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4409	1-218-990-81	SHORT CHIP	0		
R4334	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4416	1-216-864-11	SHORT CHIP	0		
R4335	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4422	1-218-990-81	SHORT CHIP	0		
R4336	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W	R4503	1-218-929-11	RES-CHIP	10	5%	1/16W
R4337	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W	R4504	1-218-929-11	RES-CHIP	10	5%	1/16W
R4340	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4505	1-216-815-11	METAL CHIP	330	5%	1/10W
R4341	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4506	1-216-815-11	METAL CHIP	330	5%	1/10W
R4342	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4507	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4343	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4508	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4344	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4509	1-216-853-11	METAL CHIP	470K	5%	1/10W
R4345	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4510	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4346	1-218-967-11	RES-CHIP	15K	5%	1/16W	R4511	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4347	1-218-949-11	RES-CHIP	470	5%	1/16W	R4512	1-216-853-11	METAL CHIP	470K	5%	1/10W
R4348	1-218-985-11	RES-CHIP	470K	5%	1/16W	R4513	1-218-941-81	RES-CHIP	100	5%	1/16W
R4350	1-218-985-11	RES-CHIP	470K	5%	1/16W	R4514	1-218-941-81	RES-CHIP	100	5%	1/16W
R4352	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R4515	1-218-941-81	RES-CHIP	100	5%	1/16W
R4353	1-218-947-11	RES-CHIP	330	5%	1/16W	R4516	1-218-941-81	RES-CHIP	100	5%	1/16W
R4354	1-218-990-81	SHORT CHIP	0			R4517	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4355	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4518	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4356	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4519	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4357	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4520	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4358	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4521	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4359	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4522	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4360	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4523	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4361	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4524	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4362	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4525	1-218-941-81	RES-CHIP	100	5%	1/16W
R4363	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R4526	1-218-990-81	SHORT CHIP	0		
R4364	1-218-990-81	SHORT CHIP	0			R4527	1-218-990-81	SHORT CHIP	0		
R4365	1-218-990-81	SHORT CHIP	0			R4528	1-218-941-81	RES-CHIP	100	5%	1/16W
R4366	1-218-969-11	RES-CHIP	22K	5%	1/16W	R4529	1-218-990-81	SHORT CHIP	0		
R4368	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4530	1-218-990-81	SHORT CHIP	0		
R4369	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R4533	1-218-990-81	SHORT CHIP	0		
R4370	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R4534	1-218-990-81	SHORT CHIP	0		
R4371	1-218-985-11	RES-CHIP	470K	5%	1/16W	R4535	1-218-990-81	SHORT CHIP	0		
R4374	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4536	1-218-929-11	RES-CHIP	10	5%	1/16W
R4375	1-218-990-81	SHORT CHIP	0			R4537	1-218-929-11	RES-CHIP	10	5%	1/16W
R4384	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R4538	1-218-929-11	RES-CHIP	10	5%	1/16W
R4386	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R4539	1-218-929-11	RES-CHIP	10	5%	1/16W
R4387	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4540	1-218-929-11	RES-CHIP	10	5%	1/16W
R4388	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4541	1-218-929-11	RES-CHIP	10	5%	1/16W
R4390	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4542	1-218-929-11	RES-CHIP	10	5%	1/16W
R4391	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4543	1-218-929-11	RES-CHIP	10	5%	1/16W
R4392	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4544	1-218-990-81	SHORT CHIP	0		
R4396	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R4545	1-218-990-81	SHORT CHIP	0		
R4397	1-218-990-81	SHORT CHIP	0			R4546	1-218-929-11	RES-CHIP	10	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4547	1-218-929-11	RES-CHIP	10	5%	1/16W	R4612	1-218-937-11	RES-CHIP	47	5%	1/16W
R4548	1-218-929-11	RES-CHIP	10	5%	1/16W	R4613	1-218-937-11	RES-CHIP	47	5%	1/16W
R4549	1-218-929-11	RES-CHIP	10	5%	1/16W	R4614	1-218-937-11	RES-CHIP	47	5%	1/16W
R4550	1-218-929-11	RES-CHIP	10	5%	1/16W	R4615	1-218-937-11	RES-CHIP	47	5%	1/16W
R4551	1-218-929-11	RES-CHIP	10	5%	1/16W	R4616	1-218-937-11	RES-CHIP	47	5%	1/16W
R4552	1-218-929-11	RES-CHIP	10	5%	1/16W	R4617	1-218-937-11	RES-CHIP	47	5%	1/16W
R4553	1-218-929-11	RES-CHIP	10	5%	1/16W	R4618	1-218-937-11	RES-CHIP	47	5%	1/16W
R4554	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4619	1-218-937-11	RES-CHIP	47	5%	1/16W
R4555	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4620	1-218-937-11	RES-CHIP	47	5%	1/16W
R4557	1-218-990-81	SHORT CHIP	0			R4621	1-218-933-11	RES-CHIP	22	5%	1/16W
R4559	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4622	1-218-935-11	RES-CHIP	33	5%	1/16W
R4560	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4623	1-216-864-11	SHORT CHIP	0		
R4561	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4624	1-218-990-81	SHORT CHIP	0		
R4562	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4700	1-216-864-11	SHORT CHIP	0		
R4563	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4701	1-216-864-11	SHORT CHIP	0		
R4572	1-218-951-11	RES-CHIP	680	5%	1/16W	R4800	1-216-864-11	SHORT CHIP	0		
R4573	1-218-951-11	RES-CHIP	680	5%	1/16W	R4801	1-218-990-81	SHORT CHIP	0		
R4574	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4802	1-218-937-11	RES-CHIP	47	5%	1/16W
R4575	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4803	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4576	1-218-951-11	RES-CHIP	680	5%	1/16W	R4804	1-218-935-11	RES-CHIP	33	5%	1/16W
R4577	1-218-990-81	SHORT CHIP	0			R4811	1-218-929-11	RES-CHIP	10	5%	1/16W
R4578	1-218-990-81	SHORT CHIP	0			R4812	1-218-929-11	RES-CHIP	10	5%	1/16W
R4580	1-218-990-81	SHORT CHIP	0			R4813	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4581	1-218-990-81	SHORT CHIP	0			R4814	1-218-933-11	RES-CHIP	22	5%	1/16W
R4582	1-218-937-11	RES-CHIP	47	5%	1/16W	R4815	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4583	1-218-937-11	RES-CHIP	47	5%	1/16W	R4819	1-218-929-11	RES-CHIP	10	5%	1/16W
R4584	1-218-937-11	RES-CHIP	47	5%	1/16W	R4820	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4585	1-218-937-11	RES-CHIP	47	5%	1/16W	R4821	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4586	1-218-937-11	RES-CHIP	47	5%	1/16W	R4823	1-218-990-81	SHORT CHIP	0		
R4587	1-218-937-11	RES-CHIP	47	5%	1/16W	R4824	1-218-990-81	SHORT CHIP	0		
R4588	1-218-937-11	RES-CHIP	47	5%	1/16W	R4825	1-218-990-81	SHORT CHIP	0		
R4589	1-218-937-11	RES-CHIP	47	5%	1/16W	R4826	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4590	1-218-929-11	RES-CHIP	10	5%	1/16W	R4827	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4591	1-218-929-11	RES-CHIP	10	5%	1/16W	R4829	1-218-990-81	SHORT CHIP	0		
R4592	1-218-929-11	RES-CHIP	10	5%	1/16W	R4831	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R4593	1-218-929-11	RES-CHIP	10	5%	1/16W	R4833	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4594	1-218-929-11	RES-CHIP	10	5%	1/16W	R4835	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4595	1-218-929-11	RES-CHIP	10	5%	1/16W	R4836	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4596	1-218-929-11	RES-CHIP	10	5%	1/16W	R4837	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W
R4597	1-218-929-11	RES-CHIP	10	5%	1/16W	R4844	1-218-990-81	SHORT CHIP	0		
R4598	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4845	1-218-937-11	RES-CHIP	47	5%	1/16W
R4599	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4846	1-218-945-11	RES-CHIP	220	5%	1/16W
R4600	1-216-864-11	SHORT CHIP	0			R4847	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4601	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4848	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4602	1-218-937-11	RES-CHIP	47	5%	1/16W	R4849	1-218-943-11	RES-CHIP	150	5%	1/16W
R4603	1-218-937-11	RES-CHIP	47	5%	1/16W	R4851	1-218-951-11	RES-CHIP	680	5%	1/16W
R4605	1-216-864-11	SHORT CHIP	0			R4852	1-218-941-11	RES-CHIP	100	5%	1/16W
R4609	1-218-990-81	SHORT CHIP	0			R4854	1-218-941-11	RES-CHIP	100	5%	1/16W
R4610	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4855	1-218-937-11	RES-CHIP	47	5%	1/16W
R4611	1-218-933-11	RES-CHIP	22	5%	1/16W	R4856	1-218-937-11	RES-CHIP	47	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4858	1-218-929-11	RES-CHIP	10	5%	1/16W	R4920	1-218-935-11	RES-CHIP	33	5%	1/16W
R4860	1-218-929-11	RES-CHIP	10	5%	1/16W	R4921	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4862	1-218-941-11	RES-CHIP	100	5%	1/16W	R4922	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4863	1-218-941-11	RES-CHIP	100	5%	1/16W	R4923	1-218-990-81	SHORT CHIP	0		
R4864	1-218-929-11	RES-CHIP	10	5%	1/16W	R4924	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R4865	1-218-945-11	RES-CHIP	220	5%	1/16W	R4925	1-218-933-11	RES-CHIP	22	5%	1/16W
R4866	1-218-990-81	SHORT CHIP	0			R4927	1-218-990-81	SHORT CHIP	0		
R4867	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R4928	1-218-990-81	SHORT CHIP	0		
R4868	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R4929	1-218-990-81	SHORT CHIP	0		
R4869	1-218-945-11	RES-CHIP	220	5%	1/16W	R4932	1-218-937-11	RES-CHIP	47	5%	1/16W
R4870	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4933	1-218-990-81	SHORT CHIP	0		
R4874	1-218-945-11	RES-CHIP	220	5%	1/16W	R4934	1-218-933-11	RES-CHIP	22	5%	1/16W
R4875	1-218-990-81	SHORT CHIP	0			R4935	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4876	1-208-663-11	METAL CHIP	150	0.5%	1/16W	R4937	1-218-990-81	SHORT CHIP	0		
R4877	1-208-635-11	METAL CHIP	10	0.5%	1/16W	R4938	1-218-933-11	RES-CHIP	22	5%	1/16W
R4878	1-218-945-11	RES-CHIP	220	5%	1/16W	R4939	1-218-990-81	SHORT CHIP	0		
R4879	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4940	1-218-990-81	SHORT CHIP	0		
R4880	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4941	1-218-947-11	RES-CHIP	330	5%	1/16W
R4881	1-218-941-11	RES-CHIP	100	5%	1/16W	R4942	1-218-929-11	RES-CHIP	10	5%	1/16W
R4882	1-218-941-81	RES-CHIP	100	5%	1/16W	R4944	1-218-941-81	RES-CHIP	100	5%	1/16W
R4883	1-218-941-81	RES-CHIP	100	5%	1/16W	R4945	1-218-941-81	RES-CHIP	100	5%	1/16W
R4884	1-218-941-81	RES-CHIP	100	5%	1/16W	R4947	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4885	1-218-941-81	RES-CHIP	100	5%	1/16W	R4948	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4886	1-218-941-81	RES-CHIP	100	5%	1/16W	R4949	1-218-665-11	METAL CHIP	75	0.5%	1/10W
R4887	1-218-941-81	RES-CHIP	100	5%	1/16W	R5002	1-218-937-11	RES-CHIP	47	5%	1/16W
R4888	1-218-941-81	RES-CHIP	100	5%	1/16W	R5003	1-218-945-11	RES-CHIP	220	5%	1/16W
R4890	1-216-818-11	METAL CHIP	560	5%	1/10W	R5004	1-218-933-11	RES-CHIP	22	5%	1/16W
R4891	1-216-818-11	METAL CHIP	560	5%	1/10W	R5005	1-218-933-11	RES-CHIP	22	5%	1/16W
R4892	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5006	1-218-941-81	RES-CHIP	100	5%	1/16W
R4893	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5007	1-218-941-81	RES-CHIP	100	5%	1/16W
R4894	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R5008	1-218-933-11	RES-CHIP	22	5%	1/16W
R4896	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5009	1-218-933-11	RES-CHIP	22	5%	1/16W
R4898	1-208-885-11	METAL CHIP	820	0.5%	1/16W	R5010	1-218-990-81	SHORT CHIP	0		
R4899	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R5013	1-218-937-11	RES-CHIP	47	5%	1/16W
R4900	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5014	1-218-937-11	RES-CHIP	47	5%	1/16W
R4901	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5016	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4902	1-218-990-81	SHORT CHIP	0			R5017	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4903	1-218-990-81	SHORT CHIP	0			R5018	1-218-933-11	RES-CHIP	22	5%	1/16W
R4904	1-218-951-11	RES-CHIP	680	5%	1/16W	R5019	1-218-945-11	RES-CHIP	220	5%	1/16W
R4905	1-218-990-81	SHORT CHIP	0			R5021	1-218-945-11	RES-CHIP	220	5%	1/16W
R4907	1-218-941-81	RES-CHIP	100	5%	1/16W	R5022	1-218-947-11	RES-CHIP	330	5%	1/16W
R4908	1-218-941-81	RES-CHIP	100	5%	1/16W	R5024	1-218-990-81	SHORT CHIP	0		
R4909	1-218-941-81	RES-CHIP	100	5%	1/16W	R5025	1-218-990-81	SHORT CHIP	0		
R4911	1-218-951-11	RES-CHIP	680	5%	1/16W	R5026	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4912	1-218-990-81	SHORT CHIP	0			R5027	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4913	1-218-951-11	RES-CHIP	680	5%	1/16W	R5029	1-218-933-11	RES-CHIP	22	5%	1/16W
R4914	1-218-990-81	SHORT CHIP	0			R5030	1-218-933-11	RES-CHIP	22	5%	1/16W
R4915	1-218-990-81	SHORT CHIP	0			R5031	1-218-933-11	RES-CHIP	22	5%	1/16W
R4917	1-218-951-11	RES-CHIP	680	5%	1/16W	R5036	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4918	1-218-990-81	SHORT CHIP	0			R5037	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5038	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R5169	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5039	1-218-990-81	SHORT CHIP	0			R5170	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5041	1-218-990-81	SHORT CHIP	0			R5171	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5048	1-218-990-81	SHORT CHIP	0			R5172	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5049	1-218-990-81	SHORT CHIP	0			R5173	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5050	1-218-990-81	SHORT CHIP	0			R5174	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5051	1-218-990-81	SHORT CHIP	0			R5178	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5052	1-218-990-81	SHORT CHIP	0			R5179	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5053	1-218-990-81	SHORT CHIP	0			R5180	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5108	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5181	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5109	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5182	1-218-929-11	RES-CHIP	10	5%	1/16W
R5110	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5183	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5114	1-218-990-81	SHORT CHIP	0			R5184	1-218-990-81	SHORT CHIP	0		
R5115	1-218-949-11	RES-CHIP	470	5%	1/16W	R5185	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5116	1-218-973-11	RES-CHIP	47K	5%	1/16W	R5189	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5119	1-218-990-81	SHORT CHIP	0			R5190	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5120	1-216-864-11	SHORT CHIP	0			R5193	1-218-935-11	RES-CHIP	33	5%	1/16W
R5122	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5194	1-218-935-11	RES-CHIP	33	5%	1/16W
R5123	1-218-990-81	SHORT CHIP	0			R5195	1-218-935-11	RES-CHIP	33	5%	1/16W
R5126	1-218-990-81	SHORT CHIP	0			R5196	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5127	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	R5197	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5128	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W	R5201	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5129	1-218-935-11	RES-CHIP	33	5%	1/16W	R5202	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5130	1-218-950-11	RES-CHIP	560	5%	1/16W	R5203	1-218-941-81	RES-CHIP	100	5%	1/16W
R5132	1-218-935-11	RES-CHIP	33	5%	1/16W	R5204	1-218-990-81	SHORT CHIP	0		
R5134	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5205	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5135	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5136	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5207	1-218-945-11	RES-CHIP	220	5%	1/16W
R5137	1-218-990-81	SHORT CHIP	0			R5208	1-218-990-81	SHORT CHIP	0		
R5138	1-218-990-81	SHORT CHIP	0			R5209	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5140	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5211	1-218-990-81	SHORT CHIP	0		
R5141	1-218-935-11	RES-CHIP	33	5%	1/16W	R5212	1-218-937-11	RES-CHIP	47	5%	1/16W
R5142	1-218-941-81	RES-CHIP	100	5%	1/16W	R5213	1-218-937-11	RES-CHIP	47	5%	1/16W
R5146	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5214	1-218-937-11	RES-CHIP	47	5%	1/16W
R5147	1-218-935-11	RES-CHIP	33	5%	1/16W	R5215	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5148	1-218-990-81	SHORT CHIP	0			R5216	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5151	1-218-990-81	SHORT CHIP	0			R5217	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5152	1-218-990-81	SHORT CHIP	0			R5218	1-218-990-81	SHORT CHIP	0		
R5155	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5220	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5156	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5221	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5157	1-218-937-11	RES-CHIP	47	5%	1/16W	R5222	1-218-941-81	RES-CHIP	100	5%	1/16W
R5158	1-218-937-11	RES-CHIP	47	5%	1/16W	R5223	1-218-939-11	RES-CHIP	68	5%	1/16W
R5159	1-218-937-11	RES-CHIP	47	5%	1/16W	R5300	1-218-933-11	RES-CHIP	22	5%	1/16W
R5160	1-218-937-11	RES-CHIP	47	5%	1/16W	R5301	1-218-990-81	SHORT CHIP	0		
R5162	1-218-990-81	SHORT CHIP	0			R5302	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5164	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5303	1-218-933-11	RES-CHIP	22	5%	1/16W
R5165	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5304	1-218-933-11	RES-CHIP	22	5%	1/16W
R5166	1-218-935-11	RES-CHIP	33	5%	1/16W	R5305	1-218-990-81	SHORT CHIP	0		
R5167	1-218-941-81	RES-CHIP	100	5%	1/16W	R5307	1-218-933-11	RES-CHIP	22	5%	1/16W
R5168	1-218-935-11	RES-CHIP	33	5%	1/16W	R5308	1-218-933-11	RES-CHIP	22	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5309	1-218-933-11	RES-CHIP	22	5%	1/16W	R5406	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5310	1-218-933-11	RES-CHIP	22	5%	1/16W	R5407	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5311	1-218-933-11	RES-CHIP	22	5%	1/16W	R5409	1-218-933-11	RES-CHIP	22	5%	1/16W
R5312	1-218-933-11	RES-CHIP	22	5%	1/16W	R5411	1-218-990-81	SHORT CHIP	0		
R5313	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5412	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5315	1-218-933-11	RES-CHIP	22	5%	1/16W	R5415	1-218-933-11	RES-CHIP	22	5%	1/16W
R5316	1-218-933-11	RES-CHIP	22	5%	1/16W	R5417	1-218-939-11	RES-CHIP	68	5%	1/16W
R5318	1-218-933-11	RES-CHIP	22	5%	1/16W	R5418	1-218-939-11	RES-CHIP	68	5%	1/16W
R5319	1-218-933-11	RES-CHIP	22	5%	1/16W	R5422	1-218-990-81	SHORT CHIP	0		
R5320	1-218-933-11	RES-CHIP	22	5%	1/16W	R5423	1-218-990-81	SHORT CHIP	0		
R5321	1-218-933-11	RES-CHIP	22	5%	1/16W	R5424	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5322	1-218-933-11	RES-CHIP	22	5%	1/16W	R5432	1-218-990-81	SHORT CHIP	0		
R5323	1-218-933-11	RES-CHIP	22	5%	1/16W	R5433	1-218-990-81	SHORT CHIP	0		
R5324	1-218-933-11	RES-CHIP	22	5%	1/16W	R5443	1-218-990-81	SHORT CHIP	0		
R5325	1-218-937-11	RES-CHIP	47	5%	1/16W	R5444	1-218-941-81	RES-CHIP	100	5%	1/16W
R5326	1-218-937-11	RES-CHIP	47	5%	1/16W	R5445	1-218-941-81	RES-CHIP	100	5%	1/16W
R5327	1-218-937-11	RES-CHIP	47	5%	1/16W	R5448	1-218-990-81	SHORT CHIP	0		
R5328	1-218-937-11	RES-CHIP	47	5%	1/16W	R5449	1-218-990-81	SHORT CHIP	0		
R5329	1-218-937-11	RES-CHIP	47	5%	1/16W	R5450	1-218-990-81	SHORT CHIP	0		
R5330	1-218-937-11	RES-CHIP	47	5%	1/16W	R5500	1-218-990-81	SHORT CHIP	0		
R5331	1-218-937-11	RES-CHIP	47	5%	1/16W	R5501	1-218-990-81	SHORT CHIP	0		
R5332	1-218-937-11	RES-CHIP	47	5%	1/16W	R5509	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5333	1-218-990-81	SHORT CHIP	0			R5511	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5334	1-218-933-11	RES-CHIP	22	5%	1/16W	R5512	1-218-952-11	RES-CHIP	820	5%	1/16W
R5335	1-218-933-11	RES-CHIP	22	5%	1/16W	R5515	1-218-952-11	RES-CHIP	820	5%	1/16W
R5336	1-218-933-11	RES-CHIP	22	5%	1/16W	R5516	1-216-818-11	METAL CHIP	560	5%	1/10W
R5337	1-218-933-11	RES-CHIP	22	5%	1/16W	R5517	1-218-990-81	SHORT CHIP	0		
R5339	1-216-295-91	SHORT CHIP	0			R5518	1-216-818-11	METAL CHIP	560	5%	1/10W
R5340	1-218-933-11	RES-CHIP	22	5%	1/16W	R5519	1-218-990-81	SHORT CHIP	0		
R5341	1-218-933-11	RES-CHIP	22	5%	1/16W	R5525	1-216-864-11	SHORT CHIP	0		
R5342	1-218-933-11	RES-CHIP	22	5%	1/16W	R5526	1-218-937-11	RES-CHIP	47	5%	1/16W
R5343	1-218-937-11	RES-CHIP	47	5%	1/16W	R5527	1-218-937-11	RES-CHIP	47	5%	1/16W
R5344	1-218-933-11	RES-CHIP	22	5%	1/16W	R5528	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5345	1-218-937-11	RES-CHIP	47	5%	1/16W	R5532	1-218-933-11	RES-CHIP	22	5%	1/16W
R5346	1-218-937-11	RES-CHIP	47	5%	1/16W	R5533	1-218-933-11	RES-CHIP	22	5%	1/16W
R5347	1-218-937-11	RES-CHIP	47	5%	1/16W	R5534	1-218-933-11	RES-CHIP	22	5%	1/16W
R5348	1-218-937-11	RES-CHIP	47	5%	1/16W	R5535	1-218-990-81	SHORT CHIP	0		
R5349	1-218-937-11	RES-CHIP	47	5%	1/16W	R5536	1-216-864-11	SHORT CHIP	0		
R5350	1-218-937-11	RES-CHIP	47	5%	1/16W	R5542	1-218-990-81	SHORT CHIP	0		
R5351	1-218-937-11	RES-CHIP	47	5%	1/16W	R5543	1-218-990-81	SHORT CHIP	0		
R5352	1-218-937-11	RES-CHIP	47	5%	1/16W	R5546	1-218-937-11	RES-CHIP	47	5%	1/16W
R5353	1-218-937-11	RES-CHIP	47	5%	1/16W	R5600	1-218-990-81	SHORT CHIP	0		
R5354	1-218-937-11	RES-CHIP	47	5%	1/16W	R5605	1-218-990-81	SHORT CHIP	0		
R5355	1-218-937-11	RES-CHIP	47	5%	1/16W	R5606	1-218-941-81	RES-CHIP	100	5%	1/16W
R5356	1-218-990-81	SHORT CHIP	0			R5611	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5357	1-218-933-11	RES-CHIP	22	5%	1/16W	R5612	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5358	1-218-933-11	RES-CHIP	22	5%	1/16W	R5614	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5365	1-216-295-91	SHORT CHIP	0			R5615	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5366	1-218-990-81	SHORT CHIP	0			R5617	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5405	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5618	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5619	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5684	1-218-941-81	RES-CHIP	100	5%	1/16W
R5623	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5685	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5624	1-218-990-81	SHORT CHIP	0			R5686	1-218-990-81	SHORT CHIP	0		
R5625	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5687	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5626	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5689	1-218-941-81	RES-CHIP	100	5%	1/16W
R5627	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5690	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5628	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5692	1-218-933-11	RES-CHIP	22	5%	1/16W
R5629	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5693	1-218-933-11	RES-CHIP	22	5%	1/16W
R5631	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5694	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5632	1-218-941-81	RES-CHIP	100	5%	1/16W	R5702	1-218-990-81	SHORT CHIP	0		
R5633	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5713	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R5634	1-218-941-81	RES-CHIP	100	5%	1/16W	R5714	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R5635	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5718	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5636	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R5734	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5637	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5737	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5638	1-218-933-11	RES-CHIP	22	5%	1/16W	R5738	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5639	1-218-941-81	RES-CHIP	100	5%	1/16W	R5800	1-218-990-81	SHORT CHIP	0		
R5641	1-218-933-11	RES-CHIP	22	5%	1/16W	R5801	1-218-937-11	RES-CHIP	47	5%	1/16W
R5643	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5802	1-218-990-81	SHORT CHIP	0		
R5644	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5803	1-218-990-81	SHORT CHIP	0		
R5645	1-218-990-81	SHORT CHIP	0			R5806	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5646	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5820	1-218-990-81	SHORT CHIP	0		
R5647	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5821	1-218-990-81	SHORT CHIP	0		
R5648	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5822	1-218-990-81	SHORT CHIP	0		
R5649	1-218-990-81	SHORT CHIP	0			R5823	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5650	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5825	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5651	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5827	1-218-933-11	RES-CHIP	22	5%	1/16W
R5652	1-218-933-11	RES-CHIP	22	5%	1/16W	R5828	1-218-939-11	RES-CHIP	68	5%	1/16W
R5653	1-218-933-11	RES-CHIP	22	5%	1/16W	R5829	1-218-933-11	RES-CHIP	22	5%	1/16W
R5654	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5830	1-218-990-81	SHORT CHIP	0		
R5655	1-218-933-11	RES-CHIP	22	5%	1/16W	R5832	1-218-939-11	RES-CHIP	68	5%	1/16W
R5656	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5833	1-218-939-11	RES-CHIP	68	5%	1/16W
R5657	1-218-933-11	RES-CHIP	22	5%	1/16W	R5837	1-216-864-11	SHORT CHIP	0		
R5661	1-218-933-11	RES-CHIP	22	5%	1/16W	R5841	1-216-864-11	SHORT CHIP	0		
R5662	1-218-933-11	RES-CHIP	22	5%	1/16W	R5842	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5663	1-218-941-81	RES-CHIP	100	5%	1/16W	R5843	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5665	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5844	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5667	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5845	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5668	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5846	1-218-949-11	RES-CHIP	470	5%	1/16W
R5669	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R5847	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5670	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5848	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5672	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5849	1-218-989-11	RES-CHIP	1M	5%	1/16W
R5674	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5850	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5675	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5851	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5676	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5852	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5677	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5853	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5679	1-218-990-81	SHORT CHIP	0			R5854	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5681	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5855	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5682	1-218-941-81	RES-CHIP	100	5%	1/16W	R5901	1-218-990-81	SHORT CHIP	0		
R5683	1-218-941-81	RES-CHIP	100	5%	1/16W	R5902	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R5904	1-218-990-81	SHORT CHIP	0	RB5006	1-234-373-21	RES, NETWORK 220	(1005X4)
R5907	1-218-990-81	SHORT CHIP	0	RB5007	1-234-373-21	RES, NETWORK 220	(1005X4)
R5908	1-218-990-81	SHORT CHIP	0	RB5008	1-234-373-21	RES, NETWORK 220	(1005X4)
R5909	1-218-990-81	SHORT CHIP	0	RB5009	1-234-373-21	RES, NETWORK 220	(1005X4)
R5912	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	RB5108	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5913	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	RB5109	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5915	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5110	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5917	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5111	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5919	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5113	1-234-378-21	RES, NETWORK 10K	(1005X4)
R5921	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5114	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
R5923	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5115	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
R5925	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5116	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5926	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5117	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5928	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5118	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5934	1-218-933-11	RES-CHIP	22 5% 1/16W	RB5119	1-234-881-21	RES, CHIP NETWORK 22KX8	(3816)
R5935	1-218-933-11	RES-CHIP	22 5% 1/16W	RB5120	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
R5936	1-218-990-81	SHORT CHIP	0	RB5121	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
< RESISTOR CHIP >				RB5300	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4201	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB5301	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4203	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5302	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4205	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	RB5303	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4206	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB5304	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4207	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	RB5305	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4208	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB5306	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4212	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB5307	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4500	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5308	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5309	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4502	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5310	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4503	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5311	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4504	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5312	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4801	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5313	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4804	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5314	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4805	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5315	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4806	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5316	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4807	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5317	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4808	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5321	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4809	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5322	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4810	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5324	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4811	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5327	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4812	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5328	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4813	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB5330	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4814	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB5331	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5000	1-234-373-21	RES, NETWORK 220	(1005X4)	RB5333	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5001	1-234-373-21	RES, NETWORK 220	(1005X4)	RB5334	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5002	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	RB5335	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5003	1-234-373-21	RES, NETWORK 220	(1005X4)	RB5336	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5004	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	RB5337	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5005	1-234-373-21	RES, NETWORK 220	(1005X4)	RB5338	1-234-371-21	RES, NETWORK 47	(1005X4)
				RB5339	1-234-371-21	RES, NETWORK 47	(1005X4)
				RB5340	1-234-371-21	RES, NETWORK 47	(1005X4)

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB5341	1-234-371-21	RES, NETWORK 47	(1005X4)	VD4506	1-803-974-21	VARISTOR, CHIP	(1608)
RB5342	1-234-371-21	RES, NETWORK 47	(1005X4)	VD4507	1-803-974-21	VARISTOR, CHIP	(1608)
RB5343	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5344	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5345	1-234-371-21	RES, NETWORK 47	(1005X4)			< CRYSTAL >	
				X4800	1-813-373-11	OSCILLATOR, CRYSTAL	
RB5346	1-234-371-21	RES, NETWORK 47	(1005X4)	X5100	1-813-528-11	VIBRATOR, CRYSTAL 27MHZ	
RB5347	1-234-371-21	RES, NETWORK 47	(1005X4)	X5500	1-795-219-21	VIBRATOR, CRYSTAL	
RB5348	1-234-371-21	RES, NETWORK 47	(1005X4)	X5800	1-813-375-21	QURATZ CRYSTAL UNIT	
RB5349	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5350	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5351	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5352	1-234-371-21	RES, NETWORK 47	(1005X4)				
RB5400	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)		2-580-626-01	SCREW, SP 4-40 UNC	
RB5401	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)		2-632-929-01	SHEET (K), RADIATION	
RB5402	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)				
						< CAPACITOR >	
				C8410	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
RB5403	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	C8411	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
RB5419	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C8413	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
RB5420	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C8422	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
RB5421	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C8423	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
RB5422	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)				
				C8424	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
RB5500	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C8425	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
RB5501	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C8426	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
RB5800	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8427	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
RB5801	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8428	1-162-928-11	CERAMIC CHIP 120PF	5.00% 50V
RB5802	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)				
				C8430	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
RB5803	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8432	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
RB5804	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8433	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
RB5805	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8434	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
RB5806	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C8435	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
RB5807	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)				
				C8436	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
RB5808	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8437	1-162-906-11	CERAMIC CHIP 1.5PF	0.25PF 50V
RB5809	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8438	1-162-906-11	CERAMIC CHIP 1.5PF	0.25PF 50V
RB5810	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8439	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
RB5811	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8440	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
RB5812	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)				
				C8441	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
RB5813	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8443	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
RB5814	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8444	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
RB5815	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C8445	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
RB5816	1-234-795-21	RES, NETWORK 0X4	(2010)	C8446	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
RB5817	1-234-795-21	RES, NETWORK 0X4	(2010)				
				C8447	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
RB5826	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	C8448	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V
RB5827	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	C8449	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
				C8450	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
				C8451	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
				C8452	1-165-875-11	CERAMIC CHIP 10UF	10% 10V
				C8453	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
				C8454	1-165-875-11	CERAMIC CHIP 10UF	10% 10V
				C8455	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
				C8456	1-124-779-00	ELECT CHIP 10UF	20.00% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C8457	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	C8513	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V
C8458	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8514	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C8459	1-165-875-11	CERAMIC CHIP 10UF	10% 10V	C8519	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C8460	1-165-875-11	CERAMIC CHIP 10UF	10% 10V	C8601	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8461	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V	C8602	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8462	1-165-875-11	CERAMIC CHIP 10UF	10% 10V	C8604	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8463	1-165-875-11	CERAMIC CHIP 10UF	10% 10V	C8605	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8464	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8606	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8465	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V	C8607	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8466	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8608	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8467	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	C8609	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C8468	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8610	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8469	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V	C8611	1-164-933-11	CERAMIC CHIP 220PF	10.00% 50V
C8470	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C8612	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8471	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8613	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8472	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8614	1-164-933-11	CERAMIC CHIP 220PF	10.00% 50V
C8473	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8615	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8474	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8616	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8476	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8617	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8477	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C8618	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8478	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C8619	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8479	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	C8620	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8480	1-112-672-81	CERAMIC CHIP 330PF	5% 50V	C8621	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8481	1-112-672-81	CERAMIC CHIP 330PF	5% 50V	C8622	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8482	1-112-672-81	CERAMIC CHIP 330PF	5% 50V	C8623	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8483	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8625	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8484	1-112-672-81	CERAMIC CHIP 330PF	5% 50V	C8627	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8485	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8628	1-115-154-11	ELECT CHIP 10UF	20.00% 16V
C8486	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8629	1-115-154-11	ELECT CHIP 10UF	20.00% 16V
C8487	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C8630	1-115-154-11	ELECT CHIP 10UF	20.00% 16V
C8488	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C8631	1-115-154-11	ELECT CHIP 10UF	20.00% 16V
C8490	1-100-567-81	CERAMIC CHIP 10000PF	10% 25V	C8633	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8491	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C8634	1-128-357-11	ELECT CHIP 10UF	20.00% 16V
C8492	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V	C8636	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8493	1-112-692-11	CERAMIC CHIP 1000PF	5% 50V	C8637	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C8494	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8638	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8495	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8639	1-164-933-11	CERAMIC CHIP 220PF	10.00% 50V
C8496	1-125-889-91	CERAMIC CHIP 2.2UF	10% 10V	C8640	1-164-933-11	CERAMIC CHIP 220PF	10.00% 50V
C8497	1-125-889-91	CERAMIC CHIP 2.2UF	10% 10V	C8641	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8501	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8642	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8643	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8504	1-127-820-11	CERAMIC CHIP 4.7UF	10% 16V	C8644	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C8505	1-127-820-11	CERAMIC CHIP 4.7UF	10% 16V	C8645	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8506	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C8646	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8507	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C8647	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8508	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8648	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8509	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8649	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8510	1-127-772-81	CERAMIC CHIP 33000PF	10% 10V	C8657	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
C8511	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C8658	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C8512	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C8659	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C8660	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8860	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V
C8661	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8861	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V
C8801	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8862	1-165-585-21	ELECT CHIP 47UF	20% 25V
C8803	1-128-357-11	ELECT CHIP 10UF	20.00% 16V	C8863	1-165-585-21	ELECT CHIP 47UF	20% 25V
C8804	1-128-357-11	ELECT CHIP 10UF	20.00% 16V	C8864	1-165-585-21	ELECT CHIP 47UF	20% 25V
C8805	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	C8865	1-165-585-21	ELECT CHIP 47UF	20% 25V
C8806	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	C8867	1-128-401-11	ELECT CHIP 100UF	20% 25V
C8807	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	C8868	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C8809	1-164-935-11	CERAMIC CHIP 470PF	10.00% 50V	C8869	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C8810	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8870	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C8811	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8871	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C8812	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C8872	1-128-401-11	ELECT CHIP 100UF	20% 25V
C8813	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C8873	1-128-992-21	ELECT CHIP 47UF	20% 25V
C8815	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8874	1-112-030-31	ELECT 1500UF	20% 35V
C8816	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C8875	1-112-030-31	ELECT 1500UF	20% 35V
C8817	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8876	1-131-702-11	FILM 0.68UF	5% 50V
C8820	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C8877	1-131-702-11	FILM 0.68UF	5% 50V
C8821	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C8878	1-131-702-11	FILM 0.68UF	5% 50V
C8823	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8879	1-131-702-11	FILM 0.68UF	5% 50V
C8829	1-126-399-11	ELECT CHIP 10UF	20.00% 35V	C8880	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8830	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	C8881	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8831	1-128-595-11	ELECT CHIP 2.2UF	20.00% 50V	C8882	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8832	1-128-595-11	ELECT CHIP 2.2UF	20.00% 50V	C8883	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8833	1-126-395-11	ELECT CHIP 22UF	20.00% 16V	C8886	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8834	1-126-395-11	ELECT CHIP 22UF	20.00% 16V	C8887	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8835	1-126-399-11	ELECT CHIP 10UF	20.00% 35V	C8888	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8836	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C8889	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C8837	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C8901	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V
C8838	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	C8902	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V
C8839	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	C8903	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8840	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C8904	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8841	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C8905	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8842	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	C8906	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8843	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	C8907	1-163-275-11	CERAMIC CHIP 0.001UF	5.00% 50V
C8844	1-162-965-11	CERAMIC CHIP 0.0015UF	10.00% 50V	C8908	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C8845	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C8913	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C8846	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C9001	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8847	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C9002	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8848	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9003	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8849	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9004	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8850	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9005	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8851	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9006	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8852	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9007	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8853	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9008	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8854	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9009	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C8855	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9010	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C8856	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9011	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8857	1-164-004-11	CERAMIC CHIP 0.1UF	10.00% 25V	C9012	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V
C8858	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9013	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V
C8859	1-163-007-11	CERAMIC CHIP 680PF	10.00% 50V	C9014	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C9015	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9206	1-127-931-21	ELECT CHIP 470UF	20% 16V
C9016	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9209	1-127-931-21	ELECT CHIP 470UF	20% 16V
C9017	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9210	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C9018	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9211	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C9019	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9351	1-162-920-11	CERAMIC CHIP 27PF	5.00% 50V
C9020	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9352	1-162-920-11	CERAMIC CHIP 27PF	5.00% 50V
C9021	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9353	1-162-920-11	CERAMIC CHIP 27PF	5.00% 50V
C9022	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	C9354	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9023	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C9355	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9030	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9356	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9031	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9357	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9032	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9358	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9033	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9359	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9034	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9360	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9035	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9361	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9036	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9362	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9037	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9363	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9040	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9364	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9041	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9365	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9042	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9366	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9043	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9367	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9044	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V	C9368	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9045	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9369	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C9046	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9370	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C9047	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9371	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C9048	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9372	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9049	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9373	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9051	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9374	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9052	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9375	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9053	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9376	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9054	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9377	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9055	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9378	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9056	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9379	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9057	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9380	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9058	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9381	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9059	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9382	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9060	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9383	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9061	1-162-926-11	CERAMIC CHIP 82PF	5.00% 50V	C9384	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9062	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9385	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9063	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9386	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9064	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9387	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9065	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C9388	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9066	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C9389	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9067	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9390	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9068	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C9391	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9069	1-162-923-11	CERAMIC CHIP 47PF	5.00% 50V	C9392	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9070	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V	C9393	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
C9071	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C9394	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V
C9201	1-128-995-21	ELECT CHIP 100UF	20% 10V	C9395	1-128-399-11	ELECT CHIP 330UF	20% 16V
C9202	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C9396	1-113-619-11	CERAMIC CHIP 0.47UF	10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C9397	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	C9560	1-115-566-11	CERAMIC CHIP 4.7UF	10.00% 10V
C9398	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9562	1-162-962-11	CERAMIC CHIP 470PF	10.00% 50V
C9399	1-113-619-11	CERAMIC CHIP 0.47UF	10V	C9563	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V
C9400	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	C9564	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C9401	1-113-619-11	CERAMIC CHIP 0.47UF	10V	C9565	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V
C9402	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C9566	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C9403	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C9567	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C9404	1-113-619-11	CERAMIC CHIP 0.47UF	10V	C9568	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
C9405	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V	C9569	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
C9406	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	C9570	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C9408	1-113-619-11	CERAMIC CHIP 0.47UF	10V	C9573	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C9409	1-165-887-91	CERAMIC CHIP 0.22UF	10% 6.3V	C9574	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C9410	1-113-619-11	CERAMIC CHIP 0.47UF	10V	C9575	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C9412	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C9576	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C9413	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9577	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C9414	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	C9580	1-165-874-21	ELECT CHIP 120UF	20% 6.3V
C9415	1-100-354-21	ELECT CHIP 220UF	20% 6.3V	C9581	1-165-979-21	ELECT CHIP 100UF	20% 6.3V
C9416	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9582	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C9417	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9583	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C9418	1-128-396-11	ELECT CHIP 470UF	20% 10V	C9585	1-115-566-11	CERAMIC CHIP 4.7UF	10.00% 10V
C9419	1-128-396-11	ELECT CHIP 470UF	20% 10V	C9586	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C9420	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9587	1-128-991-21	ELECT CHIP 10UF	20% 50V
C9421	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	C9588	1-128-991-21	ELECT CHIP 10UF	20% 50V
C9422	1-128-994-21	ELECT CHIP 47UF	20% 10V	C9589	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C9423	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C9590	1-128-996-11	ELECT CHIP 4.7UF	20% 50V
C9424	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9591	1-125-827-91	CERAMIC CHIP 1UF	10.00% 25V
C9425	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C9595	1-162-995-11	CERAMIC CHIP 0.022UF	50V
C9427	1-100-354-21	ELECT CHIP 220UF	20% 6.3V	C9596	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C9428	1-127-931-21	ELECT CHIP 470UF	20% 16V	C9597	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
C9429	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	C9598	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
C9430	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C9600	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
C9431	1-100-743-91	CERAMIC CHIP 2.2UF	20% 16V	C9601	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
C9433	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V	C9701	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C9434	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C9703	1-164-943-81	CERAMIC CHIP 0.01UF	10.00% 16V
C9435	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	C9704	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C9436	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C9705	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C9437	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9706	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C9438	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	C9708	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C9439	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9710	1-128-993-21	ELECT CHIP 22UF	20% 10V
C9440	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9711	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C9441	1-127-931-21	ELECT CHIP 470UF	20% 16V	C9712	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C9442	1-127-931-21	ELECT CHIP 470UF	20% 16V	C9713	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
C9443	1-127-931-21	ELECT CHIP 470UF	20% 16V	C9714	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C9444	1-162-925-11	CERAMIC CHIP 68PF	5.00% 50V	C9715	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
C9445	1-113-701-21	ELECT CHIP 22UF	20.00% 16V	C9716	1-165-871-21	ELECT CHIP 22UF	20% 6.3V
C9446	1-113-701-21	ELECT CHIP 22UF	20.00% 16V	C9718	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C9447	1-113-701-21	ELECT CHIP 22UF	20.00% 16V	C9719	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V
C9448	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9720	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C9449	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	C9721	1-115-456-21	DOUBLE LAYER 0.22F	5.5V
C9556	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C9723	1-100-912-11	CERAMIC CHIP 1UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C9725	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	CN9004	*1-417-602-11	SOCKET 21PIN	
C9726	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	CN9201	*1-819-928-11	HEADER ASSEMBLY 20P	
C9727	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V	CN9203	*1-819-797-11	HEADER ASSEMBLY FOR PWB 13P	
C9728	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	CN9204	*1-794-502-11	PIN, CONNECTOR (B04B-PASK) 4P	
C9729	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	CN9207	*1-818-714-21	HEADER ASSEMBLY 20P	
C9732	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	CN9208	*1-818-656-21	HEADER ASSEMBLY 30P	
C9733	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V	CN9209	1-820-461-11	CONNECTOR, BOARD TO BOARD 140P	
C9734	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	CN9210	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P	
C9736	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	CN9701	1-794-343-51	CONNECTOR, FFC/FPC 18P	
C9738	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	CN9702	1-794-342-51	CONNECTOR, FFC/FPC 14P	
C9739	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V	< DIODE >			
C9740	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D8411	8-719-404-50	DIODE MA111-TX	
C9742	1-127-715-91	CERAMIC CHIP 0.22UF	10% 16V	D8413	8-719-404-50	DIODE MA111-TX	
C9743	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D8414	8-719-404-50	DIODE MA111-TX	
C9744	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8603	8-719-404-50	DIODE MA111-TX	
C9745	1-127-760-11	CERAMIC CHIP 4.7UF	10% 6.3V	D8605	8-719-404-50	DIODE MA111-TX	
C9746	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8606	8-719-404-50	DIODE MA111-TX	
C9747	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8607	8-719-404-50	DIODE MA111-TX	
C9748	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8608	8-719-404-50	DIODE MA111-TX	
C9749	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D8611	8-719-404-50	DIODE MA111-TX	
C9750	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	D8613	8-719-404-50	DIODE MA111-TX	
C9751	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8615	8-719-404-50	DIODE MA111-TX	
C9752	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8616	8-719-404-50	DIODE MA111-TX	
C9753	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8617	8-719-404-50	DIODE MA111-TX	
C9754	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8618	8-719-404-50	DIODE MA111-TX	
C9755	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8619	8-719-404-50	DIODE MA111-TX	
C9756	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8621	8-719-404-50	DIODE MA111-TX	
C9757	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D8622	8-719-404-50	DIODE MA111-TX	
C9758	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8623	8-719-404-50	DIODE MA111-TX	
C9759	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8804	8-719-404-50	DIODE MA111-TX	
C9760	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	D8805	8-719-404-50	DIODE MA111-TX	
C9761	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D8807	8-719-404-50	DIODE MA111-TX	
C9764	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8808	8-719-404-50	DIODE MA111-TX	
C9765	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D8809	6-500-884-01	DIODE P6SMBJ30A-5	
C9769	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D8810	6-500-884-01	DIODE P6SMBJ30A-5	
C9770	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D8811	6-500-884-01	DIODE P6SMBJ30A-5	
C9771	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	D8812	6-500-884-01	DIODE P6SMBJ30A-5	
C9773	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	D8814	6-500-260-01	DIODE P6SMB39AT3	
C9778	1-162-911-11	CERAMIC CHIP 6PF	0.50PF 50V	D8815	6-500-260-01	DIODE P6SMB39AT3	
C9779	1-162-911-11	CERAMIC CHIP 6PF	0.50PF 50V	D8816	6-500-260-01	DIODE P6SMB39AT3	
C9780	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	D8817	6-500-260-01	DIODE P6SMB39AT3	
C9781	1-128-993-21	ELECT CHIP 22UF	20% 10V	D9002	8-719-158-49	DIODE RD12SB2	
C9782	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V	D9007	8-719-422-91	DIODE MA8091	
< CONNECTOR >				D9013	8-719-422-91	DIODE MA8091	
CN8801	*1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P		D9014	8-719-158-49	DIODE RD12SB2	
CN9001	*1-417-602-11	SOCKET 21PIN		D9020	8-719-422-91	DIODE MA8091	
CN9002	*1-417-602-11	SOCKET 21PIN		D9023	8-719-422-46	DIODE MA8056	
CN9003	1-820-284-11	D SUB CONNECTOR		D9024	8-719-422-46	DIODE MA8056	
				D9026	8-719-422-46	DIODE MA8056	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

AE

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D9027	8-719-050-38	DIODE M1MA152WK-T1		FB9013	1-414-554-21	FERRITE	OUH
D9031	8-719-158-49	DIODE RD12SE2		FB9023	1-414-554-21	FERRITE	OUH
D9036	8-719-422-91	DIODE MA8091		FB9028	1-414-554-21	FERRITE	OUH
D9040	8-719-050-38	DIODE M1MA152WK-T1		FB9209	1-400-089-21	FERRITE	OUH
D9041	8-719-050-38	DIODE M1MA152WK-T1		FB9210	1-400-089-21	FERRITE	OUH
D9552	8-719-422-58	DIODE MA8062		FB9211	1-400-089-21	FERRITE	OUH
D9553	8-719-069-29	DIODE RB520S-30TE61		FB9212	1-469-082-21	FERRITE	OUH
D9556	6-501-336-01	DIODE RSX201L-30TE25		FB9213	1-400-089-21	FERRITE	OUH
D9557	8-719-078-04	DIODE EC31QS03L-TE12L		FB9225	1-400-089-21	FERRITE	OUH
D9558	6-501-529-01	DIODE 1SMA5920BT3G		FB9227	1-469-082-21	FERRITE	OUH
D9559	6-501-528-01	DIODE 1SMA5915BT3G		FB9231	1-400-089-21	FERRITE	OUH
D9560	8-719-069-29	DIODE RB520S-30TE61		FB9232	1-400-089-21	FERRITE	OUH
D9702	8-719-050-37	DIODE M1MA152WA-T1		FB9233	1-469-637-21	FERRITE	OUH
D9703	8-719-058-24	DIODE RB501V-40TE-17		FB9234	1-469-637-21	FERRITE	OUH
D9705	8-719-404-50	DIODE MA111-TX		FB9235	1-469-637-21	FERRITE	OUH
D9706	8-719-404-50	DIODE MA111-TX		FB9236	1-469-637-21	FERRITE	OUH
D9708	8-719-423-03	DIODE MA8100		FB9237	1-469-637-21	FERRITE	OUH
D9710	8-719-050-37	DIODE M1MA152WA-T1		FB9238	1-469-637-21	FERRITE	OUH
D9711	8-719-050-38	DIODE M1MA152WK-T1		FB9239	1-469-637-21	FERRITE	OUH
D9713	8-719-404-50	DIODE MA111-TX		FB9355	1-400-794-21	FERRITE	OUH
D9714	8-719-050-37	DIODE M1MA152WA-T1		FB9551	1-469-092-11	FERRITE	OUH
D9715	8-719-050-38	DIODE M1MA152WK-T1		FB9552	1-469-092-11	FERRITE	OUH
D9716	8-719-423-03	DIODE MA8100		FB9553	1-400-794-21	FERRITE	OUH
ET001	1-780-336-11	EARTH TERMINAL		FB9707	1-400-794-21	FERRITE	OUH
ET002	1-780-336-11	EARTH TERMINAL		FB9708	1-400-580-21	FERRITE	OUH
ET003	1-780-336-11	EARTH TERMINAL		< FILTER >			
ET004	1-780-336-11	EARTH TERMINAL		FL9203	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
ET005	1-780-336-11	EARTH TERMINAL		FL9701	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
< FUSE >				FL9702	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
F8801	Δ 1-576-774-21	FUSE	6.3A 72V	FL9703	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
F9551	Δ 1-576-603-11	FUSE	3.15A 24V	< IC >			
F9552	Δ 1-576-612-21	FUSE	1A 32V	IC8401	6-707-151-01	IC SN74AHCT244PWR	
F9553	Δ 1-576-612-21	FUSE	1A 32V	IC8404	8-759-592-45	IC TC7SZU04FU (TE85R)	
< FERRITE BEAD >				IC8405	6-709-778-11	IC MSP4411K-QA-D6-401T	
FB8401	1-414-234-22	FERRITE	OUH	IC8406	6-706-536-01	IC CXD9826R	
FB8402	1-414-921-11	FERRITE	OUH	IC8407	6-706-907-01	IC M5M51008DFP-70H	
FB8403	1-414-445-11	FERRITE	OUH	IC8408	8-759-183-53	IC TL431CPK-E2	
FB8404	1-400-499-21	FERRITE	OUH	IC8409	8-759-359-49	IC NJM3414AV (TE2)	
FB8405	1-414-921-11	FERRITE	OUH	IC8410	6-707-593-01	IC PST3641UL	
FB8406	1-400-499-21	FERRITE	OUH	IC8411	8-759-679-05	IC TC7WH34FU (TE12R)	
FB8407	1-400-499-21	FERRITE	OUH	IC8601	8-759-278-58	IC NJM4558V-TE2	
FB8408	1-414-921-11	FERRITE	OUH	IC8602	8-759-278-58	IC NJM4558V-TE2	
FB8801	1-414-234-22	FERRITE	OUH	IC8603	8-752-107-98	IC CXA2188Q-T4	
FB9001	1-414-554-21	FERRITE	OUH	IC8604	8-759-278-58	IC NJM4558V-TE2	
FB9003	1-414-554-21	FERRITE	OUH	IC8605	8-759-278-58	IC NJM4558V-TE2	
FB9007	1-414-554-21	FERRITE	OUH	IC8606	8-759-278-58	IC NJM4558V-TE2	
FB9011	1-414-554-21	FERRITE	OUH	IC8608	8-759-530-27	IC TC4052BFT (EL,N)	
FB9012	1-414-234-22	FERRITE	OUH	IC8803	8-759-278-58	IC NJM4558V-TE2	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.



REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC8804	8-759-700-07	IC NJM2903M		L9554	1-416-344-11	INDUCTOR	10UH
IC8805	8-759-183-53	IC TL431CPK-E2		L9555	1-416-344-11	INDUCTOR	10UH
IC8806	6-709-285-01	IC M61571AFP-DF0T		L9556	1-416-344-11	INDUCTOR	10UH
IC9001	6-704-600-01	IC M24C02-WMN6T(B)		L9558	1-414-755-11	INDUCTOR	22UH
IC9201	6-706-815-01	IC TMP75AIDR		L9559	1-400-815-21	INDUCTOR	1.2MH
IC9351	8-753-247-58	IC CXA2239R-TL		L9560	1-414-755-11	INDUCTOR	22UH
IC9352	8-759-683-07	IC BA7622F-E2		L9561	1-416-344-11	INDUCTOR	10UH
IC9353	6-709-777-01	IC ADA4861-3YRZ-RL7		L9562	1-416-344-11	INDUCTOR	10UH
IC9553	6-706-884-01	IC BD9851EFV-E2		L9701	1-412-058-11	INDUCTOR	10UH
IC9554	8-749-925-00	IC TK11819MTL		L9703	1-469-555-21	INDUCTOR	10UH
IC9555	6-708-762-01	IC PQ200WNA1ZPH		L9705	1-412-058-11	INDUCTOR	10UH
IC9701	6-705-373-01	IC MM3123DPLE		< PROTECTOR MODULE >			
IC9702	6-709-512-01	IC S-1132B18-M5T1G		PS9001 Δ	1-576-122-21	IC LINK	0.4A 72V
IC9703	6-709-517-01	IC S-35390A-J8T1G		< TRANSISTOR >			
IC9704	6-708-219-01	IC MB91305PMC-G-BNDE1		Q8401	8-729-421-22	TRANSISTOR UN2211	
IC9705	6-703-175-01	IC PST3629UL		Q8402	6-550-585-01	TRANSISTOR 2PC4081R-115	
IC9706	6-704-067-01	IC M24128-BWMN6T(A)		Q8403	6-550-586-01	TRANSISTOR 2PA1576R-115	
IC9707	6-806-646-01	IC S29AL008D70TFI010-1000		Q8404	8-729-421-19	TRANSISTOR UN2213	
< SOCKET >				Q8405	8-729-905-35	TRANSISTOR 2SC4081-R	
J9001	1-819-354-11	PHONO JACK 5P		Q8410	8-729-424-08	TRANSISTOR UN2111	
J9002	1-507-792-00	JACK		Q8411	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
J9003	*1-819-358-11	PHONO JACK		Q8412	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
< COIL >				Q8413	8-729-421-19	TRANSISTOR UN2213	
L8401	1-412-058-11	INDUCTOR	10UH	Q8601	8-729-905-35	TRANSISTOR 2SC4081-R	
L8402	1-412-990-41	INDUCTOR	8.2UH	Q8604	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8403	1-412-058-11	INDUCTOR	10UH	Q8605	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8404	1-412-058-11	INDUCTOR	10UH	Q8606	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8601	1-469-555-21	INDUCTOR	10UH	Q8607	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8603	1-412-058-11	INDUCTOR	10UH	Q8608	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8604	1-469-555-21	INDUCTOR	10UH	Q8609	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8606	1-469-555-21	INDUCTOR	10UH	Q8611	8-729-424-08	TRANSISTOR UN2111	
L8801	1-412-058-11	INDUCTOR	10UH	Q8613	8-729-424-08	TRANSISTOR UN2111	
L8802	1-412-058-11	INDUCTOR	10UH	Q8615	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L8803	1-412-058-11	INDUCTOR	10UH	Q8616	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8804	1-412-058-11	INDUCTOR	10UH	Q8617	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8805	1-456-065-21	INDUCTOR	22UH	Q8618	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8806	1-457-318-11	INDUCTOR	22UH	Q8619	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8807	1-457-318-11	INDUCTOR	22UH	Q8620	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L8808	1-416-344-11	INDUCTOR	10UH	Q8621	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L9351	1-412-058-11	INDUCTOR	10UH	Q8622	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L9352	1-412-058-11	INDUCTOR	10UH	Q8623	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L9353	1-412-058-11	INDUCTOR	10UH	Q8626	8-729-424-08	TRANSISTOR UN2111	
L9354	1-412-058-11	INDUCTOR	10UH	Q8628	8-729-421-22	TRANSISTOR UN2211	
L9355	1-412-058-11	INDUCTOR	10UH	Q8630	8-729-421-22	TRANSISTOR UN2211	
L9356	1-412-058-11	INDUCTOR	10UH	Q8631	8-729-905-35	TRANSISTOR 2SC4081-R	
L9357	1-412-955-11	INDUCTOR	22UH	Q8632	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR	
L9552	1-424-918-21	INDUCTOR	10UH	Q8633	8-729-905-35	TRANSISTOR 2SC4081-R	
L9553	1-416-344-11	INDUCTOR	10UH				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q8634	8-729-421-22	TRANSISTOR UN2211		Q9712	8-729-600-22	TRANSISTOR 2SA1235-F	
Q8635	8-729-421-22	TRANSISTOR UN2211		Q9713	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q8636	8-729-421-22	TRANSISTOR UN2211		Q9714	8-729-600-22	TRANSISTOR 2SA1235-F	
Q8637	8-729-421-22	TRANSISTOR UN2211		Q9715	8-729-600-22	TRANSISTOR 2SA1235-F	
Q8638	8-729-421-22	TRANSISTOR UN2211		Q9716	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q8639	8-729-424-08	TRANSISTOR UN2111		Q9717	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q8641	8-729-421-22	TRANSISTOR UN2211		Q9718	8-729-013-28	TRANSISTOR HN1B01FU-TE85R	
Q8642	8-729-421-22	TRANSISTOR UN2211		Q9719	8-729-028-74	TRANSISTOR DTA114TUA-T106	
Q8643	8-729-421-22	TRANSISTOR UN2211		Q9720	8-729-029-04	TRANSISTOR DTC123JUA-T106	
Q8801	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Q9721	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q8804	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		Q9725	8-729-602-36	TRANSISTOR 2SA1602-F	
Q8807	8-729-424-08	TRANSISTOR UN2111		Q9727	8-729-602-21	TRANSISTOR 2SC4154-F	
Q8809	8-729-921-80	TRANSISTOR 2SD1781K-T146-QR		Q9730	8-729-602-21	TRANSISTOR 2SC4154-F	
Q8810	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		Q9731	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q8811	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		Q9732	6-551-387-01	TRANSISTOR SSM6N16FU	
Q8812	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		Q9734	8-729-028-74	TRANSISTOR DTA114TUA-T106	
Q8813	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		< RESISTOR >			
Q8814	8-729-905-35	TRANSISTOR 2SC4081-R		R8402	1-218-990-81	SHORT CHIP	0
Q8815	8-729-424-08	TRANSISTOR UN2111		R8403	1-218-990-81	SHORT CHIP	0
Q8816	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16		R8404	1-218-990-81	SHORT CHIP	0
Q8817	8-729-600-22	TRANSISTOR 2SA1235-F		R8407	1-218-937-11	RES-CHIP	47 5% 1/16W
Q8818	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R8412	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9005	6-550-549-01	TRANSISTOR DTC114EUAF-T106		R8413	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9014	8-729-927-99	TRANSISTOR 2SC4617R		R8414	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9015	8-729-927-99	TRANSISTOR 2SC4617R		R8415	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9351	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8416	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9352	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8417	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9353	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8427	1-218-965-11	RES-CHIP	10K 5% 1/16W
Q9354	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8430	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9358	6-550-832-01	TRANSISTOR SI2301BDS-T1		R8431	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9359	8-729-029-14	TRANSISTOR DTC144EUA-T106		R8432	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9361	8-729-602-21	TRANSISTOR 2SC4154-F		R8433	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9362	8-729-602-21	TRANSISTOR 2SC4154-F		R8434	1-218-951-11	RES-CHIP	680 5% 1/16W
Q9363	8-729-117-73	TRANSISTOR 2SC4178-F14		R8435	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9364	8-729-026-53	TRANSISTOR 2SA1576A-T106-QR		R8446	1-218-941-81	RES-CHIP	100 5% 1/16W
Q9551	8-729-602-36	TRANSISTOR 2SA1602-F		R8447	1-218-990-81	SHORT CHIP	0
Q9552	8-729-602-21	TRANSISTOR 2SC4154-F		R8449	1-218-953-11	RES-CHIP	1K 5% 1/16W
Q9553	6-550-828-01	TRANSISTOR RSQ035P03TR		R8452	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9554	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R8453	1-216-295-91	SHORT CHIP	0
Q9558	8-729-029-14	TRANSISTOR DTC144EUA-T106		R8458	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
Q9560	8-729-602-21	TRANSISTOR 2SC4154-F		R8459	1-216-864-11	SHORT CHIP	0
Q9701	8-729-602-36	TRANSISTOR 2SA1602-F		R8460	1-216-864-11	SHORT CHIP	0
Q9702	8-729-602-36	TRANSISTOR 2SA1602-F		R8461	1-216-864-11	SHORT CHIP	0
Q9703	8-729-602-36	TRANSISTOR 2SA1602-F		R8462	1-216-864-11	SHORT CHIP	0
Q9704	8-729-602-21	TRANSISTOR 2SC4154-F		R8464	1-218-990-81	SHORT CHIP	0
Q9705	8-729-028-96	TRANSISTOR DTC114EUA-T106		R8466	1-218-937-11	RES-CHIP	47 5% 1/16W
Q9707	8-729-028-96	TRANSISTOR DTC114EUA-T106		R8467	1-218-990-81	SHORT CHIP	0
Q9708	8-729-602-21	TRANSISTOR 2SC4154-F		R8468	1-218-990-81	SHORT CHIP	0
Q9709	8-729-600-22	TRANSISTOR 2SA1235-F					
Q9711	8-729-028-74	TRANSISTOR DTA114TUA-T106					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R8469	1-218-990-81	SHORT CHIP	0			R8530	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8471	1-218-941-81	RES-CHIP	100	5%	1/16W	R8531	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8472	1-218-937-11	RES-CHIP	47	5%	1/16W	R8532	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8473	1-218-941-81	RES-CHIP	100	5%	1/16W	R8533	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8474	1-218-937-11	RES-CHIP	47	5%	1/16W	R8534	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8475	1-218-937-11	RES-CHIP	47	5%	1/16W	R8535	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R8476	1-218-941-81	RES-CHIP	100	5%	1/16W	R8536	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8477	1-218-937-11	RES-CHIP	47	5%	1/16W	R8537	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8478	1-218-937-11	RES-CHIP	47	5%	1/16W	R8538	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R8479	1-218-941-81	RES-CHIP	100	5%	1/16W	R8539	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8480	1-218-937-11	RES-CHIP	47	5%	1/16W	R8540	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8481	1-218-937-11	RES-CHIP	47	5%	1/16W	R8541	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R8483	1-218-937-11	RES-CHIP	47	5%	1/16W	R8542	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8485	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R8543	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8486	1-218-937-11	RES-CHIP	47	5%	1/16W	R8544	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R8487	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	R8545	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8488	1-218-941-81	RES-CHIP	100	5%	1/16W	R8546	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R8489	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8547	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8490	1-218-941-81	RES-CHIP	100	5%	1/16W	R8548	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8491	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8554	1-218-937-11	RES-CHIP	47	5%	1/16W
R8492	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8560	1-218-990-81	SHORT CHIP	0		
R8494	1-218-937-11	RES-CHIP	47	5%	1/16W	R8561	1-218-941-81	RES-CHIP	100	5%	1/16W
R8495	1-218-937-11	RES-CHIP	47	5%	1/16W	R8562	1-218-990-81	SHORT CHIP	0		
R8496	1-218-937-11	RES-CHIP	47	5%	1/16W	R8563	1-218-990-81	SHORT CHIP	0		
R8497	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8568	1-218-990-81	SHORT CHIP	0		
R8498	1-218-990-81	SHORT CHIP	0			R8569	1-218-990-81	SHORT CHIP	0		
R8499	1-218-937-11	RES-CHIP	47	5%	1/16W	R8570	1-218-831-11	METAL CHIP	220	0.5%	1/10W
R8501	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8571	1-218-833-11	METAL CHIP	270	0.5%	1/10W
R8502	1-218-990-81	SHORT CHIP	0			R8572	1-216-295-91	SHORT CHIP	0		
R8504	1-218-831-11	METAL CHIP	220	0.5%	1/10W	R8573	1-216-295-91	SHORT CHIP	0		
R8505	1-218-990-81	SHORT CHIP	0			R8601	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R8506	1-218-990-81	SHORT CHIP	0			R8602	1-218-966-11	RES-CHIP	12K	5%	1/16W
R8507	1-218-990-81	SHORT CHIP	0			R8603	1-218-966-11	RES-CHIP	12K	5%	1/16W
R8508	1-218-990-81	SHORT CHIP	0			R8604	1-218-966-11	RES-CHIP	12K	5%	1/16W
R8509	1-218-990-81	SHORT CHIP	0			R8605	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8510	1-218-990-81	SHORT CHIP	0			R8606	1-218-990-81	SHORT CHIP	0		
R8511	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R8607	1-218-990-81	SHORT CHIP	0		
R8512	1-218-990-81	SHORT CHIP	0			R8608	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8513	1-218-990-81	SHORT CHIP	0			R8609	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8514	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W	R8610	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8515	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8611	1-218-967-11	RES-CHIP	15K	5%	1/16W
R8520	1-218-990-81	SHORT CHIP	0			R8612	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8521	1-218-990-81	SHORT CHIP	0			R8613	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8523	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8614	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8524	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8615	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8525	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8616	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R8526	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8617	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8527	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8618	1-218-967-11	RES-CHIP	15K	5%	1/16W
R8528	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8619	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8529	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8621	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R8622	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8681	1-218-966-11	RES-CHIP	12K	5%	1/16W
R8623	1-218-937-11	RES-CHIP	47	5%	1/16W	R8682	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8624	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8683	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8625	1-218-937-11	RES-CHIP	47	5%	1/16W	R8684	1-218-937-11	RES-CHIP	47	5%	1/16W
R8626	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8685	1-218-937-11	RES-CHIP	47	5%	1/16W
R8627	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8686	1-218-937-11	RES-CHIP	47	5%	1/16W
R8628	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8687	1-218-937-11	RES-CHIP	47	5%	1/16W
R8629	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8688	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8630	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8689	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8631	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8690	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8632	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8691	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8633	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8692	1-218-950-11	RES-CHIP	560	5%	1/16W
R8634	1-218-950-11	RES-CHIP	560	5%	1/16W	R8693	1-218-950-11	RES-CHIP	560	5%	1/16W
R8635	1-218-950-11	RES-CHIP	560	5%	1/16W	R8694	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8636	1-218-950-11	RES-CHIP	560	5%	1/16W	R8695	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8637	1-218-950-11	RES-CHIP	560	5%	1/16W	R8696	1-218-950-11	RES-CHIP	560	5%	1/16W
R8638	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8697	1-218-950-11	RES-CHIP	560	5%	1/16W
R8641	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8698	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8642	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8699	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8643	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8700	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8644	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8701	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8645	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8702	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8646	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8703	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8647	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8712	1-218-990-81	SHORT CHIP	0		
R8648	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8713	1-218-990-81	SHORT CHIP	0		
R8649	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8717	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8650	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8719	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8651	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8720	1-216-864-11	SHORT CHIP	0		
R8652	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8721	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8653	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8722	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8655	1-218-990-81	SHORT CHIP	0			R8723	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8656	1-218-990-81	SHORT CHIP	0			R8724	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8658	1-218-990-81	SHORT CHIP	0			R8725	1-218-949-11	RES-CHIP	470	5%	1/16W
R8659	1-218-990-81	SHORT CHIP	0			R8726	1-218-941-81	RES-CHIP	100	5%	1/16W
R8664	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8727	1-218-989-11	RES-CHIP	1M	5%	1/16W
R8665	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8728	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8666	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8729	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8668	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8730	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8669	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8731	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8670	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8734	1-218-941-81	RES-CHIP	100	5%	1/16W
R8671	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R8735	1-218-941-81	RES-CHIP	100	5%	1/16W
R8672	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8736	1-218-941-81	RES-CHIP	100	5%	1/16W
R8673	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8737	1-218-941-81	RES-CHIP	100	5%	1/16W
R8674	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8738	1-218-941-81	RES-CHIP	100	5%	1/16W
R8675	1-218-941-81	RES-CHIP	100	5%	1/16W	R8739	1-218-941-81	RES-CHIP	100	5%	1/16W
R8676	1-218-941-81	RES-CHIP	100	5%	1/16W	R8740	1-218-941-81	RES-CHIP	100	5%	1/16W
R8677	1-218-941-81	RES-CHIP	100	5%	1/16W	R8741	1-218-941-81	RES-CHIP	100	5%	1/16W
R8678	1-218-941-81	RES-CHIP	100	5%	1/16W	R8742	1-218-941-81	RES-CHIP	100	5%	1/16W
R8679	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8743	1-218-941-81	RES-CHIP	100	5%	1/16W
R8680	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R8744	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R8745	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8851	1-218-877-11	METAL CHIP	18K	0.5%	1/10W
R8746	1-218-990-81	SHORT CHIP	0			R8852	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8748	1-218-990-81	SHORT CHIP	0			R8853	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R8749	1-218-990-81	SHORT CHIP	0			R8854	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8750	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8855	1-218-891-11	METAL CHIP	68K	0.5%	1/10W
R8751	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8856	1-218-891-11	METAL CHIP	68K	0.5%	1/10W
R8752	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8861	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8801	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8862	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8802	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8863	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8803	1-218-969-11	RES-CHIP	22K	5%	1/16W	R8864	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8804	1-218-973-11	RES-CHIP	47K	5%	1/16W	R8865	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8805	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8866	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8806	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8867	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8807	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8868	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8808	1-218-975-11	RES-CHIP	68K	5%	1/16W	R8873	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8809	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8874	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8810	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8875	1-216-833-11	METAL CHIP	10K	5%	1/10W
R8811	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8876	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8812	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R8877	1-216-845-11	METAL CHIP	100K	5%	1/10W
R8813	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8878	1-216-864-11	SHORT CHIP	0		
R8814	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R8879	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8815	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R8880	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8816	1-218-965-11	RES-CHIP	10K	5%	1/16W	R8881	1-218-973-11	RES-CHIP	47K	5%	1/16W
R8817	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R8882	1-218-990-81	SHORT CHIP	0		
R8818	1-218-990-81	SHORT CHIP	0			R8883	1-218-990-81	SHORT CHIP	0		
R8819	1-218-990-81	SHORT CHIP	0			R8884	1-218-990-81	SHORT CHIP	0		
R8820	1-218-953-11	RES-CHIP	1K	5%	1/16W	R8887	1-218-990-81	SHORT CHIP	0		
R8821	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R8892	1-218-990-81	SHORT CHIP	0		
R8822	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R8893	1-218-990-81	SHORT CHIP	0		
R8823	1-218-966-11	RES-CHIP	12K	5%	1/16W	R8895	1-218-990-81	SHORT CHIP	0		
R8824	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R8896	1-218-990-81	SHORT CHIP	0		
R8825	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R8902	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R8826	1-218-990-81	SHORT CHIP	0			R8903	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R8827	1-218-990-81	SHORT CHIP	0			R8904	1-218-990-81	SHORT CHIP	0		
R8830	1-218-990-81	SHORT CHIP	0			R8905	1-218-990-81	SHORT CHIP	0		
R8831	1-218-990-81	SHORT CHIP	0			R8906	1-216-864-11	SHORT CHIP	0		
R8834	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R8907	1-216-864-11	SHORT CHIP	0		
R8836	1-218-990-81	SHORT CHIP	0			R8908	1-216-864-11	SHORT CHIP	0		
R8837	1-218-990-81	SHORT CHIP	0			R8909	1-216-864-11	SHORT CHIP	0		
R8840	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R8912	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8841	1-218-831-11	METAL CHIP	220	0.5%	1/10W	R8913	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8842	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R8914	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8843	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8915	1-216-311-00	RES-CHIP	6.8	5%	1/10W
R8844	1-216-841-11	METAL CHIP	47K	5%	1/10W	R8916	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8845	1-216-864-11	SHORT CHIP	0			R8917	1-218-945-11	RES-CHIP	220	5%	1/16W
R8846	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8918	1-218-971-11	RES-CHIP	33K	5%	1/16W
R8847	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R8919	1-218-990-81	SHORT CHIP	0		
R8848	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R8920	1-218-831-11	METAL CHIP	220	0.5%	1/10W
R8849	1-218-879-11	METAL CHIP	22K	0.5%	1/10W	R8925	1-216-795-11	METAL CHIP	6.8	5%	1/10W
R8850	1-218-901-11	METAL CHIP	180K	0.5%	1/10W	R8926	1-216-864-11	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R8927	1-216-795-11	METAL CHIP	6.8	5%	1/10W	R9054	1-216-864-11	SHORT CHIP	0		
R8928	1-216-795-11	METAL CHIP	6.8	5%	1/10W	R9055	1-216-864-11	SHORT CHIP	0		
R9002	1-216-813-11	METAL CHIP	220	5%	1/10W	R9056	1-216-864-11	SHORT CHIP	0		
R9003	1-216-813-11	METAL CHIP	220	5%	1/10W	R9059	1-216-815-11	METAL CHIP	330	5%	1/10W
R9004	1-216-815-11	METAL CHIP	330	5%	1/10W	R9060	1-216-815-11	METAL CHIP	330	5%	1/10W
R9005	1-216-815-11	METAL CHIP	330	5%	1/10W	R9061	1-216-815-11	METAL CHIP	330	5%	1/10W
R9006	1-216-815-11	METAL CHIP	330	5%	1/10W	R9062	1-216-815-11	METAL CHIP	330	5%	1/10W
R9007	1-216-815-11	METAL CHIP	330	5%	1/10W	R9063	1-216-813-11	METAL CHIP	220	5%	1/10W
R9008	1-216-813-11	METAL CHIP	220	5%	1/10W	R9064	1-216-813-11	METAL CHIP	220	5%	1/10W
R9009	1-218-285-11	METAL CHIP	75	5%	1/10W	R9065	1-216-841-11	METAL CHIP	47K	5%	1/10W
R9010	1-216-801-11	METAL CHIP	22	5%	1/10W	R9066	1-216-853-11	METAL CHIP	470K	5%	1/10W
R9011	1-216-841-11	METAL CHIP	47K	5%	1/10W	R9067	1-216-841-11	METAL CHIP	47K	5%	1/10W
R9012	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9068	1-216-853-11	METAL CHIP	470K	5%	1/10W
R9013	1-216-841-11	METAL CHIP	47K	5%	1/10W	R9069	1-216-813-11	METAL CHIP	220	5%	1/10W
R9014	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9070	1-216-864-11	SHORT CHIP	0		
R9015	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9071	1-216-864-11	SHORT CHIP	0		
R9016	1-216-864-11	SHORT CHIP	0			R9072	1-216-837-11	METAL CHIP	22K	5%	1/10W
R9017	1-216-864-11	SHORT CHIP	0			R9073	1-218-285-11	METAL CHIP	75	5%	1/10W
R9018	1-216-813-11	METAL CHIP	220	5%	1/10W	R9074	1-216-809-11	METAL CHIP	100	5%	1/10W
R9019	1-216-813-11	METAL CHIP	220	5%	1/10W	R9075	1-216-809-11	METAL CHIP	100	5%	1/10W
R9020	1-216-813-11	METAL CHIP	220	5%	1/10W	R9076	1-216-813-11	METAL CHIP	220	5%	1/10W
R9021	1-216-813-11	METAL CHIP	220	5%	1/10W	R9077	1-216-813-11	METAL CHIP	220	5%	1/10W
R9022	1-216-815-11	METAL CHIP	330	5%	1/10W	R9078	1-216-834-11	METAL CHIP	12K	5%	1/10W
R9023	1-216-815-11	METAL CHIP	330	5%	1/10W	R9079	1-216-813-11	METAL CHIP	220	5%	1/10W
R9024	1-216-834-11	METAL CHIP	12K	5%	1/10W	R9080	1-216-813-11	METAL CHIP	220	5%	1/10W
R9025	1-216-813-11	METAL CHIP	220	5%	1/10W	R9081	1-216-813-11	METAL CHIP	220	5%	1/10W
R9026	1-216-813-11	METAL CHIP	220	5%	1/10W	R9082	1-216-801-11	METAL CHIP	22	5%	1/10W
R9027	1-216-813-11	METAL CHIP	220	5%	1/10W	R9083	1-216-851-11	METAL CHIP	330K	5%	1/10W
R9028	1-216-813-11	METAL CHIP	220	5%	1/10W	R9084	1-216-851-11	METAL CHIP	330K	5%	1/10W
R9029	1-216-813-11	METAL CHIP	220	5%	1/10W	R9085	1-216-813-11	METAL CHIP	220	5%	1/10W
R9030	1-216-813-11	METAL CHIP	220	5%	1/10W	R9086	1-216-813-11	METAL CHIP	220	5%	1/10W
R9031	1-216-813-11	METAL CHIP	220	5%	1/10W	R9087	1-216-801-11	METAL CHIP	22	5%	1/10W
R9033	1-216-809-11	METAL CHIP	100	5%	1/10W	R9088	1-216-805-11	METAL CHIP	47	5%	1/10W
R9034	1-216-809-11	METAL CHIP	100	5%	1/10W	R9089	1-216-805-11	METAL CHIP	47	5%	1/10W
R9035	1-216-813-11	METAL CHIP	220	5%	1/10W	R9090	1-216-813-11	METAL CHIP	220	5%	1/10W
R9036	1-216-813-11	METAL CHIP	220	5%	1/10W	R9091	1-216-809-11	METAL CHIP	100	5%	1/10W
R9037	1-216-813-11	METAL CHIP	220	5%	1/10W	R9092	1-216-813-11	METAL CHIP	220	5%	1/10W
R9038	1-216-813-11	METAL CHIP	220	5%	1/10W	R9093	1-216-813-11	METAL CHIP	220	5%	1/10W
R9039	1-216-813-11	METAL CHIP	220	5%	1/10W	R9094	1-216-813-11	METAL CHIP	220	5%	1/10W
R9040	1-216-813-11	METAL CHIP	220	5%	1/10W	R9095	1-216-809-11	METAL CHIP	100	5%	1/10W
R9041	1-216-813-11	METAL CHIP	220	5%	1/10W	R9096	1-216-809-11	METAL CHIP	100	5%	1/10W
R9043	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9097	1-216-801-11	METAL CHIP	22	5%	1/10W
R9044	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9098	1-216-833-11	METAL CHIP	10K	5%	1/10W
R9045	1-216-813-11	METAL CHIP	220	5%	1/10W	R9099	1-216-801-11	METAL CHIP	22	5%	1/10W
R9046	1-216-813-11	METAL CHIP	220	5%	1/10W	R9100	1-216-813-11	METAL CHIP	220	5%	1/10W
R9047	1-216-813-11	METAL CHIP	220	5%	1/10W	R9101	1-216-833-11	METAL CHIP	10K	5%	1/10W
R9048	1-216-801-11	METAL CHIP	22	5%	1/10W	R9104	1-218-827-11	METAL CHIP	150	0.5%	1/10W
R9049	1-216-801-11	METAL CHIP	22	5%	1/10W	R9105	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R9050	1-216-801-11	METAL CHIP	22	5%	1/10W	R9106	1-216-864-11	SHORT CHIP	0		
R9051	1-216-864-11	SHORT CHIP	0			R9107	1-218-827-11	METAL CHIP	150	0.5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R9111	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9175	1-218-990-81	SHORT CHIP	0		
R9112	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R9176	1-218-990-81	SHORT CHIP	0		
R9113	1-216-809-11	METAL CHIP	100	5%	1/10W	R9177	1-218-990-81	SHORT CHIP	0		
R9114	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R9178	1-218-990-81	SHORT CHIP	0		
R9115	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9179	1-218-990-81	SHORT CHIP	0		
R9116	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9180	1-218-990-81	SHORT CHIP	0		
R9119	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R9181	1-218-990-81	SHORT CHIP	0		
R9120	1-216-813-11	METAL CHIP	220	5%	1/10W	R9182	1-218-990-81	SHORT CHIP	0		
R9121	1-216-813-11	METAL CHIP	220	5%	1/10W	R9183	1-218-990-81	SHORT CHIP	0		
R9122	1-216-813-11	METAL CHIP	220	5%	1/10W	R9184	1-218-990-81	SHORT CHIP	0		
R9123	1-216-815-11	METAL CHIP	330	5%	1/10W	R9185	1-218-990-81	SHORT CHIP	0		
R9124	1-216-815-11	METAL CHIP	330	5%	1/10W	R9186	1-218-990-81	SHORT CHIP	0		
R9125	1-216-815-11	METAL CHIP	330	5%	1/10W	R9187	1-218-933-11	RES-CHIP	22	5%	1/16W
R9126	1-216-815-11	METAL CHIP	330	5%	1/10W	R9188	1-218-933-11	RES-CHIP	22	5%	1/16W
R9127	1-216-813-11	METAL CHIP	220	5%	1/10W	R9189	1-218-933-11	RES-CHIP	22	5%	1/16W
R9128	1-216-813-11	METAL CHIP	220	5%	1/10W	R9190	1-216-801-11	METAL CHIP	22	5%	1/10W
R9129	1-216-813-11	METAL CHIP	220	5%	1/10W	R9191	1-216-801-11	METAL CHIP	22	5%	1/10W
R9132	1-218-285-11	METAL CHIP	75	5%	1/10W	R9192	1-216-864-11	SHORT CHIP	0		
R9135	1-216-813-11	METAL CHIP	220	5%	1/10W	R9195	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R9136	1-216-813-11	METAL CHIP	220	5%	1/10W	R9196	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R9137	1-216-813-11	METAL CHIP	220	5%	1/10W	R9197	1-216-836-11	METAL CHIP	18K	5%	1/10W
R9138	1-216-801-11	METAL CHIP	22	5%	1/10W	R9198	1-216-836-11	METAL CHIP	18K	5%	1/10W
R9140	1-216-813-11	METAL CHIP	220	5%	1/10W	R9201	1-218-990-81	SHORT CHIP	0		
R9142	1-216-841-11	METAL CHIP	47K	5%	1/10W	R9203	1-218-990-81	SHORT CHIP	0		
R9143	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9205	1-218-990-81	SHORT CHIP	0		
R9144	1-216-841-11	METAL CHIP	47K	5%	1/10W	R9207	1-218-990-81	SHORT CHIP	0		
R9145	1-216-853-11	METAL CHIP	470K	5%	1/10W	R9208	1-218-990-81	SHORT CHIP	0		
R9146	1-216-864-11	SHORT CHIP	0			R9210	1-218-990-81	SHORT CHIP	0		
R9147	1-216-864-11	SHORT CHIP	0			R9211	1-218-990-81	SHORT CHIP	0		
R9148	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9212	1-218-990-81	SHORT CHIP	0		
R9150	1-216-813-11	METAL CHIP	220	5%	1/10W	R9213	1-218-990-81	SHORT CHIP	0		
R9151	1-216-813-11	METAL CHIP	220	5%	1/10W	R9214	1-218-990-81	SHORT CHIP	0		
R9152	1-216-813-11	METAL CHIP	220	5%	1/10W	R9215	1-218-990-81	SHORT CHIP	0		
R9154	1-216-813-11	METAL CHIP	220	5%	1/10W	R9216	1-218-990-81	SHORT CHIP	0		
R9156	1-216-801-11	METAL CHIP	22	5%	1/10W	R9217	1-218-990-81	SHORT CHIP	0		
R9157	1-216-801-11	METAL CHIP	22	5%	1/10W	R9218	1-218-933-11	RES-CHIP	22	5%	1/16W
R9158	1-216-801-11	METAL CHIP	22	5%	1/10W	R9219	1-218-933-11	RES-CHIP	22	5%	1/16W
R9159	1-216-834-11	METAL CHIP	12K	5%	1/10W	R9222	1-218-990-81	SHORT CHIP	0		
R9160	1-216-813-11	METAL CHIP	220	5%	1/10W	R9223	1-218-941-81	RES-CHIP	100	5%	1/16W
R9161	1-216-809-11	METAL CHIP	100	5%	1/10W	R9227	1-218-980-11	RES-CHIP	180K	5%	1/16W
R9162	1-216-809-11	METAL CHIP	100	5%	1/10W	R9234	1-218-933-11	RES-CHIP	22	5%	1/16W
R9163	1-216-864-11	SHORT CHIP	0			R9240	1-218-990-81	SHORT CHIP	0		
R9167	1-218-990-81	SHORT CHIP	0			R9241	1-218-990-81	SHORT CHIP	0		
R9168	1-218-990-81	SHORT CHIP	0			R9242	1-218-990-81	SHORT CHIP	0		
R9169	1-218-990-81	SHORT CHIP	0			R9243	1-218-990-81	SHORT CHIP	0		
R9170	1-218-990-81	SHORT CHIP	0			R9244	1-218-990-81	SHORT CHIP	0		
R9171	1-218-990-81	SHORT CHIP	0			R9246	1-218-990-81	SHORT CHIP	0		
R9172	1-218-990-81	SHORT CHIP	0			R9247	1-218-990-81	SHORT CHIP	0		
R9173	1-218-990-81	SHORT CHIP	0			R9249	1-218-990-81	SHORT CHIP	0		
R9174	1-218-990-81	SHORT CHIP	0			R9250	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R9251	1-218-990-81	SHORT CHIP	0	R9308	1-218-990-81	SHORT CHIP	0
R9252	1-218-990-81	SHORT CHIP	0	R9309	1-216-864-11	SHORT CHIP	0
R9255	1-218-990-81	SHORT CHIP	0	R9310	1-216-864-11	SHORT CHIP	0
R9256	1-218-990-81	SHORT CHIP	0	R9311	1-218-990-81	SHORT CHIP	0
R9257	1-218-990-81	SHORT CHIP	0	R9312	1-218-990-81	SHORT CHIP	0
R9258	1-218-990-81	SHORT CHIP	0	R9313	1-218-990-81	SHORT CHIP	0
R9259	1-218-990-81	SHORT CHIP	0	R9314	1-218-990-81	SHORT CHIP	0
R9260	1-218-990-81	SHORT CHIP	0	R9315	1-218-990-81	SHORT CHIP	0
R9261	1-218-990-81	SHORT CHIP	0	R9316	1-218-990-81	SHORT CHIP	0
R9262	1-218-990-81	SHORT CHIP	0	R9317	1-218-990-81	SHORT CHIP	0
R9263	1-218-990-81	SHORT CHIP	0	R9318	1-218-990-81	SHORT CHIP	0
R9264	1-218-990-81	SHORT CHIP	0	R9320	1-218-990-81	SHORT CHIP	0
R9265	1-218-990-81	SHORT CHIP	0	R9321	1-218-990-81	SHORT CHIP	0
R9266	1-218-990-81	SHORT CHIP	0	R9322	1-218-990-81	SHORT CHIP	0
R9267	1-218-990-81	SHORT CHIP	0	R9323	1-218-990-81	SHORT CHIP	0
R9268	1-218-990-81	SHORT CHIP	0	R9324	1-218-990-81	SHORT CHIP	0
R9270	1-218-990-81	SHORT CHIP	0	R9325	1-218-990-81	SHORT CHIP	0
R9271	1-218-990-81	SHORT CHIP	0	R9326	1-218-990-81	SHORT CHIP	0
R9272	1-218-990-81	SHORT CHIP	0	R9327	1-218-990-81	SHORT CHIP	0
R9273	1-218-990-81	SHORT CHIP	0	R9328	1-218-990-81	SHORT CHIP	0
R9274	1-218-990-81	SHORT CHIP	0	R9331	1-216-864-11	SHORT CHIP	0
R9275	1-218-990-81	SHORT CHIP	0	R9336	1-218-965-11	RES-CHIP	10K 5% 1/16W
R9277	1-218-990-81	SHORT CHIP	0	R9337	1-218-965-11	RES-CHIP	10K 5% 1/16W
R9278	1-218-990-81	SHORT CHIP	0	R9338	1-218-983-11	RES-CHIP	330K 5% 1/16W
R9279	1-218-990-81	SHORT CHIP	0	R9339	1-216-833-11	METAL CHIP	10K 5% 1/10W
R9280	1-216-864-11	SHORT CHIP	0	R9340	1-216-864-11	SHORT CHIP	0
R9281	1-216-864-11	SHORT CHIP	0	R9351	1-218-941-81	RES-CHIP	100 5% 1/16W
R9282	1-216-864-11	SHORT CHIP	0	R9352	1-218-941-81	RES-CHIP	100 5% 1/16W
R9283	1-218-990-81	SHORT CHIP	0	R9353	1-218-941-81	RES-CHIP	100 5% 1/16W
R9284	1-218-990-81	SHORT CHIP	0	R9354	1-218-941-81	RES-CHIP	100 5% 1/16W
R9285	1-218-990-81	SHORT CHIP	0	R9355	1-218-941-81	RES-CHIP	100 5% 1/16W
R9287	1-218-990-81	SHORT CHIP	0	R9356	1-218-941-81	RES-CHIP	100 5% 1/16W
R9288	1-218-990-81	SHORT CHIP	0	R9357	1-218-941-81	RES-CHIP	100 5% 1/16W
R9289	1-218-990-81	SHORT CHIP	0	R9358	1-218-941-81	RES-CHIP	100 5% 1/16W
R9290	1-218-990-81	SHORT CHIP	0	R9359	1-218-941-81	RES-CHIP	100 5% 1/16W
R9291	1-218-990-81	SHORT CHIP	0	R9360	1-218-941-81	RES-CHIP	100 5% 1/16W
R9294	1-218-990-81	SHORT CHIP	0	R9361	1-218-941-81	RES-CHIP	100 5% 1/16W
R9295	1-218-990-81	SHORT CHIP	0	R9362	1-218-941-81	RES-CHIP	100 5% 1/16W
R9296	1-218-990-81	SHORT CHIP	0	R9363	1-218-941-81	RES-CHIP	100 5% 1/16W
R9297	1-218-990-81	SHORT CHIP	0	R9364	1-218-941-81	RES-CHIP	100 5% 1/16W
R9298	1-218-990-81	SHORT CHIP	0	R9365	1-218-941-81	RES-CHIP	100 5% 1/16W
R9299	1-218-990-81	SHORT CHIP	0	R9366	1-218-941-81	RES-CHIP	100 5% 1/16W
R9300	1-218-990-81	SHORT CHIP	0	R9367	1-218-941-81	RES-CHIP	100 5% 1/16W
R9301	1-218-990-81	SHORT CHIP	0	R9368	1-218-941-81	RES-CHIP	100 5% 1/16W
R9302	1-218-990-81	SHORT CHIP	0	R9369	1-218-941-81	RES-CHIP	100 5% 1/16W
R9303	1-218-990-81	SHORT CHIP	0	R9370	1-218-941-81	RES-CHIP	100 5% 1/16W
R9304	1-218-990-81	SHORT CHIP	0	R9371	1-218-941-81	RES-CHIP	100 5% 1/16W
R9305	1-218-990-81	SHORT CHIP	0	R9372	1-218-941-81	RES-CHIP	100 5% 1/16W
R9306	1-218-990-81	SHORT CHIP	0	R9373	1-218-941-81	RES-CHIP	100 5% 1/16W
R9307	1-216-864-11	SHORT CHIP	0	R9374	1-218-941-81	RES-CHIP	100 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R9375	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9428	1-218-829-11	METAL CHIP	180	0.5%	1/10W
R9376	1-218-941-81	RES-CHIP	100	5%	1/16W	R9429	1-218-837-11	METAL CHIP	390	0.5%	1/10W
R9377	1-218-941-81	RES-CHIP	100	5%	1/16W	R9430	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R9378	1-218-941-81	RES-CHIP	100	5%	1/16W	R9431	1-218-829-11	METAL CHIP	180	0.5%	1/10W
R9379	1-218-941-81	RES-CHIP	100	5%	1/16W	R9432	1-218-837-11	METAL CHIP	390	0.5%	1/10W
R9380	1-218-941-81	RES-CHIP	100	5%	1/16W	R9433	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R9381	1-218-941-81	RES-CHIP	100	5%	1/16W	R9434	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R9382	1-218-941-81	RES-CHIP	100	5%	1/16W	R9435	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R9383	1-216-041-00	RES-CHIP	470	5%	1/10W	R9439	1-218-941-81	RES-CHIP	100	5%	1/16W
R9384	1-218-941-81	RES-CHIP	100	5%	1/16W	R9440	1-216-864-11	SHORT CHIP	0		
R9385	1-218-941-81	RES-CHIP	100	5%	1/16W	R9441	1-216-864-11	SHORT CHIP	0		
R9386	1-218-941-81	RES-CHIP	100	5%	1/16W	R9442	1-218-983-11	RES-CHIP	330K	5%	1/16W
R9387	1-218-941-81	RES-CHIP	100	5%	1/16W	R9443	1-218-983-11	RES-CHIP	330K	5%	1/16W
R9388	1-218-941-81	RES-CHIP	100	5%	1/16W	R9444	1-218-983-11	RES-CHIP	330K	5%	1/16W
R9389	1-218-941-81	RES-CHIP	100	5%	1/16W	R9445	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R9390	1-216-041-00	RES-CHIP	470	5%	1/10W	R9446	1-216-041-00	RES-CHIP	470	5%	1/10W
R9391	1-218-941-81	RES-CHIP	100	5%	1/16W	R9454	1-218-990-81	SHORT CHIP	0		
R9392	1-218-941-81	RES-CHIP	100	5%	1/16W	R9455	1-218-990-81	SHORT CHIP	0		
R9393	1-218-941-81	RES-CHIP	100	5%	1/16W	R9456	1-218-990-81	SHORT CHIP	0		
R9394	1-218-941-81	RES-CHIP	100	5%	1/16W	R9457	1-216-864-11	SHORT CHIP	0		
R9395	1-218-975-11	RES-CHIP	68K	5%	1/16W	R9458	1-216-817-11	METAL CHIP	470	5%	1/10W
R9396	1-218-975-11	RES-CHIP	68K	5%	1/16W	R9459	1-216-817-11	METAL CHIP	470	5%	1/10W
R9397	1-218-941-81	RES-CHIP	100	5%	1/16W	R9460	1-216-817-11	METAL CHIP	470	5%	1/10W
R9398	1-218-941-81	RES-CHIP	100	5%	1/16W	R9461	1-216-864-11	SHORT CHIP	0		
R9399	1-218-941-81	RES-CHIP	100	5%	1/16W	R9462	1-216-864-11	SHORT CHIP	0		
R9400	1-216-041-00	RES-CHIP	470	5%	1/10W	R9463	1-216-864-11	SHORT CHIP	0		
R9401	1-218-941-81	RES-CHIP	100	5%	1/16W	R9464	1-218-949-11	RES-CHIP	470	5%	1/16W
R9402	1-216-041-00	RES-CHIP	470	5%	1/10W	R9465	1-218-968-11	RES-CHIP	18K	5%	1/16W
R9403	1-218-941-81	RES-CHIP	100	5%	1/16W	R9466	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9404	1-216-864-11	SHORT CHIP	0			R9467	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
R9405	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R9468	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
R9406	1-216-041-00	RES-CHIP	470	5%	1/10W	R9469	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
R9407	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R9473	1-218-990-81	SHORT CHIP	0		
R9408	1-218-941-81	RES-CHIP	100	5%	1/16W	R9474	1-218-990-81	SHORT CHIP	0		
R9409	1-218-941-81	RES-CHIP	100	5%	1/16W	R9475	1-218-990-81	SHORT CHIP	0		
R9410	1-218-941-81	RES-CHIP	100	5%	1/16W	R9476	1-216-864-11	SHORT CHIP	0		
R9411	1-218-941-81	RES-CHIP	100	5%	1/16W	R9477	1-218-843-11	METAL CHIP	680	0.5%	1/10W
R9412	1-218-937-11	RES-CHIP	47	5%	1/16W	R9478	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9413	1-218-941-81	RES-CHIP	100	5%	1/16W	R9479	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9414	1-218-941-81	RES-CHIP	100	5%	1/16W	R9480	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9415	1-218-937-11	RES-CHIP	47	5%	1/16W	R9481	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9416	1-218-937-11	RES-CHIP	47	5%	1/16W	R9482	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9417	1-218-937-11	RES-CHIP	47	5%	1/16W	R9483	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9418	1-218-937-11	RES-CHIP	47	5%	1/16W	R9484	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9420	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R9485	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9422	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R9486	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9423	1-218-837-11	METAL CHIP	390	0.5%	1/10W	R9487	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9425	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9488	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9426	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9551	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9427	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R9552	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R9556	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9721	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R9557	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9722	1-218-941-81	RES-CHIP	100	5%	1/16W
R9561	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R9723	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9565	1-218-985-11	RES-CHIP	470K	5%	1/16W	R9726	1-216-809-11	METAL CHIP	100	5%	1/10W
R9569	1-218-967-11	RES-CHIP	15K	5%	1/16W	R9728	1-218-990-81	SHORT CHIP	0		
R9572	1-218-969-11	RES-CHIP	22K	5%	1/16W	R9731	1-218-941-81	RES-CHIP	100	5%	1/16W
R9574	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R9732	1-218-969-11	RES-CHIP	22K	5%	1/16W
R9575	1-208-941-11	METAL CHIP	180K	0.5%	1/16W	R9733	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9576	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R9734	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9577	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R9735	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R9578	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R9736	1-216-864-11	SHORT CHIP	0		
R9582	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R9740	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R9583	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R9741	1-216-813-11	METAL CHIP	220	5%	1/10W
R9593	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R9742	1-218-945-11	RES-CHIP	220	5%	1/16W
R9594	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R9746	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R9595	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R9747	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9596	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R9748	1-218-990-81	SHORT CHIP	0		
R9597	1-218-985-11	RES-CHIP	470K	5%	1/16W	R9751	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9599	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R9752	1-216-857-11	METAL CHIP	1M	5%	1/10W
R9601	1-216-809-11	METAL CHIP	100	5%	1/10W	R9753	1-218-941-81	RES-CHIP	100	5%	1/16W
R9602	1-216-845-11	METAL CHIP	100K	5%	1/10W	R9754	1-218-941-81	RES-CHIP	100	5%	1/16W
R9603	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9755	1-218-941-81	RES-CHIP	100	5%	1/16W
R9605	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9756	1-218-941-81	RES-CHIP	100	5%	1/16W
R9606	1-218-990-81	SHORT CHIP	0			R9757	1-218-941-81	RES-CHIP	100	5%	1/16W
R9610	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9758	1-218-941-81	RES-CHIP	100	5%	1/16W
R9612	1-218-990-81	SHORT CHIP	0			R9759	1-218-941-81	RES-CHIP	100	5%	1/16W
R9614	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R9760	1-218-941-81	RES-CHIP	100	5%	1/16W
R9615	1-208-661-11	METAL CHIP	120	0.5%	1/16W	R9761	1-218-941-81	RES-CHIP	100	5%	1/16W
R9616	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R9762	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R9617	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R9763	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9625	1-218-990-81	SHORT CHIP	0			R9764	1-216-857-11	METAL CHIP	1M	5%	1/10W
R9633	1-218-990-81	SHORT CHIP	0			R9765	1-216-815-11	METAL CHIP	330	5%	1/10W
R9701	1-218-977-11	RES-CHIP	100K	5%	1/16W	R9766	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9702	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9767	1-216-864-11	SHORT CHIP	0		
R9703	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9768	1-216-833-11	METAL CHIP	10K	5%	1/10W
R9704	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9769	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R9705	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9770	1-216-864-11	SHORT CHIP	0		
R9706	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9772	1-218-941-81	RES-CHIP	100	5%	1/16W
R9707	1-218-990-81	SHORT CHIP	0			R9773	1-218-941-81	RES-CHIP	100	5%	1/16W
R9708	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9774	1-218-941-81	RES-CHIP	100	5%	1/16W
R9709	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9775	1-218-941-81	RES-CHIP	100	5%	1/16W
R9710	1-218-990-81	SHORT CHIP	0			R9776	1-218-941-81	RES-CHIP	100	5%	1/16W
R9711	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9777	1-218-941-81	RES-CHIP	100	5%	1/16W
R9712	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9778	1-218-941-81	RES-CHIP	100	5%	1/16W
R9713	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9779	1-218-941-81	RES-CHIP	100	5%	1/16W
R9714	1-218-990-81	SHORT CHIP	0			R9780	1-218-941-81	RES-CHIP	100	5%	1/16W
R9716	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9781	1-218-941-81	RES-CHIP	100	5%	1/16W
R9717	1-218-977-11	RES-CHIP	100K	5%	1/16W	R9782	1-218-941-81	RES-CHIP	100	5%	1/16W
R9718	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9783	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9719	1-216-864-11	SHORT CHIP	0			R9784	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R9785	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9840	1-218-941-81	RES-CHIP	100	5%	1/16W
R9786	1-218-941-81	RES-CHIP	100	5%	1/16W	R9841	1-218-941-81	RES-CHIP	100	5%	1/16W
R9787	1-218-857-11	METAL CHIP	2.7K	0.5%	1/10W	R9842	1-218-941-81	RES-CHIP	100	5%	1/16W
R9789	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W	R9843	1-218-941-81	RES-CHIP	100	5%	1/16W
R9790	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R9844	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9791	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9845	1-218-941-81	RES-CHIP	100	5%	1/16W
R9792	1-216-837-11	METAL CHIP	22K	5%	1/10W	R9846	1-218-941-81	RES-CHIP	100	5%	1/16W
R9793	1-218-941-81	RES-CHIP	100	5%	1/16W	R9847	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9794	1-216-857-11	METAL CHIP	1M	5%	1/10W	R9848	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9795	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9849	1-218-941-81	RES-CHIP	100	5%	1/16W
R9796	1-218-953-11	RES-CHIP	1K	5%	1/16W	R9850	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9797	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9851	1-218-941-81	RES-CHIP	100	5%	1/16W
R9798	1-218-941-81	RES-CHIP	100	5%	1/16W	R9852	1-218-941-81	RES-CHIP	100	5%	1/16W
R9799	1-218-941-81	RES-CHIP	100	5%	1/16W	R9853	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9800	1-216-864-11	SHORT CHIP	0			R9854	1-218-941-81	RES-CHIP	100	5%	1/16W
R9802	1-216-821-11	METAL CHIP	1K	5%	1/10W	R9855	1-218-941-81	RES-CHIP	100	5%	1/16W
R9803	1-218-937-11	RES-CHIP	47	5%	1/16W	R9856	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9804	1-218-937-11	RES-CHIP	47	5%	1/16W	R9857	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9805	1-218-937-11	RES-CHIP	47	5%	1/16W	R9858	1-218-933-11	RES-CHIP	22	5%	1/16W
R9806	1-218-937-11	RES-CHIP	47	5%	1/16W	R9859	1-218-933-11	RES-CHIP	22	5%	1/16W
R9807	1-218-937-11	RES-CHIP	47	5%	1/16W	R9860	1-218-941-81	RES-CHIP	100	5%	1/16W
R9808	1-218-937-11	RES-CHIP	47	5%	1/16W	R9861	1-218-941-81	RES-CHIP	100	5%	1/16W
R9809	1-218-941-81	RES-CHIP	100	5%	1/16W	R9862	1-218-973-11	RES-CHIP	47K	5%	1/16W
R9810	1-218-937-11	RES-CHIP	47	5%	1/16W	R9863	1-218-941-81	RES-CHIP	100	5%	1/16W
R9811	1-218-941-81	RES-CHIP	100	5%	1/16W	R9864	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9813	1-218-937-11	RES-CHIP	47	5%	1/16W	R9865	1-218-941-81	RES-CHIP	100	5%	1/16W
R9814	1-218-941-81	RES-CHIP	100	5%	1/16W	R9866	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9816	1-218-937-11	RES-CHIP	47	5%	1/16W	R9867	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9817	1-218-941-81	RES-CHIP	100	5%	1/16W	R9868	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9818	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R9871	1-218-941-81	RES-CHIP	100	5%	1/16W
R9819	1-218-937-11	RES-CHIP	47	5%	1/16W	R9873	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9821	1-218-990-81	SHORT CHIP	0			R9874	1-218-941-81	RES-CHIP	100	5%	1/16W
R9822	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R9875	1-218-941-81	RES-CHIP	100	5%	1/16W
R9823	1-218-941-81	RES-CHIP	100	5%	1/16W	R9876	1-218-941-81	RES-CHIP	100	5%	1/16W
R9824	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9878	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9825	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9880	1-218-941-81	RES-CHIP	100	5%	1/16W
R9826	1-218-941-81	RES-CHIP	100	5%	1/16W	R9881	1-218-941-81	RES-CHIP	100	5%	1/16W
R9827	1-218-941-81	RES-CHIP	100	5%	1/16W	R9882	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9828	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9885	1-218-990-81	SHORT CHIP	0		
R9829	1-218-941-81	RES-CHIP	100	5%	1/16W	R9887	1-218-990-81	SHORT CHIP	0		
R9830	1-218-941-81	RES-CHIP	100	5%	1/16W	R9889	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9831	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9890	1-218-941-81	RES-CHIP	100	5%	1/16W
R9832	1-218-941-81	RES-CHIP	100	5%	1/16W	R9891	1-218-990-81	SHORT CHIP	0		
R9833	1-218-941-81	RES-CHIP	100	5%	1/16W	R9892	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9834	1-218-941-81	RES-CHIP	100	5%	1/16W	R9894	1-218-990-81	SHORT CHIP	0		
R9835	1-218-941-81	RES-CHIP	100	5%	1/16W	R9895	1-218-941-81	RES-CHIP	100	5%	1/16W
R9836	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9897	1-218-990-81	SHORT CHIP	0		
R9837	1-218-941-81	RES-CHIP	100	5%	1/16W	R9898	1-218-949-11	RES-CHIP	470	5%	1/16W
R9838	1-218-941-81	RES-CHIP	100	5%	1/16W	R9900	1-218-949-11	RES-CHIP	470	5%	1/16W
R9839	1-218-965-11	RES-CHIP	10K	5%	1/16W	R9901	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R9902	1-218-990-81	SHORT CHIP	0	RB9705	1-234-378-21	RES, NETWORK 10K	(1005X4)
R9903	1-218-949-11	RES-CHIP	470 5% 1/16W	RB9706	1-234-378-21	RES, NETWORK 10K	(1005X4)
R9904	1-218-990-81	SHORT CHIP	0	< OPTICAL FIBRE CONNECTOR >			
R9906	1-218-949-11	RES-CHIP	470 5% 1/16W				
R9907	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	TB9001	1-819-755-12	CONNECTOR FOR OPTICAL FIBRE	
R9911	1-218-990-81	SHORT CHIP	0	< VARISTOR >			
R9919	1-218-990-81	SHORT CHIP	0				
R9923	1-218-990-81	SHORT CHIP	0	VD9001	1-803-974-21	VARISTOR, CHIP	(1608)
R9924	1-218-965-11	RES-CHIP	10K 5% 1/16W	VD9002	1-803-974-21	VARISTOR, CHIP	(1608)
R9925	1-218-965-11	RES-CHIP	10K 5% 1/16W	VD9003	1-803-974-21	VARISTOR, CHIP	(1608)
R9927	1-218-953-11	RES-CHIP	1K 5% 1/16W	VD9004	1-803-974-21	VARISTOR, CHIP	(1608)
R9930	1-218-969-11	RES-CHIP	22K 5% 1/16W	VD9005	1-803-974-21	VARISTOR, CHIP	(1608)
R9931	1-218-969-11	RES-CHIP	22K 5% 1/16W	VD9006	1-803-974-21	VARISTOR, CHIP	(1608)
R9936	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	VD9007	1-804-988-21	VARISTOR, CHIP	(1608)
R9937	1-218-965-11	RES-CHIP	10K 5% 1/16W	VD9008	1-804-988-21	VARISTOR, CHIP	(1608)
R9938	1-218-990-81	SHORT CHIP	0	VD9009	1-804-988-21	VARISTOR, CHIP	(1608)
R9939	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	VD9010	1-803-974-21	VARISTOR, CHIP	(1608)
R9940	1-218-990-81	SHORT CHIP	0	VD9011	1-803-974-21	VARISTOR, CHIP	(1608)
R9942	1-218-990-81	SHORT CHIP	0	VD9012	1-803-974-21	VARISTOR, CHIP	(1608)
R9943	1-218-970-11	RES-CHIP	27K 5% 1/16W	VD9013	1-803-974-21	VARISTOR, CHIP	(1608)
R9944	1-218-945-11	RES-CHIP	220 5% 1/16W	VD9014	1-803-974-21	VARISTOR, CHIP	(1608)
R9946	1-218-965-11	RES-CHIP	10K 5% 1/16W	VD9015	1-803-974-21	VARISTOR, CHIP	(1608)
R9947	1-218-965-11	RES-CHIP	10K 5% 1/16W	VD9016	1-803-974-21	VARISTOR, CHIP	(1608)
R9948	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9017	1-803-974-21	VARISTOR, CHIP	(1608)
R9949	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9018	1-803-974-21	VARISTOR, CHIP	(1608)
R9951	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9019	1-803-974-21	VARISTOR, CHIP	(1608)
R9952	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9020	1-803-974-21	VARISTOR, CHIP	(1608)
R9954	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9021	1-803-974-21	VARISTOR, CHIP	(1608)
R9955	1-218-933-11	RES-CHIP	22 5% 1/16W	VD9022	1-803-974-21	VARISTOR, CHIP	(1608)
R9957	1-218-941-81	RES-CHIP	100 5% 1/16W	VD9023	1-803-974-21	VARISTOR, CHIP	(1608)
R9959	1-218-990-81	SHORT CHIP	0	VD9024	1-803-974-21	VARISTOR, CHIP	(1608)
R9961	1-216-864-11	SHORT CHIP	0	VD9025	1-803-974-21	VARISTOR, CHIP	(1608)
R9964	1-218-990-81	SHORT CHIP	0	VD9026	1-803-974-21	VARISTOR, CHIP	(1608)
R9966	1-216-864-11	SHORT CHIP	0	VD9027	1-803-974-21	VARISTOR, CHIP	(1608)
R9967	1-218-990-81	SHORT CHIP	0	VD9028	1-804-988-21	VARISTOR, CHIP	(1608)
R9968	1-218-990-81	SHORT CHIP	0	VD9029	1-803-974-21	VARISTOR, CHIP	(1608)
R9971	1-218-990-81	SHORT CHIP	0	VD9030	1-804-988-21	VARISTOR, CHIP	(1608)
< RESISTOR CHIP >				VD9031	1-803-974-21	VARISTOR, CHIP	(1608)
RB8401	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9032	1-804-988-21	VARISTOR, CHIP	(1608)
RB8402	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9033	1-803-974-21	VARISTOR, CHIP	(1608)
RB8403	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9034	1-803-974-21	VARISTOR, CHIP	(1608)
RB8404	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9035	1-803-974-21	VARISTOR, CHIP	(1608)
RB8405	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9036	1-803-974-21	VARISTOR, CHIP	(1608)
RB8406	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9037	1-803-974-21	VARISTOR, CHIP	(1608)
RB8407	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9038	1-803-974-21	VARISTOR, CHIP	(1608)
RB9702	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9039	1-803-974-21	VARISTOR, CHIP	(1608)
RB9703	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9040	1-803-974-21	VARISTOR, CHIP	(1608)
RB9704	1-234-372-11	RES, NETWORK 100	(1005X4)	VD9041	1-803-974-21	VARISTOR, CHIP	(1608)
				VD9042	1-803-974-21	VARISTOR, CHIP	(1608)

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

AE G1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
VD9043	1-803-974-21	VARISTOR, CHIP	(1608)	C6253	1-107-914-11	ELECT 1000UF	20% 50V
VD9044	1-803-974-21	VARISTOR, CHIP	(1608)	C6255	1-128-954-11	ELECT 1000UF	20% 25V
VD9701	1-803-974-21	VARISTOR, CHIP	(1608)	C6257	1-165-724-31	ELECT 3900UF	20% 10V
VD9702	1-803-974-21	VARISTOR, CHIP	(1608)	C6258	1-135-362-31	ELECT 1500UF	20% 16V
VD9703	1-803-974-21	VARISTOR, CHIP	(1608)	C6260	1-135-362-31	ELECT 1500UF	20% 16V
VD9704	1-803-974-21	VARISTOR, CHIP	(1608)	C6285	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD9705	1-803-974-21	VARISTOR, CHIP	(1608)	C6286	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
VD9706	1-803-974-21	VARISTOR, CHIP	(1608)	C6287	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD9710	1-803-974-21	VARISTOR, CHIP	(1608)	C6288	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
VD9715	1-803-974-21	VARISTOR, CHIP	(1608)	C6289	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
VD9716	1-803-974-21	VARISTOR, CHIP	(1608)	C6291	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
VD9717	1-803-974-21	VARISTOR, CHIP	(1608)	C6305	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
VD9718	1-803-974-21	VARISTOR, CHIP	(1608)	C6306	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
< CRYSTAL >				C6307	1-107-902-11	ELECT 1UF	20% 50V
X8402	1-795-612-11	VIBRATOR, CRYSTAL		C6308	1-107-903-11	ELECT 2.2UF	20% 50V
X9351	1-813-124-21	VIBRATOR, CERAMIC		C6309	1-107-910-11	ELECT 100UF	20% 50V
X9701	1-813-784-21	VIBRATOR, CRYSTAL		C6310	1-100-139-41	FILM 0.001UF	5% 630V
X9702	1-813-070-21	PIEZOELECTRIC OSCILLATOR		C6314	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
				C6315	1-128-949-31	ELECT 470UF	20% 16V
				C6316	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
*A-1217-644-A G1 Board, Complete				C6401	1-104-652-11	ELECT 470UF	20% 10V
2-580-594-01	SCREW, +PSW M3X12			C6402	1-127-573-11	CERAMIC CHIP 1UF	10% 16V
< CAPACITOR >				C6404	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6000 Δ	1-161-964-91	CERAMIC 0.0047UF	250V	C6405	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6001 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6406	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6003 Δ	1-161-964-91	CERAMIC 0.0047UF	250V	C6407	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6004 Δ	1-165-529-11	MYLAR 0.22UF	10 275V	C6408	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6005 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6409	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6006	1-135-361-11	ELECT (BLOCK) 180UF	20% 450V	C6412	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6007 Δ	1-165-529-11	MYLAR 0.22UF	10 275V	C6451	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6008	1-135-361-11	ELECT (BLOCK) 180UF	20% 450V	C6452	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C6010 Δ	1-113-889-11	CERAMIC 0.001UF	20.00% 250V	C6501	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V
C6011	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6502	1-100-613-81	CERAMIC 470PF	5% 1KV
C6012 Δ	1-113-889-11	CERAMIC 0.001UF	20.00% 250V	C6503	1-100-613-81	CERAMIC 470PF	5% 1KV
C6015 Δ	1-119-890-51	CERAMIC 100PF	10.00% 250V	C6504	1-100-613-81	CERAMIC 470PF	5% 1KV
C6016 Δ	1-119-890-51	CERAMIC 100PF	10.00% 250V	C6505	1-100-613-81	CERAMIC 470PF	5% 1KV
C6100	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6509	1-119-891-51	CERAMIC 220PF	10.00% 250V
C6101	1-107-905-11	ELECT 4.7UF	20% 50V	C6516	1-107-906-11	ELECT 10UF	20% 50V
C6102	1-107-910-11	ELECT 100UF	20% 50V	C6517	1-112-188-11	MYLAR 1.5UF	5% 450V
C6103	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6518	1-112-744-61	MYLAR 1UF	10% 450V
C6104	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C6519	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C6105	1-107-906-11	ELECT 10UF	20% 50V	C6520	1-112-188-11	MYLAR 1.5UF	5% 450V
C6108	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C6521	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6109	1-107-888-11	ELECT 47UF	20% 25V	C6522	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6111	1-100-613-81	CERAMIC 470PF	5% 1KV	C6524	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6112	1-100-919-11	FILM 0.027UF	3% 1KV	C6525	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6116	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6526	1-107-906-11	ELECT 10UF	20% 50V
C6200	1-104-760-11	CERAMIC CHIP 0.047UF	10.00% 50V	C6530	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V
				C6531	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V
				C6532	1-107-902-11	ELECT 1UF	20% 50V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

G1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< CONNECTOR >							
CN6001	Δ *1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		D6551	Δ 8-719-404-50	DIODE MA111-TX	
CN6011	1-537-770-21	TERMINAL BOARD, GROUND		D6552	Δ 8-719-404-50	DIODE MA111-TX	
CN6012	1-537-770-21	TERMINAL BOARD, GROUND		< FUSE >			
CN6201	*1-793-235-11	PIN, CONNECTOR (PC BOARD) 13P		F6000	Δ 1-576-233-51	FUSE 6.3A 250V	
CN6202	*1-785-708-11	PIN, CONNECTOR (PC BOARD) 12P		FH6000	Δ 1-533-223-11	FUSE HOLDER	
CN6203	*1-785-703-11	PIN, CONNECTOR (PC BOARD) 6P		FH6001	Δ 1-533-223-11	FUSE HOLDER	
CN6204	*1-779-944-11	PIN, CONNECTOR (PC BOARD) 4P		< FERRITE BEAD >			
CN6211	1-537-770-21	TERMINAL BOARD, GROUND		FB6100	1-410-397-21	FERRITE 1.1UH	
CN6501	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		FB6101	1-410-397-21	FERRITE 1.1UH	
CN6502	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		< IC >			
CN6503	1-537-770-21	TERMINAL BOARD, GROUND		IC6100	6-707-749-01	IC CXD9841P	
< DIODE >				IC6200	6-709-368-01	IC MM1431ATT (CN)	
D6000	8-719-054-89	DIODE D15XB60		IC6301	6-708-801-01	IC MIP2H2	
D6002	8-719-404-50	DIODE MA111-TX		IC6302	6-709-368-01	IC MM1431ATT (CN)	
D6003	8-719-404-50	DIODE MA111-TX		IC6401	6-709-368-01	IC MM1431ATT (CN)	
D6101	8-719-017-89	DIODE MA8150-TX		IC6402	6-709-368-01	IC MM1431ATT (CN)	
D6102	6-500-137-01	DIODE BAT54HT1		IC6502	6-709-791-01	IC E-L6562N	
D6103	8-719-979-64	DIODE UF4005/23		< COIL >			
D6104	6-501-043-01	DIODE UMZ16NT106		L6000	Δ 1-456-856-11	LINE FILTER COIL	
D6105	6-501-043-01	DIODE UMZ16NT106		L6001	Δ 1-457-317-11	LINE FILTER COIL	
D6106	8-719-081-67	DIODE M1FM3		L6250	1-412-525-31	INDUCTOR 10UH	
D6107	8-719-081-67	DIODE M1FM3		L6251	1-406-657-11	INDUCTOR 4.7UH	
D6108	8-719-041-97	DIODE MA113-(TX)		L6252	1-406-657-11	INDUCTOR 4.7UH	
D6253	8-719-027-22	DIODE D3S6M-F		L6300	1-414-934-21	INDUCTOR 10UH	
D6256	6-501-515-01	DIODE D10SC6M-F5		L6500	1-457-277-11	INDUCTOR 260UH	
D6258	6-501-515-01	DIODE D10SC6M-F5		L6502	1-457-275-11	INDUCTOR 300UH	
D6263	8-719-060-88	DIODE D4SBS6		< PHOTOCOUPLER >			
D6302	6-500-567-31	DIODE 10ERB20-TB3		PH6000	Δ 6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6303	6-500-567-31	DIODE 10ERB20-TB3		PH6100	Δ 6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6304	6-500-849-01	DIODE ERA22-08KFLB		PH6301	Δ 6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6305	6-500-567-31	DIODE 10ERB20-TB3		PH6400	Δ 6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6306	6-501-526-01	DIODE D1NS6-TR2		PH6402	Δ 6-600-187-01	PHOTO COUPLER PC123Y22JOOF	
D6401	8-719-404-50	DIODE MA111-TX		< TRANSISTOR >			
D6402	8-719-404-50	DIODE MA111-TX		Q6100	6-551-386-01	TRANSISTOR 2SK3563 (LBS1SONY)	
D6404	8-719-421-82	DIODE MA8043-M		Q6101	6-551-386-01	TRANSISTOR 2SK3563 (LBS1SONY)	
D6406	8-719-404-50	DIODE MA111-TX		Q6400	8-729-804-41	TRANSISTOR 2SB1122-S	
D6407	8-719-423-23	DIODE MA8110-M		Q6401	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6408	8-719-404-50	DIODE MA111-TX		Q6402	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6409	8-719-404-50	DIODE MA111-TX		Q6403	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6452	8-719-404-50	DIODE MA111-TX		Q6404	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6455	8-719-404-50	DIODE MA111-TX		Q6405	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6456	8-719-404-50	DIODE MA111-TX		Q6406	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6506	8-719-054-59	DIODE FSF05A60		Q6407	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6509	6-500-108-01	DIODE EP05FA20					
D6510	6-500-137-01	DIODE BAT54HT1					
D6512	8-719-404-50	DIODE MA111-TX					
D6514	8-719-404-50	DIODE MA111-TX					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

G1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q6454	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R6308	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
Q6455	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R6309	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
Q6500	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q)		R6371	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q6502	8-729-804-41	TRANSISTOR 2SB1122-S		R6400	1-216-833-11	METAL CHIP 10K 5% 1/10W	
Q6503	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q)		R6401	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
Q6505	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R6402	1-216-833-11	METAL CHIP 10K 5% 1/10W	
Q6506	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R6403	1-218-887-11	METAL CHIP 47K 0.5% 1/10W	
Q6507	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R6405	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
< RESISTOR >				R6406	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6002	Δ 1-240-251-11	METAL 6.8 5% 10W		R6407	1-216-857-11	METAL CHIP 1M 5% 1/10W	
R6003	1-247-762-11	CARBON 6.8K 5% 1/2W		R6408	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
R6015	1-216-857-11	METAL CHIP 1M 5% 1/10W		R6409	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6016	1-243-832-71	METAL OXIDE 15 5% 1W		R6410	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6053	1-216-296-11	SHORT CHIP 0		R6412	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6101	1-249-385-11	CARBON 2.2 5% 1/4W		R6413	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R6102	Δ 1-202-933-61	FUSIBLE 0.1 10% 1/2W		R6414	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6103	1-218-823-11	METAL CHIP 100 0.5% 1/10W		R6415	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6104	1-218-885-11	METAL CHIP 39K 0.5% 1/10W		R6416	1-216-817-11	METAL CHIP 470 5% 1/10W	
R6105	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6417	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6106	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6418	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R6107	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6419	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R6108	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6420	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6109	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		R6421	1-216-841-11	METAL CHIP 47K 5% 1/10W	
R6110	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		R6425	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R6111	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		R6436	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R6114	1-211-981-11	METAL CHIP 33 0.5% 1/10W		R6437	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6115	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		R6440	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6116	1-216-009-91	RES-CHIP 22 5% 1/10W		R6441	1-216-839-11	METAL CHIP 33K 5% 1/10W	
R6117	1-216-009-91	RES-CHIP 22 5% 1/10W		R6442	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6118	1-216-833-11	METAL CHIP 10K 5% 1/10W		R6443	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6119	1-216-833-11	METAL CHIP 10K 5% 1/10W		R6444	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R6122	1-216-361-00	METAL OXIDE 0.22 5% 2W		R6445	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6123	1-218-847-11	METAL CHIP 1K 0.5% 1/10W		R6447	1-216-864-11	SHORT CHIP 0	
R6127	1-216-857-11	METAL CHIP 1M 5% 1/10W		R6450	1-216-864-11	SHORT CHIP 0	
R6200	1-216-821-11	METAL CHIP 1K 5% 1/10W		R6451	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6201	1-216-821-11	METAL CHIP 1K 5% 1/10W		R6452	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
R6203	1-216-821-11	METAL CHIP 1K 5% 1/10W		R6453	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6204	1-216-864-11	SHORT CHIP 0		R6454	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R6205	1-218-875-11	METAL CHIP 15K 0.5% 1/10W		R6455	1-218-903-11	METAL CHIP 220K 0.5% 1/10W	
R6207	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		R6456	1-218-885-11	METAL CHIP 39K 0.5% 1/10W	
R6256	1-216-793-11	METAL CHIP 4.7 5% 1/10W		R6457	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6264	1-216-841-11	METAL CHIP 47K 5% 1/10W		R6459	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R6300	Δ 1-212-958-00	FUSIBLE 10 5% 1/2W		R6460	1-216-864-11	SHORT CHIP 0	
R6301	1-243-725-71	METAL OXIDE 100K 5% 1W		R6461	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6302	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W		R6462	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6303	1-249-385-11	CARBON 2.2 5% 1/4W		R6463	1-216-864-11	SHORT CHIP 0	
R6304	1-216-821-11	METAL CHIP 1K 5% 1/10W		R6501	1-216-857-11	METAL CHIP 1M 5% 1/10W	
R6305	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		R6502	1-243-550-71	METAL OXIDE 6.8 5% 2W	
R6306	1-216-805-11	METAL CHIP 47 5% 1/10W		R6503	1-215-882-00	METAL OXIDE 22 5% 2W	
				R6510	Δ 1-218-760-11	METAL CHIP 220K 0.5% 1/10W	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

G1 **D1**

REF.NO.	PART.NO	DESCRIPTION	REMARK
R6511	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6512	1-218-907-11	METAL CHIP	330K 0.5% 1/10W
R6513	1-218-879-11	METAL CHIP	22K 0.5% 1/10W
R6514	1-218-903-11	METAL CHIP	220K 0.5% 1/10W
R6516	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6517	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6518	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6519	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6520	Δ 1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6521	Δ 1-218-911-11	METAL CHIP	470K 0.5% 1/10W
R6522	Δ 1-218-905-11	METAL CHIP	270K 0.5% 1/10W
R6523	1-218-905-11	METAL CHIP	270K 0.5% 1/10W
R6524	1-218-861-11	METAL CHIP	3.9K 0.5% 1/10W
R6528	1-218-877-11	METAL CHIP	18K 0.5% 1/10W
R6529	1-217-156-00	METAL	0.22 10% 5W
R6530	1-217-156-00	METAL	0.22 10% 5W
R6532	1-218-887-11	METAL CHIP	47K 0.5% 1/10W
R6533	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6534	1-216-817-11	METAL CHIP	470 5% 1/10W
R6535	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6537	1-249-389-11	CARBON	4.7 5% 1/4W
R6539	1-216-796-11	METAL CHIP	8.2 5% 1/10W
R6540	1-249-389-11	CARBON	4.7 5% 1/4W
R6545	1-208-840-11	METAL CHIP	270K 0.5% 1/10W
R6546	1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6547	1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6548	1-218-760-11	METAL CHIP	220K 0.5% 1/10W
R6549	1-208-834-11	METAL CHIP	150K 0.5% 1/10W
R6550	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
R6551	1-249-393-11	CARBON	10 5% 1/4W
R6552	1-216-809-11	METAL CHIP	100 5% 1/10W
R6557	1-218-823-11	METAL CHIP	100 0.5% 1/10W
R6558	1-218-851-11	METAL CHIP	1.5K 0.5% 1/10W
R6559	1-218-887-11	METAL CHIP	47K 0.5% 1/10W
R6561	1-218-895-11	METAL CHIP	100K 0.5% 1/10W
R6562	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R6563	1-216-821-11	METAL CHIP	1K 5% 1/10W
< RELAY >			
RY6003	Δ 1-755-418-12	RELAY (AC POWER)	
< TRANSFORMER >			
T6201	Δ 1-443-848-11	CONVERTER TRANSFORMER (PIT)	
T6301	Δ 1-445-089-11	CONVERTER TRANSFORMER (SBT)	
< VARISTOR >			
VD6000	Δ 1-804-996-21	VARISTOR	
VD6001	Δ 1-804-996-21	VARISTOR	

REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1197-882-B D1 Board, Complete			
	2-580-592-01	SCREW, +PSW M3X8	
< CAPACITOR >			
C6534	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C6600	1-165-794-21	MYLAR 1UF	10% 450V
C6601	1-165-794-21	MYLAR 1UF	10% 450V
C6606	1-165-794-21	MYLAR 1UF	10% 450V
C6658	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6659	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V
C6701	1-104-512-11	CERAMIC 22PF	5% 6.3KV
C6702	1-104-512-11	CERAMIC 22PF	5% 6.3KV
C6703	1-114-173-11	CERAMIC 12PF	5% 6.3KV
C6704	1-114-173-11	CERAMIC 12PF	5% 6.3KV
C6705	1-112-725-11	CERAMIC 68PF	5% 3KV
C6706	1-112-725-11	CERAMIC 68PF	5% 3KV
C6707	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C6709	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6710	1-112-725-11	CERAMIC 68PF	5% 3KV
C6711	1-112-725-11	CERAMIC 68PF	5% 3KV
C6712	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C6714	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6715	1-112-740-91	CERAMIC 10PF	5% 3KV
C6716	1-112-740-91	CERAMIC 10PF	5% 3KV
C6717	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6718	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6719	1-112-740-91	CERAMIC 10PF	5% 3KV
C6720	1-112-740-91	CERAMIC 10PF	5% 3KV
C6721	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6722	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
C6723	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6731	1-107-888-11	ELECT 47UF	20% 25V
C6732	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6733	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6734	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6735	1-164-227-11	CERAMIC CHIP 0.022UF	10.00% 25V
C6736	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6737	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6738	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6740	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6742	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6750	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6751	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6752	1-112-029-91	CERAMIC CHIP 0.047UF	5% 50V
C6753	1-127-803-91	CERAMIC CHIP 270PF	1% 50V
C6754	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6755	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6756	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6757	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6708	8-719-404-50	DIODE MA111-TX	
C6758	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6709	8-719-062-51	DIODE 1PS226-115	
C6759	1-107-888-11	ELECT 47UF	20% 25V	D6710	8-719-404-50	DIODE MA111-TX	
C6760	1-137-980-91	CERAMIC CHIP 0.47UF	10% 50V	D6711	8-719-062-51	DIODE 1PS226-115	
C6761	1-104-329-11	CERAMIC CHIP 0.1UF	10.00% 50V	D6712	8-719-404-50	DIODE MA111-TX	
C6762	1-137-980-91	CERAMIC CHIP 0.47UF	10% 50V	D6713	8-719-062-51	DIODE 1PS226-115	
C6763	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6714	8-719-404-50	DIODE MA111-TX	
C6764	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6715	8-719-062-51	DIODE 1PS226-115	
C6765	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6716	8-719-404-50	DIODE MA111-TX	
C6766	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6731	8-719-404-50	DIODE MA111-TX	
C6768	1-107-875-91	ELECT 220UF	20% 10V	D6732	8-719-404-50	DIODE MA111-TX	
C6769	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	D6733	8-719-404-50	DIODE MA111-TX	
C6770	1-107-902-11	ELECT 1UF	20% 50V	D6734	8-719-404-50	DIODE MA111-TX	
C6771	1-107-902-11	ELECT 1UF	20% 50V	D6752	8-719-404-50	DIODE MA111-TX	
C6772	1-107-888-11	ELECT 47UF	20% 25V	D6753	8-719-404-50	DIODE MA111-TX	
C6773	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6754	8-719-404-50	DIODE MA111-TX	
C6774	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	< FERRITE BEAD >			
C6779	1-163-809-11	CERAMIC CHIP 0.047UF	10.00% 25V	FB6600	1-410-396-41	FERRITE 0.45UH	
< CONNECTOR >				FB6601	1-410-396-41	FERRITE 0.45UH	
CN6600	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		FB6604	1-410-396-41	FERRITE 0.45UH	
CN6700	*1-820-458-11	HEADER ASSEMBLY FOR PWB 2P		FB6605	1-410-396-41	FERRITE 0.45UH	
CN6701	*1-820-458-11	HEADER ASSEMBLY FOR PWB 2P		< IC >			
CN6751	*1-785-703-11	PIN, CONNECTOR (PC BOARD) 6P		IC6730	8-759-575-27	IC BA10339F-E2	
CN6752	*1-785-702-11	PIN, CONNECTOR (PC BOARD) 5P		IC6750	6-709-792-01	IC BD9890F-E2	
< DIODE >				< COIL >			
D6600	6-501-497-01	DIODE S3L60F		L6600	1-406-977-21	INDUCTOR 100UH	
D6601	6-501-497-01	DIODE S3L60F		< TRANSISTOR >			
D6602	6-501-497-01	DIODE S3L60F		Q6600	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
D6603	6-501-497-01	DIODE S3L60F		Q6601	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
D6604	6-501-497-01	DIODE S3L60F		Q6602	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
D6605	6-501-497-01	DIODE S3L60F		Q6603	6-551-403-01	TRANSISTOR 2SK3797(LBS1SONY.	
D6606	8-719-041-97	DIODE MA113-(TX)		Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
D6607	8-719-041-97	DIODE MA113-(TX)		Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
D6608	8-719-041-97	DIODE MA113-(TX)		Q6606	8-729-804-41	TRANSISTOR 2SB1122-S	
D6609	8-719-041-97	DIODE MA113-(TX)		Q6607	8-729-804-41	TRANSISTOR 2SB1122-S	
D6614	6-501-497-01	DIODE S3L60F		Q6751	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6615	6-501-497-01	DIODE S3L60F		Q6752	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6616	8-719-083-57	DIODE UDZSTE-173.6B		Q6753	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6617	8-719-083-57	DIODE UDZSTE-173.6B		Q6754	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6618	8-719-083-57	DIODE UDZSTE-173.6B		Q6755	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D6619	8-719-083-57	DIODE UDZSTE-173.6B		Q6756	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6701	8-719-404-50	DIODE MA111-TX		Q6757	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D6702	8-719-404-50	DIODE MA111-TX		Q6758	8-729-019-94	TRANSISTOR 2SK1589-L	
D6703	8-719-404-50	DIODE MA111-TX		Q6759	8-729-820-90	TRANSISTOR 2SD1621-ST	
D6704	8-719-404-50	DIODE MA111-TX		Q6760	8-729-804-41	TRANSISTOR 2SB1122-S	
D6705	8-719-404-50	DIODE MA111-TX					
D6706	8-719-404-50	DIODE MA111-TX					
D6707	8-719-404-50	DIODE MA111-TX					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

D1

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
Q6761	8-729-019-94	TRANSISTOR 2SK1589-L				R6707	1-216-821-11	METAL CHIP	1K	5%	1/10W
Q6762	8-729-820-90	TRANSISTOR 2SD1621-ST				R6708	1-216-843-11	METAL CHIP	68K	5%	1/10W
Q6763	8-729-804-41	TRANSISTOR 2SB1122-S				R6709	1-216-845-11	METAL CHIP	100K	5%	1/10W
< RESISTOR >						R6710	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6600	Δ 1-202-933-61	FUSIBLE	0.1	10%	1/2W	R6711	1-216-843-11	METAL CHIP	68K	5%	1/10W
R6601	1-249-403-11	CARBON	68	5%	1/4W	R6712	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6602	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6714	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R6603	1-216-049-11	RES-CHIP	1K	5%	1/10W	R6731	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6604	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6732	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6605	1-249-403-11	CARBON	68	5%	1/4W	R6733	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6606	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6734	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6607	1-216-049-11	RES-CHIP	1K	5%	1/10W	R6735	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6608	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6736	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6609	1-249-403-11	CARBON	68	5%	1/4W	R6737	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6610	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6738	1-216-857-11	METAL CHIP	1M	5%	1/10W
R6611	1-216-049-11	RES-CHIP	1K	5%	1/10W	R6739	1-218-905-11	METAL CHIP	270K	0.5%	1/10W
R6612	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6740	1-249-417-11	CARBON	1K	5%	1/4W
R6613	1-216-049-11	RES-CHIP	1K	5%	1/10W	R6741	1-249-417-11	CARBON	1K	5%	1/4W
R6614	1-249-403-11	CARBON	68	5%	1/4W	R6743	1-216-842-11	METAL CHIP	56K	5%	1/10W
R6615	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6749	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6616	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6750	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6619	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6751	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6620	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6752	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6651	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6753	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6652	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6754	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R6653	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6755	1-218-915-11	METAL CHIP	680K	0.5%	1/10W
R6654	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6756	1-218-899-11	METAL CHIP	150K	0.5%	1/16W
R6655	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6757	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6656	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6758	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6657	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R6759	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6658	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6760	1-218-899-11	METAL CHIP	150K	0.5%	1/16W
R6659	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6761	1-218-893-11	METAL CHIP	82K	0.5%	1/10W
R6660	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6762	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R6661	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6763	1-218-907-11	METAL CHIP	330K	0.5%	1/10W
R6662	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6766	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6663	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6767	1-216-853-11	METAL CHIP	470K	5%	1/10W
R6664	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6768	1-216-839-11	METAL CHIP	33K	5%	1/10W
R6665	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6769	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6666	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6770	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6667	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6771	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6668	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6772	1-216-842-11	METAL CHIP	56K	5%	1/10W
R6669	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6670	1-218-829-11	METAL CHIP	180	0.5%	1/10W	R6774	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6701	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6775	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6702	1-216-843-11	METAL CHIP	68K	5%	1/10W	R6776	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6703	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6777	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6704	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6778	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6705	1-216-843-11	METAL CHIP	68K	5%	1/10W	R6779	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6706	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6780	1-216-817-11	METAL CHIP	470	5%	1/10W
						R6781	1-216-845-11	METAL CHIP	100K	5%	1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

D1

REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6782	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6783	1-216-809-11	METAL CHIP	100	5%	1/10W
R6784	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6785	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6786	1-216-809-11	METAL CHIP	100	5%	1/10W
R6788	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R6789	1-249-417-11	CARBON	1K	5%	1/4W
R6790	1-216-809-11	METAL CHIP	100	5%	1/10W
R6791	1-216-801-11	METAL CHIP	22	5%	1/10W
R6792	1-249-417-11	CARBON	1K	5%	1/4W
R6793	1-216-809-11	METAL CHIP	100	5%	1/10W
R6794	1-216-801-11	METAL CHIP	22	5%	1/10W
R6795	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6796	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6797	1-218-913-91	METAL CHIP	560K	0.5%	1/10W
R6798	1-216-842-11	METAL CHIP	56K	5%	1/10W

< TRANSFORMER >

T6600	Δ 8-597-051-00	HV ISOLATING TRANS HIT-1001//M
T6601	Δ 8-597-051-00	HV ISOLATING TRANS HIT-1001//M
T6650	Δ 1-445-039-11	TRANSFORMER, DRIVE

< TERMINAL BOARD >

TK6700	1-537-770-21	TERMINAL BOARD, GROUND
TK6701	1-537-770-21	TERMINAL BOARD, GROUND

REF.NO.	PART.NO	DESCRIPTION	REMARK
---------	---------	-------------	--------

MISCELLANEOUS

	8-597-571-00	TUNER UNIT, DIGITAL BTD-HF431Z	
Δ	1-818-098-21	INLET, AC (WITH NOISE FILTER)	
	1-826-477-11	LOUDSPEAKER	
	1-826-477-21	LOUDSPEAKER	
Δ	1-833-696-11	CORD SET, POWER (AEP MODEL)	
Δ	1-833-695-11	CORD SET, POWER (UK MODEL)	
	1-802-198-12	LCD PANEL (40 INCH FHD+TFT)	

ACCESSORIES AND CONNECTORS

	1-769-175-21	ANTENNA CABLE	
	1-831-554-11	CABLE ASSY (15P DSUB CONNECTOR) (40X2000UK)	
	1-831-554-11	VGA CABLE 1500MM (40X2000AEP)	
	1-832-957-11	LEAD WIRE WITH CONNECTOR (LVDS)	(CN5900-PANEL(1))
	1-832-967-12	HARNESS, WITH CONNECTOR (RGB)	(CN9210-CN3102(1))
	1-910-026-00	XA CONNECTOR ASSY (B) 13P	(CN6201-CN4000(1))
	1-910-026-01	XA CONNECTOR ASSY (G1)	(CN6202-CN9203(1), CN6204-CN9204(0))
	1-910-026-05	SHLDP CONNECTOR ASSY (TU) 30P	(CN9208-CN3802(1), CN9208-CN3903(0), CN9208-CN3904(0))
	1-910-026-07	VH CONNECTOR ASSY (D2) 3P	(CN6501-CN6600(1))
	1-910-026-09	BD CONNECTOR ASSY (BLK) 2P	(CN6700-CN6800(1))
	1-910-027-42	XA CONNECTOR ASSY (D1) 6P	(CN6203-CN6751(1))
	1-910-027-44	XA CONNECTOR ASSY (D1) 5P	(CN6752-CN6821(1))
	1-910-027-46	VH CONNECTOR ASSY (SP) 4P	(CN8801-SP(L), (R) (1))
	1-910-027-47	MO1189 CONNECTOR ASSY 20P	(CN9201-CN3201, CN3001(1))
	1-910-027-48	BD CONNECTOR ASSY (RED) 2P	(CN6701-CN6900(1))
	1-910-032-59	SHLDP CONNECTOR ASSY 20P	(CN9207-CN3100(1), CN9207-CN3301(0))
	1-910-030-22	MO1189 CONNECTOR ASSY (FX) 30P	(CN3901-CN7501(1))
*2-698-671-11		INSTRUCTION MANUAL (ENGLISH) (40X2000UK)	
*2-698-671-21		INSTRUCTION MANUAL (GERMAN/FRENCH/ITALIAN/DUTCH) (40X2000AEP)	
*2-698-671-31		INSTRUCTION MANUAL (SPANISH/PORTUGUESE/GREEK) (40X2000AEP)	
*2-698-671-41		INSTRUCTION MANUAL (SWEDISH/DANISH/FINNISH/NORWEGIAN) (40X2000AEP)	
*2-698-671-51		INSTRUCTION MANUAL (ENGLISH/RUSSIAN/POLISH) (40X2000AEP)	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
---------	---------	-------------	--------	---------	---------	-------------	--------

REMOTE COMMANDER							
-------------------------	--	--	--	--	--	--	--

1-479-833-11	REMOTE COMMANDER (RM-ED006)						
--------------	-----------------------------	--	--	--	--	--	--

