

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS

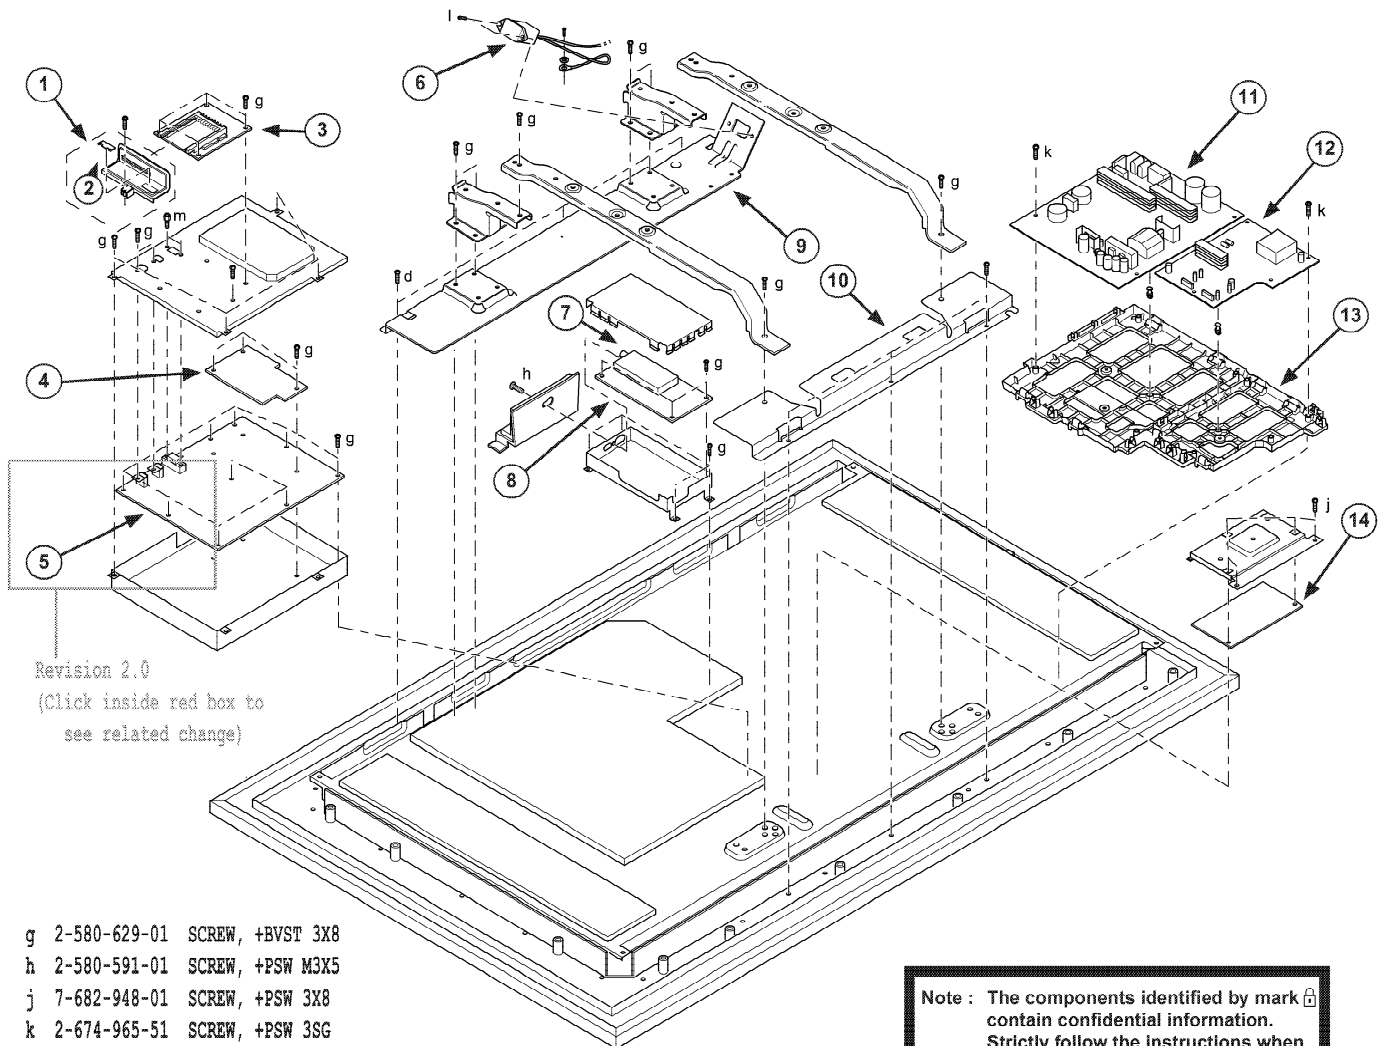


- g 2-580-629-01 SCREW, +BVST 3X8
h 2-580-591-01 SCREW, +PSW M3X5
j 7-682-948-01 SCREW, +PSW 3X8
k 2-674-965-51 SCREW, +PSW 3SG
l 2-596-649-01 SCREW, +KTT 3X10 (S TYPE)
m 4-635-966-01 SCREW, (HEX)

Revision 2.0
(Click inside red box to see related change)

Note : The components identified by mark Δ contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	X-2177-799-2	BRACKET, CARD ASSY	2	10	3-100-215-01	STAY UPPER (40)	40 inches
2	2-689-737-01	COVER, MS			3-100-221-01	STAY UPPER (46)	46 inches
3	*A-1259-905-A	CI BOARD, COMPLETE			3-100-233-01	STAY UPPER (52)	52 inches
4	A-1259-904-A	AVC BOARD, COMPLETE		11	*A-1361-279-A	GF1 BOARD, COMPLETE (STT)	40/46 inches
5	Δ *A-1362-569-A	FB2 BOARD, COMPLETE (X)			*A-1361-550-A	GF2 BOARD, COMPLETE (STT)	52 inches
6	Δ 1-819-729-14	INLET, AC (WITH NOISE FILTER)	40 inches	12	*A-1256-156-A	DF1 BOARD, COMPLETE (STT)	40 inches
	Δ 1-821-380-11	INLET, AC (WITH NOISE FILTER)	46 inches		*A-1253-585-A	DF2 BOARD, COMPLETE (STT)	46 inches
	Δ 1-819-729-14	INLET, AC (WITH NOISE FILTER)	52 inches		*A-1253-587-A	DF4 BOARD, COMPLETE (STT)	52 inches
7	8-597-613-00	TUNER UNIT DIGITAL BTD-HF401Z		13	*X-2179-158-1	BRACKET, GFD ASSY	40/46 inches
8	*A-1259-906-A	TUE BOARD, COMPLETE			*X-2179-160-1	BRACKET, GFD ASSY	52 inches
9	3-100-214-01	STAY LOWER (40)	40 inches	14	A-1257-224-A	UB1 BOARD, COMPLETE	
	3-100-220-01	STAY LOWER (46)	46 inches				
	3-100-232-01	STAY LOWER (52)	52 inches				

5-2. REAR COVER, STAND & BEZEL

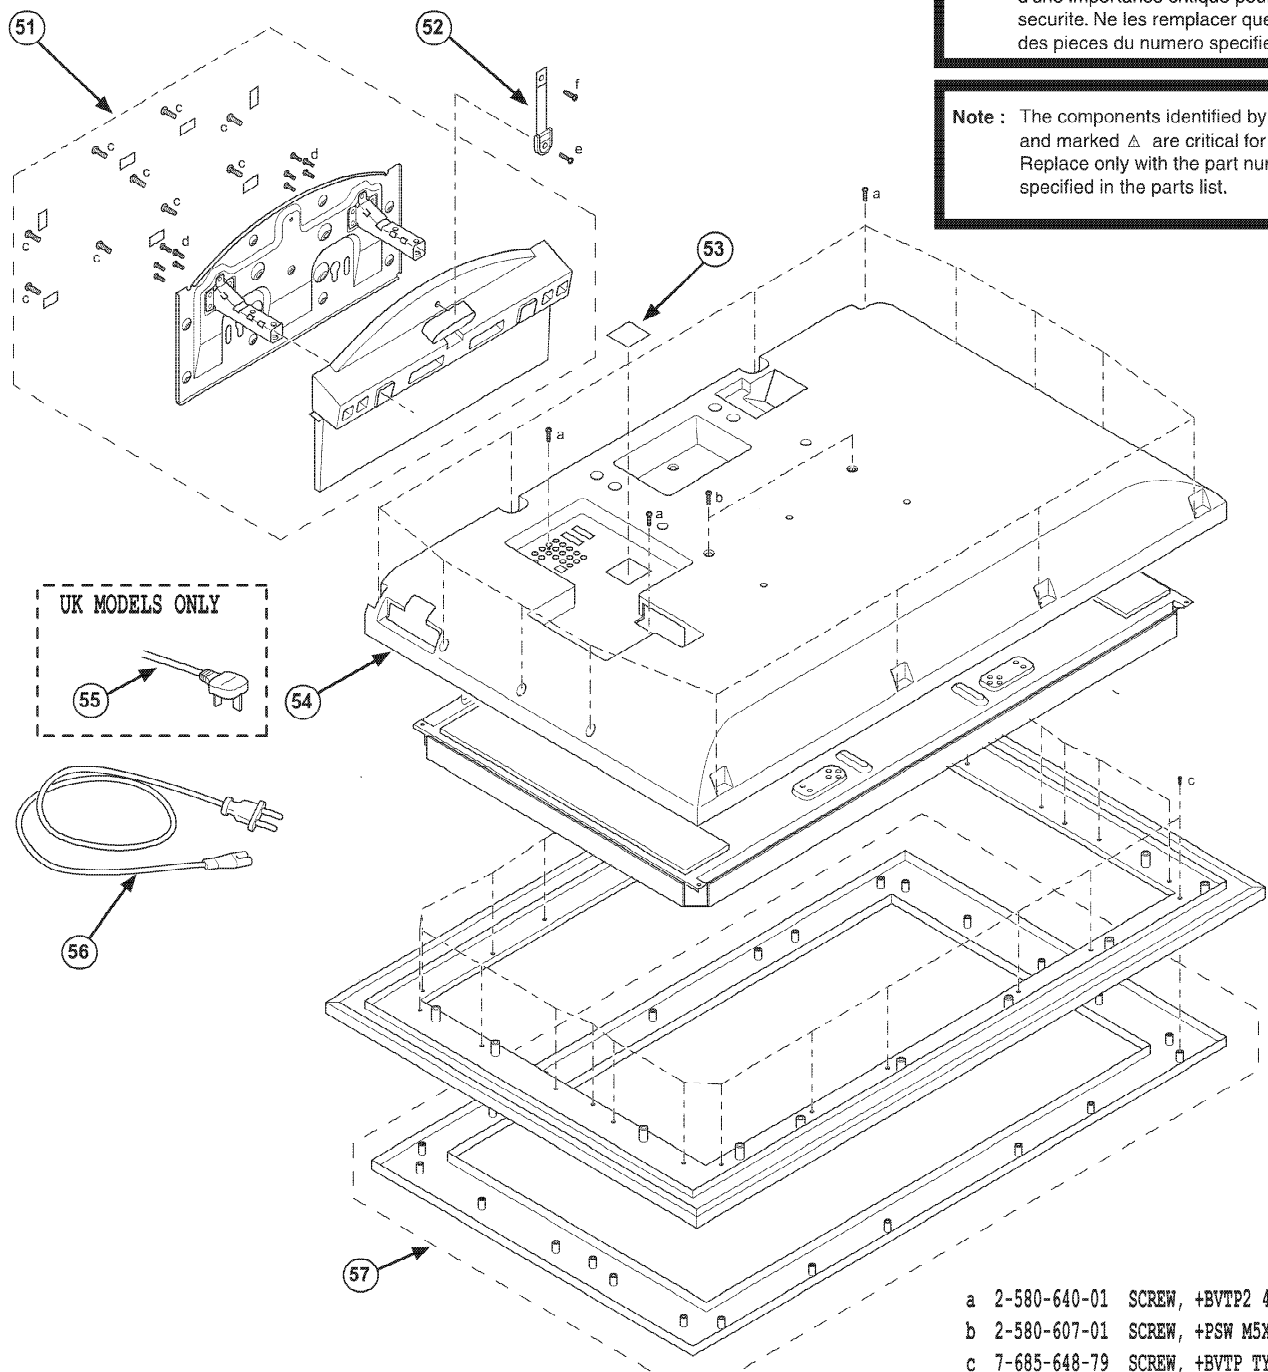


Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

- a 2-580-640-01 SCREW, +BVTP2 4X16
- b 2-580-607-01 SCREW, +PSW M5X12
- c 7-685-648-79 SCREW, +BVTP TYPE2 IT-3
- d 2-580-606-01 SCREW, +PSW M5X8
- e 2-593-320-02 SCREW, COIN M6X18
- f 2-580-663-01 SCREW, WOOD 3.8X20

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2179-412-1	STAND BASE (S) ASSY	40/46 inches	55	Δ 1-833-695-11	POWER-SUPPLY CORD SET (UK)	40 inches
	X-2179-413-1	STAND BASE (L) ASSY	52 inches		Δ 1-834-583-11	POWER-SUPPLY CORD SET (UK)	46/52 inches
52	X-2102-511-2	BAG ASSY, RUDDER LOCK	40/46 inches	56	Δ 1-833-696-11	POWER-SUPPLY CORD SET (AEP)	40 inches
	X-2149-990-1	BAG ASSY, RUDDER LOCK	52 inches		Δ 1-834-549-11	POWER-SUPPLY CORD SET (AEP)	46/52 inches
53	2-673-535-02	SERVICE COVER		57	X-2179-350-1	BEZEL (40) ASSY	40 inches
54	X-2178-258-1	REAR COVER ASSY (40)	40 inches		X-2179-351-1	BEZEL ASSY (46) METAL	46 inches
	X-2178-259-1	REAR COVER ASSY (46)	46 inches		X-2179-352-1	BEZEL ASSY (52) METAL	52 inches
	X-2178-260-1	REAR COVER ASSY (52)	52 inches				

5-3. FRONT CABINET ASSY & LCD PANEL

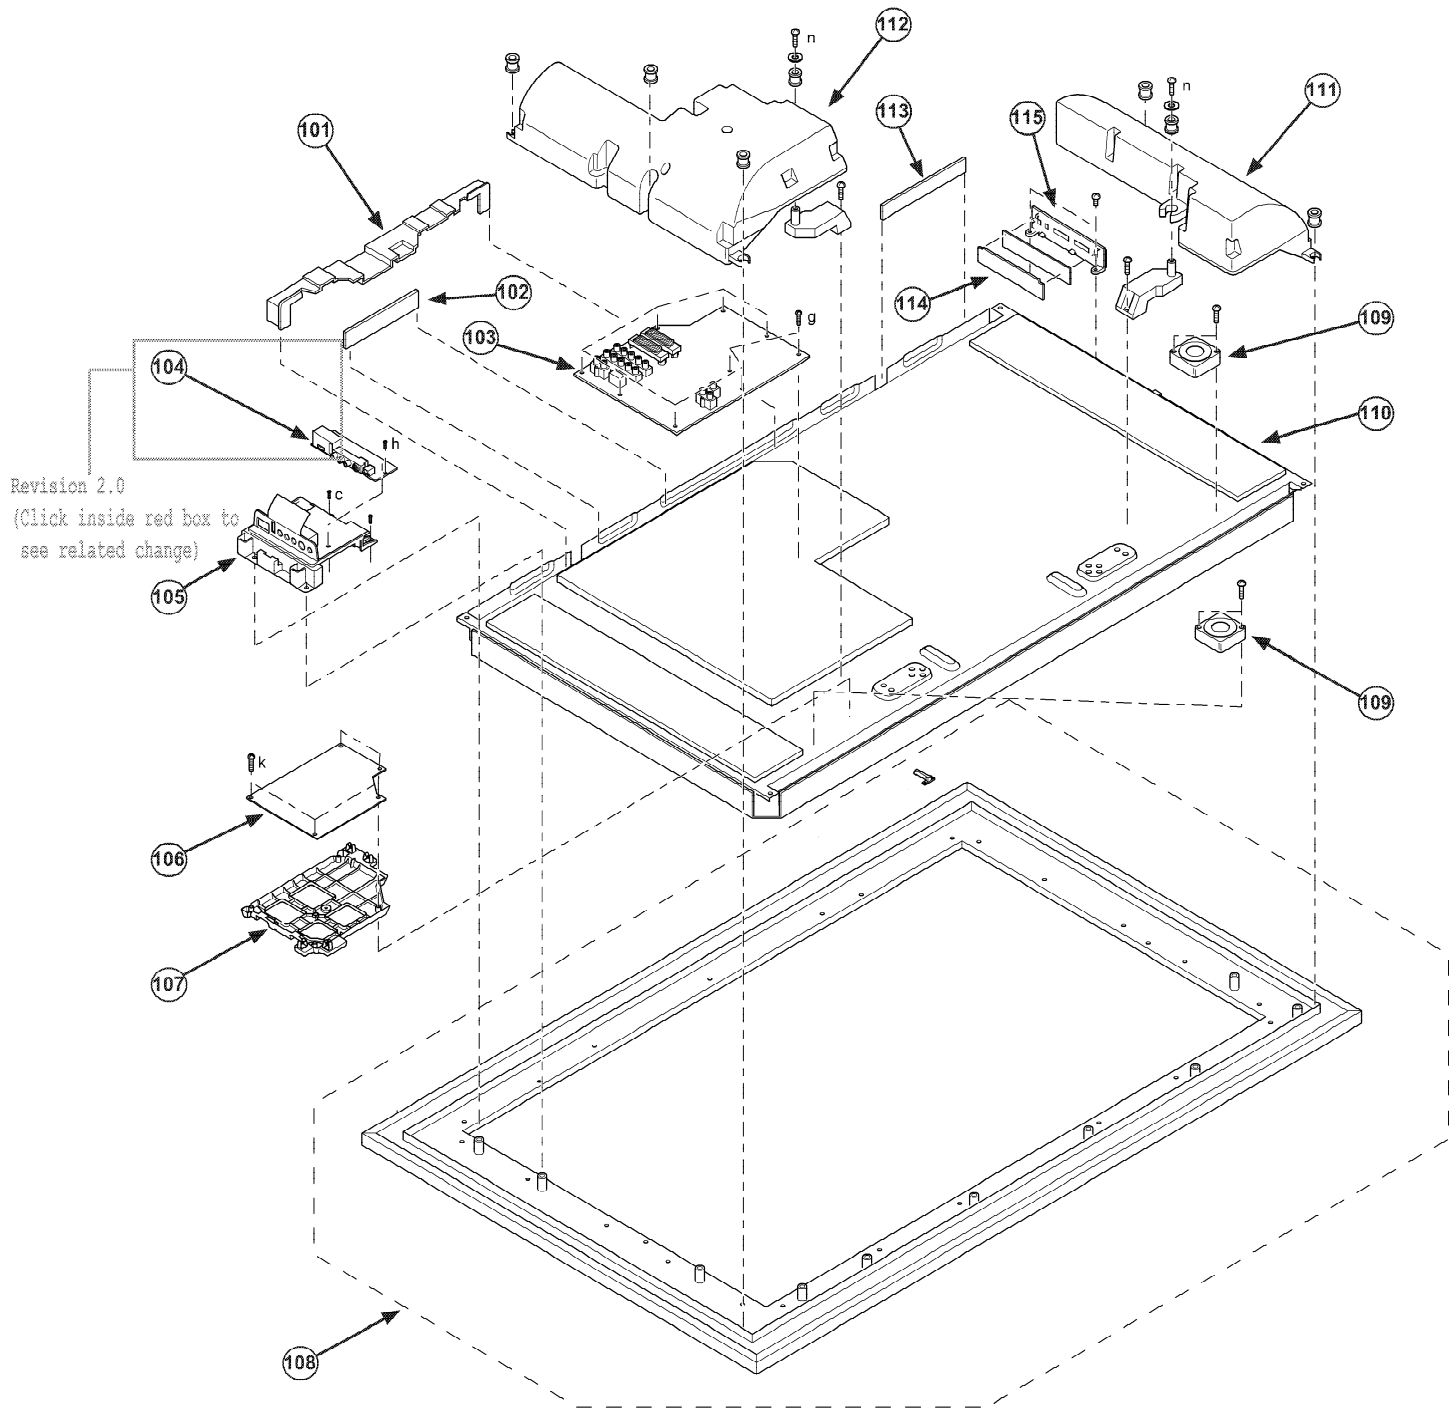

n 2-580-654-01 SCREW, +PWTP2 4X16

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	*3-100-210-11	UNDER COVER (S)	40/46 inches	109	1-787-677-11	DC FAN	40/46 inches
	*3-100-425-11	UNDER COVER (L)	52 inches	110	1-802-489-11	LCD PANEL (40INCH FHD HFR)	40 inches
102	*A-1171-668-A	H4 BOARD, COMPLETE			1-802-491-11	LCD PANEL (46INCH FHD HFR)	46 inches
103	*A-1337-469-A	AE BOARD, COMPLETE			1-802-490-11	LCD PANEL (52INCH FHD HFR)	52 inches
104	*A-1466-242-A	HW2 BOARD, COMPLETE		111	1-826-703-21	LOUDSPEAKER R	40 inches
105	X-2186-680-2	SIDE TERMINAL ASSY			1-826-696-21	LOUDSPEAKER R	46/52 inches
106	*A-1253-586-A	DF3 BOARD, COMPLETE (STT)	46 inches	112	1-826-703-11	LOUDSPEAKER L	40 inches
	*A-1253-588-A	DF5 BOARD, COMPLETE (STT)	52 inches		1-826-696-11	LOUDSPEAKER L	46/52 inches
107	*3-106-941-21	BRACKET, D3	46/52 inches	113	*A-1171-667-A	H3 BOARD, COMPLETE	
108	X-2179-356-1	FRONT CABINET ASSY(40)	109 40 inches	114	*A-1171-665-A	H1 BOARD, COMPLETE	
	X-2179-357-1	FRONT CABINET ASSY(46)	109 46 inches	115	X-2178-521-1	CONTROL BUTTON ASSY	
	X-2179-358-1	FRONT CABINET ASSY(52)	109 52 inches				

SECTION 6 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	Page
UB1 BOARD COMPLETE Parts List :	180
TUE BOARD COMPLETE Parts List :	185
AVC BOARD COMPLETE Parts List :	187
FB2 BOARD COMPLETE Parts List :	194
AE BOARD COMPLETE Parts List :	215
HW2 BOARD COMPLETE Parts List :	229
H1 BOARD COMPLETE Parts List :	231
H3 BOARD COMPLETE Parts List :	232
H4 BOARD COMPLETE Parts List :	232
CI BOARD COMPLETE Parts List :	233
GF2 BOARD COMPLETE Parts List : 52 inches	235
DF5 BOARD COMPLETE Parts List : 52 inches	238
DF4 BOARD COMPLETE Parts List : 52 inches	240
GF1 BOARD COMPLETE Parts List : 40/46 inches	243
DF2 BOARD COMPLETE Parts List : 46 inches	246
DF3 BOARD COMPLETE Parts List : 46 inches	249
DF1 BOARD COMPLETE Parts List : 40 inches	250
ACCESSORIES AND CONNECTORS :	254
REMOTE COMMANDER :	254

Note : Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
Parts indicated (XX) on the Schematic Diagram are not used in this model and therefore do not appear in the Parts List.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
*A-1257-224-A UB1 Board, Complete				C7342	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
A7202	1-694-802-21	CONTACT TERMINAL		C7343	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
A7203	1-694-802-21	CONTACT TERMINAL		C7344	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
A7204	1-694-802-21	CONTACT TERMINAL		C7345	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
				C7346	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
< CAPACITOR >				C7347	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7217	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7348	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7349	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7219	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7350	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7351	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7224	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7352	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7225	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7353	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7226	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7354	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7300	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7355	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7301	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7356	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C7302	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7357	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7303	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7358	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7306	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7359	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7307	1-114-400-21	ELECT CHIP 100UF	20% 6.3V	C7360	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7308	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7361	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7309	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7362	1-131-956-21	ELECT CHIP 220UF	20% 4V
C7310	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7363	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7311	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7364	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7312	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7365	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7313	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7366	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7314	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7367	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7315	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7368	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7316	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7369	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7317	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7370	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7318	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7371	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7319	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7372	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7320	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7373	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7321	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7374	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7325	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7375	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7326	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7376	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7327	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7377	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7329	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7378	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7330	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7383	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7331	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7384	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7332	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7385	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7333	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7386	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7334	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7387	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7335	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7388	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7336	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7389	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7337	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7390	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7338	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7391	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7339	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7392	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7340	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7393	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7341	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7394	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
				C7395	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7396	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7471	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7397	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7472	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7398	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7475	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7399	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7476	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7400	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7477	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7401	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7402	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7501	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7403	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7502	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7404	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7405	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C7504	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7406	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7407	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7409	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V	C7507	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7410	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V	C7508	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7412	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C7509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7413	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C7513	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7414	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7514	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7415	1-115-414-11	CERAMIC CHIP 820PF	5.00% 25V	C7517	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7416	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C7518	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7417	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7519	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7418	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7521	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7523	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7420	1-114-407-21	ELECT CHIP 4.7UF	20% 50V	C7524	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C7428	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7525	1-112-784-11	ELECT CHIP 220UF	20% 6.3V
C7429	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V	C7526	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7430	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7527	1-112-784-11	ELECT CHIP 220UF	20% 6.3V
C7431	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7528	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7433	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7531	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7434	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7533	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7436	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C7534	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7437	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7536	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7441	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7537	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7442	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7539	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7448	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7540	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7449	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7542	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7450	1-165-585-21	ELECT CHIP 47UF	20% 25V	C7543	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7451	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7545	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7454	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7546	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7456	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7548	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7457	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7549	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7458	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7551	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7460	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7552	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7461	1-165-585-21	ELECT CHIP 47UF	20% 25V	C7554	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7462	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7555	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7463	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7557	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7464	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7558	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7465	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7560	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7466	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7562	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7467	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	C7564	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7470	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7566	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

UB1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7568	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7664	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7570	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7666	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7572	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7668	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7574	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7670	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7575	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7672	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7579	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7674	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7581	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7676	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7583	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7677	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C7584	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7678	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V
C7585	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7681	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7586	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7683	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7587	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7684	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7588	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7685	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7590	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7687	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7594	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7688	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7598	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7689	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7599	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7690	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7601	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7691	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7603	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7692	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7604	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	C7693	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7605	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	< CONNECTOR >			
C7607	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	CN7200	*1-821-034-11	HEADER ASSEMBLY FOR PWB 51P	
C7609	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	CN7201	*1-819-463-11	HEADER ASSEMBLY FOR PWB 6P	
C7611	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	CN7206	*1-821-171-11	P.W.B. CONNECTOR 41P	
C7612	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	CN7207	*1-821-170-11	P.W.B. CONNECTOR 51P	
C7613	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	< DIODE >			
C7615	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	D7400	6-501-528-01	DIODE 1SMA5915BT3G	
C7616	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	D7401	6-501-528-01	DIODE 1SMA5915BT3G	
C7618	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	D7402	6-501-528-01	DIODE 1SMA5915BT3G	
C7620	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	ET7200	1-780-482-11	EARTH TERMINAL	
C7623	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	ET7201	1-780-482-11	EARTH TERMINAL	
C7625	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	ET7202	1-780-482-11	EARTH TERMINAL	
C7627	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	ET7203	1-780-482-11	EARTH TERMINAL	
C7630	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	< FUSE >			
C7631	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	F7400	Δ 1-576-700-11	FUSE	10A 72V
C7633	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	F7401	Δ 1-576-603-11	FUSE	3.15A 24V
C7635	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	F7402	Δ 1-576-603-11	FUSE	3.15A 24V
C7638	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	< FERRITE BEAD >			
C7639	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7200	1-400-461-21	FERRITE	0UH
C7641	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7201	1-400-461-21	FERRITE	0UH
C7643	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7202	1-400-461-21	FERRITE	0UH
C7646	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7203	1-400-461-21	FERRITE	0UH
C7648	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7205	1-400-461-21	FERRITE	0UH
C7650	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7206	1-400-461-21	FERRITE	0UH
C7652	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7210	1-400-461-21	FERRITE	0UH
C7654	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V	FB7211	1-400-461-21	FERRITE	0UH
C7656	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V				
C7658	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V				
C7660	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V				
C7662	1-114-367-11	CERAMIC CHIP 0.1UF	20% 6.3V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB7212	1-400-461-21	FERRITE	OUH	IC7301	6-710-708-01	IC EM6A9320BI-5MGM	
FB7213	1-400-461-21	FERRITE	OUH	IC7302	6-710-708-01	IC EM6A9320BI-5MGM	
FB7214	1-400-461-21	FERRITE	OUH	IC7400	6-710-922-01	IC BD9853AFV-E2	
FB7215	1-400-461-21	FERRITE	OUH	IC7401	6-710-922-01	IC BD9853AFV-E2	
FB7216	1-400-461-21	FERRITE	OUH	IC7403	6-709-932-01	IC MM3141CNRE	
FB7224	1-400-461-21	FERRITE	OUH	IC7404	6-711-116-01	IC NJM2878F3-05 (TE2)	
FB7225	1-400-461-21	FERRITE	OUH	< COIL >			
FB7226	1-400-461-21	FERRITE	OUH	L7200	1-457-038-11	INDUCTOR	OUH
FB7227	1-400-461-21	FERRITE	OUH	L7201	1-457-038-11	INDUCTOR	OUH
FB7232	1-400-461-21	FERRITE	OUH	L7202	1-457-038-11	INDUCTOR	OUH
FB7233	1-400-461-21	FERRITE	OUH	L7203	1-457-038-11	INDUCTOR	OUH
FB7234	1-400-461-21	FERRITE	OUH	L7204	1-457-038-11	INDUCTOR	OUH
FB7236	1-400-580-21	FERRITE	OUH	L7205	1-457-038-11	INDUCTOR	OUH
FB7237	1-400-580-21	FERRITE	OUH	L7206	1-457-038-11	INDUCTOR	OUH
FB7238	1-400-580-21	FERRITE	OUH	L7207	1-457-038-11	INDUCTOR	OUH
FB7240	1-400-461-21	FERRITE	OUH	L7208	1-457-038-11	INDUCTOR	OUH
FB7301	1-400-382-11	FERRITE	OUH	L7209	1-457-038-11	INDUCTOR	OUH
FB7303	1-400-382-11	FERRITE	OUH	L7210	1-457-038-11	INDUCTOR	OUH
FB7304	1-400-461-21	FERRITE	OUH	L7211	1-457-038-11	INDUCTOR	OUH
FB7305	1-400-461-21	FERRITE	OUH	L7400	1-416-344-11	INDUCTOR	10UH
FB7306	1-400-833-21	FERRITE	OUH	L7403	1-457-428-11	INDUCTOR	4.7UH
FB7408	1-400-580-21	FERRITE	OUH	L7404	1-419-939-21	INDUCTOR	4.7UH
FB7409	1-400-580-21	FERRITE	OUH	L7406	1-416-344-11	INDUCTOR	10UH
FB7410	1-400-580-21	FERRITE	OUH	< TRANSISTOR >			
FB7412	1-400-461-21	FERRITE	OUH	Q7207	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
FB7413	1-400-461-21	FERRITE	OUH	Q7400	6-551-456-01	TRANSISTOR RTR020P02TL	
FB7500	1-400-461-21	FERRITE	OUH	Q7401	6-551-456-01	TRANSISTOR RTR020P02TL	
FB7503	1-400-461-21	FERRITE	OUH	Q7403	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
FB7504	1-400-461-21	FERRITE	OUH	Q7404	6-551-273-01	TRANSISTOR RTR025N03TL	
FB7505	1-400-461-21	FERRITE	OUH	Q7405	6-551-273-01	TRANSISTOR RTR025N03TL	
FB7506	1-400-461-21	FERRITE	OUH	Q7407	6-551-123-01	TRANSISTOR RSS065N03FU7TB	
FB7507	1-400-461-21	FERRITE	OUH	Q7410	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
FB7510	1-500-238-11	FERRITE	OUH	Q7411	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
FB7512	1-400-461-21	FERRITE	OUH	Q7413	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB7514	1-500-238-11	FERRITE	OUH	Q7414	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
FB7515	1-500-238-11	FERRITE	OUH	< RESISTOR >			
< FILTER >				R7203	1-400-177-21	FERRITE	OUH
FL7500	1-400-648-11	FERRITE	OUH	R7210	1-208-661-11	METAL CHIP	120 0.5% 1/16W
FL7501	1-400-648-11	FERRITE	OUH	R7211	1-208-661-11	METAL CHIP	120 0.5% 1/16W
FL7502	1-234-494-21	FILTER, EMI REMOVAL (SMD)		R7212	1-208-661-11	METAL CHIP	120 0.5% 1/16W
FL7503	1-400-648-11	FERRITE	OUH	R7213	1-208-661-11	METAL CHIP	120 0.5% 1/16W
< IC >				R7214	1-208-661-11	METAL CHIP	120 0.5% 1/16W
IC7200	6-711-084-02	IC CXD9899AGF		R7215	1-208-661-11	METAL CHIP	120 0.5% 1/16W
IC7207	8-759-592-49	IC TC7SZ125FU (TE85R)		R7216	1-208-661-11	METAL CHIP	120 0.5% 1/16W
IC7208	6-704-566-01	IC R3112N291A-TR-FA		R7217	1-208-661-11	METAL CHIP	120 0.5% 1/16W
IC7209	6-704-566-01	IC R3112N291A-TR-FA		R7218	1-208-661-11	METAL CHIP	120 0.5% 1/16W
IC7300	6-707-373-01	IC TPS51100DGQR					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R7219	1-208-661-11	METAL CHIP	120	0.5%	1/16W	R7407	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R7220	1-208-661-11	METAL CHIP	120	0.5%	1/16W	R7408	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R7221	1-208-661-11	METAL CHIP	120	0.5%	1/16W	R7409	1-220-803-81	RES-CHIP	4.7	5%	1/16W
R7253	1-218-941-11	RES-CHIP	100	5%	1/16W	R7411	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R7257	1-218-941-11	RES-CHIP	100	5%	1/16W	R7412	1-218-990-81	SHORT CHIP	0		
R7263	1-400-177-21	FERRITE	0UH			R7413	1-208-713-11	METAL CHIP	18K	0.5%	1/16W
R7264	1-400-177-21	FERRITE	0UH			R7414	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R7265	1-400-177-21	FERRITE	0UH			R7415	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R7266	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7417	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R7270	1-218-990-81	SHORT CHIP	0			R7419	1-220-803-81	RES-CHIP	4.7	5%	1/16W
R7271	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R7420	1-218-990-81	SHORT CHIP	0		
R7272	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R7422	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7274	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R7424	1-218-990-81	SHORT CHIP	0		
R7278	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7425	1-220-803-81	RES-CHIP	4.7	5%	1/16W
R7280	1-218-990-81	SHORT CHIP	0			R7426	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7284	1-218-990-81	SHORT CHIP	0			R7427	1-218-990-81	SHORT CHIP	0		
R7285	1-218-953-11	RES-CHIP	1K	5%	1/16W	R7430	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7289	1-218-965-11	RES-CHIP	10K	5%	1/16W	R7436	1-218-970-11	RES-CHIP	27K	5%	1/16W
R7290	1-218-990-81	SHORT CHIP	0			R7438	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R7301	1-218-935-11	RES-CHIP	33	5%	1/16W	R7439	1-218-990-81	SHORT CHIP	0		
R7302	1-218-935-11	RES-CHIP	33	5%	1/16W	R7440	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R7303	1-218-935-11	RES-CHIP	33	5%	1/16W	R7441	1-218-990-81	SHORT CHIP	0		
R7304	1-218-935-11	RES-CHIP	33	5%	1/16W	R7445	1-218-990-81	SHORT CHIP	0		
R7309	1-218-990-81	SHORT CHIP	0			R7446	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7310	1-218-935-11	RES-CHIP	33	5%	1/16W	R7449	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7311	1-218-935-11	RES-CHIP	33	5%	1/16W	R7450	1-220-803-81	RES-CHIP	4.7	5%	1/16W
R7312	1-218-939-11	RES-CHIP	68	5%	1/16W	R7456	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R7313	1-218-939-11	RES-CHIP	68	5%	1/16W	R7457	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7314	1-218-939-11	RES-CHIP	68	5%	1/16W	R7458	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7316	1-218-939-11	RES-CHIP	68	5%	1/16W	R7459	1-218-990-81	SHORT CHIP	0		
R7318	1-218-935-11	RES-CHIP	33	5%	1/16W	R7460	1-218-990-81	SHORT CHIP	0		
R7319	1-218-935-11	RES-CHIP	33	5%	1/16W	R7461	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R7320	1-218-935-11	RES-CHIP	33	5%	1/16W	R7462	1-216-799-11	METAL CHIP	15	5%	1/10W
R7321	1-218-935-11	RES-CHIP	33	5%	1/16W	R7463	1-216-799-11	METAL CHIP	15	5%	1/10W
R7322	1-218-939-11	RES-CHIP	68	5%	1/16W	R7464	1-216-799-11	METAL CHIP	15	5%	1/10W
R7323	1-218-939-11	RES-CHIP	68	5%	1/16W	R7465	1-216-799-11	METAL CHIP	15	5%	1/10W
R7324	1-218-939-11	RES-CHIP	68	5%	1/16W	R7466	1-216-799-11	METAL CHIP	15	5%	1/10W
R7325	1-218-939-11	RES-CHIP	68	5%	1/16W	R7467	1-216-799-11	METAL CHIP	15	5%	1/10W
R7326	1-218-939-11	RES-CHIP	68	5%	1/16W	R7468	1-216-799-11	METAL CHIP	15	5%	1/10W
R7327	1-218-939-11	RES-CHIP	68	5%	1/16W	R7469	1-216-799-11	METAL CHIP	15	5%	1/10W
R7328	1-218-939-11	RES-CHIP	68	5%	1/16W	R7470	1-216-799-11	METAL CHIP	15	5%	1/10W
R7329	1-218-939-11	RES-CHIP	68	5%	1/16W	R7475	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7331	1-216-864-11	SHORT CHIP	0			R7476	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7332	1-216-864-11	SHORT CHIP	0			R7500	1-218-939-11	RES-CHIP	68	5%	1/16W
R7333	1-216-864-11	SHORT CHIP	0			R7501	1-218-935-11	RES-CHIP	33	5%	1/16W
R7402	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R7502	1-218-935-11	RES-CHIP	33	5%	1/16W
R7403	1-220-803-81	RES-CHIP	4.7	5%	1/16W	R7503	1-218-935-11	RES-CHIP	33	5%	1/16W
R7404	1-218-990-81	SHORT CHIP	0			R7504	1-218-935-11	RES-CHIP	33	5%	1/16W
R7405	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R7505	1-218-935-11	RES-CHIP	33	5%	1/16W
R7406	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R7506	1-218-935-11	RES-CHIP	33	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R7507	1-218-935-11	RES-CHIP	33 5% 1/16W	RB7329	1-234-702-11	RES, NETWORK 68	(1005X4)
R7508	1-218-935-11	RES-CHIP	33 5% 1/16W	RB7330	1-242-963-21	RES, NETWORK 33	(1005X4)
R7509	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7331	1-234-702-11	RES, NETWORK 68	(1005X4)
R7510	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7332	1-242-963-21	RES, NETWORK 33	(1005X4)
R7511	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7333	1-234-702-11	RES, NETWORK 68	(1005X4)
R7512	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7334	1-242-963-21	RES, NETWORK 33	(1005X4)
R7513	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7335	1-242-963-21	RES, NETWORK 33	(1005X4)
R7514	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7336	1-242-963-21	RES, NETWORK 33	(1005X4)
R7515	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7500	1-242-963-21	RES, NETWORK 33	(1005X4)
R7516	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7501	1-242-963-21	RES, NETWORK 33	(1005X4)
R7517	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7502	1-234-702-11	RES, NETWORK 68	(1005X4)
R7518	1-218-939-11	RES-CHIP	68 5% 1/16W	RB7503	1-234-702-11	RES, NETWORK 68	(1005X4)
R7524	1-218-941-11	RES-CHIP	100 5% 1/16W	RB7504	1-234-702-11	RES, NETWORK 68	(1005X4)
R7525	1-216-864-11	SHORT CHIP	0	RB7505	1-242-963-21	RES, NETWORK 33	(1005X4)
< RESISTOR CHIP >				RB7506	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7203	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB7507	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7205	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB7508	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7206	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB7509	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7211	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7510	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7218	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB7511	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7300	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7512	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7301	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7513	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7302	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7514	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7303	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7515	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7304	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7516	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7305	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7517	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7306	1-242-963-21	RES, NETWORK 33	(1005X4)	RB7518	1-242-963-21	RES, NETWORK 33	(1005X4)
RB7307	1-242-963-21	RES, NETWORK 33	(1005X4)	< CRYSTAL >			
RB7308	1-234-702-11	RES, NETWORK 68	(1005X4)	X7200	1-813-974-11	QUARTS CRYSTAL OSCILLATOR	
RB7309	1-234-702-11	RES, NETWORK 68	(1005X4)	X7500	1-813-984-11	OSCILLATOR, CRYSTAL	
RB7310	1-234-702-11	RES, NETWORK 68	(1005X4)	*A-1259-906-A TUE Board, Complete			
RB7311	1-234-702-11	RES, NETWORK 68	(1005X4)	< CAPACITOR >			
RB7312	1-234-702-11	RES, NETWORK 68	(1005X4)	C3100	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB7313	1-234-702-11	RES, NETWORK 68	(1005X4)	C3101	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
RB7314	1-234-702-11	RES, NETWORK 68	(1005X4)	C3102	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
RB7315	1-234-702-11	RES, NETWORK 68	(1005X4)	C3103	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
RB7316	1-234-702-11	RES, NETWORK 68	(1005X4)	C3104	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7317	1-234-702-11	RES, NETWORK 68	(1005X4)	C3106	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB7318	1-234-702-11	RES, NETWORK 68	(1005X4)	C3107	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB7319	1-234-702-11	RES, NETWORK 68	(1005X4)	C3108	1-126-204-11	ELECT CHIP 47UF	20.00% 16V
RB7320	1-234-702-11	RES, NETWORK 68	(1005X4)	C3109	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB7321	1-234-702-11	RES, NETWORK 68	(1005X4)	C3110	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB7322	1-234-702-11	RES, NETWORK 68	(1005X4)	C3111	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB7323	1-234-702-11	RES, NETWORK 68	(1005X4)	C3112	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
RB7324	1-242-963-21	RES, NETWORK 33	(1005X4)	C3113	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
RB7325	1-234-702-11	RES, NETWORK 68	(1005X4)	C3114	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
RB7326	1-242-963-21	RES, NETWORK 33	(1005X4)	C3115	1-114-323-11	CERAMIC CHIP 0.01UF	10% 50V
RB7327	1-234-702-11	RES, NETWORK 68	(1005X4)				
RB7328	1-242-963-21	RES, NETWORK 33	(1005X4)				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

TUE

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3116	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	< FERRITE BEAD >			
C3118	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	FB3100	1-400-180-21	FERRITE	0UH
C3120	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3101	1-400-180-21	FERRITE	0UH
C3122	1-165-667-21	ELECT CHIP 100UF	20% 6.3V	FB3103	1-400-180-21	FERRITE	0UH
C3123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3105	1-400-180-21	FERRITE	0UH
C3125	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	FB3106	1-400-834-11	FERRITE	0UH
C3126	1-165-667-21	ELECT CHIP 100UF	20% 6.3V	FB3107	1-400-834-11	FERRITE	0UH
C3128	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	FB3108	1-400-834-11	FERRITE	0UH
C3129	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	< IC >			
C3130	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	IC3100	6-709-257-01	IC 74LVC4066PW	
C3131	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	IC3200	6-706-106-01	IC NCP1117STAT3	
C3132	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3201	6-710-968-01	IC PQ6CU12X2APQ	
C3134	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3202	6-708-603-01	IC PQ070XNA1ZPH	
C3136	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< COIL >			
C3137	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	L3100	1-469-549-21	INDUCTOR	1UH
C3139	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	L3101	1-469-549-21	INDUCTOR	1UH
C3140	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	L3103	1-416-344-11	INDUCTOR	10UH
C3141	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	L3104	1-416-344-11	INDUCTOR	10UH
C3142	1-112-861-11	ELECT CHIP 150UF	20% 16V	L3200	1-469-555-21	INDUCTOR	10UH
C3143	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	L3201	1-412-060-11	INDUCTOR	22UH
C3200	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	L3202	1-416-345-11	INDUCTOR	22UH
C3201	1-165-882-91	CERAMIC CHIP 2.2UF	50V	L3203	1-416-344-11	INDUCTOR	10UH
C3202	1-100-766-21	ELECT CHIP 47UF	20% 16V	L3205	1-469-561-21	INDUCTOR	100UH
C3203	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	< TRANSISTOR >			
C3204	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	Q3100	8-729-027-43	TRANSISTOR DTC114EKA-T146	
C3205	1-100-162-91	CERAMIC CHIP 1UF	50V	Q3101	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3207	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	Q3102	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF	
C3208	1-165-667-21	ELECT CHIP 100UF	20% 6.3V	Q3103	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3210	1-126-209-11	ELECT CHIP 100UF	20.00% 4V	Q3104	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF	
C3211	1-126-204-11	ELECT CHIP 47UF	20.00% 16V	Q3105	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF	
C3212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	Q3110	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R	
C3215	1-112-807-11	ELECT CHIP 100UF	20% 50V	Q3111	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R	
C3216	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V	Q3112	8-729-027-43	TRANSISTOR DTC114EKA-T146	
C3217	1-112-807-11	ELECT CHIP 100UF	20% 50V	< RESISTOR >			
C3218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	R3101	1-216-864-11	SHORT CHIP	0
< CONNECTOR >				R3103	1-216-864-11	SHORT CHIP	0
CN3102	*1-819-784-21	PIN, CONNECTOR 50P		R3104	1-216-864-11	SHORT CHIP	0
< DIODE >				R3105	1-216-864-11	SHORT CHIP	0
D3200	8-719-056-48	DIODE 1SS388 (TPL3)		R3106	1-216-864-11	SHORT CHIP	0
D3201	8-719-977-81	DIODE DTZ33B		R3107	1-216-864-11	SHORT CHIP	0
ET3100	1-780-482-11	EARTH TERMINAL		R3108	1-216-864-11	SHORT CHIP	0
< FUSE >				R3109	1-218-990-81	SHORT CHIP	0
F3101	Δ 1-576-842-11	FUSE	0.63A 32V	R3110	1-218-990-81	SHORT CHIP	0
F3102	Δ 1-576-842-11	FUSE	0.63A 32V	R3111	1-218-990-81	SHORT CHIP	0

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3112	1-218-990-81	SHORT CHIP	0			R3184	1-218-941-81	RES-CHIP	100	5%	1/16W
R3113	1-218-990-81	SHORT CHIP	0			R3187	1-218-990-81	SHORT CHIP	0		
R3114	1-218-990-81	SHORT CHIP	0			R3188	1-218-990-81	SHORT CHIP	0		
R3115	1-218-990-81	SHORT CHIP	0			R3189	1-218-990-81	SHORT CHIP	0		
R3116	1-218-990-81	SHORT CHIP	0			R3190	1-218-933-11	RES-CHIP	22	5%	1/16W
R3117	1-218-990-81	SHORT CHIP	0			R3191	1-218-933-11	RES-CHIP	22	5%	1/16W
R3118	1-218-990-81	SHORT CHIP	0			R3192	1-218-990-81	SHORT CHIP	0		
R3119	1-218-990-81	SHORT CHIP	0			R3193	1-218-990-81	SHORT CHIP	0		
R3120	1-216-864-11	SHORT CHIP	0			R3194	1-218-990-81	SHORT CHIP	0		
R3121	1-216-864-11	SHORT CHIP	0			R3195	1-218-990-81	SHORT CHIP	0		
R3122	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3196	1-218-990-81	SHORT CHIP	0		
R3123	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3197	1-218-990-81	SHORT CHIP	0		
R3124	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3198	1-218-990-81	SHORT CHIP	0		
R3125	1-218-941-81	RES-CHIP	100	5%	1/16W	R3199	1-218-990-81	SHORT CHIP	0		
R3126	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3201	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R3128	1-218-941-81	RES-CHIP	100	5%	1/16W	R3202	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R3129	1-218-933-11	RES-CHIP	22	5%	1/16W	R3203	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R3130	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R3204	1-218-948-11	RES-CHIP	390	5%	1/16W
R3133	1-218-949-11	RES-CHIP	470	5%	1/16W	R3205	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R3135	1-218-949-11	RES-CHIP	470	5%	1/16W	R3206	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R3136	1-218-937-11	RES-CHIP	47	5%	1/16W	R3208	1-218-972-11	RES-CHIP	39K	5%	1/16W
R3137	1-218-937-11	RES-CHIP	47	5%	1/16W	R3209	1-218-990-81	SHORT CHIP	0		
R3139	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3210	1-218-982-11	RES-CHIP	270K	5%	1/16W
R3142	1-218-933-11	RES-CHIP	22	5%	1/16W	R3211	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R3146	1-218-933-11	RES-CHIP	22	5%	1/16W	R3212	1-216-864-11	SHORT CHIP	0		
R3149	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3213	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3151	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3291	1-216-864-11	SHORT CHIP	0		
R3153	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3293	1-218-990-81	SHORT CHIP	0		
R3154	1-218-990-81	SHORT CHIP	0			R3295	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3155	1-218-990-81	SHORT CHIP	0			R3296	1-218-990-81	SHORT CHIP	0		
R3156	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3297	1-218-990-81	SHORT CHIP	0		
R3157	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3298	1-218-990-81	SHORT CHIP	0		
R3158	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3299	1-218-990-81	SHORT CHIP	0		
R3159	1-218-929-11	RES-CHIP	10	5%	1/16W	< TUNER >					
R3161	1-218-965-11	RES-CHIP	10K	5%	1/16W	TU3100	8-597-613-00	TUNER UNIT, DIGITAL BTD-HF401Z			
R3162	1-218-929-11	RES-CHIP	10	5%	1/16W	*A-1259-904-A AVC Board, Complete					
R3165	1-218-990-81	SHORT CHIP	0			2-586-175-01	SHEET B, RADIATION				
R3166	1-218-990-81	SHORT CHIP	0			A2300	4-098-157-01	HEAT SINK (DTT)			
R3167	1-218-990-81	SHORT CHIP	0			< CAPACITOR >					
R3168	1-218-990-81	SHORT CHIP	0			C2101	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
R3169	1-218-990-81	SHORT CHIP	0			C2200	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
R3170	1-216-295-91	SHORT CHIP	0			C2300	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
R3171	1-216-295-91	SHORT CHIP	0			C2301	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
R3172	1-218-990-81	SHORT CHIP	0			C2302	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	
R3173	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3174	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3177	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3178	1-218-990-81	SHORT CHIP	0								
R3180	1-216-295-91	SHORT CHIP	0								
R3183	1-218-941-81	RES-CHIP	100	5%	1/16W						

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C2303	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C2446	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2304	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V	C2447	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2308	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2448	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C2309	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2449	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2400	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2450	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2401	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2451	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2402	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2452	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2403	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2453	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2404	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2454	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2405	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2455	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2406	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2456	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C2407	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2408	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2458	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2409	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2459	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C2410	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2460	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2411	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2461	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2412	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2462	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2413	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2463	1-100-390-21	ELECT CHIP 180UF	20% 6.3V
C2414	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2464	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V
C2415	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2465	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2416	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2466	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2417	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2467	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2418	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2468	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2469	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C2420	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2470	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2421	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2471	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2422	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2472	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2423	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2473	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2474	1-126-412-11	ELECT CHIP 220UF	20.00% 4V
C2425	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2475	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2426	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2476	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2427	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2477	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2428	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2478	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2429	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2479	1-126-412-11	ELECT CHIP 220UF	20.00% 4V
C2430	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2431	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2501	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C2432	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2502	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V
C2433	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2434	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2435	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2505	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V
C2436	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2438	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2508	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2439	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2509	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C2440	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2600	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V
C2441	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2602	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2442	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C2603	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2443	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2604	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2444	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2605	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2445	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2606	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
C2607	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2747	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2608	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2748	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2609	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2749	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2700	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2750	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2701	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2751	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2752	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2703	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2753	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2704	1-112-066-11	CERAMIC CHIP 10UF	10%	10V		C2754	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2705	1-114-332-11	CERAMIC CHIP 22UF	10%	6.3V		C2755	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2706	1-114-332-11	CERAMIC CHIP 22UF	10%	6.3V		C2756	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2707	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2757	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2708	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2758	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2709	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2759	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2710	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2760	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2711	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2761	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2712	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2762	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2713	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2763	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2714	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2764	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2715	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2765	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2716	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2766	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2717	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2767	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2718	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2768	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2719	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2769	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2720	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2770	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2721	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2771	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2722	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2772	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2723	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2773	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2724	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2774	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2725	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2775	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2726	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2776	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2727	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2777	1-114-332-11	CERAMIC CHIP 22UF	10%	6.3V	
C2728	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2778	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2729	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2779	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2730	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2780	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2731	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2781	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2732	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2782	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2733	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2783	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2734	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2784	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2735	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2785	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2736	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2786	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2737	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2787	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2738	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2788	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2739	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2789	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2740	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2790	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2741	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2791	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2742	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2792	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2743	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2793	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2744	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2794	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C2745	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V		C2795	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	
C2746	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V		C2796	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

AVC

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C2797	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	ET2100	1-780-482-11	EARTH TERMINAL	
C2798	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	ET2101	1-780-482-11	EARTH TERMINAL	
C2799	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	ET2102	1-780-482-11	EARTH TERMINAL	
C2800	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	ET2103	1-780-482-11	EARTH TERMINAL	
C2801	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	ET2104	1-780-482-11	EARTH TERMINAL	
C2802	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	ET2105	1-780-482-11	EARTH TERMINAL	
C2803	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	< FUSE >			
C2804	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	F2801	Δ 1-576-596-21	FUSE	1A 32V
C2805	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	F2802	Δ 1-576-570-11	FUSE	0.63A 32V
C2806	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V	< FERRITE BEAD >			
C2807	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V	FB2200	1-400-334-21	FERRITE	0UH
C2808	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	FB2300	1-400-461-21	FERRITE	0UH
C2809	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	FB2301	1-400-334-21	FERRITE	0UH
C2810	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2302	1-469-324-21	FERRITE	0UH
C2811	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2400	1-400-834-11	FERRITE	0UH
C2812	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2401	1-469-379-11	FERRITE	0UH
C2813	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	FB2402	1-400-580-21	FERRITE	0UH
C2814	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	FB2500	1-469-670-21	FERRITE	0UH
C2815	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2501	1-400-461-21	FERRITE	0UH
C2816	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	FB2502	1-400-334-21	FERRITE	0UH
C2817	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	FB2600	1-400-141-22	FERRITE	0UH
C2818	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2700	1-400-461-21	FERRITE	0UH
C2819	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB2701	1-400-461-21	FERRITE	0UH
C2821	1-131-661-21	ELECT CHIP 100UF	20% 10V	< IC >			
C2823	1-164-864-11	CERAMIC CHIP 39PF	5.00% 50V	IC2200	6-709-684-01	IC S29GL064A90TFIR30E	
C2825	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	IC2205	6-711-391-01	IC BCM7402ZKPB1G-P31	
C2827	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	IC2401	6-709-596-01	IC HYB25DC256160CE-5	
C2831	1-112-514-91	CERAMIC CHIP 1500PF	5% 50V	IC2402	6-709-596-01	IC HYB25DC256160CE-5	
C2833	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	IC2403	6-709-596-01	IC HYB25DC256160CE-5	
C2835	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	IC2404	6-707-035-01	IC LP2996MRX	
C2837	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	IC2405	6-709-596-01	IC HYB25DC256160CE-5	
C2839	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	IC2600	6-807-693-01	IC EPM240T100C3N-AVC01	
C2841	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	IC2700	6-703-175-01	IC PST3629UL	
C2845	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	IC2702	6-706-487-01	IC TC7SH08FU(T5RSOYJF)	
C2848	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V	IC2801	6-710-922-01	IC BD9853AFV-E2	
C2849	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	< COIL >			
C2851	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	L2701	1-412-944-11	INDUCTOR	2.7UH
C2858	1-128-391-11	ELECT CHIP 330UF	20% 6.3V	L2801	1-457-428-11	INDUCTOR	4.7UH
C2859	1-100-583-21	ELECT CHIP 470UF	20% 4V	L2803	1-457-428-11	INDUCTOR	4.7UH
< CONNECTOR >				< TRANSISTOR >			
CN2100	*1-817-717-61	CONNECTOR, BOARD TO BOARD 80P		Q2300	8-729-928-81	TRANSISTOR DTC144EE	
CN2301	*1-819-475-11	HEADER ASSEMBLY FOR PWB 7P		Q2801	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
CN2700	*1-770-305-51	CONNECTOR, FFC/FPC 10P		Q2803	6-550-354-01	TRANSISTOR RTQ035P02TR	
< DIODE >				Q2805	6-551-123-01	TRANSISTOR RSS065N03FU7TB	
D2700	6-500-335-01	DIODE MC2838-T112-1					
D2805	6-501-528-01	DIODE 1SMA5915BT3G					
D2807	6-501-528-01	DIODE 1SMA5915BT3G					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
Q2807	6-551-334-01	TRANSISTOR RTL035N03TR				R2342	1-218-953-11	RES-CHIP	1K	5%	1/16W
Q2808	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF				R2343	1-218-933-11	RES-CHIP	22	5%	1/16W
Q2809	8-729-928-81	TRANSISTOR DTC144EE				R2344	1-218-933-11	RES-CHIP	22	5%	1/16W
< RESISTOR >						R2345	1-218-933-11	RES-CHIP	22	5%	1/16W
						R2346	1-218-933-11	RES-CHIP	22	5%	1/16W
R2101	1-218-990-81	SHORT CHIP	0			R2347	1-218-933-11	RES-CHIP	22	5%	1/16W
R2102	1-218-990-81	SHORT CHIP	0			R2348	1-218-933-11	RES-CHIP	22	5%	1/16W
R2110	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2350	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R2111	1-218-990-81	SHORT CHIP	0			R2351	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R2112	1-218-990-81	SHORT CHIP	0			R2352	1-218-990-81	SHORT CHIP	0		
R2113	1-218-990-81	SHORT CHIP	0			R2354	1-218-990-81	SHORT CHIP	0		
R2114	1-218-990-81	SHORT CHIP	0			R2355	1-218-990-81	SHORT CHIP	0		
R2115	1-218-990-81	SHORT CHIP	0			R2400	1-218-990-81	SHORT CHIP	0		
R2116	1-218-990-81	SHORT CHIP	0			R2403	1-218-933-11	RES-CHIP	22	5%	1/16W
R2117	1-216-295-91	SHORT CHIP	0			R2404	1-218-990-81	SHORT CHIP	0		
R2118	1-216-295-91	SHORT CHIP	0			R2405	1-218-990-81	SHORT CHIP	0		
R2119	1-218-990-81	SHORT CHIP	0			R2406	1-218-933-11	RES-CHIP	22	5%	1/16W
R2120	1-218-990-81	SHORT CHIP	0			R2407	1-218-933-11	RES-CHIP	22	5%	1/16W
R2121	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2408	1-218-933-11	RES-CHIP	22	5%	1/16W
R2122	1-218-990-81	SHORT CHIP	0			R2409	1-218-933-11	RES-CHIP	22	5%	1/16W
R2123	1-216-295-91	SHORT CHIP	0			R2410	1-218-933-11	RES-CHIP	22	5%	1/16W
R2124	1-218-990-81	SHORT CHIP	0			R2411	1-218-933-11	RES-CHIP	22	5%	1/16W
R2125	1-218-990-81	SHORT CHIP	0			R2412	1-218-933-11	RES-CHIP	22	5%	1/16W
R2126	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2413	1-218-933-11	RES-CHIP	22	5%	1/16W
R2200	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2414	1-218-937-11	RES-CHIP	47	5%	1/16W
R2201	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2415	1-218-937-11	RES-CHIP	47	5%	1/16W
R2203	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2416	1-218-937-11	RES-CHIP	47	5%	1/16W
R2204	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2417	1-218-937-11	RES-CHIP	47	5%	1/16W
R2205	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2418	1-218-937-11	RES-CHIP	47	5%	1/16W
R2206	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2419	1-218-937-11	RES-CHIP	47	5%	1/16W
R2207	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2420	1-218-937-11	RES-CHIP	47	5%	1/16W
R2209	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2421	1-218-937-11	RES-CHIP	47	5%	1/16W
R2212	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2422	1-218-929-11	RES-CHIP	10	5%	1/16W
R2214	1-218-933-11	RES-CHIP	22	5%	1/16W	R2423	1-218-929-11	RES-CHIP	10	5%	1/16W
R2215	1-218-933-11	RES-CHIP	22	5%	1/16W	R2424	1-218-929-11	RES-CHIP	10	5%	1/16W
R2217	1-218-933-11	RES-CHIP	22	5%	1/16W	R2425	1-218-929-11	RES-CHIP	10	5%	1/16W
R2218	1-218-933-11	RES-CHIP	22	5%	1/16W	R2426	1-218-933-11	RES-CHIP	22	5%	1/16W
R2219	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2427	1-218-939-11	RES-CHIP	68	5%	1/16W
R2221	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2428	1-218-939-11	RES-CHIP	68	5%	1/16W
R2222	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2429	1-218-939-11	RES-CHIP	68	5%	1/16W
R2223	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2430	1-218-939-11	RES-CHIP	68	5%	1/16W
R2224	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2431	1-218-939-11	RES-CHIP	68	5%	1/16W
R2225	1-218-990-81	SHORT CHIP	0			R2432	1-218-939-11	RES-CHIP	68	5%	1/16W
R2300	1-216-864-11	SHORT CHIP	0			R2433	1-218-939-11	RES-CHIP	68	5%	1/16W
R2302	1-216-864-11	SHORT CHIP	0			R2434	1-218-939-11	RES-CHIP	68	5%	1/16W
R2304	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R2435	1-218-939-11	RES-CHIP	68	5%	1/16W
R2308	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2436	1-218-939-11	RES-CHIP	68	5%	1/16W
R2339	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R2437	1-218-939-11	RES-CHIP	68	5%	1/16W
R2340	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2438	1-218-939-11	RES-CHIP	68	5%	1/16W
R2341	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2439	1-218-939-11	RES-CHIP	68	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R2440	1-218-990-81	SHORT CHIP	0			R2531	1-218-937-11	RES-CHIP	47	5%	1/16W
R2441	1-218-935-11	RES-CHIP	33	5%	1/16W	R2532	1-218-937-11	RES-CHIP	47	5%	1/16W
R2442	1-218-939-11	RES-CHIP	68	5%	1/16W	R2536	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2443	1-218-939-11	RES-CHIP	68	5%	1/16W	R2537	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2444	1-218-939-11	RES-CHIP	68	5%	1/16W	R2539	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2445	1-218-939-11	RES-CHIP	68	5%	1/16W	R2540	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2446	1-218-939-11	RES-CHIP	68	5%	1/16W	R2542	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2447	1-218-939-11	RES-CHIP	68	5%	1/16W	R2543	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2448	1-218-939-11	RES-CHIP	68	5%	1/16W	R2546	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2449	1-218-939-11	RES-CHIP	68	5%	1/16W	R2547	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2450	1-218-939-11	RES-CHIP	68	5%	1/16W	R2553	1-218-990-81	SHORT CHIP	0		
R2451	1-218-939-11	RES-CHIP	68	5%	1/16W	R2555	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2452	1-218-939-11	RES-CHIP	68	5%	1/16W	R2571	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2453	1-218-939-11	RES-CHIP	68	5%	1/16W	R2572	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2454	1-218-939-11	RES-CHIP	68	5%	1/16W	R2573	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2455	1-218-939-11	RES-CHIP	68	5%	1/16W	R2574	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2456	1-218-939-11	RES-CHIP	68	5%	1/16W	R2575	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2457	1-218-939-11	RES-CHIP	68	5%	1/16W	R2576	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2458	1-218-990-81	SHORT CHIP	0			R2577	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2459	1-218-935-11	RES-CHIP	33	5%	1/16W	R2578	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2460	1-218-933-11	RES-CHIP	22	5%	1/16W	R2579	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2461	1-218-933-11	RES-CHIP	22	5%	1/16W	R2581	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2462	1-218-990-81	SHORT CHIP	0			R2582	1-218-945-11	RES-CHIP	220	5%	1/16W
R2463	1-218-935-11	RES-CHIP	33	5%	1/16W	R2600	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2464	1-218-990-81	SHORT CHIP	0			R2601	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2465	1-218-935-11	RES-CHIP	33	5%	1/16W	R2602	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2466	1-218-933-11	RES-CHIP	22	5%	1/16W	R2604	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2467	1-218-933-11	RES-CHIP	22	5%	1/16W	R2605	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2468	1-218-990-81	SHORT CHIP	0			R2608	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2469	1-218-935-11	RES-CHIP	33	5%	1/16W	R2609	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2470	1-218-990-81	SHORT CHIP	0			R2611	1-218-933-11	RES-CHIP	22	5%	1/16W
R2471	1-218-935-11	RES-CHIP	33	5%	1/16W	R2612	1-218-933-11	RES-CHIP	22	5%	1/16W
R2472	1-218-933-11	RES-CHIP	22	5%	1/16W	R2613	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2473	1-218-933-11	RES-CHIP	22	5%	1/16W	R2623	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2477	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2630	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2478	1-218-990-81	SHORT CHIP	0			R2631	1-218-933-11	RES-CHIP	22	5%	1/16W
R2480	1-218-990-81	SHORT CHIP	0			R2632	1-218-933-11	RES-CHIP	22	5%	1/16W
R2481	1-218-935-11	RES-CHIP	33	5%	1/16W	R2633	1-218-933-11	RES-CHIP	22	5%	1/16W
R2483	1-218-990-81	SHORT CHIP	0			R2634	1-218-933-11	RES-CHIP	22	5%	1/16W
R2484	1-218-935-11	RES-CHIP	33	5%	1/16W	R2635	1-218-933-11	RES-CHIP	22	5%	1/16W
R2485	1-218-933-11	RES-CHIP	22	5%	1/16W	R2636	1-218-933-11	RES-CHIP	22	5%	1/16W
R2486	1-218-933-11	RES-CHIP	22	5%	1/16W	R2637	1-218-933-11	RES-CHIP	22	5%	1/16W
R2508	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2638	1-218-933-11	RES-CHIP	22	5%	1/16W
R2519	1-218-953-11	RES-CHIP	1K	5%	1/16W	R2639	1-218-933-11	RES-CHIP	22	5%	1/16W
R2521	1-218-965-11	RES-CHIP	10K	5%	1/16W	R2640	1-218-933-11	RES-CHIP	22	5%	1/16W
R2526	1-208-677-11	METAL CHIP	560	0.5%	1/16W	R2641	1-218-933-11	RES-CHIP	22	5%	1/16W
R2527	1-208-677-11	METAL CHIP	560	0.5%	1/16W	R2642	1-218-933-11	RES-CHIP	22	5%	1/16W
R2528	1-218-937-11	RES-CHIP	47	5%	1/16W	R2643	1-218-933-11	RES-CHIP	22	5%	1/16W
R2529	1-218-937-11	RES-CHIP	47	5%	1/16W	R2644	1-218-933-11	RES-CHIP	22	5%	1/16W
R2530	1-218-937-11	RES-CHIP	47	5%	1/16W	R2645	1-218-933-11	RES-CHIP	22	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R2646	1-218-933-11	RES-CHIP	22	5%	1/16W	R2808	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R2651	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2809	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R2652	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2811	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R2653	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2815	1-218-990-81	SHORT CHIP	0		
R2655	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2819	1-218-990-81	SHORT CHIP	0		
R2657	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2821	1-218-990-81	SHORT CHIP	0		
R2676	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2824	1-218-990-81	SHORT CHIP	0		
R2678	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2825	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R2680	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2835	1-218-990-81	SHORT CHIP	0		
R2682	1-218-937-11	RES-CHIP	47	5%	1/16W	R2837	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R2687	1-218-937-11	RES-CHIP	47	5%	1/16W	R2840	1-218-990-81	SHORT CHIP	0		
R2688	1-218-937-11	RES-CHIP	47	5%	1/16W	R2841	1-218-949-11	RES-CHIP	470	5%	1/16W
R2689	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2845	1-208-906-81	METAL CHIP	6.2K	0.5%	1/16W
R2690	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2846	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R2692	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2847	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R2694	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2849	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R2695	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2852	1-216-864-11	SHORT CHIP	0		
R2707	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2856	1-216-864-11	SHORT CHIP	0		
R2709	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2867	1-218-941-81	RES-CHIP	100	5%	1/16W
R2712	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R2868	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2713	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	< RESISTOR CHIP >					
R2714	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB2011	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2715	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB2012	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2717	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB2013	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2718	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB2014	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2733	1-218-933-11	RES-CHIP	22	5%	1/16W	RB2027	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2737	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB2032	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)		
R2754	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2300	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)		
R2757	1-216-295-91	SHORT CHIP	0			RB2400	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2758	1-216-295-91	SHORT CHIP	0			RB2401	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2759	1-216-295-91	SHORT CHIP	0			RB2402	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2760	1-216-295-91	SHORT CHIP	0			RB2403	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2766	1-218-941-81	RES-CHIP	100	5%	1/16W	RB2404	1-234-943-21	RES, NETWORK 22	(1005X4)		
R2767	1-218-941-81	RES-CHIP	100	5%	1/16W	RB2405	1-234-943-21	RES, NETWORK 22	(1005X4)		
R2769	1-218-834-11	METAL CHIP	300	0.5%	1/10W	RB2406	1-234-943-21	RES, NETWORK 22	(1005X4)		
R2770	1-218-834-11	METAL CHIP	300	0.5%	1/10W	RB2407	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2771	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2408	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2774	1-216-295-91	SHORT CHIP	0			RB2409	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2775	1-216-864-11	SHORT CHIP	0			RB2410	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2776	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2411	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2778	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2412	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2780	1-218-990-81	SHORT CHIP	0			RB2413	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2782	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB2414	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R2785	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB2415	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2786	1-218-937-11	RES-CHIP	47	5%	1/16W	RB2416	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2787	1-218-937-11	RES-CHIP	47	5%	1/16W	RB2417	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2788	1-218-929-11	RES-CHIP	10	5%	1/16W	RB2418	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)		
R2801	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	RB2419	1-234-702-11	RES, NETWORK 68	(1005X4)		
R2806	1-218-949-11	RES-CHIP	470	5%	1/16W	RB2420	1-234-702-11	RES, NETWORK 68	(1005X4)		
R2807	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W						

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

AVC **FB2**

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB2421	1-234-702-11	RES, NETWORK 68	(1005X4)	C3519	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2422	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C3520	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2423	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3521	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2424	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3522	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2425	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3523	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2426	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3524	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2427	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3525	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2428	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3526	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2429	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3527	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2430	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C3530	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2500	1-234-375-21	RES, NETWORK 1K	(1005X4)	C3534	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
RB2501	1-234-378-11	RES, NETWORK 10K	(1005X4)	C3535	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2602	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C3536	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
RB2603	1-234-943-21	RES, NETWORK 22	(1005X4)	C3537	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2604	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C3538	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB2605	1-234-943-21	RES, NETWORK 22	(1005X4)	C3539	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
< CRYSTAL >				C3540	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
X2801	1-814-061-21	VIBRATOR, CRYSTAL		C3541	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
 *A-1362-569-A FB2 Board, Complete (X)				C3542	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
A4800	1-694-802-21	CONTACT TERMINAL	Revision 2.0	C3543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
A4801	1-694-802-21	CONTACT TERMINAL	(Click inside red box	C3544	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
A4900	1-694-974-21	CONTACT TERMINAL	to see related change)	C3545	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
A4901	1-694-974-21	CONTACT TERMINAL		C3546	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
A4902	1-694-974-21	CONTACT TERMINAL		C3547	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
A4903	1-694-974-21	CONTACT TERMINAL		C3552	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
A4905	1-694-974-21	CONTACT TERMINAL		C3553	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V
< CAPACITOR >				C3554	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C3500	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3555	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C3501	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3556	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3502	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3557	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3558	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V
C3504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3600	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3601	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3602	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3603	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3508	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3604	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3509	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3605	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3510	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3606	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3607	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3512	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3608	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3513	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3609	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3514	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3610	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3515	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3611	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3516	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3700	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3517	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3701	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3518	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3702	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
				C3703	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
				C3704	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
				C3705	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
				C3707	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3708	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3806	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3709	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3807	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3710	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3808	1-100-591-91	CERAMIC CHIP 1UF	10% 25V
C3711	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3809	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3713	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3810	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3714	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3811	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3715	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3813	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3716	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3814	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3717	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3815	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C3718	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3816	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C3719	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3817	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C3720	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3818	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V
C3721	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3820	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3722	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3821	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C3723	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3822	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V
C3724	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3824	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3725	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3825	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3726	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3826	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3727	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3828	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3728	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3831	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3729	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3832	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3730	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3833	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3731	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3834	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3732	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3835	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3733	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3836	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3734	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3837	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3735	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3838	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C3736	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C3839	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C3737	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3840	1-164-936-11	CERAMIC CHIP 680PF	10.00% 50V
C3738	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3841	1-164-936-11	CERAMIC CHIP 680PF	10.00% 50V
C3739	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3842	1-135-366-11	ELECT CHIP 100UF	20% 16V
C3740	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3900	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3741	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3901	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3742	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3902	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C3743	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3903	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3744	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3904	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3745	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3905	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C3746	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3906	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3747	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3907	1-135-366-11	ELECT CHIP 100UF	20% 16V
C3748	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3908	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V
C3749	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3909	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C3750	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3910	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C3751	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3912	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V
C3752	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3913	1-100-436-91	CERAMIC CHIP 0.033UF	10% 25V
C3800	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3914	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3801	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3915	1-100-591-91	CERAMIC CHIP 1UF	10% 25V
C3802	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3916	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C3803	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V	C3918	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C3804	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3919	1-100-591-91	CERAMIC CHIP 1UF	10% 25V
C3805	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3920	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C3921	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4118	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C3923	1-100-436-91	CERAMIC CHIP 0.033UF	10%	25V	C4120	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C3924	1-115-412-11	CERAMIC CHIP 680PF	5.00%	25V	C4121	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C3925	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4122	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C3926	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4123	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C3927	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4128	1-164-245-11	CERAMIC CHIP 0.015UF	10.00%	25V
C3929	1-112-672-81	CERAMIC CHIP 330PF	5%	50V	C4129	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C3930	1-125-891-11	CERAMIC CHIP 0.47UF	10.00%	10V	C4130	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C3931	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4131	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C3932	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4136	1-164-868-11	CERAMIC CHIP 56PF	5.00%	50V
C3933	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4138	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3934	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4139	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3935	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4142	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3936	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4143	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C3937	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4146	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C3938	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4147	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C3939	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4149	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C3940	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4150	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3945	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C4151	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C3946	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C4152	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C3947	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4153	1-164-868-11	CERAMIC CHIP 56PF	5.00%	50V
C3948	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4154	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C3949	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V	C4155	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4000	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4156	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C4001	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4157	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4002	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4158	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C4003	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4159	1-164-245-11	CERAMIC CHIP 0.015UF	10.00%	25V
C4005	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4160	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C4006	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4162	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C4007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4165	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C4008	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4166	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4009	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4167	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4010	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V	C4168	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4011	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4169	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4012	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C4170	1-164-245-11	CERAMIC CHIP 0.015UF	10.00%	25V
C4013	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4171	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4014	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V	C4172	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C4015	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C4173	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4016	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C4174	1-164-868-11	CERAMIC CHIP 56PF	5.00%	50V
C4017	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4175	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C4018	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V	C4176	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C4100	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4177	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C4101	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4178	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C4103	1-164-868-11	CERAMIC CHIP 56PF	5.00%	50V	C4195	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4105	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4196	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4108	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4197	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4110	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V	C4302	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4112	1-164-245-11	CERAMIC CHIP 0.015UF	10.00%	25V	C4303	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4114	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4304	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4116	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4306	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C4309	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4530	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4310	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4531	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4311	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4532	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4313	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4533	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4314	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4534	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4315	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4535	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4316	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4536	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4317	1-114-130-11	CERAMIC CHIP 1UF		6.3V	C4537	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4341	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4538	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4342	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4539	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4343	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4540	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4344	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4541	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4353	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4542	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4354	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4543	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4355	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4544	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4356	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4545	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4357	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4546	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4358	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4547	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4359	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4548	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4360	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4549	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4500	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4550	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4501	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4551	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4502	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4552	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4503	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4553	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4504	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4554	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4505	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4555	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4506	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4556	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4507	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4559	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4508	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4560	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4509	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4561	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4510	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4562	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4563	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4512	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4564	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4513	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4565	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4514	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4566	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4515	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4567	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4569	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4517	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4576	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4518	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4603	1-135-366-11	ELECT CHIP 100UF	20%	16V
C4519	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4604	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4520	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4607	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4521	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4608	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4522	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4609	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4523	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4610	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4524	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4611	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4525	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4612	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4526	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4613	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C4527	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4614	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4528	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4615	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4529	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4617	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4618	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C4827	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4619	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4828	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4620	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4829	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4621	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4830	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4622	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4831	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4623	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4832	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4624	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4833	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4626	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4834	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4627	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4835	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4628	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4836	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4629	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C4838	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4631	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4839	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4632	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4840	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4633	1-164-172-11	CERAMIC CHIP 0.0056UF	10.00% 25V	C4841	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4634	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4842	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4636	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4843	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4639	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4844	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4640	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4845	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4641	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4846	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4642	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4847	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4643	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4848	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4644	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4849	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4645	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4850	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4646	1-100-756-91	CERAMIC CHIP 0.047UF	50V	C4851	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4647	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4855	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4649	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4859	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4650	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4860	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4711	1-135-366-11	ELECT CHIP 100UF	20% 16V	C4862	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4801	1-112-786-11	ELECT CHIP 330UF	20% 4V	C4863	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4803	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4864	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4805	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4865	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4806	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4870	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4808	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4871	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4809	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4872	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4810	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4873	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4811	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4874	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4812	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4875	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4813	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4876	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4814	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4877	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4815	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4878	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4816	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4879	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4817	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4880	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4819	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4881	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4820	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4882	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4821	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4883	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4822	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4884	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4823	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4885	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4824	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4886	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4825	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4887	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4826	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4888	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C4889	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4947	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4890	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4948	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4891	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4949	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4896	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4950	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4900	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4951	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4901	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4952	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4902	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4953	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4903	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4954	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4904	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4955	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4905	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4956	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4906	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4957	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4907	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4958	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4908	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4959	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4909	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4960	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4910	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4961	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4911	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4962	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4912	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C4963	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4913	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4964	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4914	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4966	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4915	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C4967	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4916	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4969	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4917	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4970	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4918	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4971	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4919	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4972	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4920	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4973	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4921	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4974	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4922	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4976	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4923	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4977	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4924	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4978	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4925	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4979	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4926	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4980	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4927	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4981	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4928	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4982	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V
C4929	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4983	1-164-852-11	CERAMIC CHIP 12PF	5.00%	50V
C4930	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4984	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C4931	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4985	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4932	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4986	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4933	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4988	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4934	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4989	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4935	1-135-366-11	ELECT CHIP 100UF	20%	16V	C4993	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4937	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4997	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4938	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5001	1-135-366-11	ELECT CHIP 100UF	20%	16V
C4939	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5002	1-135-366-11	ELECT CHIP 100UF	20%	16V
C4940	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5003	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4941	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5004	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4942	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5005	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4943	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5006	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4944	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5010	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4945	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5011	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4946	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5012	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C5013	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5239	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5014	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5240	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5015	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5241	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5016	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5242	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5017	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5243	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5018	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5244	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5019	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5245	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5020	1-135-366-11	ELECT CHIP 100UF	20%	16V	C5246	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5021	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5247	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5024	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5248	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5025	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5249	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5026	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5250	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5106	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5251	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5107	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5252	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5108	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5253	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5200	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C5254	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5201	1-164-882-11	CERAMIC CHIP 220PF	5.00%	16V	C5255	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5202	1-115-412-11	CERAMIC CHIP 680PF	5.00%	25V	C5256	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5203	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C5257	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5204	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C5258	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5206	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C5259	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5208	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5260	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5209	1-112-786-11	ELECT CHIP 330UF	20%	4V	C5261	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5212	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5262	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5213	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5263	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5214	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5264	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5215	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5265	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5216	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5266	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5217	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5267	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5218	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5268	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5219	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5269	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5220	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5270	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5221	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5271	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5222	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5272	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5223	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5273	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5224	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5274	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5225	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5275	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5226	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5276	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5227	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5277	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5228	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5278	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5229	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5279	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5230	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5280	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5231	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5281	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5232	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5282	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5233	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5283	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5234	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5284	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5235	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5285	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5236	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5286	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5237	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5287	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C5238	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5288	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C5289	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5460	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5290	1-114-343-11	ELECT CHIP 100UF	20%	6.3V	C5464	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5400	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5468	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5401	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5470	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5402	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5473	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V
C5403	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5474	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C5404	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5478	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5409	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5479	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5410	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5480	1-112-046-11	CERAMIC CHIP 4.7UF	10%	6.3V
C5414	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5481	1-112-776-11	CERAMIC CHIP 0.0047UF	10%	50V
C5415	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5482	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5416	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5483	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C5417	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5484	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5418	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5485	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C5419	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5486	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5420	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5487	1-112-046-11	CERAMIC CHIP 4.7UF	10%	6.3V
C5421	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5488	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5422	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5489	1-114-343-11	ELECT CHIP 100UF	20%	6.3V
C5423	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5490	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V
C5424	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5491	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C5425	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5492	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5426	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5600	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C5427	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5601	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5428	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5604	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5429	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5605	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5430	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5606	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5431	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5607	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5432	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5608	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5433	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5609	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5434	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5613	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5435	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5614	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5436	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5619	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5437	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5900	1-135-366-11	ELECT CHIP 100UF	20%	16V
C5438	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5902	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C5439	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5903	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5440	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5904	1-164-854-11	CERAMIC CHIP 15PF	5.00%	50V
C5441	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5905	1-164-854-11	CERAMIC CHIP 15PF	5.00%	50V
C5442	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5907	1-135-366-11	ELECT CHIP 100UF	20%	16V
C5443	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5911	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5444	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5913	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5445	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5914	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5446	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5915	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5447	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5916	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5448	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5917	1-100-436-91	CERAMIC CHIP 0.033UF	10%	25V
C5449	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5919	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5450	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5920	1-100-436-91	CERAMIC CHIP 0.033UF	10%	25V
C5451	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5921	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5454	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5922	1-100-436-91	CERAMIC CHIP 0.033UF	10%	25V
C5455	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5923	1-114-130-11	CERAMIC CHIP 1UF		6.3V
C5458	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C5924	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5925	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4306	1-802-245-11	ESD SUPPRESSOR	
C5926	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4307	1-802-245-11	ESD SUPPRESSOR	
C5927	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4308	1-802-245-11	ESD SUPPRESSOR	
C5928	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4309	6-500-335-01	DIODE MC2838-T112-1	
C5930	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4310	6-500-335-01	DIODE MC2838-T112-1	
C5931	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4311	1-802-245-11	ESD SUPPRESSOR	
C5932	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4312	1-802-245-11	ESD SUPPRESSOR	
C5933	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4313	1-802-245-11	ESD SUPPRESSOR	
C5934	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4314	1-802-245-11	ESD SUPPRESSOR	
C5935	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4315	1-802-245-11	ESD SUPPRESSOR	
C5936	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4316	1-802-245-11	ESD SUPPRESSOR	
C5937	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4317	1-802-245-11	ESD SUPPRESSOR	
C5938	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4318	1-802-245-11	ESD SUPPRESSOR	
C5939	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D4319	1-802-245-11	ESD SUPPRESSOR	
< CONNECTOR >				D4320	1-802-245-11	ESD SUPPRESSOR	
CN3500	*1-819-337-11	HEADER ASSEMBLY FOR PWB 10P		D4321	1-802-245-11	ESD SUPPRESSOR	
CN3700	*1-820-235-11	HEADER ASSEMBLY 30P		D4322	1-802-245-11	ESD SUPPRESSOR	
CN3701	*1-817-738-61	CONNECTOR, BOARD TO BOARD 80P		D4323	1-802-245-11	ESD SUPPRESSOR	
CN3702	*1-819-390-51	FFC/FFC CONNECTOR (ZIF) 49P		D4324	6-501-732-01	DIODE MAZ8056G0LS0	
CN3801	*1-821-180-11	MEMORY STICK CONNECTOR		D4330	6-500-813-01	DIODE MA2SD32008S0	
CN4001	*1-821-378-11	BOARD TO BOARD CONNECTOR 50P		D4336	6-501-732-01	DIODE MAZ8056G0LS0	
CN4002	*1-821-377-11	BOARD TO BOARD CONNECTOR 80P		D4337	6-501-732-01	DIODE MAZ8056G0LS0	
CN4300	*1-818-737-11	HDMI CONNECTOR		D4602	6-501-732-01	DIODE MAZ8056G0LS0	
CN4301	*1-818-737-11	HDMI CONNECTOR		D4603	6-501-732-01	DIODE MAZ8056G0LS0	
CN4302	*1-821-186-11	HEADER ASSEMBLY FOR PWB 21P		D4604	6-501-732-01	DIODE MAZ8056G0LS0	
CN4600	*1-821-013-11	D SUB CONNECTOR		D4605	6-500-335-01	DIODE MC2838-T112-1	
CN5600	*1-819-797-11	HEADER ASSEMBLY FOR PWB 13P		D5403	6-501-817-01	DIODE MA2J1110GLS0	
CN5601	*1-821-034-11	HEADER ASSEMBLY FOR PWB 51P		ET4100	1-780-482-11	EARTH TERMINAL	
< DIODE >				ET4101	1-780-482-11	EARTH TERMINAL	
D3800	6-500-335-01	DIODE MC2838-T112-1		ET4102	1-780-482-11	EARTH TERMINAL	
D3807	6-501-529-01	DIODE 1SMA5920BT3G		ET4103	1-780-482-11	EARTH TERMINAL	
D3901	6-501-657-01	DIODE MA24D5000BS0		ET4104	1-780-482-11	EARTH TERMINAL	
D3903	6-501-528-01	DIODE 1SMA5915BT3G		ET4105	1-780-482-11	EARTH TERMINAL	
D3904	6-501-528-01	DIODE 1SMA5915BT3G		ET4106	1-780-482-11	EARTH TERMINAL	
D4100	8-719-081-67	DIODE M1FM3		ET4107	1-780-482-11	EARTH TERMINAL	
D4101	8-719-081-67	DIODE M1FM3		ET4108	1-780-482-11	EARTH TERMINAL	
D4104	6-501-528-01	DIODE 1SMA5915BT3G		ET4109	1-780-482-11	EARTH TERMINAL	
D4105	6-501-528-01	DIODE 1SMA5915BT3G		ET4110	1-780-482-11	EARTH TERMINAL	
D4108	8-719-081-67	DIODE M1FM3		ET4111	1-780-482-11	EARTH TERMINAL	
D4109	8-719-081-67	DIODE M1FM3		ET4112	1-780-482-11	EARTH TERMINAL	
D4110	6-501-528-01	DIODE 1SMA5915BT3G		ET4113	1-780-482-11	EARTH TERMINAL	
D4111	6-501-528-01	DIODE 1SMA5915BT3G		ET4114	1-780-482-11	EARTH TERMINAL	
D4300	6-501-732-01	DIODE MAZ8056G0LS0		ET4115	1-780-482-11	EARTH TERMINAL	
D4301	6-501-732-01	DIODE MAZ8056G0LS0		ET4116	1-780-482-11	EARTH TERMINAL	
D4302	1-802-245-11	ESD SUPPRESSOR		ET4117	1-780-482-11	EARTH TERMINAL	
D4303	1-802-245-11	ESD SUPPRESSOR		ET4118	1-780-482-11	EARTH TERMINAL	
D4304	1-802-245-11	ESD SUPPRESSOR		ET4119	1-780-482-11	EARTH TERMINAL	
D4305	1-802-245-11	ESD SUPPRESSOR					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

FB2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< FUSE >				FB4000	1-400-499-21	FERRITE	0UH
F3800	Δ 1-576-879-21	FUSE	0.2A 32V	FB4004	1-400-499-21	FERRITE	0UH
F3900	Δ 1-576-415-11	FUSE	2A 32V	FB4108	1-400-580-21	FERRITE	0UH
F3901	Δ 1-576-570-11	FUSE	0.63A 32V	FB4109	1-400-580-21	FERRITE	0UH
F3902	Δ 1-576-519-21	FUSE	400MA 32V	FB4117	1-414-554-21	FERRITE	0UH
F4100	Δ 1-576-603-21	FUSE	3.15A 24V	FB4120	1-400-580-21	FERRITE	0UH
F4102	Δ 1-576-603-21	FUSE	3.15A 24V	FB4121	1-400-580-21	FERRITE	0UH
F4500	Δ 1-576-913-11	FUSE	1.6A 36V	FB4122	1-400-580-21	FERRITE	0UH
F4501	Δ 1-576-913-11	FUSE	1.6A 36V	FB4123	1-400-580-21	FERRITE	0UH
F4600	Δ 1-576-646-11	FUSE	0.5A 50V	FB4300	1-400-382-11	FERRITE	0UH
F4900	Δ 1-576-596-21	FUSE	1A 32V	FB4301	1-400-382-11	FERRITE	0UH
F4901	Δ 1-576-646-11	FUSE	0.5A 50V	FB4302	1-400-382-11	FERRITE	0UH
F4902	Δ 1-576-913-11	FUSE	1.6A 36V	FB4303	1-400-461-21	FERRITE	0UH
F5200	Δ 1-576-603-21	FUSE	3.15A 24V	FB4500	1-400-499-21	FERRITE	0UH
< FERRITE BEAD >				FB4501	1-400-382-11	FERRITE	0UH
FB3500	1-400-834-11	FERRITE	0UH	FB4502	1-400-382-11	FERRITE	0UH
FB3501	1-469-324-21	FERRITE	0UH	FB4503	1-400-382-11	FERRITE	0UH
FB3502	1-400-834-11	FERRITE	0UH	FB4504	1-400-382-11	FERRITE	0UH
FB3503	1-469-324-21	FERRITE	0UH	FB4505	1-400-382-11	FERRITE	0UH
FB3504	1-400-834-11	FERRITE	0UH	FB4506	1-400-499-21	FERRITE	0UH
FB3505	1-400-834-11	FERRITE	0UH	FB4507	1-400-499-21	FERRITE	0UH
FB3506	1-469-324-21	FERRITE	0UH	FB4508	1-400-499-21	FERRITE	0UH
FB3507	1-469-324-21	FERRITE	0UH	FB4509	1-400-499-21	FERRITE	0UH
FB3508	1-469-324-21	FERRITE	0UH	FB4600	1-400-382-11	FERRITE	0UH
FB3512	1-400-834-11	FERRITE	0UH	FB4601	1-400-382-11	FERRITE	0UH
FB3513	1-400-834-11	FERRITE	0UH	FB4603	1-400-382-11	FERRITE	0UH
FB3514	1-400-834-11	FERRITE	0UH	FB4604	1-400-382-11	FERRITE	0UH
FB3600	1-400-834-11	FERRITE	0UH	FB4605	1-400-382-11	FERRITE	0UH
FB3601	1-400-834-11	FERRITE	0UH	FB4606	1-469-100-21	FERRITE	0UH
FB3700	1-400-834-11	FERRITE	0UH	FB4607	1-469-100-21	FERRITE	0UH
FB3701	1-400-834-11	FERRITE	0UH	FB4608	1-469-100-21	FERRITE	0UH
FB3702	1-400-834-11	FERRITE	0UH	FB4704	1-400-382-11	FERRITE	0UH
FB3703	1-400-834-11	FERRITE	0UH	FB4804	1-400-382-11	FERRITE	0UH
FB3704	1-400-834-11	FERRITE	0UH	FB4805	1-400-382-11	FERRITE	0UH
FB3705	1-400-834-11	FERRITE	0UH	FB4806	1-400-382-11	FERRITE	0UH
FB3706	1-400-834-11	FERRITE	0UH	FB4808	1-400-461-21	FERRITE	0UH
FB3707	1-400-834-11	FERRITE	0UH	FB4809	1-400-461-21	FERRITE	0UH
FB3708	1-400-834-11	FERRITE	0UH	FB4900	1-400-499-21	FERRITE	0UH
FB3709	1-400-834-11	FERRITE	0UH	FB4901	1-400-499-21	FERRITE	0UH
FB3710	1-400-834-11	FERRITE	0UH	FB4902	1-400-499-21	FERRITE	0UH
FB3711	1-469-324-21	FERRITE	0UH	FB4903	1-400-580-21	FERRITE	0UH
FB3735	1-469-324-21	FERRITE	0UH	FB4904	1-400-499-21	FERRITE	0UH
FB3736	1-469-324-21	FERRITE	0UH	FB4905	1-400-499-21	FERRITE	0UH
FB3800	1-400-834-11	FERRITE	0UH	FB4906	1-400-499-21	FERRITE	0UH
FB3801	1-400-834-11	FERRITE	0UH	FB4907	1-400-499-21	FERRITE	0UH
FB3900	1-469-324-21	FERRITE	0UH	FB4908	1-400-499-21	FERRITE	0UH
FB3901	1-469-324-21	FERRITE	0UH	FB4909	1-400-499-21	FERRITE	0UH
FB3902	1-469-869-21	FERRITE	0UH	FB4910	1-400-499-21	FERRITE	0UH
				FB4911	1-400-499-21	FERRITE	0UH
				FB4912	1-400-499-21	FERRITE	0UH

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB4913	1-400-499-21	FERRITE	OUH	IC3805	6-710-374-01	IC 74LVC1G157GW-125	
FB4914	1-400-499-21	FERRITE	OUH	IC3806	6-710-374-01	IC 74LVC1G157GW-125	
FB4915	1-400-499-21	FERRITE	OUH	IC3807	6-710-374-01	IC 74LVC1G157GW-125	
FB4916	1-400-499-21	FERRITE	OUH	IC3808	8-759-592-44	IC TC7SZ04FU (TE85R)	
FB4917	1-400-580-21	FERRITE	OUH	IC3809	8-759-644-48	IC 74LVC541APW	
FB5130	1-400-461-21	FERRITE	OUH	IC3810	8-759-644-48	IC 74LVC541APW	
FB5131	1-400-461-21	FERRITE	OUH	IC3811	8-759-644-48	IC 74LVC541APW	
FB5132	1-400-461-21	FERRITE	OUH	IC3900	8-753-272-40	IC CXA3738N-T4	
FB5400	1-400-461-21	FERRITE	OUH	IC3901	6-708-762-01	IC PQ200WNA1ZPH	
FB5401	1-400-461-21	FERRITE	OUH	IC3902	6-708-603-01	IC PQ070XNA1ZPH	
FB5402	1-400-461-21	FERRITE	OUH	IC4001	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
FB5404	1-400-461-21	FERRITE	OUH	IC4002	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
FB5602	1-400-580-21	FERRITE	OUH	IC4003	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
FB5603	1-400-580-21	FERRITE	OUH	IC4100	8-753-272-40	IC CXA3738N-T4	
FB5604	1-400-580-21	FERRITE	OUH	IC4102	6-709-703-01	IC MM3141JNRE	
FB5605	1-400-580-21	FERRITE	OUH	IC4103	6-710-080-01	IC MM3292FNRE	
FB5606	1-400-580-21	FERRITE	OUH	IC4105	8-753-272-40	IC CXA3738N-T4	
FB5607	1-400-580-21	FERRITE	OUH	IC4300	6-704-600-01	IC M24C02-WMN6T (B)	
FB5608	1-400-499-21	FERRITE	OUH	IC4301	6-704-600-01	IC M24C02-WMN6T (B)	
FB5609	1-400-499-21	FERRITE	OUH	IC4305	8-759-680-47	IC TC7MB3253FK (EL)	
FB5613	1-400-499-21	FERRITE	OUH	IC4313	8-753-282-08	IC CXB1444R-T6	
FB5614	1-400-499-21	FERRITE	OUH	IC4315	6-711-332-01	IC TC7SG17FU (TE87R,F)	
FB5622	1-400-499-21	FERRITE	OUH	IC4601	6-707-739-01	IC MM1661JTRE	
FB5623	1-400-499-21	FERRITE	OUH	IC4602	6-711-220-01	IC THC7981-17	
FB5626	1-400-499-21	FERRITE	OUH	IC4603	6-709-703-01	IC MM3141JNRE	
FB5901	1-400-499-21	FERRITE	OUH	IC4604	6-704-600-01	IC M24C02-WMN6T (B)	
FB5903	1-400-461-21	FERRITE	OUH	IC4800	8-753-271-21	IC CXD3816GB	
< FILTER >				IC4803	6-700-441-01	IC SN74ALVCH374PWR	
FL4900	1-234-560-21	FILTER, LOW PASS		IC4804	6-702-982-01	IC TC7SA00FU (TE85R)	
< IC >				IC4805	8-759-592-48	IC TC7SZ32FU (TE85R)	
IC3500	6-702-725-01	IC USBDF01W5		IC4806	8-759-592-43	IC TC7SZ02FU (TE85R)	
IC3501	6-708-916-01	IC ICS7150MLFT		IC4807	6-709-435-01	IC IS42S32200C1-6TL-TR	
IC3502	6-709-214-01	IC UPD61123F1-100-KA3-A		IC4808	6-709-435-01	IC IS42S32200C1-6TL-TR	
IC3503	8-759-592-44	IC TC7SZ04FU (TE85R)		IC4809	8-759-651-59	IC SN74CBTLV3245APWR	
IC3600	6-709-585-01	IC K9F5608U0D-PIB0T		IC4900	8-753-293-33	IC CXD4716GB-1	
IC3601	6-708-305-01	IC K4H511638C-UCB3T		IC4901	6-711-289-01	IC IDT6V40006APGGI	
IC3700	6-706-498-01	IC TC7SH08F (T5RSOYJF)		IC4902	6-705-673-01	IC TC7PA53FU (TE85L.F)	
IC3701	8-759-644-48	IC 74LVC541APW		IC4903	6-702-436-01	IC AD8061ARTZ-REEL7	
IC3702	8-759-644-48	IC 74LVC541APW		IC5102	6-703-181-01	IC TC74VCX74FT (EL)	
IC3703	8-759-644-48	IC 74LVC541APW		IC5103	6-703-238-01	IC TC7WZ34FK (TE85R)	
IC3704	8-759-644-48	IC 74LVC541APW		IC5104	8-759-829-30	IC CY2305SXC-1HT	
IC3705	8-759-644-48	IC 74LVC541APW		IC5200	6-710-949-01	IC SN0608006PWPR	
IC3800	6-703-175-01	IC PST3629UL		IC5201	6-711-261-01	IC HYB18TC256160AF-3S	
IC3801	6-703-271-01	IC TAR5S50 (TE85R)		IC5203	6-711-261-01	IC HYB18TC256160AF-3S	
IC3802	6-707-808-01	IC WM8727GED/RV		IC5400	6-707-897-01	IC EDS6416AHTA-75-E	
IC3803	8-759-698-08	IC SN74CBTLV1G125DCKR		IC5401	6-708-219-01	IC MB91305PMC-G-BNDE1	
IC3804	8-759-278-58	IC NJM4558V-TE2		IC5402	6-807-732-01	IC S29JL032H70TFI010-FIX2-E101	
				IC5403	6-704-566-01	IC R3112N291A-TR-FA	
				IC5405	6-701-185-01	IC MC74VHC1G125DFT1	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC5408	6-707-864-01	IC TC74VHC123AFT(EKJ)		Q3803	8-729-027-43	TRANSISTOR DTC114EKA-T146	
IC5409	6-708-360-01	IC NJU7040F		Q3807	8-729-010-05	TRANSISTOR MSB709-RT1	
IC5411	8-759-680-48	IC TC7WH157FK(TE85R)		Q3808	8-729-010-05	TRANSISTOR MSB709-RT1	
IC5600	8-759-596-29	IC SN74LV4066APWR		Q3900	6-550-828-01	TRANSISTOR RSQ035P03TR	
IC5603	6-706-487-01	IC TC7SH08FU(T5RSOYJF)		Q3901	6-550-828-01	TRANSISTOR RSQ035P03TR	
IC5901	6-708-641-01	IC SAA7115AHL/V1		Q3902	6-551-334-01	TRANSISTOR RTL035N03TR	
< COIL >				Q3903	6-551-334-01	TRANSISTOR RTL035N03TR	
L3500	1-412-058-11	INDUCTOR	10UH	Q4100	6-550-851-01	TRANSISTOR RSS050P03FTB	
L3801	1-412-008-31	INDUCTOR	15UH	Q4101	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
L3802	1-412-008-31	INDUCTOR	15UH	Q4102	6-550-851-01	TRANSISTOR RSS050P03FTB	
L3900	1-457-428-11	INDUCTOR	4.7UH	Q4104	6-550-663-01	TRANSISTOR RSS100N03TB	
L3901	1-457-428-11	INDUCTOR	4.7UH	Q4105	6-550-663-01	TRANSISTOR RSS100N03TB	
L4100	1-424-918-21	INDUCTOR	10UH	Q4108	6-550-851-01	TRANSISTOR RSS050P03FTB	
L4101	1-457-247-21	INDUCTOR	4.7UH	Q4109	6-550-851-01	TRANSISTOR RSS050P03FTB	
L4104	1-424-922-21	INDUCTOR	10UH	Q4110	6-550-663-01	TRANSISTOR RSS100N03TB	
L4105	1-456-787-21	INDUCTOR	10UH	Q4115	6-551-456-01	TRANSISTOR RTR020P02TL	
L4300	1-457-223-11	INDUCTOR	0UH	Q4117	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L4301	1-457-223-11	INDUCTOR	0UH	Q4300	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
L4302	1-457-223-11	INDUCTOR	0UH	Q4302	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L4303	1-457-223-11	INDUCTOR	0UH	Q4307	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L4600	1-469-555-21	INDUCTOR	10UH	Q4600	8-729-122-63	TRANSISTOR 2SA1226-E4	
L4900	1-469-555-21	INDUCTOR	10UH	Q4601	8-729-122-63	TRANSISTOR 2SA1226-E4	
L4901	1-469-555-21	INDUCTOR	10UH	Q4602	8-729-122-63	TRANSISTOR 2SA1226-E4	
L4902	1-469-555-21	INDUCTOR	10UH	Q4603	8-729-117-73	TRANSISTOR 2SC4178-F14	
L4905	1-469-549-21	INDUCTOR	1UH	Q4604	8-729-117-73	TRANSISTOR 2SC4178-F14	
L4906	1-469-549-21	INDUCTOR	1UH	Q4605	8-729-117-73	TRANSISTOR 2SC4178-F14	
L4907	1-469-555-21	INDUCTOR	10UH	Q4606	8-729-117-73	TRANSISTOR 2SC4178-F14	
L5200	1-481-246-11	INDUCTOR	2.2UH	Q4607	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L5600	1-456-583-11	INDUCTOR	0UH	Q4900	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5601	1-456-583-11	INDUCTOR	0UH	Q4901	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5602	1-456-583-11	INDUCTOR	0UH	Q4904	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5603	1-456-583-11	INDUCTOR	0UH	Q4907	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5604	1-456-583-11	INDUCTOR	0UH	Q4909	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
L5605	1-456-583-11	INDUCTOR	0UH	Q4911	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
L5606	1-456-583-11	INDUCTOR	0UH	Q4912	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
L5607	1-456-583-11	INDUCTOR	0UH	Q5200	6-550-663-01	TRANSISTOR RSS100N03TB	
L5608	1-456-583-11	INDUCTOR	0UH	Q5201	6-550-663-01	TRANSISTOR RSS100N03TB	
L5609	1-456-583-11	INDUCTOR	0UH	Q5401	8-729-038-11	TRANSISTOR RT1P140C-TP-1	
L5610	1-456-583-11	INDUCTOR	0UH	Q5402	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
L5611	1-456-583-11	INDUCTOR	0UH	Q5405	8-729-027-38	TRANSISTOR DTA144EKA-T146	
L5900	1-469-549-21	INDUCTOR	1UH	Q5406	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5901	1-469-549-21	INDUCTOR	1UH	Q5407	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L5903	1-469-549-21	INDUCTOR	1UH	Q5900	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
< TRANSISTOR >				Q5901	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q3800	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q5902	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q3801	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q5903	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q3802	8-729-027-43	TRANSISTOR DTC114EKA-T146		< RESISTOR >			
R3500	1-218-937-11	RES-CHIP	47 5% 1/16W				

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3502	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3579	1-218-990-81	SHORT CHIP	0		
R3503	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3581	1-220-174-11	RES-CHIP	200	5%	1/16W
R3506	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3582	1-220-174-11	RES-CHIP	200	5%	1/16W
R3507	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3583	1-220-174-11	RES-CHIP	200	5%	1/16W
R3510	1-218-937-11	RES-CHIP	47	5%	1/16W	R3584	1-218-990-81	SHORT CHIP	0		
R3512	1-218-937-11	RES-CHIP	47	5%	1/16W	R3585	1-208-908-11	METAL CHIP	7.5K	0.5%	1/16W
R3514	1-218-937-11	RES-CHIP	47	5%	1/16W	R3587	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R3515	1-218-937-11	RES-CHIP	47	5%	1/16W	R3588	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R3517	1-218-937-11	RES-CHIP	47	5%	1/16W	R3590	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3518	1-218-937-11	RES-CHIP	47	5%	1/16W	R3591	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3519	1-218-941-81	RES-CHIP	100	5%	1/16W	R3592	1-218-933-11	RES-CHIP	22	5%	1/16W
R3520	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3594	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3521	1-218-941-81	RES-CHIP	100	5%	1/16W	R3595	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3522	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3596	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3523	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3597	1-218-990-81	SHORT CHIP	0		
R3524	1-218-941-81	RES-CHIP	100	5%	1/16W	R3598	1-218-990-81	SHORT CHIP	0		
R3526	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3599	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3527	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3602	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3530	1-218-941-81	RES-CHIP	100	5%	1/16W	R3603	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3531	1-218-941-81	RES-CHIP	100	5%	1/16W	R3605	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3532	1-218-941-81	RES-CHIP	100	5%	1/16W	R3606	1-218-949-11	RES-CHIP	470	5%	1/16W
R3533	1-218-941-81	RES-CHIP	100	5%	1/16W	R3608	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3538	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3609	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3539	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3611	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3540	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3612	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3541	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3615	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3542	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3616	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3543	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3617	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3544	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3618	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3546	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3619	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3547	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3620	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3550	1-218-947-11	RES-CHIP	330	5%	1/16W	R3621	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3551	1-218-947-11	RES-CHIP	330	5%	1/16W	R3622	1-218-941-81	RES-CHIP	100	5%	1/16W
R3552	1-218-947-11	RES-CHIP	330	5%	1/16W	R3623	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3553	1-218-941-81	RES-CHIP	100	5%	1/16W	R3624	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3554	1-218-937-11	RES-CHIP	47	5%	1/16W	R3627	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3555	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3628	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3556	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3630	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3560	1-218-941-81	RES-CHIP	100	5%	1/16W	R3633	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3564	1-218-937-11	RES-CHIP	47	5%	1/16W	R3634	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3565	1-218-937-11	RES-CHIP	47	5%	1/16W	R3635	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3566	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3638	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3567	1-218-937-11	RES-CHIP	47	5%	1/16W	R3639	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3568	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3640	1-218-939-11	RES-CHIP	68	5%	1/16W
R3569	1-218-937-11	RES-CHIP	47	5%	1/16W	R3641	1-218-939-11	RES-CHIP	68	5%	1/16W
R3570	1-218-937-11	RES-CHIP	47	5%	1/16W	R3642	1-218-941-81	RES-CHIP	100	5%	1/16W
R3571	1-218-937-11	RES-CHIP	47	5%	1/16W	R3643	1-218-941-81	RES-CHIP	100	5%	1/16W
R3572	1-218-937-11	RES-CHIP	47	5%	1/16W	R3644	1-218-941-81	RES-CHIP	100	5%	1/16W
R3577	1-218-990-81	SHORT CHIP	0			R3645	1-218-941-81	RES-CHIP	100	5%	1/16W
R3578	1-218-990-81	SHORT CHIP	0			R3646	1-218-941-11	RES-CHIP	100	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3647	1-218-941-11	RES-CHIP	100	5%	1/16W	R3823	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3700	1-218-990-81	SHORT CHIP	0			R3825	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3703	1-218-990-81	SHORT CHIP	0			R3826	1-218-941-81	RES-CHIP	100	5%	1/16W
R3704	1-218-990-81	SHORT CHIP	0			R3827	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3705	1-218-990-81	SHORT CHIP	0			R3828	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3706	1-218-990-81	SHORT CHIP	0			R3829	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3707	1-218-990-81	SHORT CHIP	0			R3830	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3708	1-218-990-81	SHORT CHIP	0			R3831	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3709	1-218-990-81	SHORT CHIP	0			R3832	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3710	1-218-990-81	SHORT CHIP	0			R3833	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3711	1-218-990-81	SHORT CHIP	0			R3835	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3716	1-218-937-11	RES-CHIP	47	5%	1/16W	R3836	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3717	1-218-937-11	RES-CHIP	47	5%	1/16W	R3837	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3718	1-218-937-11	RES-CHIP	47	5%	1/16W	R3839	1-218-941-81	RES-CHIP	100	5%	1/16W
R3719	1-218-990-81	SHORT CHIP	0			R3840	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3720	1-218-990-81	SHORT CHIP	0			R3841	1-218-937-11	RES-CHIP	47	5%	1/16W
R3721	1-218-990-81	SHORT CHIP	0			R3843	1-218-945-11	RES-CHIP	220	5%	1/16W
R3722	1-218-990-81	SHORT CHIP	0			R3844	1-218-945-11	RES-CHIP	220	5%	1/16W
R3723	1-218-990-81	SHORT CHIP	0			R3847	1-218-990-81	SHORT CHIP	0		
R3724	1-218-933-11	RES-CHIP	22	5%	1/16W	R3848	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R3725	1-218-933-11	RES-CHIP	22	5%	1/16W	R3849	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R3726	1-218-933-11	RES-CHIP	22	5%	1/16W	R3850	1-218-937-11	RES-CHIP	47	5%	1/16W
R3727	1-218-933-11	RES-CHIP	22	5%	1/16W	R3851	1-218-937-11	RES-CHIP	47	5%	1/16W
R3728	1-218-933-11	RES-CHIP	22	5%	1/16W	R3852	1-218-937-11	RES-CHIP	47	5%	1/16W
R3729	1-218-933-11	RES-CHIP	22	5%	1/16W	R3853	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3730	1-218-933-11	RES-CHIP	22	5%	1/16W	R3854	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3731	1-218-933-11	RES-CHIP	22	5%	1/16W	R3855	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R3732	1-218-933-11	RES-CHIP	22	5%	1/16W	R3856	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3733	1-218-933-11	RES-CHIP	22	5%	1/16W	R3857	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3734	1-218-933-11	RES-CHIP	22	5%	1/16W	R3858	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R3735	1-218-933-11	RES-CHIP	22	5%	1/16W	R3860	1-218-949-11	RES-CHIP	470	5%	1/16W
R3736	1-218-933-11	RES-CHIP	22	5%	1/16W	R3861	1-218-949-11	RES-CHIP	470	5%	1/16W
R3737	1-218-933-11	RES-CHIP	22	5%	1/16W	R3862	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3738	1-218-933-11	RES-CHIP	22	5%	1/16W	R3864	1-218-990-81	SHORT CHIP	0		
R3739	1-218-933-11	RES-CHIP	22	5%	1/16W	R3865	1-218-990-81	SHORT CHIP	0		
R3740	1-218-933-11	RES-CHIP	22	5%	1/16W	R3866	1-218-970-11	RES-CHIP	27K	5%	1/16W
R3741	1-218-933-11	RES-CHIP	22	5%	1/16W	R3867	1-218-970-11	RES-CHIP	27K	5%	1/16W
R3742	1-218-933-11	RES-CHIP	22	5%	1/16W	R3868	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R3743	1-218-933-11	RES-CHIP	22	5%	1/16W	R3869	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R3744	1-218-933-11	RES-CHIP	22	5%	1/16W	R3870	1-218-941-81	RES-CHIP	100	5%	1/16W
R3745	1-218-933-11	RES-CHIP	22	5%	1/16W	R3871	1-218-941-81	RES-CHIP	100	5%	1/16W
R3746	1-216-295-91	SHORT CHIP	0			R3879	1-218-937-11	RES-CHIP	47	5%	1/16W
R3758	1-218-937-11	RES-CHIP	47	5%	1/16W	R3882	1-218-937-11	RES-CHIP	47	5%	1/16W
R3759	1-218-937-11	RES-CHIP	47	5%	1/16W	R3890	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3760	1-218-937-11	RES-CHIP	47	5%	1/16W	R3891	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3761	1-218-937-11	RES-CHIP	47	5%	1/16W	R3892	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3800	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3893	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3801	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3894	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3811	1-218-937-11	RES-CHIP	47	5%	1/16W	R3895	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3822	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3896	1-218-937-11	RES-CHIP	47	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3897	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4030	1-218-990-81	SHORT CHIP	0		
R3898	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4031	1-218-990-81	SHORT CHIP	0		
R3900	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4032	1-218-990-81	SHORT CHIP	0		
R3901	1-218-990-81	SHORT CHIP	0			R4033	1-218-990-81	SHORT CHIP	0		
R3902	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4034	1-218-990-81	SHORT CHIP	0		
R3903	1-208-941-11	METAL CHIP	180K	0.5%	1/16W	R4035	1-218-990-81	SHORT CHIP	0		
R3904	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4036	1-218-990-81	SHORT CHIP	0		
R3905	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4037	1-218-990-81	SHORT CHIP	0		
R3906	1-218-990-81	SHORT CHIP	0			R4038	1-218-990-81	SHORT CHIP	0		
R3908	1-218-990-81	SHORT CHIP	0			R4039	1-218-990-81	SHORT CHIP	0		
R3909	1-218-990-81	SHORT CHIP	0			R4040	1-218-990-81	SHORT CHIP	0		
R3910	1-218-990-81	SHORT CHIP	0			R4041	1-218-990-81	SHORT CHIP	0		
R3911	1-218-990-81	SHORT CHIP	0			R4042	1-218-990-81	SHORT CHIP	0		
R3912	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4043	1-218-990-81	SHORT CHIP	0		
R3913	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4044	1-218-990-81	SHORT CHIP	0		
R3914	1-218-935-11	RES-CHIP	33	5%	1/16W	R4045	1-218-990-81	SHORT CHIP	0		
R3917	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4046	1-218-990-81	SHORT CHIP	0		
R3920	1-218-990-81	SHORT CHIP	0			R4047	1-218-990-81	SHORT CHIP	0		
R3921	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4048	1-218-990-81	SHORT CHIP	0		
R3923	1-218-990-81	SHORT CHIP	0			R4049	1-218-990-81	SHORT CHIP	0		
R3924	1-208-721-11	METAL CHIP	39K	0.5%	1/16W	R4050	1-218-990-81	SHORT CHIP	0		
R3925	1-218-990-81	SHORT CHIP	0			R4051	1-218-990-81	SHORT CHIP	0		
R3926	1-208-941-11	METAL CHIP	180K	0.5%	1/16W	R4052	1-218-990-81	SHORT CHIP	0		
R3927	1-216-864-11	SHORT CHIP	0			R4053	1-218-990-81	SHORT CHIP	0		
R3928	1-216-864-11	SHORT CHIP	0			R4054	1-218-990-81	SHORT CHIP	0		
R3929	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4055	1-218-990-81	SHORT CHIP	0		
R3930	1-216-864-11	SHORT CHIP	0			R4056	1-218-990-81	SHORT CHIP	0		
R3931	1-216-864-11	SHORT CHIP	0			R4057	1-218-990-81	SHORT CHIP	0		
R3934	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4058	1-218-990-81	SHORT CHIP	0		
R3935	1-218-935-11	RES-CHIP	33	5%	1/16W	R4059	1-218-990-81	SHORT CHIP	0		
R3936	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R4060	1-218-990-81	SHORT CHIP	0		
R4000	1-218-990-81	SHORT CHIP	0			R4064	1-218-990-81	SHORT CHIP	0		
R4001	1-218-990-81	SHORT CHIP	0			R4065	1-218-990-81	SHORT CHIP	0		
R4002	1-218-990-81	SHORT CHIP	0			R4066	1-218-990-81	SHORT CHIP	0		
R4003	1-218-990-81	SHORT CHIP	0			R4067	1-218-990-81	SHORT CHIP	0		
R4004	1-218-990-81	SHORT CHIP	0			R4068	1-218-990-81	SHORT CHIP	0		
R4005	1-218-990-81	SHORT CHIP	0			R4069	1-218-990-81	SHORT CHIP	0		
R4006	1-218-990-81	SHORT CHIP	0			R4070	1-218-990-81	SHORT CHIP	0		
R4007	1-218-990-81	SHORT CHIP	0			R4071	1-218-990-81	SHORT CHIP	0		
R4008	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4072	1-218-990-81	SHORT CHIP	0		
R4009	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4073	1-218-990-81	SHORT CHIP	0		
R4011	1-218-990-81	SHORT CHIP	0			R4074	1-218-990-81	SHORT CHIP	0		
R4012	1-216-864-11	SHORT CHIP	0			R4075	1-218-990-81	SHORT CHIP	0		
R4016	1-218-990-81	SHORT CHIP	0			R4078	1-218-990-81	SHORT CHIP	0		
R4017	1-218-990-81	SHORT CHIP	0			R4079	1-218-990-81	SHORT CHIP	0		
R4018	1-218-990-81	SHORT CHIP	0			R4080	1-218-990-81	SHORT CHIP	0		
R4023	1-218-990-81	SHORT CHIP	0			R4081	1-218-990-81	SHORT CHIP	0		
R4024	1-218-990-81	SHORT CHIP	0			R4083	1-218-990-81	SHORT CHIP	0		
R4026	1-218-990-81	SHORT CHIP	0			R4090	1-218-990-81	SHORT CHIP	0		
R4028	1-218-990-81	SHORT CHIP	0			R4091	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4092	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4185	1-218-990-81	SHORT CHIP	0		
R4093	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4186	1-218-990-81	SHORT CHIP	0		
R4094	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4187	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R4095	1-218-990-81	SHORT CHIP	0			R4188	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R4096	1-218-990-81	SHORT CHIP	0			R4189	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4097	1-218-990-81	SHORT CHIP	0			R4201	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4098	1-218-990-81	SHORT CHIP	0			R4202	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4099	1-218-990-81	SHORT CHIP	0			R4206	1-216-864-11	SHORT CHIP	0		
R4100	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4207	1-216-864-11	SHORT CHIP	0		
R4102	1-218-990-81	SHORT CHIP	0			R4300	1-218-990-81	SHORT CHIP	0		
R4103	1-218-990-81	SHORT CHIP	0			R4301	1-218-990-81	SHORT CHIP	0		
R4104	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4302	1-218-990-81	SHORT CHIP	0		
R4105	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4303	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4106	1-218-990-81	SHORT CHIP	0			R4304	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4111	1-218-929-11	RES-CHIP	10	5%	1/16W	R4306	1-218-990-81	SHORT CHIP	0		
R4112	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	R4307	1-218-990-81	SHORT CHIP	0		
R4115	1-218-929-11	RES-CHIP	10	5%	1/16W	R4308	1-218-990-81	SHORT CHIP	0		
R4116	1-218-990-81	SHORT CHIP	0			R4309	1-218-990-81	SHORT CHIP	0		
R4117	1-218-990-81	SHORT CHIP	0			R4310	1-218-990-81	SHORT CHIP	0		
R4119	1-218-929-11	RES-CHIP	10	5%	1/16W	R4311	1-218-990-81	SHORT CHIP	0		
R4120	1-218-990-81	SHORT CHIP	0			R4312	1-218-990-81	SHORT CHIP	0		
R4121	1-218-990-81	SHORT CHIP	0			R4313	1-218-990-81	SHORT CHIP	0		
R4122	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4315	1-218-990-81	SHORT CHIP	0		
R4124	1-218-929-11	RES-CHIP	10	5%	1/16W	R4316	1-218-929-11	RES-CHIP	10	5%	1/16W
R4127	1-218-990-81	SHORT CHIP	0			R4317	1-218-929-11	RES-CHIP	10	5%	1/16W
R4128	1-218-929-11	RES-CHIP	10	5%	1/16W	R4318	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4129	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4319	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4130	1-218-929-11	RES-CHIP	10	5%	1/16W	R4320	1-218-990-81	SHORT CHIP	0		
R4131	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4324	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4138	1-218-990-81	SHORT CHIP	0			R4329	1-218-990-81	SHORT CHIP	0		
R4141	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R4331	1-218-990-81	SHORT CHIP	0		
R4144	1-218-990-81	SHORT CHIP	0			R4332	1-208-889-11	METAL CHIP	1.2K	0.5%	1/16W
R4146	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4333	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R4147	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4334	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4148	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4336	1-208-889-11	METAL CHIP	1.2K	0.5%	1/16W
R4152	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4337	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4160	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R4338	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4161	1-218-990-81	SHORT CHIP	0			R4339	1-218-990-81	SHORT CHIP	0		
R4162	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4341	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4163	1-208-929-81	METAL CHIP	56K	0.5%	1/16W	R4343	1-218-990-81	SHORT CHIP	0		
R4164	1-208-721-11	METAL CHIP	39K	0.5%	1/16W	R4345	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4165	1-218-990-81	SHORT CHIP	0			R4346	1-218-990-81	SHORT CHIP	0		
R4166	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R4347	1-218-990-81	SHORT CHIP	0		
R4169	1-218-990-81	SHORT CHIP	0			R4348	1-218-990-81	SHORT CHIP	0		
R4171	1-218-990-81	SHORT CHIP	0			R4349	1-218-990-81	SHORT CHIP	0		
R4172	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4350	1-218-990-81	SHORT CHIP	0		
R4177	1-218-929-11	RES-CHIP	10	5%	1/16W	R4351	1-218-990-81	SHORT CHIP	0		
R4178	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4352	1-218-990-81	SHORT CHIP	0		
R4179	1-218-929-11	RES-CHIP	10	5%	1/16W	R4353	1-218-990-81	SHORT CHIP	0		
R4184	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R4354	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4355	1-218-990-81	SHORT CHIP	0			R4512	1-218-937-11	RES-CHIP	47	5%	1/16W
R4356	1-218-990-81	SHORT CHIP	0			R4513	1-218-937-11	RES-CHIP	47	5%	1/16W
R4357	1-218-990-81	SHORT CHIP	0			R4514	1-218-937-11	RES-CHIP	47	5%	1/16W
R4358	1-218-990-81	SHORT CHIP	0			R4515	1-218-933-11	RES-CHIP	22	5%	1/16W
R4359	1-218-990-81	SHORT CHIP	0			R4520	1-218-933-11	RES-CHIP	22	5%	1/16W
R4360	1-218-990-81	SHORT CHIP	0			R4523	1-218-990-81	SHORT CHIP	0		
R4361	1-218-990-81	SHORT CHIP	0			R4524	1-218-990-81	SHORT CHIP	0		
R4362	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4525	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4363	1-218-990-81	SHORT CHIP	0			R4527	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4364	1-218-990-81	SHORT CHIP	0			R4534	1-216-864-11	SHORT CHIP	0		
R4365	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4535	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4366	1-218-953-11	RES-CHIP	1K	5%	1/16W	R4536	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4367	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4538	1-216-864-11	SHORT CHIP	0		
R4368	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4539	1-218-990-81	SHORT CHIP	0		
R4369	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4542	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4370	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4543	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R4371	1-218-990-81	SHORT CHIP	0			R4544	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R4372	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4545	1-218-935-11	RES-CHIP	33	5%	1/16W
R4373	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R4546	1-218-935-11	RES-CHIP	33	5%	1/16W
R4374	1-218-990-81	SHORT CHIP	0			R4547	1-218-935-11	RES-CHIP	33	5%	1/16W
R4410	1-218-990-81	SHORT CHIP	0			R4600	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4411	1-218-990-81	SHORT CHIP	0			R4601	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4412	1-218-990-81	SHORT CHIP	0			R4602	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4413	1-218-990-81	SHORT CHIP	0			R4606	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4414	1-218-990-81	SHORT CHIP	0			R4607	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4415	1-218-990-81	SHORT CHIP	0			R4608	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4416	1-218-990-81	SHORT CHIP	0			R4609	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4417	1-218-990-81	SHORT CHIP	0			R4610	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4418	1-218-990-81	SHORT CHIP	0			R4611	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4419	1-218-990-81	SHORT CHIP	0			R4618	1-218-835-11	METAL CHIP	330	0.5%	1/10W
R4424	1-218-990-81	SHORT CHIP	0			R4619	1-218-929-11	RES-CHIP	10	5%	1/16W
R4428	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R4620	1-218-835-11	METAL CHIP	330	0.5%	1/10W
R4432	1-216-864-11	SHORT CHIP	0			R4621	1-218-929-11	RES-CHIP	10	5%	1/16W
R4433	1-208-939-11	METAL CHIP	150K	0.5%	1/16W	R4622	1-218-835-11	METAL CHIP	330	0.5%	1/10W
R4456	1-218-990-81	SHORT CHIP	0			R4623	1-218-929-11	RES-CHIP	10	5%	1/16W
R4458	1-218-990-81	SHORT CHIP	0			R4628	1-216-815-11	METAL CHIP	330	5%	1/10W
R4462	1-218-941-81	RES-CHIP	100	5%	1/16W	R4629	1-216-815-11	METAL CHIP	330	5%	1/10W
R4463	1-218-941-81	RES-CHIP	100	5%	1/16W	R4630	1-216-815-11	METAL CHIP	330	5%	1/10W
R4467	1-218-990-81	SHORT CHIP	0			R4631	1-216-815-11	METAL CHIP	330	5%	1/10W
R4471	1-218-990-81	SHORT CHIP	0			R4636	1-218-990-81	SHORT CHIP	0		
R4498	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4637	1-218-990-81	SHORT CHIP	0		
R4499	1-218-989-11	RES-CHIP	1M	5%	1/16W	R4640	1-218-990-81	SHORT CHIP	0		
R4500	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4641	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4502	1-218-990-81	SHORT CHIP	0			R4642	1-218-941-81	RES-CHIP	100	5%	1/16W
R4503	1-218-935-11	RES-CHIP	33	5%	1/16W	R4644	1-218-990-81	SHORT CHIP	0		
R4505	1-218-937-11	RES-CHIP	47	5%	1/16W	R4646	1-218-937-11	RES-CHIP	47	5%	1/16W
R4506	1-218-937-11	RES-CHIP	47	5%	1/16W	R4648	1-218-937-11	RES-CHIP	47	5%	1/16W
R4508	1-218-937-11	RES-CHIP	47	5%	1/16W	R4649	1-218-937-11	RES-CHIP	47	5%	1/16W
R4509	1-218-937-11	RES-CHIP	47	5%	1/16W	R4652	1-218-937-11	RES-CHIP	47	5%	1/16W
R4511	1-218-937-11	RES-CHIP	47	5%	1/16W	R4654	1-218-965-11	RES-CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R4660	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4936	1-218-990-81	SHORT CHIP	0		
R4662	1-218-937-11	RES-CHIP	47	5%	1/16W	R4938	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4684	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4939	1-218-990-81	SHORT CHIP	0		
R4685	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R4941	1-218-947-11	RES-CHIP	330	5%	1/16W
R4692	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R4942	1-218-935-11	RES-CHIP	33	5%	1/16W
R4693	1-218-941-11	RES-CHIP	100	5%	1/16W	R4943	1-218-990-81	SHORT CHIP	0		
R4696	1-218-933-11	RES-CHIP	22	5%	1/16W	R4946	1-216-815-11	METAL CHIP	330	5%	1/10W
R4810	1-218-937-11	RES-CHIP	47	5%	1/16W	R4948	1-216-815-11	METAL CHIP	330	5%	1/10W
R4812	1-218-937-11	RES-CHIP	47	5%	1/16W	R4959	1-218-941-11	RES-CHIP	100	5%	1/16W
R4815	1-218-937-11	RES-CHIP	47	5%	1/16W	R4960	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R4823	1-218-939-11	RES-CHIP	68	5%	1/16W	R4961	1-218-941-11	RES-CHIP	100	5%	1/16W
R4824	1-218-939-11	RES-CHIP	68	5%	1/16W	R4962	1-218-990-81	SHORT CHIP	0		
R4829	1-218-929-11	RES-CHIP	10	5%	1/16W	R4967	1-218-990-81	SHORT CHIP	0		
R4830	1-218-937-11	RES-CHIP	47	5%	1/16W	R4969	1-218-941-11	RES-CHIP	100	5%	1/16W
R4831	1-218-937-11	RES-CHIP	47	5%	1/16W	R4970	1-218-941-11	RES-CHIP	100	5%	1/16W
R4832	1-218-939-11	RES-CHIP	68	5%	1/16W	R4971	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R4833	1-218-939-11	RES-CHIP	68	5%	1/16W	R4972	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4842	1-218-941-81	RES-CHIP	100	5%	1/16W	R4974	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4846	1-218-990-81	SHORT CHIP	0			R4976	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4848	1-218-935-11	RES-CHIP	33	5%	1/16W	R4978	1-218-990-81	SHORT CHIP	0		
R4849	1-218-937-11	RES-CHIP	47	5%	1/16W	R4980	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4851	1-218-935-11	RES-CHIP	33	5%	1/16W	R4989	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4852	1-218-935-11	RES-CHIP	33	5%	1/16W	R4990	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4875	1-218-939-11	RES-CHIP	68	5%	1/16W	R4991	1-218-941-11	RES-CHIP	100	5%	1/16W
R4879	1-218-939-11	RES-CHIP	68	5%	1/16W	R4992	1-218-990-81	SHORT CHIP	0		
R4880	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4994	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4881	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4996	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4882	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4997	1-218-990-81	SHORT CHIP	0		
R4883	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4999	1-218-951-11	RES-CHIP	680	5%	1/16W
R4884	1-218-990-81	SHORT CHIP	0			R5000	1-218-951-11	RES-CHIP	680	5%	1/16W
R4887	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5001	1-218-990-81	SHORT CHIP	0		
R4888	1-218-990-81	SHORT CHIP	0			R5002	1-208-885-11	METAL CHIP	820	0.5%	1/16W
R4889	1-218-990-81	SHORT CHIP	0			R5003	1-218-951-11	RES-CHIP	680	5%	1/16W
R4890	1-216-864-11	SHORT CHIP	0			R5004	1-218-951-11	RES-CHIP	680	5%	1/16W
R4891	1-216-864-11	SHORT CHIP	0			R5005	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R4903	1-218-935-11	RES-CHIP	33	5%	1/16W	R5006	1-218-935-11	RES-CHIP	33	5%	1/16W
R4908	1-216-864-11	SHORT CHIP	0			R5007	1-218-990-81	SHORT CHIP	0		
R4915	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W	R5012	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4916	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R5013	1-218-933-11	RES-CHIP	22	5%	1/16W
R4918	1-218-935-11	RES-CHIP	33	5%	1/16W	R5014	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4919	1-218-935-11	RES-CHIP	33	5%	1/16W	R5015	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4921	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W	R5016	1-218-990-81	SHORT CHIP	0		
R4922	1-218-941-11	RES-CHIP	100	5%	1/16W	R5017	1-218-990-81	SHORT CHIP	0		
R4924	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W	R5018	1-218-933-11	RES-CHIP	22	5%	1/16W
R4925	1-218-941-11	RES-CHIP	100	5%	1/16W	R5019	1-218-935-11	RES-CHIP	33	5%	1/16W
R4927	1-208-871-81	METAL CHIP	220	0.5%	1/16W	R5020	1-216-864-11	SHORT CHIP	0		
R4929	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5021	1-216-864-11	SHORT CHIP	0		
R4933	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W	R5119	1-218-990-81	SHORT CHIP	0		
R4934	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W	R5120	1-218-990-81	SHORT CHIP	0		
R4935	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R5121	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5123	1-218-937-11	RES-CHIP	47	5%	1/16W	R5224	1-218-990-81	SHORT CHIP	0		
R5124	1-218-990-81	SHORT CHIP	0			R5225	1-242-967-81	RES-CHIP	1	5%	1/16W
R5125	1-218-990-81	SHORT CHIP	0			R5405	1-218-939-11	RES-CHIP	68	5%	1/16W
R5126	1-218-935-11	RES-CHIP	33	5%	1/16W	R5406	1-218-939-11	RES-CHIP	68	5%	1/16W
R5127	1-218-933-11	RES-CHIP	22	5%	1/16W	R5407	1-218-937-11	RES-CHIP	47	5%	1/16W
R5128	1-218-937-11	RES-CHIP	47	5%	1/16W	R5408	1-218-937-11	RES-CHIP	47	5%	1/16W
R5129	1-218-943-11	RES-CHIP	150	5%	1/16W	R5409	1-218-939-11	RES-CHIP	68	5%	1/16W
R5130	1-218-937-11	RES-CHIP	47	5%	1/16W	R5410	1-218-937-11	RES-CHIP	47	5%	1/16W
R5131	1-218-933-11	RES-CHIP	22	5%	1/16W	R5411	1-218-933-11	RES-CHIP	22	5%	1/16W
R5132	1-218-990-81	SHORT CHIP	0			R5412	1-218-933-11	RES-CHIP	22	5%	1/16W
R5133	1-218-935-11	RES-CHIP	33	5%	1/16W	R5414	1-218-990-81	SHORT CHIP	0		
R5134	1-218-937-11	RES-CHIP	47	5%	1/16W	R5416	1-218-990-81	SHORT CHIP	0		
R5135	1-218-937-11	RES-CHIP	47	5%	1/16W	R5417	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5136	1-218-937-11	RES-CHIP	47	5%	1/16W	R5418	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5137	1-218-937-11	RES-CHIP	47	5%	1/16W	R5419	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5138	1-218-937-11	RES-CHIP	47	5%	1/16W	R5420	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5140	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5422	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5141	1-218-933-11	RES-CHIP	22	5%	1/16W	R5423	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5142	1-218-937-11	RES-CHIP	47	5%	1/16W	R5427	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5143	1-218-937-11	RES-CHIP	47	5%	1/16W	R5430	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5144	1-218-933-11	RES-CHIP	22	5%	1/16W	R5431	1-218-933-11	RES-CHIP	22	5%	1/16W
R5145	1-218-933-11	RES-CHIP	22	5%	1/16W	R5432	1-218-933-11	RES-CHIP	22	5%	1/16W
R5146	1-218-937-11	RES-CHIP	47	5%	1/16W	R5433	1-218-933-11	RES-CHIP	22	5%	1/16W
R5154	1-218-933-11	RES-CHIP	22	5%	1/16W	R5434	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5159	1-218-939-11	RES-CHIP	68	5%	1/16W	R5435	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5169	1-218-990-81	SHORT CHIP	0			R5436	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5182	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5437	1-218-933-11	RES-CHIP	22	5%	1/16W
R5188	1-218-937-11	RES-CHIP	47	5%	1/16W	R5438	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5193	1-218-933-11	RES-CHIP	22	5%	1/16W	R5440	1-218-941-81	RES-CHIP	100	5%	1/16W
R5194	1-218-933-11	RES-CHIP	22	5%	1/16W	R5441	1-218-937-11	RES-CHIP	47	5%	1/16W
R5195	1-218-990-81	SHORT CHIP	0			R5444	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5196	1-218-990-81	SHORT CHIP	0			R5445	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5197	1-218-933-11	RES-CHIP	22	5%	1/16W	R5446	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5198	1-218-937-11	RES-CHIP	47	5%	1/16W	R5449	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5199	1-218-937-11	RES-CHIP	47	5%	1/16W	R5450	1-218-990-81	SHORT CHIP	0		
R5203	1-218-969-11	RES-CHIP	22K	5%	1/16W	R5452	1-218-990-81	SHORT CHIP	0		
R5204	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5453	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5205	1-218-990-81	SHORT CHIP	0			R5456	1-218-933-11	RES-CHIP	22	5%	1/16W
R5207	1-218-990-81	SHORT CHIP	0			R5466	1-218-939-11	RES-CHIP	68	5%	1/16W
R5209	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R5467	1-218-933-11	RES-CHIP	22	5%	1/16W
R5210	1-218-990-81	SHORT CHIP	0			R5468	1-218-933-11	RES-CHIP	22	5%	1/16W
R5212	1-218-990-81	SHORT CHIP	0			R5471	1-218-933-11	RES-CHIP	22	5%	1/16W
R5216	1-218-990-81	SHORT CHIP	0			R5472	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5217	1-218-943-11	RES-CHIP	150	5%	1/16W	R5473	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5218	1-218-990-81	SHORT CHIP	0			R5476	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5219	1-218-929-11	RES-CHIP	10	5%	1/16W	R5478	1-218-990-81	SHORT CHIP	0		
R5220	1-218-929-11	RES-CHIP	10	5%	1/16W	R5479	1-218-990-81	SHORT CHIP	0		
R5221	1-218-929-11	RES-CHIP	10	5%	1/16W	R5480	1-218-937-11	RES-CHIP	47	5%	1/16W
R5222	1-218-929-11	RES-CHIP	10	5%	1/16W	R5481	1-218-937-11	RES-CHIP	47	5%	1/16W
R5223	1-218-990-81	SHORT CHIP	0			R5482	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5483	1-218-933-11	RES-CHIP	22	5%	1/16W	R5595	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5484	1-218-933-11	RES-CHIP	22	5%	1/16W	R5596	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R5485	1-218-933-11	RES-CHIP	22	5%	1/16W	R5597	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R5487	1-218-933-11	RES-CHIP	22	5%	1/16W	R5598	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R5492	1-218-990-81	SHORT CHIP	0			R5599	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5494	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5620	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5495	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5624	1-218-990-81	SHORT CHIP	0		
R5498	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5625	1-218-990-81	SHORT CHIP	0		
R5501	1-218-937-11	RES-CHIP	47	5%	1/16W	R5626	1-218-990-81	SHORT CHIP	0		
R5506	1-218-990-81	SHORT CHIP	0			R5630	1-218-990-81	SHORT CHIP	0		
R5512	1-218-941-81	RES-CHIP	100	5%	1/16W	R5631	1-218-990-81	SHORT CHIP	0		
R5513	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5632	1-216-864-11	SHORT CHIP	0		
R5514	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5633	1-216-864-11	SHORT CHIP	0		
R5516	1-218-990-81	SHORT CHIP	0			R5900	1-218-990-81	SHORT CHIP	0		
R5517	1-218-941-81	RES-CHIP	100	5%	1/16W	R5901	1-218-990-81	SHORT CHIP	0		
R5519	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5904	1-218-990-81	SHORT CHIP	0		
R5524	1-218-937-11	RES-CHIP	47	5%	1/16W	R5905	1-218-990-81	SHORT CHIP	0		
R5525	1-218-973-11	RES-CHIP	47K	5%	1/16W	R5911	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5532	1-218-937-11	RES-CHIP	47	5%	1/16W	R5913	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5537	1-218-939-11	RES-CHIP	68	5%	1/16W	R5914	1-218-952-11	RES-CHIP	820	5%	1/16W
R5542	1-218-933-11	RES-CHIP	22	5%	1/16W	R5915	1-218-952-11	RES-CHIP	820	5%	1/16W
R5547	1-218-933-11	RES-CHIP	22	5%	1/16W	R5918	1-216-818-11	METAL CHIP	560	5%	1/10W
R5548	1-218-933-11	RES-CHIP	22	5%	1/16W	R5919	1-216-818-11	METAL CHIP	560	5%	1/10W
R5550	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5920	1-218-990-81	SHORT CHIP	0		
R5551	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5921	1-218-990-81	SHORT CHIP	0		
R5552	1-218-990-81	SHORT CHIP	0			R5928	1-218-990-81	SHORT CHIP	0		
R5553	1-218-933-11	RES-CHIP	22	5%	1/16W	R5930	1-218-990-81	SHORT CHIP	0		
R5555	1-218-933-11	RES-CHIP	22	5%	1/16W	R5933	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5556	1-218-933-11	RES-CHIP	22	5%	1/16W	R5936	1-218-990-81	SHORT CHIP	0		
R5561	1-218-933-11	RES-CHIP	22	5%	1/16W	R5939	1-218-933-11	RES-CHIP	22	5%	1/16W
R5565	1-218-937-11	RES-CHIP	47	5%	1/16W	R5942	1-218-990-81	SHORT CHIP	0		
R5567	1-218-933-11	RES-CHIP	22	5%	1/16W	< RESISTOR CHIP >					
R5570	1-218-933-11	RES-CHIP	22	5%	1/16W	RB3500	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5571	1-218-933-11	RES-CHIP	22	5%	1/16W	RB3501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5574	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB3502	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5575	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB3503	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5576	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB3504	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5578	1-218-937-11	RES-CHIP	47	5%	1/16W	RB3600	1-234-702-11	RES, NETWORK 68	(1005X4)		
R5580	1-218-939-11	RES-CHIP	68	5%	1/16W	RB3601	1-234-702-11	RES, NETWORK 68	(1005X4)		
R5581	1-218-939-11	RES-CHIP	68	5%	1/16W	RB3602	1-234-372-11	RES, NETWORK 100	(1005X4)		
R5582	1-218-939-11	RES-CHIP	68	5%	1/16W	RB3603	1-234-372-11	RES, NETWORK 100	(1005X4)		
R5584	1-218-937-11	RES-CHIP	47	5%	1/16W	RB3604	1-234-372-11	RES, NETWORK 100	(1005X4)		
R5586	1-218-989-11	RES-CHIP	1M	5%	1/16W	RB3605	1-234-702-11	RES, NETWORK 68	(1005X4)		
R5588	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB3606	1-234-702-11	RES, NETWORK 68	(1005X4)		
R5589	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB3607	1-234-372-11	RES, NETWORK 100	(1005X4)		
R5590	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB3608	1-234-372-11	RES, NETWORK 100	(1005X4)		
R5592	1-218-937-11	RES-CHIP	47	5%	1/16W	RB3700	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5593	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB3701	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)		
R5594	1-208-923-11	METAL CHIP	33K	0.5%	1/16W						

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB3800	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB4817	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB3801	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB4818	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB3802	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB4819	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB3803	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB4820	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB3804	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	RB4821	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB3805	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB4822	1-234-795-21	RES, NETWORK 0X4	(2010)
RB4300	1-234-945-21	RES, NETWORK 100	(1005X4)	RB4823	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4301	1-234-945-21	RES, NETWORK 100	(1005X4)	RB4824	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4302	1-234-795-21	RES, NETWORK 0X4	(2010)	RB4825	1-234-945-21	RES, NETWORK 100	(1005X4)
RB4303	1-234-795-21	RES, NETWORK 0X4	(2010)	RB4826	1-234-945-21	RES, NETWORK 100	(1005X4)
RB4304	1-234-795-21	RES, NETWORK 0X4	(2010)	RB4827	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB4314	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5108	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4318	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5109	1-234-795-21	RES, NETWORK 0X4	(2010)
RB4503	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5110	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4505	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5111	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4507	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5112	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4512	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5113	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4514	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	RB5114	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4515	1-234-380-21	RES, NETWORK 47K	(1005X4)	RB5115	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4516	1-234-380-21	RES, NETWORK 47K	(1005X4)	RB5116	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB4517	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5117	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB4518	1-234-377-21	RES, NETWORK 4.7K	(1005X4)	RB5118	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB4604	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5119	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB4605	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5122	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4608	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5123	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4609	1-234-795-21	RES, NETWORK 0X4	(2010)	RB5125	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4610	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5129	1-234-795-21	RES, NETWORK 0X4	(2010)
RB4611	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5130	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4612	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5133	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4613	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5142	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB4614	1-246-204-21	RES, CHIP NETWORK 600X8	(3816)	RB5143	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB4615	1-246-204-21	RES, CHIP NETWORK 600X8	(3816)	RB5144	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4616	1-246-204-21	RES, CHIP NETWORK 600X8	(3816)	RB5145	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4617	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5146	1-234-795-21	RES, NETWORK 0X4	(2010)
RB4618	1-234-378-11	RES, NETWORK 10K	(1005X4)	RB5200	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4619	1-234-944-21	RES, NETWORK 47	(1005X4)	RB5201	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4800	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB5202	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4801	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5203	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4802	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB5204	1-234-369-21	RES, NETWORK 10	(1005X4)
RB4803	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5400	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4804	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5409	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4806	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5416	1-234-944-21	RES, NETWORK 47	(1005X4)
RB4807	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5417	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4809	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5419	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4810	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	RB5420	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4811	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5421	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4813	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5427	1-234-943-21	RES, NETWORK 22	(1005X4)
RB4814	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5432	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4815	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	RB5433	1-234-378-11	RES, NETWORK 10K	(1005X4)
RB4816	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	RB5434	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB5435	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	*A-1337-469-A AE Board, Complete			
RB5436	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	< CAPACITOR >			
RB5437	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C001	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
RB5438	1-234-943-21	RES, NETWORK 22	(1005X4)	C002	1-131-661-21	ELECT CHIP 100UF	20% 10V
RB5439	1-234-943-21	RES, NETWORK 22	(1005X4)	C003	1-137-993-21	ELECT CHIP 470UF	20% 16V
RB5441	1-234-943-21	RES, NETWORK 22	(1005X4)	C005	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
RB5443	1-234-943-21	RES, NETWORK 22	(1005X4)	C006	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
RB5444	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C011	1-137-993-21	ELECT CHIP 470UF	20% 16V
RB5445	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)	C021	1-164-872-11	CERAMIC CHIP 82PF	5.00% 50V
RB5446	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C022	1-164-872-11	CERAMIC CHIP 82PF	5.00% 50V
RB5447	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C023	1-164-872-11	CERAMIC CHIP 82PF	5.00% 50V
RB5448	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C201	1-126-395-11	ELECT CHIP 22UF	20.00% 16V
RB5449	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C203	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5450	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C205	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB5451	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C207	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB5452	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)	C209	1-128-303-11	ELECT CHIP 220UF	20.00% 16V
RB5453	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C212	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
RB5454	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
RB5455	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	C214	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
RB5456	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)	C216	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
RB5502	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)	C220	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5503	1-234-943-21	RES, NETWORK 22	(1005X4)	C221	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5504	1-234-943-21	RES, NETWORK 22	(1005X4)	C222	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5505	1-234-943-21	RES, NETWORK 22	(1005X4)	C224	1-127-988-81	CERAMIC CHIP 0.015UF	10% 16V
RB5600	1-234-943-21	RES, NETWORK 22	(1005X4)	C225	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
RB5900	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C226	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
RB5901	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)	C227	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V
RB5902	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	C236	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5903	1-234-943-21	RES, NETWORK 22	(1005X4)	C237	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5904	1-234-795-21	RES, NETWORK 0X4	(2010)	C238	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
RB5905	1-234-944-21	RES, NETWORK 47	(1005X4)	C242	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
< VARISTOR >				C243	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4300	1-805-774-21	VARISTOR, CHIP		C244	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4301	1-805-774-21	VARISTOR, CHIP		C245	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4600	1-804-988-21	VARISTOR, CHIP	(1608)	C246	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4601	1-804-988-21	VARISTOR, CHIP	(1608)	C247	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4602	1-804-988-21	VARISTOR, CHIP	(1608)	C250	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
VD4603	1-804-988-21	VARISTOR, CHIP	(1608)	C253	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
VD4604	1-804-988-21	VARISTOR, CHIP	(1608)	C255	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
< CRYSTAL >				C256	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
X3500	1-813-682-21	QUARTZ CRISTAL OSCILLATOR		C258	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
X3501	1-813-055-11	QUARTZ CRYSTAL UNIT		C260	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
X4900	1-813-985-11	QUARTZ CRYSTAL OSCILLATOR		C261	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
X4901	1-814-023-11	QUARTS CRYSTAL UNIT		C264	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
X4902	1-813-984-11	OSCILLATOR, CRYSTAL		C265	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
X5900	1-795-219-21	VIBRATOR, CRYSTAL		C400	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
				C401	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
				C402	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C403	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C601	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C404	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C602	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C405	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C603	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C406	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C604	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C407	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C605	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C408	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C606	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C409	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C607	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C410	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C608	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C411	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C609	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C412	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C610	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C413	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C611	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C414	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C612	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C415	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C613	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C416	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C614	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C417	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C615	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C418	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C617	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C419	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C618	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C420	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C619	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C421	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C625	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C422	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C630	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C423	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C631	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C430	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C632	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C431	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C636	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C432	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C637	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C433	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C638	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C434	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C639	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C435	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C640	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C436	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C642	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C437	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C648	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C440	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C649	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C441	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C650	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C442	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C651	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C443	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C653	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C444	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C657	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C445	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C658	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C446	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C660	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C447	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C661	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C448	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C662	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C449	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C663	1-128-360-11	ELECT CHIP 220UF	20.00% 10V
C450	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C664	1-128-360-11	ELECT CHIP 220UF	20.00% 10V
C451	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C665	1-114-330-11	CERAMIC CHIP 2.2UF	10% 16V
C453	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C666	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C455	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	C667	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C456	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C668	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C457	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C669	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C458	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C670	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C459	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C671	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C460	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C672	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C461	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C673	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C600	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	C674	1-112-781-11	CERAMIC CHIP 1UF	10% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C675	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C836	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V
C677	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C837	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C678	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C838	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C679	1-126-392-11	ELECT CHIP 100UF	20.00% 6.3V	C839	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V
C680	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C840	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C681	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C841	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C682	1-100-354-21	ELECT CHIP 220UF	20% 6.3V	C842	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C684	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C843	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C685	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C844	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C686	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C845	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C687	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C846	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C688	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C847	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C690	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C848	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C692	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C849	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C693	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C850	1-162-979-11	CERAMIC CHIP 0.0027UF	10.00% 50V
C694	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V	C851	1-162-979-11	CERAMIC CHIP 0.0027UF	10.00% 50V
C695	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C855	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C696	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V	C856	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C697	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C857	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C698	1-137-993-21	ELECT CHIP 470UF	20% 16V	C858	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C699	1-100-354-21	ELECT CHIP 220UF	20% 6.3V	C859	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C700	1-126-206-11	ELECT CHIP 100UF	20.00% 6.3V	C860	1-100-158-91	CERAMIC CHIP 1000PF	5% 100V
C800	1-126-392-11	ELECT CHIP 100UF	20.00% 6.3V	C861	1-100-158-91	CERAMIC CHIP 1000PF	5% 100V
C801	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C862	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C802	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C863	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C803	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V	C864	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C804	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C865	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C805	1-100-908-11	CERAMIC CHIP 1UF	10% 6.3V	C866	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C806	1-128-589-11	ELECT CHIP 47UF	20% 6.3V	C867	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C807	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C868	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C808	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C869	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C810	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C872	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C811	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V	C873	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C812	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C874	1-113-701-21	ELECT CHIP 22UF	20.00% 16V
C813	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C875	1-113-701-21	ELECT CHIP 22UF	20.00% 16V
C814	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C876	1-137-893-11	ELECT CHIP 22UF	20% 16V
C818	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C877	1-137-893-11	ELECT CHIP 22UF	20% 16V
C819	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C880	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C821	1-128-589-11	ELECT CHIP 47UF	20% 6.3V	C881	1-128-536-11	ELECT CHIP 100UF	20.00% 25V
C822	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C882	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C824	1-112-046-11	CERAMIC CHIP 4.7UF	10% 6.3V	C883	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C826	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C888	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C827	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C889	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C828	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C890	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C829	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C891	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C830	1-126-392-11	ELECT CHIP 100UF	20.00% 6.3V	C896	1-126-396-11	ELECT CHIP 47UF	20.00% 16V
C831	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C897	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C832	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C898	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C833	1-114-130-11	CERAMIC CHIP 1UF	6.3V	C899	1-126-394-11	ELECT CHIP 10UF	20.00% 16V
C835	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	C900	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C901	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1211	1-126-397-11	ELECT CHIP 33UF	20.00%	25V
C903	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1213	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C904	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1214	1-165-871-21	ELECT CHIP 22UF	20%	6.3V
C906	1-112-835-11	ELECT 3300UF	20%	25V	C1215	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C907	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C1216	1-126-396-11	ELECT CHIP 47UF	20.00%	16V
C908	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C1217	1-126-392-11	ELECT CHIP 100UF	20.00%	6.3V
C909	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1218	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C910	1-115-670-11	ELECT CHIP 220UF	20.00%	35V	C1219	1-104-905-11	DOUBLE LAYER 0.22F		5.5V
C911	1-115-670-11	ELECT CHIP 220UF	20.00%	35V	C1220	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C912	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1221	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C913	1-131-696-11	FILM 0.22UF	5%	50V	C1222	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C914	1-131-696-11	FILM 0.22UF	5%	50V	C1223	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V
C915	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1224	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C916	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1225	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C917	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1226	1-164-843-11	CERAMIC CHIP 3PF	0.25PF	50V
C918	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1231	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V
C919	1-131-696-11	FILM 0.22UF	5%	50V	C1233	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C920	1-131-696-11	FILM 0.22UF	5%	50V	C1234	1-112-776-11	CERAMIC CHIP 0.0047UF	10%	50V
C921	1-131-696-11	FILM 0.22UF	5%	50V	C1235	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C922	1-131-696-11	FILM 0.22UF	5%	50V	C1236	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C923	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1238	1-126-204-11	ELECT CHIP 47UF	20.00%	16V
C924	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C1239	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C925	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C1240	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C926	1-126-396-11	ELECT CHIP 47UF	20.00%	16V	C1241	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C927	1-126-396-11	ELECT CHIP 47UF	20.00%	16V	C1242	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C928	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C1243	1-112-067-11	CERAMIC CHIP 0.22UF	10%	16V
C929	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C1244	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C930	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1245	1-112-046-11	CERAMIC CHIP 4.7UF	10%	6.3V
C931	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1246	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C932	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1247	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C933	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1248	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C934	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1249	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C935	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1250	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C936	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1251	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C937	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V	C1252	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C938	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1253	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C939	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C1254	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C940	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C1255	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C941	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C1256	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C943	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1257	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1200	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1258	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C1202	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C1259	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C1203	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1260	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C1204	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1261	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1205	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1264	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1206	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1265	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1207	1-126-397-11	ELECT CHIP 33UF	20.00%	25V	C1266	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1208	1-126-394-11	ELECT CHIP 10UF	20.00%	16V	C1267	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C1209	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1268	1-124-779-00	ELECT CHIP 10UF	20.00%	16V
C1210	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1471	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C1472	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	CN006	*1-821-377-11	BOARD TO BOARD CONNECTOR 80P	
C1473	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	CN202	*1-819-474-11	HEADER ASSEMBLY FOR PWB 6P	
C1474	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN400	*1-417-602-11	SOCKET 21PIN	
C1475	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN401	*1-417-602-11	SOCKET 21PIN	
C1601	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V	CN800	*1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P	
C1603	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 50V	CN1200	*1-779-936-51	CONNECTOR, FFC/FPC 18P	
C1604	1-164-844-11	CERAMIC CHIP 4PF	0.25PF 50V	CN1201	*1-779-071-51	CONNECTOR, FFC/FPC 16P	
C1605	1-164-844-11	CERAMIC CHIP 4PF	0.25PF 50V	< DIODE >			
C1606	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D201	6-501-817-01	DIODE MA2J1110GLS0	
C1607	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	D209	6-501-657-01	DIODE MA24D5000BS0	
C1608	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	D211	6-500-579-01	DIODE PTZ-TE25-6.8B	
C1609	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	D214	6-500-335-01	DIODE MC2838-T112-1	
C1610	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	D403	6-501-754-01	DIODE MAZ8091G0LS0	
C1611	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	D600	6-500-335-01	DIODE MC2838-T112-1	
C1612	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D601	6-500-335-01	DIODE MC2838-T112-1	
C1613	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D602	6-501-817-01	DIODE MA2J1110GLS0	
C1614	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	D603	6-501-817-01	DIODE MA2J1110GLS0	
C1615	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	D804	6-501-749-01	DIODE MAZ8082G0LS0	
C1616	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	D805	6-501-817-01	DIODE MA2J1110GLS0	
C1617	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D806	6-501-817-01	DIODE MA2J1110GLS0	
C1618	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D807	6-501-817-01	DIODE MA2J1110GLS0	
C1619	1-112-068-11	CERAMIC CHIP 220PF	10% 50V	D808	6-501-732-01	DIODE MAZ8056G0LS0	
C1620	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D809	6-501-732-01	DIODE MAZ8056G0LS0	
C1621	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	D810	6-501-732-01	DIODE MAZ8056G0LS0	
C1622	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	D811	6-501-732-01	DIODE MAZ8056G0LS0	
C1623	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	D812	6-501-732-01	DIODE MAZ8056G0LS0	
C1624	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	D1200	6-500-334-01	DIODE MC2836-T112-1	
C1625	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	D1201	8-719-058-24	DIODE RB501V-40TE-17	
C1626	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	D1204	6-501-817-01	DIODE MA2J1110GLS0	
C1627	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	D1207	6-500-334-01	DIODE MC2836-T112-1	
C1628	1-126-396-11	ELECT CHIP 47UF	20.00% 16V	D1208	6-500-335-01	DIODE MC2838-T112-1	
C1633	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D1211	6-500-334-01	DIODE MC2836-T112-1	
C1634	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D1212	6-500-335-01	DIODE MC2838-T112-1	
C1635	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D1600	6-501-817-01	DIODE MA2J1110GLS0	
C1636	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	D1601	6-501-817-01	DIODE MA2J1110GLS0	
C1637	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	ET1550	1-780-482-11	EARTH TERMINAL	
C1638	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	ET1551	1-780-482-11	EARTH TERMINAL	
C1639	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	ET1552	1-780-482-11	EARTH TERMINAL	
C1640	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	ET1553	1-780-482-11	EARTH TERMINAL	
C1641	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	ET1554	1-780-482-11	EARTH TERMINAL	
C1649	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	ET1555	1-780-482-11	EARTH TERMINAL	
C1650	1-126-394-11	ELECT CHIP 10UF	20.00% 16V	ET1557	1-780-482-11	EARTH TERMINAL	
C1651	1-100-597-91	CERAMIC CHIP 0.1UF	10% 25V	ET1558	1-780-482-11	EARTH TERMINAL	
< CONNECTOR >				ET1559	1-780-482-11	EARTH TERMINAL	
CN001	*1-819-339-11	HEADER ASSEMBLY FOR PWB 12P		ET1560	1-780-482-11	EARTH TERMINAL	
CN002	*1-819-330-11	HEADER ASSEMBLY FOR PWB 8P		ET1561	1-780-482-11	EARTH TERMINAL	
CN003	*1-818-714-21	HEADER ASSEMBLY 20P		ET1563	1-780-482-11	EARTH TERMINAL	
CN004	*1-821-077-11	HEADER ASSEMBLY FOR PWB 40P		ET1565	1-780-482-11	EARTH TERMINAL	
CN005	*1-821-378-11	BOARD TO BOARD CONNECTOR 50P					

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

AE

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ET1566	1-780-482-11	EARTH TERMINAL		FL1200	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
ET1567	1-780-482-11	EARTH TERMINAL		FL1201	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
< FUSE >				FL1202	1-234-494-21	FILTER, EMI REMOVAL (SMD)	
F001 Δ	1-576-933-21	FUSE	5A 24V	< IC >			
F200 Δ	1-576-603-21	FUSE	3.15A 24V	IC001	6-709-731-01	IC ADT75ARZ-REEL	
F800 Δ	1-576-842-11	FUSE	0.63A 32V	IC200	6-708-603-01	IC PQ070XNA1ZPH	
< FERRITE BEAD >				IC202	6-708-762-01	IC PQ200WNA1ZPH	
FB001	1-400-089-21	FERRITE	0UH	IC204	8-759-581-11	IC NJM2125F(Te2)	
FB002	1-400-089-21	FERRITE	0UH	IC205	6-710-922-01	IC BD9853AFV-E2	
FB010	1-400-089-21	FERRITE	0UH	IC206	6-708-603-01	IC PQ070XNA1ZPH	
FB021	1-414-445-11	FERRITE	0UH	IC207	6-708-603-01	IC PQ070XNA1ZPH	
FB023	1-414-445-11	FERRITE	0UH	IC208	6-708-762-01	IC PQ200WNA1ZPH	
FB024	1-414-445-11	FERRITE	0UH	IC600	6-709-777-01	IC ADA4861-3YRZ-RL7	
FB026	1-414-445-11	FERRITE	0UH	IC601	8-753-289-65	IC CXA2240AR-TL	
FB029	1-469-082-21	FERRITE	0UH	IC802	6-711-253-01	IC CXD9890AQ	
FB033	1-469-637-21	FERRITE	0UH	IC804	8-759-278-58	IC NJM4558V-TE2	
FB034	1-469-637-21	FERRITE	0UH	IC805	8-759-278-58	IC NJM4558V-TE2	
FB035	1-469-637-21	FERRITE	0UH	IC806	8-759-592-48	IC TC7SZ32FU (TE85R)	
FB036	1-469-637-21	FERRITE	0UH	IC807	6-709-927-01	IC RT8H225C-TP-2	
FB037	1-400-089-21	FERRITE	0UH	IC808	6-710-904-01	IC TPA3100D2PHPR	
FB041	1-469-082-21	FERRITE	0UH	IC809	6-709-927-01	IC RT8H225C-TP-2	
FB042	1-414-445-11	FERRITE	0UH	IC810	8-759-359-49	IC NJM3414AV (TE2)	
FB043	1-469-082-21	FERRITE	0UH	IC811	6-709-927-01	IC RT8H225C-TP-2	
FB400	1-414-554-21	FERRITE	0UH	IC1200	6-705-373-01	IC MM3123DPLE	
FB401	1-414-554-21	FERRITE	0UH	IC1201	6-709-512-01	IC S-1132B18-M5T1G	
FB402	1-414-554-21	FERRITE	0UH	IC1202	6-709-517-01	IC S-35390A-J8T1G	
FB403	1-414-554-21	FERRITE	0UH	IC1203	6-708-219-01	IC MB91305PMC-G-BNDE1	
FB404	1-414-554-21	FERRITE	0UH	IC1204	6-703-175-01	IC PST3629UL	
FB405	1-414-554-21	FERRITE	0UH	IC1205	6-704-067-01	IC M24128-BWMN6T(A)	
FB406	1-414-554-21	FERRITE	0UH	IC1206	6-807-396-01	IC S29AL016D70TFI010-FIX2-A	
FB600	1-400-794-21	FERRITE	0UH	IC1207	6-706-419-01	IC LM393DT (A)	
FB800	1-400-212-22	FERRITE	0UH	IC1208	8-759-523-03	IC TC74HC4066AFT (EL)	
FB1200	1-469-082-21	FERRITE	0UH	IC1209	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
FB1201	1-400-794-21	FERRITE	0UH	IC1600	6-702-714-01	IC MSP3417G-QG-B8V3	
FB1202	1-400-580-21	FERRITE	0UH	IC1602	8-759-278-58	IC NJM4558V-TE2	
FB1203	1-469-082-21	FERRITE	0UH	IC1604	6-709-927-01	IC RT8H225C-TP-2	
FB1204	1-469-082-21	FERRITE	0UH	< SOCKET >			
FB1205	1-469-082-21	FERRITE	0UH	J400	1-821-064-11	PHONO JACK 10P	
FB1206	1-469-082-21	FERRITE	0UH	J401	1-819-358-11	PHONO JACK	
FB1600	1-400-794-21	FERRITE	0UH	J402	1-507-792-00	JACK	
FB1601	1-400-794-21	FERRITE	0UH	J403	1-819-358-11	PHONO JACK	
FB1602	1-400-040-22	FERRITE	0UH	< COIL >			
FB1603	1-400-040-22	FERRITE	0UH	L201	1-416-344-11	INDUCTOR 10UH	
FB1604	1-400-499-21	FERRITE	0UH	L203	1-457-195-11	INDUCTOR 4.7UH	
< FILTER >				L206	1-412-058-11	INDUCTOR 10UH	
FL001	1-234-494-21	FILTER, EMI REMOVAL (SMD)		L600	1-412-058-11	INDUCTOR 10UH	
				L602	1-412-058-11	INDUCTOR 10UH	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
L604	1-412-058-11	INDUCTOR	10UH	Q816	8-729-027-44	TRANSISTOR DTC114TKA-T146	
L605	1-412-058-11	INDUCTOR	10UH	Q817	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L606	1-412-058-11	INDUCTOR	10UH	Q818	8-729-028-83	TRANSISTOR DTA124EUA-T106	
L607	1-412-058-11	INDUCTOR	10UH	Q819	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L802	1-469-555-21	INDUCTOR	10UH	Q820	8-729-141-73	TRANSISTOR 2SC3624A-T1L15L16	
L803	1-469-555-21	INDUCTOR	10UH	Q821	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L804	1-469-555-21	INDUCTOR	10UH	Q822	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L805	1-469-555-21	INDUCTOR	10UH	Q823	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L807	1-481-083-11	INDUCTOR	22UH	Q824	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L808	1-457-485-11	INDUCTOR	22UH	Q1200	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L809	1-457-485-11	INDUCTOR	22UH	Q1201	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L810	1-457-485-11	INDUCTOR	22UH	Q1202	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L811	1-457-485-11	INDUCTOR	22UH	Q1203	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L1200	1-412-058-11	INDUCTOR	10UH	Q1204	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L1201	1-412-058-11	INDUCTOR	10UH	Q1205	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L1202	1-469-555-21	INDUCTOR	10UH	Q1206	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L1600	1-469-555-21	INDUCTOR	10UH	Q1207	8-729-038-11	TRANSISTOR RT1P140C-TP-1	
L1601	1-412-990-41	INDUCTOR	8.2UH	Q1208	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L1602	1-469-555-21	INDUCTOR	10UH	Q1209	8-729-038-11	TRANSISTOR RT1P140C-TP-1	
L1604	1-469-555-21	INDUCTOR	10UH	Q1210	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< TRANSISTOR >				Q1211	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q200	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q1212	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q202	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q1213	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q205	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q1214	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q207	6-551-382-01	TRANSISTOR RSS040P03FD5TB		Q1215	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q210	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q1216	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
Q600	8-729-122-63	TRANSISTOR 2SA1226-E4		Q1217	8-729-038-11	TRANSISTOR RT1P140C-TP-1	
Q601	8-729-122-63	TRANSISTOR 2SA1226-E4		Q1218	8-729-027-50	TRANSISTOR DTC123JKA-T146	
Q602	8-729-122-63	TRANSISTOR 2SA1226-E4		Q1219	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q603	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q1228	6-551-387-01	TRANSISTOR SSM6N16FU	
Q604	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q1471	6-551-456-01	TRANSISTOR RTR020P02TL	
Q605	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q1472	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q606	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q1600	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
Q610	8-729-027-43	TRANSISTOR DTC114EKA-T146		Q1601	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
Q613	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q1602	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q614	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		Q1607	6-551-364-01	TRANSISTOR DTC614TUT106	
Q616	6-550-832-01	TRANSISTOR SI2301BDS-T1		Q1608	6-551-364-01	TRANSISTOR DTC614TUT106	
Q617	8-729-027-43	TRANSISTOR DTC114EKA-T146		< RESISTOR >			
Q805	6-551-364-01	TRANSISTOR DTC614TUT106		R001	1-218-990-81	SHORT CHIP	0
Q806	6-551-364-01	TRANSISTOR DTC614TUT106		R002	1-218-990-81	SHORT CHIP	0
Q807	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R003	1-218-990-81	SHORT CHIP	0
Q808	8-729-027-43	TRANSISTOR DTC114EKA-T146		R004	1-218-990-81	SHORT CHIP	0
Q809	8-729-013-28	TRANSISTOR HN1B01FU-TE85R		R005	1-218-990-81	SHORT CHIP	0
Q810	6-551-364-01	TRANSISTOR DTC614TUT106		R006	1-218-990-81	SHORT CHIP	0
Q811	6-551-364-01	TRANSISTOR DTC614TUT106		R007	1-218-990-81	SHORT CHIP	0
Q812	6-551-271-01	TRANSISTOR RT3AMMM		R012	1-218-990-81	SHORT CHIP	0
Q813	6-551-271-01	TRANSISTOR RT3AMMM		R013	1-218-990-81	SHORT CHIP	0
Q814	8-729-027-43	TRANSISTOR DTC114EKA-T146		R014	1-218-990-81	SHORT CHIP	0
Q815	8-729-027-44	TRANSISTOR DTC114TKA-T146					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R015	1-218-990-81	SHORT CHIP	0			R079	1-218-990-81	SHORT CHIP	0		
R016	1-216-801-11	METAL CHIP	22	5%	1/10W	R080	1-218-990-81	SHORT CHIP	0		
R017	1-216-801-11	METAL CHIP	22	5%	1/10W	R081	1-218-990-81	SHORT CHIP	0		
R018	1-216-801-11	METAL CHIP	22	5%	1/10W	R082	1-218-990-81	SHORT CHIP	0		
R028	1-218-933-11	RES-CHIP	22	5%	1/16W	R083	1-218-990-81	SHORT CHIP	0		
R029	1-218-933-11	RES-CHIP	22	5%	1/16W	R084	1-218-990-81	SHORT CHIP	0		
R033	1-218-983-11	RES-CHIP	330K	5%	1/16W	R085	1-218-990-81	SHORT CHIP	0		
R034	1-218-980-11	RES-CHIP	180K	5%	1/16W	R086	1-218-990-81	SHORT CHIP	0		
R035	1-218-933-11	RES-CHIP	22	5%	1/16W	R087	1-218-990-81	SHORT CHIP	0		
R037	1-218-990-81	SHORT CHIP	0			R088	1-218-990-81	SHORT CHIP	0		
R038	1-218-990-81	SHORT CHIP	0			R089	1-218-990-81	SHORT CHIP	0		
R039	1-218-990-81	SHORT CHIP	0			R090	1-218-990-81	SHORT CHIP	0		
R040	1-218-990-81	SHORT CHIP	0			R092	1-218-990-81	SHORT CHIP	0		
R041	1-218-990-81	SHORT CHIP	0			R093	1-218-990-81	SHORT CHIP	0		
R042	1-218-990-81	SHORT CHIP	0			R094	1-218-990-81	SHORT CHIP	0		
R043	1-218-990-81	SHORT CHIP	0			R095	1-218-990-81	SHORT CHIP	0		
R044	1-218-990-81	SHORT CHIP	0			R096	1-218-990-81	SHORT CHIP	0		
R045	1-218-990-81	SHORT CHIP	0			R097	1-218-990-81	SHORT CHIP	0		
R046	1-218-990-81	SHORT CHIP	0			R098	1-218-990-81	SHORT CHIP	0		
R047	1-218-990-81	SHORT CHIP	0			R099	1-218-990-81	SHORT CHIP	0		
R048	1-218-990-81	SHORT CHIP	0			R100	1-218-990-81	SHORT CHIP	0		
R049	1-218-990-81	SHORT CHIP	0			R101	1-218-990-81	SHORT CHIP	0		
R050	1-218-990-81	SHORT CHIP	0			R102	1-218-990-81	SHORT CHIP	0		
R051	1-218-990-81	SHORT CHIP	0			R103	1-218-990-81	SHORT CHIP	0		
R052	1-218-990-81	SHORT CHIP	0			R104	1-218-990-81	SHORT CHIP	0		
R053	1-218-990-81	SHORT CHIP	0			R105	1-218-990-81	SHORT CHIP	0		
R054	1-218-990-81	SHORT CHIP	0			R106	1-218-990-81	SHORT CHIP	0		
R055	1-218-990-81	SHORT CHIP	0			R107	1-218-990-81	SHORT CHIP	0		
R056	1-218-990-81	SHORT CHIP	0			R108	1-218-990-81	SHORT CHIP	0		
R058	1-218-990-81	SHORT CHIP	0			R109	1-218-990-81	SHORT CHIP	0		
R059	1-218-990-81	SHORT CHIP	0			R110	1-218-990-81	SHORT CHIP	0		
R060	1-218-990-81	SHORT CHIP	0			R111	1-218-990-81	SHORT CHIP	0		
R061	1-218-990-81	SHORT CHIP	0			R112	1-218-990-81	SHORT CHIP	0		
R062	1-218-990-81	SHORT CHIP	0			R113	1-218-990-81	SHORT CHIP	0		
R063	1-218-990-81	SHORT CHIP	0			R114	1-218-941-11	RES-CHIP	100	5%	1/16W
R064	1-218-990-81	SHORT CHIP	0			R115	1-218-941-11	RES-CHIP	100	5%	1/16W
R065	1-218-990-81	SHORT CHIP	0			R116	1-218-941-11	RES-CHIP	100	5%	1/16W
R066	1-218-990-81	SHORT CHIP	0			R117	1-218-941-11	RES-CHIP	100	5%	1/16W
R067	1-218-990-81	SHORT CHIP	0			R118	1-218-941-11	RES-CHIP	100	5%	1/16W
R068	1-218-990-81	SHORT CHIP	0			R120	1-218-941-11	RES-CHIP	100	5%	1/16W
R069	1-218-990-81	SHORT CHIP	0			R122	1-218-990-81	SHORT CHIP	0		
R070	1-218-990-81	SHORT CHIP	0			R123	1-218-990-81	SHORT CHIP	0		
R071	1-218-990-81	SHORT CHIP	0			R124	1-218-941-11	RES-CHIP	100	5%	1/16W
R072	1-218-990-81	SHORT CHIP	0			R125	1-218-941-11	RES-CHIP	100	5%	1/16W
R073	1-218-990-81	SHORT CHIP	0			R126	1-218-953-11	RES-CHIP	1K	5%	1/16W
R074	1-218-990-81	SHORT CHIP	0			R127	1-218-941-11	RES-CHIP	100	5%	1/16W
R075	1-218-990-81	SHORT CHIP	0			R128	1-218-941-11	RES-CHIP	100	5%	1/16W
R076	1-218-990-81	SHORT CHIP	0			R129	1-216-809-11	METAL CHIP	100	5%	1/10W
R077	1-218-990-81	SHORT CHIP	0			R130	1-216-809-11	METAL CHIP	100	5%	1/10W
R078	1-218-990-81	SHORT CHIP	0			R131	1-216-809-11	METAL CHIP	100	5%	1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R144	1-218-990-81	SHORT CHIP	0			R296	1-216-799-11	METAL CHIP	15	5%	1/10W
R201	1-218-965-11	RES-CHIP	10K	5%	1/16W	R298	1-216-799-11	METAL CHIP	15	5%	1/10W
R203	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R300	1-218-990-81	SHORT CHIP	0		
R205	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R301	1-218-965-11	RES-CHIP	10K	5%	1/16W
R209	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W	R302	1-218-990-81	SHORT CHIP	0		
R210	1-218-990-81	SHORT CHIP	0			R303	1-216-864-11	SHORT CHIP	0		
R211	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	R304	1-216-864-11	SHORT CHIP	0		
R213	1-218-965-11	RES-CHIP	10K	5%	1/16W	R305	1-218-990-81	SHORT CHIP	0		
R216	1-216-864-11	SHORT CHIP	0			R307	1-216-864-11	SHORT CHIP	0		
R220	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R308	1-216-864-11	SHORT CHIP	0		
R221	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R313	1-218-990-81	SHORT CHIP	0		
R224	1-216-864-11	SHORT CHIP	0			R314	1-218-990-81	SHORT CHIP	0		
R229	1-218-990-81	SHORT CHIP	0			R323	1-216-864-11	SHORT CHIP	0		
R233	1-218-967-11	RES-CHIP	15K	5%	1/16W	R324	1-216-864-11	SHORT CHIP	0		
R235	1-218-967-11	RES-CHIP	15K	5%	1/16W	R404	1-218-285-11	METAL CHIP	75	5%	1/10W
R239	1-218-990-81	SHORT CHIP	0			R405	1-216-801-11	METAL CHIP	22	5%	1/10W
R240	1-218-931-11	RES-CHIP	15	5%	1/16W	R406	1-216-837-11	METAL CHIP	22K	5%	1/10W
R243	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R407	1-218-947-11	RES-CHIP	330	5%	1/16W
R245	1-218-965-11	RES-CHIP	10K	5%	1/16W	R408	1-216-815-11	METAL CHIP	330	5%	1/10W
R248	1-218-990-81	SHORT CHIP	0			R409	1-218-947-11	RES-CHIP	330	5%	1/16W
R250	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	R410	1-216-815-11	METAL CHIP	330	5%	1/10W
R251	1-218-990-81	SHORT CHIP	0			R415	1-216-834-11	METAL CHIP	12K	5%	1/10W
R252	1-218-965-11	RES-CHIP	10K	5%	1/16W	R420	1-216-809-11	METAL CHIP	100	5%	1/10W
R254	1-208-939-11	METAL CHIP	150K	0.5%	1/16W	R421	1-218-990-81	SHORT CHIP	0		
R255	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R422	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R256	1-208-929-81	METAL CHIP	56K	0.5%	1/16W	R423	1-218-990-81	SHORT CHIP	0		
R259	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R424	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R260	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R432	1-218-989-11	RES-CHIP	1M	5%	1/16W
R266	1-218-965-11	RES-CHIP	10K	5%	1/16W	R433	1-218-985-11	RES-CHIP	470K	5%	1/16W
R269	1-216-864-11	SHORT CHIP	0			R434	1-218-989-11	RES-CHIP	1M	5%	1/16W
R271	1-216-864-11	SHORT CHIP	0			R435	1-216-801-11	METAL CHIP	22	5%	1/10W
R273	1-216-864-11	SHORT CHIP	0			R436	1-216-801-11	METAL CHIP	22	5%	1/10W
R274	1-208-883-81	METAL CHIP	680	0.5%	1/16W	R437	1-216-801-11	METAL CHIP	22	5%	1/10W
R275	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R438	1-216-864-11	SHORT CHIP	0		
R276	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R439	1-218-985-11	RES-CHIP	470K	5%	1/16W
R277	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R443	1-216-815-11	METAL CHIP	330	5%	1/10W
R278	1-218-948-11	RES-CHIP	390	5%	1/16W	R444	1-216-815-11	METAL CHIP	330	5%	1/10W
R279	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R451	1-216-815-11	METAL CHIP	330	5%	1/10W
R280	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R452	1-216-815-11	METAL CHIP	330	5%	1/10W
R281	1-218-948-11	RES-CHIP	390	5%	1/16W	R459	1-218-990-81	SHORT CHIP	0		
R282	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R460	1-218-990-81	SHORT CHIP	0		
R283	1-218-965-11	RES-CHIP	10K	5%	1/16W	R461	1-218-990-81	SHORT CHIP	0		
R284	1-218-990-81	SHORT CHIP	0			R462	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R286	1-218-965-11	RES-CHIP	10K	5%	1/16W	R463	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R287	1-218-990-81	SHORT CHIP	0			R467	1-218-990-81	SHORT CHIP	0		
R288	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R468	1-218-990-81	SHORT CHIP	0		
R289	1-218-941-11	RES-CHIP	100	5%	1/16W	R469	1-218-990-81	SHORT CHIP	0		
R290	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R470	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R291	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R471	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R295	1-216-799-11	METAL CHIP	15	5%	1/10W	R472	1-218-989-11	RES-CHIP	1M	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R473	1-218-989-11	RES-CHIP	1M	5%	1/16W	R622	1-218-941-81	RES-CHIP	100	5%	1/16W
R474	1-218-989-11	RES-CHIP	1M	5%	1/16W	R623	1-211-969-11	METAL CHIP	10	0.5%	1/10W
R475	1-218-989-11	RES-CHIP	1M	5%	1/16W	R624	1-211-969-11	METAL CHIP	10	0.5%	1/10W
R478	1-218-947-11	RES-CHIP	330	5%	1/16W	R625	1-216-815-11	METAL CHIP	330	5%	1/10W
R479	1-216-815-11	METAL CHIP	330	5%	1/10W	R626	1-218-933-11	RES-CHIP	22	5%	1/16W
R480	1-218-947-11	RES-CHIP	330	5%	1/16W	R627	1-218-941-81	RES-CHIP	100	5%	1/16W
R481	1-216-815-11	METAL CHIP	330	5%	1/10W	R628	1-218-941-81	RES-CHIP	100	5%	1/16W
R483	1-216-837-11	METAL CHIP	22K	5%	1/10W	R629	1-218-941-81	RES-CHIP	100	5%	1/16W
R484	1-218-285-11	METAL CHIP	75	5%	1/10W	R630	1-216-864-11	SHORT CHIP	0		
R487	1-216-809-11	METAL CHIP	100	5%	1/10W	R635	1-216-864-11	SHORT CHIP	0		
R488	1-216-809-11	METAL CHIP	100	5%	1/10W	R636	1-216-864-11	SHORT CHIP	0		
R490	1-216-834-11	METAL CHIP	12K	5%	1/10W	R637	1-218-941-81	RES-CHIP	100	5%	1/16W
R494	1-218-990-81	SHORT CHIP	0			R638	1-216-815-11	METAL CHIP	330	5%	1/10W
R495	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R641	1-216-864-11	SHORT CHIP	0		
R496	1-218-990-81	SHORT CHIP	0			R643	1-216-815-11	METAL CHIP	330	5%	1/10W
R497	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R644	1-218-933-11	RES-CHIP	22	5%	1/16W
R499	1-216-801-11	METAL CHIP	22	5%	1/10W	R645	1-216-864-11	SHORT CHIP	0		
R502	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R646	1-218-983-11	RES-CHIP	330K	5%	1/16W
R503	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R647	1-218-983-11	RES-CHIP	330K	5%	1/16W
R504	1-216-801-11	METAL CHIP	22	5%	1/10W	R648	1-218-983-11	RES-CHIP	330K	5%	1/16W
R505	1-218-989-11	RES-CHIP	1M	5%	1/16W	R649	1-218-941-81	RES-CHIP	100	5%	1/16W
R507	1-218-989-11	RES-CHIP	1M	5%	1/16W	R650	1-218-941-81	RES-CHIP	100	5%	1/16W
R509	1-216-809-11	METAL CHIP	100	5%	1/10W	R651	1-218-941-81	RES-CHIP	100	5%	1/16W
R510	1-216-815-11	METAL CHIP	330	5%	1/10W	R652	1-218-941-81	RES-CHIP	100	5%	1/16W
R511	1-216-815-11	METAL CHIP	330	5%	1/10W	R653	1-218-941-81	RES-CHIP	100	5%	1/16W
R515	1-218-989-11	RES-CHIP	1M	5%	1/16W	R654	1-218-941-81	RES-CHIP	100	5%	1/16W
R519	1-218-989-11	RES-CHIP	1M	5%	1/16W	R655	1-216-809-11	METAL CHIP	100	5%	1/10W
R520	1-216-809-11	METAL CHIP	100	5%	1/10W	R656	1-216-809-11	METAL CHIP	100	5%	1/10W
R521	1-216-801-11	METAL CHIP	22	5%	1/10W	R657	1-216-864-11	SHORT CHIP	0		
R522	1-216-801-11	METAL CHIP	22	5%	1/10W	R658	1-216-864-11	SHORT CHIP	0		
R524	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R659	1-218-941-81	RES-CHIP	100	5%	1/16W
R525	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	R660	1-216-815-11	METAL CHIP	330	5%	1/10W
R526	1-216-864-11	SHORT CHIP	0			R661	1-218-933-11	RES-CHIP	22	5%	1/16W
R527	1-218-989-11	RES-CHIP	1M	5%	1/16W	R662	1-218-941-81	RES-CHIP	100	5%	1/16W
R528	1-218-989-11	RES-CHIP	1M	5%	1/16W	R663	1-218-953-11	RES-CHIP	1K	5%	1/16W
R529	1-216-864-11	SHORT CHIP	0			R664	1-218-941-81	RES-CHIP	100	5%	1/16W
R530	1-218-950-11	RES-CHIP	560	5%	1/16W	R665	1-218-941-81	RES-CHIP	100	5%	1/16W
R531	1-218-950-11	RES-CHIP	560	5%	1/16W	R666	1-218-941-81	RES-CHIP	100	5%	1/16W
R604	1-218-839-11	METAL CHIP	470	0.5%	1/10W	R667	1-218-933-11	RES-CHIP	22	5%	1/16W
R605	1-211-989-11	METAL CHIP	68	0.5%	1/10W	R668	1-218-941-81	RES-CHIP	100	5%	1/16W
R606	1-211-989-11	METAL CHIP	68	0.5%	1/10W	R669	1-218-941-81	RES-CHIP	100	5%	1/16W
R607	1-211-989-11	METAL CHIP	68	0.5%	1/10W	R670	1-218-941-81	RES-CHIP	100	5%	1/16W
R611	1-218-839-11	METAL CHIP	470	0.5%	1/10W	R676	1-218-975-11	RES-CHIP	68K	5%	1/16W
R614	1-218-839-11	METAL CHIP	470	0.5%	1/10W	R678	1-218-941-81	RES-CHIP	100	5%	1/16W
R615	1-211-969-11	METAL CHIP	10	0.5%	1/10W	R679	1-218-941-81	RES-CHIP	100	5%	1/16W
R616	1-211-969-11	METAL CHIP	10	0.5%	1/10W	R680	1-218-975-11	RES-CHIP	68K	5%	1/16W
R617	1-211-969-11	METAL CHIP	10	0.5%	1/10W	R681	1-218-941-81	RES-CHIP	100	5%	1/16W
R619	1-216-815-11	METAL CHIP	330	5%	1/10W	R683	1-218-941-81	RES-CHIP	100	5%	1/16W
R620	1-218-933-11	RES-CHIP	22	5%	1/16W	R685	1-218-941-81	RES-CHIP	100	5%	1/16W
R621	1-218-941-81	RES-CHIP	100	5%	1/16W	R686	1-218-941-81	RES-CHIP	100	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R690	1-216-817-11	METAL CHIP	470	5%	1/10W	R845	1-208-855-81	METAL CHIP	47	0.5%	1/16W
R692	1-218-941-81	RES-CHIP	100	5%	1/16W	R846	1-218-970-11	RES-CHIP	27K	5%	1/16W
R693	1-216-817-11	METAL CHIP	470	5%	1/10W	R848	1-218-970-11	RES-CHIP	27K	5%	1/16W
R694	1-216-817-11	METAL CHIP	470	5%	1/10W	R850	1-218-941-81	RES-CHIP	100	5%	1/16W
R699	1-218-941-81	RES-CHIP	100	5%	1/16W	R851	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R700	1-218-941-81	RES-CHIP	100	5%	1/16W	R852	1-218-941-81	RES-CHIP	100	5%	1/16W
R702	1-218-990-81	SHORT CHIP	0			R853	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R703	1-218-990-81	SHORT CHIP	0			R854	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R704	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R855	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R707	1-218-949-11	RES-CHIP	470	5%	1/16W	R856	1-220-199-81	RES-CHIP	24K	5%	1/16W
R708	1-218-945-11	RES-CHIP	220	5%	1/16W	R857	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R709	1-218-949-11	RES-CHIP	470	5%	1/16W	R858	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R710	1-218-945-11	RES-CHIP	220	5%	1/16W	R859	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R715	1-218-937-11	RES-CHIP	47	5%	1/16W	R860	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R716	1-218-937-11	RES-CHIP	47	5%	1/16W	R861	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R717	1-218-968-11	RES-CHIP	18K	5%	1/16W	R862	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R718	1-218-965-11	RES-CHIP	10K	5%	1/16W	R863	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R719	1-218-990-81	SHORT CHIP	0			R864	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R721	1-218-968-11	RES-CHIP	18K	5%	1/16W	R865	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R727	1-218-949-11	RES-CHIP	470	5%	1/16W	R866	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R728	1-218-949-11	RES-CHIP	470	5%	1/16W	R869	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R729	1-218-965-11	RES-CHIP	10K	5%	1/16W	R870	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R730	1-218-953-11	RES-CHIP	1K	5%	1/16W	R871	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W
R735	1-218-990-81	SHORT CHIP	0			R872	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W
R736	1-216-864-11	SHORT CHIP	0			R873	1-218-973-11	RES-CHIP	47K	5%	1/16W
R800	1-216-864-11	SHORT CHIP	0			R874	1-218-973-11	RES-CHIP	47K	5%	1/16W
R802	1-218-937-11	RES-CHIP	47	5%	1/16W	R878	1-218-973-11	RES-CHIP	47K	5%	1/16W
R803	1-218-941-81	RES-CHIP	100	5%	1/16W	R882	1-218-965-11	RES-CHIP	10K	5%	1/16W
R804	1-218-941-81	RES-CHIP	100	5%	1/16W	R883	1-218-965-11	RES-CHIP	10K	5%	1/16W
R809	1-218-937-11	RES-CHIP	47	5%	1/16W	R884	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R816	1-218-990-81	SHORT CHIP	0			R886	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R817	1-218-989-11	RES-CHIP	1M	5%	1/16W	R887	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W
R818	1-218-990-81	SHORT CHIP	0			R888	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R819	1-218-990-81	SHORT CHIP	0			R889	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W
R821	1-218-990-81	SHORT CHIP	0			R890	1-218-973-11	RES-CHIP	47K	5%	1/16W
R822	1-218-990-81	SHORT CHIP	0			R891	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R825	1-218-990-81	SHORT CHIP	0			R893	1-218-965-11	RES-CHIP	10K	5%	1/16W
R826	1-218-965-11	RES-CHIP	10K	5%	1/16W	R895	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R829	1-218-965-11	RES-CHIP	10K	5%	1/16W	R896	1-218-965-11	RES-CHIP	10K	5%	1/16W
R830	1-218-941-81	RES-CHIP	100	5%	1/16W	R898	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R832	1-218-965-11	RES-CHIP	10K	5%	1/16W	R899	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R833	1-218-990-81	SHORT CHIP	0			R900	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R834	1-218-941-81	RES-CHIP	100	5%	1/16W	R901	1-218-985-11	RES-CHIP	470K	5%	1/16W
R836	1-218-941-81	RES-CHIP	100	5%	1/16W	R902	1-218-985-11	RES-CHIP	470K	5%	1/16W
R837	1-218-965-11	RES-CHIP	10K	5%	1/16W	R903	1-218-947-11	RES-CHIP	330	5%	1/16W
R838	1-218-953-11	RES-CHIP	1K	5%	1/16W	R904	1-218-947-11	RES-CHIP	330	5%	1/16W
R841	1-208-855-81	METAL CHIP	47	0.5%	1/16W	R906	1-218-965-11	RES-CHIP	10K	5%	1/16W
R842	1-208-855-81	METAL CHIP	47	0.5%	1/16W	R907	1-218-977-11	RES-CHIP	100K	5%	1/16W
R843	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R909	1-218-965-11	RES-CHIP	10K	5%	1/16W
R844	1-208-855-81	METAL CHIP	47	0.5%	1/16W	R911	1-218-973-11	RES-CHIP	47K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R912	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R981	1-218-990-81	SHORT CHIP	0		
R913	1-218-969-11	RES-CHIP	22K	5%	1/16W	R982	1-218-990-81	SHORT CHIP	0		
R914	1-218-969-11	RES-CHIP	22K	5%	1/16W	R984	1-218-941-81	RES-CHIP	100	5%	1/16W
R915	1-218-973-11	RES-CHIP	47K	5%	1/16W	R985	1-218-953-11	RES-CHIP	1K	5%	1/16W
R916	1-218-973-11	RES-CHIP	47K	5%	1/16W	R986	1-218-965-11	RES-CHIP	10K	5%	1/16W
R921	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1007	1-218-990-81	SHORT CHIP	0		
R922	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1008	1-218-990-81	SHORT CHIP	0		
R923	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R1019	1-218-941-81	RES-CHIP	100	5%	1/16W
R932	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1020	1-218-941-81	RES-CHIP	100	5%	1/16W
R933	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1021	1-218-965-11	RES-CHIP	10K	5%	1/16W
R935	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R1022	1-218-965-11	RES-CHIP	10K	5%	1/16W
R936	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R1023	1-218-965-11	RES-CHIP	10K	5%	1/16W
R937	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1024	1-218-965-11	RES-CHIP	10K	5%	1/16W
R938	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1025	1-216-813-11	METAL CHIP	220	5%	1/10W
R939	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1026	1-216-813-11	METAL CHIP	220	5%	1/10W
R940	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1200	1-218-977-11	RES-CHIP	100K	5%	1/16W
R941	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1201	1-218-965-11	RES-CHIP	10K	5%	1/16W
R942	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1202	1-218-965-11	RES-CHIP	10K	5%	1/16W
R943	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1203	1-218-990-81	SHORT CHIP	0		
R944	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1204	1-218-953-11	RES-CHIP	1K	5%	1/16W
R945	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1205	1-218-965-11	RES-CHIP	10K	5%	1/16W
R946	1-216-813-11	METAL CHIP	220	5%	1/10W	R1206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R947	1-216-813-11	METAL CHIP	220	5%	1/10W	R1208	1-218-965-11	RES-CHIP	10K	5%	1/16W
R948	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1209	1-218-965-11	RES-CHIP	10K	5%	1/16W
R949	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1210	1-218-990-81	SHORT CHIP	0		
R950	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1211	1-218-965-11	RES-CHIP	10K	5%	1/16W
R951	1-218-978-11	RES-CHIP	120K	5%	1/16W	R1212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R952	1-218-978-11	RES-CHIP	120K	5%	1/16W	R1213	1-218-965-11	RES-CHIP	10K	5%	1/16W
R953	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1214	1-218-977-11	RES-CHIP	100K	5%	1/16W
R954	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R1215	1-218-965-11	RES-CHIP	10K	5%	1/16W
R955	1-216-295-91	SHORT CHIP	0			R1216	1-218-965-11	RES-CHIP	10K	5%	1/16W
R956	1-216-295-91	SHORT CHIP	0			R1217	1-216-864-11	SHORT CHIP	0		
R957	1-216-295-91	SHORT CHIP	0			R1218	1-218-941-81	RES-CHIP	100	5%	1/16W
R958	1-216-295-91	SHORT CHIP	0			R1219	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R959	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1220	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R960	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1221	1-218-971-11	RES-CHIP	33K	5%	1/16W
R962	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R1222	1-218-965-11	RES-CHIP	10K	5%	1/16W
R963	1-218-977-11	RES-CHIP	100K	5%	1/16W	R1224	1-218-990-81	SHORT CHIP	0		
R964	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1227	1-218-941-81	RES-CHIP	100	5%	1/16W
R965	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1231	1-216-864-11	SHORT CHIP	0		
R966	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1232	1-216-813-11	METAL CHIP	220	5%	1/10W
R967	1-218-941-81	RES-CHIP	100	5%	1/16W	R1233	1-218-990-81	SHORT CHIP	0		
R968	1-218-941-81	RES-CHIP	100	5%	1/16W	R1234	1-216-809-11	METAL CHIP	100	5%	1/10W
R969	1-218-941-81	RES-CHIP	100	5%	1/16W	R1235	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R970	1-218-941-81	RES-CHIP	100	5%	1/16W	R1236	1-216-864-11	SHORT CHIP	0		
R971	1-208-855-81	METAL CHIP	47	0.5%	1/16W	R1237	1-218-965-11	RES-CHIP	10K	5%	1/16W
R972	1-208-855-81	METAL CHIP	47	0.5%	1/16W	R1238	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R975	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R1241	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R976	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1243	1-218-941-81	RES-CHIP	100	5%	1/16W
R977	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1245	1-218-941-81	RES-CHIP	100	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R1250	1-218-941-81	RES-CHIP	100	5%	1/16W	R1326	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1251	1-218-941-81	RES-CHIP	100	5%	1/16W	R1327	1-218-933-11	RES-CHIP	22	5%	1/16W
R1252	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R1328	1-218-933-11	RES-CHIP	22	5%	1/16W
R1253	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1331	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1257	1-218-990-81	SHORT CHIP	0			R1334	1-218-933-11	RES-CHIP	22	5%	1/16W
R1258	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R1335	1-218-933-11	RES-CHIP	22	5%	1/16W
R1259	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1339	1-218-933-11	RES-CHIP	22	5%	1/16W
R1263	1-218-941-81	RES-CHIP	100	5%	1/16W	R1342	1-218-933-11	RES-CHIP	22	5%	1/16W
R1268	1-218-941-81	RES-CHIP	100	5%	1/16W	R1343	1-218-933-11	RES-CHIP	22	5%	1/16W
R1269	1-218-941-81	RES-CHIP	100	5%	1/16W	R1345	1-218-941-81	RES-CHIP	100	5%	1/16W
R1270	1-218-941-81	RES-CHIP	100	5%	1/16W	R1352	1-218-933-11	RES-CHIP	22	5%	1/16W
R1271	1-218-941-81	RES-CHIP	100	5%	1/16W	R1353	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1272	1-218-941-81	RES-CHIP	100	5%	1/16W	R1363	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1273	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1366	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1274	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1368	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1275	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1370	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1276	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1371	1-218-941-81	RES-CHIP	100	5%	1/16W
R1277	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1373	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1278	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1374	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1279	1-216-815-11	METAL CHIP	330	5%	1/10W	R1375	1-218-933-11	RES-CHIP	22	5%	1/16W
R1280	1-218-941-81	RES-CHIP	100	5%	1/16W	R1380	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1281	1-216-864-11	SHORT CHIP	0			R1384	1-218-941-81	RES-CHIP	100	5%	1/16W
R1282	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1385	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1283	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R1386	1-218-941-81	RES-CHIP	100	5%	1/16W
R1284	1-216-864-11	SHORT CHIP	0			R1387	1-218-941-81	RES-CHIP	100	5%	1/16W
R1285	1-218-857-11	METAL CHIP	2.7K	0.5%	1/10W	R1388	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1287	1-218-941-81	RES-CHIP	100	5%	1/16W	R1391	1-218-990-81	SHORT CHIP	0		
R1288	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W	R1393	1-218-990-81	SHORT CHIP	0		
R1289	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1394	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1290	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1395	1-218-941-81	RES-CHIP	100	5%	1/16W
R1291	1-218-941-81	RES-CHIP	100	5%	1/16W	R1396	1-218-990-81	SHORT CHIP	0		
R1292	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R1397	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1293	1-218-941-81	RES-CHIP	100	5%	1/16W	R1399	1-218-990-81	SHORT CHIP	0		
R1294	1-216-837-11	METAL CHIP	22K	5%	1/10W	R1400	1-218-941-81	RES-CHIP	100	5%	1/16W
R1295	1-216-837-11	METAL CHIP	22K	5%	1/10W	R1401	1-218-933-11	RES-CHIP	22	5%	1/16W
R1296	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1403	1-218-990-81	SHORT CHIP	0		
R1297	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1404	1-218-933-11	RES-CHIP	22	5%	1/16W
R1298	1-218-937-11	RES-CHIP	47	5%	1/16W	R1405	1-218-949-11	RES-CHIP	470	5%	1/16W
R1299	1-216-864-11	SHORT CHIP	0			R1407	1-218-933-11	RES-CHIP	22	5%	1/16W
R1300	1-218-937-11	RES-CHIP	47	5%	1/16W	R1408	1-218-933-11	RES-CHIP	22	5%	1/16W
R1304	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1409	1-218-949-11	RES-CHIP	470	5%	1/16W
R1307	1-218-941-81	RES-CHIP	100	5%	1/16W	R1410	1-218-990-81	SHORT CHIP	0		
R1309	1-218-941-81	RES-CHIP	100	5%	1/16W	R1411	1-218-990-81	SHORT CHIP	0		
R1312	1-218-941-81	RES-CHIP	100	5%	1/16W	R1412	1-218-949-11	RES-CHIP	470	5%	1/16W
R1315	1-218-941-81	RES-CHIP	100	5%	1/16W	R1413	1-218-990-81	SHORT CHIP	0		
R1316	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R1414	1-218-933-11	RES-CHIP	22	5%	1/16W
R1318	1-218-941-81	RES-CHIP	100	5%	1/16W	R1416	1-218-933-11	RES-CHIP	22	5%	1/16W
R1319	1-218-990-81	SHORT CHIP	0			R1417	1-218-949-11	RES-CHIP	470	5%	1/16W
R1320	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R1418	1-218-933-11	RES-CHIP	22	5%	1/16W
R1323	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1419	1-218-933-11	RES-CHIP	22	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R1420	1-218-933-11	RES-CHIP	22	5%	1/16W	R1643	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1421	1-218-933-11	RES-CHIP	22	5%	1/16W	R1644	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R1422	1-218-933-11	RES-CHIP	22	5%	1/16W	R1645	1-218-990-81	SHORT CHIP	0		
R1423	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R1646	1-218-990-81	SHORT CHIP	0		
R1424	1-218-933-11	RES-CHIP	22	5%	1/16W	R1669	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1425	1-218-933-11	RES-CHIP	22	5%	1/16W	R1670	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1426	1-218-933-11	RES-CHIP	22	5%	1/16W	R1671	1-218-947-11	RES-CHIP	330	5%	1/16W
R1428	1-218-990-81	SHORT CHIP	0			R1672	1-218-947-11	RES-CHIP	330	5%	1/16W
R1429	1-218-990-81	SHORT CHIP	0			R1673	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1437	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1674	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1448	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	< RESISTOR CHIP >					
R1451	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	RB001	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1452	1-218-990-81	SHORT CHIP	0			RB002	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1459	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	RB003	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1460	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	RB401	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1471	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB402	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1473	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB403	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1474	1-218-990-81	SHORT CHIP	0			RB404	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1476	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB405	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1477	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB406	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1478	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB407	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1479	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB408	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1480	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB409	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1481	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB410	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1482	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB411	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1483	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB412	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1484	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB413	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1485	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB414	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1486	1-218-941-81	RES-CHIP	100	5%	1/16W	RB415	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1487	1-218-941-81	RES-CHIP	100	5%	1/16W	RB416	1-246-204-21	RES, CHIP NETWORK	600X8	(3816)	
R1488	1-218-937-11	RES-CHIP	47	5%	1/16W	RB802	1-234-378-11	RES, NETWORK	10K	(1005X4)	
R1489	1-218-937-11	RES-CHIP	47	5%	1/16W	RB803	1-234-378-11	RES, NETWORK	10K	(1005X4)	
R1496	1-218-990-81	SHORT CHIP	0			RB1200	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1498	1-218-990-81	SHORT CHIP	0			RB1201	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1600	1-216-821-11	METAL CHIP	1K	5%	1/10W	RB1202	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1602	1-216-805-11	METAL CHIP	47	5%	1/10W	RB1203	1-234-378-11	RES, NETWORK	10K	(1005X4)	
R1604	1-216-821-11	METAL CHIP	1K	5%	1/10W	RB1204	1-234-378-11	RES, NETWORK	10K	(1005X4)	
R1605	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB1210	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1609	1-218-990-81	SHORT CHIP	0			RB1211	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1610	1-218-937-11	RES-CHIP	47	5%	1/16W	RB1213	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1611	1-218-937-11	RES-CHIP	47	5%	1/16W	RB1214	1-234-944-21	RES, NETWORK	47	(1005X4)	
R1614	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB1215	1-234-944-21	RES, NETWORK	47	(1005X4)	
R1615	1-218-941-81	RES-CHIP	100	5%	1/16W	RB1216	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1616	1-218-941-81	RES-CHIP	100	5%	1/16W	RB1218	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1637	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB1219	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1638	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB1220	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1639	1-218-973-11	RES-CHIP	47K	5%	1/16W	RB1221	1-234-945-21	RES, NETWORK	100	(1005X4)	
R1640	1-218-973-11	RES-CHIP	47K	5%	1/16W	TB400	1-821-026-11	OPTICAL OUT TERMINAL			
R1641	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W						
R1642	1-218-965-11	RES-CHIP	10K	5%	1/16W						

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< VARISTOR >				VD1201	1-802-090-21	VARISTOR, CHIP	
VD001	1-802-090-21	VARISTOR, CHIP		VD1202	1-802-090-21	VARISTOR, CHIP	
VD002	1-802-090-21	VARISTOR, CHIP		VD1203	1-802-090-21	VARISTOR, CHIP	
VD003	1-802-090-21	VARISTOR, CHIP		VD1204	1-802-090-21	VARISTOR, CHIP	
VD004	1-802-090-21	VARISTOR, CHIP		VD1205	1-802-090-21	VARISTOR, CHIP	
VD005	1-802-090-21	VARISTOR, CHIP		VD1206	1-802-090-21	VARISTOR, CHIP	
VD006	1-802-090-21	VARISTOR, CHIP		VD1207	1-802-090-21	VARISTOR, CHIP	
VD007	1-802-090-21	VARISTOR, CHIP		VD1208	1-802-090-21	VARISTOR, CHIP	
VD008	1-802-090-21	VARISTOR, CHIP		VD1209	1-802-090-21	VARISTOR, CHIP	
VD009	1-802-090-21	VARISTOR, CHIP		VD1210	1-802-090-21	VARISTOR, CHIP	
VD400	1-802-090-21	VARISTOR, CHIP		VD1211	1-802-090-21	VARISTOR, CHIP	
VD401	1-802-090-21	VARISTOR, CHIP		< CRYSTAL >			
VD402	1-802-090-21	VARISTOR, CHIP		X600	1-813-124-21	VIBRATOR, CERAMIC	
VD403	1-802-090-21	VARISTOR, CHIP		X801	1-813-462-11	VIBRATOR, CRYSTAL 24.576MHZ	
VD404	1-802-090-21	VARISTOR, CHIP		X1200	1-814-004-11	VIBRATOR, CRYSTAL	
VD405	1-802-090-21	VARISTOR, CHIP		X1201	1-813-070-21	PIEZOELECTRIC OSCILLATOR	
VD406	1-802-090-21	VARISTOR, CHIP		*A-1466-242-A HW2 Board, Complete			
VD407	1-802-090-21	VARISTOR, CHIP		< CAPACITOR >			
VD408	1-802-090-21	VARISTOR, CHIP		C7028	1-107-819-11	CERAMIC CHIP 0.022UF	10.00% 16V
VD409	1-802-090-21	VARISTOR, CHIP		C7029	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
VD410	1-802-090-21	VARISTOR, CHIP		C7030	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
VD411	1-802-090-21	VARISTOR, CHIP		C7034	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
VD412	1-802-090-21	VARISTOR, CHIP		C7035	1-107-819-11	CERAMIC CHIP 0.022UF	10.00% 16V
VD413	1-802-090-21	VARISTOR, CHIP		C7036	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
VD414	1-802-090-21	VARISTOR, CHIP		C7037	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
VD415	1-802-090-21	VARISTOR, CHIP		C7038	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD416	1-802-090-21	VARISTOR, CHIP		C7060	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V
VD417	1-802-090-21	VARISTOR, CHIP		C7061	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
VD418	1-802-090-21	VARISTOR, CHIP		C7062	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
VD419	1-802-090-21	VARISTOR, CHIP		C7063	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD420	1-802-090-21	VARISTOR, CHIP		C7064	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD421	1-802-090-21	VARISTOR, CHIP		C7065	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
VD422	1-802-090-21	VARISTOR, CHIP		C7066	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
VD423	1-802-090-21	VARISTOR, CHIP		C7067	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
VD424	1-802-090-21	VARISTOR, CHIP		C7068	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
VD425	1-802-090-21	VARISTOR, CHIP		C7069	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD426	1-802-090-21	VARISTOR, CHIP		C7070	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD427	1-802-090-21	VARISTOR, CHIP		C7071	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
VD428	1-802-090-21	VARISTOR, CHIP		C7072	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD429	1-802-090-21	VARISTOR, CHIP		C7073	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD430	1-802-090-21	VARISTOR, CHIP		C7074	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
VD431	1-802-090-21	VARISTOR, CHIP		C7075	1-100-906-11	CERAMIC CHIP 0.01UF	10% 16V
VD432	1-802-090-21	VARISTOR, CHIP		C7076	1-124-779-00	ELECT CHIP 10UF	20.00% 16V
VD433	1-802-090-21	VARISTOR, CHIP		C7077	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD434	1-802-090-21	VARISTOR, CHIP		C7078	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
VD435	1-802-090-21	VARISTOR, CHIP		C7079	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
VD436	1-802-090-21	VARISTOR, CHIP		C7080	1-125-777-11	CERAMIC CHIP 0.1UF	10.00% 10V
VD437	1-802-090-21	VARISTOR, CHIP					
VD1200	1-802-090-21	VARISTOR, CHIP					

Revision 2.0
(Click inside red box
to see related change)

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

HW2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7081	1-124-779-00	ELECT CHIP 10UF	20.00% 16V	FL7065	1-813-880-11	INDUCTOR 0UH	
C7082	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V				
C7120	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V		< IC >		
C7121	1-117-681-11	ELECT CHIP 100UF	20.00% 16V	IC7060	6-704-600-01	IC M24C02-WMN6T(B)	
C7122	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	IC7061	6-708-758-01	IC PCA9517DP.118	
				IC7062	8-753-278-35	IC CXB1443R-T4	
C7124	1-100-827-21	ELECT CHIP 150UF	20% 10V	IC7063	6-702-362-01	IC MM1563DFBE	
C7125	1-164-939-11	CERAMIC CHIP 0.0022UF	10.00% 50V	IC7120	6-709-441-01	IC SI8008TM-TL	
C7127	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
C7128	1-128-394-11	ELECT CHIP 220UF	20% 10V	IC7121	6-711-288-01	IC MIC2005-0.5YM6TR	
C7129	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V		< SOCKET >		
				J7020	1-780-489-11	S TERMINAL BLOCK (RIGHT ANGLE)	
C7130	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	J7021	1-815-325-11	JACK	
C7131	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V		< COIL >		
C7132	1-112-781-11	CERAMIC CHIP 1UF	10% 10V				
	< CONNECTOR >			L7020	1-400-669-21	INDUCTOR 0UH	
CN7022	*1-820-581-11	HEADER ASSEMBLY FOR PWB 20P		L7021	1-400-669-21	INDUCTOR 0UH	
CN7060	*1-818-400-11	HDMI CONNECTOR		L7022	1-400-669-21	INDUCTOR 0UH	
CN7061	*1-820-667-11	HEADER ASSEMBLY FOR PWB 21P		L7120	1-416-344-11	INDUCTOR 10UH	
CN7120	*1-821-361-11	USB CONNECTOR		L7121	1-813-308-11	INDUCTOR 0UH	
CN7121	*1-819-337-11	HEADER ASSEMBLY FOR PWB 10P		L7122	1-416-606-11	INDUCTOR 47UH	
	< DIODE >				< PROTECTOR MODULE >		
D7020	8-719-423-03	DIODE MA8100		PS7120 Δ	1-576-736-41	IC LINK 3.15A 24V	
D7021	6-501-745-01	DIODE MAZ8075G0LS0			< TRANSISTOR >		
D7060	6-500-701-01	DIODE PGB1010603NR		Q7062	8-729-907-00	TRANSISTOR DTC114EU	
D7061	6-500-701-01	DIODE PGB1010603NR		Q7063	8-729-907-00	TRANSISTOR DTC114EU	
D7062	6-500-701-01	DIODE PGB1010603NR		Q7120	8-729-029-14	TRANSISTOR DTC144EUA-T106	
				Q7121	6-550-585-01	TRANSISTOR 2PC4081R-115	
D7063	8-719-081-97	DIODE MMDL914T1		Q7122	8-729-029-14	TRANSISTOR DTC144EUA-T106	
D7064	8-719-081-97	DIODE MMDL914T1			< RESISTOR >		
D7065	6-500-701-01	DIODE PGB1010603NR		R7022	1-216-864-11	SHORT CHIP 0	
D7120	6-500-701-01	DIODE PGB1010603NR		R7023	1-216-864-11	SHORT CHIP 0	
D7121	6-500-701-01	DIODE PGB1010603NR		R7027	1-216-864-11	SHORT CHIP 0	
				R7028	1-216-864-11	SHORT CHIP 0	
D7122	6-501-336-01	DIODE RSX201L-30TE25		R7030	1-216-864-11	SHORT CHIP 0	
D7123	8-719-073-69	DIODE PTZ-TE25-6.2A					
				R7034	1-216-864-11	SHORT CHIP 0	
ET7020	1-780-482-11	EARTH TERMINAL		R7037	1-218-665-11	METAL CHIP 75 0.5% 1/10W	
ET7021	1-780-482-11	EARTH TERMINAL		R7038	1-216-864-11	SHORT CHIP 0	
ET7060	*1-780-431-11	ON-BOARD CONTACT		R7039	1-216-864-11	SHORT CHIP 0	
ET7061	*1-780-431-11	ON-BOARD CONTACT		R7040	1-216-864-11	SHORT CHIP 0	
ET7062	*1-780-431-11	ON-BOARD CONTACT					
	< FERRITE BEAD >			R7042	1-216-864-11	SHORT CHIP 0	
FB7020	1-400-333-21	FERRITE 0UH		R7043	1-216-864-11	SHORT CHIP 0	
FB7022	1-400-461-21	FERRITE 0UH		R7044	1-216-864-11	SHORT CHIP 0	
FB7060	1-400-382-11	FERRITE 0UH		R7046	1-216-857-11	METAL CHIP 1M 5% 1/10W	
FB7061	1-469-082-21	FERRITE 0UH		R7047	1-216-857-11	METAL CHIP 1M 5% 1/10W	
	< FILTER >						
FL7062	1-813-880-11	INDUCTOR 0UH					
FL7063	1-813-880-11	INDUCTOR 0UH					
FL7064	1-813-880-11	INDUCTOR 0UH					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R7053	1-216-809-11	METAL CHIP	100	5%	1/10W	R7126	1-218-990-81	SHORT CHIP	0		
R7056	1-216-809-11	METAL CHIP	100	5%	1/10W	R7127	1-218-990-81	SHORT CHIP	0		
R7057	1-218-990-81	SHORT CHIP	0			R7128	1-218-990-81	SHORT CHIP	0		
R7058	1-216-864-11	SHORT CHIP	0			R7129	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W
R7060	1-218-929-11	RES-CHIP	10	5%	1/16W	R7130	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R7061	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R7131	1-208-885-11	METAL CHIP	820	0.5%	1/16W
R7064	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R7132	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7065	1-218-941-81	RES-CHIP	100	5%	1/16W	R7139	1-216-295-91	SHORT CHIP	0		
R7066	1-218-941-81	RES-CHIP	100	5%	1/16W	R7144	1-218-965-11	RES-CHIP	10K	5%	1/16W
R7067	1-218-941-81	RES-CHIP	100	5%	1/16W	R7150	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R7068	1-218-973-11	RES-CHIP	47K	5%	1/16W	R7151	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R7069	1-218-973-11	RES-CHIP	47K	5%	1/16W	< VARISTOR >					
R7070	1-218-990-81	SHORT CHIP	0			VD7020	1-803-974-21	VARISTOR, CHIP		(1608)	
R7071	1-218-990-81	SHORT CHIP	0			VD7021	1-803-974-21	VARISTOR, CHIP		(1608)	
R7074	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7022	1-803-974-21	VARISTOR, CHIP		(1608)	
R7075	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7023	1-803-974-21	VARISTOR, CHIP		(1608)	
R7076	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7024	1-803-974-21	VARISTOR, CHIP		(1608)	
R7077	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7025	1-803-974-21	VARISTOR, CHIP		(1608)	
R7078	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7026	1-803-974-21	VARISTOR, CHIP		(1608)	
R7079	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7060	1-802-245-11	ESD SUPPRESSOR			
R7080	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7061	1-802-245-11	ESD SUPPRESSOR			
R7081	1-218-929-11	RES-CHIP	10	5%	1/16W	VD7062	1-802-245-11	ESD SUPPRESSOR			
R7083	1-218-990-81	SHORT CHIP	0			VD7063	1-802-245-11	ESD SUPPRESSOR			
R7087	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	VD7064	1-802-245-11	ESD SUPPRESSOR			
R7089	1-218-990-81	SHORT CHIP	0			VD7065	1-802-245-11	ESD SUPPRESSOR			
R7090	1-218-990-81	SHORT CHIP	0			VD7066	1-802-245-11	ESD SUPPRESSOR			
R7091	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	VD7067	1-802-245-11	ESD SUPPRESSOR			
R7093	1-218-937-11	RES-CHIP	47	5%	1/16W	VD7120	1-804-988-21	VARISTOR, CHIP		(1608)	
R7094	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	*A-1171-665-A H1 Board, Complete					
R7097	1-216-864-11	SHORT CHIP	0			< CAPACITOR >					
R7098	1-218-990-81	SHORT CHIP	0			C3000	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R7099	1-218-990-81	SHORT CHIP	0			C3001	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R7100	1-218-990-81	SHORT CHIP	0			< CONNECTOR >					
R7101	1-218-990-81	SHORT CHIP	0			CN3000	*1-819-472-11	HEADER ASSEMBLY FOR PWB 2P			
R7102	1-218-937-11	RES-CHIP	47	5%	1/16W	CN3001	*1-819-476-11	HEADER ASSEMBLY FOR PWB 8P			
R7103	1-218-937-11	RES-CHIP	47	5%	1/16W	< DIODE >					
R7104	1-218-937-11	RES-CHIP	47	5%	1/16W	D3001	8-719-914-44	DIODE DAP202K			
R7105	1-218-990-81	SHORT CHIP	0			< RESISTOR >					
R7106	1-218-990-81	SHORT CHIP	0			R3000	1-218-670-11	METAL CHIP	120	0.5%	1/10W
R7107	1-218-990-81	SHORT CHIP	0			R3001	1-218-672-11	METAL CHIP	150	0.5%	1/10W
R7109	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3002	1-218-678-11	METAL CHIP	270	0.5%	1/10W
R7110	1-218-990-81	SHORT CHIP	0			R3003	1-218-686-11	METAL CHIP	560	0.5%	1/10W
R7112	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R3004	1-218-696-11	METAL CHIP	1.5K	0.5%	1/10W
R7114	1-218-990-81	SHORT CHIP	0								
R7115	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R7117	1-218-990-81	SHORT CHIP	0								
R7120	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R7121	1-218-990-81	SHORT CHIP	0								
R7123	1-208-683-11	METAL CHIP	1K	0.5%	1/16W						
R7125	1-216-864-11	SHORT CHIP	0								

H1

H3

H4

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
< SWITCH >				< TRANSISTOR >			
S3000	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3200	8-729-028-91	TRANSISTOR DTA144EUA-T106	
S3001	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3201	8-729-029-14	TRANSISTOR DTC144EUA-T106	
S3002	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3202	8-729-907-00	TRANSISTOR DTC114EU	
S3003	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3203	8-729-907-00	TRANSISTOR DTC114EU	
S3004	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3204	8-729-907-00	TRANSISTOR DTC114EU	
S3005	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3205	8-729-907-00	TRANSISTOR DTC114EU	
S3006	1-572-595-11	SWITCH, TACTILE (REFLOW TYPE)		Q3206	6-550-586-01	TRANSISTOR 2PA1576R-115	
< VARISTOR >				Q3207	8-729-907-00	TRANSISTOR DTC114EU	
VD3000	1-803-974-21	VARISTOR, CHIP	(1608)	Q3208	6-550-586-01	TRANSISTOR 2PA1576R-115	
VD3001	1-803-974-21	VARISTOR, CHIP	(1608)	Q3209	8-729-028-73	TRANSISTOR DTA114EUA-T106	
*A-1171-667-A H3 Board, Complete				Q3210	8-729-028-73	TRANSISTOR DTA114EUA-T106	
A3001	2-686-289-03	LED HOLDER		Q3211	8-729-028-73	TRANSISTOR DTA114EUA-T106	
A3002	3-097-837-01	LED HOLDER (C)		Q3212	8-729-028-73	TRANSISTOR DTA114EUA-T106	
A3003	2-686-289-03	LED HOLDER		< RESISTOR >			
< CAPACITOR >				R3200	1-216-828-11	METAL CHIP 3.9K 5% 1/10W	
C3202	1-126-391-11	ELECT CHIP 47UF	20.00% 6.3V	R3201	1-216-864-11	SHORT CHIP 0	
C3203	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3202	1-216-815-11	METAL CHIP 330 5% 1/10W	
C3205	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3203	1-216-807-11	METAL CHIP 68 5% 1/10W	
C3209	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	R3204	1-216-864-11	SHORT CHIP 0	
C3210	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3206	1-216-815-11	METAL CHIP 330 5% 1/10W	
C3211	1-126-205-11	ELECT CHIP 47UF	20.00% 6.3V	R3207	1-216-807-11	METAL CHIP 68 5% 1/10W	
C3212	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	R3209	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
C3213	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V	R3211	1-216-851-11	METAL CHIP 330K 5% 1/10W	
< CONNECTOR >				R3212	1-216-851-11	METAL CHIP 330K 5% 1/10W	
CN3200	*1-819-464-11	HEADER ASSEMBLY FOR PWB 2P		R3213	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CN3201	*1-819-470-11	HEADER ASSEMBLY FOR PWB 11P		R3214	1-216-839-11	METAL CHIP 33K 5% 1/10W	
< DIODE >				R3215	1-216-821-11	METAL CHIP 1K 5% 1/10W	
D3200	6-501-502-01	DIODE FR5366X		R3217	1-216-864-11	SHORT CHIP 0	
D3201	6-500-672-11	DIODE TLRMHGH48M (SONY)		R3218	1-216-805-11	METAL CHIP 47 5% 1/10W	
D3202	6-500-672-11	DIODE TLRMHGH48M (SONY)		R3219	1-216-833-11	METAL CHIP 10K 5% 1/10W	
D3203	6-500-028-01	DIODE MM3Z9V1ST1		R3220	1-216-817-11	METAL CHIP 470 5% 1/10W	
D3204	6-500-028-01	DIODE MM3Z9V1ST1		R3221	1-216-864-11	SHORT CHIP 0	
D3205	6-500-028-01	DIODE MM3Z9V1ST1		R3222	1-216-864-11	SHORT CHIP 0	
D3206	6-500-028-01	DIODE MM3Z9V1ST1		*A-1171-668-A H4 Board, Complete			
D3207	6-500-028-01	DIODE MM3Z9V1ST1		A005	4-101-331-01	HOLDER (M7), LED	
D3208	6-500-028-01	DIODE MM3Z9V1ST1		< CAPACITOR >			
D3210	6-500-028-01	DIODE MM3Z9V1ST1		C3300	1-126-395-11	ELECT CHIP 22UF 20.00% 16V	
< IC >				< CONNECTOR >			
IC3200	6-600-447-01	IC TPS853 (SONY)		CN3301	*1-819-445-11	HEADER ASSEMBLY FOR PWB 3P	
IC3201	6-600-502-01	HIC GP1UE26RK0VF		< DIODE >			
				D3307	6-501-198-01	DIODE NSPW500BS-A0-M	
				D3310	6-501-198-01	DIODE NSPW500BS-A0-M	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D3313	6-501-198-01	DIODE NSPW500BS-A0-M		C3362	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
< TRANSISTOR >				C3365	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
Q3300	8-729-907-00	TRANSISTOR DTC114EU		C3402	1-117-681-11	ELECT CHIP 100UF	20.00% 16V
Q3303	8-729-907-00	TRANSISTOR DTC114EU		C3403	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V
Q3306	8-729-907-00	TRANSISTOR DTC114EU		C3404	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
< RESISTOR >				C3405	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
R3300	1-216-809-11	METAL CHIP 100 5% 1/10W		C3407	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V
R3303	1-216-809-11	METAL CHIP 100 5% 1/10W		C3408	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
R3306	1-216-809-11	METAL CHIP 100 5% 1/10W		C3409	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
*A-1259-905-A CI Board, Complete				C3410	1-100-591-91	CERAMIC CHIP 1UF	10% 25V
< CAPACITOR >				C3411	1-100-591-91	CERAMIC CHIP 1UF	10% 25V
C3301	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3412	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C3303	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3414	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C3306	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3415	1-115-412-11	CERAMIC CHIP 680PF	5.00% 25V
C3307	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3416	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C3309	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3417	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V
C3311	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3418	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C3313	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3419	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C3315	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3420	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C3317	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3421	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C3319	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	C3422	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C3321	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	< CONNECTOR >			
C3323	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	CN3301	*1-819-390-51	FFC/FPC CONNECTOR (ZIF) 49P	
C3325	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	CN3302	*1-793-769-21	CONNECTOR, CARD (PCMCIA CARD)	
C3327	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	< DIODE >			
C3329	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	D3400	6-501-657-01	DIODE MA24D5000BS0	
C3331	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	D3402	6-501-529-01	DIODE 1SMA5920BT3G	
C3335	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	D3403	6-501-528-01	DIODE 1SMA5915BT3G	
C3339	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	ET3400	1-780-482-11	EARTH TERMINAL	
C3341	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	ET3401	1-780-482-11	EARTH TERMINAL	
C3343	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	ET3402	1-780-482-11	EARTH TERMINAL	
C3345	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	ET3404	1-780-482-11	EARTH TERMINAL	
C3347	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V	ET3406	1-780-482-11	EARTH TERMINAL	
C3349	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	ET3407	1-780-482-11	EARTH TERMINAL	
C3350	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< FERRITE BEAD >			
C3351	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3323	1-469-324-21	FERRITE 0UH	
C3352	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3346	1-400-834-11	FERRITE 0UH	
C3353	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3347	1-469-324-21	FERRITE 0UH	
C3354	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	FB3348	1-400-834-11	FERRITE 0UH	
C3355	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< IC >			
C3356	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3300	8-752-418-81	IC CXD2099AR-T6	
C3357	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3301	8-759-644-48	IC 74LVC541APW	
C3358	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3302	8-759-644-48	IC 74LVC541APW	
C3359	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	IC3303	6-710-593-01	IC MIC2025-1YM	
C3360	1-100-591-91	CERAMIC CHIP 1UF	10% 25V	IC3304	6-708-916-01	IC ICS7150MLFT	
C3361	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC3400	6-710-922-01	IC BD9853AFV-E2		R3343	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
	< COIL >			R3344	1-218-990-81	SHORT CHIP 0	
L3400	1-457-428-11	INDUCTOR 4.7UH		R3345	1-218-990-81	SHORT CHIP 0	
L3401	1-457-428-11	INDUCTOR 4.7UH		R3346	1-218-990-81	SHORT CHIP 0	
	< PROTECTOR MODULE >			R3347	1-218-990-81	SHORT CHIP 0	
PS3400	1-576-519-21	FUSE 400MA 32V		R3348	1-218-990-81	SHORT CHIP 0	
PS3401	1-576-879-21	FUSE 0.2A 32V		R3349	1-218-990-81	SHORT CHIP 0	
	< TRANSISTOR >			R3350	1-218-990-81	SHORT CHIP 0	
Q3300	8-729-027-43	TRANSISTOR DTC114EKA-T146		R3351	1-218-990-81	SHORT CHIP 0	
Q3400	6-550-828-01	TRANSISTOR RSQ035P03TR		R3352	1-218-990-81	SHORT CHIP 0	
Q3401	6-550-828-01	TRANSISTOR RSQ035P03TR		R3353	1-218-990-81	SHORT CHIP 0	
Q3402	6-551-334-01	TRANSISTOR RTL035N03TR		R3354	1-218-990-81	SHORT CHIP 0	
Q3403	6-551-334-01	TRANSISTOR RTL035N03TR		R3355	1-218-933-11	RES-CHIP 22 5% 1/16W	
	< RESISTOR >			R3356	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3302	1-218-990-81	SHORT CHIP 0		R3357	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3303	1-218-990-81	SHORT CHIP 0		R3358	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3304	1-218-937-11	RES-CHIP 47 5% 1/16W		R3359	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3305	1-218-937-11	RES-CHIP 47 5% 1/16W		R3360	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3306	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3361	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3307	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3362	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3308	1-218-937-11	RES-CHIP 47 5% 1/16W		R3363	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3309	1-218-953-11	RES-CHIP 1K 5% 1/16W		R3365	1-218-933-11	RES-CHIP 22 5% 1/16W	
R3310	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3366	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3311	1-218-937-11	RES-CHIP 47 5% 1/16W		R3367	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3313	1-218-941-81	RES-CHIP 100 5% 1/16W		R3368	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3314	1-218-937-11	RES-CHIP 47 5% 1/16W		R3369	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3315	1-218-941-81	RES-CHIP 100 5% 1/16W		R3370	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3316	1-218-937-11	RES-CHIP 47 5% 1/16W		R3371	1-218-937-11	RES-CHIP 47 5% 1/16W	
R3317	1-218-937-11	RES-CHIP 47 5% 1/16W		R3400	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R3318	1-218-937-11	RES-CHIP 47 5% 1/16W		R3401	1-218-990-81	SHORT CHIP 0	
R3319	1-218-937-11	RES-CHIP 47 5% 1/16W		R3402	1-208-909-11	METAL CHIP 8.2K 0.5% 1/16W	
R3320	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3403	1-208-935-11	METAL CHIP 100K 0.5% 1/16W	
R3321	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3404	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R3322	1-218-937-11	RES-CHIP 47 5% 1/16W		R3405	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R3323	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3406	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R3324	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3407	1-218-990-81	SHORT CHIP 0	
R3325	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3409	1-218-990-81	SHORT CHIP 0	
R3326	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3410	1-218-990-81	SHORT CHIP 0	
R3327	1-218-953-11	RES-CHIP 1K 5% 1/16W		R3411	1-218-990-81	SHORT CHIP 0	
R3328	1-218-937-11	RES-CHIP 47 5% 1/16W		R3412	1-218-990-81	SHORT CHIP 0	
R3329	1-218-965-11	RES-CHIP 10K 5% 1/16W		R3413	1-208-909-11	METAL CHIP 8.2K 0.5% 1/16W	
R3339	1-218-937-11	RES-CHIP 47 5% 1/16W		R3418	1-218-990-81	SHORT CHIP 0	
R3340	1-218-937-11	RES-CHIP 47 5% 1/16W		R3419	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R3341	1-218-953-11	RES-CHIP 1K 5% 1/16W		R3421	1-218-990-81	SHORT CHIP 0	
R3342	1-208-911-11	METAL CHIP 10K 0.5% 1/16W		R3422	1-208-721-11	METAL CHIP 39K 0.5% 1/16W	
				R3423	1-208-715-11	METAL CHIP 22K 0.5% 1/16W	
				R3424	1-208-935-11	METAL CHIP 100K 0.5% 1/16W	
				R3425	1-216-864-11	SHORT CHIP 0	
				R3426	1-216-864-11	SHORT CHIP 0	
				R3427	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

CI

GF2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R3428	1-216-864-11	SHORT CHIP	0	C6204	1-107-903-11	ELECT 2.2UF	20% 50V
R3429	1-216-864-11	SHORT CHIP	0	C6205	1-107-910-11	ELECT 100UF	20% 50V
< RESISTOR CHIP >				C6206	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
RB3300	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C6209	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
RB3301	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C6250	1-128-949-31	ELECT 470UF	20% 16V
RB3302	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	C6251	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
< CRYSTAL >				C6302	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
X3300	1-813-055-11	QUARTZ CRYSTAL UNIT		C6303	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
*A-1361-550-A GF2 Board, Complete (52 inches only)				C6304	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
	2-580-592-01	SCREW, +PSW M3X8		C6305	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
< CAPACITOR >				C6306	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6006 Δ	1-114-153-51	CERAMIC 680PF	10% 250V	C6307	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6007 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6310	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6010 Δ	1-114-153-51	CERAMIC 680PF	10% 250V	C6402	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6011 Δ	1-119-892-51	CERAMIC 470PF	10.00% 250V	C6405	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6012 Δ	1-165-533-11	MYLAR 0.68UF	10 275V	C6407	1-107-877-11	ELECT 1000UF	20% 10V
C6014 Δ	1-161-964-91	CERAMIC 0.0047UF	250V	C6408	1-165-908-11	CERAMIC CHIP 1UF	10% 10V
C6015 Δ	1-161-964-91	CERAMIC 0.0047UF	250V	C6410	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V
C6016	1-135-361-11	ELECT (BLOCK) 180UF	20% 450V	C6500	1-165-825-11	MYLAR 2.2UF	5% 450V
C6017	1-135-361-11	ELECT (BLOCK) 180UF	20% 450V	C6501	1-165-825-11	MYLAR 2.2UF	5% 450V
C6019	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6503	1-165-825-11	MYLAR 2.2UF	5% 450V
C6020	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6505	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C6021	1-119-887-51	CERAMIC 1000PF	20.00% 250V	C6506	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V
C6100	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6507	1-162-966-11	CERAMIC CHIP 0.0022UF	10.00% 50V
C6101	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C6508	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6102	1-107-906-11	ELECT 10UF	20% 50V	C6510	1-107-902-11	ELECT 1UF	20% 50V
C6103	1-107-905-11	ELECT 4.7UF	20% 50V	C6511	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V
C6104	1-107-910-11	ELECT 100UF	20% 50V	C6512	1-162-959-11	CERAMIC CHIP 330PF	5.00% 50V
C6106	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	C6513	1-112-481-11	CERAMIC 470PF	10% 1KV
C6107	1-107-888-11	ELECT 47UF	20% 25V	C6514	1-112-481-11	CERAMIC 470PF	10% 1KV
C6108	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V	C6515	1-112-481-11	CERAMIC 470PF	10% 1KV
C6110	1-112-481-11	CERAMIC 470PF	10% 1KV	C6516	1-112-481-11	CERAMIC 470PF	10% 1KV
C6111	1-100-731-11	FILM 22000PF	3% 1KV	C6517	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V
C6112	1-163-021-91	CERAMIC CHIP 0.01UF	10.00% 50V	C6518	1-107-906-11	ELECT 10UF	20% 50V
C6150	1-104-760-11	CERAMIC CHIP 0.047UF	10.00% 50V	C6521	1-107-906-11	ELECT 10UF	20% 50V
C6152	1-112-229-21	ELECT 1500UF	20% 16V	C6522	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V
C6153	1-112-229-21	ELECT 1500UF	20% 16V	< CONNECTOR >			
C6155	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	CN6000 Δ	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6160	1-112-231-21	ELECT 2200UF	20% 16V	CN6150	*1-793-235-11	PIN, CONNECTOR (PC BOARD) 13P	
C6162	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	CN6151	*1-785-703-21	PIN, CONNECTOR (PC BOARD) 6P	
C6165	1-112-835-11	ELECT 3300UF	20% 25V	CN6152	*1-778-853-11	PIN, CONNECTOR (PC BOARD) 8P	
C6167	1-115-339-11	CERAMIC CHIP 0.1UF	10.00% 50V	CN6153	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P	
C6200	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	CN6154	*1-785-708-11	PIN, CONNECTOR (PC BOARD) 12P	
C6201	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	CN6501	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6202	1-107-902-11	ELECT 1UF	20% 50V	CN6502	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
C6203	1-100-139-31	FILM 0.001UF	5% 630V	< DIODE >			
				D6000	8-719-054-89	DIODE D15XB60	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D6100	8-719-081-67	DIODE M1FM3		< IC >			
D6101	6-500-137-01	DIODE BAT54HT1		IC6100	6-707-749-01	IC CXD9841P	
D6102	6-501-774-01	DIODE MAZ8150G0LS0		IC6150	6-709-368-01	IC MM1431ATT (CN)	
D6104	8-719-979-64	DIODE UF4005/23		IC6200	6-708-801-01	IC MIP2H2	
D6105	8-719-081-67	DIODE M1FM3		IC6250	6-709-368-01	IC MM1431ATT (CN)	
D6150	6-501-545-01	DIODE SG10SC6-F5		IC6300	6-709-368-01	IC MM1431ATT (CN)	
D6151	6-501-545-01	DIODE SG10SC6-F5		IC6301	6-709-368-01	IC MM1431ATT (CN)	
D6153	6-501-545-01	DIODE SG10SC6-F5		IC6500	6-709-791-01	IC L6562N	
D6201	8-719-058-74	DIODE 05NU42-TPA2		< COIL >			
D6202	6-501-817-01	DIODE MA2J1110GLS0		L6000 Δ	1-457-513-11	LINE FILTER COIL	
D6203	6-500-567-31	DIODE 10ERB20-TB3		L6002 Δ	1-457-457-11	LINE FILTER COIL	
D6204	6-500-567-31	DIODE 10ERB20-TB3		L6150	1-406-659-11	INDUCTOR	10UH
D6250	6-501-526-01	DIODE D1NS6-TR2		L6152	1-406-657-11	INDUCTOR	4.7UH
D6305	6-501-817-01	DIODE MA2J1110GLS0		L6250	1-414-183-41	INDUCTOR	10UH
D6306 Δ	6-501-817-01	DIODE MA2J1110GLS0		L6503	1-457-445-11	INDUCTOR	290UH
D6307	6-501-817-01	DIODE MA2J1110GLS0		L6504	1-457-277-11	INDUCTOR	260UH
D6308	6-501-818-01	DIODE MA2J1130GLS0		< PHOTOCOUPLER >			
D6400	6-501-774-01	DIODE MAZ8150G0LS0		PH6100	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6401	6-500-335-01	DIODE MC2838-T112-1		PH6200	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6402	6-501-817-01	DIODE MA2J1110GLS0		PH6300	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6405	6-500-335-01	DIODE MC2838-T112-1		PH6301	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6406	6-501-758-01	DIODE MAZ8100G0LS0		PH6302	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6500 Δ	6-500-335-01	DIODE MC2838-T112-1		PH6303 Δ	6-600-187-01	PHOTO COUPLER	PC123Y22JOOF
D6502	6-500-137-01	DIODE BAT54HT1		< TRANSISTOR >			
D6503	6-501-817-01	DIODE MA2J1110GLS0		Q6100	6-551-302-01	TRANSISTOR 2SK3561 (LBS1SONY,Q)	
D6506	8-719-055-38	DIODE SF5L60		Q6101	6-551-302-01	TRANSISTOR 2SK3561 (LBS1SONY,Q)	
D6507	6-501-818-01	DIODE MA2J1130GLS0		Q6301	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6508	6-501-818-01	DIODE MA2J1130GLS0		Q6303	8-729-804-41	TRANSISTOR 2SB1122-S	
D6509	6-500-108-01	DIODE EP05FA20		Q6304	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6512	6-501-817-01	DIODE MA2J1110GLS0		Q6307	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6000	1-537-770-21	TERMINAL BOARD, GROUND		Q6402	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6001	1-537-770-21	TERMINAL BOARD, GROUND		Q6403	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6002	1-537-770-21	TERMINAL BOARD, GROUND		Q6404	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
ET6003	1-537-770-21	TERMINAL BOARD, GROUND		Q6405	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< FUSE >				Q6406	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
F6000 Δ	1-576-233-51	FUSE	6.3A 250V	Q6407	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FH6000 Δ	1-533-223-11	FUSE HOLDER		Q6408	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FH6001 Δ	1-533-223-11	FUSE HOLDER		Q6500	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
< FERRITE BEAD >				Q6501	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB6001 Δ	1-410-396-41	FERRITE	0.45UH	Q6502	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q)	
FB6002 Δ	1-410-396-41	FERRITE	0.45UH	Q6503	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q)	
FB6100	1-412-911-11	FERRITE	0UH	Q6506	8-729-804-41	TRANSISTOR 2SB1122-S	
FB6101	1-412-911-11	FERRITE	0UH	Q6507	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB6150	1-412-911-11	FERRITE	0UH	< RESISTOR >			
FB6151	1-412-911-11	FERRITE	0UH	JR6001	1-216-864-11	SHORT CHIP	0
FB6152	1-412-911-11	FERRITE	0UH				
FB6153	1-412-911-11	FERRITE	0UH				
FB6501	1-412-911-11	FERRITE	0UH				
FB6502	1-412-911-11	FERRITE	0UH				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
JR6002	1-216-295-91	SHORT CHIP	0	R6152	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR6003	1-216-296-11	SHORT CHIP	0	R6153	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
JR6004	1-216-296-11	SHORT CHIP	0	R6154	1-218-873-11	METAL CHIP	12K 0.5% 1/10W
JR6005	1-216-296-11	SHORT CHIP	0	R6156	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
JR6006	1-216-296-11	SHORT CHIP	0	R6157	1-216-841-11	METAL CHIP	47K 5% 1/10W
JR6007	1-216-295-91	SHORT CHIP	0	R6164	1-216-841-11	METAL CHIP	47K 5% 1/10W
JR6008	1-216-864-11	SHORT CHIP	0	R6165	1-216-793-11	METAL CHIP	4.7 5% 1/10W
JR6009	1-216-296-11	SHORT CHIP	0	R6200 Δ	1-212-958-00	FUSIBLE	10 5% 1/2W
JR6010	1-216-296-11	SHORT CHIP	0	R6201	1-218-865-11	METAL CHIP	5.6K 0.5% 1/10W
JR6011	1-216-295-91	SHORT CHIP	0	R6202	1-243-725-71	METAL OXIDE	100K 5% 1W
JR6012	1-216-296-11	SHORT CHIP	0	R6203	1-249-385-11	CARBON	2.2 5% 1/4W
JR6013	1-216-296-11	SHORT CHIP	0	R6250	1-216-821-11	METAL CHIP	1K 5% 1/10W
JR6014	1-216-864-11	SHORT CHIP	0	R6251	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
JR6015	1-216-296-11	SHORT CHIP	0	R6252	1-216-805-11	METAL CHIP	47 5% 1/10W
JR6018	1-216-296-11	SHORT CHIP	0	R6254	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
JR6019	1-216-296-11	SHORT CHIP	0	R6255	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
JR6020	1-216-296-11	SHORT CHIP	0	R6302	1-218-903-11	METAL CHIP	220K 0.5% 1/10W
JR6021	1-216-296-11	SHORT CHIP	0	R6303	1-218-885-11	METAL CHIP	39K 0.5% 1/10W
JR6023	1-216-296-11	SHORT CHIP	0	R6304	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W
JR6025	1-216-295-91	SHORT CHIP	0	R6305	1-216-845-11	METAL CHIP	100K 5% 1/10W
JR6026	1-216-296-11	SHORT CHIP	0	R6307	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
JR6027	1-216-296-11	SHORT CHIP	0	R6308	1-216-849-11	METAL CHIP	220K 5% 1/10W
JR6028	1-216-296-11	SHORT CHIP	0	R6309	1-218-865-11	METAL CHIP	5.6K 0.5% 1/10W
JR6029	1-216-864-11	SHORT CHIP	0	R6310	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6009 Δ	1-240-251-92	METAL	6.8 5% 10W	R6311	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R6014	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6312	1-216-841-11	METAL CHIP	47K 5% 1/10W
R6015	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6315	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6100	1-218-885-11	METAL CHIP	39K 0.5% 1/10W	R6317	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R6102	1-218-863-11	METAL CHIP	4.7K 0.5% 1/10W	R6318	1-216-864-11	SHORT CHIP	0
R6103	1-218-823-11	METAL CHIP	100 0.5% 1/10W	R6319	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6104	1-218-877-11	METAL CHIP	18K 0.5% 1/10W	R6320	1-216-837-11	METAL CHIP	22K 5% 1/10W
R6106	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6321	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6107	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6323 Δ	1-243-596-71	METAL OXIDE	47K 5% 2W
R6108	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6324 Δ	1-216-839-11	METAL CHIP	33K 5% 1/10W
R6109	1-208-854-11	METAL CHIP	1M 0.5% 1/10W	R6328	1-216-864-11	SHORT CHIP	0
R6110 Δ	1-202-933-61	FUSIBLE	0.1 10% 1/2W	R6332	1-249-385-11	CARBON	2.2 5% 1/4W
R6111	1-218-760-11	METAL CHIP	220K 0.5% 1/10W	R6402	1-216-864-11	SHORT CHIP	0
R6112	1-218-877-11	METAL CHIP	18K 0.5% 1/10W	R6404	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6115	1-218-823-11	METAL CHIP	100 0.5% 1/10W	R6405	1-216-845-11	METAL CHIP	100K 5% 1/10W
R6116	1-216-009-91	RES-CHIP	22 5% 1/10W	R6406	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6117	1-216-009-91	RES-CHIP	22 5% 1/10W	R6407	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6118	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6408	1-216-821-11	METAL CHIP	1K 5% 1/10W
R6119	1-216-833-11	METAL CHIP	10K 5% 1/10W	R6410	1-216-864-11	SHORT CHIP	0
R6121	1-243-949-71	METAL OXIDE	0.47 5% 2W	R6411	1-216-833-11	METAL CHIP	10K 5% 1/10W
R6122	1-216-857-11	METAL CHIP	1M 5% 1/10W	R6412	1-216-864-11	SHORT CHIP	0
R6123	1-218-847-11	METAL CHIP	1K 0.5% 1/10W	R6413	1-216-839-11	METAL CHIP	33K 5% 1/10W
R6126	1-243-949-71	METAL OXIDE	0.47 5% 2W	R6414	1-216-817-11	METAL CHIP	470 5% 1/10W
R6150	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6415	1-216-839-11	METAL CHIP	33K 5% 1/10W
R6151	1-216-821-11	METAL CHIP	1K 5% 1/10W	R6416	1-216-833-11	METAL CHIP	10K 5% 1/10W
				R6418	1-216-821-11	METAL CHIP	1K 5% 1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF2 DF5

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6419	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6543	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6420	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6544	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6428	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6545	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
R6429	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6546	1-218-877-11	METAL CHIP	18K	0.5%	1/10W
R6430	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6547	1-216-864-11	SHORT CHIP	0		
R6433	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6549	1-246-189-11	METAL	0.12	5%	10W
R6434	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6571	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6436	1-216-833-11	METAL CHIP	10K	5%	1/10W	< RELAY >					
R6437	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6438	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R6439	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6440	1-216-839-11	METAL CHIP	33K	5%	1/10W	< TRANSFORMER >					
R6441	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6442	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R6500	△ 1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6501	△ 1-218-760-11	METAL CHIP	220K	0.5%	1/10W	< THERMISTOR >					
R6502	△ 1-208-830-11	METAL CHIP	100K	0.5%	1/10W						
R6503	△ 1-208-830-11	METAL CHIP	100K	0.5%	1/10W						
R6504	△ 1-218-760-11	METAL CHIP	220K	0.5%	1/10W	TH6301	1-809-789-71	THERMISTOR, POSITIVE			
R6505	△ 1-218-760-11	METAL CHIP	220K	0.5%	1/10W	< VARISTOR >					
R6506	△ 1-208-830-11	METAL CHIP	100K	0.5%	1/10W						
R6510	1-216-841-11	METAL CHIP	47K	5%	1/10W	VD6000	△ 1-804-996-21	VARISTOR			
R6511	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	VD6001	△ 1-804-996-21	VARISTOR			
R6512	1-215-882-00	METAL OXIDE	22	5%	2W						
R6514	1-216-845-11	METAL CHIP	100K	5%	1/10W	*A-1253-588-A DF5 Board, Complete (52 inches only)					
R6515	1-216-817-11	METAL CHIP	470	5%	1/10W						
R6516	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6517	1-216-823-11	METAL CHIP	1.5K	5%	1/10W						
R6518	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R6520	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6521	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6522	1-216-797-11	METAL CHIP	10	5%	1/10W						
R6523	1-216-797-11	METAL CHIP	10	5%	1/10W						
R6524	1-243-550-71	METAL OXIDE	6.8	5%	2W						
R6525	1-249-417-11	CARBON	1K	5%	1/4W						
R6526	1-249-401-11	CARBON	47	5%	1/4W						
R6527	1-249-401-11	CARBON	47	5%	1/4W						
R6528	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6530	1-208-840-11	METAL CHIP	270K	0.5%	1/10W						
R6531	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6532	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6533	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6534	1-208-834-11	METAL CHIP	150K	0.5%	1/10W						
R6535	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						
R6536	1-218-823-11	METAL CHIP	100	0.5%	1/10W						
R6538	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R6539	1-216-851-11	METAL CHIP	330K	5%	1/10W						
R6540	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R6541	1-216-809-11	METAL CHIP	100	5%	1/10W						
R6542	1-208-846-11	METAL CHIP	470K	0.5%	1/10W						
						C6400	△ 1-112-744-61	MYLAR	1UF	10%	450V
						C6405	△ 1-112-744-61	MYLAR	1UF	10%	450V
						C6406	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
						C6407	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
						C6412	1-119-891-51	CERAMIC	220PF	10.00%	250V
						C6413	△ 1-112-744-61	MYLAR	1UF	10%	450V
						C6415	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
						C6416	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
						C6500	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
						C6501	1-112-737-11	CERAMIC	27PF	5%	6.3KV
						C6502	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
						C6503	1-112-737-11	CERAMIC	27PF	5%	6.3KV
						C6504	1-112-740-91	CERAMIC	10PF	5%	3KV
						C6505	1-112-740-91	CERAMIC	10PF	5%	3KV
						C6506	1-164-730-11	CERAMIC CHIP	0.0012UF	10.00%	50V
						C6507	1-112-740-91	CERAMIC	10PF	5%	3KV
						C6508	1-112-740-91	CERAMIC	10PF	5%	3KV
						C6509	1-164-730-11	CERAMIC CHIP	0.0012UF	10.00%	50V
						C6512	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
						C6513	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
						C6514	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
						C6515	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF5

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6518	1-107-882-91	ELECT	100UF 20% 16V	< TRANSISTOR >			
C6519	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	Q6400	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
C6520 Δ	1-112-744-61	MYLAR	1UF 10% 450V	Q6401	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
C6521 Δ	1-112-744-61	MYLAR	1UF 10% 450V	Q6402	8-729-804-41	TRANSISTOR 2SB1122-S	
< CONNECTOR >				Q6403	8-729-804-41	TRANSISTOR 2SB1122-S	
CN6400	*1-793-660-11	PIN, CONNECTOR (PC BOARD)	3P	Q6404	8-729-804-41	TRANSISTOR 2SB1122-S	
CN6503	*1-793-236-11	PIN, CONNECTOR (PC BOARD)	14P	Q6405	8-729-804-41	TRANSISTOR 2SB1122-S	
CN6504	*1-779-944-21	PIN, CONNECTOR (PC BOARD)	4P	Q6406	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
CN6505	*1-785-701-21	PIN, CONNECTOR (PC BOARD)	3P	Q6407	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
< DIODE >				Q6500	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6400	6-501-497-01	DIODE S3L60F		Q6501	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
D6401	6-501-497-01	DIODE S3L60F		Q6502	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6402	6-501-818-01	DIODE MA2J1130GLS0		Q6503	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
D6403	6-501-818-01	DIODE MA2J1130GLS0		< RESISTOR >			
D6404	6-501-497-01	DIODE S3L60F		JR6400	1-216-296-11	SHORT CHIP	0
D6405	6-501-497-01	DIODE S3L60F		JR6401	1-216-296-11	SHORT CHIP	0
D6406	6-501-818-01	DIODE MA2J1130GLS0		JR6402	1-216-296-11	SHORT CHIP	0
D6407	6-501-818-01	DIODE MA2J1130GLS0		JR6403	1-216-296-11	SHORT CHIP	0
D6412	6-501-497-01	DIODE S3L60F		JR6404	1-216-296-11	SHORT CHIP	0
D6413	6-501-497-01	DIODE S3L60F		R6400	1-249-403-11	CARBON	68 5% 1/4W
D6414	6-501-497-01	DIODE S3L60F		R6401	1-216-793-11	METAL CHIP	4.7 5% 1/10W
D6415	6-501-497-01	DIODE S3L60F		R6402	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
D6420	8-719-083-57	DIODE UDZSTE-173.6B		R6403	1-216-833-11	METAL CHIP	10K 5% 1/10W
D6421	8-719-083-57	DIODE UDZSTE-173.6B		R6404	1-249-403-11	CARBON	68 5% 1/4W
D6422	8-719-083-57	DIODE UDZSTE-173.6B		R6405	1-216-793-11	METAL CHIP	4.7 5% 1/10W
D6423	8-719-083-57	DIODE UDZSTE-173.6B		R6406	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
D6500	6-501-817-01	DIODE MA2J1110GLS0		R6407	1-216-833-11	METAL CHIP	10K 5% 1/10W
D6501	6-501-817-01	DIODE MA2J1110GLS0		R6408	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
D6502	8-719-062-51	DIODE 1PS226-115		R6409	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
D6503	8-719-062-51	DIODE 1PS226-115		R6410	1-249-403-11	CARBON	68 5% 1/4W
D6504	6-501-730-01	DIODE MAZ8051GMLS0		R6411	1-249-403-11	CARBON	68 5% 1/4W
D6505	6-501-730-01	DIODE MAZ8051GMLS0		R6412	1-216-793-11	METAL CHIP	4.7 5% 1/10W
D6506	8-719-062-51	DIODE 1PS226-115		R6413	1-216-793-11	METAL CHIP	4.7 5% 1/10W
< FERRITE BEAD >				R6414	1-216-833-11	METAL CHIP	10K 5% 1/10W
FB6400	1-412-911-11	FERRITE	0UH	R6415	1-216-833-11	METAL CHIP	10K 5% 1/10W
FB6401	1-412-911-11	FERRITE	0UH	R6420	1-216-857-11	METAL CHIP	1M 5% 1/10W
FB6402	1-412-911-11	FERRITE	0UH	R6421	1-216-857-11	METAL CHIP	1M 5% 1/10W
FB6403	1-410-396-41	FERRITE	0.45UH	R6422	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
FB6404	1-410-396-41	FERRITE	0.45UH	R6423	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
FB6405	1-410-396-41	FERRITE	0.45UH	R6424	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
FB6406	1-412-911-11	FERRITE	0UH	R6425	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
FB6407	1-410-396-41	FERRITE	0.45UH	R6500	1-243-831-71	METAL OXIDE	12 5% 1W
FB6408	1-481-256-11	FERRITE	0UH	R6501	1-243-831-71	METAL OXIDE	12 5% 1W
FB6409	1-481-256-11	FERRITE	0UH	R6502	1-243-831-71	METAL OXIDE	12 5% 1W
< COIL >				R6503	1-243-831-71	METAL OXIDE	12 5% 1W
L6400	1-406-976-11	INDUCTOR	68UH	R6504	1-216-793-11	METAL CHIP	4.7 5% 1/10W
				R6505	1-216-793-11	METAL CHIP	4.7 5% 1/10W
				R6506	1-216-793-11	METAL CHIP	4.7 5% 1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF5 DF4

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6507	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6722	1-112-740-91	CERAMIC 10PF	5%	3KV	
R6508	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6723	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6509	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6724	1-127-804-91	CERAMIC CHIP 100PF	1%	50V	
R6510	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6725	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
R6511	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6726	1-127-573-11	CERAMIC CHIP 1UF	10%	16V	
R6512	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6727	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6514	1-216-864-11	SHORT CHIP	0			C6729	1-107-882-91	ELECT 100UF	20%	16V	
R6519	1-216-864-11	SHORT CHIP	0			C6730	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R6520	1-216-864-11	SHORT CHIP	0			C6732	1-100-591-91	CERAMIC CHIP 1UF	10%	25V	
R6521	1-216-864-11	SHORT CHIP	0			C6735	1-112-737-11	CERAMIC 27PF	5%	6.3KV	
R6522	1-216-864-11	SHORT CHIP	0			C6738	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
< TRANSFORMER >						C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
T6400	Δ 8-597-059-00	TRANSFORMER, HIGH-VOLTAGE INSU				C6740	1-107-882-91	ELECT 100UF	20%	16V	
T6401	Δ 8-597-059-00	TRANSFORMER, HIGH-VOLTAGE INSU				C6741	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
T6402	Δ 1-445-206-12	TRANSFORMER, DRIVE				C6742	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
TK6500	1-537-770-21	TERMINAL BOARD, GROUND				C6743	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
TK6501	1-537-770-21	TERMINAL BOARD, GROUND				C6744	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
*A-1253-587-A DF4 Board, Complete (52 inches only)						C6745	1-107-877-11	ELECT 1000UF	20%	10V	
2-580-592-01	SCREW, +PSW M3X8					C6746	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
< CAPACITOR >						C6747	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6600	Δ 1-112-744-61	MYLAR 1UF	10%	450V		C6748	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
C6601	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V		C6749	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6602	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V		C6750	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
C6606	Δ 1-112-744-61	MYLAR 1UF	10%	450V		C6751	1-112-737-11	CERAMIC 27PF	5%	6.3KV	
C6611	1-112-744-61	MYLAR 1UF	10%	450V		C6753	1-107-906-11	ELECT 10UF	20%	50V	
C6654	1-119-891-51	CERAMIC 220PF	10.00%	250V		C6754	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
C6658	1-115-339-11	CERAMIC CHIP 0.1UF	10.00%	50V		C6755	1-115-416-11	CERAMIC CHIP 0.001UF	5.00%	25V	
C6659	1-115-339-11	CERAMIC CHIP 0.1UF	10.00%	50V		C6756	1-107-882-91	ELECT 100UF	20%	16V	
C6700	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6757	1-165-176-11	CERAMIC CHIP 0.047UF	10.00%	16V	
C6701	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6758	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6702	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6759	1-162-927-11	CERAMIC CHIP 100PF	5.00%	50V	
C6703	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6760	1-162-927-11	CERAMIC CHIP 100PF	5.00%	50V	
C6706	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V		C6761	1-107-882-91	ELECT 100UF	20%	16V	
C6707	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V		C6762	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6709	1-112-740-91	CERAMIC 10PF	5%	3KV		C6763	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6710	1-164-730-11	CERAMIC CHIP 0.0012UF	10.00%	50V		C6764	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
C6711	1-112-740-91	CERAMIC 10PF	5%	3KV		C6785	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6712	1-164-730-11	CERAMIC CHIP 0.0012UF	10.00%	50V		C6794	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6715	1-125-891-11	CERAMIC CHIP 0.47UF	10.00%	10V		C6795	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V	
C6716	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V		C6796	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
C6717	1-164-217-11	CERAMIC CHIP 150PF	5.00%	50V		C6797	Δ 1-112-744-61	MYLAR 1UF	10%	450V	
C6718	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V		C6798	Δ 1-112-744-61	MYLAR 1UF	10%	450V	
C6719	1-162-962-11	CERAMIC CHIP 470PF	10.00%	50V		C6799	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V	
C6720	1-112-740-91	CERAMIC 10PF	5%	3KV		< CONNECTOR >					
C6721	1-165-908-11	CERAMIC CHIP 1UF	10%	10V		CN6600	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P			
						CN6701	*1-785-704-11	PIN, CONNECTOR (PC BOARD) 7P			
						CN6704	*1-793-236-11	PIN, CONNECTOR (PC BOARD) 14P			
						CN6706	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P			
						CN6707	*1-779-944-21	PIN, CONNECTOR (PC BOARD) 4P			

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
CN6708	*1-785-701-21	PIN, CONNECTOR (PC BOARD) 3P				< IC >	
		< DIODE >					
D6600	6-501-818-01	DIODE MA2J1130GLS0		IC6701	6-711-021-01	IC LX1692BIDW-TR	
D6601	6-501-818-01	DIODE MA2J1130GLS0		IC6702	6-708-762-01	IC PQ200WNA1ZPH	
D6604	6-501-497-01	DIODE S3L60F		IC6703	8-759-575-27	IC BA10339F-E2	
D6605	6-501-497-01	DIODE S3L60F		IC6704	6-709-368-01	IC MM1431ATT (CN)	
D6606	6-501-497-01	DIODE S3L60F				< COIL >	
D6607	6-501-497-01	DIODE S3L60F		L6600	1-406-976-11	INDUCTOR 68UH	
D6608	6-501-818-01	DIODE MA2J1130GLS0				< TRANSISTOR >	
D6609	6-501-818-01	DIODE MA2J1130GLS0					
D6612	6-501-497-01	DIODE S3L60F		Q6600	8-729-804-41	TRANSISTOR 2SB1122-S	
D6613	6-501-497-01	DIODE S3L60F		Q6601	8-729-804-41	TRANSISTOR 2SB1122-S	
				Q6602	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6614	6-501-497-01	DIODE S3L60F		Q6603	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6615	6-501-497-01	DIODE S3L60F		Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
D6620	8-719-083-57	DIODE UDZSTE-173.6B					
D6621	8-719-083-57	DIODE UDZSTE-173.6B		Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
D6623	8-719-083-57	DIODE UDZSTE-173.6B		Q6606	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
				Q6607	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6624	8-719-083-57	DIODE UDZSTE-173.6B		Q6700	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6700	6-501-730-01	DIODE MAZ8051GMLS0		Q6701	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
D6701	6-501-730-01	DIODE MAZ8051GMLS0					
D6702	6-501-817-01	DIODE MA2J1110GLS0		Q6702	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6703	6-501-817-01	DIODE MA2J1110GLS0		Q6703	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
				Q6704	8-729-028-27	TRANSISTOR 2SK2009 (TE85L)	
D6704	8-719-062-51	DIODE 1PS226-115		Q6705	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6705	8-719-062-51	DIODE 1PS226-115		Q6711	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6709	6-501-740-01	DIODE MAZ8068G0LS0					
D6710	6-501-740-01	DIODE MAZ8068G0LS0		Q6712	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
D6714	6-501-717-01	DIODE MAZ8039G0LS0		Q6714	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
						< RESISTOR >	
D6715	6-501-717-01	DIODE MAZ8039G0LS0					
D6716	6-501-817-01	DIODE MA2J1110GLS0		JR6700	1-216-296-11	SHORT CHIP 0	
D6717	6-500-335-01	DIODE MC2838-T112-1		JR6701	1-216-296-11	SHORT CHIP 0	
D6718	6-501-817-01	DIODE MA2J1110GLS0		JR6702	1-216-296-11	SHORT CHIP 0	
D6720	8-719-062-51	DIODE 1PS226-115		JR6703	1-216-296-11	SHORT CHIP 0	
				JR6704	1-216-296-11	SHORT CHIP 0	
D6721	6-501-768-01	DIODE MAZ8120GMLS0					
D6722	6-500-137-01	DIODE BAT54HT1		JR6705	1-216-296-11	SHORT CHIP 0	
				JR6706	1-216-296-11	SHORT CHIP 0	
		< FERRITE BEAD >		JR6707	1-216-296-11	SHORT CHIP 0	
FB6600	1-412-911-11	FERRITE 0UH		JR6708	1-216-296-11	SHORT CHIP 0	
FB6601	1-410-396-41	FERRITE 0.45UH		JR6709	1-216-296-11	SHORT CHIP 0	
FB6602	1-412-911-11	FERRITE 0UH					
FB6603	1-410-396-41	FERRITE 0.45UH		JR6710	1-216-296-11	SHORT CHIP 0	
FB6604	1-412-911-11	FERRITE 0UH		JR6711	1-216-296-11	SHORT CHIP 0	
				JR6712	1-216-296-11	SHORT CHIP 0	
FB6605	1-410-396-41	FERRITE 0.45UH		JR6713	1-216-864-11	SHORT CHIP 0	
FB6606	1-412-911-11	FERRITE 0UH		JR6714	1-216-296-11	SHORT CHIP 0	
FB6607	1-410-396-41	FERRITE 0.45UH					
FB6608	1-481-256-11	FERRITE 0UH		JR6715	1-216-296-11	SHORT CHIP 0	
FB6609	1-481-256-11	FERRITE 0UH		JR6716	1-216-296-11	SHORT CHIP 0	
				JR6717	1-216-864-11	SHORT CHIP 0	
				JR6718	1-216-296-11	SHORT CHIP 0	
				JR6719	1-216-296-11	SHORT CHIP 0	

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
JR6720	1-216-864-11	SHORT CHIP	0			R6724	1-216-864-11	SHORT CHIP	0		
JR6721	1-216-864-11	SHORT CHIP	0			R6725	1-218-891-11	METAL CHIP	68K	0.5%	1/10W
JR6722	1-216-296-11	SHORT CHIP	0			R6727	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
JR6723	1-216-296-11	SHORT CHIP	0			R6729	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
JR6724	1-216-296-11	SHORT CHIP	0			R6730	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6600	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6731	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6601	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6732	1-218-891-11	METAL CHIP	68K	0.5%	1/10W
R6602	1-249-403-11	CARBON	68	5%	1/4W	R6733	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6603	1-249-403-11	CARBON	68	5%	1/4W	R6734	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6604	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6736	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R6605	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6737	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6606	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6742	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R6607	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6750	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6610	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6751	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6611	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6752	1-211-983-11	METAL CHIP	39	0.5%	1/10W
R6612	1-249-403-11	CARBON	68	5%	1/4W	R6754	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R6613	1-249-403-11	CARBON	68	5%	1/4W	R6756	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R6614	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6757	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6615	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6758	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R6616	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6760	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6617	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6761	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W
R6619	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6762	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R6624	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6763	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6625	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6764	1-211-987-11	METAL CHIP	56	0.5%	1/10W
R6626	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6766	1-216-864-11	SHORT CHIP	0		
R6627	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6769	1-216-864-11	SHORT CHIP	0		
R6628	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6770	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6630	1-216-864-11	SHORT CHIP	0			R6771	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6632	1-216-864-11	SHORT CHIP	0			R6772	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6634	1-216-864-11	SHORT CHIP	0			R6773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6636	1-216-864-11	SHORT CHIP	0			R6774	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6700	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6775	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6701	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6776	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6702	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6777	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6703	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6778	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6704	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6779	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6705	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6780	1-216-864-11	SHORT CHIP	0		
R6706	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6782	1-216-842-11	METAL CHIP	56K	5%	1/10W
R6707	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6783	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6708	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6784	1-216-864-11	SHORT CHIP	0		
R6710	1-243-831-71	METAL OXIDE	12	5%	1W	R6786	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6711	1-243-831-71	METAL OXIDE	12	5%	1W	R6787	1-216-817-11	METAL CHIP	470	5%	1/10W
R6712	1-243-831-71	METAL OXIDE	12	5%	1W	R6788	1-216-864-11	SHORT CHIP	0		
R6713	1-243-831-71	METAL OXIDE	12	5%	1W	R6789	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6714	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6790	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R6715	1-216-835-11	METAL CHIP	15K	5%	1/10W	R6791	1-216-864-11	SHORT CHIP	0		
R6716	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6792	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6721	1-218-839-11	METAL CHIP	470	0.5%	1/10W	R6793	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6722	1-218-897-11	METAL CHIP	120K	0.5%	1/10W	R6794	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6723	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R6795	1-216-841-11	METAL CHIP	47K	5%	1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF4 GF1

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6802	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	C6152	1-112-229-21	ELECT	1500UF	20%	16V
R6804	1-249-381-11	CARBON	1	5%	1/4W	C6153	1-112-229-21	ELECT	1500UF	20%	16V
R6805	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6155	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
R6808	1-218-446-11	METAL CHIP	1	5%	1/10W	C6160	1-112-231-21	ELECT	2200UF	20%	16V
R6809	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	C6162	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
R6810	1-218-875-11	METAL CHIP	15K	0.5%	1/10W	C6165	1-112-835-11	ELECT	3300UF	20%	25V
R6811	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	C6167	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
R6820	1-216-864-11	SHORT CHIP	0			C6200	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
R6909	1-216-821-11	METAL CHIP	1K	5%	1/10W	C6201	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
R6911	1-216-845-11	METAL CHIP	100K	5%	1/10W	C6202	1-107-902-11	ELECT	1UF	20%	50V
R6913	1-216-864-11	SHORT CHIP	0			C6203	1-100-139-31	FILM	0.001UF	5%	630V
R6914	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	C6204	1-107-903-11	ELECT	2.2UF	20%	50V
R6915	1-216-861-11	METAL CHIP	2.2M	5%	1/10W	C6205	1-107-910-11	ELECT	100UF	20%	50V
< TRANSFORMER >						C6206	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
						C6209	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
T6600	△ 8-597-059-00	TRANSFORMER, HIGH-VOLTAGE INSU				C6250	1-128-949-31	ELECT	470UF	20%	16V
T6601	△ 8-597-059-00	TRANSFORMER, HIGH-VOLTAGE INSU				C6251	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
T6650	△ 1-445-206-12	TRANSFORMER, DRIVE				C6302	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
						C6303	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
TK6700	1-537-770-21	TERMINAL BOARD, GROUND				C6304	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
TK6701	1-537-770-21	TERMINAL BOARD, GROUND									
*A-1361-279-A GF1 Board, Complete (40/46 inches only)											
2-580-592-01		SCREW, +PSW M3X8				C6305	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
< CAPACITOR >						C6306	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
						C6307	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6006	△ 1-114-153-51	CERAMIC	680PF	10%	250V	C6310	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6007	△ 1-119-892-51	CERAMIC	470PF	10.00%	250V	C6402	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6010	△ 1-114-153-51	CERAMIC	680PF	10%	250V						
C6011	△ 1-119-892-51	CERAMIC	470PF	10.00%	250V	C6405	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6012	△ 1-165-533-11	MYLAR	0.68UF	10	275V	C6407	1-107-877-11	ELECT	1000UF	20%	10V
						C6408	1-165-908-11	CERAMIC CHIP	1UF	10%	10V
C6014	△ 1-161-964-91	CERAMIC	0.0047UF		250V	C6410	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6015	△ 1-161-964-91	CERAMIC	0.0047UF		250V	C6500	1-112-744-61	MYLAR	1UF	10%	450V
C6016	1-135-361-11	ELECT (BLOCK)	180UF	20%	450V	C6501	1-112-188-11	MYLAR	1.5UF	5%	450V
C6017	1-135-361-11	ELECT (BLOCK)	180UF	20%	450V	C6503	1-112-188-11	MYLAR	1.5UF	5%	450V
C6019	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V	C6505	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
						C6506	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6020	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V	C6507	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C6024	1-119-887-51	CERAMIC	1000PF	20.00%	250V						
C6100	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C6508	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C6101	1-100-831-91	CERAMIC CHIP	0.001UF	2%	50V	C6510	1-107-902-11	ELECT	1UF	20%	50V
C6102	1-107-906-11	ELECT	10UF	20%	50V	C6511	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
						C6512	1-162-959-11	CERAMIC CHIP	330PF	5.00%	50V
C6103	1-107-905-11	ELECT	4.7UF	20%	50V	C6517	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
C6104	1-107-910-11	ELECT	100UF	20%	50V						
C6106	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V	C6518	1-107-906-11	ELECT	10UF	20%	50V
C6107	1-107-888-11	ELECT	47UF	20%	25V	C6521	1-107-906-11	ELECT	10UF	20%	50V
C6108	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V	C6522	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
< CONNECTOR >											
C6110	1-112-481-11	CERAMIC	470PF	10%	1KV	CN6000	△ *1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P			
C6111	1-100-731-11	FILM	22000PF	3%	1KV	CN6150	*1-793-235-11	PIN, CONNECTOR (PC BOARD) 13P			
C6112	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V	CN6151	*1-785-703-21	PIN, CONNECTOR (PC BOARD) 6P			
C6150	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V	CN6152	*1-778-853-11	PIN, CONNECTOR (PC BOARD) 8P			
						CN6153	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P			

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
CN6154	*1-785-708-11	PIN, CONNECTOR (PC BOARD) 12P		FB6100	1-412-911-11	FERRITE	0UH
CN6501	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		FB6101	1-412-911-11	FERRITE	0UH
CN6502	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		FB6150	1-412-911-11	FERRITE	0UH
< DIODE >				FB6151	1-412-911-11	FERRITE	0UH
D6000	8-719-054-89	DIODE D15XB60		FB6152	1-412-911-11	FERRITE	0UH
D6100	8-719-081-67	DIODE M1FM3		FB6153	1-412-911-11	FERRITE	0UH
D6101	6-500-137-01	DIODE BAT54HT1		FB6501	1-412-911-11	FERRITE	0UH
D6102	6-501-774-01	DIODE MAZ8150G0LS0		FB6502	1-412-911-11	FERRITE	0UH
D6104	8-719-979-64	DIODE UF4005/23		< IC >			
D6105	8-719-081-67	DIODE M1FM3		IC6100	6-707-749-01	IC CXD9841P	
D6150	6-501-545-01	DIODE SG10SC6-F5		IC6150	6-709-368-01	IC MM1431ATT (CN)	
D6151	6-501-545-01	DIODE SG10SC6-F5		IC6200	6-708-801-01	IC MIP2H2	
D6153	6-501-545-01	DIODE SG10SC6-F5		IC6250	6-709-368-01	IC MM1431ATT (CN)	
D6201	8-719-058-74	DIODE 05NU42-TPA2		IC6300	6-709-368-01	IC MM1431ATT (CN)	
D6202	6-501-817-01	DIODE MA2J1110GLS0		IC6301	6-709-368-01	IC MM1431ATT (CN)	
D6203	6-500-567-31	DIODE 10ERB20-TB3		IC6500	6-709-791-01	IC L6562N	
D6204	6-500-567-31	DIODE 10ERB20-TB3		< COIL >			
D6250	6-501-526-01	DIODE D1NS6-TR2		L6150	1-406-659-11	INDUCTOR	10UH
D6305	6-501-817-01	DIODE MA2J1110GLS0		L6152	1-406-657-11	INDUCTOR	4.7UH
D6306 Δ	6-501-817-01	DIODE MA2J1110GLS0		L6250	1-414-183-41	INDUCTOR	10UH
D6307	6-501-817-01	DIODE MA2J1110GLS0		L6500	1-457-277-11	INDUCTOR	260UH
D6308	6-501-818-01	DIODE MA2J1130GLS0		L6502	1-457-445-11	INDUCTOR	290UH
D6400	6-501-774-01	DIODE MAZ8150G0LS0		< PHOTOCOUPLER >			
D6401	6-500-335-01	DIODE MC2838-T112-1		PH6100	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6402	6-501-817-01	DIODE MA2J1110GLS0		PH6200	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6405	6-500-335-01	DIODE MC2838-T112-1		PH6300	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6406	6-501-758-01	DIODE MAZ8100G0LS0		PH6301	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6500 Δ	6-500-335-01	DIODE MC2838-T112-1		PH6302	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6502	6-500-137-01	DIODE BAT54HT1		PH6303 Δ	6-600-187-01	PHOTO COUPLER	PC123Y22J00F
D6503	6-501-817-01	DIODE MA2J1110GLS0		< TRANSISTOR >			
D6506	8-719-055-38	DIODE SF5L60		Q6100	6-551-302-01	TRANSISTOR 2SK3561 (LBS1SONY,Q	
D6507	6-501-818-01	DIODE MA2J1130GLS0		Q6101	6-551-302-01	TRANSISTOR 2SK3561 (LBS1SONY,Q	
D6508	6-501-818-01	DIODE MA2J1130GLS0		Q6301	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6509	6-500-108-01	DIODE EP05FA20		Q6303	8-729-804-41	TRANSISTOR 2SB1122-S	
D6512	6-501-817-01	DIODE MA2J1110GLS0		Q6304	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6000	1-537-770-21	TERMINAL BOARD, GROUND		Q6307	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6001	1-537-770-21	TERMINAL BOARD, GROUND		Q6402	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6002	1-537-770-21	TERMINAL BOARD, GROUND		Q6403	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
ET6003	1-537-770-21	TERMINAL BOARD, GROUND		Q6404	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
< FUSE >				Q6405	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
F6000 Δ	1-576-233-51	FUSE	6.3A 250V	Q6406	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FH6000 Δ	1-533-223-11	FUSE HOLDER		Q6407	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FH6001 Δ	1-533-223-11	FUSE HOLDER		Q6408	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
< FERRITE BEAD >				Q6500	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB6001 Δ	1-410-396-41	FERRITE	0.45UH	Q6501	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB6002 Δ	1-410-396-41	FERRITE	0.45UH				

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q6502	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q		R6122	1-216-857-11	METAL CHIP 1M 5% 1/10W	
Q6503	6-551-336-01	TRANSISTOR 2SK3934 (LBS1SONY.Q		R6123	1-218-847-11	METAL CHIP 1K 0.5% 1/10W	
Q6505	8-729-804-41	TRANSISTOR 2SB1122-S		R6126	1-243-949-71	METAL OXIDE 0.47 5% 2W	
Q6506	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6150	1-216-821-11	METAL CHIP 1K 5% 1/10W	
				R6151	1-216-821-11	METAL CHIP 1K 5% 1/10W	
	< RESISTOR >						
JR6001	1-216-295-91	SHORT CHIP 0		R6152	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR6002	1-216-295-91	SHORT CHIP 0		R6153	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W	
JR6003	1-216-296-11	SHORT CHIP 0		R6154	1-218-873-11	METAL CHIP 12K 0.5% 1/10W	
JR6004	1-216-296-11	SHORT CHIP 0		R6156	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
JR6005	1-216-296-11	SHORT CHIP 0		R6157	1-216-841-11	METAL CHIP 47K 5% 1/10W	
JR6006	1-216-296-11	SHORT CHIP 0		R6164	1-216-841-11	METAL CHIP 47K 5% 1/10W	
JR6007	1-216-295-91	SHORT CHIP 0		R6165	1-216-793-11	METAL CHIP 4.7 5% 1/10W	
JR6008	1-216-295-91	SHORT CHIP 0		R6200 Δ	1-212-958-00	FUSIBLE 10 5% 1/2W	
JR6009	1-216-296-11	SHORT CHIP 0		R6201	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	
JR6010	1-216-296-11	SHORT CHIP 0		R6202	1-243-725-71	METAL OXIDE 100K 5% 1W	
JR6011	1-216-295-91	SHORT CHIP 0		R6203	1-249-385-11	CARBON 2.2 5% 1/4W	
JR6012	1-216-296-11	SHORT CHIP 0		R6250	1-216-821-11	METAL CHIP 1K 5% 1/10W	
JR6013	1-216-296-11	SHORT CHIP 0		R6251	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
JR6014	1-216-864-11	SHORT CHIP 0		R6252	1-216-805-11	METAL CHIP 47 5% 1/10W	
JR6015	1-216-864-11	SHORT CHIP 0		R6254	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
JR6018	1-216-296-11	SHORT CHIP 0		R6255	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
JR6019	1-216-296-11	SHORT CHIP 0		R6302	1-218-903-11	METAL CHIP 220K 0.5% 1/10W	
JR6021	1-216-296-11	SHORT CHIP 0		R6303	1-218-885-11	METAL CHIP 39K 0.5% 1/10W	
JR6022	1-216-296-11	SHORT CHIP 0		R6304	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
JR6023	1-216-295-91	SHORT CHIP 0		R6305	1-216-845-11	METAL CHIP 100K 5% 1/10W	
JR6024	1-216-296-11	SHORT CHIP 0		R6307	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
JR6026	1-216-864-11	SHORT CHIP 0		R6308	1-216-849-11	METAL CHIP 220K 5% 1/10W	
JR6028	1-216-864-11	SHORT CHIP 0		R6309	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	
R6009 Δ	1-240-251-92	METAL 6.8 5% 10W		R6310	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6014	1-216-857-11	METAL CHIP 1M 5% 1/10W		R6311	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R6015	1-216-857-11	METAL CHIP 1M 5% 1/10W		R6312	1-216-841-11	METAL CHIP 47K 5% 1/10W	
R6100	1-218-885-11	METAL CHIP 39K 0.5% 1/10W		R6315	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6102	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W		R6317	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R6103	1-218-823-11	METAL CHIP 100 0.5% 1/10W		R6318	1-216-864-11	SHORT CHIP 0	
R6104	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		R6319	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6106	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6320	1-216-837-11	METAL CHIP 22K 5% 1/10W	
R6107	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6321	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6108	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6323 Δ	1-243-596-71	METAL OXIDE 47K 5% 2W	
R6109	1-208-854-11	METAL CHIP 1M 0.5% 1/10W		R6324 Δ	1-216-839-11	METAL CHIP 33K 5% 1/10W	
R6110 Δ	1-202-933-61	FUSIBLE 0.1 10% 1/2W		R6328	1-216-864-11	SHORT CHIP 0	
R6111	1-218-760-11	METAL CHIP 220K 0.5% 1/10W		R6332	1-249-385-11	CARBON 2.2 5% 1/4W	
R6112	1-218-877-11	METAL CHIP 18K 0.5% 1/10W		R6402	1-216-864-11	SHORT CHIP 0	
R6115	1-218-823-11	METAL CHIP 100 0.5% 1/10W		R6404	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6116	1-216-009-91	RES-CHIP 22 5% 1/10W		R6405	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R6117	1-216-009-91	RES-CHIP 22 5% 1/10W		R6406	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6118	1-216-833-11	METAL CHIP 10K 5% 1/10W		R6407	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R6119	1-216-833-11	METAL CHIP 10K 5% 1/10W		R6408	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R6121	1-243-949-71	METAL OXIDE 0.47 5% 2W		R6410	1-216-864-11	SHORT CHIP 0	
				R6411	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R6412	1-216-864-11	SHORT CHIP 0	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

GF1 DF2

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6413	1-216-839-11	METAL CHIP	33K	5%	1/10W	R6538	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6414	1-216-817-11	METAL CHIP	470	5%	1/10W	R6539	1-216-851-11	METAL CHIP	330K	5%	1/10W
R6415	1-216-839-11	METAL CHIP	33K	5%	1/10W	R6540	1-216-849-11	METAL CHIP	220K	5%	1/10W
R6416	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6541	1-216-809-11	METAL CHIP	100	5%	1/10W
R6418	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6542	1-208-846-11	METAL CHIP	470K	0.5%	1/10W
R6419	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6543	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6420	1-216-845-11	METAL CHIP	100K	5%	1/10W	R6544	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6428	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6545	1-218-861-11	METAL CHIP	3.9K	0.5%	1/10W
R6429	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6546	1-218-877-11	METAL CHIP	18K	0.5%	1/10W
R6430	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6547	1-216-864-11	SHORT CHIP	0		
R6433	1-216-821-11	METAL CHIP	1K	5%	1/10W	R6571	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6434	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	< RELAY >					
R6436	1-216-833-11	METAL CHIP	10K	5%	1/10W	RY6000 Δ	1-755-516-11	RELAY (AC POWER)			
R6437	1-216-833-11	METAL CHIP	10K	5%	1/10W	< TRANSFORMER >					
R6438	1-216-821-11	METAL CHIP	1K	5%	1/10W	T6100 Δ	1-445-275-11	CONVERTER TRANSFORMER (PIT)			
R6439	1-216-833-11	METAL CHIP	10K	5%	1/10W	T6200 Δ	1-445-279-11	CONVERTER TRANSFORMER (SBT)			
R6440	1-216-839-11	METAL CHIP	33K	5%	1/10W	< THERMISTOR >					
R6441	1-216-833-11	METAL CHIP	10K	5%	1/10W	TH6301	1-809-789-71	THERMISTOR, POSITIVE			
R6442	1-216-837-11	METAL CHIP	22K	5%	1/10W	< VARISTOR >					
R6500 Δ	1-218-760-11	METAL CHIP	220K	0.5%	1/10W	VD6000 Δ	1-804-996-21	VARISTOR			
R6501 Δ	1-218-760-11	METAL CHIP	220K	0.5%	1/10W	VD6001 Δ	1-804-996-21	VARISTOR			
R6502 Δ	1-208-830-11	METAL CHIP	100K	0.5%	1/10W	*A-1253-585-A DF2 Board, Complete (46 inches only)					
R6503 Δ	1-208-830-11	METAL CHIP	100K	0.5%	1/10W	2-580-592-01 SCREW, +PSW M3X8					
R6504 Δ	1-218-760-11	METAL CHIP	220K	0.5%	1/10W	< CAPACITOR >					
R6505 Δ	1-218-760-11	METAL CHIP	220K	0.5%	1/10W	C6600 Δ	1-112-744-61	MYLAR	1UF	10%	450V
R6506 Δ	1-208-830-11	METAL CHIP	100K	0.5%	1/10W	C6601	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
R6510	1-216-841-11	METAL CHIP	47K	5%	1/10W	C6602	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
R6511	1-216-817-11	METAL CHIP	470	5%	1/10W	C6604	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
R6512	1-215-882-00	METAL OXIDE	22	5%	2W	C6606 Δ	1-112-744-61	MYLAR	1UF	10%	450V
R6513	1-246-189-11	METAL	0.12	5%	10W	C6609	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
R6514	1-216-845-11	METAL CHIP	100K	5%	1/10W	C6612	1-119-891-51	CERAMIC	220PF	10.00%	250V
R6515	1-216-817-11	METAL CHIP	470	5%	1/10W	C6700	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
R6516	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6701	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
R6517	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	C6702	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
R6518	1-216-841-11	METAL CHIP	47K	5%	1/10W	C6703	1-100-566-91	CERAMIC CHIP	0.1UF	10.00%	25V
R6520	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6706	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
R6521	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6709	1-112-736-11	CERAMIC	15PF	5%	6.3KV
R6522	1-216-797-11	METAL CHIP	10	5%	1/10W	C6710	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
R6523	1-216-797-11	METAL CHIP	10	5%	1/10W	C6711	1-112-736-11	CERAMIC	15PF	5%	6.3KV
R6524	1-243-550-71	METAL OXIDE	6.8	5%	2W	C6712	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
R6525	1-249-417-11	CARBON	1K	5%	1/4W	C6715	1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V
R6526	1-249-401-11	CARBON	47	5%	1/4W	C6716	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
R6527	1-249-401-11	CARBON	47	5%	1/4W						
R6530	1-208-840-11	METAL CHIP	270K	0.5%	1/10W						
R6531	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6532	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6533	1-218-760-11	METAL CHIP	220K	0.5%	1/10W						
R6534	1-208-834-11	METAL CHIP	150K	0.5%	1/10W						
R6535	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W						
R6536	1-218-823-11	METAL CHIP	100	0.5%	1/10W						

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF2

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6717	1-164-217-11	CERAMIC CHIP 150PF	5.00% 50V	< DIODE >			
C6718	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6608	6-501-818-01	DIODE MA2J1130GLS0	
C6719	1-164-315-11	CERAMIC CHIP 470PF	5.00% 50V	D6609	6-501-818-01	DIODE MA2J1130GLS0	
C6720	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6612	6-501-848-01	DIODE S3K60	
C6721	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6613	6-501-848-01	DIODE S3K60	
C6723	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6614	6-501-848-01	DIODE S3K60	
C6724	1-127-804-91	CERAMIC CHIP 100PF	1% 50V	D6615	6-501-848-01	DIODE S3K60	
C6725	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	D6623	8-719-083-57	DIODE UDZSTE-173.6B	
C6726	1-127-573-11	CERAMIC CHIP 1UF	10% 16V	D6624	8-719-083-57	DIODE UDZSTE-173.6B	
C6727	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6625	6-500-137-01	DIODE BAT54HT1	
C6728	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6700	6-501-730-01	DIODE MAZ8051GMLS0	
C6729	1-107-882-91	ELECT 100UF	20% 16V	D6701	6-501-730-01	DIODE MAZ8051GMLS0	
C6730	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6702	6-501-817-01	DIODE MA2J1110GLS0	
C6731	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	D6704	8-719-062-51	DIODE 1PS226-115	
C6732	1-100-591-91	CERAMIC CHIP 1UF	10% 25V	D6705	8-719-062-51	DIODE 1PS226-115	
C6735	1-165-176-11	CERAMIC CHIP 0.047UF	10.00% 16V	D6708	6-501-817-01	DIODE MA2J1110GLS0	
C6738	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6709	6-501-740-01	DIODE MAZ8068G0LS0	
C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	D6710	6-501-740-01	DIODE MAZ8068G0LS0	
C6740	1-107-882-91	ELECT 100UF	20% 16V	D6714	6-501-717-01	DIODE MAZ8039G0LS0	
C6741	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	D6715	6-501-717-01	DIODE MAZ8039G0LS0	
C6742	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6717	6-500-335-01	DIODE MC2838-T112-1	
C6743	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6718	6-501-817-01	DIODE MA2J1110GLS0	
C6744	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6720	8-719-062-51	DIODE 1PS226-115	
C6745	1-107-877-11	ELECT 1000UF	20% 10V	D6721	6-501-768-01	DIODE MAZ8120GMLS0	
C6746	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	D6722	6-501-817-01	DIODE MA2J1110GLS0	
C6747	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	ET6700	1-537-770-21	TERMINAL BOARD, GROUND	
C6748	1-165-908-11	CERAMIC CHIP 1UF	10% 10V	ET6701	1-537-770-21	TERMINAL BOARD, GROUND	
C6749	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	< FERRITE BEAD >			
C6750	1-162-970-11	CERAMIC CHIP 0.01UF	10.00% 25V	FB6604	1-412-911-11	FERRITE 0UH	
C6753	1-107-906-11	ELECT 10UF	20% 50V	FB6605	1-410-396-41	FERRITE 0.45UH	
C6754	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	FB6606	1-412-911-11	FERRITE 0UH	
C6755	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	FB6607	1-410-396-41	FERRITE 0.45UH	
C6756	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	FB6609	1-481-256-11	FERRITE 0UH	
C6757	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	< IC >			
C6759	1-107-882-91	ELECT 100UF	20% 16V	IC6701	6-711-021-01	IC LX1692BIDW-TR	
C6785	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	IC6702	6-708-762-01	IC PQ200WNA1ZPH	
C6789	1-107-882-91	ELECT 100UF	20% 16V	IC6703	8-759-575-27	IC BA10339F-E2	
C6794	1-100-566-91	CERAMIC CHIP 0.1UF	10.00% 25V	IC6704	6-709-368-01	IC MM1431ATT (CN)	
C6795	1-162-964-11	CERAMIC CHIP 0.001UF	10.00% 50V	< COIL >			
C6796	1-107-826-11	CERAMIC CHIP 0.1UF	10.00% 16V	L6600	1-406-977-21	INDUCTOR 100UH	
C6797 Δ	1-112-744-61	MYLAR 1UF	10% 450V	< TRANSISTOR >			
< CONNECTOR >				Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
CN6600	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P		Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
CN6701	*1-785-704-11	PIN, CONNECTOR (PC BOARD) 7P		Q6606	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
CN6704	*1-793-236-11	PIN, CONNECTOR (PC BOARD) 14P		Q6607	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
CN6706	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P					
CN6707	*1-779-944-21	PIN, CONNECTOR (PC BOARD) 4P					
CN6708	*1-785-701-21	PIN, CONNECTOR (PC BOARD) 3P					

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q6700	6-551-687-01	TRANSISTOR 3LP02C-TB-E		R6706	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q6701	6-551-688-01	TRANSISTOR 3LN02C-TB-E		R6707	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q6702	6-551-687-01	TRANSISTOR 3LP02C-TB-E		R6708	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q6703	6-551-688-01	TRANSISTOR 3LN02C-TB-E		R6710	1-243-681-71	METAL OXIDE 33 5%	1W
Q6704	8-729-028-27	TRANSISTOR 2SK2009 (TE85L)		R6711	1-243-681-71	METAL OXIDE 33 5%	1W
Q6705	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6714	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
Q6711	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R6715	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q6712	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6716	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
Q6714	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R6721	1-216-817-11	METAL CHIP 470 5%	1/10W
				R6722	1-218-897-11	METAL CHIP 120K 0.5%	1/10W
		< RESISTOR >					
JR6701	1-216-296-11	SHORT CHIP 0		R6723	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
JR6702	1-216-296-11	SHORT CHIP 0		R6724	1-216-864-11	SHORT CHIP 0	
JR6703	1-216-296-11	SHORT CHIP 0		R6725	1-218-891-11	METAL CHIP 68K 0.5%	1/10W
JR6704	1-216-296-11	SHORT CHIP 0		R6727	1-216-841-11	METAL CHIP 47K 5%	1/10W
JR6705	1-216-296-11	SHORT CHIP 0		R6729	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
JR6706	1-216-864-11	SHORT CHIP 0		R6730	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
JR6707	1-216-296-11	SHORT CHIP 0		R6731	1-216-837-11	METAL CHIP 22K 5%	1/10W
JR6708	1-216-296-11	SHORT CHIP 0		R6733	1-218-863-11	METAL CHIP 4.7K 0.5%	1/10W
JR6709	1-216-296-11	SHORT CHIP 0		R6734	1-216-833-11	METAL CHIP 10K 5%	1/10W
JR6710	1-216-296-11	SHORT CHIP 0		R6736	1-218-885-11	METAL CHIP 39K 0.5%	1/10W
JR6711	1-216-864-11	SHORT CHIP 0		R6737	1-216-821-11	METAL CHIP 1K 5%	1/10W
JR6712	1-216-296-11	SHORT CHIP 0		R6750	1-218-895-11	METAL CHIP 100K 0.5%	1/10W
JR6714	1-216-296-11	SHORT CHIP 0		R6751	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
JR6717	1-216-864-11	SHORT CHIP 0		R6752	1-211-981-11	METAL CHIP 33 0.5%	1/10W
JR6718	1-216-864-11	SHORT CHIP 0		R6754	1-211-981-11	METAL CHIP 33 0.5%	1/10W
JR6719	1-216-296-11	SHORT CHIP 0		R6755	1-216-861-11	METAL CHIP 2.2M 5%	1/10W
JR6721	1-216-296-11	SHORT CHIP 0		R6756	1-211-983-11	METAL CHIP 39 0.5%	1/10W
JR6724	1-216-296-11	SHORT CHIP 0		R6757	1-216-833-11	METAL CHIP 10K 5%	1/10W
JR6725	1-216-864-11	SHORT CHIP 0		R6758	1-211-985-11	METAL CHIP 47 0.5%	1/10W
JR6726	1-216-296-11	SHORT CHIP 0		R6759	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
R6609	1-216-857-11	METAL CHIP 1M 5%	1/10W	R6760	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
R6610	1-216-057-00	RES-CHIP 2.2K 5%	1/10W	R6761	1-218-853-11	METAL CHIP 1.8K 0.5%	1/10W
R6611	1-216-057-00	RES-CHIP 2.2K 5%	1/10W	R6762	1-211-987-11	METAL CHIP 56 0.5%	1/10W
R6612	1-249-403-11	CARBON 68 5%	1/4W	R6763	1-218-863-11	METAL CHIP 4.7K 0.5%	1/10W
R6613	1-249-403-11	CARBON 68 5%	1/4W	R6764	1-211-987-11	METAL CHIP 56 0.5%	1/10W
R6614	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6766	1-216-864-11	SHORT CHIP 0	
R6615	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6767	1-216-830-11	METAL CHIP 5.6K 5%	1/10W
R6616	1-216-833-11	METAL CHIP 10K 5%	1/10W	R6770	1-218-885-11	METAL CHIP 39K 0.5%	1/10W
R6617	1-216-833-11	METAL CHIP 10K 5%	1/10W	R6771	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
R6634	1-216-057-00	RES-CHIP 2.2K 5%	1/10W	R6772	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
R6635	1-216-057-00	RES-CHIP 2.2K 5%	1/10W	R6773	1-216-833-11	METAL CHIP 10K 5%	1/10W
R6638	1-216-864-11	SHORT CHIP 0		R6775	1-216-840-11	METAL CHIP 39K 5%	1/10W
R6639	1-216-864-11	SHORT CHIP 0		R6776	1-218-891-11	METAL CHIP 68K 0.5%	1/10W
R6700	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6777	1-218-895-11	METAL CHIP 100K 0.5%	1/10W
R6701	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6778	1-218-895-11	METAL CHIP 100K 0.5%	1/10W
R6702	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6779	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
R6703	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6780	1-216-864-11	SHORT CHIP 0	
R6704	1-216-793-11	METAL CHIP 4.7 5%	1/10W	R6782	1-216-842-11	METAL CHIP 56K 5%	1/10W
R6705	1-216-833-11	METAL CHIP 10K 5%	1/10W	R6783	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R6786	1-216-829-11	METAL CHIP 4.7K 5%	1/10W

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF2 DF3

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R6787	1-216-817-11	METAL CHIP	470 5% 1/10W	< CONNECTOR >			
R6788	1-216-864-11	SHORT CHIP	0	CN6800	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P	
R6789	1-218-887-11	METAL CHIP	47K 0.5% 1/10W	CN6900	*1-793-236-11	PIN, CONNECTOR (PC BOARD) 14P	
R6790	1-218-883-11	METAL CHIP	33K 0.5% 1/10W	CN6904	*1-779-944-21	PIN, CONNECTOR (PC BOARD) 4P	
R6792	1-216-837-11	METAL CHIP	22K 5% 1/10W	CN6905	*1-785-701-21	PIN, CONNECTOR (PC BOARD) 3P	
R6793	1-216-833-11	METAL CHIP	10K 5% 1/10W	< DIODE >			
R6794	1-218-871-11	METAL CHIP	10K 0.5% 1/10W	D6800	6-501-818-01	DIODE MA2J1130GLS0	
R6795	1-216-841-11	METAL CHIP	47K 5% 1/10W	D6801	6-501-818-01	DIODE MA2J1130GLS0	
R6802	1-218-871-11	METAL CHIP	10K 0.5% 1/10W	D6804	8-719-083-57	DIODE UDZSTE-173.6B	
R6804	1-249-381-11	CARBON	1 5% 1/4W	D6805	8-719-083-57	DIODE UDZSTE-173.6B	
R6805	1-216-793-11	METAL CHIP	4.7 5% 1/10W	D6810	6-501-848-01	DIODE S3K60	
R6808	1-218-446-11	METAL CHIP	1 5% 1/10W	D6811	6-501-848-01	DIODE S3K60	
R6809	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	D6814	6-501-848-01	DIODE S3K60	
R6810	1-218-875-11	METAL CHIP	15K 0.5% 1/10W	D6815	6-501-848-01	DIODE S3K60	
R6811	1-218-871-11	METAL CHIP	10K 0.5% 1/10W	D6900	6-501-730-01	DIODE MAZ8051GMLS0	
R6816	1-216-864-11	SHORT CHIP	0	D6901	6-501-730-01	DIODE MAZ8051GMLS0	
R6820	1-216-864-11	SHORT CHIP	0	D6902	6-501-817-01	DIODE MA2J1110GLS0	
R6821	1-216-864-11	SHORT CHIP	0	D6904	8-719-062-51	DIODE 1PS226-115	
R6822	1-216-864-11	SHORT CHIP	0	D6905	8-719-062-51	DIODE 1PS226-115	
R6909	1-216-821-11	METAL CHIP	1K 5% 1/10W	D6906	8-719-062-51	DIODE 1PS226-115	
R6911	1-216-845-11	METAL CHIP	100K 5% 1/10W	D6907	6-501-817-01	DIODE MA2J1110GLS0	
R6913	1-216-864-11	SHORT CHIP	0	ET6900	1-537-770-21	TERMINAL BOARD, GROUND	
< TRANSFORMER >				ET6901	1-537-770-21	TERMINAL BOARD, GROUND	
T6800	Δ 1-445-206-12	TRANSFORMER, DRIVE		< FERRITE BEAD >			
T6801	Δ 8-597-058-00	TRANSFORMER, HIGH-VOLTAGE INSU		FB6800	1-412-911-11	FERRITE 0UH	
				FB6801	1-410-396-41	FERRITE 0.45UH	
				FB6802	1-412-911-11	FERRITE 0UH	
				FB6803	1-481-256-11	FERRITE 0UH	
				FB6804	1-410-396-41	FERRITE 0.45UH	
				< COIL >			
				L6800	1-406-977-21	INDUCTOR 100UH	
				< TRANSISTOR >			
				Q6800	8-729-804-41	TRANSISTOR 2SB1122-S	
				Q6801	8-729-804-41	TRANSISTOR 2SB1122-S	
				Q6804	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
				Q6805	6-551-713-01	TRANSISTOR 2SK3569(LBS1SONY.Q)	
				Q6900	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
				Q6901	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
				Q6902	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
				Q6903	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
				< RESISTOR >			
				JR6901	1-216-296-11	SHORT CHIP 0	
				JR6905	1-216-296-11	SHORT CHIP 0	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF3 DF1

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
JR6906	1-216-296-11	SHORT CHIP	0			C6711	1-165-157-11	CERAMIC 39PF	5%	6.3KV	
R6827	1-216-857-11	METAL CHIP	1M	5%	1/10W	C6712	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00%	50V	
R6828	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	C6715	1-125-891-11	CERAMIC CHIP 0.47UF	10.00%	10V	
R6829	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	C6716	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R6832	1-249-403-11	CARBON	68	5%	1/4W	C6717	1-164-217-11	CERAMIC CHIP 150PF	5.00%	50V	
R6833	1-249-403-11	CARBON	68	5%	1/4W						
R6834	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6718	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R6835	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6719	1-164-315-11	CERAMIC CHIP 470PF	5.00%	50V	
R6838	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6720	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V	
R6839	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6721	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6901	1-216-864-11	SHORT CHIP	0			C6723	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6914	1-216-793-11	METAL CHIP	4.7	5%	1/10W						
R6915	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6724	1-127-804-91	CERAMIC CHIP 100PF	1%	50V	
R6916	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6725	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
R6917	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6726	1-127-573-11	CERAMIC CHIP 1UF	10%	16V	
R6918	1-216-793-11	METAL CHIP	4.7	5%	1/10W	C6727	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6919	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6728	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R6920	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R6921	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6729	1-107-882-91	ELECT 100UF	20%	16V	
R6922	1-216-833-11	METAL CHIP	10K	5%	1/10W	C6730	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
R6924	1-243-681-71	METAL OXIDE	33	5%	1W	C6731	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V	
R6925	1-243-681-71	METAL OXIDE	33	5%	1W	C6732	1-100-591-91	CERAMIC CHIP 1UF	10%	25V	
R6932	1-216-864-11	SHORT CHIP	0			C6735	1-165-176-11	CERAMIC CHIP 0.047UF	10.00%	16V	
R6933	1-216-864-11	SHORT CHIP	0								
R6936	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	C6738	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
R6937	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	C6739	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
< TRANSFORMER >											
T6900	Δ 1-445-206-12	TRANSFORMER, DRIVE				C6740	1-107-882-91	ELECT 100UF	20%	16V	
T6901	Δ 8-597-058-00	TRANSFORMER, HIGH-VOLTAGE INSU				C6741	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
*A-1256-156-A DF1 Board, Complete (40 inches only)											
	2-580-592-01	SCREW, +PSW M3X8				C6742	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
< CAPACITOR >											
C6600	Δ 1-165-794-21	MYLAR 1UF	10%	450V		C6743	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6604	1-115-339-11	CERAMIC CHIP 0.1UF	10.00%	50V		C6744	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6606	Δ 1-165-794-21	MYLAR 1UF	10%	450V		C6745	1-107-877-11	ELECT 1000UF	20%	10V	
C6609	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V		C6746	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6612	1-119-891-51	CERAMIC 220PF	10.00%	250V		C6747	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6658	1-115-339-11	CERAMIC CHIP 0.1UF	10.00%	50V							
C6700	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6748	1-165-908-11	CERAMIC CHIP 1UF	10%	10V	
C6701	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6749	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
C6702	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6750	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V	
C6703	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V		C6753	1-107-906-11	ELECT 10UF	20%	50V	
C6706	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V		C6754	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
C6707	1-162-970-11	CERAMIC CHIP 0.01UF	10.00%	25V							
C6709	1-165-157-11	CERAMIC 39PF	5%	6.3KV		C6755	1-162-964-11	CERAMIC CHIP 0.001UF	10.00%	50V	
C6710	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00%	50V		C6756	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
						C6757	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
						C6759	1-107-882-91	ELECT 100UF	20%	16V	
						C6785	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
						C6789	1-107-882-91	ELECT 100UF	20%	16V	
						C6794	1-100-566-91	CERAMIC CHIP 0.1UF	10.00%	25V	
						C6795	1-162-979-11	CERAMIC CHIP 0.0027UF	10.00%	50V	
						C6796	1-107-826-11	CERAMIC CHIP 0.1UF	10.00%	16V	
						C6797	Δ 1-165-794-21	MYLAR 1UF	10%	450V	
< CONNECTOR >											
CN6600	*1-793-660-11	PIN, CONNECTOR (PC BOARD) 3P									
CN6701	*1-785-702-21	PIN, CONNECTOR (PC BOARD) 5P									
CN6706	*1-785-705-11	PIN, CONNECTOR (PC BOARD) 9P									

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
CN6707	*1-779-944-21	PIN, CONNECTOR (PC BOARD) 4P		< IC >			
CN6708	*1-785-701-21	PIN, CONNECTOR (PC BOARD) 3P		IC6701	6-711-021-01	IC LX1692BIDW-TR	
< DIODE >				IC6702	6-708-762-01	IC PQ200WNA1ZPH	
D6600	6-501-818-01	DIODE MA2J1130GLS0		IC6703	8-759-575-27	IC BA10339F-E2	
D6601	6-501-818-01	DIODE MA2J1130GLS0		IC6704	6-709-368-01	IC MM1431ATT (CN)	
D6604	6-501-497-01	DIODE S3L60F		< COIL >			
D6605	6-501-497-01	DIODE S3L60F		L6600	1-406-976-11	INDUCTOR 68UH	
D6606	6-501-497-01	DIODE S3L60F		< TRANSISTOR >			
D6607	6-501-497-01	DIODE S3L60F		Q6600	8-729-804-41	TRANSISTOR 2SB1122-S	
D6608	6-501-818-01	DIODE MA2J1130GLS0		Q6601	8-729-804-41	TRANSISTOR 2SB1122-S	
D6609	6-501-818-01	DIODE MA2J1130GLS0		Q6602	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6612	6-501-497-01	DIODE S3L60F		Q6603	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6613	6-501-497-01	DIODE S3L60F		Q6604	8-729-804-41	TRANSISTOR 2SB1122-S	
D6614	6-501-497-01	DIODE S3L60F		Q6605	8-729-804-41	TRANSISTOR 2SB1122-S	
D6615	6-501-497-01	DIODE S3L60F		Q6606	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6620	8-719-083-57	DIODE UDZSTE-173.6B		Q6607	6-551-713-01	TRANSISTOR 2SK3569 (LBS1SONY.Q)	
D6621	8-719-083-57	DIODE UDZSTE-173.6B		Q6700	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6623	8-719-083-57	DIODE UDZSTE-173.6B		Q6701	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
D6624	8-719-083-57	DIODE UDZSTE-173.6B		Q6702	6-551-687-01	TRANSISTOR 3LP02C-TB-E	
D6625	6-500-137-01	DIODE BAT54HT1		Q6703	6-551-688-01	TRANSISTOR 3LN02C-TB-E	
D6700	6-501-730-01	DIODE MAZ8051GMLS0		Q6704	8-729-028-27	TRANSISTOR 2SK2009 (TE85L)	
D6701	6-501-730-01	DIODE MAZ8051GMLS0		Q6705	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6702	6-501-817-01	DIODE MA2J1110GLS0		Q6711	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D6703	6-501-817-01	DIODE MA2J1110GLS0		Q6712	6-551-696-01	TRANSISTOR 1SA1235AC1TP-1EF	
D6704	8-719-062-51	DIODE 1PS226-115		Q6714	6-551-696-01	TRANSISTOR 1SA1235AC1TP-1EF	
D6705	8-719-062-51	DIODE 1PS226-115		< RESISTOR >			
D6708	6-501-817-01	DIODE MA2J1110GLS0		JR6700	1-216-296-11	SHORT CHIP 0	
D6709	6-501-740-01	DIODE MAZ8068G0LS0		JR6701	1-216-296-11	SHORT CHIP 0	
D6710	6-501-740-01	DIODE MAZ8068G0LS0		JR6702	1-216-296-11	SHORT CHIP 0	
D6714	6-501-717-01	DIODE MAZ8039G0LS0		JR6703	1-216-296-11	SHORT CHIP 0	
D6715	6-501-717-01	DIODE MAZ8039G0LS0		JR6704	1-216-296-11	SHORT CHIP 0	
D6717	6-500-335-01	DIODE MC2838-T112-1		JR6705	1-216-296-11	SHORT CHIP 0	
D6718	6-501-817-01	DIODE MA2J1110GLS0		JR6706	1-216-296-11	SHORT CHIP 0	
D6720	8-719-062-51	DIODE 1PS226-115		JR6707	1-216-296-11	SHORT CHIP 0	
D6721	6-501-768-01	DIODE MAZ8120GMLS0		JR6708	1-216-296-11	SHORT CHIP 0	
ET6700	1-537-770-21	TERMINAL BOARD, GROUND		JR6709	1-216-296-11	SHORT CHIP 0	
ET6701	1-537-770-21	TERMINAL BOARD, GROUND		JR6710	1-216-296-11	SHORT CHIP 0	
< FERRITE BEAD >				JR6711	1-216-864-11	SHORT CHIP 0	
FB6600	1-412-911-11	FERRITE 0UH		JR6714	1-216-296-11	SHORT CHIP 0	
FB6601	1-410-396-41	FERRITE 0.45UH		JR6717	1-216-864-11	SHORT CHIP 0	
FB6602	1-412-911-11	FERRITE 0UH		JR6718	1-216-864-11	SHORT CHIP 0	
FB6603	1-410-396-41	FERRITE 0.45UH		JR6719	1-216-296-11	SHORT CHIP 0	
FB6604	1-412-911-11	FERRITE 0UH		JR6721	1-216-296-11	SHORT CHIP 0	
FB6605	1-410-396-41	FERRITE 0.45UH		JR6724	1-216-296-11	SHORT CHIP 0	
FB6606	1-412-911-11	FERRITE 0UH		JR6725	1-216-864-11	SHORT CHIP 0	
FB6607	1-410-396-41	FERRITE 0.45UH		JR6726	1-216-296-11	SHORT CHIP 0	
FB6608	1-481-256-11	FERRITE 0UH					
FB6609	1-481-256-11	FERRITE 0UH					

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R6600	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6731	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6601	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6733	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6602	1-249-403-11	CARBON	68	5%	1/4W	R6734	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6603	1-249-403-11	CARBON	68	5%	1/4W	R6736	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R6604	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6737	1-216-821-11	METAL CHIP	1K	5%	1/10W
R6605	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6750	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6606	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6751	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6607	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6752	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R6609	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6754	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R6610	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6755	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R6611	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6756	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R6612	1-249-403-11	CARBON	68	5%	1/4W	R6757	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6613	1-249-403-11	CARBON	68	5%	1/4W	R6758	1-211-981-11	METAL CHIP	33	0.5%	1/10W
R6614	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6760	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6615	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6761	1-218-853-11	METAL CHIP	1.8K	0.5%	1/10W
R6616	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6762	1-211-983-11	METAL CHIP	39	0.5%	1/10W
R6617	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6763	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6619	1-216-857-11	METAL CHIP	1M	5%	1/10W	R6764	1-211-985-11	METAL CHIP	47	0.5%	1/10W
R6632	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6766	1-216-864-11	SHORT CHIP	0		
R6633	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6767	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R6634	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6770	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6635	1-216-057-00	RES-CHIP	2.2K	5%	1/10W	R6771	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6636	1-216-864-11	SHORT CHIP	0			R6772	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6637	1-216-864-11	SHORT CHIP	0			R6773	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6638	1-216-864-11	SHORT CHIP	0			R6775	1-216-845-11	METAL CHIP	100K	5%	1/10W
R6639	1-216-864-11	SHORT CHIP	0			R6776	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R6700	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6777	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6701	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6778	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6702	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6779	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6703	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6780	1-216-864-11	SHORT CHIP	0		
R6704	1-216-793-11	METAL CHIP	4.7	5%	1/10W	R6782	1-216-842-11	METAL CHIP	56K	5%	1/10W
R6705	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6783	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6706	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6786	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6707	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6787	1-216-817-11	METAL CHIP	470	5%	1/10W
R6708	1-216-833-11	METAL CHIP	10K	5%	1/10W	R6788	1-216-864-11	SHORT CHIP	0		
R6710	1-243-831-71	METAL OXIDE	12	5%	1W	R6789	1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6711	1-243-831-71	METAL OXIDE	12	5%	1W	R6790	1-218-883-11	METAL CHIP	33K	0.5%	1/10W
R6712	1-243-831-71	METAL OXIDE	12	5%	1W	R6792	1-216-837-11	METAL CHIP	22K	5%	1/10W
R6713	1-243-831-71	METAL OXIDE	12	5%	1W	R6793	1-216-833-11	METAL CHIP	10K	5%	1/10W
R6714	1-216-836-11	METAL CHIP	18K	5%	1/10W	R6794	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6715	1-216-837-11	METAL CHIP	22K	5%	1/10W	R6795	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6716	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R6802	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6721	1-216-817-11	METAL CHIP	470	5%	1/10W	R6804	1-249-381-11	CARBON	1	5%	1/4W
R6722	1-218-897-11	METAL CHIP	120K	0.5%	1/10W	R6805	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R6723	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R6809	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R6724	1-216-864-11	SHORT CHIP	0			R6810	1-218-875-11	METAL CHIP	15K	0.5%	1/10W
R6725	1-218-891-11	METAL CHIP	68K	0.5%	1/10W	R6811	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6727	1-216-841-11	METAL CHIP	47K	5%	1/10W	R6816	1-216-864-11	SHORT CHIP	0		
R6729	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6820	1-216-864-11	SHORT CHIP	0		
R6730	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R6821	1-216-864-11	SHORT CHIP	0		

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

DF1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R6822	1-216-864-11	SHORT CHIP	0				
R6909	1-216-821-11	METAL CHIP	1K 5% 1/10W				
R6911	1-216-845-11	METAL CHIP	100K 5% 1/10W				
R6913	1-216-864-11	SHORT CHIP	0				
R6914	1-218-847-11	METAL CHIP	1K 0.5% 1/10W				

< TRANSFORMER >

T6600	Δ	8-597-057-00	TRANSFORMER, HIGH-VOLTAGE INSU
T6800	Δ	1-445-237-11	TRANSFORMER, DRIVE
T6801	Δ	8-597-057-00	TRANSFORMER, HIGH-VOLTAGE INSU

REF.NO.	PART.NO.	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS			
*1-821-375-11		BOARD TO BOARD CONNECTOR 80P	
*1-821-376-11		BOARD TO BOARD CONNECTOR 50P	
1-793-504-11		CABLE ASSY (15PDSUBX2CONNECTOR)	
*1-834-140-11		LEAD WIRE WITH CONNECTOR (LVDS)	
1-769-175-21		ANTENNA CABLE	
*1-834-261-11		CONNECTOR ASSY (40 inches)	
*1-834-262-11		CONNECTOR ASSY (52 inches)	
*1-834-263-11		CONNECTOR ASSY (46 inches)	
		(CN6904(DF3) - (PANEL RIGHT BALANCER BRD), CN6905(DF3) - (PANEL RIGHT BALANCER BRD), CN6707(DF1) - (PANEL LEFT BALANCER BRD), CN6708(DF1) - (PANEL LEFT BALANCER BRD))	
*1-834-264-11		CONNECTOR ASSY (52 inches)	
*1-834-416-11		LEAD WIRE WITH CONNECTOR (LVDS)	
		(40/46 inches)	
*1-834-417-11		LEAD WIRE WITH CONNECTOR (LVDS) (52 inches)	
*1-910-036-81		VH CONNECTOR ASSY (DF1) 3P	
		(CN6502(GF1) - CN6600(1)) (DF1/DF2) (40/46 inches)	
*1-910-036-82		XA CONNECTOR ASSY (DF1) 9P	
		(CN6153(GF1) - CN6706(1)) (DF1/DF2)) (40/46 inches)	
*1-910-036-86		XA CONNECTOR ASSY (BL) 5P	
		(CN6701(DF1) - (PANEL BALANCER BRD)) (40 inches)	
*1-910-036-91		CONNECTOR ASSY (DF1)	
		(CN6501(GF1) - CN6600(DF2)) (46 inches)	
*1-910-036-92		XA CONNECTOR ASSY (BL) 7P	
		(CN6701(DF2/DF4) - (PANEL BALANCER BOARD) (46/52 inches)	
*1-910-036-95		XA CONNECTOR ASSY (DF4) 9P	
		(CN6153(GF2) - CN6706(1) (DF4)) (52 inches)	
*1-910-036-99		CONNECTOR ASSY (DF5)	
		(CN6501(GF2) - CN6400(1) (DF5)) (52 inches)	
*1-910-037-00		XA CONNECTOR ASSY (UB) 6P	
		(CN6151(GF2) - CN7201(1) (UB1)) (46 inches)	
*1-910-037-04		XA CONNECTOR ASSY (UB) 6P	
		(CN6151(GF2) - CN7201(1) (UB1)) (52 inches)	
*1-910-037-28		XA CONNECTOR ASSY (UB) 6P	
		(CN6151(GF1) - CN7201(1) (UB1)) (40 inches)	
*1-910-037-29		VH CONNECTOR ASSY (SP) 4P	
		(PANEL BALANCER BRD) - SPEAKER(1)) (40 inches)	
*1-910-037-32		VH CONNECTOR ASSY (DF4) 3P	
		(CN6502(GF2) - CN6600(1) (DF4)) (52 inches)	
*1-910-037-80		MO1929 CONNECTOR ASSY (H) 40P	
		(CN004(AE) - CN7022(1) (HW2)) (40 inches)	
*1-910-037-81		MO1929 CONNECTOR ASSY (H) 40P	
		(CN004(AE) - CN7022(1) (HW2)) (46 inches)	
*1-910-037-82		MO1929 CONNECTOR ASSY (H) 40P	
		(CN6502(GF2) - CN6600(1) (DF4)) (52 inches)	
*1-910-037-87		CONNECTOR ASSY (FFC49P)	
		(CN3301(H4) - CN3702(1) (FB2))	
*1-910-038-17		CONNECTOR ASSY (LUG) (FLAME-L(1))	
		(52 inches)	
*1-910-038-18		CONNECTOR ASSY (LUG) (FLAME-R(1))	
		(52 inches)	

REF.NO.	PART.NO	DESCRIPTION	REMARK
	*1-910-039-26	GH CONNECTOR ASSY (FAN) 6P (40 inches)	
	*1-910-039-27	GH CONNECTOR ASSY (FAN) 6P (46 inches)	
	*1-910-039-50	FASTEN CONNECTOR ASSY (HW2)	(HW2-CHASSIS(1))
	*1-910-039-83	XA CONNECTOR ASSY 13P (FB) (CN6150 (GF1) -CN5600 (1) (FB2)) (40/46 inches)	
	*1-910-039-84	XA CONNECTOR ASSY 13P (FB) (CN6150 (GF2) -CN5600 (1) (FB2)) (52 inches)	
	*1-910-040-22	CONNECTOR ASSY (USB) (CN-3500 (FB2) -CN7121 (1) (HW2)) (40 inches)	
	*1-910-040-23	CONNECTOR ASSY (USB) (CN-3500 (FB2) -CN7121 (1) (HW2)) (46 inches)	
	*1-910-040-24	CONNECTOR ASSY (USB) (CN-3500 (FB2) -CN7121 (1) (HW2)) (52 inches)	
	*1-910-040-26	XA CONNECTOR ASSY (A) (CN-6154 (GF2) -CN001 (1) (AE)) (40 inches)	
	*1-910-040-27	XA CONNECTOR ASSY (A) (CN-6154 (GF2) -CN001 (1) (AE)) (46 inches)	
	*1-910-040-28	XA CONNECTOR ASSY (A) (CN-6154 (GF2) -CN001 (1) (AE)) (52 inches)	
	*1-910-040-29	GH CONNECTOR ASSY (FAN) 6P (CN-202 (AE) -FAN (1)) (40 inches)	
	*1-910-040-30	GH CONNECTOR ASSY (FAN) 6P (CN-202 (AE) -FAN (1)) (46 inches)	
	*1-910-040-74	SHLDP CONNECTOR ASSY 50P (CN-3102 (TUE) -CN3700 (FB2))	
	*1-910-040-75	VH CONNECTOR ASSY (SP) 4P (CN-801 -SPEAKER (1)) (52 inches)	
	*1-910-041-43	VH CONNECTOR ASSY (SP) 4P (PANEL BALANCER BRD) -SPEAKER) (46 inches)	
	*3-219-178-11	INSTRUCTION MANUAL (UK) (ENGLISH)	
	*3-219-178-21	INSTRUCTION MANUAL (AEP) (ITALIAN/FRENCH/ GERMAN/ DUTCH)	
	*3-219-178-31	INSTRUCTION MANUAL (AEP) (GREEK/SPANISH/ PORTUGUESE)	
	*3-219-178-41	INSTRUCTION MANUAL (AEP) (SWEDISH/DANISH/ FINNISH/NORWEGIAN)	
	*3-219-178-51	INSTRUCTION MANUAL (AEP) (ENGLISH/RUSSIAN/ POLISH)	
	*3-219-178-61	INSTRUCTION MANUAL (AEP) (CZECH)	
	*3-219-178-71	INSTRUCTION MANUAL (AEP) (SLOVAK)	
	*3-219-178-81	INSTRUCTION MANUAL (AEP) (HUNGARIAN)	
	*3-219-178-91	INSTRUCTION MANUAL (AEP) (TURKISH)	

REMOTE COMMANDER

1-480-360-11 REMOTE COMMANDER (RM-ED010)

