

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

Parts Color Cabinet's Color

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


The components identified by mark $\square$ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

8-1-1. OVERALL SECTION

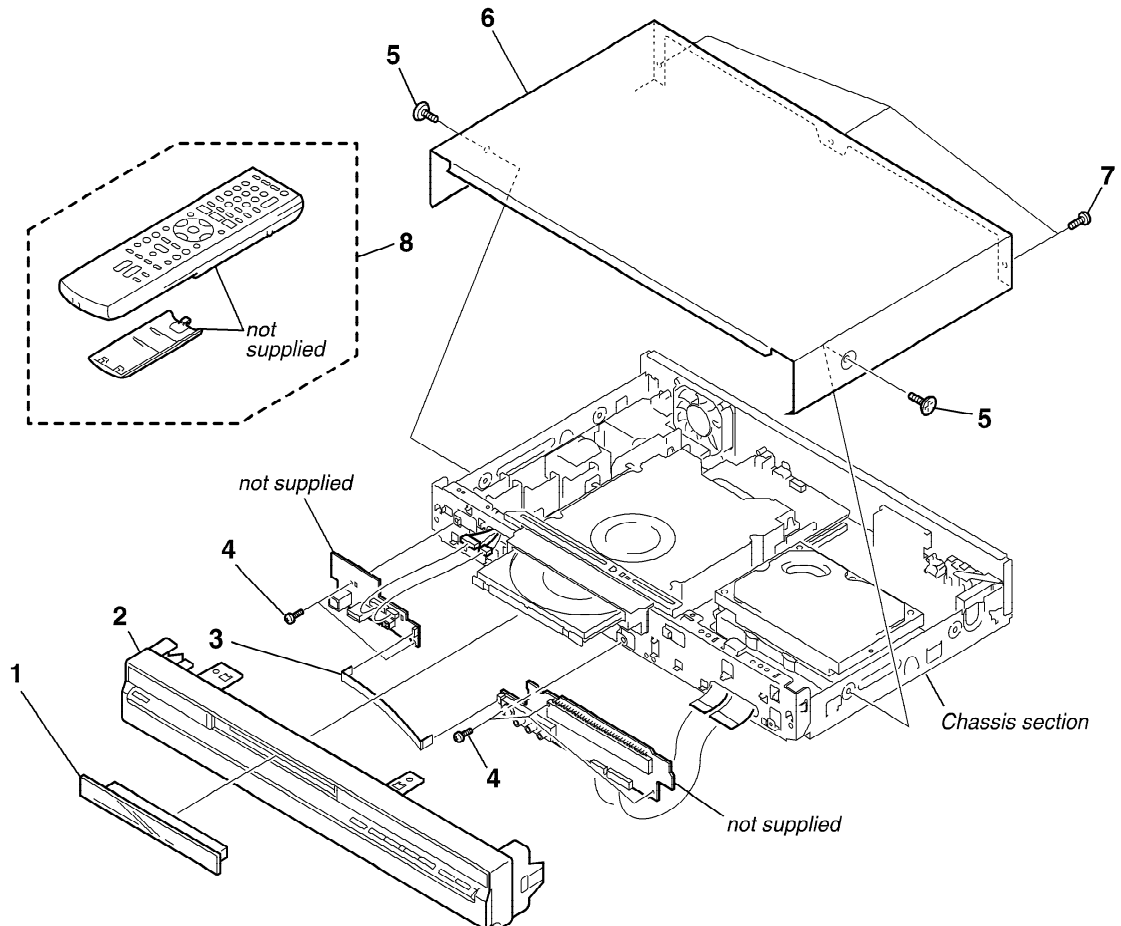

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-2176-442-1	COVER ASSY, TRAY		2	A-1256-237-A	PANEL BLOCK ASSY, FRONT	
2	A-1253-396-A	PANEL BLOCK ASSY, FRONT				(HX650(SILVER): AEP2)	
		(HX750(BLACK): AEP1, UK)		2	A-1274-298-A	PANEL BLOCK ASSY, FRONT (GX350: AEP1)	
2	A-1253-770-A	PANEL BLOCK ASSY, FRONT		2	A-1277-367-A	PANEL BLOCK ASSY, FRONT (GX350: AEP2)	
		(HX750(SILVER): AEP1)		2	A-1278-917-A	PANEL BLOCK ASSY, FRONT (GX350: UK)	
2	A-1254-504-A	PANEL BLOCK ASSY, FRONT		* 3	1-834-076-11	CABLE, FLEXIBLE FLAT (FLR-010)	
		(HX750(BLACK): AEP2)		4	3-077-331-01	+BV3 (3-CR)	
2	A-1254-829-A	PANEL BLOCK ASSY, FRONT		5	3-070-883-31	SCREW, TAPPING (BLACK)	
		(HX750(SILVER): AEP2)		5	3-070-883-41	SCREW, TAPPING (SILVER)	
2	A-1256-056-A	PANEL BLOCK ASSY, FRONT (HX950: AEP1)		6	2-899-645-01	CASE, UPPER (BLACK)	
2	A-1256-070-A	PANEL BLOCK ASSY, FRONT (HX950: AEP2)		6	2-899-645-21	CASE, UPPER (SILVER)	
2	A-1256-153-A	PANEL BLOCK ASSY, FRONT		7	3-076-563-11	SCREW, SPECIAL FRONT POINT	
		(HX650(BLACK): AEP1, AEP3)		8	1-480-168-11	REMOTE COMMANDER (RMT-D247P)	
2	A-1256-177-A	PANEL BLOCK ASSY, FRONT				(HX750: UK, AEP1/HX950: AEP1)	
		(HX650(SILVER): AEP1, AEP3)		8	1-480-169-11	REMOTE COMMANDER (RMT-D246P)	
2	A-1256-209-A	PANEL BLOCK ASSY, FRONT				(HX650/HX750: AEP2/HX950: AEP2)	
		(HX650(BLACK): AEP2)		8	1-480-170-11	REMOTE COMMANDER (RMT-D245P) (GX350)	

8-1-2. CHASSIS SECTION

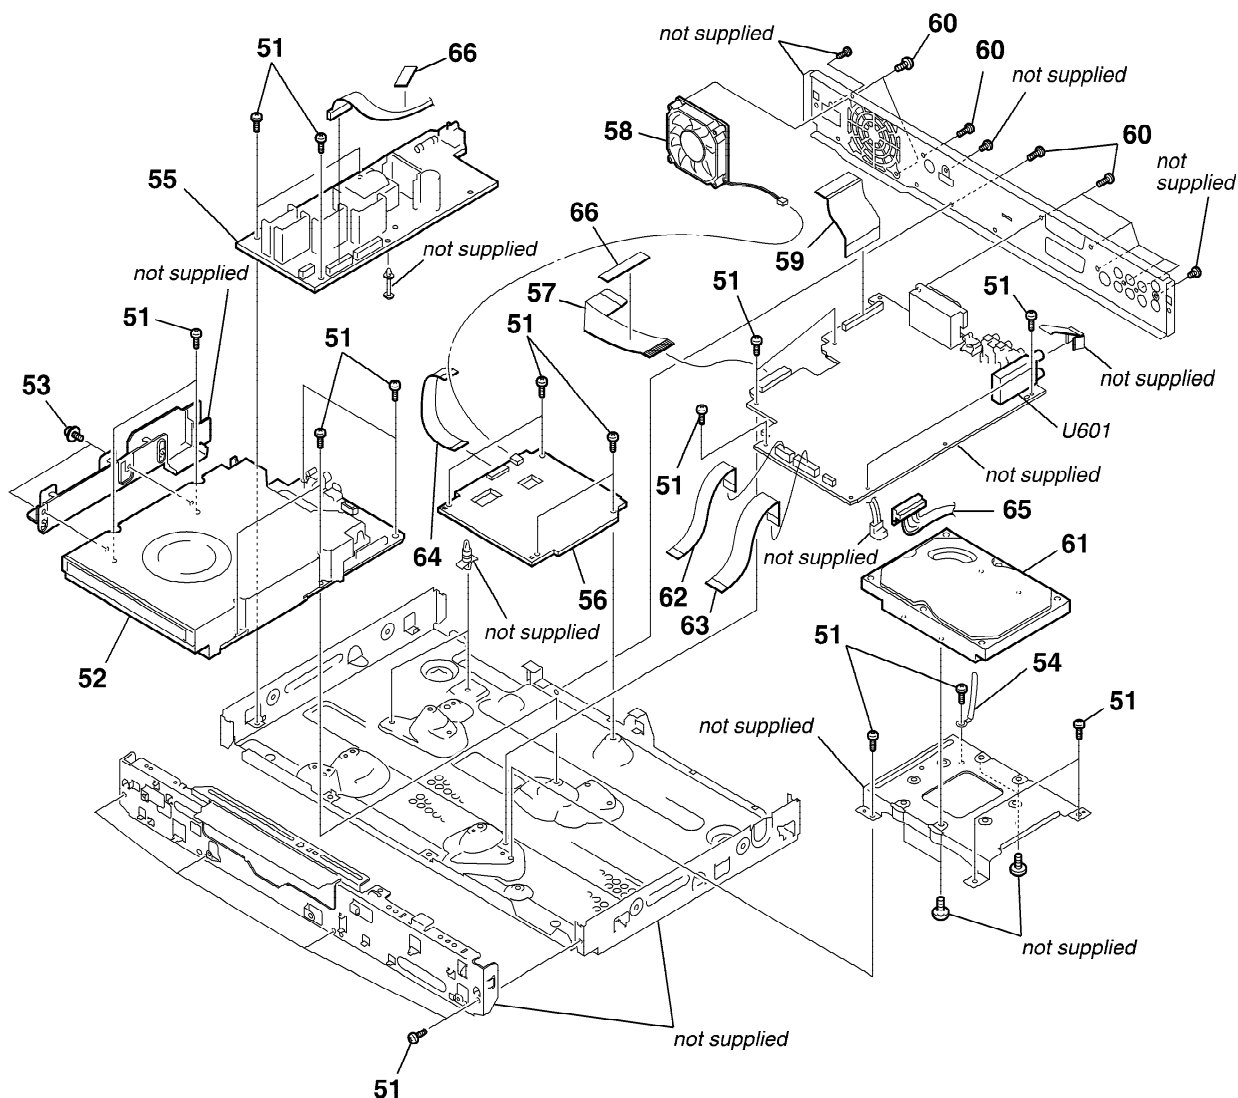

Ref. No.	Part No.	Description	Remarks
51	3-077-331-01	+BV3 (3-CR)	
△ 52	A-1271-316-A	DRW-U12S0 S COMPL (HX650/HX750/HX950)	
△ 52	A-1279-815-A	DRW-U12 (SINGLE) ASSY (GX350)	
53	7-682-947-01	SCREW +PSW 3X6	
54	4-237-065-01	CLAMP (L35) (EXCEPT GX350)	
△ 55	1-474-048-11	POWER SUPPLY BLOCK (SRV2058EK)	
56	A-1267-073-A	VDC-001 BOARD, COMPLETE	
* 57	1-834-175-11	CABLE, FLEXIBLE FLAT (FVA-002)	
58	1-787-625-11	FAN, DC	
59	1-834-075-11	CABLE, FLEXIBLE FLAT (FRA-006)	

Ref. No.	Part No.	Description	Remarks
60	3-077-331-31	+BV3 (3-CR)	
61	A-1314-555-A	HDD (S-GALAXY-S (250GB)-E) ASSY (HX950)	
61	A-1318-134-A	HDD (S-TONKA2-S (160GB)-E) ASSY (HX650/HX750)	
62	1-834-072-11	CABLE, FLEXIBLE FLAT (FAR-006)	
63	1-834-074-11	CABLE, FLEXIBLE FLAT (FAR-007)	
* 64	1-834-168-11	CABLE, FLEXIBLE FLAT (FVR-001)	
65	1-965-191-11	HARNESS (RH-059) (HX650/HX750/HX950)	
* 66	3-087-220-01	TAPE, NON-HALOGENE	
△ U601	1-693-741-11	TUNER (TMFE2-407A)	

Note : The components identified by mark △ contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		AV-114 BOARD (not supplied)		C301	1-164-156-11	CERAMIC CHIP	0.1uF 25V
		(Ref.No.;10000 series)		C302	1-164-156-11	CERAMIC CHIP	0.1uF 25V
		*****		C303	1-126-933-11	ELECT	100uF 20% 16V
		< CAPACITOR >		C305	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C104	1-104-662-91	ELECT	22uF 20% 25V	C306	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C105	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C307	1-126-933-11	ELECT	100uF 20% 16V
C106	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C308	1-126-933-11	ELECT	100uF 20% 16V
C107	1-162-959-11	CERAMIC CHIP	330PF 5% 50V	C309	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C109	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C310	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C110	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C311	1-126-934-11	ELECT	220uF 20% 16V
C111	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C312	1-126-933-11	ELECT	100uF 20% 16V
C112	1-162-919-11	CERAMIC CHIP	22PF 5% 50V	C314	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C113	1-115-156-11	CERAMIC CHIP	1uF 10V	C315	1-126-933-11	ELECT	100uF 20% 16V
C114	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C316	1-126-933-11	ELECT	100uF 20% 16V
C115	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C318	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C118	1-115-456-21	DOUBLE LAYER	0.22F 5.5V	C319	1-126-933-11	ELECT	100uF 20% 16V
C120	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C320	1-126-933-11	ELECT	100uF 20% 16V
C121	1-115-156-11	CERAMIC CHIP	1uF 10V	C322	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C122	1-115-156-11	CERAMIC CHIP	1uF 10V	C323	1-100-162-91	CERAMIC CHIP	1uF 50V
C123	1-104-655-91	ELECT	470uF 20% 6.3V	C324	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C124	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C326	1-126-964-11	ELECT	10uF 20% 50V
C125	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C328	1-165-621-91	CERAMIC CHIP	0.1uF 50V
C126	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C329	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C127	1-126-933-11	ELECT	100uF 20% 16V	C401	1-115-156-11	CERAMIC CHIP	1uF 10V
C131	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C402	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C132	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C403	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C133	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C404	1-115-156-11	CERAMIC CHIP	1uF 10V
C134	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C406	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C135	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C407	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C138	1-126-961-11	ELECT	2.2uF 20% 50V	C408	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C139	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C409	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C140	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C410	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C141	1-115-156-11	CERAMIC CHIP	1uF 10V	C411	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C142	1-100-831-91	CERAMIC CHIP	0.001uF 2% 50V	C412	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C149	1-162-915-11	CERAMIC CHIP	10PF 0.5PF 50V	C413	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C150	1-115-156-11	CERAMIC CHIP	1uF 10V	C414	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C152	1-115-156-11	CERAMIC CHIP	1uF 10V	C415	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C156	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C418	1-115-156-11	CERAMIC CHIP	1uF 10V
C157	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C419	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C202	1-164-156-11	CERAMIC CHIP	0.1uF 25V	C420	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C204	1-126-933-11	ELECT	100uF 20% 16V	C421	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C205	1-104-662-91	ELECT	22uF 20% 25V	C422	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C206	1-164-315-11	CERAMIC CHIP	470PF 5% 50V	C423	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C208	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C424	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
				C428	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C431	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C508	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C432	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C510	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C434	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C511	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C435	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C515	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C436	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C516	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C437	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C517	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C438	1-115-156-11	CERAMIC CHIP	1uF		10V	C518	1-100-831-91	CERAMIC CHIP	0.001uF	2%	50V
C439	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C519	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C440	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C520	1-100-831-91	CERAMIC CHIP	0.001uF	2%	50V
C441	1-115-156-11	CERAMIC CHIP	1uF		10V	C528	1-104-655-91	ELECT	470uF	20%	6.3V
C442	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C529	1-104-655-91	ELECT	470uF	20%	6.3V
C443	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C530	1-104-655-91	ELECT	470uF	20%	6.3V
C444	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C531	1-104-655-91	ELECT	470uF	20%	6.3V
C445	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C532	1-104-655-91	ELECT	470uF	20%	6.3V
C446	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C541	1-126-963-11	ELECT	4.7uF	20%	50V
C447	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C542	1-126-963-11	ELECT	4.7uF	20%	50V
C450	1-107-713-11	ELECT	4.7uF	20%	50V	C543	1-126-963-11	ELECT	4.7uF	20%	50V
C451	1-107-713-11	ELECT	4.7uF	20%	50V	C544	1-126-963-11	ELECT	4.7uF	20%	50V
C452	1-104-658-91	ELECT	100uF	20%	10V	C545	1-126-933-11	ELECT	100uF	20%	16V
C453	1-104-658-91	ELECT	100uF	20%	10V	C547	1-104-662-91	ELECT	22uF	20%	25V
C454	1-104-658-91	ELECT	100uF	20%	10V	C550	1-104-662-91	ELECT	22uF	20%	25V
C455	1-126-963-11	ELECT	4.7uF	20%	50V	C551	1-104-662-91	ELECT	22uF	20%	25V
C456	1-126-960-11	ELECT	1uF	20%	50V	C552	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C457	1-126-964-11	ELECT	10uF	20%	50V	C602	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C458	1-104-658-91	ELECT	100uF	20%	10V	C603	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C460	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C604	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C461	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C605	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C462	1-115-156-11	CERAMIC CHIP	1uF		10V	C606	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C463	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C608	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C464	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C609	1-104-658-91	ELECT	100uF	20%	10V
C468	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C611	1-126-947-11	ELECT	47uF	20%	35V
C469	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C613	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C471	1-126-964-11	ELECT	10uF	20%	50V	C614	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C472	1-126-964-11	ELECT	10uF	20%	50V	C615	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C473	1-126-933-11	ELECT	100uF	20%	16V	C616	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C474	1-126-964-11	ELECT	10uF	20%	50V	C617	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C475	1-126-964-11	ELECT	10uF	20%	50V	C618	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C476	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C619	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C478	1-216-864-11	SHORT CHIP	0			C620	1-115-156-11	CERAMIC CHIP	1uF		10V
C481	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C621	1-162-924-11	CERAMIC CHIP	56PF	5%	50V
C482	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C622	1-162-924-11	CERAMIC CHIP	56PF	5%	50V
C484	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C623	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C485	1-216-864-11	SHORT CHIP	0			C624	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C486	1-104-655-91	ELECT	470uF	20%	6.3V	C625	1-115-156-11	CERAMIC CHIP	1uF		10V
C487	1-104-655-91	ELECT	470uF	20%	6.3V	C626	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C488	1-104-655-91	ELECT	470uF	20%	6.3V	C627	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C489	1-104-655-91	ELECT	470uF	20%	6.3V	C628	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C490	1-104-655-91	ELECT	470uF	20%	6.3V	C629	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C491	1-126-947-11	ELECT	47uF	20%	35V	C630	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C492	1-126-923-91	ELECT	220uF	20%	10V	C631	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C493	1-126-947-11	ELECT	47uF	20%	35V	C632	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C496	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C633	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C497	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C635	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C498	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C636	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C499	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C638	1-126-964-11	ELECT	10uF	20%	50V
C500	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C639	1-126-962-11	ELECT	3.3uF	20%	50V
C503	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	C640	1-104-658-91	ELECT	100uF	20%	10V
C505	1-100-831-91	CERAMIC CHIP	0.001uF	2%	50V	C641	1-126-964-11	ELECT	10uF	20%	50V
C506	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C642	1-104-658-91	ELECT	100uF	20%	10V
C507	1-100-831-91	CERAMIC CHIP	0.001uF	2%	50V	C643	1-104-658-91	ELECT	100uF	20%	10V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C751	1-164-156-11	CERAMIC CHIP 0.1uF 25V (HX750:AEP1,UK/HX950:AEP1)		D522	8-719-081-42	DIODE UMZ6.8N-T106	
C752	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (HX750:AEP1,UK/HX950:AEP1)		* D523	6-501-855-01	DIODE DAN217UT106	
C753	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (HX750:AEP1,UK/HX950:AEP1)		* D524	6-501-855-01	DIODE DAN217UT106	
C754	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (HX750:AEP1,UK/HX950:AEP1)		D526	8-719-988-61	DIODE 1SS355TE-17	
		< CONNECTOR >		D527	8-719-988-61	DIODE 1SS355TE-17	
CN103	1-779-277-11	CONNECTOR, FFC (LIF (NON-ZIF)) 9P		D528	8-719-988-61	DIODE 1SS355TE-17	
CN105	1-784-496-11	CONNECTOR, FFC/FPC 17P		D529	8-719-083-63	DIODE UDZSTE-1713B	
CN106	1-568-830-11	CONNECTOR SOCKET 11P		D530	8-719-083-63	DIODE UDZSTE-1713B	
* CN302	1-784-746-11	CONNECTOR, FFC 24P		D531	8-719-081-42	DIODE UMZ6.8N-T106	
		< DIODE >		D801	8-719-081-42	DIODE UMZ6.8N-T106	
D101	8-719-988-61	DIODE 1SS355TE-17				< IC >	
D102	8-719-988-61	DIODE 1SS355TE-17		IC101	6-807-412-01	IC LC87F06J2A-F58W3-E	
D103	8-719-988-61	DIODE 1SS355TE-17		* IC102	6-711-071-01	IC BD4846G-TR	
D104	8-719-053-18	DIODE 1SR154-400TE-25		* IC103	6-711-072-01	IC BU4220G-TR	
D106	8-719-988-61	DIODE 1SS355TE-17		* IC104	6-711-188-01	IC TC7MB3257FK (EL)	
				* IC401	6-711-073-01	IC HA118326APFR-E	
D108	8-719-941-09	DIODE DAP202UT106		IC402	8-759-909-71	IC BA4558F	
D201	8-719-988-61	DIODE 1SS355TE-17		IC403	6-703-623-01	IC MM1503XNRE	
D301	8-719-083-83	DIODE UDZS-TE17-15B		IC406	8-759-082-60	IC TC7S66FU	
D302	8-719-069-60	DIODE UDZSTE-179.1B		IC601	6-702-714-01	IC MSP3417G-QG-B8V3	
D303	8-719-988-61	DIODE 1SS355TE-17				< FUSE >	
D304	8-719-988-61	DIODE 1SS355TE-17		△ IC150	1-576-863-21	FUSE, MICRO 0.5A 32V	
D401	8-719-083-61	DIODE UDZSTE-1711B		△ IC317	1-576-863-21	FUSE, MICRO 0.5A 32V	
D402	8-719-978-33	DIODE UDZSTE-176.8B				< JACK >	
D409	8-719-081-42	DIODE UMZ6.8N-T106		JA401	1-794-198-11	CONNECTOR, S TERMINAL	
D410	8-719-081-42	DIODE UMZ6.8N-T106		JA751	1-764-188-31	JACK (SMALL TYPE) (DIA. 3.5) (HX750:AEP1,UK/HX950:AEP1)	
D413	8-719-081-42	DIODE UMZ6.8N-T106				< TERMINAL >	
D414	8-719-081-42	DIODE UMZ6.8N-T106		KN101	1-537-771-21	TERMINAL BOARD, GROUND	
D415	8-719-081-42	DIODE UMZ6.8N-T106		KN102	1-537-771-21	TERMINAL BOARD, GROUND	
D416	8-719-081-42	DIODE UMZ6.8N-T106				< COIL >	
D418	8-719-988-61	DIODE 1SS355TE-17		L102	1-410-517-11	INDUCTOR 47uH	
D419	8-719-988-61	DIODE 1SS355TE-17		L201	1-412-549-31	INDUCTOR 1mH	
D420	8-719-941-09	DIODE DAP202UT106		L303	1-500-245-11	INDUCTOR, FERRITE BEAD	
D421	6-501-486-01	DIODE NNCD3.9F-T1B		L304	1-408-621-31	INDUCTOR 330uH	
D422	6-501-486-01	DIODE NNCD3.9F-T1B		L305	1-500-245-11	INDUCTOR, FERRITE BEAD	
D501	8-719-069-54	DIODE UDZSTE-175.1B		L501	1-414-594-11	INDUCTOR, FERRITE BEAD	
D502	8-719-069-54	DIODE UDZSTE-175.1B		L502	1-414-594-11	INDUCTOR, FERRITE BEAD	
D503	6-501-486-01	DIODE NNCD3.9F-T1B		L601	1-500-245-11	INDUCTOR, FERRITE BEAD	
D504	8-719-081-42	DIODE UMZ6.8N-T106		L602	1-500-245-11	INDUCTOR, FERRITE BEAD	
D505	8-719-081-42	DIODE UMZ6.8N-T106		L604	1-414-760-21	INDUCTOR, FERRITE BEAD	
D506	8-719-081-42	DIODE UMZ6.8N-T106		L605	1-414-760-21	INDUCTOR, FERRITE BEAD	
D507	8-719-081-42	DIODE UMZ6.8N-T106		L606	1-500-245-11	INDUCTOR, FERRITE BEAD	
D508	6-501-486-01	DIODE NNCD3.9F-T1B		L607	1-412-963-11	INDUCTOR 100uH	
D509	8-719-081-42	DIODE UMZ6.8N-T106		L608	1-500-245-11	INDUCTOR, FERRITE BEAD	
D510	6-501-486-01	DIODE NNCD3.9F-T1B		L609	1-412-951-11	INDUCTOR 10uH	
D511	8-719-081-42	DIODE UMZ6.8N-T106		L751	1-414-760-21	INDUCTOR, FERRITE BEAD (HX750:AEP1,UK/HX950:AEP1)	
D512	6-501-486-01	DIODE NNCD3.9F-T1B		L801	1-414-228-11	INDUCTOR, FERRITE BEAD	
D513	8-719-081-42	DIODE UMZ6.8N-T106		L802	1-414-228-11	INDUCTOR, FERRITE BEAD	
D514	8-719-081-42	DIODE UMZ6.8N-T106		L803	1-216-864-11	SHORT CHIP 0	
D515	8-719-081-42	DIODE UMZ6.8N-T106		L851	1-414-228-11	INDUCTOR, FERRITE BEAD	
D516	8-719-081-42	DIODE UMZ6.8N-T106					
D517	8-719-081-42	DIODE UMZ6.8N-T106					
D518	8-719-081-42	DIODE UMZ6.8N-T106					
D519	8-719-081-42	DIODE UMZ6.8N-T106					
D520	8-719-081-42	DIODE UMZ6.8N-T106					
D521	8-719-081-42	DIODE UMZ6.8N-T106					

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
L852	1-414-228-11	INDUCTOR, FERRITE BEAD		Q605	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF
L853	1-414-228-11	INDUCTOR, FERRITE BEAD		Q606	8-729-620-13	TRANSISTOR	2SC4154TP-1EF
L854	1-414-228-11	INDUCTOR, FERRITE BEAD		Q751	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR
L855	1-500-283-11	INDUCTOR, FERRITE BEAD					(HX750:AEP1,UK/HX950:AEP1)
L856	1-414-228-11	INDUCTOR, FERRITE BEAD		Q752	8-729-905-35	TRANSISTOR	2SC4081-R
							(HX750:AEP1,UK/HX950:AEP1)
L857	1-414-228-11	INDUCTOR, FERRITE BEAD				< RESISTOR >	
L858	1-414-228-11	INDUCTOR, FERRITE BEAD		R101	1-216-809-11	METAL CHIP	100 5% 1/10W
L859	1-414-228-11	INDUCTOR, FERRITE BEAD		R102	1-216-809-11	METAL CHIP	100 5% 1/10W
L860	1-500-283-11	INDUCTOR, FERRITE BEAD		R103	1-216-809-11	METAL CHIP	100 5% 1/10W
L861	1-469-876-11	INDUCTOR, FERRITE BEAD		R104	1-216-841-11	METAL CHIP	47K 5% 1/10W
L862	1-469-796-21	FERRITE, CHIP		R105	1-216-809-11	METAL CHIP	100 5% 1/10W
		< TRANSISTOR >		R106	1-216-864-11	SHORT CHIP	0
Q101	8-729-029-06	TRANSISTOR	DTC124EUA-T106	R107	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q102	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R109	1-216-815-11	METAL CHIP	330 5% 1/10W
Q103	6-550-375-01	TRANSISTOR	UMD2N-TR	R110	1-216-809-11	METAL CHIP	100 5% 1/10W
Q104	6-550-375-01	TRANSISTOR	UMD2N-TR	R111	1-216-809-11	METAL CHIP	100 5% 1/10W
Q105	8-729-023-22	TRANSISTOR	2SD2114K	R112	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q108	8-729-029-06	TRANSISTOR	DTC124EUA-T106	R113	1-216-864-11	SHORT CHIP	0
Q110	8-729-028-86	TRANSISTOR	DTA143EUA-T106	R116	1-216-864-11	SHORT CHIP	0
			(HX750:AEP1,UK/HX950:AEP1)	R117	1-216-857-11	METAL CHIP	1M 5% 1/10W
Q111	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R118	1-216-864-11	SHORT CHIP	0
Q112	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R123	1-216-815-11	METAL CHIP	330 5% 1/10W
Q201	8-729-023-22	TRANSISTOR	2SD2114K	R124	1-216-815-11	METAL CHIP	330 5% 1/10W
Q301	6-550-375-01	TRANSISTOR	UMD2N-TR	R125	1-216-809-11	METAL CHIP	100 5% 1/10W
Q302	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R126	1-216-809-11	METAL CHIP	100 5% 1/10W
Q303	6-550-375-01	TRANSISTOR	UMD2N-TR	R127	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q304	8-729-044-09	TRANSISTOR	2SD2153T100V	R129	1-216-815-11	METAL CHIP	330 5% 1/10W
Q305	6-550-375-01	TRANSISTOR	UMD2N-TR	R130	1-216-864-11	SHORT CHIP	0
Q306	8-729-901-87	TRANSISTOR	2SC2411K-CQ	R131	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
Q307	6-550-375-01	TRANSISTOR	UMD2N-TR	R132	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
Q308	8-729-901-87	TRANSISTOR	2SC2411K-CQ	R133	1-216-845-11	METAL CHIP	100K 5% 1/10W
* Q309	6-551-719-01	TRANSISTOR	2SC5876T106QR	R134	1-216-821-11	METAL CHIP	1K 5% 1/10W
Q310	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R135	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q311	8-729-427-70	TRANSISTOR	XP4401	R137	1-216-809-11	METAL CHIP	100 5% 1/10W
Q401	8-729-029-06	TRANSISTOR	DTC124EUA-T106	R138	1-216-817-11	METAL CHIP	470 5% 1/10W
Q402	8-729-023-22	TRANSISTOR	2SD2114K	R139	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
Q403	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R140	1-216-809-11	METAL CHIP	100 5% 1/10W
Q404	6-550-375-01	TRANSISTOR	UMD2N-TR	R141	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
Q406	8-729-023-22	TRANSISTOR	2SD2114K	R142	1-216-809-11	METAL CHIP	100 5% 1/10W
Q407	8-729-023-22	TRANSISTOR	2SD2114K	R143	1-216-809-11	METAL CHIP	100 5% 1/10W
Q408	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R144	1-216-864-11	SHORT CHIP	0
Q410	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R145	1-216-833-11	METAL CHIP	10K 5% 1/10W
Q411	6-550-375-01	TRANSISTOR	UMD2N-TR	R146	1-216-809-11	METAL CHIP	100 5% 1/10W
Q413	8-729-029-06	TRANSISTOR	DTC124EUA-T106	R147	1-216-821-11	METAL CHIP	1K 5% 1/10W
* Q501	6-551-718-01	TRANSISTOR	UMH1NTN	R148	1-216-809-11	METAL CHIP	100 5% 1/10W
Q502	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R149	1-216-864-11	SHORT CHIP	0
Q503	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R150	1-216-864-11	SHORT CHIP	0
Q504	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R151	1-216-864-11	SHORT CHIP	0
Q505	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R152	1-216-864-11	SHORT CHIP	0
Q506	8-729-013-26	TRANSISTOR	HN1C03FU-TE85R	R153	1-216-809-11	METAL CHIP	100 5% 1/10W
Q507	8-729-013-26	TRANSISTOR	HN1C03FU-TE85R	R154	1-216-809-11	METAL CHIP	100 5% 1/10W
Q508	8-729-028-83	TRANSISTOR	DTA124EUA-T106	R155	1-216-809-11	METAL CHIP	100 5% 1/10W
Q509	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R156	1-216-809-11	METAL CHIP	100 5% 1/10W
Q510	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R157	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q511	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R158	1-216-845-11	METAL CHIP	100K 5% 1/10W
Q601	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R159	1-216-864-11	SHORT CHIP	0
Q602	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF				
Q604	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF				

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R160	1-216-809-11	METAL CHIP	100	5%	1/10W	R251	1-216-295-91	SHORT CHIP	0		
R161	1-216-864-11	SHORT CHIP	0			R301	1-216-295-91	SHORT CHIP	0		
R165	1-216-864-11	SHORT CHIP	0			R302	1-216-295-91	SHORT CHIP	0		
R167	1-216-809-11	METAL CHIP	100	5%	1/10W	R303	1-216-295-91	SHORT CHIP	0		
R168	1-216-812-11	METAL CHIP	180	5%	1/10W	R304	1-216-809-11	METAL CHIP	100	5%	1/10W
R169	1-216-833-11	METAL CHIP	10K	5%	1/10W	R305	1-216-803-11	METAL CHIP	33	5%	1/10W
R171	1-216-809-11	METAL CHIP	100	5%	1/10W	R306	1-216-803-11	METAL CHIP	33	5%	1/10W
R172	1-216-809-11	METAL CHIP	100	5%	1/10W	R307	1-216-295-91	SHORT CHIP	0		
R173	1-216-845-11	METAL CHIP	100K	5%	1/10W	R308	1-216-295-91	SHORT CHIP	0		
R174	1-216-845-11	METAL CHIP	100K	5%	1/10W	R309	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R175	1-216-815-11	METAL CHIP	330	5%	1/10W	R310	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R176	1-216-821-11	METAL CHIP	1K	5%	1/10W	R311	1-216-820-11	METAL CHIP	820	5%	1/10W
R177	1-216-809-11	METAL CHIP	100	5%	1/10W	R312	1-216-833-11	METAL CHIP	10K	5%	1/10W
R178	1-216-809-11	METAL CHIP	100	5%	1/10W	R313	1-216-848-11	METAL CHIP	180K	5%	1/10W
R179	1-216-809-11	METAL CHIP	100	5%	1/10W	R314	1-216-837-11	METAL CHIP	22K	5%	1/10W
R180	1-216-809-11	METAL CHIP	100	5%	1/10W	R315	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R181	1-216-809-11	METAL CHIP	100	5%	1/10W	R316	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R182	1-216-809-11	METAL CHIP	100	5%	1/10W	R318	1-216-864-11	SHORT CHIP	0		
R183	1-216-809-11	METAL CHIP	100	5%	1/10W	R401	1-216-295-91	SHORT CHIP	0		
R184	1-216-809-11	METAL CHIP	100	5%	1/10W	R402	1-216-818-11	METAL CHIP	560	5%	1/10W
R185	1-216-809-11	METAL CHIP	100	5%	1/10W	R403	1-216-818-11	METAL CHIP	560	5%	1/10W
R186	1-216-809-11	METAL CHIP	100	5%	1/10W	R404	1-216-295-91	SHORT CHIP	0		
R187	1-216-809-11	METAL CHIP	100	5%	1/10W	R407	1-216-295-91	SHORT CHIP	0		
R188	1-216-815-11	METAL CHIP	330	5%	1/10W	R408	1-216-817-11	METAL CHIP	470	5%	1/10W
R189	1-216-817-11	METAL CHIP	470	5%	1/10W	R413	1-216-817-11	METAL CHIP	470	5%	1/10W
R193	1-216-845-11	METAL CHIP	100K	5%	1/10W	R414	1-216-817-11	METAL CHIP	470	5%	1/10W
R194	1-216-845-11	METAL CHIP	100K	5%	1/10W	R415	1-216-817-11	METAL CHIP	470	5%	1/10W
R195	1-216-845-11	METAL CHIP	100K	5%	1/10W	R416	1-216-817-11	METAL CHIP	470	5%	1/10W
R196	1-216-809-11	METAL CHIP	100	5%	1/10W	R417	1-216-817-11	METAL CHIP	470	5%	1/10W
R197	1-216-864-11	SHORT CHIP	0			R418	1-216-817-11	METAL CHIP	470	5%	1/10W
R199	1-216-809-11	METAL CHIP	100	5%	1/10W	R419	1-216-817-11	METAL CHIP	470	5%	1/10W
R200	1-216-815-11	METAL CHIP	330	5%	1/10W	R420	1-216-860-11	METAL CHIP	1.8M	5%	1/10W
R201	1-216-864-11	SHORT CHIP	0			R421	1-216-860-11	METAL CHIP	1.8M	5%	1/10W
			(HX750:AEP1,UK/HX950:AEP1)			R422	1-216-833-11	METAL CHIP	10K	5%	1/10W
R202	1-216-864-11	SHORT CHIP	0			R425	1-216-845-11	METAL CHIP	100K	5%	1/10W
R203	1-216-864-11	SHORT CHIP	0			R428	1-216-864-11	SHORT CHIP	0		
R204	1-216-809-11	METAL CHIP	100	5%	1/10W	R430	1-216-857-11	METAL CHIP	1M	5%	1/10W
R205	1-216-809-11	METAL CHIP	100	5%	1/10W	R431	1-216-857-11	METAL CHIP	1M	5%	1/10W
R207	1-216-817-11	METAL CHIP	470	5%	1/10W	R432	1-216-857-11	METAL CHIP	1M	5%	1/10W
R208	1-216-864-11	SHORT CHIP	0			R433	1-216-857-11	METAL CHIP	1M	5%	1/10W
			(HX750:AEP1,UK/HX950:AEP1)			R435	1-216-857-11	METAL CHIP	1M	5%	1/10W
R209	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R436	1-216-809-11	METAL CHIP	100	5%	1/10W
R210	1-218-845-11	METAL CHIP	820	0.5%	1/10W	R437	1-216-809-11	METAL CHIP	100	5%	1/10W
R214	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R438	1-216-295-91	SHORT CHIP	0		
R215	1-216-819-11	METAL CHIP	680	5%	1/10W	R439	1-216-860-11	METAL CHIP	1.8M	5%	1/10W
R216	1-218-844-11	METAL CHIP	750	0.5%	1/10W	R444	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R217	1-216-821-11	METAL CHIP	1K	5%	1/10W	R445	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R218	1-216-295-91	SHORT CHIP	0			R447	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R219	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R448	1-216-295-91	SHORT CHIP	0		
R220	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R453	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W
R221	1-216-809-11	METAL CHIP	100	5%	1/10W	R454	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R222	1-216-864-11	SHORT CHIP	0			R455	1-216-805-11	METAL CHIP	47	5%	1/10W
R223	1-216-809-11	METAL CHIP	100	5%	1/10W	R458	1-216-817-11	METAL CHIP	470	5%	1/10W
R224	1-216-809-11	METAL CHIP	100	5%	1/10W	R459	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R226	1-216-835-11	METAL CHIP	15K	5%	1/10W	R461	1-216-819-11	METAL CHIP	680	5%	1/10W
R228	1-216-864-11	SHORT CHIP	0			R462	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R233	1-216-845-11	METAL CHIP	100K	5%	1/10W	R463	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W
						R465	1-216-817-11	METAL CHIP	470	5%	1/10W
						R468	1-208-754-11	METAL CHIP	68	0.5%	1/10W
						R469	1-216-306-11	RES-CHIP	3.9	5%	1/10W

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R470	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R544	1-216-809-11	METAL CHIP	100	5%	1/10W
R471	1-216-295-91	SHORT CHIP	0			R545	1-216-809-11	METAL CHIP	100	5%	1/10W
R472	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R546	1-216-845-11	METAL CHIP	100K	5%	1/10W
R473	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R547	1-216-845-11	METAL CHIP	100K	5%	1/10W
R474	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R548	1-216-845-11	METAL CHIP	100K	5%	1/10W
R475	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R549	1-216-845-11	METAL CHIP	100K	5%	1/10W
R476	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R550	1-216-817-11	METAL CHIP	470	5%	1/10W
R477	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R551	1-216-809-11	METAL CHIP	100	5%	1/10W
R478	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R552	1-216-817-11	METAL CHIP	470	5%	1/10W
R479	1-216-817-11	METAL CHIP	470	5%	1/10W	R553	1-216-809-11	METAL CHIP	100	5%	1/10W
R480	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R554	1-216-845-11	METAL CHIP	100K	5%	1/10W
R482	1-216-809-11	METAL CHIP	100	5%	1/10W	R555	1-216-845-11	METAL CHIP	100K	5%	1/10W
R484	1-216-821-11	METAL CHIP	1K	5%	1/10W	R556	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R485	1-216-837-11	METAL CHIP	22K	5%	1/10W	R557	1-216-828-11	METAL CHIP	3.9K	5%	1/10W
R486	1-216-821-11	METAL CHIP	1K	5%	1/10W	R558	1-216-833-11	METAL CHIP	10K	5%	1/10W
R487	1-216-837-11	METAL CHIP	22K	5%	1/10W	R559	1-216-864-11	SHORT CHIP	0		
R488	1-216-817-11	METAL CHIP	470	5%	1/10W	R560	1-216-835-11	METAL CHIP	15K	5%	1/10W
R490	1-216-809-11	METAL CHIP	100	5%	1/10W	R561	1-216-819-11	METAL CHIP	680	5%	1/10W
R501	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R562	1-216-833-11	METAL CHIP	10K	5%	1/10W
R502	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R563	1-216-864-11	SHORT CHIP	0		
R503	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R564	1-216-835-11	METAL CHIP	15K	5%	1/10W
R504	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R565	1-216-819-11	METAL CHIP	680	5%	1/10W
R505	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R566	1-216-837-11	METAL CHIP	22K	5%	1/10W
R506	1-216-864-11	SHORT CHIP	0			R568	1-216-834-11	METAL CHIP	12K	5%	1/10W
R507	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R569	1-216-821-11	METAL CHIP	1K	5%	1/10W
R508	1-216-841-11	METAL CHIP	47K	5%	1/10W	R571	1-208-755-11	METAL CHIP	75	0.5%	1/10W
R509	1-216-838-11	METAL CHIP	27K	5%	1/10W	R573	1-500-283-11	INDUCTOR, FERRITE BEAD			
R510	1-216-861-11	METAL CHIP	2.2M	5%	1/10W	R574	1-216-864-11	SHORT CHIP	0		
R511	1-216-849-11	METAL CHIP	220K	5%	1/10W	R602	1-216-821-11	METAL CHIP	1K	5%	1/10W
R512	1-216-845-11	METAL CHIP	100K	5%	1/10W	R603	1-216-864-11	SHORT CHIP	0		
R513	1-216-845-11	METAL CHIP	100K	5%	1/10W	R605	1-216-833-11	METAL CHIP	10K	5%	1/10W
R514	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R606	1-216-833-11	METAL CHIP	10K	5%	1/10W
R515	1-216-043-91	RES-CHIP	560	5%	1/10W	R607	1-216-821-11	METAL CHIP	1K	5%	1/10W
R516	1-216-822-11	METAL CHIP	1.2K	5%	1/10W	R609	1-216-864-11	SHORT CHIP	0		
R517	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	R616	1-216-864-11	SHORT CHIP	0		
R518	1-216-797-11	METAL CHIP	10	5%	1/10W	R619	1-216-833-11	METAL CHIP	10K	5%	1/10W
R519	1-216-842-11	METAL CHIP	56K	5%	1/10W	R620	1-216-864-11	SHORT CHIP	0		
R520	1-216-813-11	METAL CHIP	220	5%	1/10W	R621	1-216-809-11	METAL CHIP	100	5%	1/10W
R521	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R622	1-216-809-11	METAL CHIP	100	5%	1/10W
R522	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R623	1-216-821-11	METAL CHIP	1K	5%	1/10W
R523	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R624	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R524	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R625	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R525	1-208-754-11	METAL CHIP	68	0.5%	1/10W	R626	1-216-821-11	METAL CHIP	1K	5%	1/10W
R526	1-216-306-11	RES-CHIP	3.9	5%	1/10W	R627	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R527	1-216-295-91	SHORT CHIP	0			R628	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R528	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R630	1-216-815-11	METAL CHIP	330	5%	1/10W
R529	1-216-845-11	METAL CHIP	100K	5%	1/10W	R631	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R530	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R632	1-216-801-11	METAL CHIP	22	5%	1/10W
R531	1-216-295-91	SHORT CHIP	0			R633	1-216-809-11	METAL CHIP	100	5%	1/10W
R532	1-208-755-11	METAL CHIP	75	0.5%	1/10W	R634	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R534	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	R635	1-400-330-21	INDUCTOR, FERRITE BEAD (1608)			
R535	1-216-828-11	METAL CHIP	3.9K	5%	1/10W	R636	1-400-330-21	INDUCTOR, FERRITE BEAD (1608)			
R536	1-216-817-11	METAL CHIP	470	5%	1/10W	R637	1-400-330-21	INDUCTOR, FERRITE BEAD (1608)			
R537	1-216-809-11	METAL CHIP	100	5%	1/10W	R638	1-216-809-11	METAL CHIP	100	5%	1/10W
R538	1-216-817-11	METAL CHIP	470	5%	1/10W	R701	1-216-849-11	METAL CHIP	220K	5%	1/10W
R539	1-216-809-11	METAL CHIP	100	5%	1/10W						
R540	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R541	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R542	1-216-809-11	METAL CHIP	100	5%	1/10W						
R543	1-216-809-11	METAL CHIP	100	5%	1/10W						

Ref. No.	Part No.	Description	Remarks
R703	1-216-864-11	SHORT CHIP	0
R751	1-216-821-11	METAL CHIP	1K 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R752	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R753	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R754	1-216-811-11	METAL CHIP	150 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R755	1-216-829-11	METAL CHIP	4.7K 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R756	1-216-821-11	METAL CHIP	1K 5% 1/10W (HX750:AEP1,UK/HX950:AEP1)
R801	1-216-864-11	SHORT CHIP	0
< TUNER >			
△ U601	1-693-741-11	TUNER (TMFE2-407A)	
< VIBRATOR >			
* X101	1-813-965-31	VIBRATOR, CRYSTAL (15MHz)	
X102	1-579-463-11	VIBRATOR, CRYSTAL (32.768MHz)	
* X601	1-813-713-21	VIBRATOR, CRYSTAL (18.432MHz)	
FL-178 BOARD (not supplied) (Ref.No.:30000 series) *****			
< CAPACITOR >			
C101	1-115-156-91	CERAMIC CHIP	1uF 10V (HX750/HX950)
C102	1-115-156-91	CERAMIC CHIP	1uF 10V (HX750/HX950)
C107	1-107-726-91	CERAMIC CHIP	0.01uF 10% 16V
C111	1-125-972-61	CAP, ELECT	100uF 20% 16V
< CONNECTOR >			
CN103	1-785-828-21	CONNECTOR, SQUARE TYPE 4P (DV IN) (HX750/HX950)	
CN105	1-817-693-11	CONNECTOR, USB (B) (HX750/HX950)	
CN106	1-815-381-11	CONNECTOR, FPC/FFC 5P	
< IC >			
IC101	6-600-392-01	IC GP1UM27XK0SF	
< COIL >			
L102	1-400-180-21	INDUCTOR, EMI FERRITE (1608) (HX750/HX950)	
L103	1-400-180-21	INDUCTOR, EMI FERRITE (1608) (HX750/HX950)	
L104	1-400-180-21	INDUCTOR, EMI FERRITE (1608) (HX750/HX950)	
L105	1-400-180-21	INDUCTOR, EMI FERRITE (1608) (HX750/HX950)	
< RESISTOR >			
R104	1-216-803-11	METAL CHIP	33 5% 1/10W (HX750/HX950)
R105	1-216-803-11	METAL CHIP	33 5% 1/10W (HX750/HX950)
R108	1-216-803-11	METAL CHIP	33 5% 1/10W (HX750/HX950)
R109	1-216-803-11	METAL CHIP	33 5% 1/10W (HX750/HX950)
R112	1-216-864-11	SHORT CHIP	0

Ref. No.	Part No.	Description	Remarks
R113	1-216-864-11	SHORT CHIP	0
< SWITCH >			
S101	1-771-410-21	SWITCH, TACTILE (I/⏻ (POWER))	
S102	1-771-410-21	SWITCH, TACTILE (ONE TOUCH DUB) (HX750/HX950)	
< VARISTOR >			
VDR102	1-802-071-21	VARISTOR, CHIP (HX750/HX950)	
VDR104	1-802-071-21	VARISTOR, CHIP (HX750/HX950)	
FR-274 BOARD (not supplied) (Ref.No.:30000 series) *****			
* 2-319-520-01		SPACER, FL	
< CAPACITOR >			
C201	1-128-111-11	CAP, ELECT	100uF 20% 25V
C204	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C206	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
* C207	1-107-377-21	MYLAR	0.0027uF 5% 200V
C211	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C213	1-131-992-91	CERAMIC CHIP	100000PF 35V (EXCEPT GX350)
C215	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C216	1-128-131-11	ELECT	22uF 20% 50V
C217	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
C221	1-107-726-91	CERAMIC CHIP	0.01uF 10% 16V
C222	1-107-726-91	CERAMIC CHIP	0.01uF 10% 16V
C223	1-115-339-11	CERAMIC CHIP	0.1uF 10% 50V
< CONNECTOR >			
CN201	1-815-381-11	CONNECTOR, FPC/FFC 5P	
CN202	1-563-614-31	HOUSING, CONNECTOR 11P	
CN203	1-784-739-11	CONNECTOR, FFC 17P	
< DIODE >			
D202	8-719-067-40	DIODE STZ6.8N-T146	
D203	8-719-067-40	DIODE STZ6.8N-T146	
D204	8-719-067-40	DIODE STZ6.8N-T146	
D205	8-719-067-40	DIODE STZ6.8N-T146	
D206	8-719-067-40	DIODE STZ6.8N-T146	
D207	8-719-067-40	DIODE STZ6.8N-T146	
D208	8-719-988-61	DIODE 1SS355TE-17	
D209	8-719-988-61	DIODE 1SS355TE-17	
D210	8-719-988-61	DIODE 1SS355TE-17	
D211	8-719-988-61	DIODE 1SS355TE-17	
* D212	6-501-884-01	DIODE SDPB31H3C0100 (EXCEPT GX350)	
D214	6-500-076-01	DIODE SLI-343YC (EXCEPT GX350)	
D216	6-500-024-01	DIODE MM3Z6V2ST1	
< FERRITE BEAD >			
FB201	1-414-228-11	INDUCTOR, FERRITE BEAD	
FB202	1-414-228-11	INDUCTOR, FERRITE BEAD	
< IC >			
IC201	6-701-729-01	IC PT6315	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		< JACK >	
J201	1-780-049-11	TERMINAL BOARD (S TERMINAL+3P)	
		< COIL >	
L201	1-411-919-11	INDUCTOR 100uH	
		< FLUORESCENT INDICATOR TUBE >	
ND201	1-519-964-11	INDICATOR TUBE, FLUORESCENT	
		< TRANSISTOR >	
Q201	8-729-052-91	TRANSISTOR 2SD1898T100R	
Q202	8-729-052-91	TRANSISTOR 2SD1898T100R	
Q203	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q204	8-729-421-19	TRANSISTOR UN2213	
Q205	8-729-029-06	TRANSISTOR DTC124EUA-T106 (EXCEPT GX350)	
Q206	8-729-029-10	TRANSISTOR DTC143TUA-T106 (EXCEPT GX350)	
		< RESISTOR >	
R201	1-216-295-91	SHORT CHIP 0	
R205	1-216-864-11	SHORT CHIP 0	
R206	1-216-864-11	SHORT CHIP 0	
R207	1-216-864-11	SHORT CHIP 0	
R209	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R213	1-216-864-11	SHORT CHIP 0	
R215	1-216-830-11	METAL CHIP 5.6K 5% 1/10W	
R217	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R218	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R220	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R222	1-216-295-91	SHORT CHIP 0	
R223	1-216-826-11	METAL CHIP 2.7K 5% 1/10W (EXCEPT GX350)	
R225	1-216-814-11	METAL CHIP 270 5% 1/10W (EXCEPT GX350)	
R227	1-216-838-11	METAL CHIP 27K 5% 1/10W	
R228	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R229	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R230	1-216-825-11	METAL CHIP 2.2K 5% 1/10W (EXCEPT GX350)	
R231	1-216-825-11	METAL CHIP 2.2K 5% 1/10W (EXCEPT GX350)	
R232	1-216-864-11	SHORT CHIP 0 (EXCEPT GX350)	
R233	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R235	1-216-864-11	SHORT CHIP 0	
R236	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R237	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R238	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R239	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R240	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R241	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R242	1-216-830-11	METAL CHIP 5.6K 5% 1/10W	
R243	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R244	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R245	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R246	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R248	1-216-827-11	METAL CHIP 3.3K 5% 1/10W (EXCEPT GX350)	
R250	1-216-805-11	METAL CHIP 47 5% 1/10W	
R251	1-216-805-11	METAL CHIP 47 5% 1/10W	

Ref. No.	Part No.	Description	Remarks
R252	1-216-805-11	METAL CHIP 47 5% 1/10W	
		< SWITCH >	
S201	1-771-410-21	SWITCH, TACTILE (▲ (OPEN/CLOSE))	
S203	1-786-726-11	SWITCH, TACTILE (■ (REC STOP))	
S204	1-771-410-21	SWITCH, TACTILE (INPUT SELECT)	
S207	1-786-726-11	SWITCH, TACTILE (● (REC))	
S208	1-771-410-21	SWITCH, TACTILE (CHANNEL +)	
S209	1-771-410-21	SWITCH, TACTILE (CHANNEL -)	
S210	1-786-726-11	SWITCH, TACTILE (▶ (PLAY))	
S211	1-786-726-11	SWITCH, TACTILE (■ (STOP))	
S212	1-786-726-11	SWITCH, TACTILE (DVD) (EXCEPT GX350)	
S213	1-786-726-11	SWITCH, TACTILE (HDD) (EXCEPT GX350)	
		< TRANSFORMER >	
* T201	1-445-207-11	TRANSFORMER, DC-DC CONVERTER	
		RD65 BOARD (not supplied) (Ref.No.;20000 series)	

		< CAPACITOR >	
C100	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V	
C101	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V	
C103	1-126-210-21	ELECT CHIP 220uF 20% 4V	
C104	1-114-130-11	CERAMIC CHIP 1uF 6.3V	
C105	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V	
C106	1-107-820-11	CERAMIC CHIP 0.1uF 16V	
C107	1-164-936-11	CERAMIC CHIP 680PF 10% 50V	
C113	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V	
C114	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V	
C115	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C116	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C117	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V	
C120	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C121	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V	
C122	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V	
C124	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C125	1-114-130-11	CERAMIC CHIP 1uF 6.3V	
C127	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V	
C128	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C129	1-114-130-11	CERAMIC CHIP 1uF 6.3V	
C130	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V	
C131	1-137-987-81	CERAMIC CHIP 0.068uF 10% 10V	
C133	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C134	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C135	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C136	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C137	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V	
C140	1-100-415-11	CERAMIC CHIP 0.47uF 10% 6.3V	
C141	1-100-415-11	CERAMIC CHIP 0.47uF 10% 6.3V	
C142	1-100-966-91	CERAMIC CHIP 10uF 20% 10V	
C143	1-100-966-91	CERAMIC CHIP 10uF 20% 10V	
C144	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C145	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C146	1-100-966-91	CERAMIC CHIP 10uF 20% 10V	
C149	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C152	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1002	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C153	1-124-779-21	ELECT CHIP	10uF	20%	16V	C1003	1-126-209-11	ELECT CHIP	100uF	20%	4V
C154	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1004	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C155	1-100-415-11	CERAMIC CHIP	0.47uF	10%	6.3V	C1005	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C156	1-165-448-81	CERAMIC CHIP	0.0018uF	10%	50V	C1006	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C157	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C1007	1-126-210-21	ELECT CHIP	220uF	20%	4V
C158	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C1008	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C159	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1009	1-126-210-21	ELECT CHIP	220uF	20%	4V
C162	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1010	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C163	1-126-210-21	ELECT CHIP	220uF	20%	4V	C1011	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C164	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1012	1-126-209-11	ELECT CHIP	100uF	20%	4V
C165	1-164-858-11	CERAMIC CHIP	22PF	5%	50V	C1013	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C166	1-164-858-11	CERAMIC CHIP	22PF	5%	50V	C1014	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C167	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1015	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C169	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1016	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C170	1-164-866-11	CERAMIC CHIP	47PF	5%	50V	C1017	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C171	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1018	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C172	1-164-866-11	CERAMIC CHIP	47PF	5%	50V	C1019	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C173	1-164-866-11	CERAMIC CHIP	47PF	5%	50V	C1020	1-124-779-21	ELECT CHIP	10uF	20%	16V
C174	1-164-866-11	CERAMIC CHIP	47PF	5%	50V	C1021	1-100-966-91	CERAMIC CHIP	10uF	20%	10V
C176	1-164-858-11	CERAMIC CHIP	22PF	5%	50V	C1022	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C177	1-164-858-11	CERAMIC CHIP	22PF	5%	50V	C1023	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C180	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	C1024	1-126-209-11	ELECT CHIP	100uF	20%	4V
C181	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C1025	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C182	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	C1026	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C187	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C1027	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C188	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C1028	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C189	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1029	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C194	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C1030	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C197	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1031	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C199	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1032	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C201	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1033	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C202	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1034	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C280	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1035	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C281	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1036	1-126-209-11	ELECT CHIP	100uF	20%	4V
C282	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1037	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C283	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1038	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C284	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1039	1-126-209-11	ELECT CHIP	100uF	20%	4V
C285	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1040	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C286	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	C1041	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C287	1-114-130-11	CERAMIC CHIP	1uF		6.3V	C1044	1-164-842-11	CERAMIC CHIP	2PF	0.25PF	50V
C288	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1045	1-164-842-11	CERAMIC CHIP	2PF	0.25PF	50V
C289	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1047	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C290	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1048	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C291	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1049	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C501	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C1050	1-126-209-11	ELECT CHIP	100uF	20%	4V
C503	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	C1051	1-100-966-91	CERAMIC CHIP	10uF	20%	10V
C504	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1052	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C505	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C1053	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C508	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C1056	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C509	1-164-862-11	CERAMIC CHIP	33PF	5%	50V	C1057	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C510	1-164-870-11	CERAMIC CHIP	68PF	5%	50V	C1058	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C511	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	C1059	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C512	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C1060	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C513	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C1061	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C514	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C1062	1-114-130-11	CERAMIC CHIP	1uF		6.3V
C515	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V	C1063	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C516	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1064	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C532	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1065	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C1001	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C1066	1-114-130-11	CERAMIC CHIP	1uF		6.3V

RD65

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C1067	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C2501	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1068	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C2502	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1101	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C2503	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1104	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C2504	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1105	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C2505	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1113	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C2506	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	
C1202	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3103	1-117-681-11	ELECT CHIP	100uF	20%	16V	
C1203	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3104	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1204	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3105	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1205	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C3106	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
C1206	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C3107	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1207	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3108	1-126-210-21	ELECT CHIP	220uF	20%	4V	
C1208	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3201	1-126-916-11	ELECT	1000uF	20%	6.3V	
C1209	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3202	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1210	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3203	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
C1211	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3204	1-164-934-11	CERAMIC CHIP	330PF	10%	50V	
C1212	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3206	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1213	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3207	1-126-205-11	ELECT CHIP	47uF	20%	6.3V	
C1214	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3211	1-117-681-11	ELECT CHIP	100uF	20%	16V	
C1215	1-126-209-11	ELECT CHIP	100uF	20%	4V		C3212	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1216	1-114-130-11	CERAMIC CHIP	1uF		6.3V		* C3213	1-100-741-81	CERAMIC CHIP	560PF	5%	50V	
C1217	1-114-130-11	CERAMIC CHIP	1uF		6.3V		* C3214	1-100-741-81	CERAMIC CHIP	560PF	5%	50V	
C1218	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3215	1-164-872-11	CERAMIC CHIP	82PF	5%	50V	
C1219	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3216	1-164-872-11	CERAMIC CHIP	82PF	5%	50V	
C1220	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3217	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1221	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3218	1-117-681-11	ELECT CHIP	100uF	20%	16V	
C1222	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3219	1-126-210-21	ELECT CHIP	220uF	20%	4V	
C1223	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3220	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1224	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C3301	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V	
C1225	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C3302	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V	
C1226	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3303	1-164-854-11	CERAMIC CHIP	15PF	5%	50V	
C1227	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3304	1-164-872-11	CERAMIC CHIP	82PF	5%	50V	
C1228	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3305	1-164-858-11	CERAMIC CHIP	22PF	5%	50V	
C1229	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C3307	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	
C1230	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3313	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C1231	1-100-966-91	CERAMIC CHIP	10uF	20%	10V		C3319	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C1235	1-100-966-91	CERAMIC CHIP	10uF	20%	10V		C3325	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C1236	1-126-209-11	ELECT CHIP	100uF	20%	4V		C3332	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1291	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3342	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1301	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C3701	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C1302	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3703	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1303	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3704	1-100-966-91	CERAMIC CHIP	10uF	20%	10V	
C1304	1-126-205-11	ELECT CHIP	47uF	20%	6.3V		C3705	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
C1312	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3706	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
C1313	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C3707	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1315	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C3738	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1316	1-100-966-91	CERAMIC CHIP	10uF	20%	10V		C3801	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1401	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C3802	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1421	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3803	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1801	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C3804	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1802	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C4501	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1803	1-164-882-11	CERAMIC CHIP	220PF	5%	16V		C4502	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1804	1-164-934-11	CERAMIC CHIP	330PF	10%	50V		C4503	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1805	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V		C4504	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1811	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C4505	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C1812	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C4506	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C1813	1-164-874-11	CERAMIC CHIP	100PF	5%	50V		C4507	1-117-681-11	ELECT CHIP	100uF	20%	16V	
C1814	1-164-878-11	CERAMIC CHIP	150PF	5%	50V		C4508	1-126-210-21	ELECT CHIP	220uF	20%	4V	
C1815	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V		C4509	1-126-210-21	ELECT CHIP	220uF	20%	4V	
C2305	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C4511	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C4513	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5119	1-100-574-81	CERAMIC CHIP	270PF 10% 50V
C4515	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	C5120	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4516	1-124-779-21	ELECT CHIP	10uF 20% 16V	C5121	1-126-209-11	ELECT CHIP	100uF 20% 4V
C4522	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5122	1-126-209-11	ELECT CHIP	100uF 20% 4V
C4524	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5123	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4525	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5132	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4526	1-218-967-11	RES-CHIP	15K 5% 1/16W	C5133	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4531	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5205	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4532	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V				(EXCEPT GX350)
C4533	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5209	1-107-820-11	CERAMIC CHIP	0.1uF 16V
C4534	1-100-966-91	CERAMIC CHIP	10uF 20% 10V				(EXCEPT GX350)
C4535	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	C5210	1-117-681-11	ELECT CHIP	100uF 20% 16V
C4536	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V				(EXCEPT GX350)
C4537	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	C5211	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V
C4539	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V				(EXCEPT GX350)
C4540	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	C5212	1-125-889-91	CERAMIC CHIP	2.2uF 10% 10V
C4541	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C4542	1-125-889-91	CERAMIC CHIP	2.2uF 10% 10V	C5213	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4543	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V				(EXCEPT GX350)
C4553	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C5216	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V
C4555	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V				(EXCEPT GX350)
C4556	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5217	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4557	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V				(EXCEPT GX350)
C4558	1-117-681-11	ELECT CHIP	100uF 20% 16V	C5218	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V
C4559	1-117-681-11	ELECT CHIP	100uF 20% 16V				(EXCEPT GX350)
C4562	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5219	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V
C4563	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C4567	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5222	1-107-820-11	CERAMIC CHIP	0.1uF 16V
C4570	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C4571	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5223	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V
C4572	1-126-210-21	ELECT CHIP	220uF 20% 4V				(EXCEPT GX350)
C4573	1-127-760-11	CERAMIC CHIP	4.7uF 10% 6.3V	C5601	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4585	1-107-820-11	CERAMIC CHIP	0.1uF 16V				(EXCEPT GX350)
C4586	1-117-681-11	ELECT CHIP	100uF 20% 16V	C5602	1-114-130-11	CERAMIC CHIP	1uF 6.3V
C4701	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C4702	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5603	1-107-820-11	CERAMIC CHIP	0.1uF 16V
C4703	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C4704	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	C5604	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C4705	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V				(EXCEPT GX350)
C4706	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	C5605	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5104	1-107-820-11	CERAMIC CHIP	0.1uF 16V				(EXCEPT GX350)
C5105	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5606	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5106	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C5107	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5607	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5108	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C5109	1-107-820-11	CERAMIC CHIP	0.1uF 16V	C5608	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5110	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C5111	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5609	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5112	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C5113	1-107-820-11	CERAMIC CHIP	0.1uF 16V	C5610	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5114	1-107-820-11	CERAMIC CHIP	0.1uF 16V				(EXCEPT GX350)
C5115	1-114-130-11	CERAMIC CHIP	1uF 6.3V	C5611	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C5116	1-114-130-11	CERAMIC CHIP	1uF 6.3V				(EXCEPT GX350)
C5117	1-164-852-11	CERAMIC CHIP	12PF 5% 50V	C5612	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C5118	1-164-852-11	CERAMIC CHIP	12PF 5% 50V				(EXCEPT GX350)
				C5613	1-126-209-11	ELECT CHIP	100uF 20% 4V
				C5614	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
							(EXCEPT GX350)
				C5615	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
							(EXCEPT GX350)
				C5616	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
							(EXCEPT GX350)

RD65

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C5617	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)			< CONNECTOR >	
C5622	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN201	1-817-705-51	CONNECTOR, FPC 10P	
C5623	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN501	1-766-767-51	CONNECTOR, FPC 12P	
C5624	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN601	1-784-857-51	CONNECTOR, FFC (LIF (NON-ZIF)) 5P	
C5625	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN2301	1-821-191-11	CONNECTOR, FFC/FPC 40P (GX350)	
C5626	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	* CN4501	1-564-729-11	PIN, CONNECTOR (SMALL TYPE) 13P	
C5627	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN4701	1-779-338-51	CONNECTOR, FFC/FPC 28P	
C5628	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN5101	1-819-414-11	PIN, CONNECTOR (1.5MM) 6P	
C5629	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	CN5201	1-820-176-11	PIN, CONNECTOR (1.5MM) 10P (EXCEPT GX350)	
C5630	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)			< DIODE >	
C5631	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	D101	8-719-077-34	DIODE SML-310YTT86	
C5632	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (EXCEPT GX350)	D3201	8-719-941-86	DIODE DAN202UT106	
C5640	1-164-854-11	CERAMIC CHIP	15PF 5% 50V (EXCEPT GX350)	D3711	8-719-058-24	DIODE RB501V-40TE-17	
C5641	1-164-854-11	CERAMIC CHIP	15PF 5% 50V (EXCEPT GX350)	D3712	8-719-058-24	DIODE RB501V-40TE-17	
C5702	1-114-130-11	CERAMIC CHIP	1uF 6.3V	D4521	8-719-058-24	DIODE RB501V-40TE-17	
C5704	1-126-193-11	ELECT CHIP	1uF 20% 50V	D4552	8-719-058-24	DIODE RB501V-40TE-17	
C5705	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V (EXCEPT GX350)	D4571	8-719-058-24	DIODE RB501V-40TE-17 (EXCEPT GX350)	
C5706	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V			< IC >	
C5707	1-114-130-11	CERAMIC CHIP	1uF 6.3V (EXCEPT GX350)	IC1201	6-708-305-01	IC K4H511638C-UCB3T	
C5708	1-126-210-21	ELECT CHIP	220uF 20% 4V	IC1221	6-708-305-01	IC K4H511638C-UCB3T	
C5801	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC1301	8-759-693-13	IC NJM12904V (TE2)	
C5802	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	IC1302	8-759-693-13	IC NJM12904V (TE2)	
C5803	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC3101	6-710-840-01	IC AK5358AET-E2	
C5804	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	IC3202	8-759-100-96	IC uPC4558G2	
C5805	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC3701	8-759-679-05	IC TC7WH34FU (TE12R)	
C5806	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC3702	6-706-487-01	IC TC7SH08FU (T5RSOYJF)	
C5807	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC3707	6-707-472-01	IC PST3813UL	
C5808	1-114-130-11	CERAMIC CHIP	1uF 6.3V	IC4541	6-702-362-01	IC MM1563DFBE	
C5809	1-126-210-21	ELECT CHIP	220uF 20% 4V	IC4702	8-759-592-47	IC TC7SZ08FU (TE85R)	
C5812	1-107-820-11	CERAMIC CHIP	0.1uF 16V	IC5103	6-706-365-01	IC uPD72852AGB-8EU-A	
C5813	1-107-820-11	CERAMIC CHIP	0.1uF 16V	IC5202	6-710-887-01	IC R5523N001B-TR-F (EXCEPT GX350)	
C5814	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC5203	6-706-487-01	IC TC7SH08FU (T5RSOYJF) (EXCEPT GX350)	
C5815	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	IC5602	6-806-103-01	IC 88SA8040-TBC1C000 (EXCEPT GX350)	
C5816	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	IC5701	6-707-858-01	IC TC74VHC00FT (EKJ) (EXCEPT GX350)	
C5817	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	* IC5802	6-711-188-01	IC TC7MB3257FK (EL)	
C5818	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V			< JACK >	
C5819	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	JA5701	1-793-446-21	JACK, PIN 1P	
C5820	1-114-130-11	CERAMIC CHIP	1uF 6.3V	JA5801	1-821-450-11	HDMI CONNECTOR	
C5821	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V			< COIL >	
C5822	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	L105	1-469-967-21	INDUCTOR 10uH	
				L1005	1-412-008-31	INDUCTOR 15uH	
				L1801	1-412-958-21	INDUCTOR 39uH	
				L1811	1-412-953-11	INDUCTOR 15uH	
				L3301	1-412-954-11	INDUCTOR 18uH	
				L3302	1-412-951-11	INDUCTOR 10uH	
				L4551	1-469-967-21	INDUCTOR 10uH	
				L5101	1-414-235-22	INDUCTOR, FERRITE BEAD	
				L5201	1-456-799-11	COIL, COMMON MODE CHOKE (EXCEPT GX350)	
				L5202	1-456-799-11	COIL, COMMON MODE CHOKE (EXCEPT GX350)	

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks									
L5701	1-400-330-21	INDUCTOR, FERRITE BEAD (1608)					R193	1-218-990-81	SHORT CHIP	0									
L5801	1-457-374-21	COMMOM MODE CHOKE COIL					R201	1-218-965-11	RES-CHIP	10K				5%	1/16W				
L5802	1-457-374-21	COMMOM MODE CHOKE COIL					R202	1-218-935-11	RES-CHIP	33				5%	1/16W				
L5803	1-457-374-21	COMMOM MODE CHOKE COIL					R203	1-218-935-11	RES-CHIP	33				5%	1/16W				
L5804	1-457-374-21	COMMOM MODE CHOKE COIL					R204	1-242-963-21	RES, NETWORK	33 (1005X4)									
< TRANSISTOR >							R205	1-242-963-21	RES, NETWORK	33 (1005X4)									
Q1801	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R206	1-242-963-21	RES, NETWORK	33 (1005X4)												
Q1811	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R210	1-218-935-11	RES-CHIP	33	5%	1/16W										
Q2501	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R211	1-218-990-81	SHORT CHIP	0												
Q2502	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R219	1-234-377-21	RES, NETWORK	4.7K (1005X4)												
Q2503	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF								R220	1-234-377-21	RES, NETWORK	4.7K (1005X4)					
Q2504	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R221	1-218-973-11	RES-CHIP	47K	5%	1/16W										
Q2505	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R222	1-218-973-11	RES-CHIP	47K	5%	1/16W										
Q3301	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R223	1-218-933-11	RES-CHIP	22	5%	1/16W										
Q3302	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R230	1-218-990-81	SHORT CHIP	0												
Q4581	8-729-620-13	TRANSISTOR	2SC4154TP-1EF								R233	1-218-990-81	SHORT CHIP	0					
Q5701	8-729-620-13	TRANSISTOR	2SC4154TP-1EF	R234	1-218-990-81	SHORT CHIP	0												
Q5801	6-550-376-01	TRANSISTOR	UMX1N-TN	R236	1-218-933-11	RES-CHIP	22	5%	1/16W										
Q5804	8-729-029-06	TRANSISTOR	DTC124EUA-T106	R237	1-218-965-11	RES-CHIP	10K	5%	1/16W										
Q5805	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF	R238	1-218-933-11	RES-CHIP	22	5%	1/16W										
Q5808	8-729-031-35	TRANSISTOR	2SK2034-TE85L								R239	1-218-965-11	RES-CHIP	10K	5%	1/16W			
Q5809	6-550-375-01	TRANSISTOR	UMD2N-TR	R240	1-218-933-11	RES-CHIP	22	5%	1/16W										
				R241	1-218-965-11	RES-CHIP	10K	5%	1/16W										
				R242	1-218-933-11	RES-CHIP	22	5%	1/16W										
				R243	1-218-965-11	RES-CHIP	10K	5%	1/16W										
				< RESISTOR >							R244	1-218-933-11	RES-CHIP	22	5%	1/16W			
R104	1-218-966-11	RES-CHIP	12K	5%	1/16W								R245	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R105	1-218-990-81	SHORT CHIP	0								R248	1-218-965-11	RES-CHIP	10K	5%	1/16W			
R107	1-218-973-11	RES-CHIP	47K	5%	1/16W								R252	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R108	1-218-963-11	RES-CHIP	6.8K	5%	1/16W								R253	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R109	1-208-702-11	METAL CHIP	6.2K	0.5%	1/16W														
R110	1-218-953-11	RES-CHIP	1K	5%	1/16W								R256	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R111	1-218-985-11	RES-CHIP	470K	5%	1/16W								R271	1-216-295-91	SHORT CHIP	0			
R112	1-218-985-11	RES-CHIP	470K	5%	1/16W								R273	1-216-295-91	SHORT CHIP	0			
R114	1-218-971-11	RES-CHIP	33K	5%	1/16W								R274	1-216-295-91	SHORT CHIP	0			
R115	1-218-990-81	SHORT CHIP	0								R281	1-218-990-81	SHORT CHIP	0					
														R301	1-218-973-11	RES-CHIP			
R116	1-218-959-11	RES-CHIP	3.3K	5%	1/16W								R306	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R117	1-218-939-11	RES-CHIP	68	5%	1/16W								R307	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R119	1-218-990-81	SHORT CHIP	0								R310	1-218-953-11	RES-CHIP	1K	5%	1/16W			
R124	1-218-990-81	SHORT CHIP	0								R311	1-218-953-11	RES-CHIP	1K	5%	1/16W			
R128	1-218-990-81	SHORT CHIP	0																
R129	1-218-990-81	SHORT CHIP	0								R312	1-218-953-11	RES-CHIP	1K	5%	1/16W			
R130	1-218-945-11	RES-CHIP	220	5%	1/16W								R313	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R131	1-218-945-11	RES-CHIP	220	5%	1/16W								R314	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R132	1-218-945-11	RES-CHIP	220	5%	1/16W								R317	1-242-963-21	RES, NETWORK	33 (1005X4)			
R133	1-218-945-11	RES-CHIP	220	5%	1/16W								R318	1-242-963-21	RES, NETWORK	33 (1005X4)			
R134	1-218-973-11	RES-CHIP	47K	5%	1/16W								R319	1-242-963-21	RES, NETWORK	33 (1005X4)			
R135	1-218-945-11	RES-CHIP	220	5%	1/16W								R320	1-242-963-21	RES, NETWORK	33 (1005X4)			
R136	1-218-945-11	RES-CHIP	220	5%	1/16W								R503	1-218-953-11	RES-CHIP	1K			
R137	1-218-945-11	RES-CHIP	220	5%	1/16W								R504	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R138	1-218-973-11	RES-CHIP	47K	5%	1/16W								R505	1-218-966-11	RES-CHIP	12K	5%	1/16W	
R139	1-218-945-11	RES-CHIP	220	5%	1/16W								R506	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R165	1-218-952-11	RES-CHIP	820	5%	1/16W								R507	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R166	1-218-952-11	RES-CHIP	820	5%	1/16W								R510	1-217-907-11	RES-CHIP	1.8	5%	1/10W	
R167	1-218-952-11	RES-CHIP	820	5%	1/16W								R511	1-217-907-11	RES-CHIP	1.8	5%	1/10W	
R168	1-218-990-81	SHORT CHIP	0								R515	1-218-971-11	RES-CHIP	33K	5%	1/16W			
R170	1-218-959-11	RES-CHIP	3.3K	5%	1/16W								R516	1-218-966-11	RES-CHIP	12K	5%	1/16W	
R171	1-218-959-11	RES-CHIP	3.3K	5%	1/16W								R601	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R172	1-218-959-11	RES-CHIP	3.3K	5%	1/16W								R602	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R174	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W								R603	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R192	1-216-809-11	METAL CHIP	100	5%	1/10W								R604	1-218-953-11	RES-CHIP	1K	5%	1/16W	

RD65

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R1001	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1250	1-218-990-81	SHORT CHIP	0
R1003	1-218-843-11	METAL CHIP	680 0.5% 1/10W	R1251	1-218-935-11	RES-CHIP	33 5% 1/16W
R1004	1-218-839-11	METAL CHIP	470 0.5% 1/10W	R1252	1-218-935-11	RES-CHIP	33 5% 1/16W
R1005	1-218-967-11	RES-CHIP	15K 5% 1/16W (EXCEPT GX350)	R1255	1-234-370-21	RES, NETWORK	22 (1005X4)
R1006	1-218-967-11	RES-CHIP	15K 5% 1/16W (EXCEPT GX350)	R1256	1-234-370-21	RES, NETWORK	22 (1005X4)
R1013	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1257	1-218-933-11	RES-CHIP	22 5% 1/16W
R1016	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1258	1-218-933-11	RES-CHIP	22 5% 1/16W
R1017	1-218-990-81	SHORT CHIP	0	R1260	1-218-933-11	RES-CHIP	22 5% 1/16W
R1018	1-218-990-81	SHORT CHIP	0	R1261	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
R1019	1-218-990-81	SHORT CHIP	0	R1262	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
R1021	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1263	1-218-990-81	SHORT CHIP	0
R1027	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1264	1-218-935-11	RES-CHIP	33 5% 1/16W
R1028	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1265	1-234-370-21	RES, NETWORK	22 (1005X4)
R1029	1-218-940-11	RES-CHIP	82 5% 1/16W	R1266	1-234-370-21	RES, NETWORK	22 (1005X4)
R1030	1-218-941-81	RES-CHIP	100 5% 1/16W	R1267	1-218-933-11	RES-CHIP	22 5% 1/16W
R1031	1-218-945-11	RES-CHIP	220 5% 1/16W	R1268	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
R1032	1-234-378-21	RES, NETWORK	10K (1005X4)	R1269	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
R1033	1-234-378-21	RES, NETWORK	10K (1005X4)	R1270	1-218-990-81	SHORT CHIP	0
R1034	1-234-378-21	RES, NETWORK	10K (1005X4)	R1271	1-218-935-11	RES-CHIP	33 5% 1/16W
R1035	1-234-378-21	RES, NETWORK	10K (1005X4)	R1272	1-218-935-11	RES-CHIP	33 5% 1/16W
R1036	1-211-984-11	METAL CHIP	43 0.5% 1/10W	R1273	1-234-370-21	RES, NETWORK	22 (1005X4)
R1037	1-218-823-11	METAL CHIP	100 0.5% 1/10W	R1274	1-234-370-21	RES, NETWORK	22 (1005X4)
R1039	1-211-984-11	METAL CHIP	43 0.5% 1/10W	R1275	1-218-933-11	RES-CHIP	22 5% 1/16W
R1040	1-218-823-11	METAL CHIP	100 0.5% 1/10W	R1276	1-218-933-11	RES-CHIP	22 5% 1/16W
R1066	1-218-973-11	RES-CHIP	47K 5% 1/16W	R1277	1-218-990-81	SHORT CHIP	0
R1067	1-218-973-11	RES-CHIP	47K 5% 1/16W	R1278	1-218-990-81	SHORT CHIP	0
R1068	1-218-973-11	RES-CHIP	47K 5% 1/16W	R1279	1-218-948-11	RES-CHIP	390 5% 1/16W
R1069	1-218-973-11	RES-CHIP	47K 5% 1/16W	R1281	1-234-371-21	RES, NETWORK	47 (1005X4)
R1071	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1282	1-234-371-21	RES, NETWORK	47 (1005X4)
R1103	1-218-990-81	SHORT CHIP	0	R1283	1-234-371-21	RES, NETWORK	47 (1005X4)
R1107	1-218-990-81	SHORT CHIP	0	R1284	1-218-937-11	RES-CHIP	47 5% 1/16W
R1110	1-218-990-81	SHORT CHIP	0	R1285	1-218-937-11	RES-CHIP	47 5% 1/16W
R1111	1-218-977-11	RES-CHIP	100K 5% 1/16W	R1286	1-218-937-11	RES-CHIP	47 5% 1/16W
R1132	1-218-937-11	RES-CHIP	47 5% 1/16W	R1287	1-234-371-21	RES, NETWORK	47 (1005X4)
R1153	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1288	1-218-933-11	RES-CHIP	22 5% 1/16W
R1161	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1289	1-218-933-11	RES-CHIP	22 5% 1/16W
R1163	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1301	1-218-839-11	METAL CHIP	470 0.5% 1/10W
R1164	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1302	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
R1181	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1303	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
R1182	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1312	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
R1191	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R1313	1-218-847-11	METAL CHIP	1K 0.5% 1/10W
R1195	1-218-961-11	RES-CHIP	4.7K 5% 1/16W (EXCEPT GX350)	R1314	1-216-864-11	SHORT CHIP	0
R1199	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1401	1-218-933-11	RES-CHIP	22 5% 1/16W
R1205	1-218-965-11	RES-CHIP	10K 5% 1/16W	R1402	1-218-933-11	RES-CHIP	22 5% 1/16W
R1219	1-218-990-81	SHORT CHIP	0	R1403	1-218-933-11	RES-CHIP	22 5% 1/16W
R1240	1-218-933-11	RES-CHIP	22 5% 1/16W	R1404	1-218-933-11	RES-CHIP	22 5% 1/16W
R1241	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	R1405	1-218-933-11	RES-CHIP	22 5% 1/16W
R1242	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	R1406	1-218-933-11	RES-CHIP	22 5% 1/16W
R1243	1-218-990-81	SHORT CHIP	0	R1407	1-218-933-11	RES-CHIP	22 5% 1/16W
R1244	1-218-935-11	RES-CHIP	33 5% 1/16W	R1411	1-234-378-21	RES, NETWORK	10K (1005X4)
R1245	1-234-370-21	RES, NETWORK	22 (1005X4)	R1412	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1246	1-234-370-21	RES, NETWORK	22 (1005X4)	R1413	1-218-973-11	RES-CHIP	47K 5% 1/16W
R1247	1-218-933-11	RES-CHIP	22 5% 1/16W	R1414	1-218-933-11	RES-CHIP	22 5% 1/16W
R1248	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	R1415	1-218-933-11	RES-CHIP	22 5% 1/16W
R1249	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	R1416	1-218-933-11	RES-CHIP	22 5% 1/16W
				R1421	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R1422	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R1802	1-218-945-11	RES-CHIP	220 5% 1/16W
				R1803	1-218-947-11	RES-CHIP	330 5% 1/16W
				R1804	1-218-935-11	RES-CHIP	33 5% 1/16W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R1812	1-218-945-11	RES-CHIP	220	5%	1/16W	R3223	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R1813	1-218-947-11	RES-CHIP	330	5%	1/16W	R3224	1-218-941-81	RES-CHIP	100	5%	1/16W
R1814	1-218-935-11	RES-CHIP	33	5%	1/16W	R3227	1-218-941-81	RES-CHIP	100	5%	1/16W
R2301	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R3228	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2302	1-218-990-81	SHORT CHIP	0			R3229	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2304	1-218-990-81	SHORT CHIP	0			R3230	1-216-295-91	SHORT CHIP	0		
R2316	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3232	1-218-990-81	SHORT CHIP	0		
R2501	1-218-951-11	RES-CHIP	680	5%	1/16W	R3233	1-218-990-81	SHORT CHIP	0		
R2502	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R3234	1-218-990-81	SHORT CHIP	0		
R2504	1-218-951-11	RES-CHIP	680	5%	1/16W	R3301	1-218-937-11	RES-CHIP	47	5%	1/16W
R2505	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R3302	1-218-990-81	SHORT CHIP	0		
R2506	1-216-864-11	SHORT CHIP	0			R3305	1-218-947-11	RES-CHIP	330	5%	1/16W
R2507	1-218-951-11	RES-CHIP	680	5%	1/16W	R3306	1-218-839-11	METAL CHIP	470	0.5%	1/10W
R2508	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R3307	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R2510	1-218-951-11	RES-CHIP	680	5%	1/16W	R3308	1-218-929-11	RES-CHIP	10	5%	1/16W
R2511	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R3309	1-218-951-11	RES-CHIP	680	5%	1/16W
R2513	1-218-951-11	RES-CHIP	680	5%	1/16W	R3310	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2514	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R3315	1-218-951-11	RES-CHIP	680	5%	1/16W
R3002	1-218-990-81	SHORT CHIP	0			R3320	1-218-951-11	RES-CHIP	680	5%	1/16W
R3003	1-218-990-81	SHORT CHIP	0			R3327	1-218-951-11	RES-CHIP	680	5%	1/16W
R3004	1-218-990-81	SHORT CHIP	0			R3336	1-218-990-81	SHORT CHIP	0		
R3005	1-234-378-21	RES, NETWORK	10K (1005X4)			R3337	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3006	1-218-990-81	SHORT CHIP	0			R3341	1-218-990-81	SHORT CHIP	0		
R3007	1-218-990-81	SHORT CHIP	0			R3342	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3008	1-218-990-81	SHORT CHIP	0			R3703	1-218-941-81	RES-CHIP	100	5%	1/16W
R3009	1-218-990-81	SHORT CHIP	0			R3704	1-218-941-81	RES-CHIP	100	5%	1/16W
R3010	1-218-990-81	SHORT CHIP	0			R3705	1-218-941-81	RES-CHIP	100	5%	1/16W
R3011	1-218-990-81	SHORT CHIP	0			R3708	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3012	1-218-990-81	SHORT CHIP	0			R3715	1-218-990-81	SHORT CHIP	0		
R3101	1-218-990-81	SHORT CHIP	0			R3716	1-218-935-11	RES-CHIP	33	5%	1/16W
R3102	1-218-990-81	SHORT CHIP	0			R3720	1-218-990-81	SHORT CHIP	0		
R3103	1-218-990-81	SHORT CHIP	0			R3738	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3104	1-218-990-81	SHORT CHIP	0			R3808	1-218-941-81	RES-CHIP	100	5%	1/16W
R3105	1-218-989-11	RES-CHIP	1M	5%	1/16W	R3810	1-242-963-21	RES, NETWORK	33 (1005X4)		
R3106	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3811	1-242-963-21	RES, NETWORK	33 (1005X4)		
R3107	1-218-937-11	RES-CHIP	47	5%	1/16W	R3812	1-242-963-21	RES, NETWORK	33 (1005X4)		
R3108	1-218-937-11	RES-CHIP	47	5%	1/16W	R3813	1-242-963-21	RES, NETWORK	33 (1005X4)		
R3109	1-218-937-11	RES-CHIP	47	5%	1/16W	R3814	1-218-933-11	RES-CHIP	22	5%	1/16W
R3111	1-218-990-81	SHORT CHIP	0			R3816	1-218-940-11	RES-CHIP	82	5%	1/16W
R3113	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3817	1-218-940-11	RES-CHIP	82	5%	1/16W
R3201	1-218-937-11	RES-CHIP	47	5%	1/16W	R3818	1-218-933-11	RES-CHIP	22	5%	1/16W
R3202	1-218-937-11	RES-CHIP	47	5%	1/16W	R3820	1-218-940-11	RES-CHIP	82	5%	1/16W
R3203	1-218-937-11	RES-CHIP	47	5%	1/16W	R3821	1-218-933-11	RES-CHIP	22	5%	1/16W
R3204	1-218-990-81	SHORT CHIP	0			R3823	1-218-940-11	RES-CHIP	82	5%	1/16W
R3206	1-218-937-11	RES-CHIP	47	5%	1/16W	R3824	1-242-962-21	RES, NETWORK	82X4 (1005)		
R3207	1-218-937-11	RES-CHIP	47	5%	1/16W	R3828	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3208	1-218-937-11	RES-CHIP	47	5%	1/16W	R3829	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3209	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3830	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3210	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W	R3831	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3211	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R3832	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3213	1-218-951-11	RES-CHIP	680	5%	1/16W	R3833	1-234-379-21	RES, NETWORK	22K (1005X4)		
R3214	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R3835	1-218-935-11	RES-CHIP	33	5%	1/16W (EXCEPT GX350)
R3215	1-218-969-11	RES-CHIP	22K	5%	1/16W	R3837	1-242-963-21	RES, NETWORK	33 (1005X4)		(EXCEPT GX350)
R3216	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W	R3838	1-242-963-21	RES, NETWORK	33 (1005X4)		(EXCEPT GX350)
R3217	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	R3839	1-242-963-21	RES, NETWORK	33 (1005X4)		(EXCEPT GX350)
R3218	1-218-879-11	METAL CHIP	22K	0.5%	1/10W						
R3219	1-218-963-11	RES-CHIP	6.8K	5%	1/16W						
R3220	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3221	1-218-941-81	RES-CHIP	100	5%	1/16W						
R3222	1-218-963-11	RES-CHIP	6.8K	5%	1/16W						

RD65

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R3840	1-242-963-21	RES, NETWORK	33 (1005X4) (EXCEPT GX350)	R4724	1-218-933-11	RES-CHIP	22 5% 1/16W
R3841	1-218-940-11	RES-CHIP	82 5% 1/16W (EXCEPT GX350)	R4725	1-218-933-11	RES-CHIP	22 5% 1/16W
R3842	1-218-962-11	RES-CHIP	5.6K 5% 1/16W	R4726	1-218-933-11	RES-CHIP	22 5% 1/16W
R3843	1-218-933-11	RES-CHIP	22 5% 1/16W (EXCEPT GX350)	R4727	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3844	1-218-933-11	RES-CHIP	22 5% 1/16W (EXCEPT GX350)	R4728	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3845	1-218-940-11	RES-CHIP	82 5% 1/16W (EXCEPT GX350)	R4729	1-218-990-81	SHORT CHIP	0
R3846	1-218-953-11	RES-CHIP	1K 5% 1/16W	R4731	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R3847	1-218-933-11	RES-CHIP	22 5% 1/16W (EXCEPT GX350)	R4732	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R3848	1-218-940-11	RES-CHIP	82 5% 1/16W (EXCEPT GX350)	R5101	1-234-381-21	RES, NETWORK	100K (1005X4)
R3849	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5102	1-234-381-21	RES, NETWORK	100K (1005X4)
R3850	1-218-935-11	RES-CHIP	33 5% 1/16W (EXCEPT GX350)	R5103	1-218-977-11	RES-CHIP	100K 5% 1/16W
R3851	1-242-963-21	RES, NETWORK	33 (1005X4) (EXCEPT GX350)	R5104	1-218-977-11	RES-CHIP	100K 5% 1/16W
R3857	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)	R5105	1-234-702-11	RES, NETWORK	68 (1005X4)
R3862	1-218-990-81	SHORT CHIP	0	R5106	1-234-702-11	RES, NETWORK	68 (1005X4)
R3871	1-218-969-11	RES-CHIP	22K 5% 1/16W	R5107	1-218-939-11	RES-CHIP	68 5% 1/16W
R4501	1-216-295-91	SHORT CHIP	0	R5108	1-218-939-11	RES-CHIP	68 5% 1/16W
R4504	1-216-059-11	RES-CHIP	2.7K 5% 1/10W	R5109	1-218-937-11	RES-CHIP	47 5% 1/16W
R4505	1-216-059-11	RES-CHIP	2.7K 5% 1/10W	R5110	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4507	1-216-059-11	RES-CHIP	2.7K 5% 1/10W	R5111	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4511	1-218-990-81	SHORT CHIP	0	R5113	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4521	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	R5114	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4531	1-218-990-81	SHORT CHIP	0	R5115	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4541	1-218-990-81	SHORT CHIP	0	R5116	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4552	1-216-295-91	SHORT CHIP	0	R5117	1-218-977-11	RES-CHIP	100K 5% 1/16W
R4553	1-216-295-91	SHORT CHIP	0	R5118	1-218-870-11	METAL CHIP	9.1K 0.5% 1/10W
R4554	1-216-295-91	SHORT CHIP	0	R5119	1-211-987-11	METAL CHIP	56 0.5% 1/10W
R4556	1-216-295-91	SHORT CHIP	0	R5120	1-211-987-11	METAL CHIP	56 0.5% 1/10W
R4558	1-218-969-11	RES-CHIP	22K 5% 1/16W	R5121	1-211-987-11	METAL CHIP	56 0.5% 1/10W
R4559	1-218-990-81	SHORT CHIP	0	R5122	1-211-987-11	METAL CHIP	56 0.5% 1/10W
R4573	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)	R5123	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4574	1-216-864-11	SHORT CHIP	0	R5124	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4575	1-216-864-11	SHORT CHIP	0 (EXCEPT GX350)	R5125	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4581	1-218-941-81	RES-CHIP	100 5% 1/16W	R5127	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4701	1-234-372-11	RES, NETWORK	100 (1005X4)	R5129	1-218-940-11	RES-CHIP	82 5% 1/16W
R4702	1-234-372-11	RES, NETWORK	100 (1005X4)	R5130	1-218-990-81	SHORT CHIP	0
R4703	1-218-941-81	RES-CHIP	100 5% 1/16W	R5131	1-218-864-11	METAL CHIP	5.1K 0.5% 1/10W
R4704	1-218-990-81	SHORT CHIP	0	R5132	1-218-990-81	SHORT CHIP	0
R4705	1-218-990-81	SHORT CHIP	0	R5133	1-218-990-81	SHORT CHIP	0
R4706	1-218-990-81	SHORT CHIP	0	R5134	1-218-990-81	SHORT CHIP	0
R4707	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5135	1-218-990-81	SHORT CHIP	0
R4708	1-234-378-21	RES, NETWORK	10K (1005X4)	R5140	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4709	1-234-378-21	RES, NETWORK	10K (1005X4)	R5141	1-218-990-81	SHORT CHIP	0
R4710	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5201	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)
R4711	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5202	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)
R4712	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5203	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W (EXCEPT GX350)
R4713	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5204	1-218-845-11	METAL CHIP	820 0.5% 1/10W (EXCEPT GX350)
R4714	1-218-990-81	SHORT CHIP	0	R5205	1-218-939-11	RES-CHIP	68 5% 1/16W (EXCEPT GX350)
R4721	1-234-372-11	RES, NETWORK	100 (1005X4)	R5206	1-218-965-11	RES-CHIP	10K 5% 1/16W (GX350)
R4722	1-234-372-11	RES, NETWORK	100 (1005X4)	R5207	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)
R4723	1-218-937-11	RES-CHIP	47 5% 1/16W	R5208	1-218-965-11	RES-CHIP	10K 5% 1/16W (GX350)
				R5212	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)
				R5213	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)
				R5214	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R5215	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R5216	1-218-990-81	SHORT CHIP	0 (EXCEPT GX350)

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R5217	1-218-990-81	SHORT CHIP	0 (EXCEPT	GX350)		R5659	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5220	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W (EXCEPT GX350)	R5661	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)
R5221	1-218-973-11	RES-CHIP	47K	5%	1/16W (EXCEPT GX350)	R5664	1-216-864-11	SHORT CHIP	0 (EXCEPT	GX350)	
R5222	1-218-929-11	RES-CHIP	10	5%	1/16W (EXCEPT GX350)	R5672	1-216-864-11	SHORT CHIP	0 (EXCEPT	GX350)	
R5445	1-216-295-91	SHORT CHIP	0			R5688	1-218-989-11	RES-CHIP	1M	5%	1/16W (EXCEPT GX350)
R5606	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5689	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)
R5607	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5690	1-218-990-81	SHORT CHIP	0 (EXCEPT	GX350)	
R5608	1-218-965-11	RES-CHIP	10K	5%	1/16W (EXCEPT GX350)	R5692	1-218-990-81	SHORT CHIP	0		
R5609	1-218-965-11	RES-CHIP	10K	5%	1/16W	R5693	1-218-990-81	SHORT CHIP	0		
R5610	1-218-953-11	RES-CHIP	1K	5%	1/16W	R5701	1-218-949-11	RES-CHIP	470	5%	1/16W (EXCEPT GX350)
R5612	1-218-965-11	RES-CHIP	10K	5%	1/16W (EXCEPT GX350)	R5702	1-218-949-11	RES-CHIP	470	5%	1/16W
R5613	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5703	1-218-951-11	RES-CHIP	680	5%	1/16W
R5614	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5704	1-218-943-11	RES-CHIP	150	5%	1/16W
R5615	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5705	1-216-864-11	SHORT CHIP	0		
R5617	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5706	1-211-990-11	METAL CHIP	75	0.5%	1/10W
R5618	1-218-965-11	RES-CHIP	10K	5%	1/16W (EXCEPT GX350)	R5707	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5619	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5708	1-218-948-11	RES-CHIP	390	5%	1/16W (GX350)
R5622	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5803	1-216-864-11	SHORT CHIP	0		
R5623	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5804	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5624	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5805	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5626	1-218-933-11	RES-CHIP	22	5%	1/16W (EXCEPT GX350)	R5806	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5627	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5807	1-218-962-11	RES-CHIP	5.6K	5%	1/16W
R5628	1-218-933-11	RES-CHIP	22	5%	1/16W (EXCEPT GX350)	R5808	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5629	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5809	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5630	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5812	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5631	1-218-933-11	RES-CHIP	22	5%	1/16W (EXCEPT GX350)	R5813	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5632	1-242-963-21	RES, NETWORK	33 (1005X4)			R5814	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5638	1-242-963-21	RES, NETWORK	33 (1005X4)			R5815	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R5642	1-242-963-21	RES, NETWORK	33 (1005X4)			R5817	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5646	1-242-963-21	RES, NETWORK	33 (1005X4)			R5818	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5650	1-218-940-11	RES-CHIP	82	5%	1/16W (EXCEPT GX350)	R5820	1-216-295-91	SHORT CHIP	0		
R5651	1-218-873-11	METAL CHIP	12K	0.5%	1/10W (EXCEPT GX350)	R5821	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5652	1-218-941-81	RES-CHIP	100	5%	1/16W (EXCEPT GX350)	R5822	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5657	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5825	1-234-370-21	RES, NETWORK	22 (1005X4)		
R5658	1-218-953-11	RES-CHIP	1K	5%	1/16W (EXCEPT GX350)	R5826	1-234-370-21	RES, NETWORK	22 (1005X4)		
						R5827	1-234-370-21	RES, NETWORK	22 (1005X4)		
						R5828	1-234-370-21	RES, NETWORK	22 (1005X4)		
						R5829	1-218-938-11	RES-CHIP	56	5%	1/16W
						R5831	1-218-990-81	SHORT CHIP	0		
						R5833	1-218-933-11	RES-CHIP	22	5%	1/16W
						R5834	1-218-933-11	RES-CHIP	22	5%	1/16W
						R5836	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R5837	1-218-990-81	SHORT CHIP	0		
						R5838	1-218-935-11	RES-CHIP	33	5%	1/16W
						R5839	1-218-949-11	RES-CHIP	470	5%	1/16W
						R5842	1-218-947-11	RES-CHIP	330	5%	1/16W
						R5843	1-218-947-11	RES-CHIP	330	5%	1/16W
						R5844	1-218-947-11	RES-CHIP	330	5%	1/16W
						R5845	1-218-947-11	RES-CHIP	330	5%	1/16W
						R5846	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
						R5848	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
						R5852	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R5853	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R5854	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R5855	1-234-369-21	RES, NETWORK	10 (1005X4)		

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R5856	1-218-965-11	RES-CHIP	10K	5%	1/16W		C138	1-164-854-11	CERAMIC CHIP	15PF	5%	50V	
R5857	1-218-965-11	RES-CHIP	10K	5%	1/16W		C139	1-164-854-11	CERAMIC CHIP	15PF	5%	50V	
R5859	1-218-965-11	RES-CHIP	10K	5%	1/16W		C140	1-164-854-11	CERAMIC CHIP	15PF	5%	50V	
R5861	1-218-965-11	RES-CHIP	10K	5%	1/16W		C141	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
R5862	1-218-961-11	RES-CHIP	4.7K	5%	1/16W		C142	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
R5863	1-218-951-11	RES-CHIP	680	5%	1/16W		C143	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
R5864	1-218-953-11	RES-CHIP	1K	5%	1/16W		C144	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
R5865	1-218-990-81	SHORT CHIP	0				C145	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R5867	1-218-950-11	RES-CHIP	560	5%	1/16W		C146	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R5868	1-218-957-11	RES-CHIP	2.2K	5%	1/16W		C147	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R5869	1-218-961-11	RES-CHIP	4.7K	5%	1/16W		C148	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R5870	1-218-970-11	RES-CHIP	27K	5%	1/16W		C149	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
R6001	1-218-990-81	SHORT CHIP	0				C150	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
							C151	1-126-210-21	ELECT CHIP	220uF	20%	4V	
							C153	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
X5101	1-813-049-21	VIBRATOR, CRYSTAL (24.576MHz)					C154	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
X5201	1-795-904-21	OSCILLATOR, CRYSTAL (48MHz)					C155	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
							C156	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
							C157	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
X5502	1-813-052-21	VIBRATOR, CRYSTAL (25MHz)					C158	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
							C159	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
							C160	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
							C161	1-126-210-21	ELECT CHIP	220uF	20%	4V	
							C162	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
							C163	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
							C164	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C101	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C165	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C102	1-117-681-11	ELECT CHIP	100uF	20%	16V		C166	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C103	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C167	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C106	1-126-210-21	ELECT CHIP	220uF	20%	4V		C168	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C107	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
							C169	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C108	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C170	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C109	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C171	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C110	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C172	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C111	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C173	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C112	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
							C174	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C113	1-107-820-11	CERAMIC CHIP	0.1uF		16V		C175	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C114	1-114-130-11	CERAMIC CHIP	1uF		6.3V		C176	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C115	1-117-681-11	ELECT CHIP	100uF	20%	16V		C177	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C116	1-126-210-21	ELECT CHIP	220uF	20%	4V		C178	1-124-779-21	ELECT CHIP	10uF	20%	16V	
C117	1-164-858-11	CERAMIC CHIP	22PF	5%	50V								
							C180	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	
C118	1-164-858-11	CERAMIC CHIP	22PF	5%	50V		C182	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C119	1-164-858-11	CERAMIC CHIP	22PF	5%	50V		C183	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C120	1-164-858-11	CERAMIC CHIP	22PF	5%	50V		C184	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C121	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		C185	1-107-820-11	CERAMIC CHIP	0.1uF		16V	
C122	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V								
							C186	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C123	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C187	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C124	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C188	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C125	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C189	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C126	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C191	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C127	1-164-872-11	CERAMIC CHIP	82PF	5%	50V								
							C192	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C128	1-164-872-11	CERAMIC CHIP	82PF	5%	50V		C193	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C129	1-164-872-11	CERAMIC CHIP	82PF	5%	50V		C194	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C130	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C195	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C131	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V		C196	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C132	1-164-872-11	CERAMIC CHIP	82PF	5%	50V								
							C197	1-100-597-91	CERAMIC CHIP	0.1uF	10%	25V	
C133	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C198	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C134	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C199	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C135	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C200	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C136	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		C201	1-114-130-11	CERAMIC CHIP	1uF		6.3V	
C137	1-164-854-11	CERAMIC CHIP	15PF	5%	50V								

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C202	1-114-130-11	CERAMIC CHIP	1uF		6.3V				< COIL >				
C203	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V								
C204	1-114-130-11	CERAMIC CHIP	1uF		6.3V		L101	1-412-951-11	INDUCTOR	10uH			
C205	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		L102	1-412-951-11	INDUCTOR	10uH			
C206	1-126-210-21	ELECT CHIP	220uF	20%	4V		L103	1-412-951-11	INDUCTOR	10uH			
							L104	1-412-951-11	INDUCTOR	10uH			
C207	1-114-130-11	CERAMIC CHIP	1uF		6.3V		L105	1-412-954-11	INDUCTOR	18uH			
C208	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
C209	1-114-130-11	CERAMIC CHIP	1uF		6.3V		L106	1-412-954-11	INDUCTOR	18uH			
C210	1-114-130-11	CERAMIC CHIP	1uF		6.3V		L107	1-412-954-11	INDUCTOR	18uH			
C211	1-114-130-11	CERAMIC CHIP	1uF		6.3V		L108	1-412-954-11	INDUCTOR	18uH			
									< TRANSISTOR >				
C212	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
C214	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
C215	1-126-210-21	ELECT CHIP	220uF	20%	4V		Q102	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF			
C216	1-114-130-11	CERAMIC CHIP	1uF		6.3V		Q103	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF			
C217	1-114-130-11	CERAMIC CHIP	1uF		6.3V		Q104	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF			
							Q105	6-551-699-01	TRANSISTOR	ISA1602AM1TP-1EF			
C218	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V		Q106	8-729-620-13	TRANSISTOR	2SC4154TP-1EF			
C219	1-162-912-11	CERAMIC CHIP	7PF	0.5PF	50V								
C220	1-114-130-11	CERAMIC CHIP	1uF		6.3V		Q107	8-729-620-13	TRANSISTOR	2SC4154TP-1EF			
C221	1-114-130-11	CERAMIC CHIP	1uF		6.3V		Q108	8-729-620-13	TRANSISTOR	2SC4154TP-1EF			
C222	1-114-130-11	CERAMIC CHIP	1uF		6.3V		Q109	8-729-620-13	TRANSISTOR	2SC4154TP-1EF			
									< RESISTOR >				
C223	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
C224	1-114-130-11	CERAMIC CHIP	1uF		6.3V								
C225	1-114-130-11	CERAMIC CHIP	1uF		6.3V		R102	1-218-965-11	RES-CHIP	10K	5%	1/16W	
C226	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R103	1-218-990-81	SHORT CHIP	0			
C228	1-114-130-11	CERAMIC CHIP	1uF		6.3V		R104	1-218-937-11	RES-CHIP	47	5%	1/16W	
							R105	1-218-937-11	RES-CHIP	47	5%	1/16W	
C232	1-100-966-91	CERAMIC CHIP	10uF	20%	10V		R106	1-218-937-11	RES-CHIP	47	5%	1/16W	
C233	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V								
C234	1-117-681-11	ELECT CHIP	100uF	20%	16V		R107	1-218-937-11	RES-CHIP	47	5%	1/16W	
C235	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R113	1-218-965-11	RES-CHIP	10K	5%	1/16W	
C236	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R124	1-218-947-11	RES-CHIP	330	5%	1/16W	
							R125	1-218-947-11	RES-CHIP	330	5%	1/16W	
C237	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R126	1-218-947-11	RES-CHIP	330	5%	1/16W	
C238	1-107-820-11	CERAMIC CHIP	0.1uF		16V								
C239	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R127	1-218-947-11	RES-CHIP	330	5%	1/16W	
C240	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R128	1-218-839-11	METAL CHIP	470	0.5%	1/10W	
C241	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R129	1-218-839-11	METAL CHIP	470	0.5%	1/10W	
							R130	1-218-839-11	METAL CHIP	470	0.5%	1/10W	
C242	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		R131	1-218-839-11	METAL CHIP	470	0.5%	1/10W	
C243	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V								
C244	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R133	1-216-295-91	SHORT CHIP	0			
C245	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R136	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	
C246	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R137	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	
							R138	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	
C247	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R139	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W	
C248	1-126-210-21	ELECT CHIP	220uF	20%	4V								
C249	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R140	1-218-929-11	RES-CHIP	10	5%	1/16W	
C250	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R141	1-218-929-11	RES-CHIP	10	5%	1/16W	
C251	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V		R142	1-218-929-11	RES-CHIP	10	5%	1/16W	
							R143	1-218-929-11	RES-CHIP	10	5%	1/16W	
C252	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R144	1-218-951-11	RES-CHIP	680	5%	1/16W	
C253	1-107-820-11	CERAMIC CHIP	0.1uF		16V								
C254	1-107-820-11	CERAMIC CHIP	0.1uF		16V		R145	1-218-951-11	RES-CHIP	680	5%	1/16W	
							R146	1-218-951-11	RES-CHIP	680	5%	1/16W	
		< CONNECTOR >					R147	1-218-951-11	RES-CHIP	680	5%	1/16W	
CN103	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P					R148	1-218-971-11	RES-CHIP	33K	5%	1/16W	
* CN105	1-564-728-11	PIN, CONNECTOR (SMALL TYPE) 12P					R149	1-218-973-11	RES-CHIP	47K	5%	1/16W	
* CN106	1-784-746-11	CONNECTOR, FFC 24P											
							R150	1-218-973-11	RES-CHIP	47K	5%	1/16W	
							R151	1-218-973-11	RES-CHIP	47K	5%	1/16W	
		< IC >					R152	1-234-378-21	RES, NETWORK	10K (1005X4)			
IC101	6-702-362-01	IC MM1563DFBE					R154	1-234-372-11	RES, NETWORK	100 (1005X4)			
IC102	6-708-708-01	IC MM1561FFBE					R155	1-234-372-11	RES, NETWORK	100 (1005X4)			
IC104	6-711-285-01	IC uPD64015AGM-UEU-A											

Ref. No.	Part No.	Description	Remarks
R156	1-234-372-11	RES, NETWORK 100 (1005X4)	
R157	1-216-295-91	SHORT CHIP 0	
R158	1-234-372-11	RES, NETWORK 100 (1005X4)	
R159	1-218-941-81	RES-CHIP 100 5%	1/16W
R160	1-234-372-11	RES, NETWORK 100 (1005X4)	
R161	1-216-295-91	SHORT CHIP 0	
R162	1-234-372-11	RES, NETWORK 100 (1005X4)	
R163	1-218-990-81	SHORT CHIP 0	
R164	1-234-372-11	RES, NETWORK 100 (1005X4)	
R165	1-234-372-11	RES, NETWORK 100 (1005X4)	
R167	1-234-372-11	RES, NETWORK 100 (1005X4)	
R169	1-218-953-11	RES-CHIP 1K 5%	1/16W
R170	1-218-965-11	RES-CHIP 10K 5%	1/16W
R171	1-218-973-11	RES-CHIP 47K 5%	1/16W
R174	1-218-965-11	RES-CHIP 10K 5%	1/16W
R175	1-218-965-11	RES-CHIP 10K 5%	1/16W
R176	1-234-372-11	RES, NETWORK 100 (1005X4)	
R180	1-218-941-81	RES-CHIP 100 5%	1/16W
R181	1-218-941-81	RES-CHIP 100 5%	1/16W
R182	1-218-990-81	SHORT CHIP 0	
R183	1-218-990-81	SHORT CHIP 0	
R184	1-218-990-81	SHORT CHIP 0	
R185	1-218-990-81	SHORT CHIP 0	
R186	1-218-961-11	RES-CHIP 4.7K 5%	1/16W
R187	1-218-961-11	RES-CHIP 4.7K 5%	1/16W

ACCESSORIES

△	1-575-131-82	CORD, POWER (AEP)	
	1-696-593-11	CORD, CONNECTION (PAL)	
	1-759-586-41	CONTROLLER, VIDEO (AV MOUSE)	
		(HX750/HX950)	
△	1-827-946-21	CORD, POWER (UK)	
	2-899-893-11	MANUAL, INSTRUCTION (ENGLISH)	
		(HX750:UK)	
	2-899-893-21	MANUAL, INSTRUCTION (FRENCH)	
		(HX750/HX950:AEP1)	
	2-899-893-31	MANUAL, INSTRUCTION (GERMAN)	
		(HX750/HX950:AEP1)	
	2-899-893-41	MANUAL, INSTRUCTION (ITALIAN)	
		(HX750/HX950:AEP1)	
	2-899-893-51	MANUAL, INSTRUCTION (DUTCH)	
		(HX750/HX950:AEP1)	
	2-899-893-61	MANUAL, INSTRUCTION (SPANISH)	
		(HX750/HX950:AEP1)	
	3-100-905-11	MANUAL, INSTRUCTION (FRENCH)	
		(HX650:AEP1,AEP3)	
	3-100-905-21	MANUAL, INSTRUCTION (GERMAN)	
		(HX650:AEP1)	
	3-100-905-31	MANUAL, INSTRUCTION (ITALIAN)	
		(HX650:AEP1)	
	3-100-905-41	MANUAL, INSTRUCTION (DUTCH)	
		(HX650:AEP1)	
	3-100-905-51	MANUAL, INSTRUCTION (SPANISH)	
		(HX650:AEP1)	

Ref. No.	Part No.	Description	Remarks
	3-100-905-61	MANUAL, INSTRUCTION (PORTUGUESE)	
		(HX650:AEP2)	
	3-100-905-71	MANUAL, INSTRUCTION (DANISH)	
		(HX650:AEP2)	
	3-100-905-81	MANUAL, INSTRUCTION (SWEDISH)	
		(HX650:AEP2)	
	3-100-905-91	MANUAL, INSTRUCTION (FINNISH)	
		(HX650:AEP2)	
	3-100-906-11	MANUAL, INSTRUCTION (PORTUGUESE)	
		(HX750/HX950:AEP2)	
	3-100-906-21	MANUAL, INSTRUCTION (DANISH)	
		(HX750/HX950:AEP2)	
	3-100-906-31	MANUAL, INSTRUCTION (SWEDISH)	
		(HX750/HX950:AEP2)	
	3-100-906-41	MANUAL, INSTRUCTION (FINNISH)	
		(HX750/HX950:AEP2)	
	3-113-758-11	MANUAL, INSTRUCTION (FRENCH)	
		(GX350:AEP1)	
	3-113-758-21	MANUAL, INSTRUCTION (GERMAN)	
		(GX350:AEP1)	
	3-113-758-31	MANUAL, INSTRUCTION (ITALIAN)	
		(GX350:AEP1)	
	3-113-758-41	MANUAL, INSTRUCTION (DUTCH)	
		(GX350:AEP1)	
	3-113-758-51	MANUAL, INSTRUCTION (SPANISH)	
		(GX350:AEP1)	
	3-113-758-61	MANUAL, INSTRUCTION (PORTUGUESE)	
		(GX350:AEP2)	
	3-113-758-71	MANUAL, INSTRUCTION (DANISH)	
		(GX350:AEP2)	
	3-113-758-81	MANUAL, INSTRUCTION (SWEDISH)	
		(GX350:AEP2)	
	3-113-758-91	MANUAL, INSTRUCTION (FINNISH)	
		(GX350:AEP2)	
	3-113-759-11	MANUAL, INSTRUCTION (ENGLISH)	
		(GX350:UK)	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

