

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.

Abbreviation

TW : Taiwan Model
RU : Russian Model
SP : Singapore Model


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

8-1-1. OVERALL SECTION (GX310)

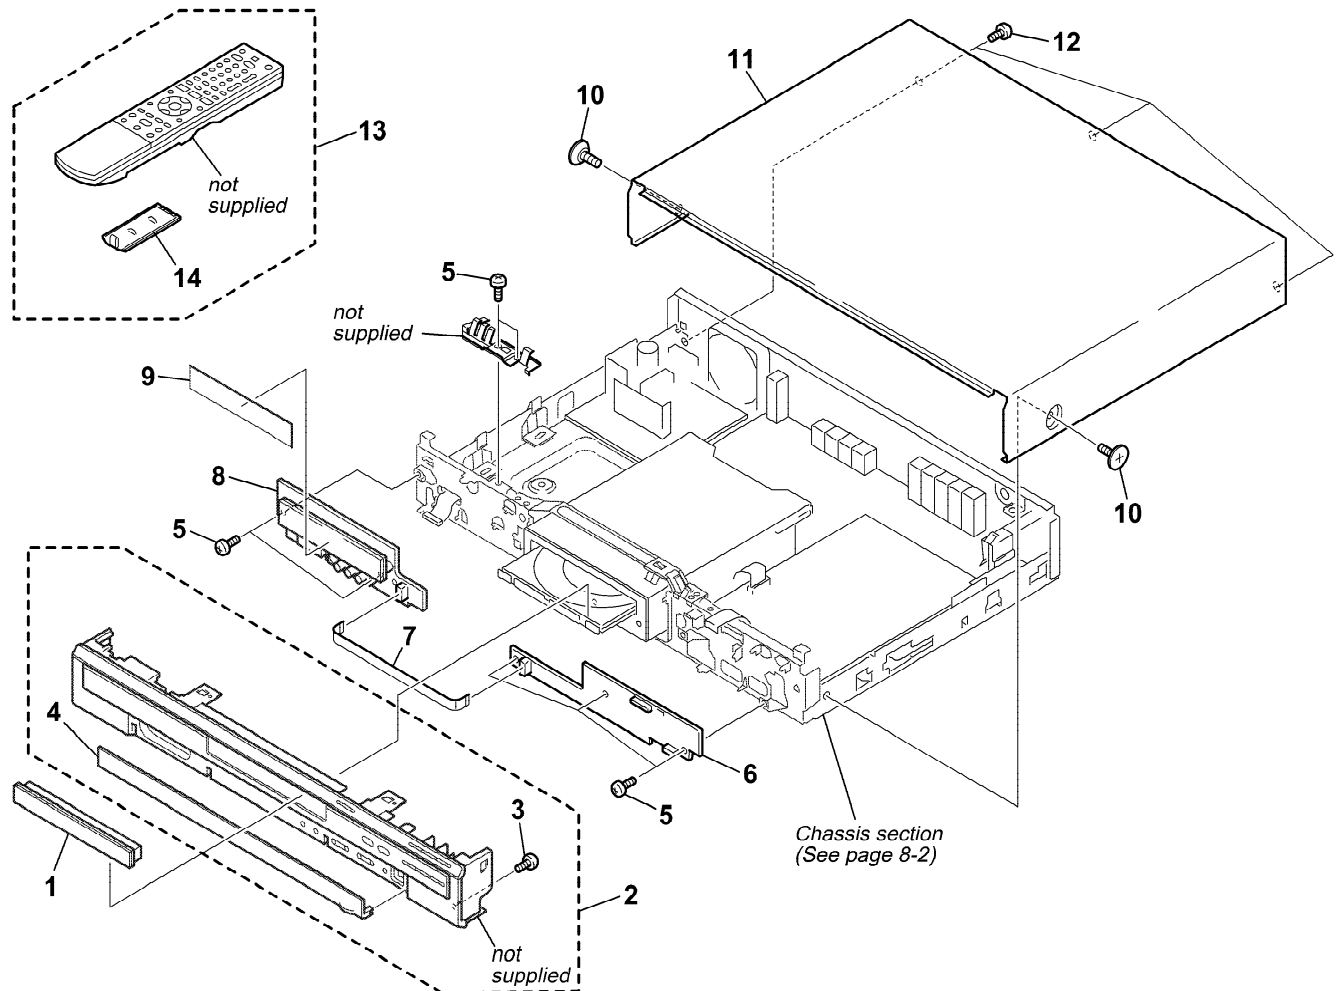

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-2050-201-1	COVER ASSY (1300), TRAY		7	1-829-814-11	CABLE, FLEXIBLE FLAT (FFL-002)	
2	X-2055-917-1	FRONT PANEL ASSY (1300) (E)		* 8	A-1122-393-A	FL-144 (SU) COMPL	
2	X-2055-918-1	FRONT PANEL ASSY (1300) (TW)		9	2-583-904-01	SHEET, FL	
2	X-2055-919-1	FRONT PANEL ASSY (1300) (RU)		10	3-070-883-41	SCREW, TAPPING	
2	X-2055-920-1	FRONT PANEL ASSY (1300) (SP)		11	A-1109-676-A	CASE BLOCK ASSY (SERVICE USE)	
3	7-685-533-14	SCREW +BTP 2.6X6 TYPE2 N-S		12	3-077-331-31	+BV3 (3-CR)	
4	2-515-217-11	DOOR (3G), SLIDE (E, TW)		13	1-479-290-11	REMOTE COMMANDER (RMT-D216A) (E, TW)	
4	2-515-217-31	DOOR (3G), SLIDE (RU, SP)		13	1-479-300-11	REMOTE COMMANDER (RMT-D216P) (RU, SP)	
5	3-077-331-01	+BV3 (3-CR)		14	3-071-119-91	COVER, BATTERY	
* 6	A-1121-022-A	FR-226 (CS) COMPL					


8-1-2. CHASSIS SECTION (GX310)

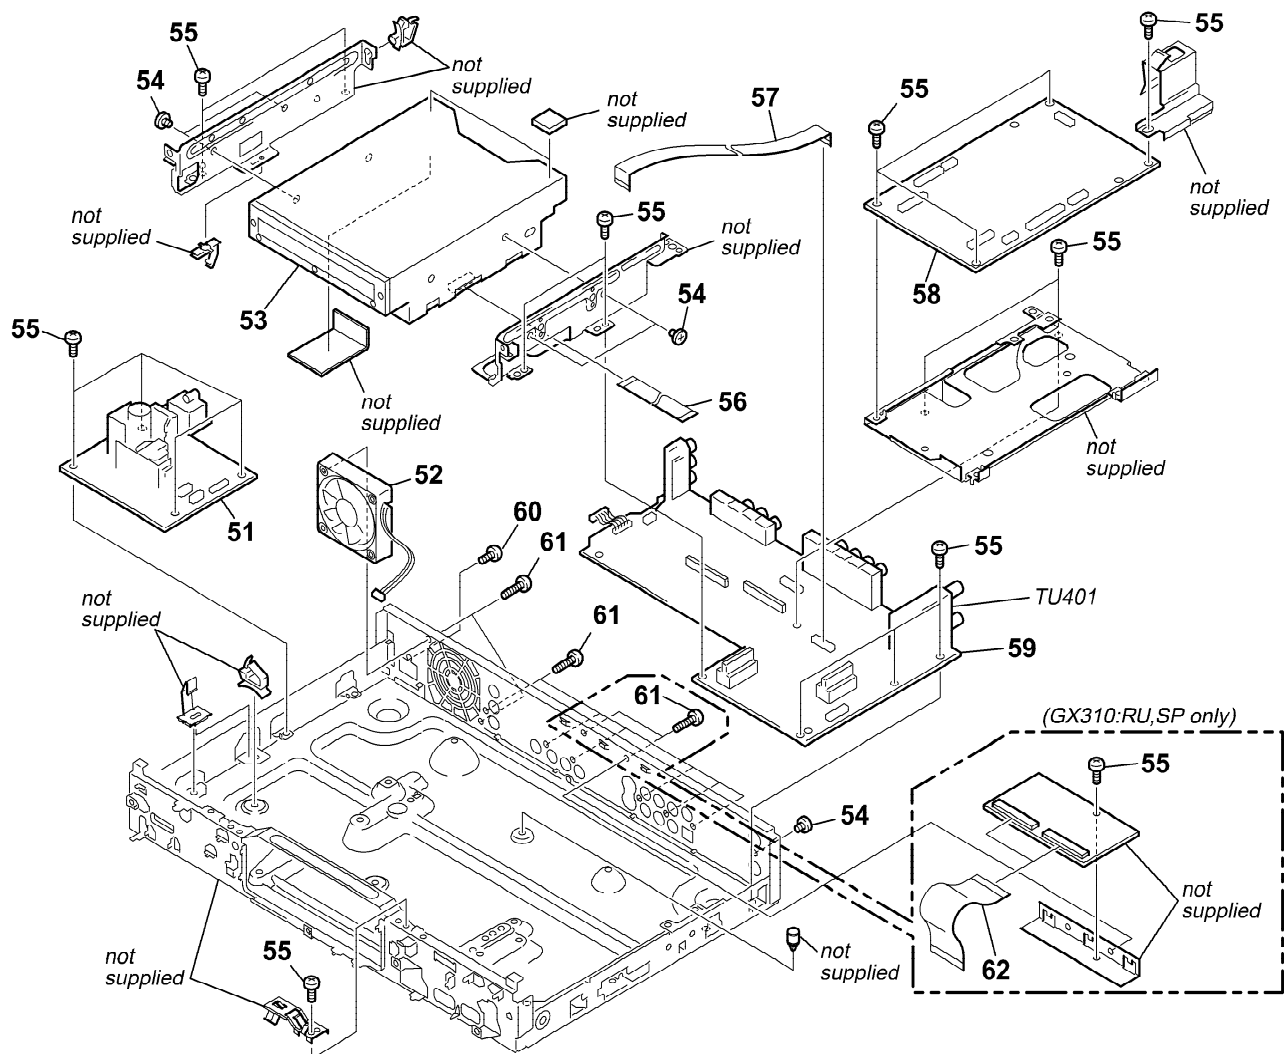

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
△ 51	1-468-921-11	POWER SUPPLY BLOCK (TW)		* 58	A-1121-017-A	RD-051 (CS) S COMPL (RU)	
△ 51	1-468-930-11	POWER SUPPLY BLOCK (RU, SP)		* 58	A-1133-334-A	RD-051 (AST) S COMPL (TW)	
△ 51	1-468-931-11	POWER SUPPLY BLOCK (E)		* 58	A-1138-667-A	RD-051 (CSS) S COMPL (SP)	
52	1-787-290-11	FAN, D.C		* 59	A-1121-013-A	AV-089 (ES) COMPL (E)	
53	1-797-247-11	DRIVE, DVD DRW-V35P		* 59	A-1121-015-A	AV-089 (GS) COMPL (TW)	
54	3-088-023-01	+B3 (3-CR)		* 59	A-1121-020-A	AV-089 (IS) COMPL (RU, SP)	
55	3-077-331-01	+BV3 (3-CR)		60	3-088-022-01	+P3 (B TYPE) (3-CR)	
56	1-830-665-11	CABLE, FLEXIBLE FLAT (FRD-002)		61	3-077-331-31	+BV3 (3-CR)	
57	1-829-815-11	CABLE, FLEXIBLE FLAT (FAF-001)		62	1-830-443-11	CABLE, FLEXIBLE FLAT (FAE-007) (RU, SP)	
* 58	A-1121-010-A	RD-051 (AS) S COMPL (E)		TU401	8-597-979-00	TUNER, FSS BTF-DF421 (SP, RU)	
				TU401	1-693-690-11	TUNER BTF-3WA401 (TW, E)	


Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

8-1-3. OVERALL SECTION (HX710/HX910)

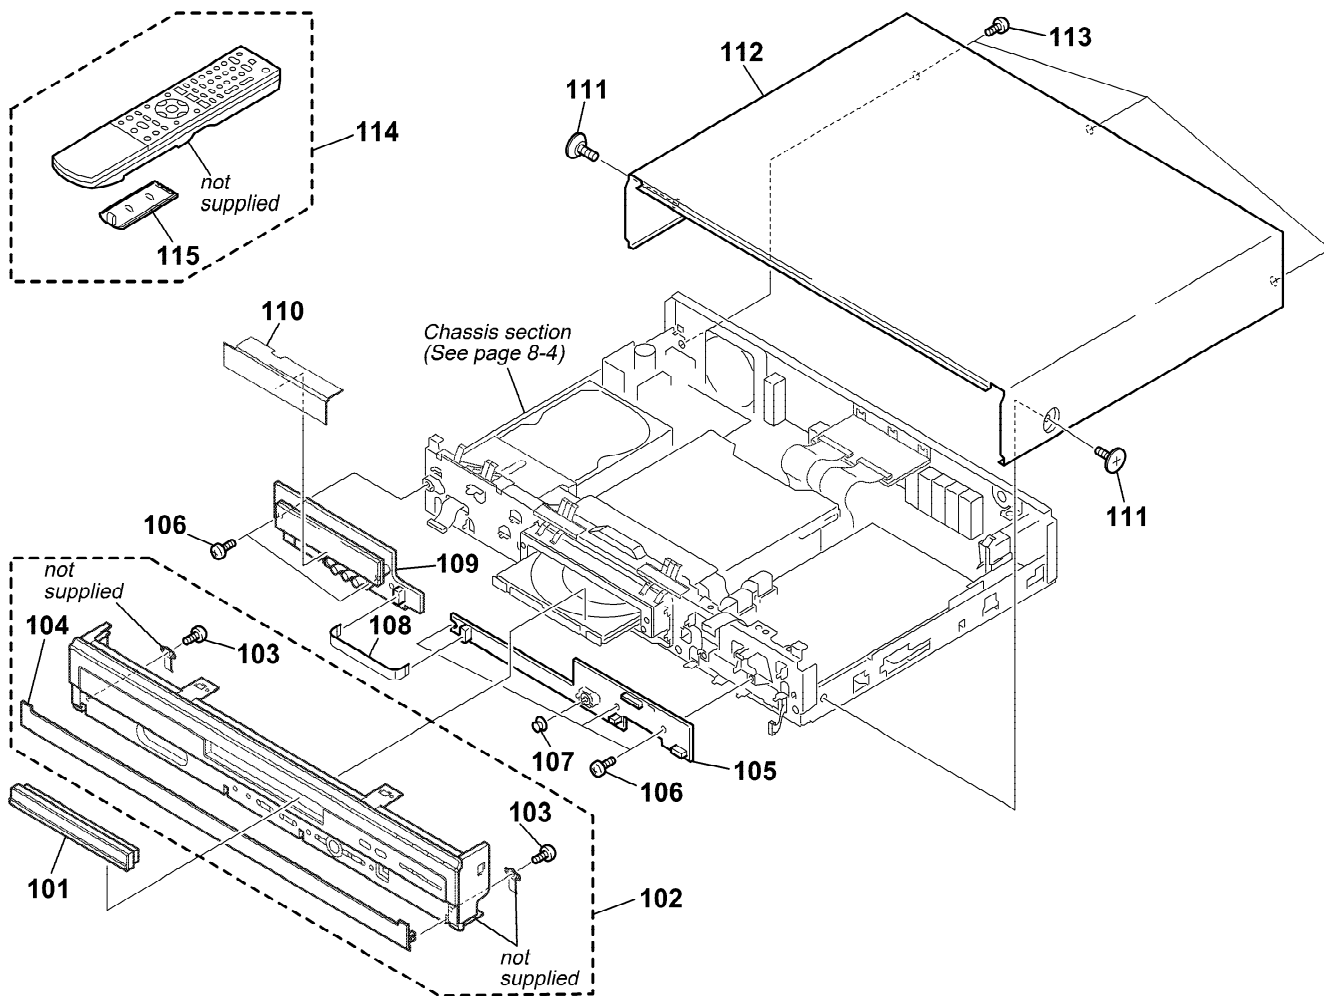

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	X-2050-530-1	COVER ASSY (1380), TRAY		107	2-159-703-12	CURSOR	
102	X-2059-333-1	PANEL ASSY, FRONT (1330) (HX710)		108	1-829-813-11	CABLE, FLEXIBLE FLAT (FFS-001)	
102	X-2059-335-1	PANEL ASSY, FRONT (1330) (HX910: E)		* 109	A-1122-393-A	FL-144 (SU) COMPL	
102	X-2059-337-1	PANEL ASSY, FRONT (1330) (HX910: TW)		110	2-189-250-11	COVER, FL	
102	X-2059-339-1	PANEL ASSY, FRONT (1330) (HX910: RU)		111	3-070-883-41	SCREW, TAPPING	
102	X-2059-341-1	PANEL ASSY, FRONT (1330) (HX910: SP)		112	A-1121-378-A	CASE BLOCK ASSY (SERVICE USE)	
103	7-685-533-14	SCREW +BTP 2.6X6 TYPE2 N-S		113	3-077-331-31	+BV3 (3-CR)	
104	2-515-217-21	DOOR (3G), SLIDE (HX710/HX910: RU, SP)		114	1-479-289-11	REMOTE COMMANDER (RMT-D217P)	
104	2-515-217-41	DOOR (3G), SLIDE (HX910: E, TW)		114	1-479-301-11	REMOTE COMMANDER (RMT-D217A)	(HX710/HX910: RU, SP)
* 105	A-1111-959-A	FR-232 (JD) COMPL		114	1-479-301-11	REMOTE COMMANDER (RMT-D217A)	(HX910: E, TW)
106	3-077-331-01	+BV3 (3-CR)		115	3-071-119-91	COVER, BATTERY	

8-1-4. CHASSIS SECTION (HX710/HX910)

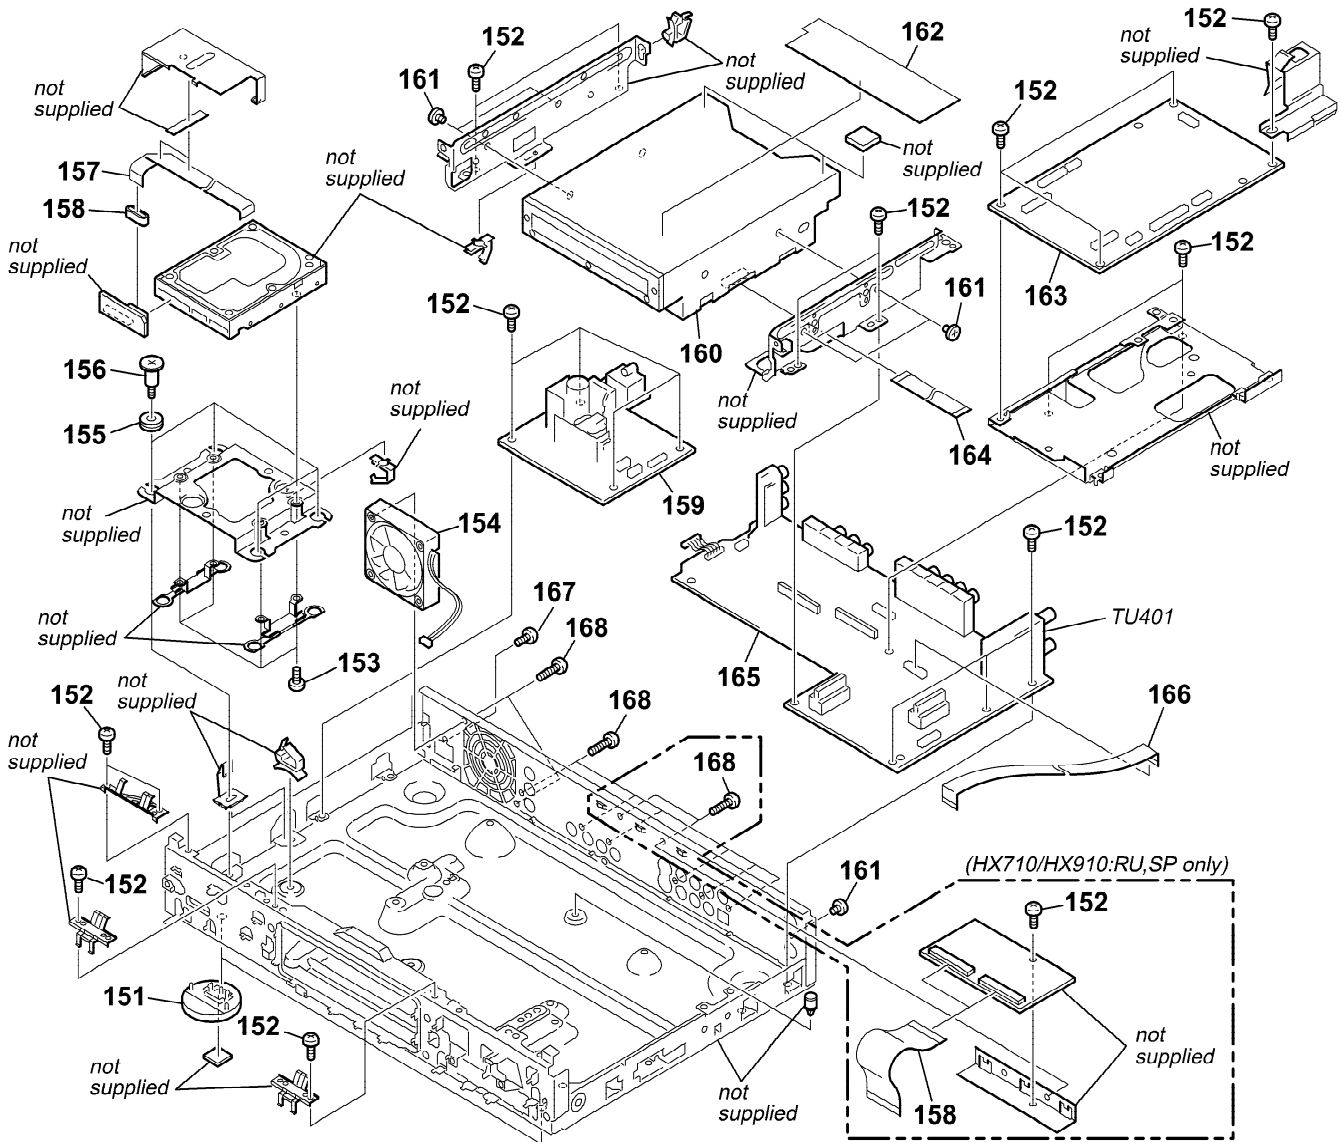

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	3-086-778-01	FOOT		* 163	A-1121-034-A	RD-051 (DS) S COMPL (HX910: RU)	
152	3-077-331-01	+BV3 (3-CR)		* 163	A-1133-337-A	RD-051 (BST) S COMPL (HX910: TW)	
153	3-087-675-01	6-32UNCX5		* 163	A-1138-665-A	RD-051 (DSA) S COMPL (HX710)	
154	1-787-291-11	FAN, D.C		* 163	A-1138-666-A	RD-051 (DSS) S COMPL (HX910: SP)	
155	3-089-380-01	DAMPER		164	1-830-665-11	CABLE, FLEXIBLE FLAT (FRD-002)	
156	2-159-920-01	SCREW, HDD DAMPER		* 165	A-1121-030-A	AV-089 (FS) COMPL (HX910: E)	
157	1-830-755-21	CABLE, FLEXIBLE FLAT (FRH-002)		* 165	A-1121-032-A	AV-089 (HS) COMPL (HX910: TW)	
158	2-159-921-11	COVER, FLEXIBLE		* 165	A-1121-648-A	AV-089 (JS) COMPL (HX710/HX910: RU, SP)	
△ 159	1-468-921-11	POWER SUPPLY BLOCK (HX910(TW))5		166	1-829-815-11	CABLE, FLEXIBLE FLAT (FAF-001)	
△ 159	1-468-930-11	POWER SUPPLY BLOCK	(HX710/HX910: RU, SP)	167	3-088-022-01	+P3 (B TYPE) (3-CR)	
△ 159	1-468-932-11	POWER SUPPLY BLOCK (HX910: E)		168	3-077-331-31	+BV3 (3-CR)	
160	1-797-247-11	DRIVE, DVD DRW-V35P		169	1-830-443-11	CABLE, FLEXIBLE FLAT (FAE-007)	(HX710/HX910: RU, SP)
161	3-088-023-01	+B3 (3-CR)		TU401	8-597-979-00	TUNER, FSS BTF-DF421 (HX710/HX910: RU, SP)	
162	2-159-921-11	COVER, FLEXIBLE		TU401	1-693-690-11	TUNER BTF-3WA401 (HX910:E,TW)	
* 163	A-1121-027-A	RD-051 (BS) S COMPL (HX910: E)					

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Abbreviation

TW : Taiwan Model
RU : Russian Model
SP : Singapore Model

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
*	A-1121-013-A	AV-089 (ES) COMPL (GX310: E) *****		C218	1-126-947-11	ELECT 47uF 20% 35V	
*	A-1121-030-A	AV-089 (FS) COMPL (HX910: E) *****		C219	1-126-961-11	ELECT 2.2uF 20% 50V	
*	A-1121-015-A	AV-089 (GS) COMPL (GX310: TW) *****		C220	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
*	A-1121-032-A	AV-089 (HS) COMPL (HX910: TW) *****		C221	1-126-947-11	ELECT 47uF 20% 35V	
*	A-1121-020-A	AV-089 (IS) COMPL (GX310: RU, SP) *****		C222	1-126-964-11	ELECT 10uF 20% 50V	
*	A-1121-648-A	AV-089 (JS) COMPL (HX710/HX910: RU, SP) *****		C225	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
Ref.No.:10000 series				C226	1-165-883-11	CERAMIC CHIP 10000PF 10% 630V	
< CAPACITOR >				C301	1-126-947-11	ELECT 47uF 20% 35V	
C101	1-126-947-11	ELECT 47uF 20% 35V		C302	1-126-924-11	ELECT 330uF 20% 10V	
C104	1-137-921-31	ELECT 1500uF 20% 10V		C304	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C107	1-126-947-11	ELECT 47uF 20% 35V		C307	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C108	1-110-501-11	CERAMIC CHIP 0.33uF 10% 16V		C308	1-126-934-11	ELECT 220uF 20% 16V	
C110	1-126-947-11	ELECT 47uF 20% 35V		C309	1-164-739-11	CERAMIC CHIP 560PF 5% 50V	
C111	1-126-947-11	ELECT 47uF 20% 35V		C310	1-164-739-11	CERAMIC CHIP 560PF 5% 50V	
C115	1-107-682-11	CERAMIC CHIP 1uF 10% 16V		C312	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C116	1-128-945-31	ELECT 1000uF 20% 10V		C314	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C120	1-165-714-31	ELECT 150uF 20% 6.3V		C317	1-126-934-11	ELECT 220uF 20% 16V	
C121	1-165-714-31	ELECT 150uF 20% 6.3V		C318	1-126-934-11	ELECT 220uF 20% 16V	
C124	1-126-926-11	ELECT 1000uF 20% 10V (EXSEPT GX310:E/HX910:E)		C319	1-126-947-11	ELECT 47uF 20% 35V	
C124	1-126-927-11	ELECT 2200uF 20% 10V (GX310:E/HX910:E)		C320	1-126-947-11	ELECT 47uF 20% 35V	
C126	1-126-947-11	ELECT 47uF 20% 35V		C321	1-126-960-11	ELECT 1uF 20% 50V	
C127	1-126-947-11	ELECT 47uF 20% 35V		C323	1-126-786-11	ELECT 47uF 20% 16V	
C128	1-126-947-11	ELECT 47uF 20% 35V		C324	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C129	1-126-947-11	ELECT 47uF 20% 35V		C325	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C132	1-128-952-31	ELECT 220uF 20% 25V		C326	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C133	1-126-947-11	ELECT 47uF 20% 35V		C327	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C140	1-126-963-11	ELECT 4.7uF 20% 50V		C328	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C206	1-126-947-11	ELECT 47uF 20% 35V		C329	1-126-786-11	ELECT 47uF 20% 16V	
C207	1-126-947-11	ELECT 47uF 20% 35V		C334	1-126-947-11	ELECT 47uF 20% 35V	
C208	1-126-947-11	ELECT 47uF 20% 35V		C335	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C209	1-126-947-11	ELECT 47uF 20% 35V		C336	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C210	1-126-963-11	ELECT 4.7uF 20% 50V		C337	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(HX910: TW, E)
C212	1-126-963-11	ELECT 4.7uF 20% 50V		C338	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	(HX910: TW, E)
C213	1-126-947-11	ELECT 47uF 20% 35V		C341	1-126-947-11	ELECT 47uF 20% 35V	
C214	1-126-947-11	ELECT 47uF 20% 35V		C346	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C215	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C401	1-126-786-11	ELECT 47uF 20% 16V	
C216	1-126-964-11	ELECT 10uF 20% 50V		C405	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
C217	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C406	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C407	1-126-964-11	ELECT 10uF 20% 50V	
				C408	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C409	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
				C410	1-126-964-11	ELECT 10uF 20% 50V	
				C414	1-126-947-11	ELECT 47uF 20% 35V	
						(GX310:RU,SP/HX710/HX910:RU,SP)	
				C415	1-126-933-11	ELECT 100uF 20% 16V	
				C416	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	

Ref. No.	Part No.	Description	Remarks		
C422	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GX310:RU,SP/HX710/HX910:RU,SP)			
C446	1-162-927-11	CERAMIC CHIP 100PF 5% 50V			
C447	1-162-927-11	CERAMIC CHIP 100PF 5% 50V			
C449	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V			
C450	1-126-947-11	ELECT 47uF 20% 35V (GX310:E,TW/HX910:E,TW)			
C451	1-126-947-11	ELECT 47uF 20% 35V (GX310:E,TW/HX910:E,TW)			
C452	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C453	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C454	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C455	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V (GX310:E,TW/HX910:E,TW)			
C455	1-162-919-11	CERAMIC CHIP 22PF 5% 50V (GX310:RU,SP/HX710/HX910:RU,SP)			
C456	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C457	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C458	1-115-416-11	CERAMIC CHIP 0.001uF 5% 25V			
C459	1-100-927-21	CERAMIC CHIP 0.001uF 10% 630V			
C502	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C605	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C606	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C609	1-115-871-11	ELECT 1uF 20% 50V			
C611	1-126-786-11	ELECT 47uF 20% 16V			
C612	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C614	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C615	1-126-786-11	ELECT 47uF 20% 16V			
C616	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C618	1-162-919-11	CERAMIC CHIP 22PF 5% 50V			
C619	1-162-919-11	CERAMIC CHIP 22PF 5% 50V			
C620	1-162-908-11	CERAMIC CHIP 3PF 0.25PF 50V			
C621	1-162-908-11	CERAMIC CHIP 3PF 0.25PF 50V			
C623	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C624	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C625	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C626	1-104-655-91	ELECT 470uF 20% 6.3V			
C627	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C628	1-162-923-11	CERAMIC CHIP 47PF 5% 50V			
C630	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C631	1-162-923-11	CERAMIC CHIP 47PF 5% 50V			
C633	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C634	1-162-923-11	CERAMIC CHIP 47PF 5% 50V			
C635	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C636	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C637	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C638	1-164-739-11	CERAMIC CHIP 560PF 5% 50V			
C639	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C640	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V			
C641	1-125-891-11	CERAMIC CHIP 0.47uF 10% 10V			
C643	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C645	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C646	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C647	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C648	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C651	1-115-456-21	0.22F 5.5V			
C652	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C654	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C656	1-126-786-11	ELECT 47uF 20% 16V			
C658	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			

Ref. No.	Part No.	Description	Remarks		
C662	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C663	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C667	1-119-941-91	ELECT 470uF 20% 6.3V			
C703	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C705	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C706	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C707	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C710	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C713	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C714	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C715	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V			
C716	1-162-927-11	CERAMIC CHIP 100PF 5% 50V			
C717	1-126-964-11	ELECT 10uF 20% 50V			
C718	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V			
C722	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V			
C724	1-162-927-11	CERAMIC CHIP 100PF 5% 50V			
C726	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V			
C727	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C730	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (HX910: TW, E)			
C731	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C732	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C733	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C734	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C735	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C736	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C737	1-126-947-11	ELECT 47uF 20% 35V (HX910: TW, E)			
C738	1-126-964-11	ELECT 10uF 20% 50V (HX910: TW, E)			
C739	1-126-947-11	ELECT 47uF 20% 35V (GX310/HX710/HX910:RU,SP)			
C739	1-126-964-11	ELECT 10uF 20% 50V (HX910: TW, E)			
C740	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (HX910: TW, E)			
C741	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (HX910: TW, E)			
C742	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (HX910: TW, E)			
C802	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C803	1-126-947-11	ELECT 47uF 20% 35V			
C804	1-126-947-11	ELECT 47uF 20% 35V			
C805	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C806	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C807	1-126-947-11	ELECT 47uF 20% 35V			
C808	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C809	1-104-655-91	ELECT 470uF 20% 6.3V			
C810	1-126-947-11	ELECT 47uF 20% 35V			
C811	1-126-947-11	ELECT 47uF 20% 35V			
C812	1-104-655-91	ELECT 470uF 20% 6.3V			
C813	1-164-005-11	CERAMIC CHIP 0.47uF 25V			
C814	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (HX910: TW, E)			
C815	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V			
C816	1-164-005-11	CERAMIC CHIP 0.47uF 25V			
C817	1-126-947-11	ELECT 47uF 20% 35V			
C1201	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V			
C1202	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V			
C1203	1-126-947-11	ELECT 47uF 20% 35V			

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
< CONNECTOR >				L302	1-400-145-21	INDUCTOR	47uH
CN102	1-778-317-11	CONNECTOR, BOARD TO BOARD 13P		L401	1-414-183-41	INDUCTOR	10uH
* CN701	1-564-712-11	PIN, CONNECTOR (SMALL TYPE) 10P		L402	1-469-967-21	INDUCTOR	10uH
CN901	1-784-327-41	CONNECTOR, FFC/FPC 28P		L403	1-414-858-31	INDUCTOR	1mH
		(GX310:RU,SP/HX710/HX910:RU.SP)		L404	1-414-183-41	INDUCTOR	10uH
CN902	1-784-327-41	CONNECTOR, FFC/FPC 28P		L405	1-469-967-21	INDUCTOR	10uH
		(GX310:RU,SP/HX710/HX910:RU.SP)					(GX310:RU,SO/HX910:RU,SP)
* CN1201	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		L406	1-414-183-41	INDUCTOR	10uH
< DIODE >				L701	1-469-967-21	INDUCTOR	10uH
D108	6-500-451-01	DIODE CMS04-TE12R		L702	1-412-951-11	INDUCTOR	10uH (HX910:TW,E)
D109	8-719-053-18	DIODE 1SR154-400TE-25		L803	1-412-060-11	INDUCTOR	22uH
D301	8-719-902-49	DIODE BAV70		L804	1-412-060-11	INDUCTOR	22uH
D302	8-719-053-18	DIODE 1SR154-400TE-25		< IC LINK >			
D303	8-719-914-44	DIODE DAP202K		PS101	1-576-416-21	FUSE 2A 36V	
D603	8-719-075-77	DIODE EC10DA40-TE12		PS601	1-576-570-21	FUSE, MICRO (1608 TYPE)	
D604	8-719-056-82	DIODE UDZ-TE-17-6.2B		PS602	1-576-863-21	FUSE 0.5A 32V	
D605	8-719-075-77	DIODE EC10DA40-TE12		< TRANSISTOR >			
D606	8-719-988-61	DIODE 1SS355TE-17		Q101	8-729-421-19	TRANSISTOR	UN2213 (GX310:E/HX910:E)
D708	8-719-071-15	DIODE HZM6.8ZWA1TL		Q104	8-729-056-58	TRANSISTOR	TPC6102 (TE85R)
D709	8-719-071-15	DIODE HZM6.8ZWA1TL		Q106	8-729-424-08	TRANSISTOR	UN2111
D712	8-719-071-15	DIODE HZM6.8ZWA1TL		Q109	8-729-921-73	TRANSISTOR	2SD1781K-QR
D713	8-719-071-15	DIODE HZM6.8ZWA1TL		Q301	8-729-045-17	TRANSISTOR	2SB1561T100Q
D803	8-719-071-15	DIODE HZM6.8ZWA1TL (HX910: TW, E)		Q302	6-550-286-01	TRANSISTOR	BC847CE6327
D805	8-719-071-15	DIODE HZM6.8ZWA1TL		Q303	8-729-045-17	TRANSISTOR	2SB1561T100Q
D808	8-719-071-15	DIODE HZM6.8ZWA1TL		Q304	8-729-421-19	TRANSISTOR	UN2213
D809	8-719-071-15	DIODE HZM6.8ZWA1TL (HX910: TW, E)		Q306	8-729-027-53	TRANSISTOR	DTC124TKA-T146
< TERMINAL >				Q308	6-550-280-01	TRANSISTOR	BC857CE6327
* ET101	1-537-738-21	TERMINAL, EARTH		Q310	8-729-046-97	TRANSISTOR	2SD1938 (F) -T (TX).SO
< IC >				Q311	8-729-046-97	TRANSISTOR	2SD1938 (F) -T (TX).SO
IC101	6-703-758-01	IC PQ050DZ01ZPH		Q313	6-550-286-01	TRANSISTOR	BC847CE6327
IC102	6-706-740-01	IC BA00BCOWFP-E2		Q315	6-550-280-01	TRANSISTOR	BC857CE6327
IC105	6-706-725-01	IC PQ070XZ02ZPH		Q316	8-729-421-19	TRANSISTOR	UN2213
IC106	6-706-725-01	IC PQ070XZ02ZPH		Q401	6-550-286-01	TRANSISTOR	BC847CE6327
IC107	6-706-726-01	IC PQ033DZ01ZPH		Q402	8-729-421-22	TRANSISTOR	UN2211
IC108	6-706-237-01	IC PQ1MX55M2SPQ		Q403	8-729-010-25	TRANSISTOR	MSD601-RT1
IC111	6-706-724-01	IC S-8520E25MC-BJKT2G					(GX310:RU,SP/HX710/HX910:RU.SP)
IC201	6-707-181-01	IC AK5366VQ-L		Q404	8-729-904-87	TRANSISTOR	2SB1197K-R
IC301	6-707-187-01	IC HA17558AFEL-E		Q405	6-550-286-01	TRANSISTOR	BC847CE6327
IC302	6-705-337-01	IC TK11150CSC-LG		Q407	8-729-421-19	TRANSISTOR	UN2213
IC401	8-749-925-00	IC TK11819MTL		Q410	8-729-421-22	TRANSISTOR	UN2211
IC601	6-706-673-01	IC S-80852CNMC-B9DT2G					(GX310:RU,SP/HX710/HX910:RU.SP)
IC602	6-703-225-01	IC S-80928CNMC-G8YT2G		Q412	8-729-904-87	TRANSISTOR	2SB1197K-R
IC604	6-708-098-01	IC M306H3MC-061FPU2					(GX310:RU,SP/HX710/HX910:RU.SP)
IC605	8-759-679-19	IC S-24C04BFJ-TB		Q602	8-729-045-17	TRANSISTOR	2SB1561T100Q
IC701	6-706-723-01	IC BH7623KS2		Q604	6-550-280-01	TRANSISTOR	BC857CE6327
IC801	6-706-743-01	IC TK72250CMCL-G		Q605	6-550-286-01	TRANSISTOR	BC847CE6327
IC802	6-704-839-01	IC LA73056-TLM-E		Q606	8-729-421-19	TRANSISTOR	UN2213
IC1201	6-705-308-01	IC SI-3010KM-TL (GX310:E/HX910:E)		Q607	8-729-901-06	TRANSISTOR	DTA144EK
IC1201	6-706-742-01	IC BD7800FP-E2 (EXCEPT GX310:E/HX910:E)		Q608	8-729-048-28	TRANSISTOR	2SD1766-T100-QR
< COIL >				Q616	8-729-421-22	TRANSISTOR	UN2211
L101	1-414-740-21	INDUCTOR	4.7uH	Q617	8-729-045-17	TRANSISTOR	2SB1561T100Q
L103	1-456-918-11	INDUCTOR	22uH	Q618	8-729-010-05	TRANSISTOR	MSB709-RT1
L105	1-412-521-31	INDUCTOR	4.7uH	Q619	8-729-421-22	TRANSISTOR	UN2211
L106	1-412-521-31	INDUCTOR	4.7uH	Q703	6-550-280-01	TRANSISTOR	BC857CE6327 (HX910:TW,E)
L301	1-412-062-11	INDUCTOR	47uH	Q705	6-550-280-01	TRANSISTOR	BC857CE6327 (HX910:TW,E)

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
Q801	8-729-010-25	TRANSISTOR	MSD601-RT1				R227	1-218-887-11	METAL CHIP	47K	0.5%	1/10W	
Q802	8-729-010-25	TRANSISTOR	MSD601-RT1				R228	1-216-841-11	METAL CHIP	47K	5%	1/10W	
Q803	8-729-010-25	TRANSISTOR	MSD601-RT1				R229	1-216-837-11	METAL CHIP	22K	5%	1/10W	
Q804	8-729-010-25	TRANSISTOR	MSD601-RT1				R230	1-216-837-11	METAL CHIP	22K	5%	1/10W	
Q805	8-729-010-25	TRANSISTOR	MSD601-RT1				R231	1-216-837-11	METAL CHIP	22K	5%	1/10W	
Q806	8-729-010-25	TRANSISTOR	MSD601-RT1				R232	1-216-801-11	METAL CHIP	22	5%	1/10W	
Q807	8-729-421-19	TRANSISTOR	UN2213				R233	1-216-801-11	METAL CHIP	22	5%	1/10W	
Q808	8-729-901-06	TRANSISTOR	DTA144EK				R235	1-216-833-11	METAL CHIP	10K	5%	1/10W	
Q1201	8-729-421-19	TRANSISTOR	UN2213				R236	1-216-833-11	METAL CHIP	10K	5%	1/10W	
		< RESISTOR >					R237	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R102	1-216-864-11	SHORT CHIP	0				R238	1-216-809-11	METAL CHIP	100	5%	1/10W	
			(EXCEPT GX310:E/HX910:E)				R239	1-216-809-11	METAL CHIP	100	5%	1/10W	
R112	1-216-864-11	SHORT CHIP	0				R240	1-216-801-11	METAL CHIP	22	5%	1/10W	
R116	1-218-895-11	METAL CHIP	100K	0.5%	1/10W		R245	1-216-801-11	METAL CHIP	22	5%	1/10W	
R117	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W		R301	1-216-049-11	RES-CHIP	1K	5%	1/10W	
R118	1-218-883-11	METAL CHIP	33K	0.5%	1/10W		R302	1-216-041-00	RES-CHIP	470	5%	1/10W	
R121	1-216-295-91	SHORT CHIP	0				R307	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W	
R125	1-216-295-91	SHORT CHIP	0				R308	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W	
R129	1-216-295-91	SHORT CHIP	0				R309	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W	
R130	1-216-295-91	SHORT CHIP	0				R310	1-218-869-11	METAL CHIP	8.2K	0.5%	1/10W	
R131	1-216-033-00	RES-CHIP	220	5%	1/10W		R311	1-216-849-11	METAL CHIP	220K	5%	1/10W	
R134	1-218-849-11	METAL CHIP	1.2K	0.5%	1/10W		R312	1-216-817-11	METAL CHIP	470	5%	1/10W	
R135	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W		R313	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R136	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W		R314	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	
R137	1-218-839-11	METAL CHIP	470	0.5%	1/10W		R315	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	
R138	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W		R316	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R139	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W		R317	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R143	1-216-295-91	SHORT CHIP	0				R318	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R144	1-216-295-91	SHORT CHIP	0				R319	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	
R148	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		R320	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R150	1-216-206-00	RES-CHIP	2.2K	5%	1/8W		R321	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R151	1-216-206-00	RES-CHIP	2.2K	5%	1/8W		R322	1-216-823-11	METAL CHIP	1.5K	5%	1/10W	
R152	1-216-833-11	METAL CHIP	10K	5%	1/10W		R323	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	
R156	1-216-295-91	SHORT CHIP	0				R324	1-218-871-11	METAL CHIP	10K	0.5%	1/10W	
R157	1-216-295-91	SHORT CHIP	0				R325	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R163	1-216-295-91	SHORT CHIP	0				R327	1-216-817-11	METAL CHIP	470	5%	1/10W	
R175	1-216-295-91	SHORT CHIP	0				R328	1-216-817-11	METAL CHIP	470	5%	1/10W	
R177	1-216-296-11	SHORT CHIP	0				R329	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R178	1-216-864-11	SHORT CHIP	0				R331	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R179	1-216-864-11	SHORT CHIP	0				R332	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R180	1-216-864-11	SHORT CHIP	0				R333	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R182	1-218-835-11	METAL CHIP	330	0.5%	1/10W		R334	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R183	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W		R337	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R185	1-218-847-11	METAL CHIP	1K	0.5%	1/10W		R341	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R186	1-216-295-91	SHORT CHIP	0				R342	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R188	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W		R343	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R206	1-216-864-11	SHORT CHIP	0				R345	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R211	1-216-864-11	SHORT CHIP	0				R347	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R218	1-218-887-11	METAL CHIP	47K	0.5%	1/10W		R348	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R219	1-218-887-11	METAL CHIP	47K	0.5%	1/10W		R353	1-216-817-11	METAL CHIP	470	5%	1/10W	
R220	1-218-887-11	METAL CHIP	47K	0.5%	1/10W								(HX910:TW,E)
R221	1-216-841-11	METAL CHIP	47K	5%	1/10W		R354	1-216-817-11	METAL CHIP	470	5%	1/10W	
R222	1-218-871-11	METAL CHIP	10K	0.5%	1/10W		R355	1-216-817-11	METAL CHIP	470	5%	1/10W	
R224	1-218-887-11	METAL CHIP	47K	0.5%	1/10W								(HX910:TW,E)
R225	1-218-871-11	METAL CHIP	10K	0.5%	1/10W		R356	1-216-817-11	METAL CHIP	470	5%	1/10W	
R226	1-218-887-11	METAL CHIP	47K	0.5%	1/10W		R358	1-216-807-11	METAL CHIP	68	5%	1/10W	
							R362	1-216-809-11	METAL CHIP	100	5%	1/10W	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R363	1-216-833-11	METAL CHIP	10K 5% 1/10W	R633	1-216-864-11	SHORT CHIP	0
R364	1-216-864-11	SHORT CHIP	0 (HX910:TW,E)	R634	1-216-864-11	SHORT CHIP	0
R365	1-216-864-11	SHORT CHIP	0	R637	1-216-853-11	METAL CHIP	470K 5% 1/10W
R366	1-216-864-11	SHORT CHIP	0 (HX910:TW,E)	R638	1-216-833-11	METAL CHIP	10K 5% 1/10W
R367	1-216-864-11	SHORT CHIP	0	R640	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R386	1-216-864-11	SHORT CHIP	0	R641	1-216-057-00	RES-CHIP	2.2K 5% 1/10W
R388	1-216-821-11	METAL CHIP	1K 5% 1/10W	R642	1-216-841-11	METAL CHIP	47K 5% 1/10W
R389	1-216-813-11	METAL CHIP	220 5% 1/10W	R644	1-216-833-11	METAL CHIP	10K 5% 1/10W
R401	1-216-864-11	SHORT CHIP	0	R646	1-216-809-11	METAL CHIP	100 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R647	1-216-833-11	METAL CHIP	10K 5% 1/10W
R402	1-216-864-11	SHORT CHIP	0	R648	1-216-851-11	METAL CHIP	330K 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R650	1-216-817-11	METAL CHIP	470 5% 1/10W
R403	1-216-845-11	METAL CHIP	100K 5% 1/10W	R651	1-216-864-11	SHORT CHIP	0
		(GX310:TW,E/HX910:TW,E)		R652	1-216-809-11	METAL CHIP	100 5% 1/10W
R404	1-216-845-11	METAL CHIP	100K 5% 1/10W	R653	1-216-809-11	METAL CHIP	100 5% 1/10W
		(GX310:TW,E/HX910:TW,E)		R654	1-216-809-11	METAL CHIP	100 5% 1/10W
R405	1-216-821-11	METAL CHIP	1K 5% 1/10W	R655	1-216-809-11	METAL CHIP	100 5% 1/10W
R406	1-216-833-11	METAL CHIP	10K 5% 1/10W	R656	1-216-833-11	METAL CHIP	10K 5% 1/10W
R407	1-216-821-11	METAL CHIP	1K 5% 1/10W	R657	1-216-833-11	METAL CHIP	10K 5% 1/10W
		(RU, SP, SP(3), SP(8), AUS)		R658	1-216-864-11	SHORT CHIP	0
R409	1-216-821-11	METAL CHIP	1K 5% 1/10W	R660	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R410	1-216-809-11	METAL CHIP	100 5% 1/10W	R661	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R411	1-216-809-11	METAL CHIP	100 5% 1/10W	R663	1-216-833-11	METAL CHIP	10K 5% 1/10W
		(RU, SP, SP(3), SP(8), AUS)		R664	1-216-809-11	METAL CHIP	100 5% 1/10W
R412	1-216-809-11	METAL CHIP	100 5% 1/10W	R665	1-216-833-11	METAL CHIP	10K 5% 1/10W
R413	1-216-817-11	METAL CHIP	470 5% 1/10W	R668	1-216-809-11	METAL CHIP	100 5% 1/10W
R414	1-216-845-11	METAL CHIP	100K 5% 1/10W	R669	1-216-809-11	METAL CHIP	100 5% 1/10W
R415	1-216-838-11	METAL CHIP	27K 5% 1/10W	R670	1-216-809-11	METAL CHIP	100 5% 1/10W
R418	1-216-845-11	METAL CHIP	100K 5% 1/10W	R671	1-218-289-11	METAL CHIP	510 5% 1/10W
R420	1-216-809-11	METAL CHIP	100 5% 1/10W	R672	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R422	1-216-809-11	METAL CHIP	100 5% 1/10W				
		(GX310:RU,SP/HX710/HX910:RU.SP)		R673	1-216-833-11	METAL CHIP	10K 5% 1/10W
R423	1-216-864-11	SHORT CHIP	0	R674	1-216-821-11	METAL CHIP	1K 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R675	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R428	1-216-817-11	METAL CHIP	470 5% 1/10W	R676	1-216-833-11	METAL CHIP	10K 5% 1/10W
		(GX310:TW,E/HX910:TW,E)		R677	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R428	1-216-821-11	METAL CHIP	1K 5% 1/10W	R678	1-218-859-11	METAL CHIP	3.3K 0.5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R680	1-216-833-11	METAL CHIP	10K 5% 1/10W
R429	1-216-817-11	METAL CHIP	470 5% 1/10W	R681	1-216-864-11	SHORT CHIP	0
		(GX310:RU,SP/HX710/HX910:RU.SP)		R686	1-218-875-11	METAL CHIP	15K 0.5% 1/10W
R429	1-216-821-11	METAL CHIP	1K 5% 1/10W	R687	1-216-833-11	METAL CHIP	10K 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R688	1-216-833-11	METAL CHIP	10K 5% 1/10W
R439	1-216-833-11	METAL CHIP	10K 5% 1/10W	R689	1-216-833-11	METAL CHIP	10K 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R690	1-216-833-11	METAL CHIP	10K 5% 1/10W
R441	1-216-821-11	METAL CHIP	1K 5% 1/10W	R692	1-216-864-11	SHORT CHIP	0
		(GX310:RU,SP/HX710/HX910:RU.SP)		R693	1-216-809-11	METAL CHIP	100 5% 1/10W
R475	1-216-864-11	SHORT CHIP	0	R694	1-216-809-11	METAL CHIP	100 5% 1/10W
R477	1-216-864-11	SHORT CHIP	0	R696	1-216-817-11	METAL CHIP	470 5% 1/10W
		(GX310:RU,SP/HX710/HX910:RU.SP)		R699	1-216-809-11	METAL CHIP	100 5% 1/10W
R479	1-216-295-91	SHORT CHIP	0	R703	1-216-864-11	SHORT CHIP	0
		(GX310:RU,SP/HX710/HX910:RU.SP)		R706	1-216-845-11	METAL CHIP	100K 5% 1/10W
R480	1-216-295-91	SHORT CHIP	0 (GX310:TW,E/HX910:TW,E)	R707	1-216-864-11	SHORT CHIP	0
R481	1-216-295-91	SHORT CHIP	0 (GX310:TW,E/HX910:TW,E)	R711	1-216-851-11	METAL CHIP	330K 5% 1/10W
R482	1-216-809-11	METAL CHIP	100 5% 1/10W	R712	1-216-851-11	METAL CHIP	330K 5% 1/10W
		(GX310:TW,E/HX910:TW,E)		R722	1-216-801-11	METAL CHIP	22 5% 1/10W
R483	1-216-809-11	METAL CHIP	100 5% 1/10W				(HX910:TW,E)
		(GX310:TW,E/HX910:TW,E)		R725	1-216-809-11	METAL CHIP	100 5% 1/10W
R614	1-216-833-11	METAL CHIP	10K 5% 1/10W				(HX910:TW,E)
R620	1-216-813-11	METAL CHIP	220 5% 1/10W				
R629	1-216-817-11	METAL CHIP	470 5% 1/10W				
R630	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W				
R631	1-218-852-11	METAL CHIP	1.6K 0.5% 1/10W				
R632	1-216-855-11	METAL CHIP	680K 5% 1/10W				

Ref. No.	Part No.	Description	Remarks		
R727	1-218-285-11	METAL CHIP	75	5%	1/10W (HX910:TW,E)
R730	1-218-285-11	METAL CHIP	75	5%	1/10W
R731	1-218-285-11	METAL CHIP	75	5%	1/10W
R732	1-218-285-11	METAL CHIP	75	5%	1/10W
R733	1-216-864-11	SHORT CHIP	0		
R734	1-218-285-11	METAL CHIP	75	5%	1/10W (HX910:TW,E)
R736	1-216-801-11	METAL CHIP	22	5%	1/10W (HX910:TW,E)
R738	1-216-864-11	SHORT CHIP	0		(GX310/HX710/HX910:RU,SP)
R739	1-218-285-11	METAL CHIP	75	5%	1/10W
R740	1-218-285-11	METAL CHIP	75	5%	1/10W
R741	1-218-285-11	METAL CHIP	75	5%	1/10W
R742	1-216-809-11	METAL CHIP	100	5%	1/10W (HX910:TW,E)
R743	1-218-285-11	METAL CHIP	75	5%	1/10W (HX910:TW,E)
R744	1-216-295-91	SHORT CHIP	0		
R746	1-216-864-11	SHORT CHIP	0		
R750	1-216-864-11	SHORT CHIP	0		(HX910:TW,E)
R751	1-216-853-11	METAL CHIP	470K	5%	1/10W
R752	1-216-853-11	METAL CHIP	470K	5%	1/10W
R803	1-216-801-11	METAL CHIP	22	5%	1/10W
R805	1-216-801-11	METAL CHIP	22	5%	1/10W
R807	1-216-801-11	METAL CHIP	22	5%	1/10W
R809	1-216-801-11	METAL CHIP	22	5%	1/10W
R811	1-216-801-11	METAL CHIP	22	5%	1/10W
R813	1-216-801-11	METAL CHIP	22	5%	1/10W
R815	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R816	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R817	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R818	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R819	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R820	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R822	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R824	1-216-833-11	METAL CHIP	10K	5%	1/10W (HX910:TW,E)
R825	1-216-833-11	METAL CHIP	10K	5%	1/10W
R826	1-216-807-11	METAL CHIP	68	5%	1/10W
R827	1-216-807-11	METAL CHIP	68	5%	1/10W (HX910:TW,E)
R828	1-216-807-11	METAL CHIP	68	5%	1/10W (HX910:TW,E)
R829	1-216-807-11	METAL CHIP	68	5%	1/10W
R830	1-216-807-11	METAL CHIP	68	5%	1/10W
R831	1-216-807-11	METAL CHIP	68	5%	1/10W (HX910:TW,E)
R832	1-216-807-11	METAL CHIP	68	5%	1/10W
R833	1-216-807-11	METAL CHIP	68	5%	1/10W
R834	1-216-807-11	METAL CHIP	68	5%	1/10W
R852	1-216-295-91	SHORT CHIP	0		
R854	1-216-864-11	SHORT CHIP	0		
R855	1-216-841-11	METAL CHIP	47K	5%	1/10W
R856	1-216-295-91	SHORT CHIP	0		
R857	1-216-295-91	SHORT CHIP	0		
R858	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1201	1-216-295-91	SHORT CHIP	0		
R1202	1-218-894-11	METAL CHIP	91K	0.5%	1/10W (EXCEPT GX310:E/HX910:E)

Ref. No.	Part No.	Description	Remarks		
R1202	1-218-895-11	METAL CHIP	100K	0.5%	1/10W (GX310:E/HX910:E)
R1203	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W (EXCEPT GX310:E/HX910:E)
R1203	1-218-871-11	METAL CHIP	10K	0.5%	1/10W (GX310:E/HX910:E)
R1204	1-218-857-11	METAL CHIP	2.7K	0.5%	1/10W (GX310: RU, SP, TW)
R1204	1-218-859-11	METAL CHIP	3.3K	0.5%	1/10W (HX710/HX910: RU, SP, TW)
R1204	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W (GX310: E)
R1204	1-218-865-11	METAL CHIP	5.6K	0.5%	1/10W (HX910:E)
R1205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1605	1-216-809-11	METAL CHIP	100	5%	1/10W
R1606	1-216-809-11	METAL CHIP	100	5%	1/10W
R1607	1-216-809-11	METAL CHIP	100	5%	1/10W
R1608	1-216-864-11	SHORT CHIP	0		
R1610	1-216-809-11	METAL CHIP	100	5%	1/10W
R1611	1-216-809-11	METAL CHIP	100	5%	1/10W
R1612	1-216-809-11	METAL CHIP	100	5%	1/10W
R1616	1-216-809-11	METAL CHIP	100	5%	1/10W
R1617	1-216-864-11	SHORT CHIP	0		
R1618	1-216-833-11	METAL CHIP	10K	5%	1/10W (GX310:RU,SP/HX710/HX910:RU,SP)
R1619	1-216-809-11	METAL CHIP	100	5%	1/10W
R1620	1-216-833-11	METAL CHIP	10K	5%	1/10W (GX310:E,TW/HX910:E,TW)
R1622	1-216-833-11	METAL CHIP	10K	5%	1/10W (GX310:RU,SP/HX710/HX910:RU,SP)
R1623	1-216-833-11	METAL CHIP	10K	5%	1/10W (GX310:TW,E/HX910:TW,E)
R1634	1-216-809-11	METAL CHIP	100	5%	1/10W
R1638	1-216-864-11	SHORT CHIP	0		
R1639	1-216-864-11	SHORT CHIP	0		
R1641	1-216-809-11	METAL CHIP	100	5%	1/10W
R1643	1-216-809-11	METAL CHIP	100	5%	1/10W
R1645	1-216-809-11	METAL CHIP	100	5%	1/10W
R1650	1-216-809-11	METAL CHIP	100	5%	1/10W
R1651	1-216-809-11	METAL CHIP	100	5%	1/10W
R1653	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1654	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1655	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1656	1-216-849-11	METAL CHIP	220K	5%	1/10W
R1657	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1658	1-216-815-11	METAL CHIP	330	5%	1/10W
R1662	1-216-864-11	SHORT CHIP	0		(GX310:RU,SP/HX710/HX910:RU,SP)
R1664	1-216-864-11	SHORT CHIP	0		
R1670	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1672	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1684	1-216-864-11	SHORT CHIP	0		
R1687	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1688	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R1690	1-216-057-00	RES-CHIP	2.2K	5%	1/10W

< THERMISTOR >

TH001 1-803-384-11 THERMISTOR (1608)

AV-089

CN-243

EM-001

FL-144

Ref. No.	Part No.	Description	Remarks
< TUNER UNIT >			
TU401	1-693-690-11	TUNER (BTF-3WA401) (GX310:TW,E/HX910:TW,E)	
TU401	8-597-979-00	TUNER, FSS BTF-DF421 (GX310:RU,SP/HX710/HX910:RU,SP)	
< VIBRATOR >			
X601	1-781-913-11	VIBRATOR, CRYSTAL (10MHz)	
X602	1-813-436-11	VIBRATOR, CRYSTAL (SMD) (32.768KHz)	
not supplied CN-243 (JB) BOARD, COMPLETE (HX710/HX910) *****			
< CONNECTOR >			
CN1801	1-818-021-11	PIN, CONNECTOR 40P	
not supplied EM-001 (S) BOARD, COMPLETE (GX310:RU,SP/HX710/HX910:RU,SP) ***** Ref.No.:50000 series			
< CAPACITOR >			
C301	1-126-204-11	ELECT CHIP 47uF 20% 16V	
C302	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C303	1-163-245-11	CERAMIC CHIP 56PF 5% 50V	
C304	1-163-087-00	CERAMIC CHIP 4PF 0.25PF 50V	
C305	1-163-087-00	CERAMIC CHIP 4PF 0.25PF 50V	
C306	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C307	1-163-245-11	CERAMIC CHIP 56PF 5% 50V	
C308	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C309	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C310	1-124-779-00	ELECT CHIP 10uF 20% 16V	
C311	1-126-602-11	ELECT CHIP 3.3uF 20% 50V	
C312	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C313	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C314	1-124-779-00	ELECT CHIP 10uF 20% 16V	
C315	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	
C316	1-126-204-11	ELECT CHIP 47uF 20% 16V	
C317	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C318	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
C319	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
< CONNECTOR >			
CN301	1-770-710-21	CONNECTOR, FFC/FPC 28P	
CN302	1-770-710-21	CONNECTOR, FFC/FPC 28P	
< DIODE >			
D301	8-719-988-61	DIODE 1SS355TE-17	
< IC >			
IC301	6-702-714-01	IC MSP3417G-QG-B8V3	

Ref. No.	Part No.	Description	Remarks
< JUMPER RESISTOR >			
JR301	1-216-295-91	SHORT CHIP 0	
JR302	1-216-295-91	SHORT CHIP 0	
JR303	1-216-295-91	SHORT CHIP 0	
JR304	1-216-295-91	SHORT CHIP 0	
JR305	1-216-295-91	SHORT CHIP 0	
JR306	1-216-295-91	SHORT CHIP 0	
JR307	1-216-295-91	SHORT CHIP 0	
JR308	1-216-295-91	SHORT CHIP 0	
JR309	1-216-295-91	SHORT CHIP 0	
JR310	1-216-295-91	SHORT CHIP 0	
JR311	1-216-295-91	SHORT CHIP 0	
JR312	1-216-295-91	SHORT CHIP 0	
JR313	1-216-295-91	SHORT CHIP 0	
JR314	1-216-295-91	SHORT CHIP 0	
< COIL >			
L301	1-400-145-21	INDUCTOR 47uH	
< IC LINK >			
PS301	1-576-508-21	IC LINK 0.7A 50V	
< TRANSISTOR >			
Q301	8-729-010-05	TRANSISTOR MSB709-RT1	
Q302	8-729-010-25	TRANSISTOR MSD601-RT1	
< RESISTOR >			
R301	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R302	1-216-053-00	RES-CHIP 1.5K 5% 1/10W	
R303	1-216-049-11	RES-CHIP 1K 5% 1/10W	
R305	1-216-295-91	SHORT CHIP 0	
R306	1-216-025-11	RES-CHIP 100 5% 1/10W	
R307	1-216-045-00	RES-CHIP 680 5% 1/10W	
R308	1-216-025-11	RES-CHIP 100 5% 1/10W	
R309	1-216-025-11	RES-CHIP 100 5% 1/10W	
R310	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R311	1-216-057-00	RES-CHIP 2.2K 5% 1/10W	
R312	1-216-099-00	RES-CHIP 120K 5% 1/10W	
< VIBRATOR >			
X301	1-795-612-11	VIBRATOR, CRYSTAL (18.432MHz)	
* A-1122-393-A FL-144 (SU) COMPL ***** Ref.No.:40000 series			
< CAPACITOR >			
C1303	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C1304	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C1306	1-125-972-91	ELECT 100uF 20% 16V	
C1307	1-124-589-11	ELECT 47uF 20% 16V	
C1308	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	

Ref. No.	Part No.	Description	Remarks
C1309	1-106-363-00	MYLAR 0.0068uF 5%	100V
C1311	1-162-922-11	CERAMIC CHIP 39PF 5%	50V
C1312	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
C1314	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
C1315	1-128-131-11	ELECT 22uF 20%	50V
C1318	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
< CONNECTOR >			
CN1302	1-774-729-21	PIN, CONNECTOR (PC BOARD) 10P	
< DIODE >			
D1303	8-719-067-40	DIODE STZ6.8N-T146	
D1304	8-719-067-40	DIODE STZ6.8N-T146	
D1305	8-719-067-40	DIODE STZ6.8N-T146	
D1306	8-719-067-40	DIODE STZ6.8N-T146	
D1307	8-719-067-40	DIODE STZ6.8N-T146	
D1308	8-719-067-40	DIODE STZ6.8N-T146	
D1312	8-719-988-61	DIODE 1SS355TE-17	
D1313	8-719-988-61	DIODE 1SS355TE-17	
D1314	8-719-988-61	DIODE 1SS355TE-17	
D1315	8-719-988-61	DIODE 1SS355TE-17	
D1317	8-719-056-82	DIODE Udz-TE-17-6.2B	
< IC >			
IC1301	6-706-722-01	IC ML9208-06MBZ03W	
< JACK >			
J1301	1-780-049-11	TERMINAL BOARD (S TERMINAL+3P)(INPUT 2)	
< COIL >			
L1301	1-412-537-31	INDUCTOR 100uH	
< TRANSISTOR >			
Q1303	8-729-901-88	TRANSISTOR 2SC2411K-CR	
Q1304	8-729-901-88	TRANSISTOR 2SC2411K-CR	
< RESISTOR >			
R1301	1-218-285-11	METAL CHIP 75 5% 1/10W	
R1302	1-218-285-11	METAL CHIP 75 5% 1/10W	
R1303	1-216-864-11	SHORT CHIP 0	
R1304	1-216-864-11	SHORT CHIP 0	
R1305	1-216-864-11	SHORT CHIP 0	
R1306	1-218-285-11	METAL CHIP 75 5% 1/10W	
R1310	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R1311	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R1314	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R1316	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1317	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1318	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1319	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1320	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R1323	1-216-838-11	METAL CHIP 27K 5% 1/10W	
R1324	1-216-864-11	SHORT CHIP 0	
R1325	1-216-864-11	SHORT CHIP 0	
R1326	1-216-864-11	SHORT CHIP 0	
R1327	1-216-296-11	SHORT CHIP 0	

Ref. No.	Part No.	Description	Remarks
< SWITCH >			
S1302	1-771-410-21	SWITCH, TACT	
< TRANSFORMER >			
T1301	1-443-502-11	TRANSFORMER, DC-DC CONVERTER	
* A-1121-022-A FR-226 (CS) COMPL (GX310)			

Ref.No.:40000 series			
< CAPACITOR >			
C102	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
C103	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
C104	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
< CONNECTOR >			
CN101	1-793-600-11	CONNECTOR, FFC/FPC (ZIF) 17P	
CN102	1-794-479-11	CONNECTOR, FPC/FFC 9P	
* CN103	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P	
CN104	1-785-828-21	CONNECTOR, SQUARE TYPE 4P (DV IN)	
< DIODE >			
D101	8-719-077-79	DIODE SLR-332VRT32	
D102	8-719-077-79	DIODE SLR-332VRT32	
< TERMINAL >			
* ET101	1-537-738-21	TERMINAL, EARTH	
< IC >			
IC101	6-600-392-01	IC GP1UM27XK0SF	
IC102	6-706-783-01	IC BU2050F-E2	
< JUMPER RESISTOR >			
JR101	1-216-296-11	SHORT CHIP 0	
JR102	1-216-295-91	SHORT CHIP 0	
JR103	1-216-296-11	SHORT CHIP 0	
JR104	1-216-296-11	SHORT CHIP 0	
JR105	1-216-295-91	SHORT CHIP 0	
JR106	1-216-296-11	SHORT CHIP 0	
JR107	1-216-296-11	SHORT CHIP 0	
JR108	1-216-296-11	SHORT CHIP 0	
JR109	1-216-296-11	SHORT CHIP 0	
JR110	1-216-296-11	SHORT CHIP 0	
JR111	1-216-296-11	SHORT CHIP 0	
JR112	1-216-296-11	SHORT CHIP 0	
JR113	1-216-296-11	SHORT CHIP 0	
JR114	1-216-296-11	SHORT CHIP 0	
JR115	1-216-295-91	SHORT CHIP 0	
JR116	1-216-295-91	SHORT CHIP 0	
JR118	1-216-295-91	SHORT CHIP 0	
JR120	1-216-295-91	SHORT CHIP 0	
JR121	1-216-296-11	SHORT CHIP 0	
JR122	1-216-296-11	SHORT CHIP 0	
JR123	1-216-295-91	SHORT CHIP 0	
JR124	1-216-296-11	SHORT CHIP 0	
JR125	1-216-296-11	SHORT CHIP 0	
JR126	1-216-296-11	SHORT CHIP 0	
JR127	1-216-296-11	SHORT CHIP 0	

8-13

Ref. No.	Part No.	Description	Remarks
JR017	1-216-296-11	SHORT CHIP	0
JR018	1-216-295-91	SHORT CHIP	0
JR019	1-216-296-11	SHORT CHIP	0
JR020	1-216-296-11	SHORT CHIP	0
JR021	1-216-295-91	SHORT CHIP	0
JR022	1-216-295-91	SHORT CHIP	0
JR023	1-216-295-91	SHORT CHIP	0
JR024	1-216-296-11	SHORT CHIP	0
JR025	1-216-295-91	SHORT CHIP	0
JR026	1-216-296-11	SHORT CHIP	0
JR027	1-216-295-91	SHORT CHIP	0
JR029	1-216-295-91	SHORT CHIP	0
JR030	1-216-295-91	SHORT CHIP	0
JR031	1-216-295-91	SHORT CHIP	0
JR032	1-216-295-91	SHORT CHIP	0
JR033	1-216-296-11	SHORT CHIP	0
JR035	1-216-295-91	SHORT CHIP	0
JR036	1-216-295-91	SHORT CHIP	0
JR071	1-216-296-11	SHORT CHIP	0
JR072	1-216-296-11	SHORT CHIP	0
JR073	1-216-295-91	SHORT CHIP	0
JR074	1-216-295-91	SHORT CHIP	0
JR075	1-216-295-91	SHORT CHIP	0
JR077	1-216-295-91	SHORT CHIP	0
JR078	1-216-296-11	SHORT CHIP	0
JR080	1-216-296-11	SHORT CHIP	0
< TRANSISTOR >			
Q101	8-729-027-43	TRANSISTOR	DTC114EKA-T146
Q102	8-729-010-05	TRANSISTOR	MSB709-RT1
< RESISTOR >			
R101	1-216-295-91	SHORT CHIP	0
R102	1-216-864-11	SHORT CHIP	0
R103	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R104	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R105	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R106	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
R109	1-216-864-11	SHORT CHIP	0
R110	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
R111	1-216-832-11	METAL CHIP	8.2K 5% 1/10W
R112	1-216-837-11	METAL CHIP	22K 5% 1/10W
R114	1-216-829-11	METAL CHIP	4.7K 5% 1/10W
R115	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R116	1-216-813-11	METAL CHIP	220 5% 1/10W
R117	1-216-813-11	METAL CHIP	220 5% 1/10W
R118	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R119	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R120	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R121	1-216-830-11	METAL CHIP	5.6K 5% 1/10W
R122	1-216-832-11	METAL CHIP	8.2K 5% 1/10W
R124	1-216-864-11	SHORT CHIP	0
R125	1-216-811-11	METAL CHIP	150 5% 1/10W
R126	1-216-818-11	METAL CHIP	560 5% 1/10W
R129	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R130	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R131	1-216-830-11	METAL CHIP	5.6K 5% 1/10W

Ref. No.	Part No.	Description	Remarks
R132	1-216-832-11	METAL CHIP	8.2K 5% 1/10W
R134	1-216-837-11	METAL CHIP	22K 5% 1/10W
R136	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R137	1-216-827-11	METAL CHIP	3.3K 5% 1/10W
R138	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R139	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
< SWITCH >			
S101	1-771-410-21	SWITCH, TACT	
S102	1-771-410-21	SWITCH, TACT	
S103	1-771-410-21	SWITCH, TACT	
S104	1-771-410-21	SWITCH, TACT	
S105	1-771-410-21	SWITCH, TACT	
S106	1-771-410-21	SWITCH, TACT	
S107	1-771-410-21	SWITCH, TACT	
S108	1-771-410-21	SWITCH, TACT	
S109	1-771-410-21	SWITCH, TACT	
S110	1-771-410-21	SWITCH, TACT	
S112	1-771-410-21	SWITCH, TACT	
S113	1-771-410-21	SWITCH, TACT	
S114	1-771-410-21	SWITCH, TACT	
S115	1-771-410-21	SWITCH, TACT	
S116	1-771-410-21	SWITCH, TACT	
S119	1-771-410-21	SWITCH, TACT	
S120	1-771-410-21	SWITCH, TACT	
S121	1-771-410-21	SWITCH, TACT	
S122	1-771-410-21	SWITCH, TACT	
S123	1-786-793-11	SWITCH, TACTILE (R/U/L/D-ENTER)	

*	A-1121-010-A	RD-051 (AS) S COMPL(SERVICE)(GX310: E)	

*	A-1121-027-A	RD-051 (BS) S COMPL(SERVICE)(HX910: E)	

*	A-1121-017-A	RD-051 (CS) S COMPL(SERVICE)(GX310: RU)	

*	A-1121-034-A	RD-051 (DS) S COMPL(SERVICE)(HX910:RU)	

*	A-1133-334-A	RD-051 (AST) S COMPL(SERVICE)(HX310:TW)	

*	A-1138-667-A	RD-051 (CSS) S COMPL(SERVICE)(HX310:SP)	

*	A-1138-665-A	RD-051 (DSA) S COMPL(SERVICE)(HX710)	

*	A-1133-337-A	RD-051 (BST) S COMPL(SERVICE)(HX910:TW)	

*	A-1138-666-A	RD-051 (DSS) S COMPL(SERVICE)(HX910:SP)	

Ref.No.:20000 series			
< CAPACITOR >			
C104	1-126-208-21	ELECT CHIP	47uF 20% 4V
C107	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C110	1-126-208-21	ELECT CHIP	47uF 20% 4V
C112	1-124-779-00	ELECT CHIP	10uF 20% 16V
C113	1-124-779-00	ELECT CHIP	10uF 20% 16V
C114	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C115	1-164-848-11	CERAMIC CHIP	8PF 0.5PF 50V
C116	1-164-848-11	CERAMIC CHIP	8PF 0.5PF 50V
C117	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C118	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C119	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C331	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C120	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C332	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C121	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C333	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C122	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C334	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C123	1-124-779-00	ELECT CHIP	10uF	20%	16V		C335	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C124	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C336	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C126	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C337	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C127	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C338	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C128	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C339	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C129	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C340	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C130	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C342	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
		(EXCEPT GX310:E/HX910:E)					C343	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C131	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C344	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C132	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C345	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C133	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C134	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V								
C135	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C402	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C136	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C403	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C137	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C404	1-126-208-21	ELECT CHIP	47uF	20%	4V	
C138	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C508	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C139	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C509	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C140	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C511	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C141	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C512	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C142	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C513	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C143	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C514	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C144	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C515	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C202	1-164-874-11	CERAMIC CHIP	100PF	5%	50V		C516	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C203	1-126-208-21	ELECT CHIP	47uF	20%	4V		C517	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C204	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C205	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C603	1-124-779-00	ELECT CHIP	10uF	20%	16V	
C206	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C605	1-124-779-00	ELECT CHIP	10uF	20%	16V	
C208	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C606	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C209	1-124-779-00	ELECT CHIP	10uF	20%	16V		C608	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C302	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V		C609	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C303	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C610	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C304	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C611	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C305	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C612	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C306	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C613	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C307	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C614	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C308	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C615	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C309	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C616	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C310	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C617	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C311	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C618	1-126-208-21	ELECT CHIP	47uF	20%	4V	
C312	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C619	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C313	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C620	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C314	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C621	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C317	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C626	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C318	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C627	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C319	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C628	1-124-779-00	ELECT CHIP	10uF	20%	16V	
C320	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C629	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C321	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C630	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C322	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C631	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C323	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C632	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C324	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C633	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C325	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C634	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C326	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C635	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C327	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C636	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C328	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C637	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C329	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C638	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C330	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C641	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	

RD-051

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C642	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C831	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C643	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C832	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C644	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C833	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C645	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C834	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C646	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C835	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C655	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C836	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C656	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C837	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C657	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C838	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C658	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C839	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C704	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C840	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C705	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C841	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C706	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C842	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C707	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C843	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C708	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C844	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C709	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C845	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C710	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C846	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C711	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C847	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C712	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C849	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C713	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C850	1-126-208-21	ELECT CHIP	47uF	20%	4V
C714	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C852	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C715	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C853	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C716	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C901	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C717	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C902	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C718	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C903	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C719	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C904	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C720	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C905	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C721	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C906	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C722	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C907	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C723	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C908	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C724	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C909	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C725	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C910	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C726	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C911	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C727	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C912	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V</

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C1217	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1631	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C1218	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1632	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1219	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1633	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C1220	1-126-208-21	ELECT CHIP	47uF 20% 4V	C1638	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1221	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1701	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C1222	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1702	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C1223	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C1703	1-164-874-11	CERAMIC CHIP	100PF 5% 50V
C1224	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C1901	1-124-779-00	ELECT CHIP	10uF 20% 16V
C1226	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C1903	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1227	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C1904	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1229	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C1905	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1230	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1906	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1231	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1907	1-164-848-11	CERAMIC CHIP	8PF 0.5PF 50V
C1232	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1908	1-164-848-11	CERAMIC CHIP	8PF 0.5PF 50V
C1233	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1909	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1234	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1911	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1235	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	C1912	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1238	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C1913	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1239	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C1914	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V
C1240	1-165-908-11	CERAMIC CHIP	1uF 10% 10V	C1915	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V
C1241	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	C1916	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V
C1242	1-126-208-21	ELECT CHIP	47uF 20% 4V	C1917	1-164-388-91	CERAMIC CHIP	270PF 5% 50V
C1244	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	< CONNECTOR >			
C1401	1-124-779-00	ELECT CHIP	10uF 20% 16V	CN101	1-764-177-11	PIN, CONNECTOR (SMD) (1.5MM) 7P	
C1402	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	CN1901	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD) 6P	
C1403	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	< DIODE >			
C1404	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	D101	8-719-066-17	DIODE FTZ6.8E-T148	
C1405	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	D202	8-719-988-61	DIODE 1SS355TE-17	
C1406	1-164-937-11	CERAMIC CHIP	0.001uF 10% 50V	D604	8-719-052-72	DIODE CL-220HR-C (HX710/HX910:RU,SP)	
C1407	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	D605	8-719-061-94	DIODE CL-220PG-C-TU (HX710/HX910:RU,SP)	
C1408	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	D606	8-719-061-94	DIODE CL-220PG-C-TU (HX710/HX910:RU,SP)	
C1411	1-127-715-91	CERAMIC CHIP	0.22uF 10% 16V	D1201	8-719-988-61	DIODE 1SS355TE-17	
C1412	1-126-205-11	ELECT CHIP	47uF 20% 6.3V	D1401	8-719-046-91	DIODE MA2S111	
C1601	1-124-779-00	ELECT CHIP	10uF 20% 16V	D1401	8-719-056-23	DIODE MA2S111-(K8).SO	
C1602	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	D1402	8-719-083-15	DIODE 1SS389 (TPH3)	
C1603	1-124-779-00	ELECT CHIP	10uF 20% 16V	D1601	8-719-027-95	DIODE HSM88WK	
C1604	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	D1602	8-719-081-96	DIODE KV1870STL-G	
C1606	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	< FERRITE BEAD >			
C1607	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FB1701	1-469-083-21	INDUCTOR, FERRITE BEAD (1005)	
C1608	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	< FLUORESCENT INDICATOR TUBE >			
C1609	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL101	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1610	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL103	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1611	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL201	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1612	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL301	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1613	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL302	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1614	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL501	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1615	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL601	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1616	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL602	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1617	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL603	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1618	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL802	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1619	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL803	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1620	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL804	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1623	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL805	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1624	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	FL806	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1625	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V	FL1001	1-234-867-11	FILTER, EMI REMOVAL (SMD)	
C1626	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V				
C1627	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V				
C1628	1-126-209-11	ELECT CHIP	100uF 20% 4V				
C1629	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V				
C1630	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V				

RD-051

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
FL1401	1-234-867-11	FILTER, EMI REMOVAL (SMD)				< LINE FILTER >	
FL1601	1-234-867-11	FILTER, EMI REMOVAL (SMD)					
FL1602	1-234-867-11	FILTER, EMI REMOVAL (SMD)		LF1901	1-469-972-21	COIL,CHOKE	
FL1902	1-234-867-11	FILTER, EMI REMOVAL (SMD)				< TRANSISTOR >	
		< IC >		Q801	6-550-280-01	TRANSISTOR	BC857CE6327
IC101	6-705-378-01	IC CAT24WC32W-TE13		Q802	6-550-280-01	TRANSISTOR	BC857CE6327
IC104	6-707-917-01	IC HD6417306BL200AV		Q803	6-550-280-01	TRANSISTOR	BC857CE6327
IC105	8-759-573-97	IC SN74LVC541APWR		Q804	6-550-280-01	TRANSISTOR	BC857CE6327
IC106	8-759-680-48	IC TC7WH157FK (TE85R)	(EXCEPT GX310:E/HX910:E)	Q805	6-550-280-01	TRANSISTOR	BC857CE6327
IC107	8-759-679-58	IC SN74AHCT541PWR		Q806	6-550-280-01	TRANSISTOR	BC857CE6327
IC108	6-706-007-01	IC HY57V561620CTP-HDR		Q1201	6-550-280-01	TRANSISTOR	BC857CE6327
IC109	6-706-007-01	IC HY57V561620CTP-HDR		Q1601	1-801-806-11	TR DTC144EKA	
IC110	6-703-875-01	IC CDCVF2505PWR				< RESISTOR >	
IC201	6-705-297-01	IC MBM29Z0003PCN-KE1		R102	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC202	6-705-297-01	IC MBM29Z0003PCN-KE1		R103	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC301	6-701-025-01	IC SN74LVC16244ADGGR				(GX310:TW,E/HX910:TW,E)	
IC302	8-759-392-81	IC SN74LVC16245ADGGR		R104	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC303	6-701-025-01	IC SN74LVC16244ADGGR				(GX310:TW,E/HX910:TW,E)	
IC304	8-759-392-81	IC SN74LVC16245ADGGR		R105	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC305	6-701-025-01	IC SN74LVC16244ADGGR				(GX310:TW,E/HX910:TW,E)	
IC306	6-701-025-01	IC SN74LVC16244ADGGR		R107	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC307	8-759-392-81	IC SN74LVC16245ADGGR		R112	1-218-941-81	RES-CHIP	100 5% 1/16W
IC308	6-701-025-01	IC SN74LVC16244ADGGR		R113	1-218-941-81	RES-CHIP	100 5% 1/16W
IC309	6-701-025-01	IC SN74LVC16244ADGGR		R114	1-218-941-81	RES-CHIP	100 5% 1/16W
IC310	8-759-392-81	IC SN74LVC16245ADGGR		R117	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC401	8-759-680-48	IC TC7WH157FK (TE85R)		R119	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC402	6-705-336-01	IC K9F2808U0C-PCB0T				(GX310:RU,SP/HX710/HX910:RU,SP)	
IC501	6-706-603-01	IC CXD9830Q		R120	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC601	8-753-208-36	IC CXD4702GB				(GX310:RU,SP/HX710/HX910:RU,SP)	
IC701	6-706-784-01	IC HY5DU283222AFP-36		R126	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC702	6-705-764-01	IC K4H511638B-UCB0T				(GX310:RU,SP/HX710/HX910:RU,SP)	
IC702	6-708-305-01	IC K4H511638C-UCB3T		R147	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC702	6-708-431-01	IC EDD5116ADTA-7A-E		R148	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC801	6-702-302-01	IC TK11133CSCL-G		R152	1-216-864-11	SHORT CHIP	0
IC802	8-753-217-76	IC CXD4705GB		R154	1-218-990-81	SHORT CHIP	0
IC901	6-706-784-01	IC HY5DU283222AFP-36		R156	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC1001	6-706-693-01	IC BU2357FV-E2		R157	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC1003	6-704-351-01	IC SN74LVC2G08DCUR		R158	1-218-990-81	SHORT CHIP	0
IC1102	6-706-741-01	IC BA00HC5FP-E2		R159	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
IC1201	6-704-531-01	IC MM1591JFBEG		R161	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC1202	8-753-217-41	IC CXD3805R		R162	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
IC1401	6-703-644-01	IC AD1895AYRSZRL		R163	1-218-938-11	RES-CHIP	56 5% 1/16W
IC1402	6-705-515-01	IC AK4385VT-E2		R164	1-218-929-11	RES-CHIP	10 5% 1/16W
IC1403	8-759-546-74	IC TC7WH157FU (TE12R)		R165	1-218-929-11	RES-CHIP	10 5% 1/16W
IC1601	6-707-201-01	IC uPD72893BF1-FN3-A		R166	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
IC1602	6-703-845-01	IC IC42S16100-7TG (T&R)		R167	1-218-938-11	RES-CHIP	56 5% 1/16W
* IC1604	6-703-108-01	IC SN74LVC2G04DCKR		R168	1-218-938-11	RES-CHIP	56 5% 1/16W
IC1605	8-759-083-94	IC TC7W74FU		R170	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC1606	6-701-877-01	IC SM8707EV-G-E2		R172	1-218-941-81	RES-CHIP	100 5% 1/16W
IC1607	6-702-302-01	IC TK11133CSCL-G		R173	1-218-938-11	RES-CHIP	56 5% 1/16W
IC1901	6-706-365-01	IC uPD72852AGB-8EU-A		R175	1-218-965-11	RES-CHIP	10K 5% 1/16W
		< COIL >		R176	1-218-965-11	RES-CHIP	10K 5% 1/16W
L801	1-400-145-21	INDUCTOR	47uH	R177	1-218-949-11	RES-CHIP	470 5% 1/16W
L1101	1-424-918-21	INDUCTOR	10uH	R178	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
L1201	1-412-951-11	INDUCTOR	10uH	R179	1-218-937-11	RES-CHIP	47 5% 1/16W
L1601	1-410-371-41	INDUCTOR	1.5uH	R182	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R183	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R184	1-218-929-11	RES-CHIP	10 5% 1/16W
				R185	1-218-965-11	RES-CHIP	10K 5% 1/16W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R187	1-218-965-11	RES-CHIP	10K	5%	1/16W	R375	1-218-937-11	RES-CHIP	47	5%	1/16W
R188	1-218-953-11	RES-CHIP	1K	5%	1/16W	R377	1-218-965-11	RES-CHIP	10K	5%	1/16W
R189	1-218-965-11	RES-CHIP	10K	5%	1/16W	R379	1-218-990-81	SHORT CHIP	0		
R190	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R402	1-218-965-11	RES-CHIP	10K	5%	1/16W
R191	1-218-938-11	RES-CHIP	56	5%	1/16W	R404	1-218-953-11	RES-CHIP	1K	5%	1/16W
R192	1-218-937-11	RES-CHIP	47	5%	1/16W	R407	1-218-965-11	RES-CHIP	10K	5%	1/16W
R193	1-218-965-11	RES-CHIP	10K	5%	1/16W	R513	1-218-977-11	RES-CHIP	100K	5%	1/16W
R194	1-218-965-11	RES-CHIP	10K	5%	1/16W	R524	1-218-965-11	RES-CHIP	10K	5%	1/16W
R195	1-218-965-11	RES-CHIP	10K	5%	1/16W	R525	1-218-965-11	RES-CHIP	10K	5%	1/16W
R197	1-218-965-11	RES-CHIP	10K	5%	1/16W	R532	1-218-965-11	RES-CHIP	10K	5%	1/16W
R198	1-218-965-11	RES-CHIP	10K	5%	1/16W	R536	1-218-965-11	RES-CHIP	10K	5%	1/16W
R199	1-218-938-11	RES-CHIP	56	5%	1/16W	R537	1-218-965-11	RES-CHIP	10K	5%	1/16W
R232	1-218-965-11	RES-CHIP	10K	5%	1/16W	R538	1-218-929-11	RES-CHIP	10	5%	1/16W
R302	1-218-990-81	SHORT CHIP	0			R541	1-218-965-11	RES-CHIP	10K	5%	1/16W
R304	1-218-938-11	RES-CHIP	56	5%	1/16W	R544	1-218-965-11	RES-CHIP	10K	5%	1/16W
R306	1-218-935-11	RES-CHIP	33	5%	1/16W	R571	1-218-965-11	RES-CHIP	10K	5%	1/16W
R307	1-218-938-11	RES-CHIP	56	5%	1/16W	R576	1-218-965-11	RES-CHIP	10K	5%	1/16W
R308	1-218-939-11	RES-CHIP	68	5%	1/16W	R584	1-218-965-11	RES-CHIP	10K	5%	1/16W
R309	1-218-939-11	RES-CHIP	68	5%	1/16W	R585	1-218-965-11	RES-CHIP	10K	5%	1/16W
R311	1-218-941-81	RES-CHIP	100	5%	1/16W	R601	1-218-990-81	SHORT CHIP	0		
R312	1-218-940-11	RES-CHIP	82	5%	1/16W	R609	1-218-933-11	RES-CHIP	22	5%	1/16W
R313	1-218-941-81	RES-CHIP	100	5%	1/16W	R610	1-218-933-11	RES-CHIP	22	5%	1/16W
R314	1-218-940-11	RES-CHIP	82	5%	1/16W	R611	1-218-933-11	RES-CHIP	22	5%	1/16W
R315	1-218-941-81	RES-CHIP	100	5%	1/16W	R612	1-218-933-11	RES-CHIP	22	5%	1/16W
R316	1-218-940-11	RES-CHIP	82	5%	1/16W	R613	1-218-933-11	RES-CHIP	22	5%	1/16W
R317	1-218-940-11	RES-CHIP	82	5%	1/16W	R614	1-218-933-11	RES-CHIP	22	5%	1/16W
R318	1-218-940-11	RES-CHIP	82	5%	1/16W	R615	1-218-990-81	SHORT CHIP	0		
R319	1-218-940-11	RES-CHIP	82	5%	1/16W	R616	1-218-990-81	SHORT CHIP	0		
R320	1-218-937-11	RES-CHIP	47	5%	1/16W	R618	1-218-938-11	RES-CHIP	56	5%	1/16W
R322	1-218-933-11	RES-CHIP	22	5%	1/16W	R619	1-218-938-11	RES-CHIP	56	5%	1/16W
R323	1-218-938-11	RES-CHIP	56	5%	1/16W	R620	1-218-933-11	RES-CHIP	22	5%	1/16W
R324	1-218-940-11	RES-CHIP	82	5%	1/16W	R621	1-218-933-11	RES-CHIP	22	5%	1/16W
R325	1-218-937-11	RES-CHIP	47	5%	1/16W	R622	1-218-933-11	RES-CHIP	22	5%	1/16W
R326	1-218-938-11	RES-CHIP	56	5%	1/16W	R623	1-218-933-11	RES-CHIP	22	5%	1/16W
R327	1-218-938-11	RES-CHIP	56	5%	1/16W	R624	1-218-933-11	RES-CHIP	22	5%	1/16W
R328	1-218-938-11	RES-CHIP	56	5%	1/16W	R627	1-218-938-11	RES-CHIP	56	5%	1/16W
R330	1-218-965-11	RES-CHIP	10K	5%	1/16W	R635	1-218-990-81	SHORT CHIP	0		
R337	1-218-965-11	RES-CHIP	10K	5%	1/16W	R637	1-218-933-11	RES-CHIP	22	5%	1/16W
R339	1-218-965-11	RES-CHIP	10K	5%	1/16W	R647	1-218-990-81	SHORT CHIP	0		
R340	1-218-940-11	RES-CHIP	82	5%	1/16W	R654	1-218-965-11	RES-CHIP	10K	5%	1/16W
R341	1-218-935-11	RES-CHIP	33	5%	1/16W	R660	1-218-933-11	RES-CHIP	22	5%	1/16W
R347	1-218-938-11	RES-CHIP	56	5%	1/16W	R661	1-218-933-11	RES-CHIP	22	5%	1/16W
R348	1-218-938-11	RES-CHIP	56	5%	1/16W	R662	1-218-933-11	RES-CHIP	22	5%	1/16W
R353	1-218-937-11	RES-CHIP	47	5%	1/16W	R666	1-218-990-81	SHORT CHIP	0		
R354	1-218-938-11	RES-CHIP	56	5%	1/16W	R667	1-218-990-81	SHORT CHIP	0		
R355	1-218-938-11	RES-CHIP	56	5%	1/16W	R668	1-218-990-81	SHORT CHIP	0		
R356	1-218-938-11	RES-CHIP	56	5%	1/16W	R669	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R359	1-218-990-81	SHORT CHIP	0			R671	1-218-990-81	SHORT CHIP	0		
R361	1-218-929-11	RES-CHIP	10	5%	1/16W	R672	1-218-990-81	SHORT CHIP	0		
R362	1-218-935-11	RES-CHIP	33	5%	1/16W	R674	1-218-990-81	SHORT CHIP	0		
R363	1-218-935-11	RES-CHIP	33	5%	1/16W	R675	1-218-933-11	RES-CHIP	22	5%	1/16W
R364	1-218-937-11	RES-CHIP	47	5%	1/16W	R676	1-218-933-11	RES-CHIP	22	5%	1/16W
R365	1-218-935-11	RES-CHIP	33	5%	1/16W	R677	1-218-933-11	RES-CHIP	22	5%	1/16W
R366	1-218-935-11	RES-CHIP	33	5%	1/16W	R678	1-218-933-11	RES-CHIP	22	5%	1/16W
R367	1-218-937-11	RES-CHIP	47	5%	1/16W	R679	1-218-933-11	RES-CHIP	22	5%	1/16W
R369	1-218-933-11	RES-CHIP	22	5%	1/16W	R680	1-218-933-11	RES-CHIP	22	5%	1/16W
R370	1-218-939-11	RES-CHIP	68	5%	1/16W	R681	1-218-933-11	RES-CHIP	22	5%	1/16W
R371	1-218-937-11	RES-CHIP	47	5%	1/16W	R682	1-218-933-11	RES-CHIP	22	5%	1/16W
R372	1-218-937-11	RES-CHIP	47	5%	1/16W	R683	1-218-933-11	RES-CHIP	22	5%	1/16W
R374	1-218-939-11	RES-CHIP	68	5%	1/16W	R684	1-218-933-11	RES-CHIP	22	5%	1/16W

RD-051

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R685	1-218-933-11	RES-CHIP	22	5%	1/16W	R876	1-218-938-11	RES-CHIP	56	5%	1/16W
R686	1-218-933-11	RES-CHIP	22	5%	1/16W	R880	1-218-935-11	RES-CHIP	33	5%	1/16W
R687	1-218-933-11	RES-CHIP	22	5%	1/16W	R881	1-218-965-11	RES-CHIP	10K	5%	1/16W
R688	1-218-937-11	RES-CHIP	47	5%	1/16W	R901	1-218-933-11	RES-CHIP	22	5%	1/16W
R689	1-218-937-11	RES-CHIP	47	5%	1/16W	R902	1-218-933-11	RES-CHIP	22	5%	1/16W
R690	1-218-937-11	RES-CHIP	47	5%	1/16W	R903	1-218-929-11	RES-CHIP	10	5%	1/16W
R691	1-218-937-11	RES-CHIP	47	5%	1/16W	R904	1-218-929-11	RES-CHIP	10	5%	1/16W
R692	1-218-990-81	SHORT CHIP	0			R906	1-218-990-81	SHORT CHIP	0		
R702	1-218-990-81	SHORT CHIP	0			R907	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R703	1-218-990-81	SHORT CHIP	0			R908	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R704	1-218-935-11	RES-CHIP	33	5%	1/16W	R909	1-218-990-81	SHORT CHIP	0		
R705	1-218-935-11	RES-CHIP	33	5%	1/16W	R1003	1-218-935-11	RES-CHIP	33	5%	1/16W
R706	1-218-935-11	RES-CHIP	33	5%	1/16W	R1004	1-218-935-11	RES-CHIP	33	5%	1/16W
R707	1-218-935-11	RES-CHIP	33	5%	1/16W	R1005	1-218-938-11	RES-CHIP	56	5%	1/16W
R708	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R1006	1-218-935-11	RES-CHIP	33	5%	1/16W
R709	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R1011	1-218-951-11	RES-CHIP	680	5%	1/16W
R710	1-218-935-11	RES-CHIP	33	5%	1/16W	R1015	1-218-947-11	RES-CHIP	330	5%	1/16W
R711	1-218-990-81	SHORT CHIP	0			R1016	1-218-935-11	RES-CHIP	33	5%	1/16W
R712	1-218-990-81	SHORT CHIP	0			R1017	1-218-935-11	RES-CHIP	33	5%	1/16W
R713	1-218-935-11	RES-CHIP	33	5%	1/16W	R1018	1-218-935-11	RES-CHIP	33	5%	1/16W
R801	1-216-864-11	SHORT CHIP	0			R1019	1-218-935-11	RES-CHIP	33	5%	1/16W
R802	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1022	1-218-990-81	SHORT CHIP	0		
R803	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1023	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R804	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1025	1-218-938-11	RES-CHIP	56	5%	1/16W
R805	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1105	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R806	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1106	1-218-878-11	METAL CHIP	20K	0.5%	1/10W
R807	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1119	1-216-864-11	SHORT CHIP	0		
R808	1-218-953-11	RES-CHIP	1K	5%	1/16W	R1124	1-216-295-91	SHORT CHIP	0		
R810	1-218-933-11	RES-CHIP	22	5%	1/16W	R1125	1-216-296-11	SHORT CHIP	0		
R812	1-218-933-11	RES-CHIP	22	5%	1/16W	R1201	1-216-864-11	SHORT CHIP	0		
R814	1-218-933-11	RES-CHIP	22	5%	1/16W	R1203	1-218-990-81	SHORT CHIP	0		
R816	1-218-933-11	RES-CHIP	22	5%	1/16W	R1207	1-218-990-81	SHORT CHIP	0		
R818	1-218-933-11	RES-CHIP	22	5%	1/16W	R1208	1-218-990-81	SHORT CHIP	0		
R820	1-218-933-11	RES-CHIP	22	5%	1/16W	R1209	1-218-933-11	RES-CHIP	22	5%	1/16W
R821	1-218-949-11	RES-CHIP	470	5%	1/16W	R1210	1-218-933-11	RES-CHIP	22	5%	1/16W
R822	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1211	1-218-933-11	RES-CHIP	22	5%	1/16W
R823	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1212	1-218-990-81	SHORT CHIP	0		
R824	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1216	1-218-965-11	RES-CHIP	10K	5%	1/16W
R825	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1221	1-218-990-81	SHORT CHIP	0		
R827	1-218-937-11	RES-CHIP	47	5%	1/16W	R1223	1-218-990-81	SHORT CHIP	0		
R829	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1233	1-218-945-11	RES-CHIP	220	5%	1/16W
R831	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1234	1-218-990-81	SHORT CHIP	0		
R832	1-218-990-81	SHORT CHIP	0			R1235	1-218-990-81	SHORT CHIP	0		
R835	1-208-860-81	METAL CHIP	75	0.5%	1/16W	R1236	1-218-990-81	SHORT CHIP	0 (HX910:TW.E)		
R836	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1240	1-218-949-11	RES-CHIP	470	5%	1/16W
R843	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1241	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R846	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1243	1-218-953-11	RES-CHIP	1K	5%	1/16W
R848	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1248	1-218-990-81	SHORT CHIP	0		
R849	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1249	1-218-990-81	SHORT CHIP	0		
R850	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1402	1-218-990-81	SHORT CHIP	0		
R851	1-218-990-81	SHORT CHIP	0			R1408	1-218-973-11	RES-CHIP	47K	5%	1/16W
R852	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R1409	1-218-990-81	SHORT CHIP	0		
R853	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1410	1-218-990-81	SHORT CHIP	0		
R857	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1411	1-218-990-81	SHORT CHIP	0		
R859	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1412	1-218-990-81	SHORT CHIP	0		
R860	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	R1413	1-218-990-81	SHORT CHIP	0		
R861	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1414	1-218-941-81	RES-CHIP	100	5%	1/16W
R864	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1415	1-218-933-11	RES-CHIP	22	5%	1/16W
R872	1-218-938-11	RES-CHIP	56	5%	1/16W	R1416	1-218-941-81	RES-CHIP	100	5%	1/16W
R874	1-218-938-11	RES-CHIP	56	5%	1/16W	R1417	1-218-941-81	RES-CHIP	100	5%	1/16W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R1419	1-218-941-81	RES-CHIP	100	5%	1/16W	R1673	1-218-990-81	SHORT CHIP	0		
R1420	1-218-990-81	SHORT CHIP	0			R1674	1-218-990-81	SHORT CHIP	0		
R1421	1-218-990-81	SHORT CHIP	0			R1676	1-216-864-11	SHORT CHIP	0		
R1422	1-218-990-81	SHORT CHIP	0			R1677	1-218-990-81	SHORT CHIP	0		
R1424	1-216-864-11	SHORT CHIP	0			R1679	1-218-935-11	RES-CHIP	33	5%	1/16W
R1602	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1680	1-218-929-11	RES-CHIP	10	5%	1/16W
R1603	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1681	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1604	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1682	1-218-937-11	RES-CHIP	47	5%	1/16W
R1605	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1683	1-218-937-11	RES-CHIP	47	5%	1/16W
R1607	1-218-990-81	SHORT CHIP	0			R1684	1-218-937-11	RES-CHIP	47	5%	1/16W
R1608	1-218-935-11	RES-CHIP	33	5%	1/16W	R1685	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1609	1-218-941-81	RES-CHIP	100	5%	1/16W	R1686	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1610	1-218-990-81	SHORT CHIP	0			R1688	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1611	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1689	1-218-990-81	SHORT CHIP	0		
R1612	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1690	1-218-990-81	SHORT CHIP	0		
R1613	1-218-935-11	RES-CHIP	33	5%	1/16W	R1701	1-218-935-11	RES-CHIP	33	5%	1/16W
R1614	1-218-935-11	RES-CHIP	33	5%	1/16W	R1702	1-218-935-11	RES-CHIP	33	5%	1/16W
R1615	1-218-935-11	RES-CHIP	33	5%	1/16W	R1703	1-218-935-11	RES-CHIP	33	5%	1/16W
R1616	1-218-935-11	RES-CHIP	33	5%	1/16W	R1712	1-216-295-91	SHORT CHIP	0		
R1617	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1714	1-218-990-81	SHORT CHIP	0		
R1618	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1715	1-216-295-91	SHORT CHIP	0		
R1619	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1810	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1620	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1820	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1621	1-218-990-81	SHORT CHIP	0			R1829	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1622	1-218-990-81	SHORT CHIP	0			R1843	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1624	1-218-935-11	RES-CHIP	33	5%	1/16W	R1845	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1625	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1901	1-216-864-11	SHORT CHIP	0		
R1626	1-218-935-11	RES-CHIP	33	5%	1/16W	R1904	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1627	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1905	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1628	1-218-935-11	RES-CHIP	33	5%	1/16W	R1907	1-218-941-81	RES-CHIP	100	5%	1/16W
R1629	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1908	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1630	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1909	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1631	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R1910	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1634	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1911	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1635	1-218-973-11	RES-CHIP	47K	5%	1/16W	R1912	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1636	1-218-965-11	RES-CHIP	10K	5%	1/16W	R1913	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1638	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R1915	1-208-910-11	METAL CHIP	9.1K	0.5%	1/16W
R1639	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R1916	1-218-938-11	RES-CHIP	56	5%	1/16W
R1640	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R1917	1-218-938-11	RES-CHIP	56	5%	1/16W
R1641	1-218-990-81	SHORT CHIP	0			R1919	1-218-938-11	RES-CHIP	56	5%	1/16W
R1642	1-218-982-11	RES-CHIP	270K	5%	1/16W	R1920	1-218-938-11	RES-CHIP	56	5%	1/16W
R1646	1-218-990-81	SHORT CHIP	0			R1921	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W
R1647	1-218-990-81	SHORT CHIP	0			R3005	1-218-937-11	RES-CHIP	47	5%	1/16W
R1648	1-218-990-81	SHORT CHIP	0			R3006	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1649	1-218-990-81	SHORT CHIP	0			R3011	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1654	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3013	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1655	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3014	1-218-939-11	RES-CHIP	68	5%	1/16W
R1656	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3015	1-218-937-11	RES-CHIP	47	5%	1/16W
R1657	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3017	1-218-938-11	RES-CHIP	56	5%	1/16W
R1658	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3018	1-218-938-11	RES-CHIP	56	5%	1/16W
R1659	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3019	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1660	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3021	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1661	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3022	1-218-938-11	RES-CHIP	56	5%	1/16W
R1662	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3023	1-218-938-11	RES-CHIP	56	5%	1/16W
R1663	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3024	1-218-938-11	RES-CHIP	56	5%	1/16W
R1664	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3025	1-218-937-11	RES-CHIP	47	5%	1/16W
R1665	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3027	1-218-937-11	RES-CHIP	47	5%	1/16W
R1669	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3029	1-218-941-81	RES-CHIP	100	5%	1/16W
R1670	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3030	1-218-938-11	RES-CHIP	56	5%	1/16W
R1672	1-218-990-81	SHORT CHIP	0			R3034	1-218-965-11	RES-CHIP	10K	5%	1/16W

RD-051

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R3035	1-218-937-11	RES-CHIP	47	5%	1/16W	R3121	1-218-938-11	RES-CHIP	56	5%	1/16W
R3040	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3122	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3044	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3123	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3045	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3124	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3048	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3125	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3052	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3126	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3053	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3127	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3055	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3128	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3056	1-218-938-11	RES-CHIP	56	5%	1/16W	R3129	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3057	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3130	1-218-935-11	RES-CHIP	33	5%	1/16W
R3058	1-218-937-11	RES-CHIP	47	5%	1/16W	R3131	1-218-935-11	RES-CHIP	33	5%	1/16W
R3059	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3132	1-218-937-11	RES-CHIP	47	5%	1/16W
R3061	1-218-938-11	RES-CHIP	56	5%	1/16W	R3133	1-218-937-11	RES-CHIP	47	5%	1/16W
R3063	1-218-938-11	RES-CHIP	56	5%	1/16W	R3134	1-218-864-11	SHORT CHIP	0		
R3064	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3141	1-218-935-11	RES-CHIP	33	5%	1/16W
R3065	1-218-937-11	RES-CHIP	47	5%	1/16W	R3142	1-218-935-11	RES-CHIP	33	5%	1/16W
R3066	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3143	1-218-939-11	RES-CHIP	68	5%	1/16W
R3068	1-218-938-11	RES-CHIP	56	5%	1/16W	R3144	1-218-939-11	RES-CHIP	68	5%	1/16W
R3070	1-218-938-11	RES-CHIP	56	5%	1/16W	R3145	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3071	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3146	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3073	1-218-990-81	SHORT CHIP	0 (GX310:E/HX910:E)			R3147	1-218-990-81	SHORT CHIP	0		
R3074	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3148	1-218-965-11	RES-CHIP	10K	5%	1/16W
			(EXCEPT GX310:E/HX910:E)			R3601	1-218-990-81	SHORT CHIP	0		
R3075	1-218-939-11	RES-CHIP	68	5%	1/16W	R3619	1-218-933-11	RES-CHIP	22	5%	1/16W
R3076	1-218-937-11	RES-CHIP	47	5%	1/16W	R3620	1-218-933-11	RES-CHIP	22	5%	1/16W
R3077	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3629	1-218-939-11	RES-CHIP	68	5%	1/16W
R3078	1-218-938-11	RES-CHIP	56	5%	1/16W	R3630	1-218-933-11	RES-CHIP	22	5%	1/16W
R3079	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3631	1-218-933-11	RES-CHIP	22	5%	1/16W
R3080	1-218-937-11	RES-CHIP	47	5%	1/16W	R3637	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3081	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3638	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3082	1-218-938-11	RES-CHIP	56	5%	1/16W	R3639	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3083	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3650	1-218-935-11	RES-CHIP	33	5%	1/16W
R3084	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3651	1-218-940-11	RES-CHIP	82	5%	1/16W
R3088	1-218-939-11	RES-CHIP	68	5%	1/16W	R3652	1-218-933-11	RES-CHIP	22	5%	1/16W
R3089	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3653	1-218-940-11	RES-CHIP	82	5%	1/16W
R3092	1-218-937-11	RES-CHIP	47	5%	1/16W	R3654	1-218-933-11	RES-CHIP	22	5%	1/16W
R3093	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3655	1-218-933-11	RES-CHIP	22	5%	1/16W
R3094	1-218-938-11	RES-CHIP	56	5%	1/16W	R3656	1-218-940-11	RES-CHIP	82	5%	1/16W
R3095	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3657	1-218-935-11	RES-CHIP	33	5%	1/16W
R3096	1-218-937-11	RES-CHIP	47	5%	1/16W	R3658	1-218-943-11	RES-CHIP	150	5%	1/16W
R3097	1-218-961-11	RES-CHIP	4.7K	5%	1/16W						(HX710/HX910)
R3098	1-218-937-11	RES-CHIP	47	5%	1/16W	R3659	1-218-945-11	RES-CHIP	220	5%	1/16W
R3099	1-218-961-11	RES-CHIP	4.7K	5%	1/16W						(HX710/HX910)
R3100	1-218-938-11	RES-CHIP	56	5%	1/16W	R3660	1-218-933-11	RES-CHIP	22	5%	1/16W
R3101	1-218-965-11	RES-CHIP	10K	5%	1/16W						(HX710/HX910)
R3104	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3661	1-218-945-11	RES-CHIP	220	5%	1/16W
											(HX710/HX910)
R3106	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3662	1-218-933-11	RES-CHIP	22	5%	1/16W
R3107	1-218-965-11	RES-CHIP	10K	5%	1/16W						(HX710/HX910)
R3108	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3663	1-218-933-11	RES-CHIP	22	5%	1/16W
R3109	1-218-938-11	RES-CHIP	56	5%	1/16W						(HX710/HX910)
R3110	1-218-938-11	RES-CHIP	56	5%	1/16W	R3664	1-218-940-11	RES-CHIP	82	5%	1/16W
											(HX710/HX910)
R3111	1-218-933-11	RES-CHIP	22	5%	1/16W	R3665	1-218-935-11	RES-CHIP	33	5%	1/16W
R3112	1-218-935-11	RES-CHIP	33	5%	1/16W						(HX710/HX910)
R3113	1-218-929-11	RES-CHIP	10	5%	1/16W	R3669	1-218-950-11	RES-CHIP	560	5%	1/16W
R3114	1-218-935-11	RES-CHIP	33	5%	1/16W						(HX710/HX910RU,SP)
R3115	1-218-929-11	RES-CHIP	10	5%	1/16W	R3670	1-218-945-11	RES-CHIP	220	5%	1/16W
											(HX710/HX910RU,SP)
R3116	1-218-929-11	RES-CHIP	10	5%	1/16W	R3671	1-218-945-11	RES-CHIP	220	5%	1/16W
R3117	1-218-938-11	RES-CHIP	56	5%	1/16W						(HX710/HX910RU,SP)
R3118	1-218-938-11	RES-CHIP	56	5%	1/16W						
R3119	1-218-938-11	RES-CHIP	56	5%	1/16W						
R3120	1-218-938-11	RES-CHIP	56	5%	1/16W						

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks
R3672	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB116	1-242-963-21	RES, NETWORK	33 (1005X4)
R3673	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB117	1-234-371-21	RES, NETWORK	47 (1005X4)
R3674	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB118	1-234-371-21	RES, NETWORK	47 (1005X4)
R3675	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	RB119	1-234-371-21	RES, NETWORK	47 (1005X4)
R3676	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB120	1-234-371-21	RES, NETWORK	47 (1005X4)
R3677	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	RB121	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3678	1-218-990-81	SHORT CHIP	0			RB122	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3679	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB123	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3680	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB124	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3681	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB125	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3682	1-218-938-11	RES-CHIP	56	5%	1/16W	RB126	1-234-377-21	RES, NETWORK	4.7K (1005X4)
R3683	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB301	1-234-378-21	RES, NETWORK	10K (1005X4)
R3803	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB302	1-234-378-21	RES, NETWORK	10K (1005X4)
R3805	1-218-990-81	SHORT CHIP	0			RB303	1-234-378-21	RES, NETWORK	10K (1005X4)
R3810	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	RB304	1-234-378-21	RES, NETWORK	10K (1005X4)
R3811	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	RB305	1-234-702-11	RES, NETWORK	68 (1005X4)
R3814	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB306	1-234-702-11	RES, NETWORK	68 (1005X4)
R3817	1-218-990-81	SHORT CHIP	0			RB307	1-234-714-11	RES, NETWORK	56 (1005X4)
R3818	1-218-935-11	RES-CHIP	33	5%	1/16W	RB308	1-234-714-11	RES, NETWORK	56 (1005X4)
R3819	1-218-935-11	RES-CHIP	33	5%	1/16W	RB309	1-234-378-21	RES, NETWORK	10K (1005X4)
R3828	1-218-941-81	RES-CHIP	100	5%	1/16W	RB310	1-234-378-21	RES, NETWORK	10K (1005X4)
R3829	1-218-937-11	RES-CHIP	47	5%	1/16W	RB311	1-234-714-11	RES, NETWORK	56 (1005X4)
R3830	1-218-939-11	RES-CHIP	68	5%	1/16W	RB312	1-234-702-11	RES, NETWORK	68 (1005X4)
R3831	1-218-935-11	RES-CHIP	33	5%	1/16W	RB313	1-234-714-11	RES, NETWORK	56 (1005X4)
R3832	1-218-937-11	RES-CHIP	47	5%	1/16W	RB315	1-234-378-21	RES, NETWORK	10K (1005X4)
R3833	1-218-937-11	RES-CHIP	47	5%	1/16W	RB316	1-234-378-21	RES, NETWORK	10K (1005X4)
R3834	1-218-941-81	RES-CHIP	100	5%	1/16W	RB317	1-234-378-21	RES, NETWORK	10K (1005X4)
R3835	1-218-941-81	RES-CHIP	100	5%	1/16W	RB318	1-234-378-21	RES, NETWORK	10K (1005X4)
R3836	1-218-990-81	SHORT CHIP	0			RB319	1-234-378-21	RES, NETWORK	10K (1005X4)
R3837	1-218-941-81	RES-CHIP	100	5%	1/16W	RB320	1-234-702-11	RES, NETWORK	68 (1005X4)
R3838	1-218-941-81	RES-CHIP	100	5%	1/16W	RB321	1-234-702-11	RES, NETWORK	68 (1005X4)
R3839	1-218-941-81	RES-CHIP	100	5%	1/16W	RB322	1-234-702-11	RES, NETWORK	68 (1005X4)
R3840	1-218-941-81	RES-CHIP	100	5%	1/16W	RB323	1-234-702-11	RES, NETWORK	68 (1005X4)
R3841	1-218-941-81	RES-CHIP	100	5%	1/16W	RB324	1-242-963-21	RES, NETWORK	33 (1005X4)
R3842	1-218-941-81	RES-CHIP	100	5%	1/16W	RB325	1-242-963-21	RES, NETWORK	33 (1005X4)
R3843	1-218-941-81	RES-CHIP	100	5%	1/16W	RB326	1-234-702-11	RES, NETWORK	68 (1005X4)
R3845	1-218-939-11	RES-CHIP	68	5%	1/16W	RB327	1-234-702-11	RES, NETWORK	68 (1005X4)
R3846	1-218-937-11	RES-CHIP	47	5%	1/16W	RB329	1-234-378-21	RES, NETWORK	10K (1005X4)
R3847	1-218-935-11	RES-CHIP	33	5%	1/16W	RB330	1-234-378-21	RES, NETWORK	10K (1005X4)
R3848	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB331	1-234-378-21	RES, NETWORK	10K (1005X4)
R3849	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB332	1-234-378-21	RES, NETWORK	10K (1005X4)
R3850	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB333	1-234-714-11	RES, NETWORK	56 (1005X4)
R3851	1-218-977-11	RES-CHIP	100K	5%	1/16W	RB334	1-234-714-11	RES, NETWORK	56 (1005X4)
< COMPOSITION CIRCUIT BLOCK >						RB335	1-242-963-21	RES, NETWORK	33 (1005X4)
RB101	1-234-378-21	RES, NETWORK	10K (1005X4)			RB336	1-242-963-21	RES, NETWORK	33 (1005X4)
RB102	1-234-372-21	RES, NETWORK	100 (1005X4)			RB337	1-242-963-21	RES, NETWORK	33 (1005X4)
RB103	1-234-372-21	RES, NETWORK	100 (1005X4)			RB338	1-242-963-21	RES, NETWORK	33 (1005X4)
RB104	1-234-378-21	RES, NETWORK	10K (1005X4)			RB339	1-242-963-21	RES, NETWORK	33 (1005X4)
RB105	1-242-963-21	RES, NETWORK	33 (1005X4)			RB340	1-242-963-21	RES, NETWORK	33 (1005X4)
RB106	1-234-714-11	RES, NETWORK	56 (1005X4)			RB341	1-234-378-21	RES, NETWORK	10K (1005X4)
RB107	1-234-371-21	RES, NETWORK	47 (1005X4)			RB342	1-234-378-21	RES, NETWORK	10K (1005X4)
RB108	1-234-371-21	RES, NETWORK	47 (1005X4)			RB343	1-234-378-21	RES, NETWORK	10K (1005X4)
RB109	1-234-377-21	RES, NETWORK	4.7K (1005X4)			RB344	1-234-378-21	RES, NETWORK	10K (1005X4)
RB110	1-234-377-21	RES, NETWORK	4.7K (1005X4)			RB345	1-234-378-21	RES, NETWORK	10K (1005X4)
RB111	1-234-371-21	RES, NETWORK	47 (1005X4)			RB346	1-234-378-21	RES, NETWORK	10K (1005X4)
RB112	1-234-371-21	RES, NETWORK	47 (1005X4)			RB347	1-234-378-21	RES, NETWORK	10K (1005X4)
RB113	1-242-963-21	RES, NETWORK	33 (1005X4)			RB348	1-234-702-11	RES, NETWORK	68 (1005X4)
RB114	1-242-963-21	RES, NETWORK	33 (1005X4)			RB349	1-234-702-11	RES, NETWORK	68 (1005X4)
RB115	1-242-963-21	RES, NETWORK	33 (1005X4)			RB350	1-234-702-11	RES, NETWORK	68 (1005X4)
						RB351	1-234-702-11	RES, NETWORK	68 (1005X4)

RD-051

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
RB401	1-234-378-21	RES, NETWORK 10K (1005X4)		RB715	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB402	1-234-378-21	RES, NETWORK 10K (1005X4)		RB716	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB601	1-234-370-21	RES, NETWORK 22 (1005X4)		RB717	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB602	1-234-370-21	RES, NETWORK 22 (1005X4)		RB718	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB603	1-234-370-21	RES, NETWORK 22 (1005X4)		RB719	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB604	1-234-370-21	RES, NETWORK 22 (1005X4)		RB720	1-234-373-21	RES, NETWORK 220 (1005X4)	
RB605	1-234-370-21	RES, NETWORK 22 (1005X4)		RB806	1-234-714-11	RES, NETWORK 56 (1005X4)	
RB606	1-234-370-21	RES, NETWORK 22 (1005X4)		RB807	1-234-714-11	RES, NETWORK 56 (1005X4)	
RB607	1-234-370-21	RES, NETWORK 22 (1005X4)		RB808	1-234-714-11	RES, NETWORK 56 (1005X4)	
RB608	1-234-370-21	RES, NETWORK 22 (1005X4)		RB809	1-234-714-11	RES, NETWORK 56 (1005X4)	
RB609	1-234-371-21	RES, NETWORK 47 (1005X4)		RB810	1-234-714-11	RES, NETWORK 56 (1005X4)	
RB610	1-234-371-21	RES, NETWORK 47 (1005X4)		RB811	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB611	1-234-371-21	RES, NETWORK 47 (1005X4)		RB812	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB612	1-234-371-21	RES, NETWORK 47 (1005X4)		RB813	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB613	1-234-714-11	RES, NETWORK 56 (1005X4)		RB814	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB614	1-234-714-11	RES, NETWORK 56 (1005X4)		RB815	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB615	1-234-714-11	RES, NETWORK 56 (1005X4)		RB817	1-234-372-21	RES, NETWORK 100 (1005X4)	
RB616	1-234-714-11	RES, NETWORK 56 (1005X4)		RB818	1-234-372-21	RES, NETWORK 100 (1005X4)	
RB623	1-234-370-21	RES, NETWORK 22 (1005X4)		RB819	1-234-372-21	RES, NETWORK 100 (1005X4)	
RB624	1-234-370-21	RES, NETWORK 22 (1005X4)		RB820	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB625	1-234-370-21	RES, NETWORK 22 (1005X4)		RB821	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB626	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB822	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB627	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB823	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB628	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB824	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB629	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB825	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB630	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB826	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB631	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB827	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB632	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB828	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB633	1-234-400-21	CONDUCTOR, NETWORK (2010X4)		RB831	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB636	1-234-370-21	RES, NETWORK 22 (1005X4)		RB832	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB637	1-234-370-21	RES, NETWORK 22 (1005X4)		RB833	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB654	1-242-963-21	RES, NETWORK 33 (1005X4)		RB901	1-234-369-21	RES, NETWORK 10 (1005X4)	
RB655	1-234-373-21	RES, NETWORK 220 (1005X4)		RB902	1-234-369-21	RES, NETWORK 10 (1005X4)	
RB656	1-234-373-21	RES, NETWORK 220 (1005X4)		RB903	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB657	1-234-373-21	RES, NETWORK 220 (1005X4)		RB904	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB658	1-234-373-21	RES, NETWORK 220 (1005X4)		RB905	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB659	1-234-791-21	RES, NETWORK 150X4 (2010) (HX710/HX910)		RB906	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB660	1-234-373-21	RES, NETWORK 220 (1005X4) (HX710/HX910)		RB907	1-234-369-21	RES, NETWORK 10 (1005X4)	
RB661	1-234-373-21	RES, NETWORK 220 (1005X4) (HX710/HX910)		RB908	1-234-369-21	RES, NETWORK 10 (1005X4)	
RB662	1-234-373-21	RES, NETWORK 220 (1005X4) (HX710/HX910)		RB1201	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB663	1-234-373-21	RES, NETWORK 220 (1005X4) (HX710/HX910)		RB1202	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB701	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1203	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB702	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1204	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB703	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1205	1-234-370-21	RES, NETWORK 22 (1005X4)	
RB704	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1601	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB705	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1603	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB706	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1605	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB707	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1606	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB708	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1607	1-242-963-21	RES, NETWORK 33 (1005X4)	
RB709	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1608	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB710	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1609	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB711	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1610	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB712	1-242-963-21	RES, NETWORK 33 (1005X4)		RB1611	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB713	1-234-373-21	RES, NETWORK 220 (1005X4)		RB1612	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB714	1-234-373-21	RES, NETWORK 220 (1005X4)		RB1613	1-234-378-21	RES, NETWORK 10K (1005X4)	
				RB1614	1-234-378-21	RES, NETWORK 10K (1005X4)	
				RB1615	1-234-378-21	RES, NETWORK 10K (1005X4)	
				RB1616	1-234-714-11	RES, NETWORK 56 (1005X4)	
				RB1617	1-234-714-11	RES, NETWORK 56 (1005X4)	
				RB1618	1-234-714-11	RES, NETWORK 56 (1005X4)	

RD-051

Ref. No.	Part No.	Description	Remarks
		<CAPACITOR>	
△ C101		FILM,CHIP 0.22uf 275V	
△ C112		CERAMIC 470pF 250V	
△ C113		CERAMIC 470pF 250V	
△ C114		CERAMIC 470pF 250V	
△ C115		CERAMIC 100pF 250V	
△ C116		CERAMIC 100pF 250V	
△ C117		FILM,CHIP 0.1uf 275V	
		<CONNECTOR>	
△ CN101		AC INLET	
		<FUSE>	
△ F101		FUSE 3.15A/250V	
△ F301		FUSE 1A/250V	
△ F401		FUSE 2A/250V	
△ F402		FUSE 2A/250V	
△ F601		FUSE 3.15A/250V	
△ F701		FUSE 1A/250V	
		<COIL>	
△ L101		LINE FILTER 2A/20uH	
△ L102		LINE FILTER 0.8A/12mH	
		<PHOTO COUPLER>	
△ PC101		PHOTO COUPLER PS2561	
		<TRANSFORMER>	
△ T101		TRANSFORMER,CONVERTER	
		<VARISTOR>	
△ X101		VARISTOR ENE471D-10A	
△	1-468-930-11	POWER SUPPLY BLOCK (GX310:RU,SP/HX710/HX910:RU,SP) *****	
		< CAPACITOR >	
△ C101		METAL 0.1u 250V	
△ C103		CERAMIC 100p	
△ C104		CERAMIC 100p	
△ C112		CERAMIC 1000p	
		< CONNECTOR >	
△ CN101		AC INLET	
		< FUSE >	
△ F101		FUSE T3.15A/250V	
△ P301		FUSE,CHIP 1A	
△ P401		FUSE,CHIP 2.5A	
△ P501		FUSE,CHIP 2A	
△ P502		FUSE,CHIP 2A	
△ P601		FUSE,CHIP 0.8A	
△ P602		FUSE,CHIP 5A	

8-25

POWER SUPPLY BLOCK

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< COIL >			1-751-271-71	CORD, CONNECTION (AV)	
△ L101		LINE FILTER			1-765-635-71	CORD, CONNECTION (NTSC)	
△ L102		LINE FILTER				(GX310:TW,E/HX910:TW, E)	
		< PHOTO COUPLER >			1-696-593-11	CORD, CONNECTION (PAL)	
						(GX310:RU,SP/HX710/HX910:RU, SP)	
△ PC101		PHOTO COUPLER PC123		△	1-830-337-11	POWER-SUPPLY CORD	
		< RESISTOR >				(GX310: TW/HX910: TW)	
△ R101		CABON 4.7M 1/2W		△	1-575-131-82	CORD, POWER	
△ R102		CABON 220 1/2W				(GX310:E,SP,RU/HX910: E, SP, RU)	
		< VARISTOR >			1-555-074-52	CORD, POWER (HX710)	
△ Z101		VARISTOR S10K300 470V			2-629-953-11	MANUAL, INSTRUCTION (Traditional Chinese)	
		< TORANSFORMER >				(GX310: TW)	
△ T101		TRANSFORMER,POWER			2-629-953-21	MANUAL, INSTRUCTION (Spanish)(GX310: E)	
					2-629-952-41	MANUAL, INSTRUCTION (Russian)(GX310: RU)	
					2-629-952-11	MANUAL, INSTRUCTION (English)(GX310: SP)	
					2-629-952-21	MANUAL, INSTRUCTION (Traditional Chinese)	
						(GX310: SP)	
					2-629-952-31	MANUAL, INSTRUCTION (Arabic)(GX310: SP)	
					2-629-954-11	MANUAL, INSTRUCTION (English)(HX710)	
					2-629-955-11	MANUAL, INSTRUCTION (Traditional Chinese)	
						(HX910: TW)	
					2-629-955-21	MANUAL, INSTRUCTION (Spanish)(HX910: E)	
					2-629-954-41	MANUAL, INSTRUCTION (Russian)(HX910: RU)	
					2-629-954-11	MANUAL, INSTRUCTION (English)(HX910: SP)	
					2-629-954-21	MANUAL, INSTRUCTION (Traditional Chinese)	
						(HX910: SP)	
					2-629-954-31	MANUAL, INSTRUCTION (Arabic)(HX910: SP)	
		ACCESSORIES					

1-479-289-11		REMOTE COMMANDER (RMT-D217P)					
		(HX710/HX910: RU, SP)					
1-479-290-11		REMOTE COMMANDER (RMT-D216A)					
		(GX310: TW, E)					
1-479-300-11		REMOTE COMMANDER (RMT-D216P)					
		(GX310: RU, SP)					
1-479-301-11		REMOTE COMMANDER (RMT-D217A)					
		(HX910: TW, E)					
1-569-008-22		ADAPTOR, CONVERSION 2P					
		(GX310:E/HX910: E)					

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.