

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑
Parts Color Cabinet's Color


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

8-1-1. OVERALL SECTION

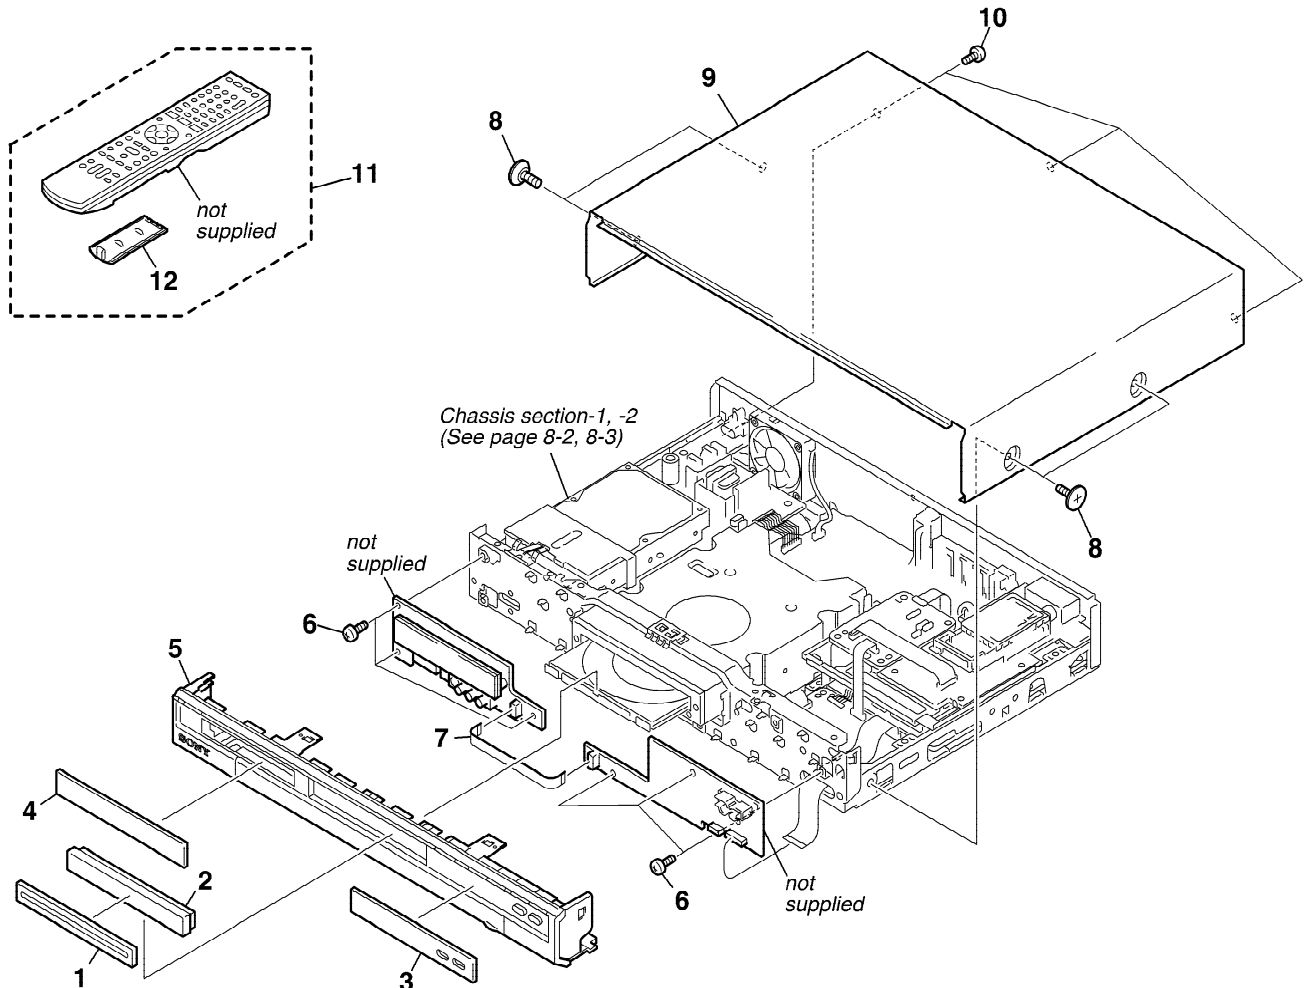

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	2-658-530-61	WINDOW (TRAY) (GXD360)		5	X-2109-930-1	PANEL ASSY, FRONT (HXD562)	
1	X-2108-959-1	ASSY, WINDOW (TRAY) (HXD560/HXD562/HXD760)		5	X-2148-068-1	PANEL ASSY, FRONT (HXD760:AUS)	
2	X-2102-894-1	COVER ASSY, TRAY (HXD760:AUS)		6	3-077-331-01	+BV3 (3-CR)	
2	X-2108-963-1	COVER ASSY, TRAY (GXD360/HXD560/HXD562/HXD760:AEP)		* 7	1-831-413-11	CABLE, FLEXIBLE FLAT (FLR-007)	
3	2-658-528-41	WINDOW (R)(HXD560/HXD562/HXD760:AEP)		8	3-070-883-41	SCREW, TAPPING	
3	2-658-528-51	WINDOW (R) (HXD760:AUS)		9	A-1176-233-A	CASE BLOCK ASSY (SERVICE USE) (GXD360/HXD560/HXD562/HXD760:AEP)	
3	2-658-528-61	WINDOW (R) (GXD360)		9	A-1184-989-A	CASE BLOCK ASSY (SERVICE USE) (HXD760:AUS)	
4	2-658-529-01	WINDOW (L) (HXD560/HXD562/HXD760)		10	3-076-563-11	SCREW, SPECIAL FRONT POINT	
4	2-658-529-21	WINDOW (L) (GXD360)		11	1-479-658-11	REMOTE COMMANDER (RMT-D234P) (HXD560/HXD562/HXD760)	
5	X-2109-927-1	PANEL ASSY, FRONT (GXD360)		11	1-479-659-11	REMOTE COMMANDER (RMT-D233P) (GXD360)	
5	X-2109-928-1	PANEL ASSY, FRONT (HXD560)		12	2-658-476-01	COVER, BATTERY (FOR RMT-D233P/D234P)	
5	X-2109-929-1	PANEL ASSY, FRONT (HXD760:AEP)					


8-1-2. CHASSIS SECTION-1

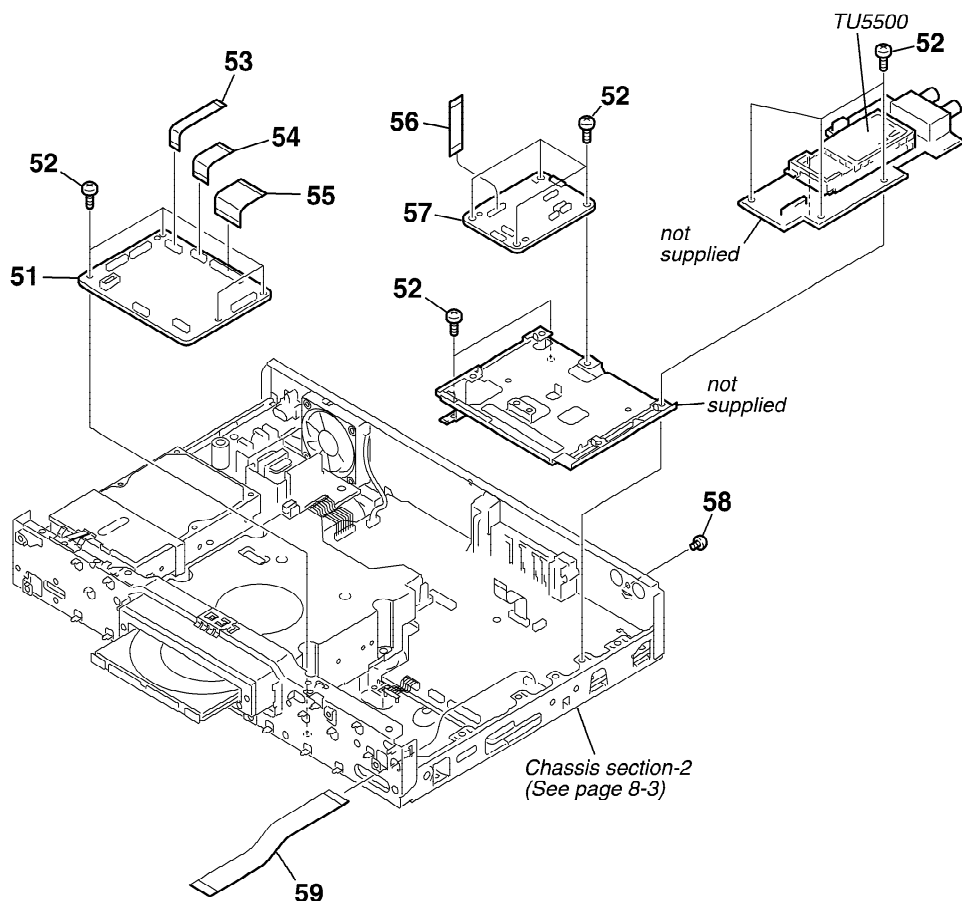

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	A-1194-324-A	RD-60 BOARD, COMPLETE (SERVICE)	(GXD360)	* 54	1-831-511-11	CABLE, FLEXIBLE FLAT (FRA-004)	(HXD560/HXD562/HXD760:AEP)
51	A-1194-326-A	RD-60 BOARD, COMPLETE (SERVICE)	(HXD560)	* 55	1-831-411-11	CABLE, FLEXIBLE FLAT (FRA-005)	
51	A-1194-327-A	RD-60 BOARD, COMPLETE (SERVICE)	(HXD760:AUS)	* 56	1-831-561-11	CABLE, FLEXIBLE FLAT (FTD-001)	
51	A-1194-641-A	RD-60 BOARD, COMPLETE (SERVICE)	(HXD760:AEP)	57	A-1193-499-A	DT-117 BOARD, COMPLETE (SERVICE)	(GXD360/HXD560/HXD562/HXD760:AEP)
51	A-1194-642-A	RD-60 BOARD, COMPLETE (SERVICE)	(HXD562)	57	A-1193-501-A	DT-117 BOARD, COMPLETE (SERVICE)	(HXD760:AUS)
52	3-077-331-01	+BV3 (3-CR)		58	3-088-023-01	+B3 (3-CR)	
* 53	1-831-560-11	CABLE, FLEXIBLE FLAT (FRD-003)		* 59	1-831-414-11	CABLE, FLEXIBLE FLAT (FAR-004)	
* 54	1-831-410-11	CABLE, FLEXIBLE FLAT (FRA-003)	(GXD360/HXD760:AUS)	△ TU5500	8-597-526-00	TUNER UNIT, DIGITAL BT-D-DC412Z (HXD760)	
				△ TU5500	8-597-937-10	TUNER UNIT, DIGITAL BT-D-DU607Z	(GXD360/HXD560/HXD562)

Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

8-1-3. CHASSIS SECTION-2

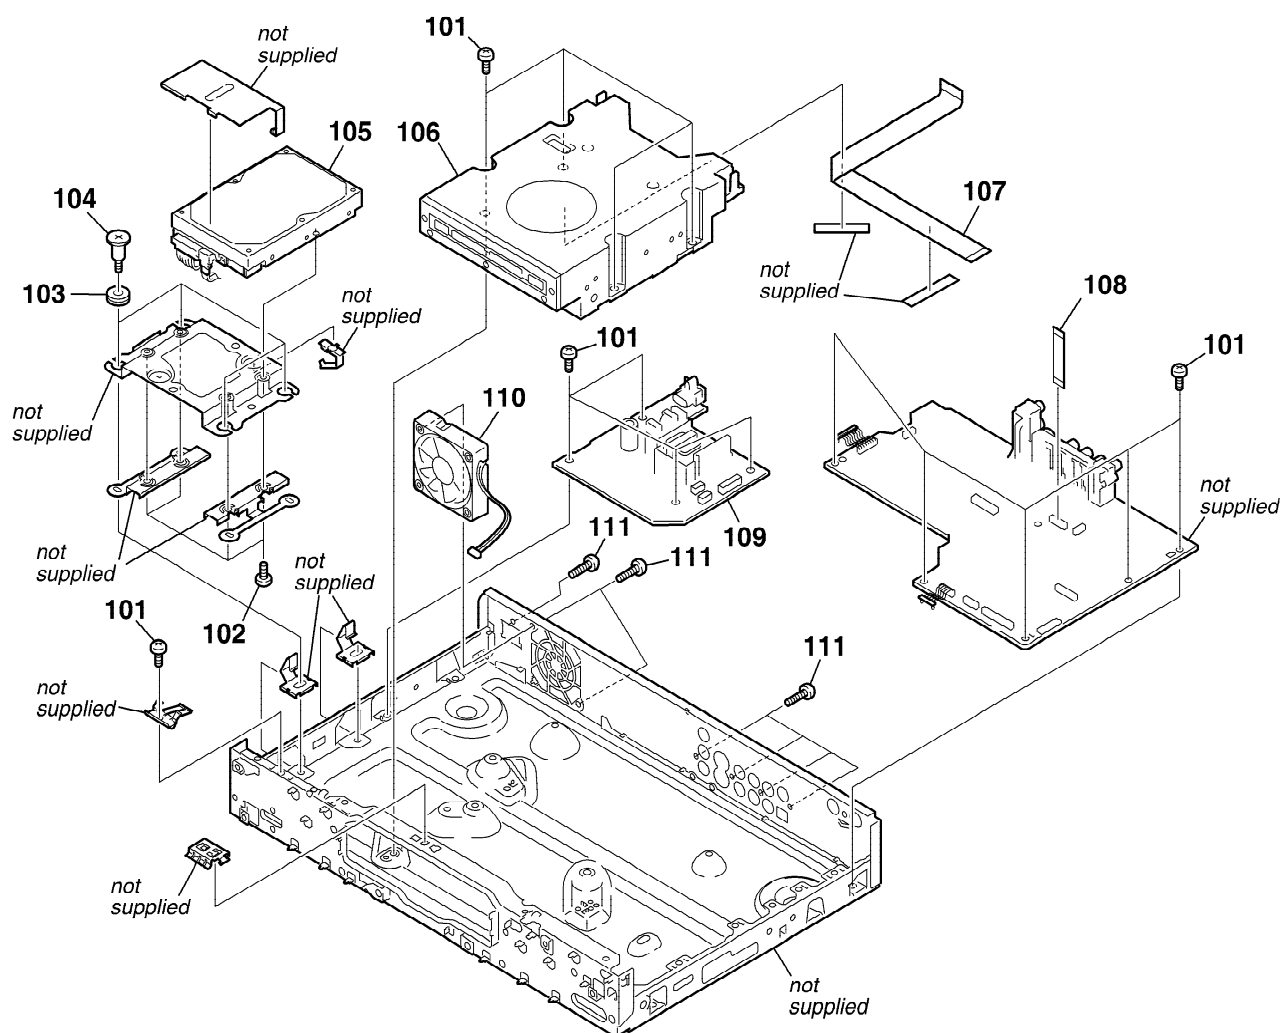

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	3-077-331-01	+BV3 (3-CR)		△ 106	1-797-413-11	DRIVE, DVD DRW-V35A	
102	3-087-675-01	6-32UNCX5 (HXD560/HXD562/HXD760)		107	1-832-951-12	CABLE, FLEXIBLE FLAT (FRD-010)	
103	3-089-380-01	DAMPER (HXD560/HXD562/HXD760)		* 108	1-831-562-11	CABLE, FLEXIBLE FLAT (FAD-005)	
104	2-159-920-01	SCREW, HDD DAMPER		△ 109	1-468-961-11	POWER SUPPLY BLOCK (SRV-1858EK)	
		(HXD560/HXD562/HXD760)		110	1-787-290-21	FAN, D.C	
△ 105	A-1192-736-A	HDD(SATA-160GB) ASSY (HXD760)		111	3-077-331-31	+BV3 (3-CR)	
△ 105	A-1192-748-A	HDD(SATA-80GB) ASSY (HXD560/HXD562)					

Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- COILS
uH: μ H
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		AV-103 BOARD, COMPLETE		C318	1-126-934-11	ELECT 220uF 20%	16V
		*****		C319	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
		(Ref.NO.:10,000 SERIES)		C320	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
		< CAPACITOR >		C321	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C104	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C324	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C105	1-109-982-11	CERAMIC CHIP 1uF 10%	10V				
		(HXD560/HXD562/HXD760:AEP)		C325	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C106	1-137-710-11	CERAMIC CHIP 10uF 20%	6.3V	C326	1-164-230-11	CERAMIC CHIP 220PF 5%	50V
		(HXD560/HXD562/HXD760:AEP)		C327	1-164-230-11	CERAMIC CHIP 220PF 5%	50V
C109	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C336	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C110	1-126-947-11	ELECT 47uF 20%	35V				(HXD760:AUS)
				C337	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C111	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	C401	1-126-947-11	ELECT 47uF 20%	35V
C112	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C405	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
C114	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	C407	1-126-964-11	ELECT 10uF 20%	50V
C115	1-126-947-11	ELECT 47uF 20%	35V	C409	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V
C116	1-126-947-11	ELECT 47uF 20%	35V	C410	1-126-964-11	ELECT 10uF 20%	50V
C117	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C601	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C118	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C602	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C119	1-100-591-91	CERAMIC CHIP 1uF 10%	25V				(GXD360)
C120	1-100-591-91	CERAMIC CHIP 1uF 10%	25V	C604	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C123	1-126-947-11	ELECT 47uF 20%	35V	C607	1-124-589-11	ELECT 47uF 20%	16V
				C613	1-162-909-11	CERAMIC CHIP 4PF 0.25PF	50V
C124	1-128-396-11	ELECT CHIP 470uF 20%	10V				
C209	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C614	1-162-909-11	CERAMIC CHIP 4PF 0.25PF	50V
C210	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C615	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C211	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C616	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C212	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C617	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C618	1-124-589-11	ELECT 47uF 20%	16V
C213	1-100-966-91	CERAMIC CHIP 10uF 20%	10V				
C214	1-100-966-91	CERAMIC CHIP 10uF 20%	10V	C619	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C215	1-100-966-91	CERAMIC CHIP 10uF 20%	10V	C620	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C216	1-100-966-91	CERAMIC CHIP 10uF 20%	10V	C621	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C217	1-162-923-11	CERAMIC CHIP 47PF 5%	50V	C622	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
				C623	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C218	1-162-923-11	CERAMIC CHIP 47PF 5%	50V				
C301	1-126-947-11	ELECT 47uF 20%	35V	C624	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C304	1-126-933-11	ELECT 100uF 20%	16V	C625	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C306	1-104-662-91	ELECT 22uF 20%	25V	C626	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C307	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V	C627	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C628	1-125-891-11	CERAMIC CHIP 0.47uF 10%	10V
C308	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V				
C309	1-126-947-11	ELECT 47uF 20%	35V	C629	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C310	1-164-217-11	CERAMIC CHIP 150PF 5%	50V	C630	1-125-891-11	CERAMIC CHIP 0.47uF 10%	10V
C311	1-164-217-11	CERAMIC CHIP 150PF 5%	50V	C631	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C312	1-164-739-11	CERAMIC CHIP 560PF 5%	50V	C632	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C633	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C313	1-164-739-11	CERAMIC CHIP 560PF 5%	50V				
C314	1-164-218-11	CERAMIC CHIP 180PF 5%	50V	C634	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C315	1-164-218-11	CERAMIC CHIP 180PF 5%	50V	C635	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C316	1-126-947-11	ELECT 47uF 20%	35V	C639	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C317	1-126-947-11	ELECT 47uF 20%	35V	C641	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
				C642	1-124-589-11	ELECT 47uF 20%	16V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C646	1-162-963-11	CERAMIC CHIP	680PF 10% 50V	C747	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C649	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C748	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
		(GXD360/HXD560/HXD562/HXD760:AEP)		C749	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C650	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C750	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C651	1-126-926-11	ELECT	1000uF 20% 10V	C751	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C652	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
C655	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C752	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C656	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C753	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C657	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C658	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C754	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
		(GXD360)				(HXD760:AUS)	
C701	1-126-947-11	ELECT	47uF 20% 35V	C755	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
						(HXD760:AUS)	
C702	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C760	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C703	1-107-726-91	CERAMIC CHIP	0.01uF 10% 16V			(HXD760:AUS)	
C704	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C762	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C705	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V	C772	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C706	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C774	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
		(GXD360/HXD560/HXD562/HXD760:AEP)		C775	1-126-947-11	ELECT	47uF 20% 35V
C707	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C801	1-107-726-91	CERAMIC CHIP	0.01uF 10% 16V
		(GXD360/HXD560/HXD562/HXD760:AEP)					
C708	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C802	1-126-964-11	ELECT	10uF 20% 50V
C709	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C803	1-126-964-11	ELECT	10uF 20% 50V
C710	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C804	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C711	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C805	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
						(GXD360/HXD560/HXD562/HXD760:AEP)	
C712	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C806	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C713	1-107-696-91	ELECT	47uF 20% 16V			(HXD760:AUS)	
C714	1-126-947-11	ELECT	47uF 20% 35V	C807	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C715	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C808	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C716	1-126-947-11	ELECT	47uF 20% 35V			(HXD760:AUS)	
C717	1-126-947-11	ELECT	47uF 20% 35V	C809	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C718	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C810	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C719	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C720	1-126-947-11	ELECT	47uF 20% 35V	C812	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C721	1-126-947-11	ELECT	47uF 20% 35V				
C722	1-126-964-11	ELECT	10uF 20% 50V	C813	1-104-658-91	ELECT	100uF 20% 10V
C723	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C724	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C815	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C725	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C816	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C726	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C727	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C817	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C728	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V	C818	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C729	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V				
C730	1-104-662-91	ELECT	22uF 20% 25V	C819	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C731	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C732	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C820	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C733	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C734	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C821	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C735	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C736	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C822	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
						(GXD360/HXD560/HXD562/HXD760:AEP)	
C737	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C823	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C738	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C739	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C824	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C740	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C741	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C825	1-104-658-91	ELECT	100uF 20% 10V
						(GXD360/HXD560/HXD562/HXD760:AEP)	
C742	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C826	1-126-947-11	ELECT	47uF 20% 35V
C743	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	
C744	1-126-947-11	ELECT	47uF 20% 35V	C827	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C745	1-126-947-11	ELECT	47uF 20% 35V	C828	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C746	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V			(GXD360/HXD560/HXD562/HXD760:AEP)	

Ref. No.	Part No.	Description	Remarks
C829	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C830	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C832	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C833	1-126-947-11	ELECT 47uF 20% 35V (GXD360/HXD560/HXD562/HXD760:AEP)	
C834	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C835	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C836	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C837	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C838	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C839	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C840	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C841	1-126-947-11	ELECT 47uF 20% 35V (GXD360/HXD560/HXD562/HXD760:AEP)	
C842	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C843	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	
C844	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	
C845	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C846	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C847	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C848	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C849	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C850	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C851	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C852	1-164-230-11	CERAMIC CHIP 220PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C853	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C854	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C855	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C856	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (GXD360/HXD560/HXD562/HXD760:AEP)	
C857	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C858	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C861	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	

Ref. No.	Part No.	Description	Remarks
C862	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	
C863	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	
C864	1-165-908-11	CERAMIC CHIP 1uF 10% 10V (GXD360/HXD560/HXD562/HXD760:AEP)	
C865	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
C866	1-126-947-11	ELECT 47uF 20% 35V (GXD360/HXD560/HXD562/HXD760:AEP)	
C867	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (GXD360/HXD560/HXD562/HXD760:AEP)	
< CONNECTOR >			
CN101	1-815-458-21	CONNECTOR, BOARD TO BOARD 15P	
CN103	1-794-509-11	PIN, CONNECTOR (PC BOARD) 3P	
* CN601	1-764-643-21	PIN, CONNECTOR (SMD) 11P	
CN602	1-774-767-51	CONNECTOR, FFC/FPC 15P	
* CN701	1-770-468-21	PIN, CONNECTOR (PC BOARD) 10P	
< DIODE >			
D101	8-719-073-34	DIODE EC21QS03L-TE12L	
D155	8-719-073-34	DIODE EC21QS03L-TE12L	
D301	6-501-115-01	DIODE BAS16-03W	
D303	6-501-115-01	DIODE BAS16-03W	
D608	6-501-115-01	DIODE BAS16-03W (GXD360/HXD560/HXD562/HXD760:AEP)	
D701	6-501-115-01	DIODE BAS16-03W	
D702	8-719-067-40	DIODE STZ6.8N-T146	
D703	8-719-053-18	DIODE 1SR154-400TE-25	
D704	8-719-053-18	DIODE 1SR154-400TE-25	
D709	8-719-067-40	DIODE STZ6.8N-T146 (HXD760:AUS)	
D710	8-719-067-40	DIODE STZ6.8N-T146 (HXD760:AUS)	
D714	8-719-067-40	DIODE STZ6.8N-T146	
D715	8-719-067-40	DIODE STZ6.8N-T146	
D718	8-719-067-40	DIODE STZ6.8N-T146 (HXD760:AUS)	
D719	8-719-067-40	DIODE STZ6.8N-T146 (HXD760:AUS)	
D720	8-719-067-40	DIODE STZ6.8N-T146 (HXD760:AUS)	
D721	8-719-067-40	DIODE STZ6.8N-T146	
D724	8-719-067-40	DIODE STZ6.8N-T146	
D728	8-719-067-40	DIODE STZ6.8N-T146	
D731	8-719-067-40	DIODE STZ6.8N-T146	
D732	8-719-067-40	DIODE STZ6.8N-T146	
D801	8-719-069-55	DIODE UDZSTE-175.6B	
D802	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
D803	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
D804	6-501-486-01	DIODE NNCD3.9F-T1B (GXD360/HXD560/HXD562/HXD760:AEP)	
D805	6-501-486-01	DIODE NNCD3.9F-T1B (GXD360/HXD560/HXD562/HXD760:AEP)	
D806	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
D807	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
D808	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
D809	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D810	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB809	1-469-876-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D811	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB810	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D812	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB811	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D813	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB812	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D814	8-719-069-56	DIODE UDZSTE-176.2B (GXD360/HXD560/HXD562/HXD760:AEP)		FB813	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D815	8-719-083-63	DIODE UDZSTE-1713B (GXD360/HXD560/HXD562/HXD760:AEP)		FB814	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D816	8-719-069-56	DIODE UDZSTE-176.2B (GXD360/HXD560/HXD562/HXD760:AEP)		FB815	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D817	8-719-083-63	DIODE UDZSTE-1713B (GXD360/HXD560/HXD562/HXD760:AEP)		FB816	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D818	6-501-486-01	DIODE NNCD3.9F-T1B (GXD360/HXD560/HXD562/HXD760:AEP)		FB817	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D819	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB818	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D820	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB819	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D821	6-501-486-01	DIODE NNCD3.9F-T1B (GXD360/HXD560/HXD562/HXD760:AEP)		FB820	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D822	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB821	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D823	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB822	1-414-228-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)	
D824	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		FB824	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)	
D825	8-719-069-56	DIODE UDZSTE-176.2B (GXD360/HXD560/HXD562/HXD760:AEP)				< IC >	
D827	8-719-067-40	DIODE STZ6.8N-T146 (GXD360/HXD560/HXD562/HXD760:AEP)		IC102	6-702-889-01	IC SI-3033KS-TL (HXD560/HXD562/HXD760:AEP)	
D828	8-719-069-56	DIODE UDZSTE-176.2B (GXD360/HXD560/HXD562/HXD760:AEP)		IC104	6-708-913-01	IC TK73400AU3G0L-C	
D1401	6-501-115-01	DIODE BAS16-03W		IC105	6-704-470-01	IC TK11233CMCL-G	
		< FERRITE BEAD >		IC106	6-705-308-01	IC SI-3010KM-TL	
FB301	1-414-228-11	INDUCTOR, FERRITE BEAD		IC107	6-707-208-01	IC TK11100CSCB-G	
FB302	1-414-228-11	INDUCTOR, FERRITE BEAD		IC108	6-705-313-01	IC S-T111B50MC-OHJTFG	
FB801	1-500-283-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)		IC202	8-759-100-96	IC uPC4558G2	
FB802	1-469-876-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)		IC203	8-759-100-96	IC uPC4558G2	
FB803	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)		IC302	8-759-100-96	IC uPC4558G2	
				IC303	6-705-313-01	IC S-T111B50MC-OHJTFG	
FB804	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)		IC401	8-749-925-00	IC TK11819MTL	
FB805	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)		IC601	6-706-673-01	IC S-80852CNMC-B9DT2G (HXD560/HXD562/HXD760)	
FB806	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)		IC601	6-710-144-01	IC S-80952CNMC-G9NT2G (GXD360)	
FB807	1-469-796-21	FERRITE, CHIP (GXD360/HXD560/HXD562/HXD760:AEP)		IC603	6-806-970-01	IC M306H5FGFP-C39 (HXD760: AEP)	
FB808	1-500-283-11	INDUCTOR, FERRITE BEAD (GXD360/HXD560/HXD562/HXD760:AEP)		IC603	6-806-989-01	IC M306H5MC-C40FP (GXD360/HXD560/HXD562/HXD760: AUS)	
				* IC604	6-708-842-01	IC S-24CS04AFJ-TB-G	
				* IC605	6-708-948-01	IC R2051S03-E2-F	
				IC606	8-759-649-46	IC SN74AHC1G08DCKR (GXD360)	
				IC701	6-708-957-01	IC TK72233CMCL-G	
				* IC702	6-708-890-01	IC LA73036M-TBA-E	
				IC801	6-705-338-01	IC TK11250CMCL-G	
				IC802	6-708-892-01	IC BD3826FS	
				IC803	6-708-887-01	IC BH7626KS2 (GXD360/HXD560/HXD562/HXD760:AEP)	
				IC804	8-759-100-96	IC uPC4558G2	

Ref. No.	Part No.	Description	Remarks
		< JACK >	
J702	1-784-643-21	JACK BLOCK, PIN (LINE OUT) (HXD760:AUS)	
J702	1-818-363-11	JACK BLOCK, PIN (LINE OUT) (GXD360/HXD560/HXD562/HXD760:AEP)	
J703	1-818-063-11	JACK, PIN (3P)(COMPONENT VIDEO OUT)	
		< COIL >	
L401	1-414-856-11	INDUCTOR 10uH	
L403	1-414-858-31	INDUCTOR 1mH	
L404	1-414-856-11	INDUCTOR 10uH	
L601	1-412-533-21	INDUCTOR 47uH	
L602	1-412-533-21	INDUCTOR 47uH	
L701	1-412-060-11	INDUCTOR 22uH	
L702	1-469-967-21	INDUCTOR 10uH	
L703	1-469-967-21	INDUCTOR 10uH	
L704	1-469-967-21	INDUCTOR 10uH	
L803	1-414-743-21	INDUCTOR 47uH (GXD360/HXD560/HXD562/HXD760:AEP)	
		< IC LINK >	
△PS102	1-576-570-21	FUSE, MICRO (1608 TYPE)(0.63A)	
△PS103	1-576-570-21	FUSE, MICRO (1608 TYPE)(0.63A)	
△PS104	1-576-416-21	FUSE 2A/36V	
△PS602	1-576-570-21	FUSE, MICRO (1608 TYPE)(0.63A)	
		< TRANSISTOR >	
Q101	8-729-421-19	TRANSISTOR UN2213	
Q104	8-729-010-05	TRANSISTOR MSB709-RT1	
Q105	8-729-421-22	TRANSISTOR UN2211	
Q301	8-729-424-08	TRANSISTOR UN2111	
Q302	8-729-921-80	TRANSISTOR 2SD1781K-T146-QR	
Q303	8-729-010-29	TRANSISTOR MSD601-RST1	
Q304	8-729-045-17	TRANSISTOR 2SB1561T100Q	
Q305	8-729-421-19	TRANSISTOR UN2213	
Q307	8-729-027-53	TRANSISTOR DTC124TKA-T146	
Q309	6-551-287-01	TRANSISTOR 2SD2704K-T146	
Q310	6-551-287-01	TRANSISTOR 2SD2704K-T146	
Q311	8-729-010-05	TRANSISTOR MSB709-RT1	
Q313	8-729-010-29	TRANSISTOR MSD601-RST1	
Q601	8-729-421-19	TRANSISTOR UN2213	
Q611	8-729-421-22	TRANSISTOR UN2211 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q612	8-729-010-05	TRANSISTOR MSB709-RT1 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q613	8-729-010-29	TRANSISTOR MSD601-RST1 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q614	8-729-010-29	TRANSISTOR MSD601-RST1 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q615	8-729-010-29	TRANSISTOR MSD601-RST1 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q616	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q702	8-729-010-29	TRANSISTOR MSD601-RST1	
Q705	6-550-280-01	TRANSISTOR BC857CE6327	
Q707	8-729-010-29	TRANSISTOR MSD601-RST1	
Q708	8-729-010-29	TRANSISTOR MSD601-RST1	
Q709	8-729-010-29	TRANSISTOR MSD601-RST1	
Q710	8-729-010-29	TRANSISTOR MSD601-RST1	
Q711	8-729-010-29	TRANSISTOR MSD601-RST1	
Q715	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q716	8-729-421-19	TRANSISTOR UN2213	
Q801	8-729-010-05	TRANSISTOR MSB709-RT1	

Ref. No.	Part No.	Description	Remarks
Q807	6-550-683-01	TRANSISTOR RJK005N03-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
Q808	8-729-027-24	TRANSISTOR DTA114TKA-T146 (GXD360/HXD560/HXD562/HXD760:AEP)	
		< RESISTOR >	
R101	1-216-295-91	SHORT CHIP 0	
R103	1-216-864-11	SHORT CHIP 0	
R105	1-216-841-11	METAL CHIP 47K 5% 1/10W	
R106	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R111	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R113	1-218-897-11	METAL CHIP 120K 0.5% 1/10W	
R114	1-218-875-11	METAL CHIP 15K 0.5% 1/10W	
R115	1-218-869-11	METAL CHIP 8.2K 0.5% 1/10W	
R120	1-216-864-11	SHORT CHIP 0	
R121	1-218-885-11	METAL CHIP 39K 0.5% 1/10W	
R122	1-218-873-11	METAL CHIP 12K 0.5% 1/10W	
R130	1-216-864-11	SHORT CHIP 0	
R131	1-218-875-11	METAL CHIP 15K 0.5% 1/10W	
R132	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
R135	1-216-295-91	SHORT CHIP 0	
R137	1-216-295-91	SHORT CHIP 0	
R140	1-216-295-91	SHORT CHIP 0	
R142	1-216-295-91	SHORT CHIP 0	
R144	1-216-295-91	SHORT CHIP 0	
R145	1-216-295-91	SHORT CHIP 0	
R146	1-216-295-91	SHORT CHIP 0	
R148	1-216-295-91	SHORT CHIP 0	
R154	1-216-295-91	SHORT CHIP 0	
R155	1-216-864-11	SHORT CHIP 0	
R218	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
R219	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
R222	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
R223	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
R224	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R225	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R226	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R227	1-218-863-11	METAL CHIP 4.7K 0.5% 1/10W	
R304	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R305	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R306	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R307	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R308	1-216-841-11	METAL CHIP 47K 5% 1/10W	
R309	1-216-830-11	METAL CHIP 5.6K 5% 1/10W	
R310	1-218-864-11	METAL CHIP 5.1K 0.5% 1/10W	
R311	1-218-864-11	METAL CHIP 5.1K 0.5% 1/10W	
R312	1-218-864-11	METAL CHIP 5.1K 0.5% 1/10W	
R313	1-218-864-11	METAL CHIP 5.1K 0.5% 1/10W	
R314	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	
R315	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	
R316	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R317	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R318	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R320	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R321	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	
R323	1-218-865-11	METAL CHIP 5.6K 0.5% 1/10W	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R326	1-216-817-11	METAL CHIP	470 5% 1/10W	R646	1-216-833-11	METAL CHIP	10K 5% 1/10W
R327	1-216-817-11	METAL CHIP	470 5% 1/10W	R647	1-216-817-11	METAL CHIP	470 5% 1/10W
R330	1-216-841-11	METAL CHIP	47K 5% 1/10W	R649	1-216-809-11	METAL CHIP	100 5% 1/10W
R331	1-216-841-11	METAL CHIP	47K 5% 1/10W	R651	1-216-809-11	METAL CHIP	100 5% 1/10W
R332	1-216-833-11	METAL CHIP	10K 5% 1/10W	R655	1-216-809-11	METAL CHIP	100 5% 1/10W
R334	1-216-833-11	METAL CHIP	10K 5% 1/10W	R656	1-216-821-11	METAL CHIP	1K 5% 1/10W
R335	1-216-841-11	METAL CHIP	47K 5% 1/10W	R658	1-216-809-11	METAL CHIP	100 5% 1/10W
R338	1-216-833-11	METAL CHIP	10K 5% 1/10W	R659	1-216-809-11	METAL CHIP	100 5% 1/10W
R340	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R660	1-216-809-11	METAL CHIP	100 5% 1/10W
R343	1-216-845-11	METAL CHIP	100K 5% 1/10W	R661	1-216-809-11	METAL CHIP	100 5% 1/10W
R345	1-216-821-11	METAL CHIP	1K 5% 1/10W	R662	1-216-809-11	METAL CHIP	100 5% 1/10W
R346	1-216-821-11	METAL CHIP	1K 5% 1/10W	R663	1-216-809-11	METAL CHIP	100 5% 1/10W
R347	1-216-821-11	METAL CHIP	1K 5% 1/10W	R664	1-216-809-11	METAL CHIP	100 5% 1/10W
R348	1-216-813-11	METAL CHIP	220 5% 1/10W	R665	1-216-809-11	METAL CHIP	100 5% 1/10W
R350	1-216-807-11	METAL CHIP	68 5% 1/10W	R666	1-216-864-11	SHORT CHIP	0
R353	1-216-817-11	METAL CHIP	470 5% 1/10W	R667	1-216-809-11	METAL CHIP	100 5% 1/10W
R355	1-216-817-11	METAL CHIP	470 5% 1/10W	R668	1-216-864-11	SHORT CHIP	0
R362	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R669	1-216-833-11	METAL CHIP	10K 5% 1/10W
R364	1-216-839-11	METAL CHIP	33K 5% 1/10W	R670	1-216-833-11	METAL CHIP	10K 5% 1/10W
R365	1-216-845-11	METAL CHIP	100K 5% 1/10W	R671	1-216-845-11	METAL CHIP	100K 5% 1/10W
R366	1-216-821-11	METAL CHIP	1K 5% 1/10W	R672	1-216-833-11	METAL CHIP	10K 5% 1/10W
R408	1-216-833-11	METAL CHIP	10K 5% 1/10W	R673	1-216-833-11	METAL CHIP	10K 5% 1/10W
R409	1-216-821-11	METAL CHIP	1K 5% 1/10W				(HXD760:AUS)
R418	1-216-845-11	METAL CHIP	100K 5% 1/10W	R674	1-216-833-11	METAL CHIP	10K 5% 1/10W
R420	1-216-809-11	METAL CHIP	100 5% 1/10W	R675	1-216-833-11	METAL CHIP	10K 5% 1/10W
R603	1-216-833-11	METAL CHIP	10K 5% 1/10W	R676	1-216-833-11	METAL CHIP	10K 5% 1/10W
R604	1-216-841-11	METAL CHIP	47K 5% 1/10W	R677	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R606	1-216-833-11	METAL CHIP	10K 5% 1/10W	R678	1-216-845-11	METAL CHIP	100K 5% 1/10W
R609	1-216-845-11	METAL CHIP	100K 5% 1/10W	R680	1-216-833-11	METAL CHIP	10K 5% 1/10W
R610	1-216-809-11	METAL CHIP	100 5% 1/10W				(HXD760:AUS)
R611	1-216-833-11	METAL CHIP	10K 5% 1/10W	R681	1-216-833-11	METAL CHIP	10K 5% 1/10W
R613	1-216-833-11	METAL CHIP	10K 5% 1/10W				(GXD360/HXD560/HXD562/HXD760:AEP)
R614	1-216-833-11	METAL CHIP	10K 5% 1/10W	R682	1-216-833-11	METAL CHIP	10K 5% 1/10W
R615	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R685	1-216-809-11	METAL CHIP	100 5% 1/10W
R616	1-216-829-11	METAL CHIP	4.7K 5% 1/10W	R686	1-216-809-11	METAL CHIP	100 5% 1/10W
R617	1-216-833-11	METAL CHIP	10K 5% 1/10W	R689	1-216-833-11	METAL CHIP	10K 5% 1/10W
R618	1-218-875-11	METAL CHIP	15K 0.5% 1/10W	R692	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R619	1-216-833-11	METAL CHIP	10K 5% 1/10W	R693	1-216-825-11	METAL CHIP	2.2K 5% 1/10W
R620	1-216-833-11	METAL CHIP	10K 5% 1/10W	R697	1-216-833-11	METAL CHIP	10K 5% 1/10W
R621	1-216-833-11	METAL CHIP	10K 5% 1/10W	R698	1-216-833-11	METAL CHIP	10K 5% 1/10W
R622	1-216-833-11	METAL CHIP	10K 5% 1/10W	R699	1-216-833-11	METAL CHIP	10K 5% 1/10W
R623	1-216-864-11	SHORT CHIP	0				(GXD360/HXD560/HXD562/HXD760:AEP)
R624	1-216-809-11	METAL CHIP	100 5% 1/10W	R702	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
R626	1-216-864-11	SHORT CHIP	0				(GXD360)
R627	1-216-833-11	METAL CHIP	10K 5% 1/10W	R705	1-216-864-11	SHORT CHIP	0
R628	1-216-817-11	METAL CHIP	470 5% 1/10W	R712	1-218-883-11	METAL CHIP	33K 0.5% 1/10W
R629	1-216-864-11	SHORT CHIP	0	R713	1-218-871-11	METAL CHIP	10K 0.5% 1/10W
R630	1-216-809-11	METAL CHIP	100 5% 1/10W	R714	1-216-855-11	METAL CHIP	680K 5% 1/10W
R631	1-216-809-11	METAL CHIP	100 5% 1/10W	R715	1-216-841-11	METAL CHIP	47K 5% 1/10W
R632	1-216-809-11	METAL CHIP	100 5% 1/10W	R716	1-216-845-11	METAL CHIP	100K 5% 1/10W
R633	1-216-809-11	METAL CHIP	100 5% 1/10W	R718	1-218-867-11	METAL CHIP	6.8K 0.5% 1/10W
R635	1-216-809-11	METAL CHIP	100 5% 1/10W	R719	1-218-852-11	METAL CHIP	1.6K 0.5% 1/10W
R636	1-216-809-11	METAL CHIP	100 5% 1/10W	R726	1-216-817-11	METAL CHIP	470 5% 1/10W
R637	1-218-289-11	METAL CHIP	510 5% 1/10W	R728	1-216-840-11	METAL CHIP	39K 5% 1/10W
R638	1-216-864-11	SHORT CHIP	0 (HXD560/HXD562/HXD760)	R729	1-216-837-11	METAL CHIP	22K 5% 1/10W
R639	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R733	1-216-809-11	METAL CHIP	100 5% 1/10W
R642	1-216-825-11	METAL CHIP	2.2K 5% 1/10W	R736	1-216-801-11	METAL CHIP	22 5% 1/10W
R643	1-216-833-11	METAL CHIP	10K 5% 1/10W	R738	1-216-801-11	METAL CHIP	22 5% 1/10W
R644	1-216-809-11	METAL CHIP	100 5% 1/10W	R740	1-216-801-11	METAL CHIP	22 5% 1/10W
R645	1-216-833-11	METAL CHIP	10K 5% 1/10W	R742	1-216-801-11	METAL CHIP	22 5% 1/10W

Ref. No.	Part No.	Description	Remarks
R744	1-216-801-11	METAL CHIP 22 5%	1/10W
R747	1-218-285-11	METAL CHIP 75 5%	1/10W
R749	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R750	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R751	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R752	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R753	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R755	1-216-821-11	METAL CHIP 1K 5%	1/10W
R760	1-216-833-11	METAL CHIP 10K 5%	1/10W
R761	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R765	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R766	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R769	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R772	1-216-833-11	METAL CHIP 10K 5%	1/10W
R776	1-218-285-11	METAL CHIP 75 5%	1/10W
R779	1-218-285-11	METAL CHIP 75 5%	1/10W
R780	1-218-285-11	METAL CHIP 75 5%	1/10W
R782	1-218-285-11	METAL CHIP 75 5%	1/10W (HXD760:AUS)
R785	1-216-864-11	SHORT CHIP 0 (GXD360/HXD760: AUS)	
R785	1-414-864-11	FERRITE, EMI (SMD) (1608) (HXD560/HXD562/HXD760:AEP)	
R786	1-218-285-11	METAL CHIP 75 5%	1/10W (HXD760:AUS)
R787	1-218-285-11	METAL CHIP 75 5%	1/10W (HXD760:AUS)
R791	1-216-864-11	SHORT CHIP 0 (GXD360/HXD760: AUS)	
R791	1-414-864-11	FERRITE, EMI (SMD) (1608) (HXD560/HXD562/HXD760:AEP)	
R795	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R798	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R799	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R802	1-216-845-11	METAL CHIP 100K 5%	1/10W
R803	1-216-845-11	METAL CHIP 100K 5%	1/10W
R804	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R805	1-216-845-11	METAL CHIP 100K 5%	1/10W
R806	1-216-845-11	METAL CHIP 100K 5%	1/10W
R807	1-216-845-11	METAL CHIP 100K 5%	1/10W
R808	1-216-845-11	METAL CHIP 100K 5%	1/10W
R819	1-216-809-11	METAL CHIP 100 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R822	1-216-809-11	METAL CHIP 100 5%	1/10W
R823	1-216-809-11	METAL CHIP 100 5%	1/10W
R825	1-216-809-11	METAL CHIP 100 5%	1/10W
R827	1-216-809-11	METAL CHIP 100 5%	1/10W
R828	1-216-809-11	METAL CHIP 100 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R835	1-216-845-11	METAL CHIP 100K 5%	1/10W
R836	1-216-845-11	METAL CHIP 100K 5%	1/10W
R837	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R838	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R839	1-216-833-11	METAL CHIP 10K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)

Ref. No.	Part No.	Description	Remarks
R840	1-216-813-11	METAL CHIP 220 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R841	1-216-809-11	METAL CHIP 100 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R842	1-216-857-11	METAL CHIP 1M 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R843	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R844	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R845	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R846	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R850	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R851	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R852	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R854	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R858	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R859	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R860	1-216-809-11	METAL CHIP 100 5%	1/10W
R861	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R862	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R863	1-216-809-11	METAL CHIP 100 5%	1/10W
R864	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R865	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R866	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R867	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R868	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R869	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R870	1-218-285-11	METAL CHIP 75 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R871	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R872	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R873	1-216-864-11	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R874	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R875	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R876	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R877	1-216-845-11	METAL CHIP 100K 5%	1/10W (GXD360/HXD560/HXD562/HXD760:AEP)
R878	1-216-295-91	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R879	1-216-295-91	SHORT CHIP 0 (GXD360/HXD560/HXD562/HXD760:AEP)	
R880	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R881	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	

8-11

*

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R140	1-218-945-11	RES-CHIP	220 5% 1/16W	R385	1-218-864-11	METAL CHIP	5.1K 0.5% 1/10W
R141	1-208-679-11	METAL CHIP	680 0.5% 1/16W	R386	1-208-911-11	METAL CHIP	10K 0.5% 1/16W
R142	1-208-679-11	METAL CHIP	680 0.5% 1/16W	R391	1-218-953-11	RES-CHIP	1K 5% 1/16W
R143	1-218-957-11	RES-CHIP	2.2K 5% 1/16W			(GXD360/HXD560/HXD562/HXD760: AEP)	
R144	1-208-679-11	METAL CHIP	680 0.5% 1/16W	R395	1-218-953-11	RES-CHIP	1K 5% 1/16W
						(HXD760:AUS)	
R145	1-208-679-11	METAL CHIP	680 0.5% 1/16W	R396	1-218-953-11	RES-CHIP	1K 5% 1/16W
R146	1-218-937-11	RES-CHIP	47 5% 1/16W	R397	1-218-953-11	RES-CHIP	1K 5% 1/16W
R147	1-218-937-11	RES-CHIP	47 5% 1/16W	R398	1-218-953-11	RES-CHIP	1K 5% 1/16W
R148	1-218-937-11	RES-CHIP	47 5% 1/16W	R400	1-218-965-11	RES-CHIP	10K 5% 1/16W
R149	1-218-937-11	RES-CHIP	47 5% 1/16W	R403	1-218-953-11	RES-CHIP	1K 5% 1/16W
R150	1-218-937-11	RES-CHIP	47 5% 1/16W	R404	1-218-953-11	RES-CHIP	1K 5% 1/16W
R151	1-218-937-11	RES-CHIP	47 5% 1/16W	R405	1-218-941-81	RES-CHIP	100 5% 1/16W
R152	1-218-941-81	RES-CHIP	100 5% 1/16W	R406	1-218-941-81	RES-CHIP	100 5% 1/16W
R154	1-218-965-11	RES-CHIP	10K 5% 1/16W	R407	1-218-941-81	RES-CHIP	100 5% 1/16W
R201	1-218-953-11	RES-CHIP	1K 5% 1/16W	R408	1-218-941-81	RES-CHIP	100 5% 1/16W
R204	1-218-953-11	RES-CHIP	1K 5% 1/16W	R409	1-218-941-81	RES-CHIP	100 5% 1/16W
R205	1-218-953-11	RES-CHIP	1K 5% 1/16W	R410	1-218-941-81	RES-CHIP	100 5% 1/16W
R207	1-218-990-81	SHORT CHIP	0	R412	1-216-864-11	SHORT CHIP	0
R214	1-218-935-11	RES-CHIP	33 5% 1/16W	R460	1-218-949-11	RES-CHIP	470 5% 1/16W
R218	1-218-953-11	RES-CHIP	1K 5% 1/16W	R461	1-218-973-11	RES-CHIP	47K 5% 1/16W
R219	1-218-965-11	RES-CHIP	10K 5% 1/16W	R462	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R237	1-218-937-11	RES-CHIP	47 5% 1/16W	R463	1-218-941-81	RES-CHIP	100 5% 1/16W
R238	1-218-965-11	RES-CHIP	10K 5% 1/16W	R464	1-218-941-81	RES-CHIP	100 5% 1/16W
R243	1-218-941-11	RES-CHIP	100 5% 1/16W	R465	1-218-941-81	RES-CHIP	100 5% 1/16W
R244	1-218-941-11	RES-CHIP	100 5% 1/16W	R466	1-218-941-81	RES-CHIP	100 5% 1/16W
R245	1-218-939-11	RES-CHIP	68 5% 1/16W	R469	1-218-933-11	RES-CHIP	22 5% 1/16W
R246	1-218-939-11	RES-CHIP	68 5% 1/16W	R484	1-218-953-11	RES-CHIP	1K 5% 1/16W
R247	1-218-939-11	RES-CHIP	68 5% 1/16W	R486	1-218-965-11	RES-CHIP	10K 5% 1/16W
R273	1-218-953-11	RES-CHIP	1K 5% 1/16W	R488	1-218-965-11	RES-CHIP	10K 5% 1/16W
R311	1-218-953-11	RES-CHIP	1K 5% 1/16W	R492	1-218-953-11	RES-CHIP	1K 5% 1/16W
R312	1-218-953-11	RES-CHIP	1K 5% 1/16W	< COMPOSITION CIRCUIT BLOCK >			
R313	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB101	1-234-371-21	RES, NETWORK	47 (1005X4)
R316	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB102	1-234-373-21	RES, NETWORK	220 (1005X4)
R318	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB103	1-234-373-21	RES, NETWORK	220 (1005X4)
R341	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB104	1-234-378-21	RES, NETWORK	10K (1005X4)
R342	1-208-675-11	METAL CHIP	470 0.5% 1/16W	RB200	1-234-702-11	RES, NETWORK	68 (1005X4)
R343	1-208-675-11	METAL CHIP	470 0.5% 1/16W	RB201	1-234-702-11	RES, NETWORK	68 (1005X4)
R360	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB202	1-242-963-21	RES, NETWORK	33 (1005X4)
R361	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB203	1-234-702-11	RES, NETWORK	68 (1005X4)
R362	1-218-990-81	SHORT CHIP	0	RB204	1-234-702-11	RES, NETWORK	68 (1005X4)
R363	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB205	1-234-702-11	RES, NETWORK	68 (1005X4)
R364	1-218-990-81	SHORT CHIP	0	RB206	1-234-702-11	RES, NETWORK	68 (1005X4)
R365	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB207	1-234-702-11	RES, NETWORK	68 (1005X4)
R366	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB208	1-234-702-11	RES, NETWORK	68 (1005X4)
R367	1-218-990-81	SHORT CHIP	0	RB209	1-234-702-11	RES, NETWORK	68 (1005X4)
R368	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB210	1-234-378-21	RES, NETWORK	10K (1005X4)
R369	1-218-990-81	SHORT CHIP	0	RB211	1-234-378-21	RES, NETWORK	10K (1005X4)
R371	1-218-990-81	SHORT CHIP	0	RB212	1-234-375-21	RES, NETWORK	1K (1005X4)
R373	1-218-990-81	SHORT CHIP	0	RB213	1-234-375-21	RES, NETWORK	1K (1005X4)
R379	1-218-973-11	RES-CHIP	47K 5% 1/16W	RB214	1-234-375-21	RES, NETWORK	1K (1005X4)
R380	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB404	1-234-378-21	RES, NETWORK	10K (1005X4)
R381	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB463	1-234-372-11	RES, NETWORK	100 (1005X4)
R382	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB464	1-234-372-11	RES, NETWORK	100 (1005X4)
R383	1-218-973-11	RES-CHIP	47K 5% 1/16W	< VIBRATOR >			
R384	1-218-953-11	RES-CHIP	1K 5% 1/16W	X200	1-813-307-11	QUARTZ CRYSTAL UNIT	27Mhz

Ref. No.	Part No.	Description	Remarks
FL-159 BOARD, COMPLETE			

(Ref.NO.:30,000 SERIES)			
< CAPACITOR >			
C3103	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
(GXD360/HXD560/HXD562/HXD760:AEP)			
C3104	1-164-230-11	CERAMIC CHIP 220PF 5% 50V	
(GXD360/HXD560/HXD562/HXD760:AEP)			
C3106	1-125-972-91	ELECT 100uF 20% 16V	
C3110	1-106-363-00	MYLAR 0.0068uF 5% 200V	
C3113	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
C3114	1-128-131-11	ELECT 22uF 20% 50V	
C3115	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
C3116	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
C3117	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
C3118	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
C3120	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C3121	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
< CONNECTOR >			
CN3101	1-774-729-21	PIN, CONNECTOR (PC BOARD) 10P	
< DIODE >			
D3102	8-719-067-40	DIODE STZ6.8N-T146	
D3103	8-719-067-40	DIODE STZ6.8N-T146	
D3104	8-719-067-40	DIODE STZ6.8N-T146	
D3105	8-719-067-40	DIODE STZ6.8N-T146	
D3106	8-719-067-40	DIODE STZ6.8N-T146	
D3107	8-719-067-40	DIODE STZ6.8N-T146	
D3108	8-719-988-61	DIODE 1SS355TE-17	
D3109	8-719-988-61	DIODE 1SS355TE-17	
D3110	8-719-988-61	DIODE 1SS355TE-17	
D3111	8-719-988-61	DIODE 1SS355TE-17	
D3112	8-719-069-56	DIODE UDZS-TE17-6.2B	
< FERRITE BEAD >			
FB3101	1-414-228-11	INDUCTOR, FERRITE BEAD	
(GXD360/HXD560/HXD562/HXD760:AEP)			
FB3102	1-414-228-11	INDUCTOR, FERRITE BEAD	
(GXD360/HXD560/HXD562/HXD760:AEP)			
< IC >			
IC3101	8-759-643-83	IC uPD16315GB-3BS	
< COIL >			
L3101	1-412-537-31	INDUCTOR 100uH	
< FLUORESCENT INDICATOR TUBE >			
* ND3101	1-519-849-21	INDICATOR TUBE, FLUORESCENT	
< TRANSISTOR >			
Q3101	8-729-901-88	TRANSISTOR 2SC2411K-CR	
Q3102	8-729-901-88	TRANSISTOR 2SC2411K-CR	

Ref. No.	Part No.	Description	Remarks
< RESISTOR >			
R3101	1-218-285-11	METAL CHIP 75 5% 1/10W	
R3102	1-218-285-11	METAL CHIP 75 5% 1/10W	
R3103	1-216-864-11	SHORT CHIP 0	
R3104	1-216-864-11	SHORT CHIP 0	
R3105	1-216-864-11	SHORT CHIP 0	
R3108	1-218-285-11	METAL CHIP 75 5% 1/10W	
R3109	1-216-864-11	SHORT CHIP 0	
R3111	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
R3113	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R3114	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R3115	1-216-838-11	METAL CHIP 27K 5% 1/10W	
R3116	1-216-845-11	METAL CHIP 100K 5% 1/10W	
R3121	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R3122	1-216-864-11	SHORT CHIP 0 (HXD760:AUS)	
R3123	1-216-295-91	SHORT CHIP 0	
R3124	1-216-295-91	SHORT CHIP 0	
< SWITCH >			
S3101	1-771-410-21	SWITCH, TACTILE (POWER)	
< TRANSFORMER >			
* T3101	1-445-017-11	TRANSFORMER, DC-DC CONVERTER	
FR-240 BOARD, COMPLETE			

(Ref.NO.:30,000 SERIES)			
< CAPACITOR >			
C3001	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
C3002	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C3004	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V	
< CONNECTOR >			
CN3003	1-815-383-11	CONNECTOR, FPC/FFC 15P	
CN3004	1-785-828-21	CONNECTOR, SQUARE TYPE 4P (DV IN)	
CN3005	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD) 6P	
< DIODE >			
D3002	8-719-077-79	DIODE SLR-332VRT32 (SYNCHRO REC)	
D3003	8-719-077-79	DIODE SLR-332VRT32 (TIMER REC)	
D3004	6-500-176-01	DIODE EB3804X-TP-J555K	
(HXD560/HXD562/HXD760)(HDD)			
D3005	8-719-084-27	DIODE SLI-343YCT32WST	
(HXD560/HXD562/HXD760)(DVD)			
< IC >			
IC3001	6-706-783-01	IC BU2050F-E2	
* IC3002	6-600-500-01	IC GP1UM28XK0SF	
< TRANSISTOR >			
* Q3001	6-550-815-01	TRANSISTOR BCR133 E6327	
Q3002	6-550-280-01	TRANSISTOR BC857CE6327	

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
< RESISTOR >							C109	1-126-246-11	ELECT CHIP	220uF	20%	4V	
R3001	1-216-295-91	SHORT CHIP	0				C110	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3003	1-216-864-11	SHORT CHIP	0				C111	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3004	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		C112	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3005	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C113	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3006	1-216-813-11	METAL CHIP	220	5%	1/10W		C114	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3007	1-216-813-11	METAL CHIP	220	5%	1/10W		C115	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3008	1-216-864-11	SHORT CHIP	0				C116	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HXD560/HXD562/HXD760)				C117	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3009	1-216-806-11	METAL CHIP	56	5%	1/10W		C118	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HXD560/HXD562/HXD760)				C119	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3010	1-216-811-11	METAL CHIP	150	5%	1/10W		C120	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HXD560/HXD562/HXD760)				C121	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3012	1-216-864-11	SHORT CHIP	0				C122	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3013	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W		C123	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3014	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C124	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
R3015	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		C125	1-128-994-21	ELECT CHIP	47uF	20%	10V	
R3016	1-216-830-11	METAL CHIP	5.6K	5%	1/10W		C126	1-126-209-11	ELECT CHIP	100uF	20%	4V	
R3017	1-216-832-11	METAL CHIP	8.2K	5%	1/10W		C127	1-128-994-21	ELECT CHIP	47uF	20%	10V	
R3018	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C128	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3019	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C129	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3020	1-216-827-11	METAL CHIP	3.3K	5%	1/10W		C130	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3023	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C131	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
R3024	1-216-825-11	METAL CHIP	2.2K	5%	1/10W		C132	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
< SWITCH >							C133	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3001	1-771-410-21	SWITCH, TACTILE (PLAY)					C134	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3002	1-771-410-21	SWITCH, TACTILE (REC STOP)					C135	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3003	1-771-410-21	SWITCH, TACTILE (REC)					C136	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3004	1-771-410-21	SWITCH, TACTILE (STOP)					C137	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3005	1-771-410-21	SWITCH, TACTILE (DUB)					C138	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3006	1-771-410-21	SWITCH, TACTILE (OPEN/CLOSE)					C139	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3007	1-771-410-21	SWITCH, TACTILE (CH+)					C140	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3008	1-771-410-21	SWITCH, TACTILE (CH-)					C141	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3009	1-771-410-21	SWITCH, TACTILE (REC MODE)					C142	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3012	1-771-410-21	SWITCH, TACTILE (HXD560/HXD562/HXD760)					C143	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(DVD)				C144	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3013	1-771-410-21	SWITCH, TACTILE (HXD560/HXD562/HXD760)					C145	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HDD)				C146	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
S3014	1-771-410-21	SWITCH, TACTILE (INPUT SELECT)					C147	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
							C148	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*	A-1194-324-A	RD-60 BOARD, COMPLETE (SERVICE)					C149	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(GX D360)				C150	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*	A-1194-326-A	RD-60 BOARD, COMPLETE (SERVICE)					C151	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HX D560)				C152	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*	A-1194-327-A	RD-60 BOARD, COMPLETE (SERVICE)					C153	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HX D760:AUS)				C154	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*	A-1194-641-A	RD-60 BOARD, COMPLETE (SERVICE)					C155	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HX D760:AEP)				C156	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*	A-1194-642-A	RD-60 BOARD, COMPLETE (SERVICE)					C157	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HX D562)				C158	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
*****							C159	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
(Ref.NO.:20,000 SERIES)							C160	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
< CAPACITOR >							C161	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C101	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V		C162	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C102	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C163	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C103	1-165-887-91	CERAMIC CHIP	0.22uF	10%	6.3V		C164	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C104	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V		C165	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
			(HXD560/HXD562/HXD760)				C166	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C107	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		C167	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
							C168	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C169	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C230	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C170	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C231	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C171	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C232	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C172	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C233	1-165-887-91	CERAMIC CHIP	0.22uF 10% 6.3V (HXD560/HXD562/HXD760)
C173	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C234	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C174	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C235	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C175	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C236	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)
C176	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C237	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)
C177	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V	C301	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)
C188	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C302	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)
C189	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C303	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)
C190	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C304	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)
C191	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C305	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)
C192	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C308	1-164-874-11	CERAMIC CHIP	100PF 5% 50V (HXD560/HXD562/HXD760:AEP)
C193	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C309	1-164-882-11	CERAMIC CHIP	220PF 5% 16V (HXD560/HXD562/HXD760:AEP)
C194	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C310	1-164-874-11	CERAMIC CHIP	100PF 5% 50V (HXD560/HXD562/HXD760:AEP)
C195	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C311	1-164-882-11	CERAMIC CHIP	220PF 5% 16V (HXD560/HXD562/HXD760:AEP)
C196	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C312	1-164-874-11	CERAMIC CHIP	100PF 5% 50V (HXD560/HXD562/HXD760:AEP)
C197	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C313	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C198	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C314	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C199	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C315	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C201	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)	C316	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C202	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)	C317	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C203	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)	C318	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C204	1-164-852-11	CERAMIC CHIP	12PF 5% 50V (HXD560/HXD562/HXD760)	C319	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C205	1-164-852-11	CERAMIC CHIP	12PF 5% 50V (HXD560/HXD562/HXD760)	C320	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C206	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)	C321	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C207	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)	C322	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C208	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)	C323	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C209	1-125-837-91	CERAMIC CHIP	1uF 10% 6.3V (HXD560/HXD562/HXD760)	C324	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)
C210	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)				
C214	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)				
C215	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V (HXD560/HXD562/HXD760)				
C217	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)				
C218	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)				
C219	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)				
C220	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)				
C222	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760)				
C223	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V (HXD560/HXD562/HXD760)				
C224	1-164-943-81	CERAMIC CHIP	0.01uF 10% 16V (HXD560/HXD562/HXD760)				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C325	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C706	1-164-849-11	CERAMIC CHIP 9PF 0.5PF 50V	
C326	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C707	1-164-849-11	CERAMIC CHIP 9PF 0.5PF 50V	
C327	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C708	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C328	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C710	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C329	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C711	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C330	1-164-849-11	CERAMIC CHIP 9PF 0.5PF 50V (HXD560/HXD562/HXD760:AEP)		C712	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C331	1-164-849-11	CERAMIC CHIP 9PF 0.5PF 50V (HXD560/HXD562/HXD760:AEP)		C713	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C332	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C714	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C333	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C715	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
C334	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C716	1-112-001-81	CERAMIC CHIP 270PF 5% 50V	
C335	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C803	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V	
C336	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C804	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V	
C337	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C805	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C338	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (HXD560/HXD562/HXD760:AEP)		C806	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C339	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V (HXD560/HXD562/HXD760:AEP)		C807	1-164-854-11	CERAMIC CHIP 15PF 5% 50V	
C340	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V (HXD560/HXD562/HXD760:AEP)		C808	1-164-854-11	CERAMIC CHIP 15PF 5% 50V (HXD560/HXD562/HXD760:AEP)	
C501	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C809	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C502	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C810	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C504	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V (GXD360)		C811	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C505	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C812	1-165-887-91	CERAMIC CHIP 0.22uF 10% 6.3V	
C506	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C813	1-124-779-00	ELECT CHIP 10uF 20% 16V	
C508	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V (GXD360)		C816	1-165-887-91	CERAMIC CHIP 0.22uF 10% 6.3V	
C601	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		C817	1-128-994-21	ELECT CHIP 47uF 20% 10V	
C602	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C1006	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C603	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C1008	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C606	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C1009	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C607	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C1010	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C609	1-128-994-21	ELECT CHIP 47uF 20% 10V		C1011	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C610	1-128-994-21	ELECT CHIP 47uF 20% 10V		C1012	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C611	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		C1013	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C614	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1014	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C615	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C616	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V		C1028	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
C617	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1029	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V	
C618	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1030	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C619	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1031	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C620	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		C1032	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
C621	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		C1033	1-127-715-91	CERAMIC CHIP 0.22uF 10% 16V	
C622	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V		C1034	1-165-887-91	CERAMIC CHIP 0.22uF 10% 6.3V	
C623	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V (HXD560/HXD562/HXD760:AEP)		C1035	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C701	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V		C1036	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
C702	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		C1037	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V	
C703	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		* C1038	1-112-833-11	ELECT CHIP 68uF 20% 16V	
C704	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		< CONNECTOR >			
C705	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V		CN101	1-818-857-51	CONNECTOR, FFC/FPC 40P	
				CN403	1-815-763-32	CONNECTOR, FFC/FPC 24P	
				CN601	1-816-339-21	CONNECTOR, BOARD TO BOARD 9P	
				CN701	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD) 6P	
				< DIODE >			
				D503	8-719-073-35	DIODE RB551V-30TE-17 (GXD360)	
				< FERRITE BEAD >			
				FB101	1-400-794-21	EMI FERRITE (SMD) (1608)	
				FB103	1-400-794-21	EMI FERRITE (SMD) (1608)	
				FB106	1-469-670-21	FERRITE, EMI (SMD) (2012)	
				FB107	1-469-670-21	FERRITE, EMI (SMD) (2012)	
				FB110	1-469-670-21	FERRITE, EMI (SMD) (2012)	

RD-060

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
FB111	1-400-794-21	EMI FERRITE (SMD) (1608)		< TRANSISTOR >			
FB112	1-400-794-21	EMI FERRITE (SMD) (1608)		Q601	8-729-010-05	TRANSISTOR	MSB709-RT1
FB602	1-400-794-21	EMI FERRITE (SMD) (1608)		Q602	8-729-010-05	TRANSISTOR	MSB709-RT1
FB603	1-400-794-21	EMI FERRITE (SMD) (1608)		Q603	8-729-010-05	TRANSISTOR	MSB709-RT1
FB604	1-400-794-21	EMI FERRITE (SMD) (1608)		Q604	8-729-010-05	TRANSISTOR	MSB709-RT1
				Q605	8-729-010-05	TRANSISTOR	MSB709-RT1
FB605	1-400-794-21	EMI FERRITE (SMD) (1608)					
FB606	1-469-084-21	FERRITE 0mH		Q606	8-729-010-05	TRANSISTOR	MSB709-RT1
							(HXD560/HXD562/HXD760:AEP)
				Q607	8-729-010-05	TRANSISTOR	MSB709-RT1
							(HXD560/HXD562/HXD760:AEP)
				< RESISTOR >			
				R103	1-218-990-81	SHORT CHIP	0
				R104	1-218-990-81	SHORT CHIP	0
				R105	1-218-990-81	SHORT CHIP	0
				R106	1-218-941-81	RES-CHIP	100 5% 1/16W
				R107	1-218-990-81	SHORT CHIP	0
				R108	1-218-990-81	SHORT CHIP	0
				R109	1-218-941-81	RES-CHIP	100 5% 1/16W
				R110	1-218-990-81	SHORT CHIP	0
				R111	1-218-941-81	RES-CHIP	100 5% 1/16W
				R112	1-218-990-81	SHORT CHIP	0
				R113	1-218-953-11	RES-CHIP	1K 5% 1/16W
				R114	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R115	1-218-962-11	RES-CHIP	5.6K 5% 1/16W
				R116	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
				R123	1-218-965-11	RES-CHIP	10K 5% 1/16W
				R124	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
				R125	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
				R126	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
				R127	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
				R128	1-218-990-81	SHORT CHIP	0
				R129	1-218-935-11	RES-CHIP	33 5% 1/16W
				R130	1-218-990-81	SHORT CHIP	0
				R131	1-218-933-11	RES-CHIP	22 5% 1/16W
				R132	1-218-933-11	RES-CHIP	22 5% 1/16W
				R133	1-218-990-81	SHORT CHIP	0
				R134	1-218-933-11	RES-CHIP	22 5% 1/16W
				R135	1-218-990-81	SHORT CHIP	0
				R136	1-218-935-11	RES-CHIP	33 5% 1/16W
				R137	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R138	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R139	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R140	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R141	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R142	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R143	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W
				R145	1-218-973-11	RES-CHIP	47K 5% 1/16W
				R146	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W
				R147	1-218-933-11	RES-CHIP	22 5% 1/16W
				R148	1-218-933-11	RES-CHIP	22 5% 1/16W
				R149	1-218-939-11	RES-CHIP	68 5% 1/16W
				R160	1-218-990-81	SHORT CHIP	0
				R161	1-218-990-81	SHORT CHIP	0
				R162	1-218-851-11	METAL CHIP	1.5K 0.5% 1/10W
				R163	1-218-851-11	METAL CHIP	1.5K 0.5% 1/10W
				R164	1-211-977-11	METAL CHIP	22 0.5% 1/10W
				< LINE FILTER >			
LF701	1-400-476-11	COMMON MODE CHOKE COIL					

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R165	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R250	1-216-864-11	SHORT CHIP	0		
R166	1-218-827-11	METAL CHIP	150	0.5%	1/10W					(HXD560/HXD562/HXD760)	
R167	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R252	1-216-864-11	SHORT CHIP	0		
R168	1-218-827-11	METAL CHIP	150	0.5%	1/10W					(HXD560/HXD562/HXD760)	
R169	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R258	1-218-953-11	RES-CHIP	1K	5%	1/16W
										(HXD560/HXD562/HXD760)	
R170	1-218-827-11	METAL CHIP	150	0.5%	1/10W	R261	1-218-965-11	RES-CHIP	10K	5%	1/16W
R171	1-218-935-11	RES-CHIP	33	5%	1/16W					(HXD560/HXD562/HXD760)	
R172	1-218-933-11	RES-CHIP	22	5%	1/16W	R265	1-218-965-11	RES-CHIP	10K	5%	1/16W
R173	1-218-933-11	RES-CHIP	22	5%	1/16W					(HXD560/HXD562/HXD760)	
R174	1-218-933-11	RES-CHIP	22	5%	1/16W						
						R267	1-218-953-11	RES-CHIP	1K	5%	1/16W
R175	1-218-933-11	RES-CHIP	22	5%	1/16W					(HXD560/HXD562/HXD760)	
R180	1-218-965-11	RES-CHIP	10K	5%	1/16W	R269	1-218-953-11	RES-CHIP	1K	5%	1/16W
R181	1-218-965-11	RES-CHIP	10K	5%	1/16W					(HXD560/HXD562/HXD760)	
R182	1-218-945-11	RES-CHIP	220	5%	1/16W	R270	1-218-953-11	RES-CHIP	1K	5%	1/16W
R183	1-218-945-11	RES-CHIP	220	5%	1/16W					(HXD560/HXD562/HXD760)	
						R272	1-218-953-11	RES-CHIP	1K	5%	1/16W
R190	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W					(HXD560/HXD562/HXD760)	
R191	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R274	1-218-965-11	RES-CHIP	10K	5%	1/16W
R192	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W					(HXD560/HXD562/HXD760)	
R193	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W						
R196	1-218-953-11	RES-CHIP	1K	5%	1/16W	R276	1-218-953-11	RES-CHIP	1K	5%	1/16W
										(HXD560/HXD562/HXD760)	
R197	1-216-864-11	SHORT CHIP	0			R279	1-218-990-81	SHORT CHIP	0		
R198	1-218-933-11	RES-CHIP	22	5%	1/16W					(HXD560/HXD562/HXD760)	
R223	1-218-940-11	RES-CHIP	82	5%	1/16W	R282	1-218-990-81	SHORT CHIP	0		
										(HXD560/HXD562/HXD760)	
R224	1-218-933-11	RES-CHIP	22	5%	1/16W	R303	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R225	1-218-940-11	RES-CHIP	82	5%	1/16W	R304	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R226	1-218-940-11	RES-CHIP	82	5%	1/16W	R305	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R227	1-218-933-11	RES-CHIP	22	5%	1/16W	R306	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R228	1-218-940-11	RES-CHIP	82	5%	1/16W	R307	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R229	1-218-933-11	RES-CHIP	22	5%	1/16W	R308	1-218-990-81	SHORT CHIP	0		
										(HXD560/HXD562/HXD760:AEP)	
R231	1-218-940-11	RES-CHIP	82	5%	1/16W	R312	1-218-990-81	SHORT CHIP	0		
										(HXD560/HXD562/HXD760:AEP)	
R233	1-218-953-11	RES-CHIP	1K	5%	1/16W	R313	1-218-990-81	SHORT CHIP	0		
										(HXD560/HXD562/HXD760:AEP)	
R237	1-216-864-11	SHORT CHIP	0			R314	1-218-977-11	RES-CHIP	100K	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R238	1-218-953-11	RES-CHIP	1K	5%	1/16W	R315	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R240	1-218-953-11	RES-CHIP	1K	5%	1/16W	R316	1-218-941-81	RES-CHIP	100	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R243	1-218-953-11	RES-CHIP	1K	5%	1/16W	R317	1-218-933-11	RES-CHIP	22	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R245	1-218-949-11	RES-CHIP	470	5%	1/16W	R318	1-218-941-81	RES-CHIP	100	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R246	1-218-989-11	RES-CHIP	1M	5%	1/16W	R322	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R247	1-218-953-11	RES-CHIP	1K	5%	1/16W	R323	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R248	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R325	1-218-941-81	RES-CHIP	100	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	
R249	1-218-941-11	RES-CHIP	100	5%	1/16W	R328	1-218-965-11	RES-CHIP	10K	5%	1/16W
										(HXD560/HXD562/HXD760:AEP)	

RD-060

Ref. No.	Part No.	Description	Remarks				Ref. No.	Part No.	Description	Remarks			
R329	1-218-990-81	SHORT CHIP	0				R623	1-218-978-11	RES-CHIP	120K	5%	1/16W	
			(HXD560/HXD562/HXD760: AEP)				* R624	1-208-940-81	METAL CHIP	160K	0.5%	1/16W	
R336	1-218-965-11	RES-CHIP	10K	5%	1/16W		R625	1-218-990-81	SHORT CHIP	0			
			(HXD560/HXD562/HXD760: AEP)				R626	1-208-713-11	METAL CHIP	18K	0.5%	1/16W	
R337	1-218-965-11	RES-CHIP	10K	5%	1/16W		R627	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
			(HXD560/HXD562/HXD760: AEP)										
R338	1-218-990-81	SHORT CHIP	0				R628	1-216-295-91	SHORT CHIP	0			
			(HXD560/HXD562/HXD760: AEP)				R635	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
R401	1-218-990-81	SHORT CHIP	0				R638	1-218-990-81	SHORT CHIP	0			
							R639	1-218-990-81	SHORT CHIP	0			
R402	1-218-990-81	SHORT CHIP	0				R640	1-218-990-81	SHORT CHIP	0			
R403	1-218-990-81	SHORT CHIP	0										
R404	1-218-937-11	RES-CHIP	47	5%	1/16W		R641	1-218-990-81	SHORT CHIP	0			
R411	1-218-990-81	SHORT CHIP	0				R642	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R433	1-218-941-81	RES-CHIP	100	5%	1/16W		R643	1-218-990-81	SHORT CHIP	0			
							R644	1-218-990-81	SHORT CHIP	0			
R504	1-218-961-11	RES-CHIP	4.7K	5%	1/16W		R645	1-218-990-81	SHORT CHIP	0			
R505	1-218-990-81	SHORT CHIP	0 (GXD360)										
R506	1-218-965-11	RES-CHIP	10K	5%	1/16W		R646	1-218-990-81	SHORT CHIP	0			
			(GXD360)				R647	1-218-949-11	RES-CHIP	470	5%	1/16W	
R507	1-218-990-81	SHORT CHIP	0 (GXD360)										
R513	1-218-965-11	RES-CHIP	10K	5%	1/16W		R648	1-218-990-81	SHORT CHIP	0 (GXD360/HXD760: AUS)			
							R649	1-218-941-81	RES-CHIP	100	5%	1/16W	
R516	1-218-990-81	SHORT CHIP	0 (GXD360)										
R517	1-218-990-81	SHORT CHIP	0 (GXD360)				R650	1-218-949-11	RES-CHIP	470	5%	1/16W	
R518	1-218-965-11	RES-CHIP	10K	5%	1/16W								
R519	1-218-965-11	RES-CHIP	10K	5%	1/16W								
R522	1-216-864-11	SHORT CHIP	0										
							R651	1-218-990-81	SHORT CHIP	0 (GXD360/HXD760: AUS)			
R523	1-218-965-11	RES-CHIP	10K	5%	1/16W		R652	1-218-941-81	RES-CHIP	100	5%	1/16W	
R524	1-218-990-81	SHORT CHIP	0										
R525	1-218-990-81	SHORT CHIP	0				R655	1-218-990-81	SHORT CHIP	0			
R532	1-218-962-11	RES-CHIP	5.6K	5%	1/16W		R656	1-216-295-91	SHORT CHIP	0			
R533	1-218-990-81	SHORT CHIP	0				R658	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R535	1-218-962-11	RES-CHIP	5.6K	5%	1/16W		R661	1-218-990-81	SHORT CHIP	0			
R546	1-218-990-81	SHORT CHIP	0 (GXD360)				R701	1-216-864-11	SHORT CHIP	0			
R547	1-218-990-81	SHORT CHIP	0				R703	1-218-941-81	RES-CHIP	100	5%	1/16W	
R548	1-218-990-81	SHORT CHIP	0 (GXD360)				R705	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R549	1-218-990-81	SHORT CHIP	0				R706	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R551	1-218-990-81	SHORT CHIP	0				R709	1-218-941-81	RES-CHIP	100	5%	1/16W	
R552	1-218-990-81	SHORT CHIP	0				R710	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R553	1-218-990-81	SHORT CHIP	0				R711	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R554	1-218-990-81	SHORT CHIP	0				R712	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R555	1-218-990-81	SHORT CHIP	0				R713	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R556	1-218-990-81	SHORT CHIP	0				R714	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R557	1-218-990-81	SHORT CHIP	0				R715	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R558	1-218-990-81	SHORT CHIP	0				R717	1-208-910-11	METAL CHIP	9.1K	0.5%	1/16W	
R560	1-218-990-81	SHORT CHIP	0				R718	1-218-938-11	RES-CHIP	56	5%	1/16W	
R561	1-218-990-81	SHORT CHIP	0 (GXD360)				R719	1-218-938-11	RES-CHIP	56	5%	1/16W	
R603	1-218-942-11	RES-CHIP	120	5%	1/16W		R721	1-218-938-11	RES-CHIP	56	5%	1/16W	
R605	1-218-942-11	RES-CHIP	120	5%	1/16W		R722	1-218-938-11	RES-CHIP	56	5%	1/16W	
R607	1-218-942-11	RES-CHIP	120	5%	1/16W		R723	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W	
R609	1-218-942-11	RES-CHIP	120	5%	1/16W		R733	1-218-935-11	RES-CHIP	33	5%	1/16W	
R611	1-218-942-11	RES-CHIP	120	5%	1/16W		R812	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R612	1-218-951-11	RES-CHIP	680	5%	1/16W		R816	1-218-937-11	RES-CHIP	47	5%	1/16W	
R613	1-218-990-81	SHORT CHIP	0				R817	1-218-935-11	RES-CHIP	33	5%	1/16W	
R614	1-218-951-11	RES-CHIP	680	5%	1/16W		R821	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	
R615	1-218-990-81	SHORT CHIP	0										
R616	1-218-990-81	SHORT CHIP	0				R821	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	
R617	1-218-951-11	RES-CHIP	680	5%	1/16W								
R618	1-218-951-11	RES-CHIP	680	5%	1/16W		R823	1-218-931-11	RES-CHIP	15	5%	1/16W	
R619	1-218-990-81	SHORT CHIP	0										
R620	1-218-990-81	SHORT CHIP	0				R825	1-218-939-11	RES-CHIP	68	5%	1/16W	
R621	1-218-951-11	RES-CHIP	680	5%	1/16W		R826	1-218-935-11	RES-CHIP	33	5%	1/16W	
							R827	1-218-941-81	RES-CHIP	100	5%	1/16W	
							R836	1-218-990-81	SHORT CHIP	0			
							R839	1-218-990-81	SHORT CHIP	0			

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks
R840	1-218-990-81	SHORT CHIP	0			RB116	1-242-963-21	RES, NETWORK 33 (1005X4)	
R841	1-218-990-81	SHORT CHIP	0			RB117	1-242-963-21	RES, NETWORK 33 (1005X4)	
R842	1-218-990-81	SHORT CHIP	0			RB118	1-242-963-21	RES, NETWORK 33 (1005X4)	
R1001	1-218-990-81	SHORT CHIP	0	(HXD560/HXD562/HXD760)			RB119	1-242-963-21	RES, NETWORK 33 (1005X4)
R1002	1-218-990-81	SHORT CHIP	0			RB120	1-242-963-21	RES, NETWORK 33 (1005X4)	
R1003	1-218-990-81	SHORT CHIP	0			RB121	1-242-963-21	RES, NETWORK 33 (1005X4)	
R1004	1-218-990-81	SHORT CHIP	0	(HXD560/HXD562/HXD760)			RB122	1-242-963-21	RES, NETWORK 33 (1005X4)
R1005	1-218-990-81	SHORT CHIP	0	(HXD560/HXD562/HXD760)			RB123	1-242-963-21	RES, NETWORK 33 (1005X4)
R1006	1-218-990-81	SHORT CHIP	0	(HXD560/HXD562/HXD760)			RB124	1-242-963-21	RES, NETWORK 33 (1005X4)
R1007	1-218-990-81	SHORT CHIP	0	(HXD560/HXD562/HXD760)			RB142	1-234-400-21	CONDUCTOR, NETWORK (2010X4) (HXD560/HXD562/HXD760)
R1008	1-218-990-81	SHORT CHIP	0			RB143	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1009	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB144	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1010	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB145	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1011	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	RB146	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1012	1-218-990-81	SHORT CHIP	0			RB149	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1030	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB150	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1035	1-218-990-81	SHORT CHIP	0			RB151	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1037	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	RB152	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1039	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB154	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1040	1-218-937-11	RES-CHIP	47	5%	1/16W (HXD560/HXD562/HXD760)	RB155	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1041	1-218-937-11	RES-CHIP	47	5%	1/16W (HXD560/HXD562/HXD760)	RB156	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1042	1-218-990-81	SHORT CHIP	0			RB157	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1043	1-218-990-81	SHORT CHIP	0			RB158	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1044	1-218-933-11	RES-CHIP	22	5%	1/16W	RB159	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
R1045	1-218-933-11	RES-CHIP	22	5%	1/16W	RB160	1-234-380-21	RES, NETWORK 47K (1005X4)	
R1046	1-218-933-11	RES-CHIP	22	5%	1/16W	RB161	1-234-380-21	RES, NETWORK 47K (1005X4)	
R1047	1-218-933-11	RES-CHIP	22	5%	1/16W	RB162	1-234-380-21	RES, NETWORK 47K (1005X4)	
R1051	1-218-953-11	RES-CHIP	1K	5%	1/16W	RB163	1-234-380-21	RES, NETWORK 47K (1005X4)	
R1052	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB175	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1056	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB179	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1057	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB180	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1060	1-218-990-81	SHORT CHIP	0			RB181	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1061	1-218-990-81	SHORT CHIP	0			RB182	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1062	1-218-990-81	SHORT CHIP	0			RB183	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1063	1-218-990-81	SHORT CHIP	0			RB184	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1064	1-218-990-81	SHORT CHIP	0			RB185	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1065	1-218-990-81	SHORT CHIP	0			RB186	1-234-378-21	RES, NETWORK 10K (1005X4)	
R1066	1-218-990-81	SHORT CHIP	0			RB219	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1067	1-218-990-81	SHORT CHIP	0			RB220	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
R1068	1-218-941-81	RES-CHIP	100	5%	1/16W	RB221	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
< COMPOSITION CIRCUIT BLOCK >						RB222	1-234-702-11	RES, NETWORK 68 (1005X4) (HXD560/HXD562/HXD760)	
RB101	1-234-372-11	RES, NETWORK	100	(1005X4)		RB223	1-242-962-21	RES, NETWORK 82X4 (1005) (HXD560/HXD562/HXD760)	
RB102	1-234-372-11	RES, NETWORK	100	(1005X4)		RB301	1-234-370-21	RES, NETWORK 22 (1005X4) (HXD560/HXD562/HXD760:AEP)	
RB103	1-234-372-11	RES, NETWORK	100	(1005X4)		RB302	1-234-370-21	RES, NETWORK 22 (1005X4) (HXD560/HXD562/HXD760:AEP)	
RB104	1-234-372-11	RES, NETWORK	100	(1005X4)		RB401	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB105	1-234-400-21	CONDUCTOR, NETWORK	(2010X4)			RB402	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB106	1-234-702-11	RES, NETWORK	68	(1005X4)		RB403	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB107	1-234-702-11	RES, NETWORK	68	(1005X4)		RB404	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB108	1-234-702-11	RES, NETWORK	68	(1005X4)					
RB109	1-234-702-11	RES, NETWORK	68	(1005X4)					
RB110	1-242-963-21	RES, NETWORK	33	(1005X4)					
RB111	1-242-963-21	RES, NETWORK	33	(1005X4)					
RB112	1-242-963-21	RES, NETWORK	33	(1005X4)					
RB113	1-242-963-21	RES, NETWORK	33	(1005X4)					
RB114	1-242-963-21	RES, NETWORK	33	(1005X4)					
RB115	1-242-963-21	RES, NETWORK	33	(1005X4)					

Ref. No.	Part No.	Description	Remarks
RB501	1-234-379-21	RES, NETWORK 22K (1005X4)	
RB502	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB503	1-234-400-21	CONDUCTOR, NETWORK (2010X4)	
RB601	1-234-381-21	RES, NETWORK 100K (1005X4)	
RB602	1-234-378-21	RES, NETWORK 10K (1005X4)	
RB701	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB702	1-234-371-21	RES, NETWORK 47 (1005X4)	
RB703	1-234-371-21	RES, NETWORK 47 (1005X4)	
< VIBRATOR >			
X201	1-813-210-11	VIBRATOR, CRYSTAL (NX5032GA) 25MHz (HXD560/HXD562/HXD760)	
X301	1-781-940-41	VIBRATOR, CRYSTAL 14.318MHz (HXD560/HXD562/HXD760:AEP)	
* X701	1-813-695-11	VIBRATOR, CRYSTAL 24.576MHz	
X801	1-781-867-21	VIBRATOR, CRYSTAL 27MHz	
TU-182 BOARD, COMPLETE (GXD360/HXD560/HXD562) ***** (Ref.NO.:40,000 SERIES)			
< CAPACITOR >			
C5501	1-126-947-11	ELECT 47uF 20% 35V	
C5502	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C5503	1-126-947-11	ELECT 47uF 20% 35V	
C5504	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5505	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5506	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5507	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5508	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
< CONNECTOR >			
CN5501	1-770-648-11	CONNECTOR, FFC/FPC 20P	
CN5504	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P	
< FERRITE BEAD >			
FB5500	1-414-228-11	INDUCTOR, FERRITE BEAD	
FB5501	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
FB5502	1-414-228-11	INDUCTOR, FERRITE BEAD	
FB5503	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
FB5504	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
< TRANSISTOR >			
Q5500	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q5501	8-729-421-22	TRANSISTOR UN2211	
< RESISTOR >			
R5501	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5502	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5503	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5504	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5505	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5506	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5507	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5508	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5509	1-216-864-11	SHORT CHIP 0	
R5510	1-216-817-11	METAL CHIP 470 5% 1/10W	

Ref. No.	Part No.	Description	Remarks
R5511	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5512	1-216-813-11	METAL CHIP 220 5% 1/10W	
R5513	1-216-813-11	METAL CHIP 220 5% 1/10W	
R5517	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R5518	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R5519	1-216-864-11	SHORT CHIP 0	
< TUNER UNIT >			
△ TU5500	8-597-937-10	TUNER UNIT, DIGITAL BTD-DU607Z	
TU-183 BOARD, COMPLETE (HXD760) ***** (Ref.NO.:40,000 SERIES)			
< CAPACITOR >			
C5500	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5501	1-126-947-11	ELECT 47uF 20% 35V	
C5502	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C5503	1-126-947-11	ELECT 47uF 20% 35V	
C5504	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5505	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5506	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C5507	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
< CONNECTOR >			
CN5501	1-770-648-11	CONNECTOR, FFC/FPC 20P	
CN5504	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P	
< FERRITE BEAD >			
FB5500	1-414-228-11	INDUCTOR, FERRITE BEAD	
FB5501	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
FB5502	1-414-228-11	INDUCTOR, FERRITE BEAD	
FB5503	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
FB5504	1-469-869-21	INDUCTOR (EMI FERRITE) (2012)	
< TRANSISTOR >			
Q5500	8-729-904-87	TRANSISTOR 2SB1197K-R	
Q5501	8-729-421-22	TRANSISTOR UN2211	
< RESISTOR >			
R5500	1-216-864-11	SHORT CHIP 0	
R5501	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5502	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5503	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5504	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5505	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5506	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5507	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5508	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5509	1-216-864-11	SHORT CHIP 0	
R5510	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5511	1-216-817-11	METAL CHIP 470 5% 1/10W	
R5512	1-216-813-11	METAL CHIP 220 5% 1/10W	
R5513	1-216-813-11	METAL CHIP 220 5% 1/10W	
R5517	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R5518	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R5519	1-216-864-11	SHORT CHIP 0	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks
		< MODULATOR >	
RFU001	1-417-659-11	SPLITTER	
		< TUNER UNIT >	
△ TU5500	8-597-526-00	TUNER UNIT, DIGITAL BTD-DC412Z	
△	1-468-961-11	POWER SUPPLY BLOCK (SRV-1858EK)	

		ACCESSORIES	

	1-479-658-11	REMOTE COMMANDER (RMT-D234P)	
		(HXD560/HXD562/HXD760)	
	1-479-659-11	REMOTE COMMANDER (RMT-D233P)(GXD360)	
	2-658-476-01	COVER, BATTERY (FOR RMT-Q233P/D234P)	
△	1-575-131-82	CORD, POWER (HXD760:AEP)	
△	1-827-945-12	CORD, POWER (HXD760:AUS)	
△	1-827-269-12	CORD, POWER (GXD360/HXD560/HXD562)	
	1-751-271-71	CORD, CONNECTION (AV) (HXD760:AUS)	
	1-696-593-11	CORD, CONNECTION (PAL)	
	2-686-264-11	MANUAL, INSTRUCTION (ENGLISH)(GXD360)	
	2-686-265-11	MANUAL, INSTRUCTION (ENGLISH)	
		(HXD560/HXD562)	
	2-686-266-11	MANUAL, INSTRUCTION (GERMAN)	
		(HXD760:AEP)	
	2-686-266-21	MANUAL, INSTRUCTION (FINNISH)	
		(HXD760:AEP)	
	2-686-266-31	MANUAL, INSTRUCTION (SPANISH)	
		(HXD760:AEP)	
	2-686-372-21	MANUAL, INSTRUCTION (ENGLISH)	
		(HXD760:AUS)	

Note : The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.