


8-1 EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.





The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

8-1-1 Cabinet Assembly

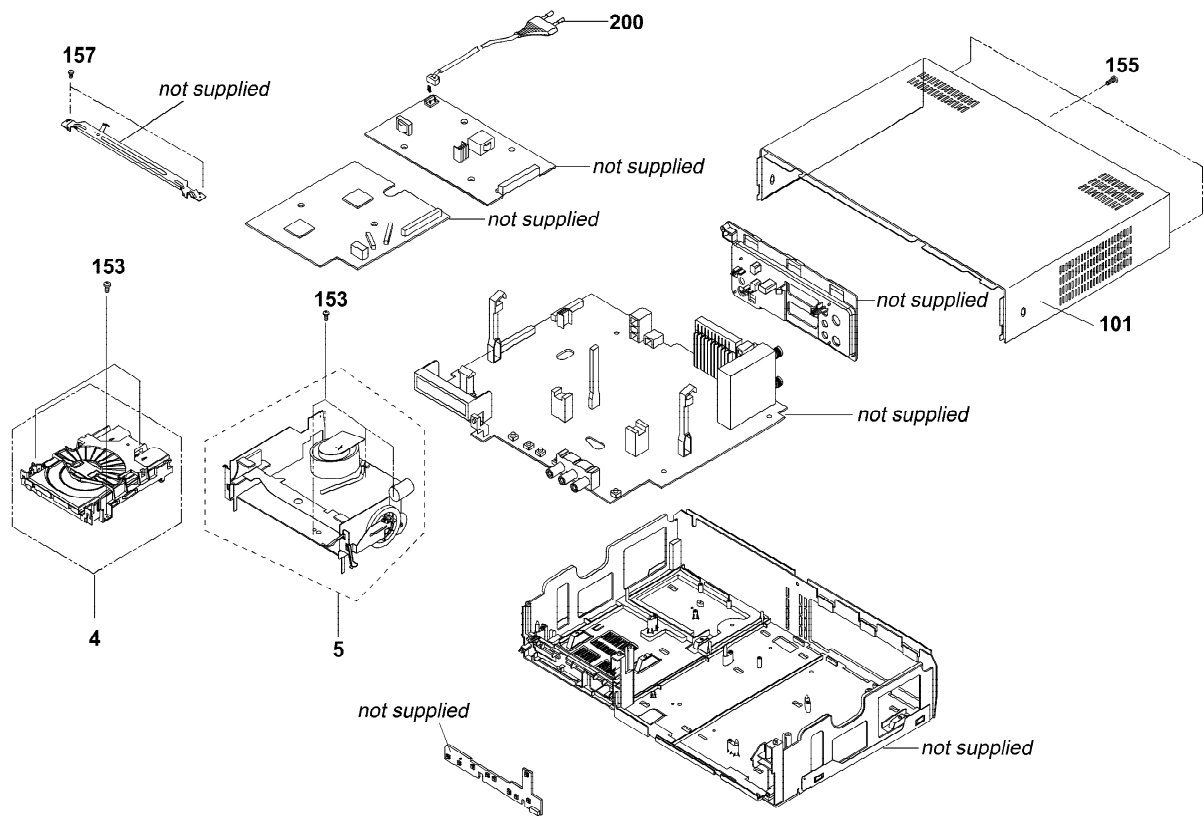


Ref. No.	Part No.	Description	Remarks
4	9-885-037-38	ASSY DVD DECK	
5	3-084-083-01	ASSY DECK	
101	9-885-043-09	CASE (COMBO PAL), UPPER	
153	3-075-256-01	SCREW TAP 3X12	


Ref. No.	Part No.	Description	Remarks
155	3-078-566-01	SCREW TAP M3 L10 BLK	
157	3-075-262-01	SCREW BH 4X12	
 200	1-823-023-11	POWER CORD KKP419C (EXCEPT D950GI)	
 200	1-823-025-11	POWER CORD Y352 (D950GI)	

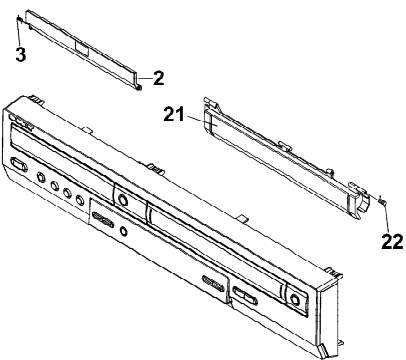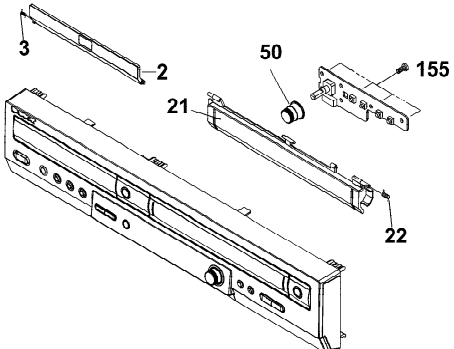Models	1	UT01
SLV-D910		
SLV-D950		

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	9-885-043-21	ASSY PANEL FRONT (D910B/D910E/D910N)		21	9-885-037-26	DOOR CASSETTE	
1	9-885-043-22	ASSY PANEL FRONT (D950B/D950E)		22	9-885-037-13	SPRING ETC MASK	
1	9-885-043-23	ASSY PANEL FRONT (D950GI)		50	1-786-352-11	SW-DIAL TIMER (D950B/D950E/D950GI/D910AZ)	
1	9-885-043-24	ASSY PANEL FRONT (D910R)		UT01	9-885-043-07	COMMANDER (RMT-V503A)	(D910B/D910E/D910N/D910R/D910AZ)
1	9-885-043-25	ASSY PANEL FRONT (D910AZ)		UT01	9-885-043-08	COMMANDER (RMT-V503B)	(D950B/D950E/D950GI)
2	9-885-037-27	DOOR TRAY					
3	9-885-037-28	SPRING ETC-DOOR TRAY					

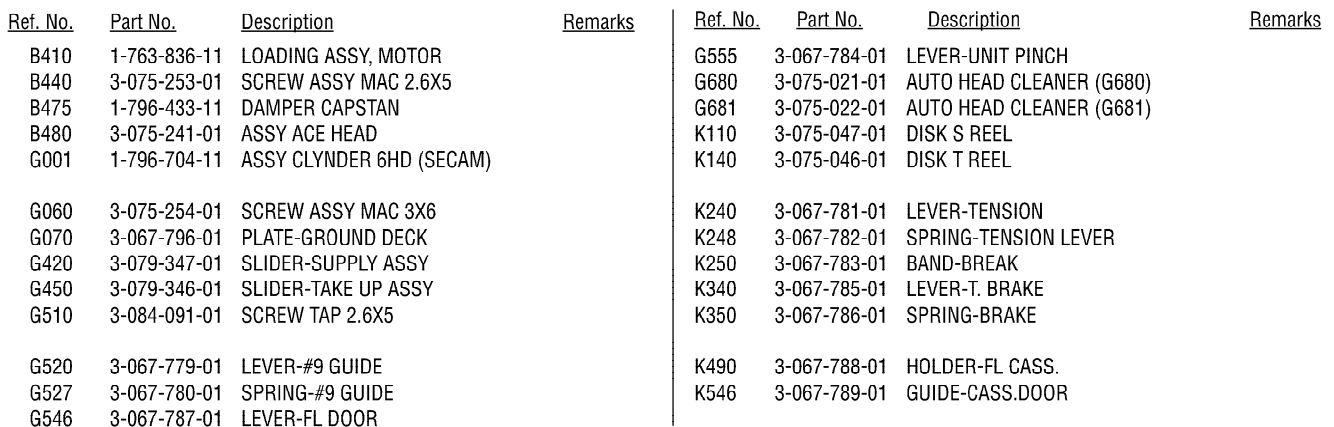


8-1-3 VCR Mechanical Parts (Bottom Side)

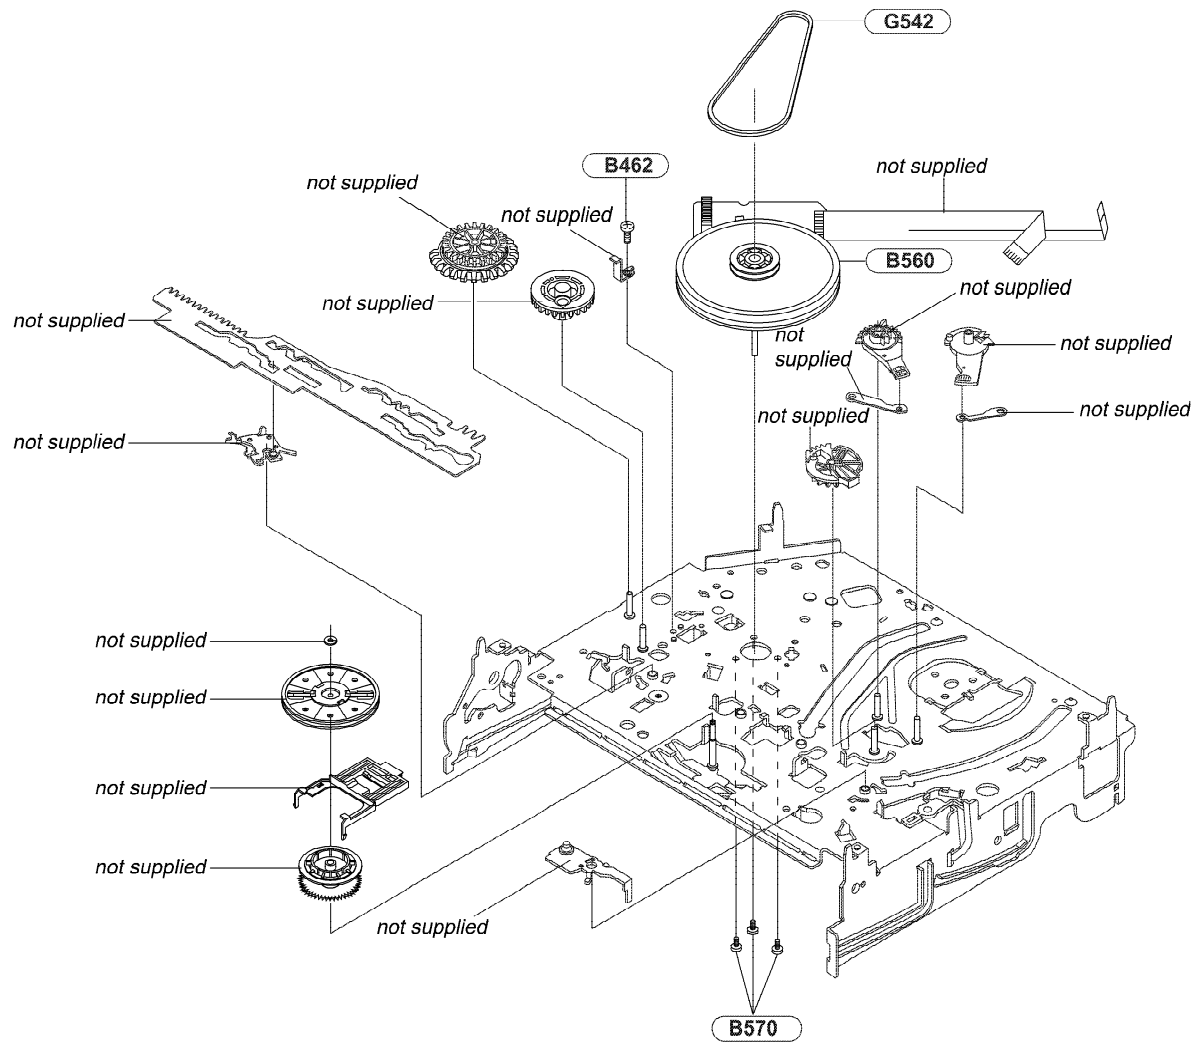

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
B462	3-075-260-01	SCREW MAC 3X3		B570	3-075-259-01	SCREW CAP 2.6X6	
B560	1-796-432-11	MOTOR CAPSTAN		G542	3-067-790-01	BELT-PULLEY	

8-1-4 DVD Mechanical Parts

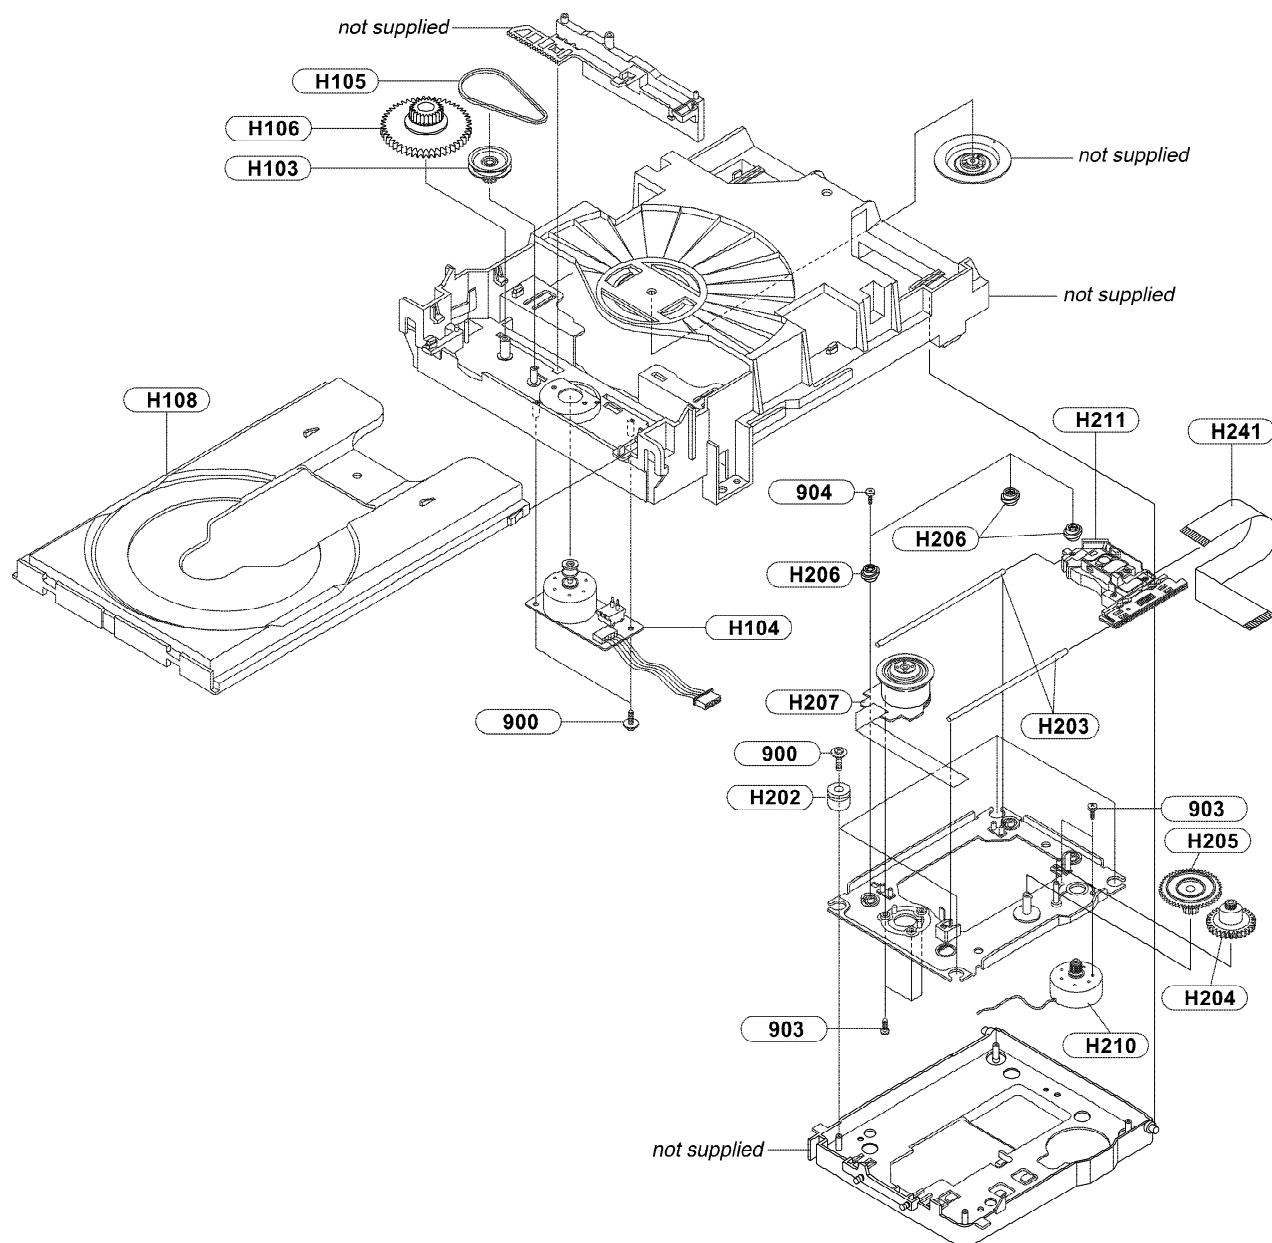

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
900	3-078-592-01	SCREW TAP 2X6		H203	3-078-588-01	SHAFT PU	
903	9-885-037-07	SCREW MAC 1.7X3		H204	9-885-037-31	GEAR FEED A	
904	9-885-037-08	SCREW TAP 1.7X5		H205	9-885-037-32	GEAR FEED B	
H103	9-885-037-29	PULLEY GEAR		H206	9-885-037-23	HOLDER-CAM SKEW	
H104	9-885-037-20	MOTOR LOADING ASSY		H207	9-885-037-21	MOTOR-SPINDLE	
H105	3-078-583-01	BELT RECTANGULAR		H210	9-885-037-22	MOTOR FEED ASSY	
H106	9-885-037-30	GEAR TRAY		$\triangle$ H211	9-885-037-37	ASSY PICK UP	
H108	9-885-037-24	TRAY DISC		H241	9-885-037-06	CABLE FLAT 24P	
H202	9-885-037-35	RUBBER INSULATOR					

8-2 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX, and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Not all of the parts are listed.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A... , uPA... , μ PA... ,
uPB... , μ PB... , uPC... , μ PC... ,
uPD... , μ PD...
- CAPACITORS:
uF: μ F
- COILS
uH: μ H

When indicating parts by reference number, please include the board name.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		DVD MAIN BOARD *****				FUNCTION BOARD *****	
		9-885-043-18 PWB MAIN ASSY (EXCEPT D910R/D910AZ)				< SWITCH >	
		9-885-043-19 PWB MAIN ASSY (D910R)		SW704	1-786-353-11	TACT SW (TAPPING 5mm) (D910B/D910E/D910N/D910R)	
		9-885-043-20 PWB MAIN ASSY (D910AZ)		SW705	1-786-353-11	TACT SW (TAPPING 5mm) (D910B/D910E/D910N/D910R)	
		< DIODE >		SW706	1-786-353-11	TACT SW (TAPPING 5mm) (D910B/D910E/D910N/D910R)	
DD1	1-805-013-11	DIODE DAP202K		SW708	1-786-353-11	TACT SW (TAPPING 5mm)	
		< IC >		SW709	1-786-353-11	TACT SW (TAPPING 5mm) (D910B/D910E/D910N/D910R)	
AIC2	1-805-024-11	IC (DA CONVERTER)					
AIC4	1-805-028-11	IC (OP AMP 4560)					
PIC1	1-805-030-11	IC 1563 (V REGULATOR)					
PIC2	9-885-037-02	IC (POS. FIXED)					
RIC1	9-885-037-19	IC S5L1463A01 (ASIC)					
						S. M. P. S. BOARD *****	
SIC1	9-885-037-18	IC S5L1455X01 (ASIC)		FC1SS1	1-576-527-11	FUSE CLIP	
SIC2	9-885-036-98	IC 41LV16256 (DRAM)		FC1SS2	1-576-527-11	FUSE CLIP	
SIC3	9-885-036-97	IC FAN8728 (MOTOR DRIVER)		SC01	3-075-256-01	SCREW TAP 3X12	
VIC1	9-885-037-03	IC LA73054 (VIDEO)				< CAPACITOR >	
ZIC1	9-885-043-28	IC ZR36742 (DECODER)		$\triangle$ C1SD02	1-165-573-11	CONDENSER FILM	0.1uF
				$\triangle$ C1SS01	1-165-573-11	CONDENSER FILM	0.1uF
ZIC2	9-885-036-99	IC IS42S16400A-7T (DRAM)				< DIODE >	
ZIC3	9-885-050-82	IC (FLASH MEMORY) (EURO W) (D950B/D950GI/D950E/D910E/D910B)		D1P101	1-804-409-11	DIODE IN4002	
ZIC3	9-885-050-83	IC (FLASH MEMORY) (EURO E) (D910N/D910R)		D1P103	1-804-407-11	DIODE IN4148	
ZIC3	9-885-050-85	IC (FLASH MEMORY) (AZ) (D910AZ)		D1P104	1-804-407-11	DIODE IN4148	
				D1SF01	1-804-407-11	DIODE IN4148	
ZIC7	1-805-027-11	IC 24C021 (EEPROM)		D1SF02	1-804-412-11	DIODE FIT4	
ZIC8	1-805-022-11	IC 74VHCT125A (CMOS LOGIC)					
		< TRANSISTOR >		D1SS01	1-804-413-11	DIODE IT5	
DQ1	1-805-016-11	TRANSISTOR KSC1623-L		D1SS02	1-804-413-11	DIODE IT5	
DQ2	1-805-016-11	TRANSISTOR KSC1623-L		D1SS03	1-804-413-11	DIODE IT5	
DQ3	1-805-016-11	TRANSISTOR KSC1623-L		D1SS04	1-804-413-11	DIODE IT5	
RQ1	1-805-014-11	TRANSISTOR KSA1182-Y		D1SS11	1-804-408-11	DIODE UF4007	
RQ2	1-805-014-11	TRANSISTOR KSA1182-Y					
		< VIBRATOR >		D1SS12	1-805-041-11	DIODE SE55	
SY1	1-795-749-11	CRYSTAL UNIT (33.8688MHz)		D1SS13	1-805-041-11	DIODE SE55	
ZY1	1-795-750-11	CRYSTAL UNIT (27MHz)		D1SS14	1-805-041-11	DIODE SE55	
				D1SS15	1-804-412-11	DIODE FIT4	
				D1SS16	1-804-411-11	DIODE UG2D	

S. M. P. S. VCR MAIN

Ref. No.	Part No.	Description	Remarks
D1SS17	1-804-412-11	DIODE FIT4	
D1SS19	1-804-412-11	DIODE FIT4	
ZD1P02	1-804-418-11	DIODE MTZJ12B	
ZD1P03	1-804-417-11	DIODE MTZJ9.1B	
ZD1SS1	9-885-036-94	DIODE MTZJ20B	
ZD1SS2	1-805-265-11	DIODE MTZJ4.3B	
		< FET >	
SCS11A	9-885-036-95	FET SILICON	
		< FUSE >	
△ F1SD01	1-576-526-11	FUSE (1.6A/250V)	
		< IC >	
△ IC1S02	1-804-784-11	IC PHOTO COUPLER	
IC1S03	1-804-445-11	IC KA4318	
IC1SS2	9-885-037-01	IC (PWM CONTROLLER)	
		< COIL >	
△ L1SS01	1-424-831-11	LINE FILTER 20uH	
△ L1SS02	1-424-831-11	LINE FILTER 20uH	
		< TRANSFORMER >	
△ PT1SD1	9-885-043-32	TRANS SWITCHING EER3530	
		< TRANSISTOR >	
Q1P101	1-804-424-11	TRANSISTOR KSC2328AY	
Q1P104	1-804-424-11	TRANSISTOR KSC2328AY	
VCR MAIN BOARD			

	9-885-043-36	PWB MAIN ASSY VHS (D950B)	
	9-885-043-37	PWB MAIN ASSY VHS (D950GI)	
	9-885-043-38	PWB MAIN ASSY VHS (D950E)	
	9-885-043-39	PWB MAIN ASSY VHS (D910E)	
	9-885-043-40	PWB MAIN ASSY VHS (D910B)	
	9-885-043-41	PWB MAIN ASSY VHS (D910N)	
	9-885-043-42	PWB MAIN ASSY VHS (D910R)	
	9-885-043-43	PWB MAIN ASSY VHS (D910AZ)	
JC801S	3-078-566-01	SCREW TAP M3 L10 BLK (EXCEPT D910AZ)	
PIC3S	3-075-255-01	SCREW TAP 3X8	
		< DIODE >	
D301	1-804-407-11	DIODE IN4148	
D302	1-804-409-11	DIODE IN4002	
D401	1-804-409-11	DIODE IN4002	
D501	1-804-409-11	DIODE IN4002	
D603	1-804-407-11	DIODE IN4148	
D620	1-804-409-11	DIODE IN4002	
D688	1-804-407-11	DIODE IN4148	
D692	1-804-409-11	DIODE IN4002	
D701	1-804-407-11	DIODE IN4148	

Ref. No.	Part No.	Description	Remarks
D702	1-804-407-11	DIODE IN4148	
D703	1-804-407-11	DIODE IN4148	
D704	1-804-407-11	DIODE IN4148	
D705	1-804-407-11	DIODE IN4148	
D805	1-804-407-11	DIODE IN4148 (EXCEPT D910AZ)	
D80A	1-804-407-11	DIODE IN4148 (EXCEPT D910AZ)	
D81A	1-804-407-11	DIODE IN4148 (EXCEPT D910AZ)	
D899	1-804-409-11	DIODE IN4002	
D4N01	1-804-407-11	DIODE IN4148	
D4N02	1-804-407-11	DIODE IN4148	
D601C	1-804-409-11	DIODE IN4002	
D6P01	1-804-407-11	DIODE IN4148	
D1P105	1-804-407-11	DIODE IN4148	
D1P107	1-804-407-11	DIODE IN4148	
D1P108	1-804-407-11	DIODE IN4148	
DAA801	1-805-012-11	DIODE DAN202K	
DAA802	1-805-009-11	DIODE DAN217	
DAA803	1-805-012-11	DIODE DAN202K	
DAA804	1-805-012-11	DIODE DAN202K	
DAA805	1-805-012-11	DIODE DAN202K	
DAA810	1-805-012-11	DIODE DAN202K (D910AZ)	
DAA811	1-805-012-11	DIODE DAN202K (D910AZ)	
RD801	1-804-407-11	DIODE IN4148	
RD802	1-804-407-11	DIODE IN4148	
VZ1	1-805-011-11	DIODE UDZ9.1B	
VZ2	1-805-011-11	DIODE UDZ9.1B	
VZ3	1-805-011-11	DIODE UDZ9.1B	
VZ4	1-805-011-11	DIODE UDZ9.1B	
VZ5	1-805-011-11	DIODE UDZ9.1B (D910AZ)	
VZ6	1-805-011-11	DIODE UDZ9.1B (D910AZ)	
VZ9	1-805-011-11	DIODE UDZ9.1B (D910AZ)	
VZ10	1-805-011-11	DIODE UDZ9.1B (D910AZ)	
ZD01C	1-804-417-11	DIODE MTZJ9.1B (EXCEPT D910AZ)	
ZD02C	1-805-011-11	DIODE UDZ9.1B (EXCEPT D910AZ)	
ZD03C	1-804-417-11	DIODE MTZJ9.1B (EXCEPT D910AZ)	
ZD04C	1-805-011-11	DIODE UDZ9.1B (EXCEPT D910AZ)	
ZD401	1-804-414-11	DIODE UZP33B	
ZD701	1-805-011-11	DIODE UDZ9.1B	
ZD801	1-804-803-11	DIODE MTZ6.2B (EXCEPT D910AZ)	
ZD806	1-805-011-11	DIODE UDZ9.1B	
ZD807	1-805-011-11	DIODE UDZ9.1B	
ZD809	1-805-011-11	DIODE UDZ9.1B (EXCEPT D910AZ)	
ZD810	1-805-011-11	DIODE UDZ9.1B (EXCEPT D910AZ)	
ZD811	1-805-011-11	DIODE UDZ9.1B (EXCEPT D910AZ)	
ZD1P04	1-804-416-11	DIODE MTZJ5.1B	
ZD1P05	1-804-418-11	DIODE MTZJ12B	
ZD1P06	1-804-416-11	DIODE MTZJ5.1B	
ZDA880	1-804-417-11	DIODE MTZJ9.1B (EXCEPT D910AZ)	
ZDA881	1-804-417-11	DIODE MTZJ9.1B (EXCEPT D910AZ)	
ZDA885	1-805-011-11	DIODE UDZ9.1B (D910AZ)	
ZDA886	1-805-011-11	DIODE UDZ9.1B (D910AZ)	

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
< FUSE >							
△ FZ01	1-576-729-11	FUSE-RADIAL LEAD1A		Q814	1-805-016-11	TRANSISTOR	KSC1623-L (EXCEPT D910AZ)
△ FZ02	1-576-729-11	FUSE-RADIAL LEAD1A		Q815	1-805-016-11	TRANSISTOR	KSC1623-L (EXCEPT D910AZ)
△ FZ03	1-576-729-11	FUSE-RADIAL LEAD1A		Q816	1-805-016-11	TRANSISTOR	KSC1623-L (EXCEPT D910AZ)
△ FZ04	1-576-729-11	FUSE-RADIAL LEAD1A		Q880	1-804-429-11	TRANSISTOR	KSR2001 (EXCEPT D910AZ)
< IC >							
DIC1	1-805-039-11	IC M74HCU04		Q882	1-804-429-11	TRANSISTOR	KSR2001 (EXCEPT D910AZ)
IC301	1-804-702-11	IC (VIDEO)		Q3A01	1-804-421-11	TRANSISTOR	KSC945
IC501	1-804-703-11	IC (HIFI)		Q3A02	1-804-420-11	TRANSISTOR	KSA733
IC604	1-804-704-11	IC (RESET) (EXCEPT D910AZ)		Q3A03	1-804-422-11	TRANSISTOR	KTC3023
IC604	1-804-773-11	IC (RESET) (D910AZ)		Q3A04	1-804-422-11	TRANSISTOR	KTC3023
IC605	1-804-432-11	IC 524C80D81		Q3A05	1-804-422-11	TRANSISTOR	KTC3023
IC608	1-804-705-11	IC (POWER DETECT) (D910N/D910R/D910AZ)		Q3A06	1-804-420-11	TRANSISTOR	KSA733
IC701	9-885-043-27	IC (LED DRIVER)		Q6P01	1-804-420-11	TRANSISTOR	KSA733
IC802	9-885-036-96	IC BU4053BCFV (CMOS LOGIC)		Q6P02	1-804-420-11	TRANSISTOR	KSA733
IC803	9-885-036-96	IC BU4053BCFV (CMOS LOGIC)	(EXCEPT D910AZ)	Q6P04	1-804-421-11	TRANSISTOR	KSC945
IC3S01	1-804-701-11	IC (SECAM) (D950B/D910B/D910R)		Q1P102	1-804-429-11	TRANSISTOR	KSR2001
IC4N01	1-805-156-11	IC MSP3417D (PQFP) (AUDIO)		Q1P103	1-804-421-11	TRANSISTOR	KSC945
IC6P01	1-804-453-11	IC (PDC/OSD) (EXCEPT D910R/D910AZ)		Q1P105	1-804-424-11	TRANSISTOR	KSC2328AY
IC6P01	1-804-454-11	IC (OSD) (D910R/D910AZ)		Q1P106	1-804-424-11	TRANSISTOR	KSC2328AY
ICA811	1-805-028-11	IC 4560 (OP AMP) (EXCEPT D950B/D910B)		Q1P107	1-804-424-11	TRANSISTOR	KSC2328AY
PIC3	1-805-031-11	IC 3RD13 (V REGULATOR)		Q1P108	1-804-429-11	TRANSISTOR	KSR2001
< LED >				Q1P109	1-804-421-11	TRANSISTOR	KSC945
LD601	1-804-438-11	LED-IR (T/S REEL)		Q1P110	1-804-424-11	TRANSISTOR	KSC2328AY
LD701	9-885-043-30	LED DISPLAY (D950B/D950GI/D950E)		Q1P111	1-804-424-11	TRANSISTOR	KSC2328AY
LD701	9-885-043-31	LED DISPLAY	(D910E/D910B/D910N/D910R/D910AZ)	QA801	1-805-016-11	TRANSISTOR	KSC1623-L
< TRANSISTOR >				QA802	1-805-016-11	TRANSISTOR	KSC1623-L
PT601	1-804-770-11	TRANSISTOR	PHOTO INTERRUPTER	QAA801	1-805-017-11	TRANSISTOR	200MW
PT602	1-804-770-11	TRANSISTOR	PHOTO INTERRUPTER	QAA802	1-805-018-11	TRANSISTOR	KSR2103
Q302	1-804-421-11	TRANSISTOR	KSC945	QAA803	1-805-015-11	TRANSISTOR	KSA812
			(D950B/D910B/D910R)	QAA804	1-805-018-11	TRANSISTOR	KSR2103
Q305	1-804-429-11	TRANSISTOR	KSR2001	QAA805	1-805-017-11	TRANSISTOR	200MW
Q351	1-804-420-11	TRANSISTOR	KSA733	QAA806	1-805-016-11	TRANSISTOR	KSC1623-L
Q3Q1	1-804-421-11	TRANSISTOR	KSC945	QAA807	1-805-018-11	TRANSISTOR	KSR2103
Q3Q2	1-804-421-11	TRANSISTOR	KSC945	QAA808	1-805-016-11	TRANSISTOR	KSC1623-L
Q3Q3	1-804-421-11	TRANSISTOR	KSC945	QAA809	1-805-017-11	TRANSISTOR	200MW
Q3Q4	1-804-421-11	TRANSISTOR	KSC945	QAV802	1-805-015-11	TRANSISTOR	KSA812 (EXCEPT D910AZ)
Q3Q6	1-804-428-11	TRANSISTOR	KSR1004	< MODULE >			
Q3Q7	1-804-421-11	TRANSISTOR	KSC945				
Q601	1-804-428-11	TRANSISTOR	KSR1004	RM701	1-477-308-11	REMOCON MOD (TSOP2238WE1)	
Q802	1-804-428-11	TRANSISTOR	KSR1004 (EXCEPT D910AZ)	< PHOTO TRANSISTOR >			
Q803	1-804-428-11	TRANSISTOR	KSR1004 (EXCEPT D910AZ)	S601	1-804-439-11	PHOTO TRANSISTOR (END SENSOR)	
Q804	1-804-429-11	TRANSISTOR	KSR2001 (EXCEPT D910AZ)	S602	1-804-439-11	PHOTO TRANSISTOR (START SENSOR)	
Q808	1-804-428-11	TRANSISTOR	KSR1004	< SWITCH >			
Q809	1-804-421-11	TRANSISTOR	KSC945 (EXCEPT D910AZ)	SW601	1-786-198-11	SWITCH MODE (PROGRAM SWITCH)	
Q810	1-804-421-11	TRANSISTOR	KSC945	SW602	1-786-199-11	SWITCH REC (REC SWITCH)	
Q811	1-804-421-11	TRANSISTOR	KSC945 (EXCEPT D910AZ)	< TUNER >			
Q812	9-885-043-26	TRANSISTOR	KSR1104	TM401	1-693-633-11	TUNER PAL (D950B/D910B)	
Q813	9-885-043-26	TRANSISTOR	KSR1104	TM401	9-885-043-35	TUNER PAL (EXCEPT D950B/D910B)	

Note :
The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.

VCR MAIN

Ref. No.	Part No.	Description	Remarks
		< VIBRATOR >	
XT301	1-795-330-11	VIBRATOR CRYSTAL (4.433619MHz)	
XT601	1-795-332-11	VIBRATOR CRYSTAL (32.768kHz)	
		(D910AZ/D910N/D910R)	
XT602	1-795-331-11	VIBRATOR CRYSTAL (8MHz)	
XT4N01	9-885-043-29	CRYSTAL (18.432MHz)	

MISCELLANEOUS

△ 200	1-823-023-11	POWER CORD KKP419C (EXCEPT D950GI)	
△ 200	1-823-025-11	POWER CORD Y352 (D950GI)	
B410	1-763-836-11	LOADING ASSY, MOTOR	
B560	1-796-432-11	MOTOR CAPSTAN	
G001	1-796-704-11	ASSY CLYNDER 6HD (SECAM)	

H104	9-885-037-20	MOTOR LOADING ASSY	
H207	9-885-037-21	MOTOR-SPINDLE	
H210	9-885-037-22	MOTOR FEED ASSY	
△ H211	9-885-037-37	ASSY PICK UP	

H241	9-885-037-06	CABLE FLAT 24P	
------	--------------	----------------	--

ACCESSORIES & PACKING MATERIALS

3-084-914-12	MANUAL, INSTRUCTION (FRENCH) (D910E)	
3-084-914-22	MANUAL, INSTRUCTION (ITALIAN) (D910E)	
3-084-914-32	MANUAL, INSTRUCTION (SPANISH)	
	(D910E/D950E)	
3-084-914-42	MANUAL, INSTRUCTION (GERMAN)	
	(D910E/D950E)	
3-084-914-52	MANUAL, INSTRUCTION (DUTCH)	
	(D910E/D950E)	
3-084-915-12	MANUAL, INSTRUCTION (ENGLISH) (D950GI)	
3-084-916-12	MANUAL, INSTRUCTION (FRENCH)	
	(D910B/D950B)	
3-084-917-11	MANUAL, INSTRUCTION (ENGLISH) (D910N)	
3-084-917-21	MANUAL, INSTRUCTION (POLISH) (D910N)	
3-084-917-31	MANUAL, INSTRUCTION (HUNGARIAN) (D910N)	
3-084-917-41	MANUAL, INSTRUCTION (CZECH) (D910N)	
3-084-917-51	MANUAL, INSTRUCTION (RUSSIAN) (D910R)	
3-084-918-12	MANUAL, INSTRUCTION (ENGLISH) (D910AZ)	
9-885-043-07	COMMANDER (RMT-V503A)	
	(D910B/D910E/D910N/D910R/D910AZ)	
9-885-043-08	COMMANDER (RMT-V503B)	
	(D950B/D950E/D950GI)	
9-885-043-33	CABLE RCA (RED)	
9-885-043-34	CABLE RCA (YEL)	

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

**SLV-D910AZ/D910B/D910E/D910N/D910R/
D950B/D950E/D950GI**