



5-1-4. MECHANISM DECK ASSEMBLY-1

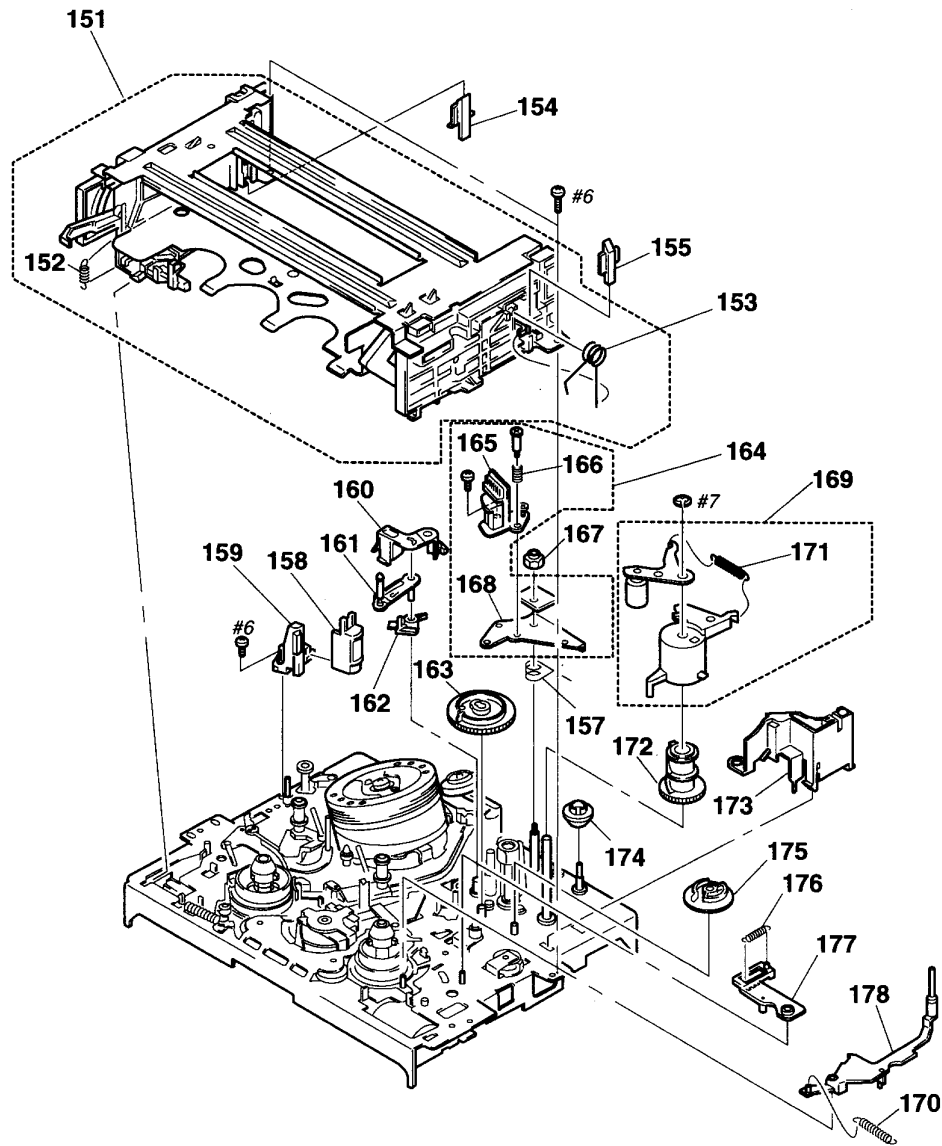


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	A-6759-603-A	FL BLOCK ASSY		165	1-506-485-11	PIN, CONNECTOR 6P	
152	3-958-467-01	SPRING, TENSION COIL		166	3-960-439-02	SPRING (ACE), COMPRESSION	
153	3-970-471-01	SPRING, TORSION		167	3-942-867-01	NUT, AC HEIGHT ADJUSTMENT	
154	3-958-488-03	PLATE, LIGHT GUIDE, END SENSOR		168	3-958-491-01	BASE, ACE	
155	3-970-473-01	PLATE, LIGHT GUIDE, TOP SENSOR		169	A-6746-072-A	PRESS BLOCK ASSY, PINCH	
				170	3-958-505-01	SPRING (SOFT BRAKE T), TENSION	
157	3-958-487-01	SPRING, (ACE) TORSION COIL		171	3-958-455-01	SPRING (PINCH), TENSION	
158	1-500-144-11	HEAD, FE		172	3-958-151-01	GEAR, ELEVATOR	
159	X-3945-348-2	FEH ASSY		173	3-958-454-01	OPNER, LID	
160	3-962-298-01	BRACKET, TG7 TAPE		174	3-958-501-01	SCREW, ACE ADJUSTMENT	
161	X-3944-797-1	TG8 ASSY		175	3-958-153-01	GEAR, PRESS	
162	3-958-421-01	HOLDER, TG8		176	3-958-462-01	SPRING (RVS BRAKE), TENSION	
163	3-958-152-01	GEAR, TG8		177	X-3943-885-1	ARM ASSY, RVS BRAKE	
164	A-6736-103-A	ACE BLOCK ASSY		178	X-3943-882-1	BRAKE (T) ASSY, SOFT	

5-1-5. MECHANISM DECK ASSEMBLY-2

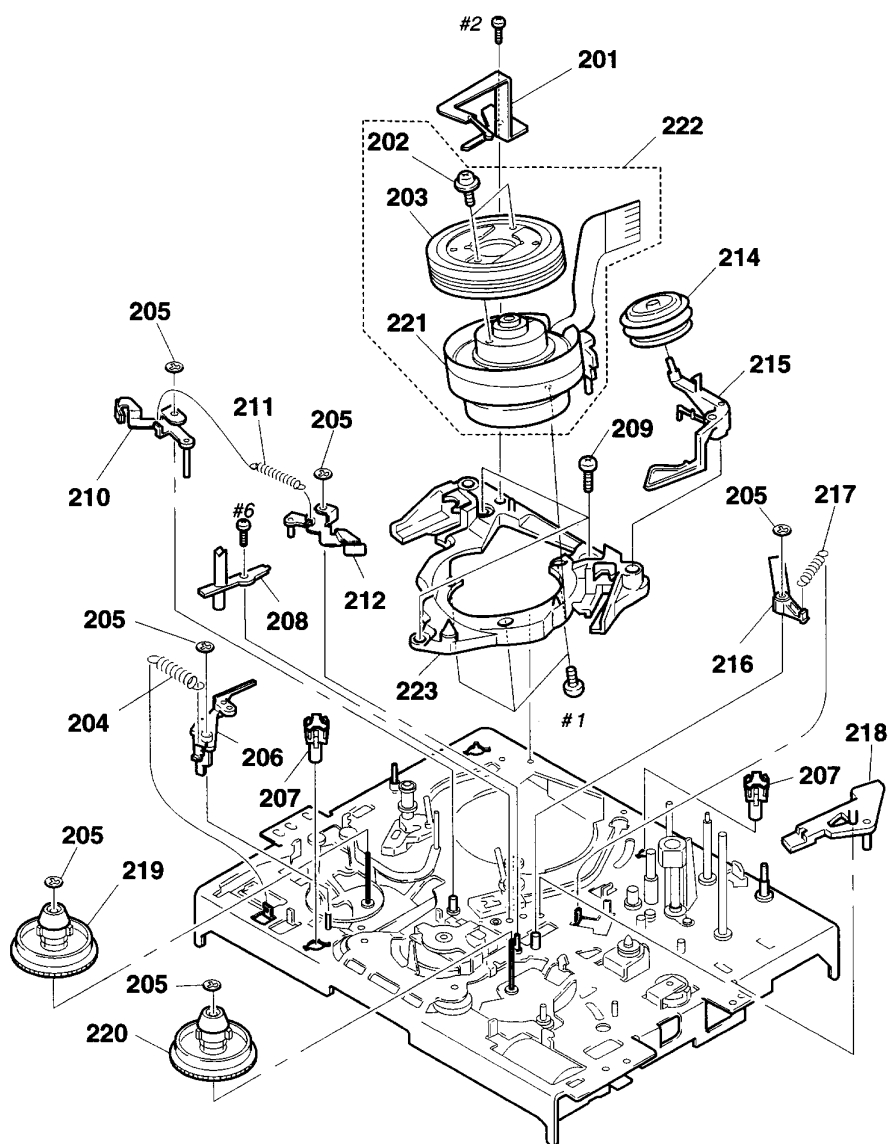


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	X-3943-899-8	GROUND ASSY, SHAFT(EXCEPT L2)		212	X-3945-444-1	ARM (T) ASSY, MAIN BRAKE	
202	2-643-205-01	SCREW		214	X-3947-255-1	ROLLER ASSY, HC	
203	8-848-622-02	UPPER DRUM ASSY DZR-66-R (M901)		215	3-975-724-01	ARM, HC	
204	3-958-443-01	SPRING, STRETCH COIL SPRING		216	3-960-139-01	ARM, NEUTRALITY	
205	3-669-595-00	WASHER (2), STOPPER		217	3-958-535-01	SPRING, TENSION	
206	3-958-450-01	BRAKE (S), SOFT		218	3-960-138-01	ARM, PENDULUM COMPULSION	
207	3-958-390-01	SHAFT, PC BOARD		219	X-3943-902-1	TABLE, REEL (S) ASSY	
208	3-958-391-01	PLATE, LIGHT GUIDE, LED		220	X-3943-903-1	TABLE, REEL (T) ASSY	
209	3-961-441-01	SCREW (3x8)		221	8-848-666-11	LOWER DRUM ASSY DZL-51B/J-RP (M901)	
210	X-3945-443-1	BRAKE (S) ASSY, MAIN		223	3-969-629-01	DRUM BASE	
211	3-958-517-01	SPRING, TENSION COIL					

5-1-6. MECHANISM DECK ASSEMBLY-3

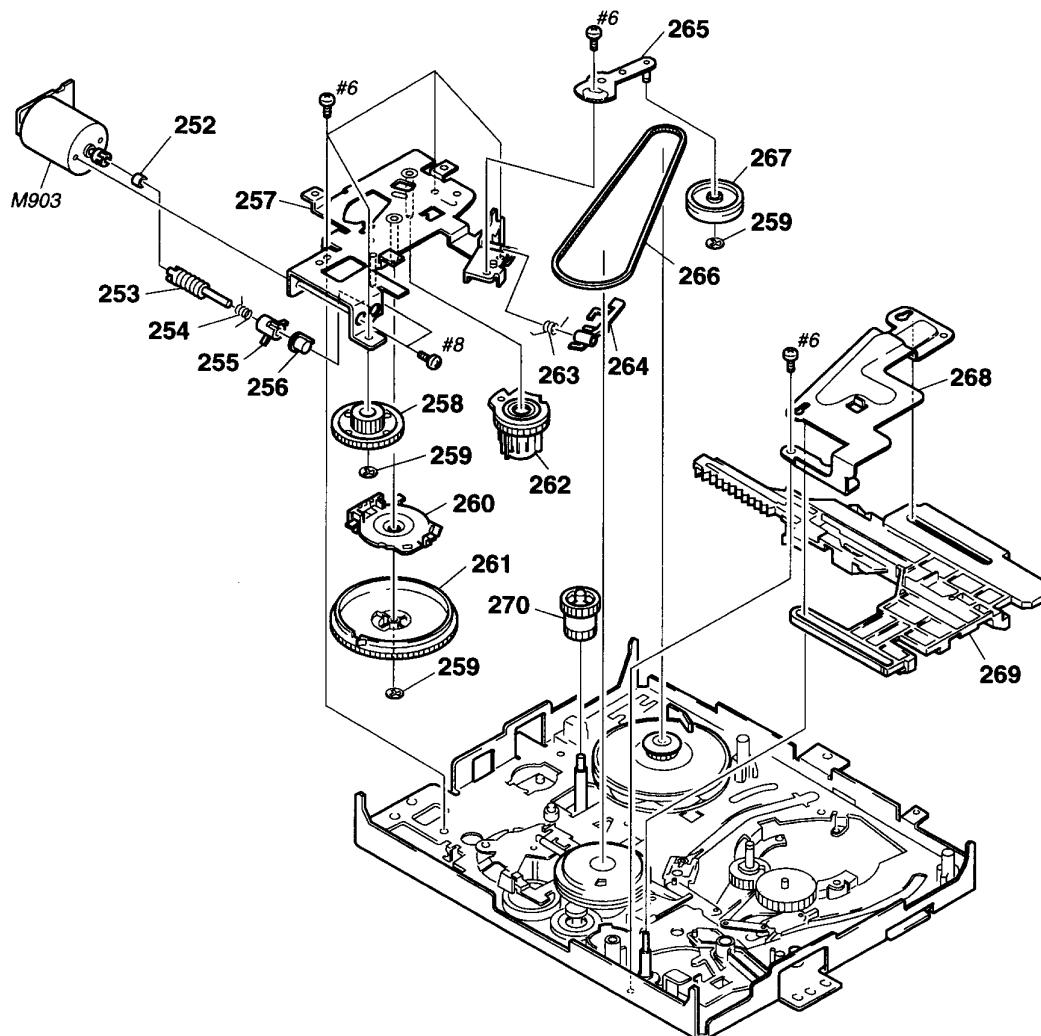


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
252	3-959-840-11	RUBBER, JOINT		262	3-958-156-03	GEAR, FL DRIVING	
253	3-958-159-01	WORM		263	3-958-445-01	SPRING, TORSION COIL (CAP BRAKE)	
254	3-958-460-01	SPRING, ONE-WAY		264	X-3943-888-1	BRAKE ASSY, CAP	
255	3-958-160-01	PROPELLOR		265	X-3943-889-1	ARM ASSY, TENSION VEHICLE	
256	3-958-155-01	BEARING, CAM MOTOR		266	3-958-361-01	BELT, TIMING	
* 257	X-3943-884-1	CHASSIS ASSY, CAM MOTOR		267	3-958-448-01	WHEEL, TENSION	
258	3-958-157-02	WHEEL, WORM		* 268	3-959-763-01	RETAINER	
259	3-669-595-00	WASHER (2), STOPPER		269	3-958-163-04	SLIDER, MAIN	
260	1-762-076-11	SWITCH, ROTARY		270	3-958-162-02	GEAR, UPPER/LOWER COMMUNICATION	
261	3-958-161-07	GEAR, CAM		M903	X-3943-883-1	MOTOR ASSY, CAM	

5-1-7. MECHANISM DECK ASSEMBLY-4

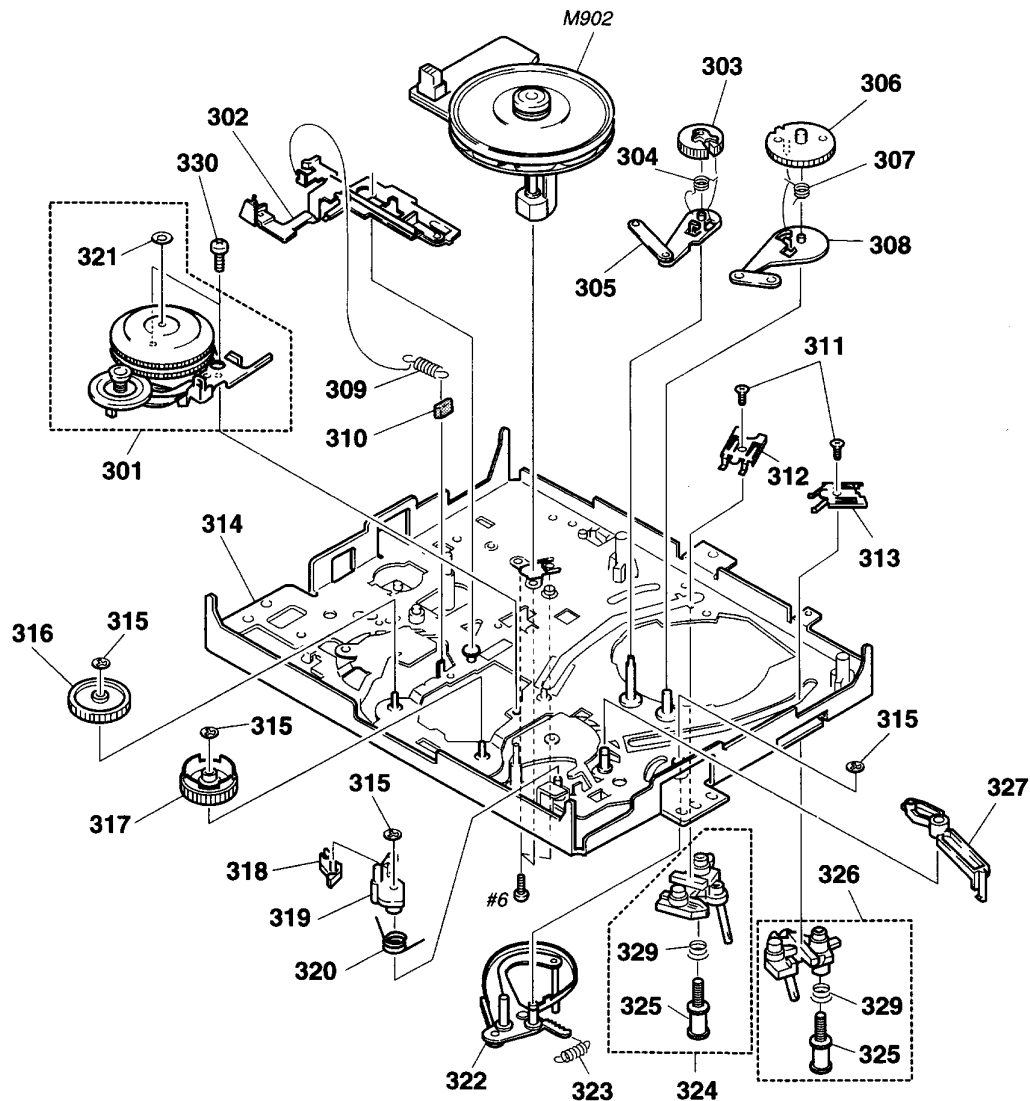


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	A-6739-102-A	RKB BLOCK ASSY		316	3-962-960-01	GEAR (T-K), IDLER	
302	X-3943-897-1	LEVER ASSY, TRIGGER		317	3-962-959-01	GEAR (S-K), IDLER	
303	3-958-485-02	GEAR (T), LOADING		318	3-958-533-01	CLAW, S WINDING	
304	3-960-449-01	SPRING (T), TORSION COIL		319	3-958-532-01	ARM, S WINDING	
305	X-3943-891-3	LEVER (T) ASSY, LOADING		320	3-958-534-01	SPRING, TORSION	
306	3-958-476-01	GEAR (S), LOADING		321	3-966-092-01	RING, RETAINING, SLIT WASHER	
307	3-960-448-01	SPRING (S), TORSION COIL		322	X-3943-886-1	TG1 ASSY	
308	X-3943-890-2	LEVER (S) ASSY, LOADING		323	3-958-492-01	SPRING (TG1), TENSION COIL	
309	3-958-529-01	SPRING (MOMENT), TENSION		324	A-6750-325-A	T BLOCK ASSY, SHUTTLE	
310	3-959-840-11	RUBBER, JOINT		325	X-3944-378-1	ROLLER ASSY, GUIDE	
311	3-960-720-01	SCREW		326	A-6750-316-A	SHUTTLE (S) BLOCK ASSY	
312	3-960-688-01	SPRING, LEAF (T), LOADING		327	3-958-504-01	ARM, FIXED RELEASE	
313	3-960-687-01	SPRING, LEAF (S), LOADING		329	3-965-178-01	SPRING	
314	X-3945-485-4	CHASSIS ASSY, MECHANICAL		M902	1-698-409-14	MOTOR, DC (CAPSTAN)	
315	3-669-595-00	WASHER (2), STOPPER					

5-1-8. Video 8 CASSETTE COMPARTMENT ASSEMBLY

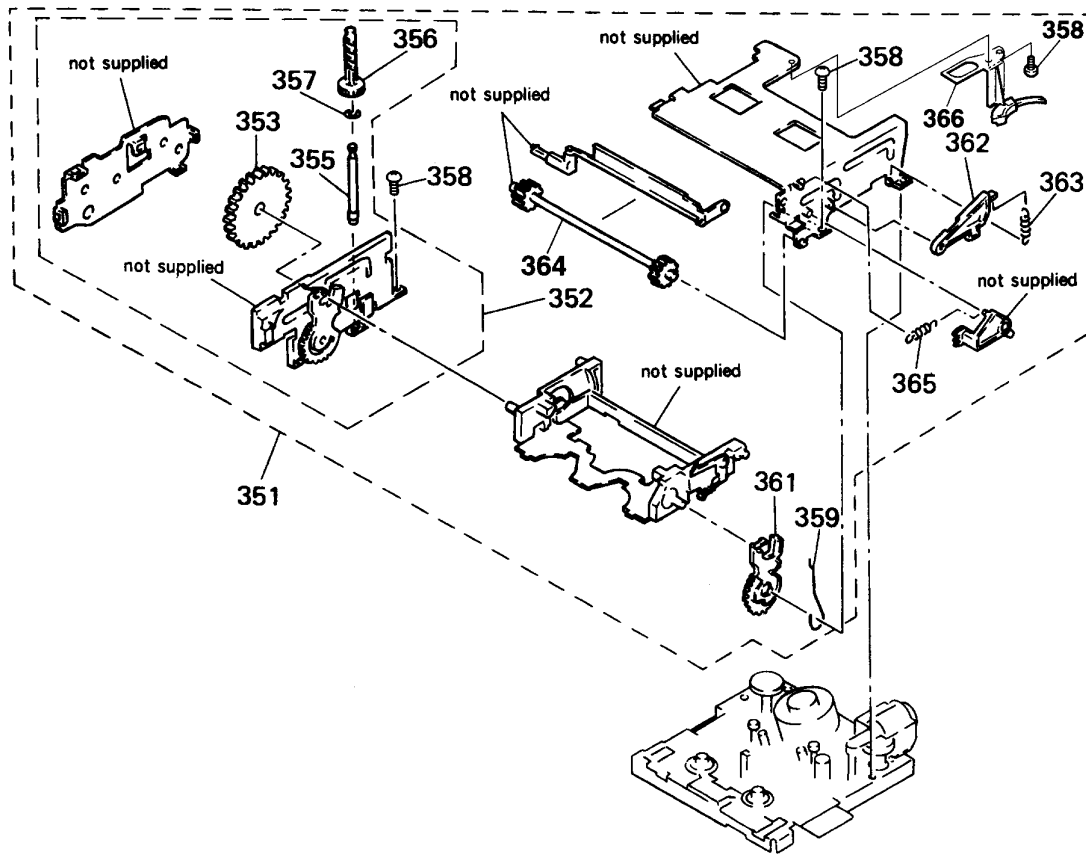


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
351	A-7092-566-H	FL BLOCK ASSY (FLAT)		359	3-954-042-01	SPRING, PRESS	
352	A-7093-114-A	PLATE (S) BLOCK ASSY, SIDE (FLAT)		361	3-954-033-01	ARM (T), DRIVING	
353	3-954-019-01	WHEEL, FL WORM		* 362	3-954-040-01	ARM, CASSETTE IN SWICH	
* 355	3-954-029-01	SHAFT, FL WORM GEAR		363	3-954-043-01	SPRING, TENSION	
356	3-954-028-01	GEAR, FL WORM		364	X-3942-942-2	GEAR ASSY, JOINT	
357	3-738-212-11	RETAINER, THRUST, REEL TABLE		365	3-954-044-01	SPRING, TENSION	
358	3-732-817-01	SCREW (2X4.5), TAPPING		366	3-967-578-01	GUARD, TAPE	

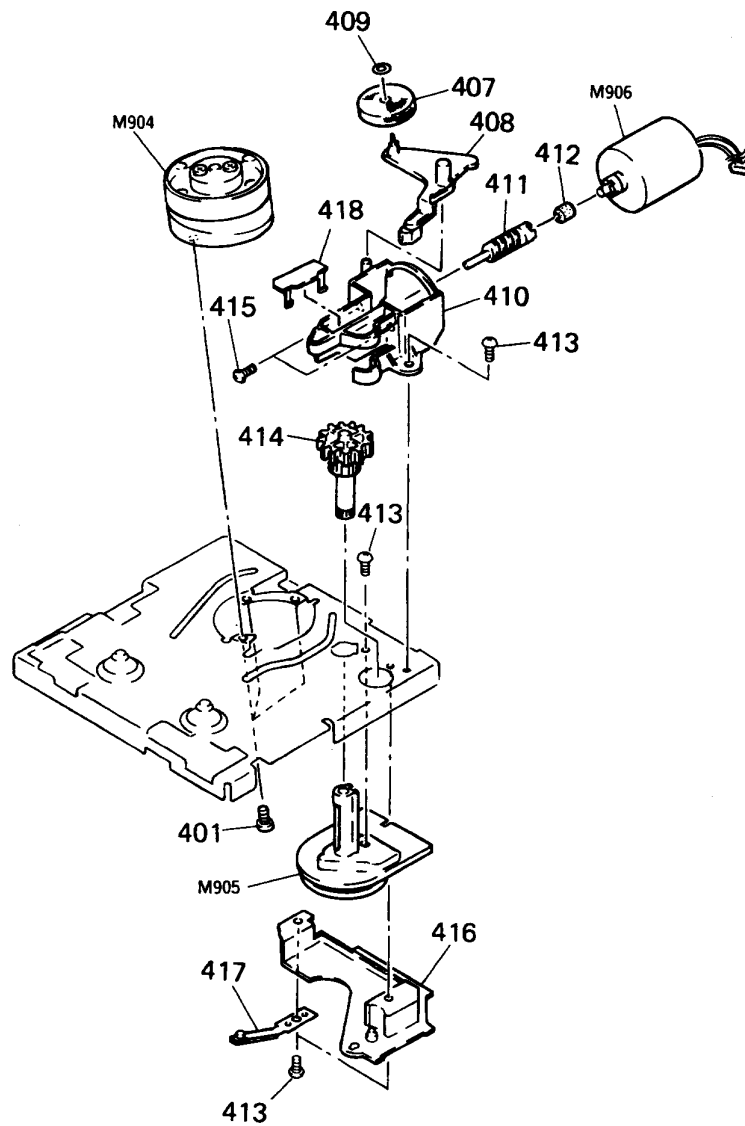


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
407	X-3945-909-1	ROLLER ASSY, HC		415	4-623-699-01	SCREW (3X5)	
408	X-3942-947-1	ARM ASSY, HC		*416	3-954-049-01	RETAINER, WORM WHEEL	
409	3-321-393-01	WASHER, STOPPER		417	X-3945-777-1	GROUND(F) ASSY, SHAFT	
410	3-954-024-03	HOLDER, MOTOR		* 418	3-958-047-01	COVER, MOTOR HOLDER	
411	3-733-395-01	GEAR (CAM), WORM		M904	A-7048-853-A	DRUM ASSY DGH-0D8A-R	
412	3-962-295-01	RUBBER, JOINT		M905	8-835-499-01	MOTOR, DC SCE-0501A	
413	3-732-817-01	SCREW (2X4.5), TAPPING		M906	X-3942-946-1	MOTOR ASSY, CAM	
414	3-954-023-01	WHEEL, CAM WORM					

5-1-10. Video 8 MECHANISM DECK ASSEMBLY-2

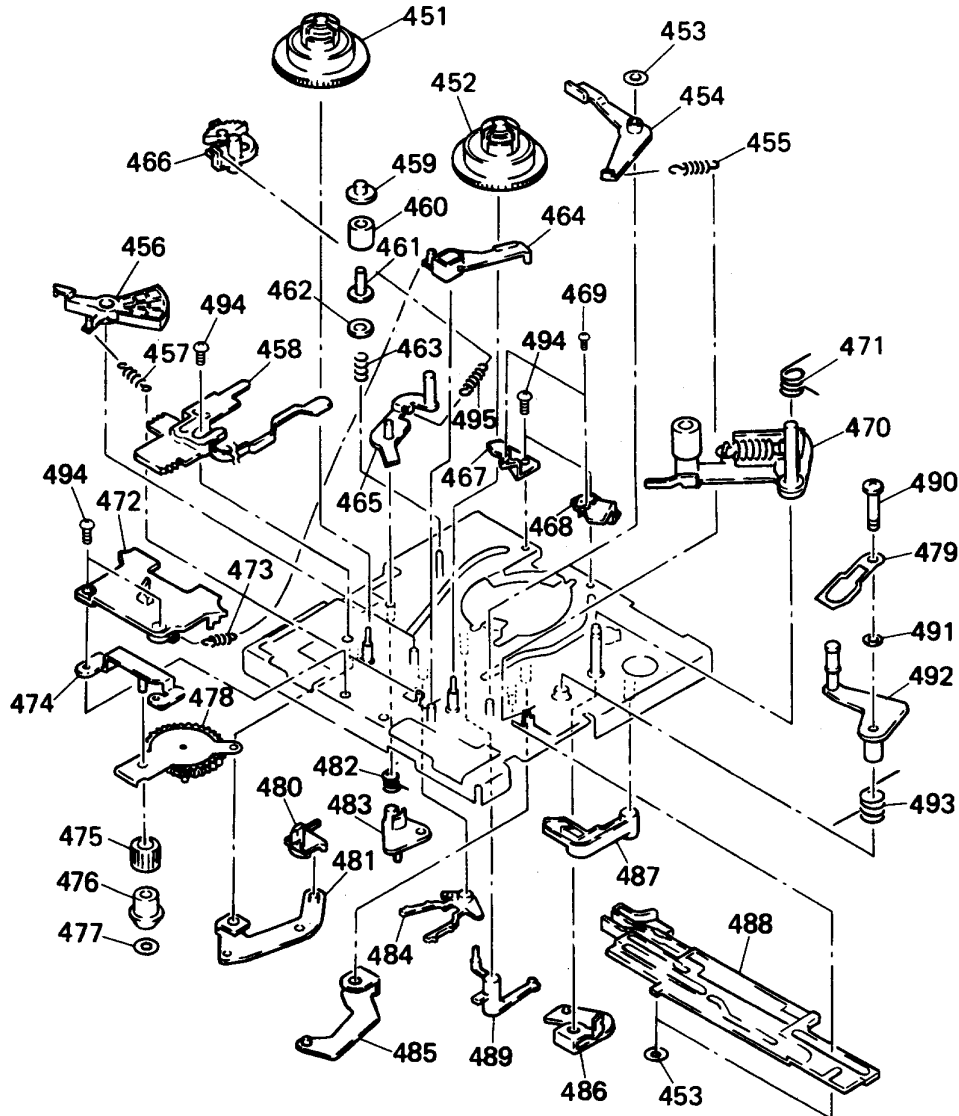

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
451	X-3942-954-1	TABLE (S) ASSY, REEL		474	X-3943-162-1	BASE ASSY, PENDULUM	
452	X-3942-953-2	TABLE (T) ASSY, REEL		475	3-954-059-01	GEAR, PENDULUM DRIVING	
453	3-669-465-01	WASHER (1.5), STOPPER		476	3-954-321-01	BEARING, PENDULUM DRIVING	
454	X-3943-161-3	BRAKE (T) ASSY		477	3-726-829-01	WASHER, STOPPER	
455	3-953-978-01	SPRING, TENSION		478	X-3942-951-1	GEAR ASSY, PENDULUM	
456	3-954-071-01	ARM, BRAKE (S)		479	3-954-093-01	SPACER, TG7	
457	3-954-085-01	SPRING, TENSION		480	3-953-975-01	CLAW, S TAKE-UP	
458	X-3942-956-1	BAND ASSY, TENSION REGULATOR		* 481	3-953-974-01	ARM, S TAKE-UP	
459	3-726-884-01	FLANGE, UPPER, TG2		482	3-956-366-01	SPRING, TORSION	
460	3-943-670-02	ROLLER, TG2		483	3-954-100-01	ARM, TENSION REGULATOR SUB	
461	3-726-885-01	SLEEVE, TG2		484	3-953-973-01	ARM, PENDULUM COMPULSION	
462	3-726-882-02	FLANGE, LOWER, TG2		* 485	3-954-007-01	LEVER, SLIDE PLATE DRIVING	
463	3-954-001-01	SPRING, COMPRESSION		* 486	3-954-009-01	LEVER, PINCH DRIVING	
464	X-3943-111-1	BRAKE (T) ASSY, SOFT		487	3-954-016-01	LEVER, TG7 DRIVING	
465	X-3942-955-1	TENSION REGULATOR ASSY		488	3-953-972-01	PLATE, SLIDE	
466	3-954-103-01	ARM, TENSION ADJUSTMENT		489	3-954-072-01	LEVER, BRAKE (S) DRIVING	
467	3-954-090-01	CATCHER (S)		490	3-954-096-01	SCREW, TG7 HEIGHT ADJUSTMENT	
468	3-954-091-01	CATCHER (T)		491	3-738-212-11	RETAINER, THRUST, REEL TABLE	
469	3-954-285-01	SCREW (M1.4X0.2)		492	X-3945-776-1	ARM(F') ASSY, TG7	
470	X-3942-945-1	ARM ASSY, PINCH		493	3-954-003-01	SPRING (TG7), TORSION	
471	3-954-105-01	SPRING (PINCH DRIVING)		494	3-732-817-01	SCREW (2X4.5), TAPPING	
* 472	3-954-063-01	PLATE, RELEASE, REEL LOCK		495	3-954-074-01	SPRING, TENSION	
473	3-955-142-01	SPRING, TENSION					

5-1-11. Video 8 MECHANISM DECK ASSEMBLY-3

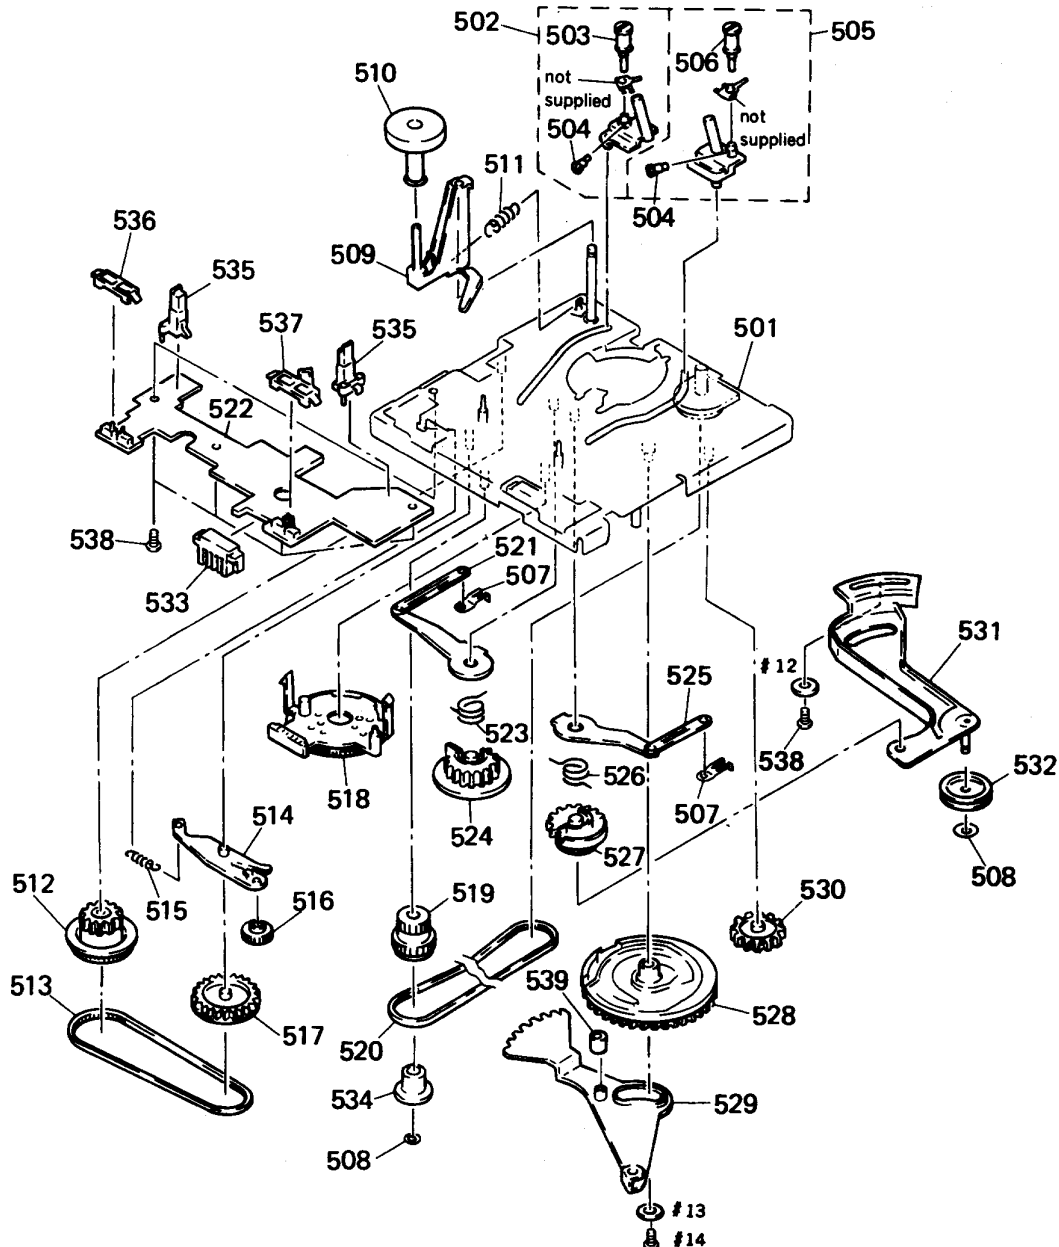

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 501	X-3946-740-1	CHASSIS(F2) ASSY, MECHANICAL		521	X-3942-949-1	ARM (S) ASSY, LOADING	
502	A-7040-338-A	COASTER (S) BLOCK ASSY		* 522	A-7072-921-A	MD-59D BOARD, COMPLETE	
503	X-3944-648-1	ROLLER ASSY (3), TG3		523	3-953-998-01	SPRING (S), TORSION	
504	3-947-504-01	SCREW (M1.2X2)		524	3-953-991-01	GEAR (S), LOADING	
505	A-7040-470-A	COASTER (T) BLOCK ASSY (2)		525	X-3942-948-1	ARM (T) ASSY, LOADING	
506	X-3941-756-1	ROLLER ASSY (2), TG6		526	3-954-000-01	SPRING (T), TORSION	
507	3-956-649-01	SPRING, LEAF, COASTER		527	3-953-992-01	GEAR (T), LOADING	
508	3-726-829-01	WASHER, STOPPER		528	3-954-050-01	CAM, MAIN	
509	X-3943-015-1	BASE ASSY, ROLLER		* 529	3-954-014-01	LEVER, LOADING DRIVING	
510	X-3944-994-1	ROLLER ASSY, IMPEDANCE		530	3-954-015-01	GEAR, CAM RELAY	
511	3-954-284-01	SPRING, TENSION		531	X-3942-962-1	BASE ASSY, PULLEY	
512	3-953-983-01	GEAR, FL PULLEY		532	X-3943-016-1	PULLEY ASSY, BELT	
513	3-954-079-01	BELT (FL), TIMING		533	1-750-620-11	CONNECTOR (MM8 MD)	
514	3-953-979-01	ARM, FL SELECTION		534	3-954-102-02	FLANGE, REEL RELAY	
515	3-953-982-01	SPRING, TENSION		535	3-953-985-01	HOLDER, ST SENSOR	
516	3-953-980-01	GEAR, FL SELECTION		536	3-954-638-01	HOLDER (S), PUSH SWITCH	
517	3-953-981-01	GEAR (DRIVING), FL PULLEY		537	3-954-639-01	HOLDER (T), PUSH SWITCH	
518	1-692-498-11	SWITCH, ROTARY		538	3-732-817-01	SCREW (2X4.5), TAPPING	
519	3-954-061-01	GEAR, REEL RELAY		539	3-954-323-01	ROLLER, LOADING	
520	3-953-986-01	BELT, TIMING					