


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
1-1	6003-001677	SCREW_1435_COVER	11	X	
1-2	6003-001736	SCREW_1425	1	X	
1-3	6001-002135	SCREW_1720	1	X	
1-4	AD64-02429A	WINDOW-LCD	1	O	

III . EXPLODED VIEW AND PART LIST

2. MAIN ASSEMBLY

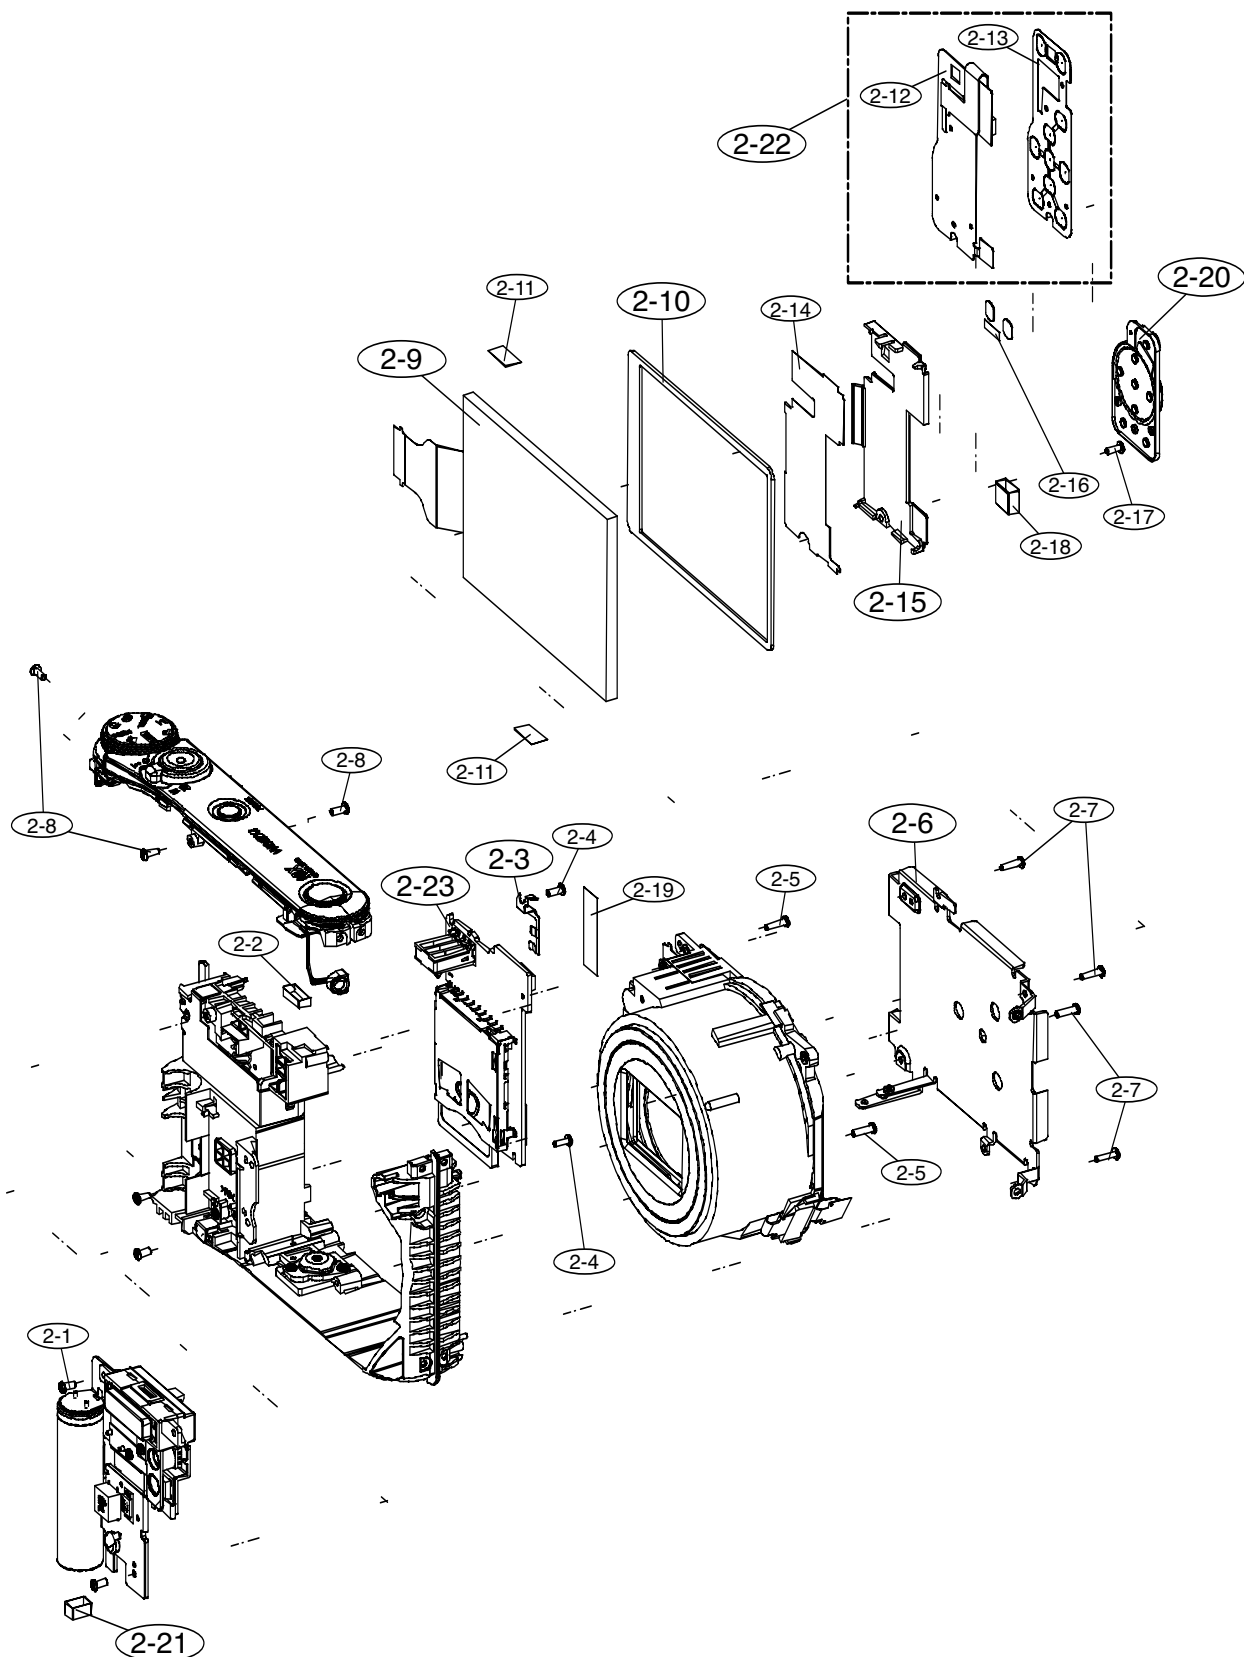


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
2-1	6003-001706	SCREW_1430	2	X	
2-2	AD63-03901A	CUSHION SHIELD FOAM-PCB	1	X	
2-3	AD67-01037A	CONTACT-20PIN	1	O	
2-4	6003-001630	SCREW_1435	2	X	
2-5	6003-001503	SCREW_1450	2	X	
2-6	AD61-03825A	FRAME-MAIN	1	O	
2-7	6003-001503	SCREW_1450	4	X	
2-8	6003-001630	SCREW_1435	3	X	
2-9	AD07-00094A	LCD	1	O	
2-10	AD63-03518A	SHEET SPONGE-LCD	1	O	
2-11	AD63-02474A	T/SHEET-LCD	2	X	
2-12	AD92-00686A	SMD FPCB ASSY-KEY	1	X	
2-13	AD63-03517A	SHEET-KEY DOME	1	X	
2-14	AD63-03630A	SHEET HOLDER BUTTON	1	X	
2-15	AD61-03821A	HOLDER-BUTTON	1	O	
2-16	AD63-03900A	T/SHEET-HOLDER BUTTON	1	X	
2-17	6003-001630	SCREW_1435	1	X	
2-18	AD63-03901A	CUSHION SHIELD FOAM-HOLDER BUTTON	1	X	
2-19	AD63-03905A	SHEET-20PIN	1	X	
2-20	AD97-16463A	ASSY-BACK BUTTON	1	O	
2-21	AD63-02032A	SHIELD FOAM C	1	O	
2-22	AD92-00690A	FPCB ASSY-KEY	1	O	
2-23	AD92-00691A	MAIN_PCB_ASSY	1	O	

III . EXPLODED VIEW AND PART LIST

3. CHAMBER ASSEMBLY

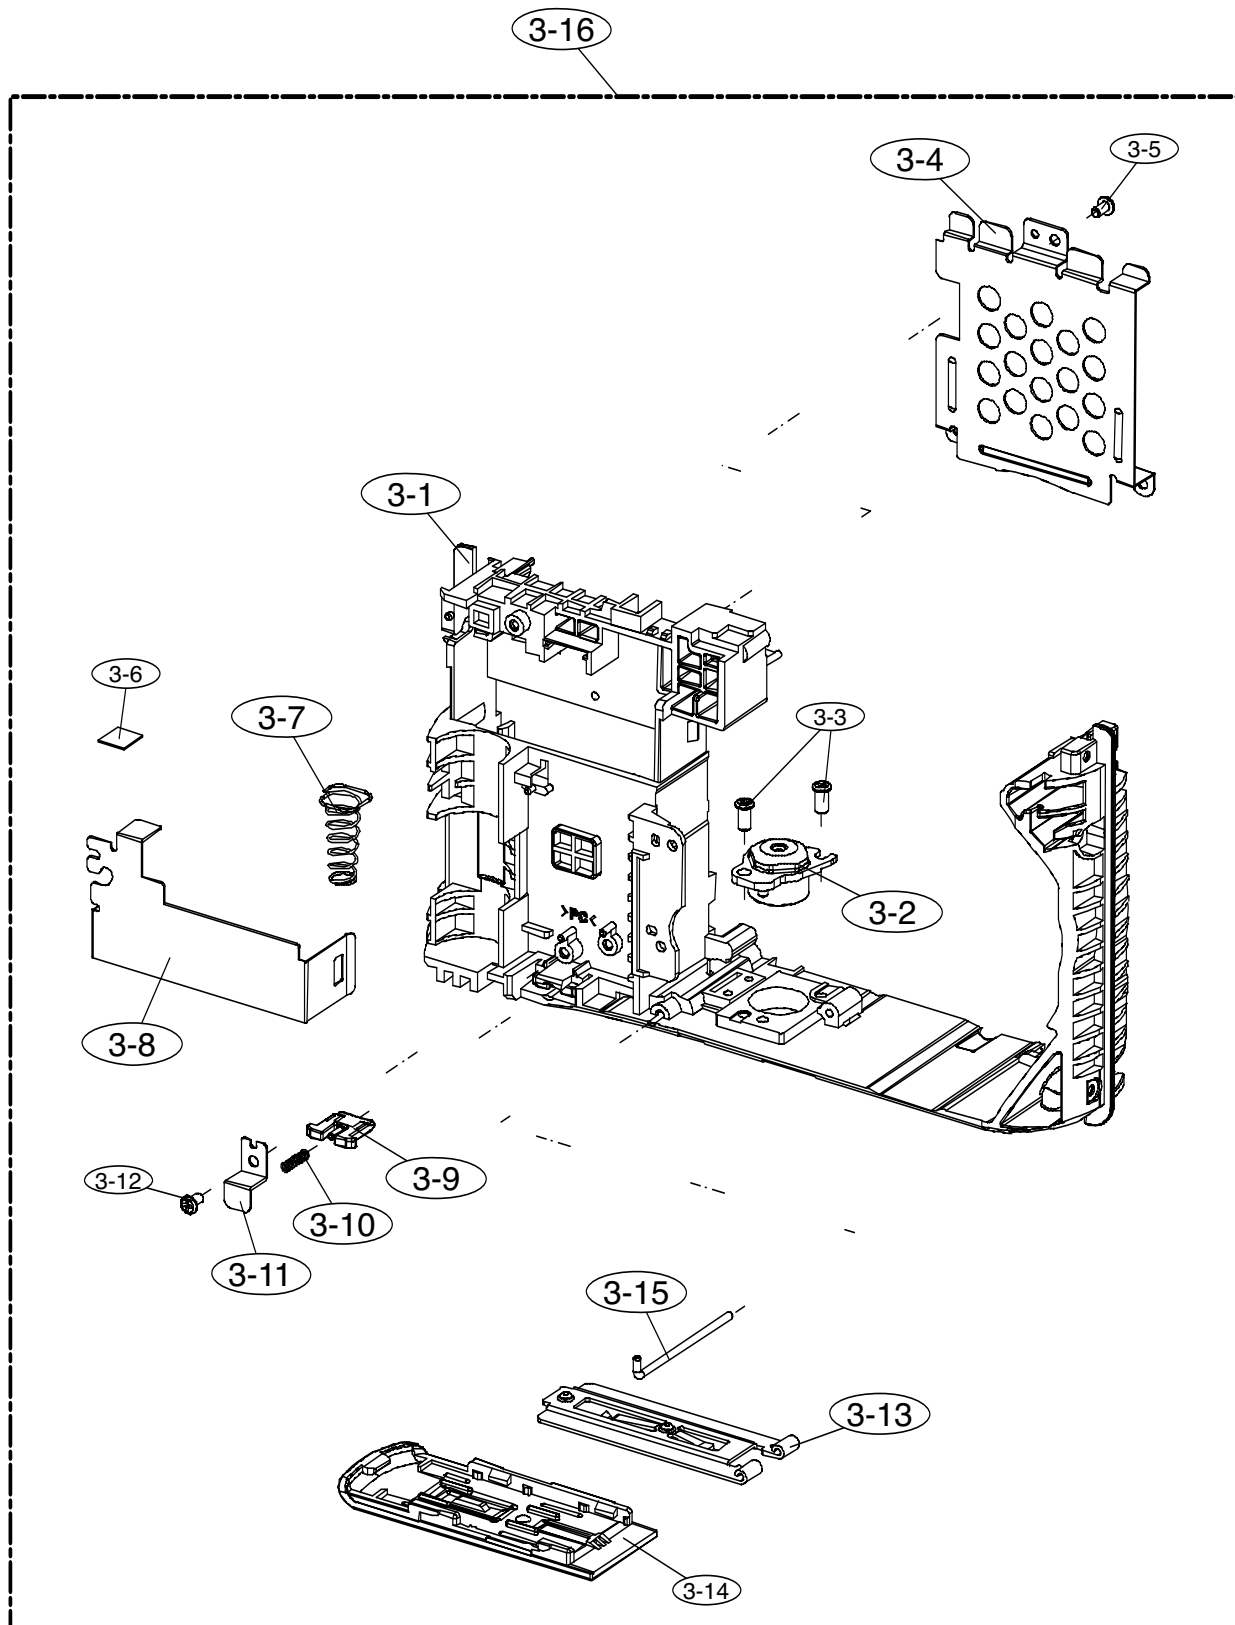


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-1	AD62-00091A	CHAMBER BODY	1	O	BLACK
	AD62-00104A	CHAMBER BODY	1	O	GRAY
3-2	AD61-03346A	TRIPOD_CONNECTOR	1	O	
3-3	6003-001641	SCREW_1735	2	X	
3-4	AD61-03828A	PLATE-CHAMBER	1	O	
3-5	6003-001629	SCREW_1425	1	X	
3-6	AD63-03898A	SHEET-BATT TOP	1	X	
3-7	6107-001674	BATT PUSH SPRING	1	O	
3-8	AD61-03827A	PLATE-BATTERY TOP	1	O	
3-9	AD66-00635A	LEVER-BATTERY LOCK	1	O	
3-10	6107-001675	BATTERY LOCK LEVER SPRING	1	O	
3-11	AD61-03829A	PLATE-BATTERY LOCK	1	O	
3-12	6003-001629	SCREW_1425	1	X	
3-13	AD61-03826A	PLATE-BATTERY COVER	1	O	
3-14	AD63-03477A	COVER BATTERY	1	X	BLACK
	AD63-03724A	COVER BATTERY	1	X	GRAY
3-15	AD61-03838A	HINGE-BATTERY	1	O	
3-16	AD97-16450A	BATTERY COVER ASSY	1	O	BLACK
	AD97-16965A	BATTERY COVER ASSY	1	O	GRAY

III . EXPLODED VIEW AND PART LIST

4. TOP COVER ASSEMBLY

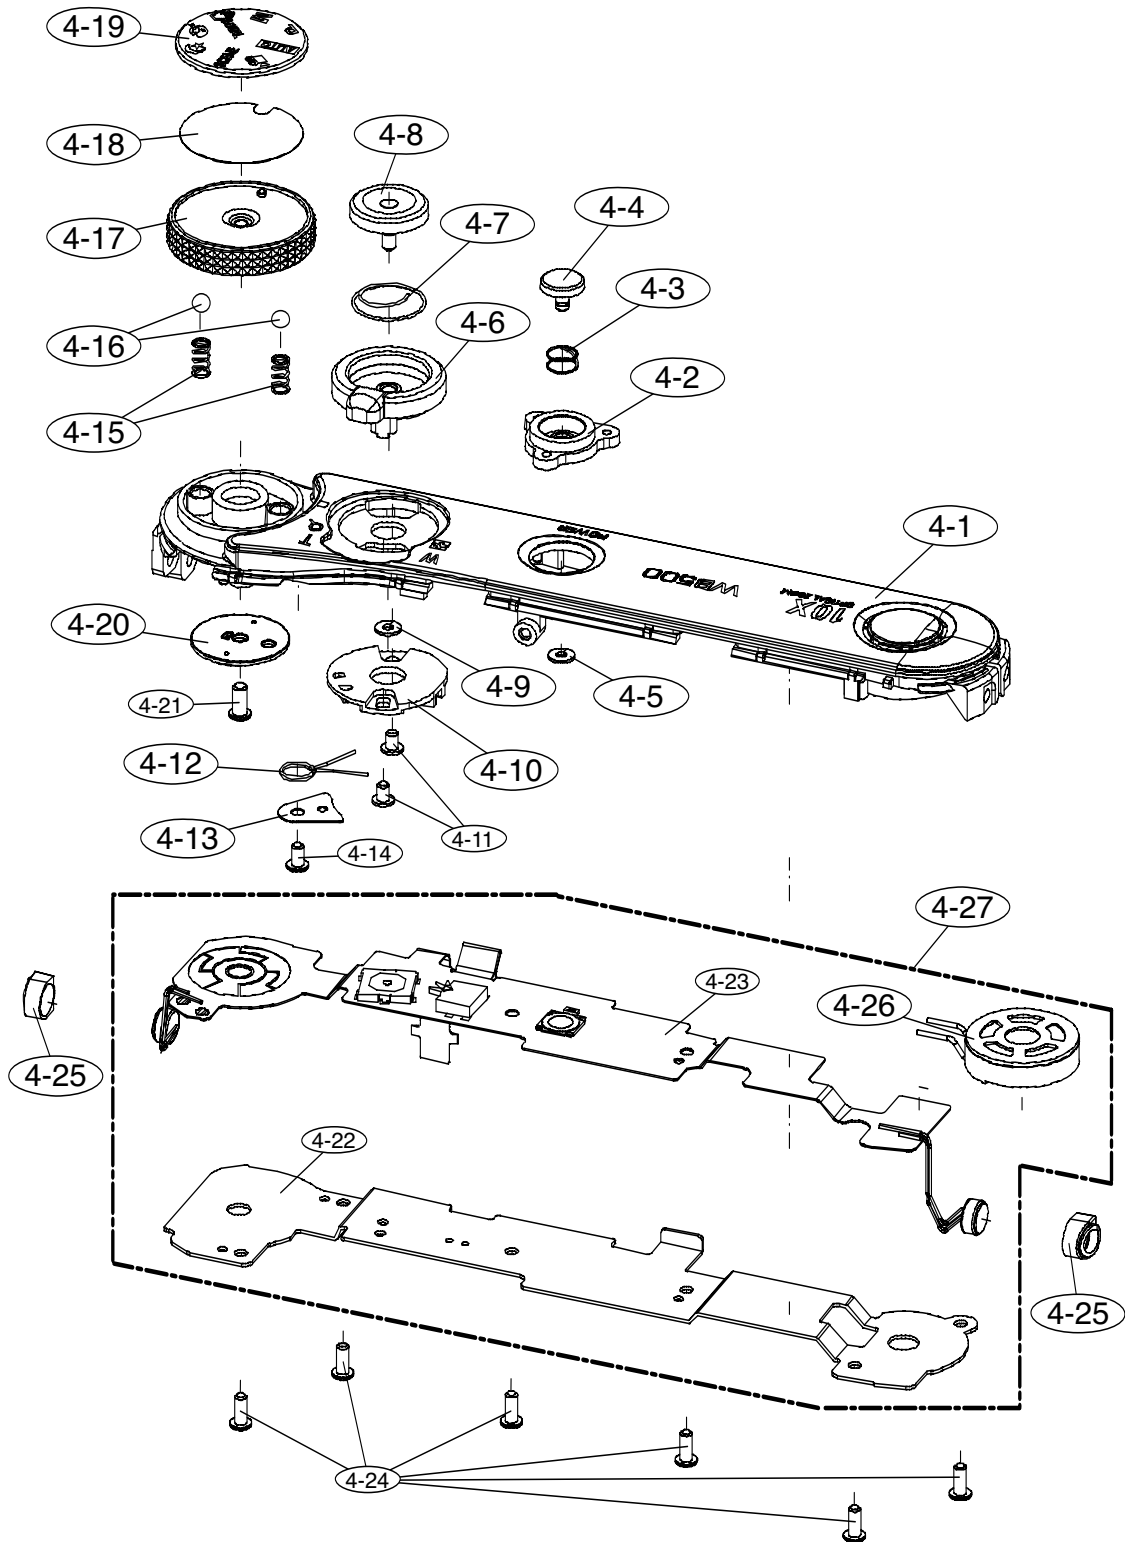

▶ PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
4-1	AD63-04002A	COVER TOP_SAMSUNG HZ10W	1	O	
	AD63-03476A	COVER TOP_SAMSUNG WB500	1	O	
	AD63-04001A	COVER TOP_VLUU WB500	1	O	
4-2	AD64-02428A	WINDOW LED-POWER	1	O	
4-3	6107-001439	POWER BUTTON SPRING	1	O	
4-4	AD64-02432A	BUTTON POWER	1	O	
4-5	6031-001628	WASHER-PLAIN	1	O	
4-6	AD64-02435A	BUTTON ZOOM	1	O	
4-7	AD81-07604A	RELEASE BUTTON SPRING	1	O	
4-8	AD64-02431A	BUTTON RELEASE	1	O	
4-9	6031-001628	WASHER-PLAIN	1	O	
4-10	AD61-03824A	PLATE-ZOOM BUTTON	1	O	
4-11	6003-001661	SCREW	2	X	
4-12	6107-001676	ZOOM BUTTON SPRING	1	O	
4-13	AD61-03835A	PLATE-ZOOM SPRING	1	O	
4-14	6003-001629	SCREW	1	X	
4-15	6107-001480	MODE DIAL CLICK SPRING	2	O	
4-16	AD64-01738A	MODE DIAL CLICK BALL	2	O	
4-17	AD64-02433A	KNOB MODE DIAL	1	O	
4-18	AD63-03519A	T/SHEET-MODE DIAL	1	O	
4-19	AD64-02449A	DECO COVER-MODE_DIAL	1	O	
4-20	AD97-14371A	MODE CONTACT ASSY	1	O	
4-21	6003-001641	SCREW	1	X	
4-22	AD61-03822A	PLATE-TOP	1	X	
4-23	AD92-00684A	SDM_FPCB_ASSY_TOP	1	X	
4-24	6003-001630	SCREW	6	X	
4-25	AD73-00302A	RUBBER-MIC1	2	O	
4-26	3001-002484	MICRO SPEARKER	2	O	
4-27	AD92-00688A	FPCB ASSY-TOP	1	O	

5. FRONT COVER ASSEMBLY




► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
5-1	AD63-03478A	COVER FRONT	1	X	BLACK
	AD63-03728A	COVER FRONT	1	X	GRAY
5-2	AD64-02448A	DECORATION-FRONT RING	1	O	
5-3	6001-002245	SCREW_M1030	5	X	
5-4	AD63-03899A	T/SHEET-DECO FLASH	1	X	
5-5	AD63-03570A	T/SHEET-WINDOW LED AF	1	X	
5-6	AD64-02430A	DECORATION-FLASH	1	X	BLACK
	AD64-02545A	DECORATION-FLASH	1	X	GRAY
5-7	AD63-03475A	GRIP-DECO	1	X	BLACK
	AD63-03722A	GRIP-DECO	1	X	GRAY
5-8	AD63-03689A	SHEET SPONGE CONDENSOR	1	X	
5-9	AD64-02426A	WINDOW LED-AF	1	X	
5-10	AD97-16454A	FRONT COVER ASSY SAMSUNG WB500	1	O	BLACK
	AD97-16949A	FRONT COVER ASSY SAMSUNG WB500	1	O	GRAY

III . EXPLODED VIEW AND PART LIST

6. BACK COVER ASSEMBLY

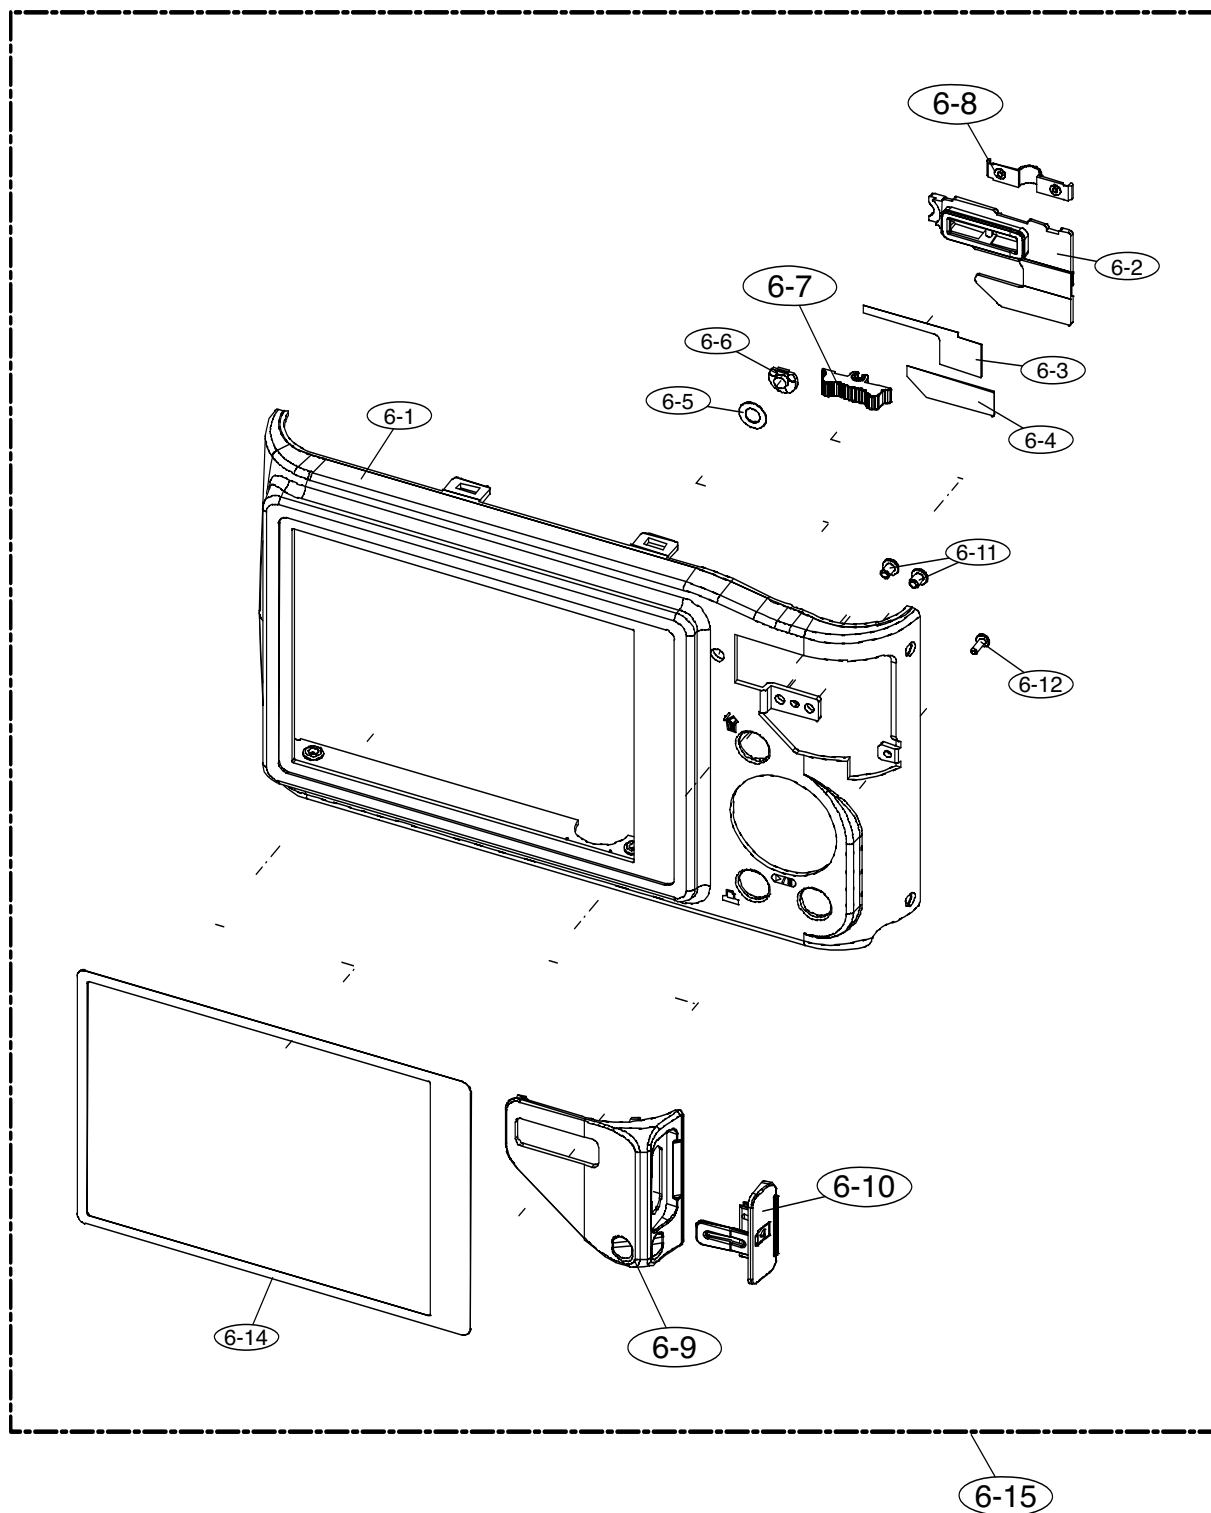


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
6-1	AD63-03479A	COVER BACK	1	X	BLACK
	AD63-03729A	COVER BACK	1	X	GRAY
6-2	AD61-03819A	HOLDER-JOG	1	X	BLACK
	AD61-03995A	HOLDER-JOG	1	X	GRAY
6-3	AD63-03525A	T/SHEET-HOLDER STRAP A	1	X	
6-4	AD63-03526A	T/SHEET-HOLDER STRAP B	1	X	
6-5	AD63-03688A	T/SHEET-REAR ACCESS WINDOW	1	X	
6-6	AD64-02427A	WINDOW-REAR ACCESS	1	X	
6-7	AD64-02436A	BUTTON-JOG	1	O	BLACK
	AD64-02548A	BUTTON-JOG	1	O	GRAY
6-8	AD73-00303A	RUBBER-JOG	1	O	
6-9	AD61-03820A	HOLDER-STRAP	1	O	BLACK
	AD61-03996A	HOLDER-STRAP	1	O	GRAY
6-10	AD63-03483A	COVER-20PIN	1	O	BLACK
	AD63-03723A	COVER-20PIN	1	O	GRAY
6-11	6001-002153	SCREW_M1420	2	X	
6-12	6001-002245	SCREW_M1030	1	X	
6-13	AD63-04003A	SHIELD_CUSHION	1	X	
6-14	AD63-03516A	T/SHEET-LCD WINDOW	1	X	
6-15	AD97-16453A	COVER ASSY-BACK	1	O	BLACK
	AD97-16961A	COVER ASSY-BACK	1	O	GRAY

III . EXPLODED VIEW AND PART LIST

7. STROBO ASSEMBLY

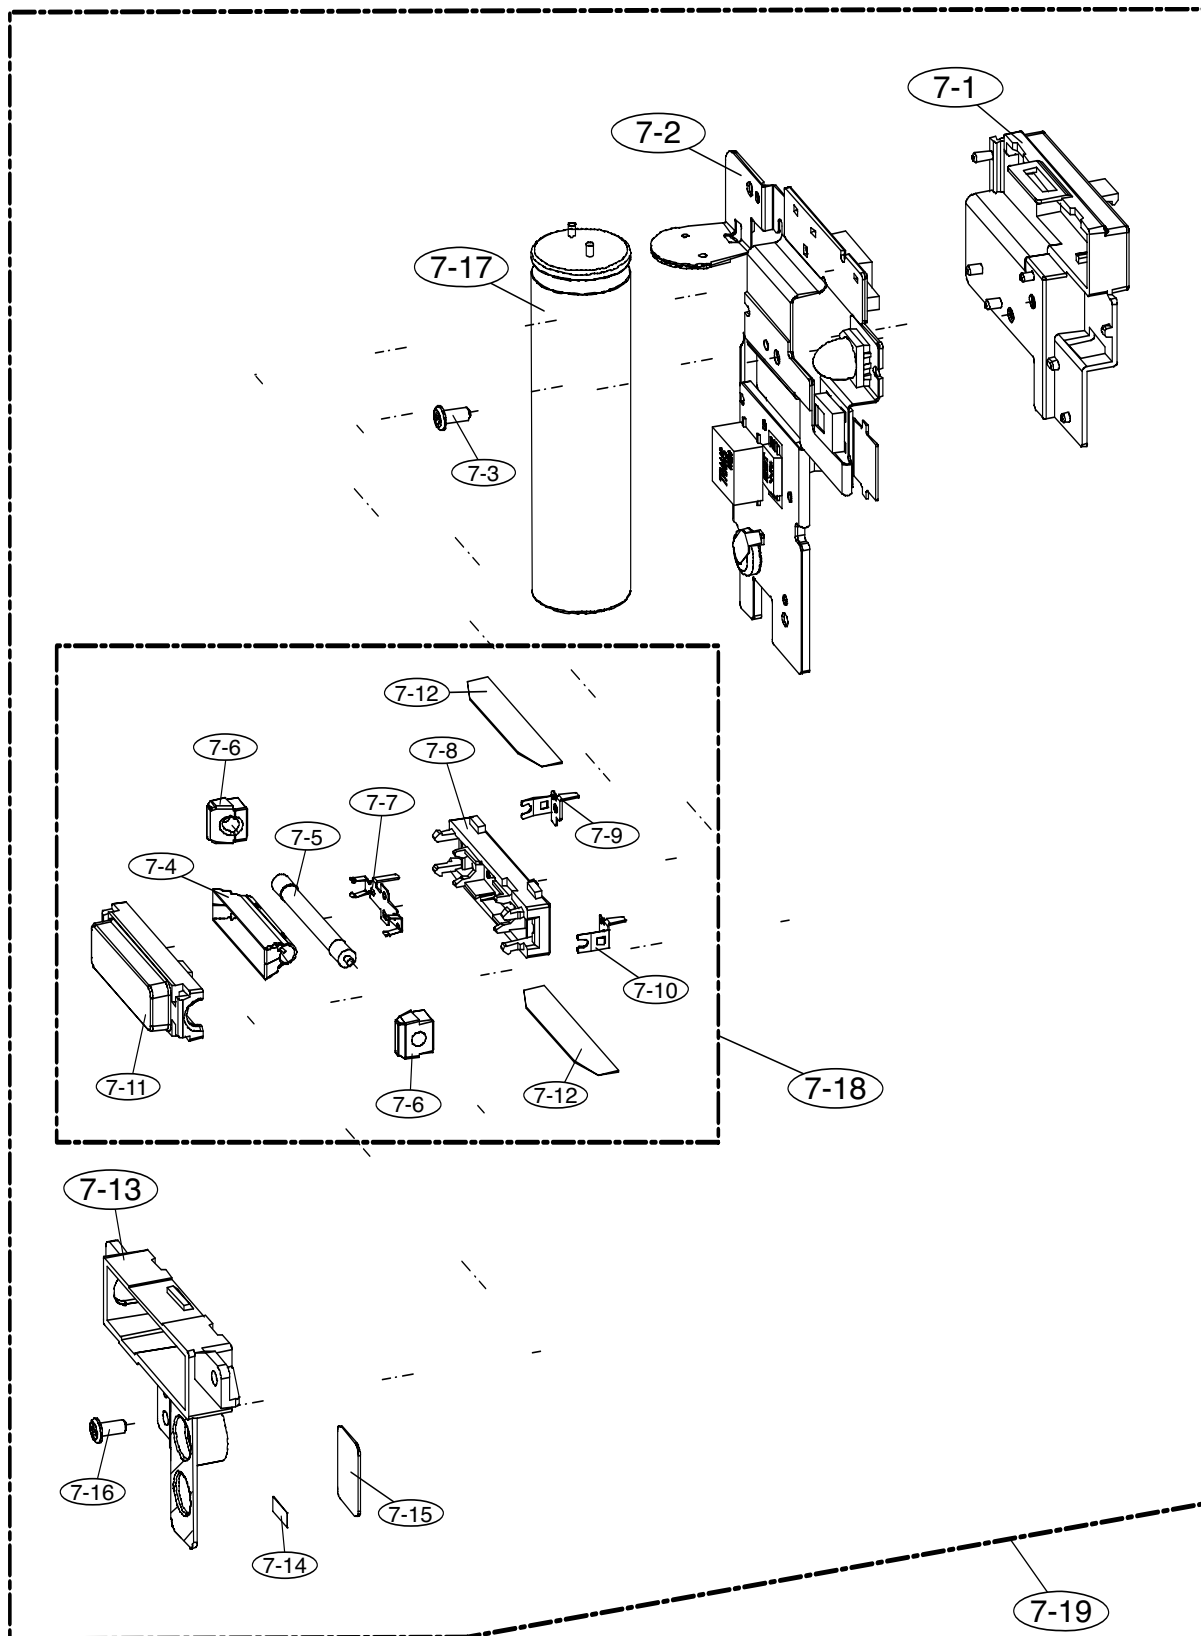


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-1	AD61-03817A	HOLDER-STROBO FPCB	1	O	
7-2	AD92-00689A	FPCB_ASSY_STROBO	1	O	
7-3	6003-001706	SCREW_1430	1	X	
7-4	AD67-01032A	LENS-FRESNEL	1	X	
7-5	AD47-00014A	ST_XE_TUBE	1	X	
7-6	AD73-00304A	RUBBER-XE TUBE	2	X	
7-7	AD67-01034A	CONTACT-TRIG	1	X	
7-8	AD61-03818A	HOLDER-REFLECTOR	1	X	
7-9	AD67-01035A	CONTACT-XE TUBE1	1	X	
7-10	AD67-01036A	CONTACT-XE TUBE2	1	X	
7-11	AD67-01070A	REFLECTOR	1	X	
7-12	AD63-03521A	SHEET-STROBO	2	X	
7-13	AD61-03816A	HOLDER-STROBO	1	O	
7-14	AD63-02038A	T/SHEET-REMOCON	1	X	
7-15	AD63-03515A	SHEET-REMOCON FILTER	1	X	
7-16	6003-001706	SCREW_1430	1	X	
7-17	2401-004528	CONDENSOR	1	O	
7-18	AD97-16458A	ASSY-FLASH MODULE	1	O	
7-19	AD97-16457A	STROBO ASSY	1	O	

III . EXPLODED VIEW AND PART LIST

8. BARREL ASSEMBLY

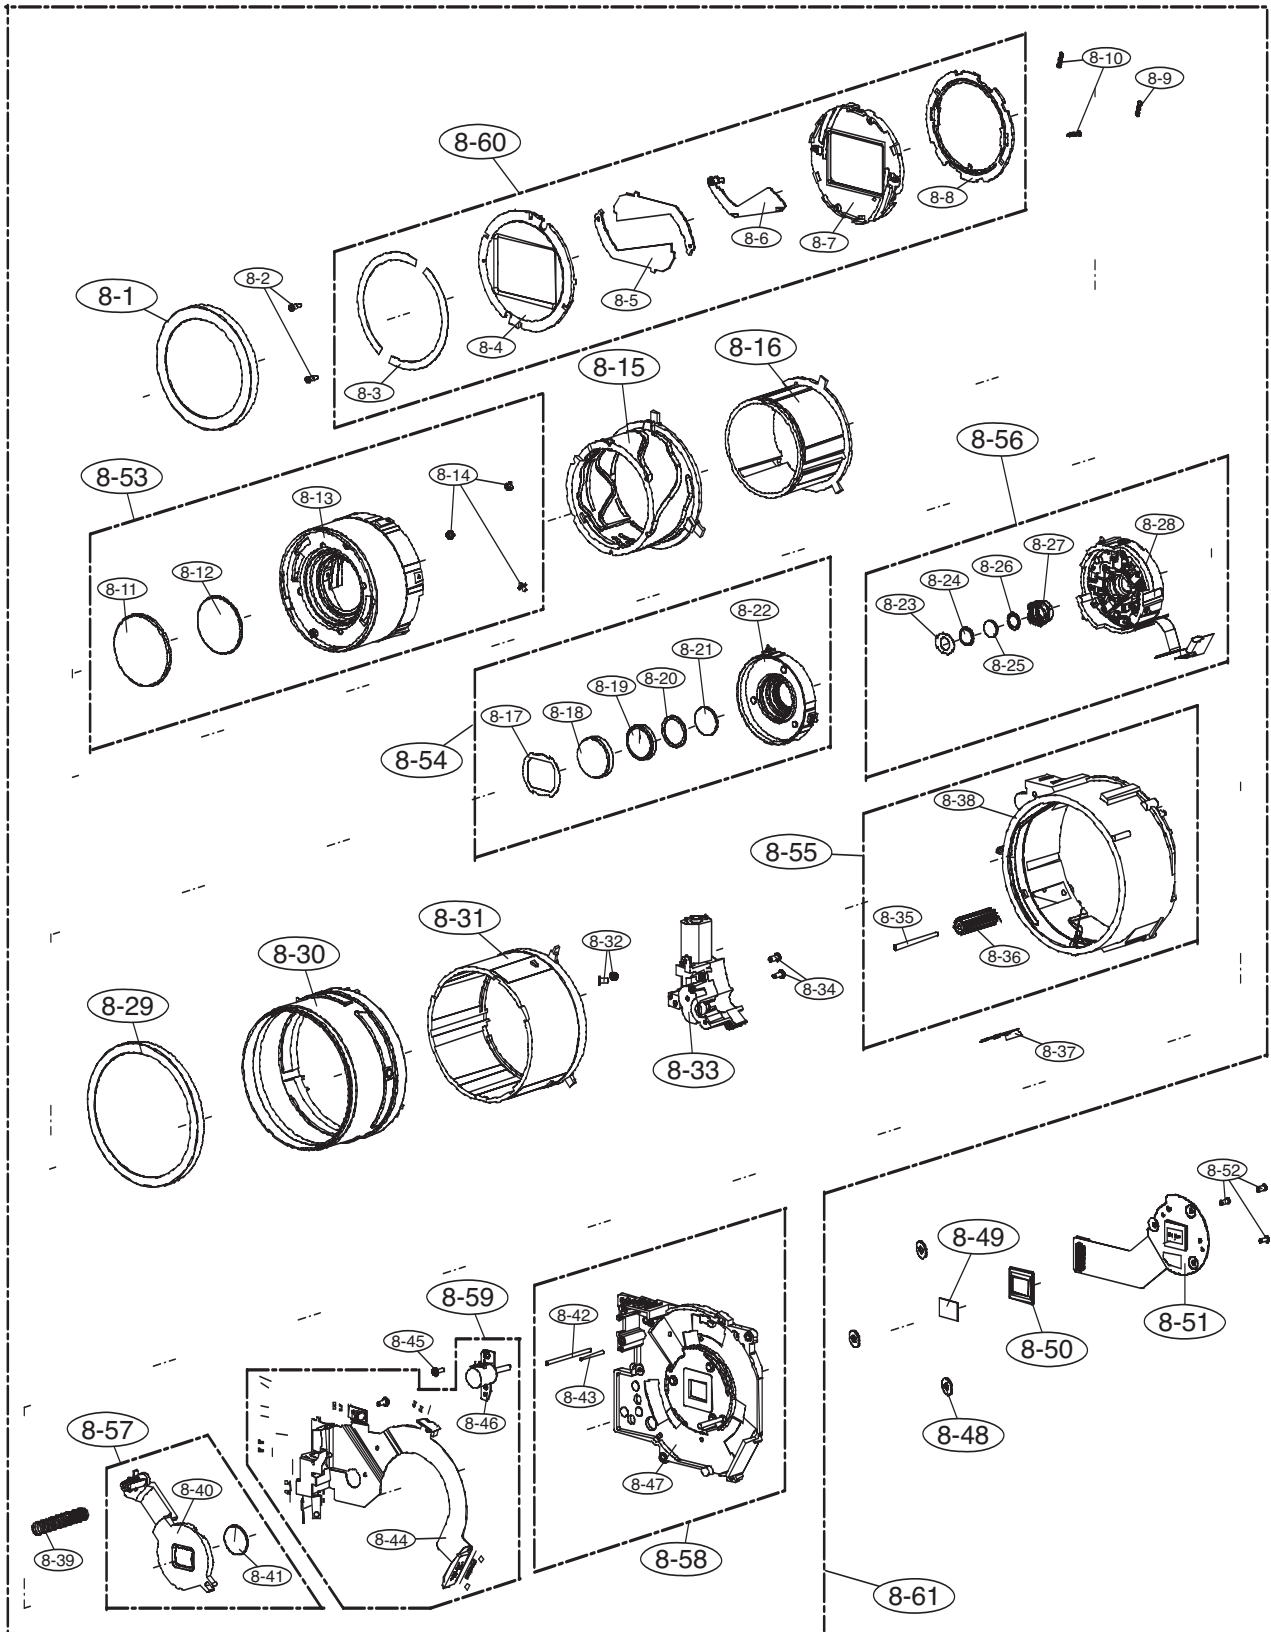

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-1	AD64-02425A	DECORING - FRONT	1	O	
8-2	6002-001418	SCREW 1222 (BARRIER)	2	X	
8-3	AD63-03651A	TAPE - FRONT DECORING	2	O	
8-4	AD63-03444A	BARRIER - FRONT PANEL	1	O	
8-5	AD63-03440A	BARRIER B	2	O	
8-6	AD63-03439A	BARRIER A	2	O	
8-7	AD63-03441A	BARRIER BASE	1	O	
8-8	AD63-03442A	BARRIER LEVER	1	O	
8-9	6107-001681	SPRING ES (BARRIER)	2	X	
8-10	6107-001682	SPRING ES (BARRIER OPEN)	1	X	
8-11	AD97-16340A	LENS ASSY - G1/G2	1	X	
8-12	AD67-01001A	LENS - G3	1	X	
8-13	AD67-01012A	BARREL - ZOOM RING	1	X	
8-14	AD66-00618A	SHAFT - MOVE PIN	3	X	
8-15	AD67-01013A	BARREL - INNER CAM	1	O	
8-16	AD67-01014A	BARREL - INNER GUIDE	1	O	
8-17	AD63-03445A	SHEET - 2ND	1	X	
8-18	AD67-01002A	LENS - G4	1	X	
8-19	AD67-01003A	LENS - G5	1	X	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST


Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-20	AD01-00005A	2ND SPACER	1	X	
8-21	AD67-01004A	LENS - G6	1	X	
8-22	AD67-01015A	BARREL - 2ND	1	X	
8-23	AD63-03446A	SHEET - 3RD A	1	X	
8-24	AD67-01005A	LENS - G7	1	X	
8-25	AD97-16341A	LENS ASSY - G8/G9	1	X	
8-26	AD63-03447A	SHEET - 3RD B	1	X	
8-27	AD67-01016A	BARREL - 3RD	1	X	
8-28	AD97-16360A	SHUTTER ASSY	1	X	
8-29	AD64-02424A	DECORING - CAM	1	O	
8-30	AD67-01010A	BARREL - CAM	1	O	
8-31	AD67-01011A	BARREL - GUIDE	1	O	
8-32	6003-001629	SCREW 1225	2	X	
8-33	AD97-16361A	ZOOM MODULE ASSY	1	O	
8-34	6003-001630	SCREW 1435	2	X	
8-35	AD66-00621A	SHAFT - IDLE GEAR PIN	1	X	
8-36	AD66-00619A	EAR - IDLE	1	X	
8-37	AD61-03810A	GUIDER - SHUTTER FPCB	1	X	
8-38	AD67-01009A	BARREL - OUTER CAM	1	X	
8-39	6107-001553	SPRING CS (AF)	1	X	
8-40	AD67-01017A	BARREL - 4TH	1	X	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-41	AD67-01008A	LENS - G10	1	X	
8-42	AD66-00617A	SHAFT - AF GUIDE BAR A	1	X	
8-43	AD66-00620A	SHAFT - CLIP GUIDE BAR	1	X	
8-44	AD92-00705A	SMD FPCB ASSY - BARREL MAIN	1	X	
8-45	6003-001630	SCREW 1435	2	X	
8-46	AD97-16362A	AF MOTOR ASSY	1	X	
8-47	AD61-03808A	BASE - LENS	1	X	
8-48	6031-001678	WASHER - PLAIN	3	O	
8-49	AD63-01246A	IR CUT FILTER	1	O	
8-50	AD63-03453A	CUSHION - IR	1	O	
8-51	AD92-00687A	CCD FPCB ASSY	1	O	
8-52	6003-001629	SCREW 1430	3	X	
8-53	AD97-16773A	BARRELAASSY-1ST	1	O	
8-54	AD97-16357A	LENS ASSY-2ND	1	O	
8-55	AD97-16776A	BARRELAASSY-OUTER CAM	1	O	
8-56	AD97-16774A	BARRELAASSY-3RD	1	O	
8-57	AD97-16359	LENS ASSY-4TH	1	O	
8-58	AD97-16355A	LENS BASE ASSY	1	O	
8-59	AD92-00768A	FPCB ASSY-BARREL MAIN	1	O	
8-60	AD97-16353A	BARRIER ASSY	1	O	
8-61	AD97-16354A	BARRELAASSY	1	O	

III . EXPLODED VIEW AND PART LIST

9. PACKING ITEM

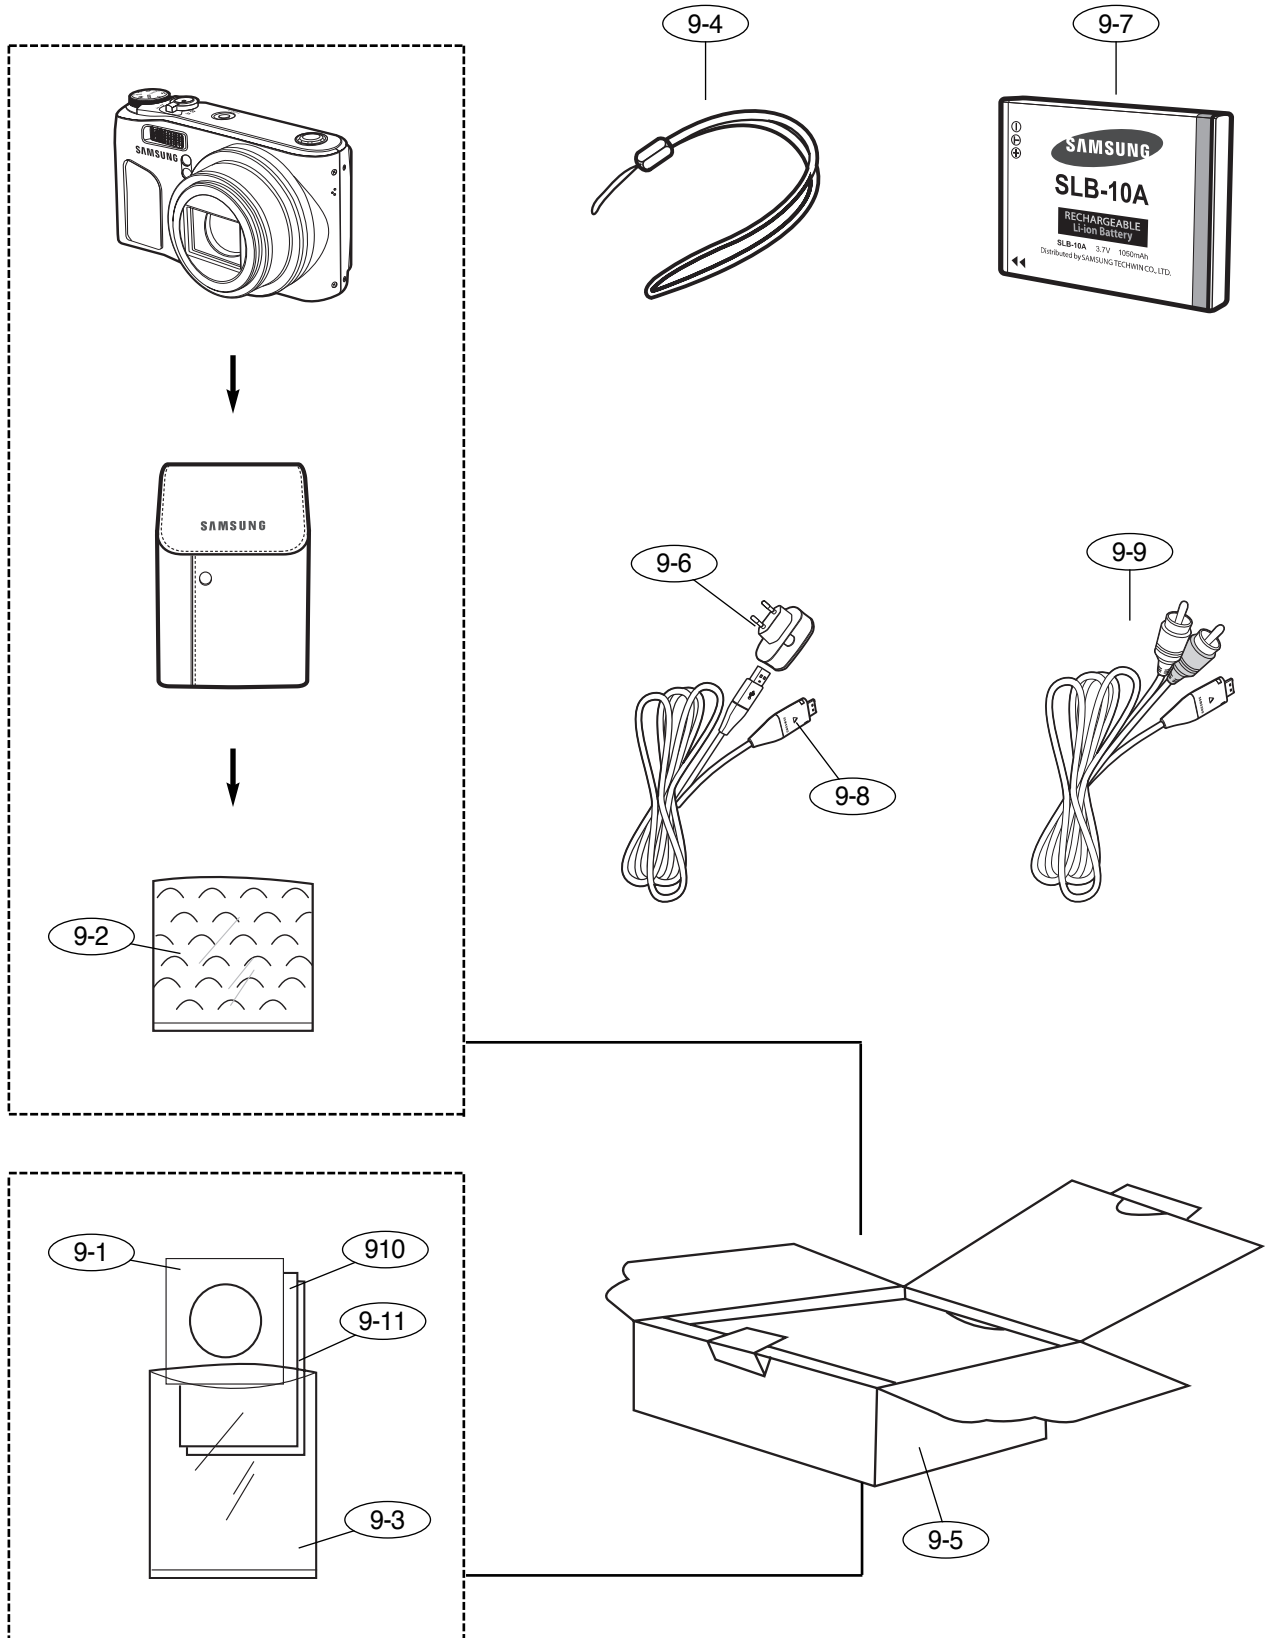

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
9-1	AD46-00222A	Samsung_CD_WB500	1	O	
	AD46-00223A	Samsung_CD_HZ10W_USA	1	O	
9-2	6902-000949	AIR_BAG_TH-73F	1	O	
9-3	6902-000921	PE BAG (FOR ACCESSORY)	1	O	
9-4	AD63-02602A	STRAP_VLUU_Silver	1	O	
	AD63-02603A	STRAP_VLUU_Black	1	O	
9-5	AD69-01788A	BOX-GT_BOX_NV9_KOR	1	O	
	AD69-01927A	BOX-GT_BOX_WB500_EXP	1	O	
	AD69-01928A	BOX-GT_BOX_HZ10W_USA	1	O	
	AD69-01929A	BOX-GT_BOX_WB500_CAN	1	O	
9-6	AD44-00129A	AC_ADAPTOR_SAC-47_KOR(4.2V)	1	O	
	AD44-00133A	AC_ADAPTOR_SAC-47_EXP(4.2V)	1	O	
	AD44-00131A	AC_ADAPTOR_SAC-47_USA(4.2V)	1	O	
	AD44-00130A	AC_ADAPTOR_SAC-47_UK(4.2V)	1	O	
	AD44-00135A	AC_ADAPTOR_SAC-47_AUS(4.2V)	1	O	
	AD44-00132A	AC_ADAPTOR_SAC-47_ARG(4.2V)	1	O	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
9-7	4302-001221	BATTERY-LI(2ND(LITHIUM-ION_SLB-10A))	1	O	
9-8	AD39-00147A	USB_CABLE_20PIN(SUC-C3)	1	O	
9-9	AD39-00146A	CBF IF (20PIN_AV_CABLE_SCC-AV20)	1	O	
9-10	AD68-03469A	MANUAL-U_VLUU_WB500	1	O	
	AD68-03456A	MANUAL-U_WB500_CHI_S	1	O	
	AD68-03457A	MANUAL-U_WB500_EUR1	1	O	
	AD68-03458A	MANUAL-U_WB500_EUR2	1	O	
	AD68-03459A	MANUAL-U_WB500_ASIA	1	O	
	AD68-03460A	MANUAL-U_WB500_AMERICA	1	O	
	AD68-03461A	MANUAL-U_HZ10W_AMERICA_USA	1	O	
	AD68-03462A	MANUAL-U_WB500_EUR3	1	O	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
9-11	6801-001646	WARRANTY CARD_EXP	1	O	
	6801-001737	WARRANTY CARD_2 YERARS	1	O	
	6801-001735	WARRANTY CARD_RUS(3 YEARS)	1	O	
	AD68-02558A	PRC_CARD_RUSSIA	1	O	
	6801-001675	WARRANTY CARD_TSOE(CHINA)	1	O	
	6801-001647	CARD_PRODUCT(Mexico)	1	O	
	6801-001722	WARRANTY CARD_IRAN	1	O	
	6801-001659	WARRANTY CARD_TURKEY	1	O	
	6801-001660	SERVICE_CENTER_TURKEY	1	O	
	6801-001662	WARRANTY_CARD_Argentina	1	O	
	6801-001664	LOCAL_WARRANTY_CARD_INDIA	1	O	
	6801-001665	LOCAL_WARRANTY_CARD_ITALIA	1	O	
	6801-001681	WARRANTY_CARD_CANADA	1	O	
	6801-001564	WARRANTY_CARD_Vietnam	1	O	
	6801-001736	WARRANTY_CARD_TAIWAN	1	O	
	6801-001740	WARRANTY_CARD_SEDA(BRAZIL)	1	O	
	6801-001734	WARRANTY_CARD_UKRAINE	1	O	