

S/M No: RNRSU20001

Service Manual


Refrigerator

*FRN-U20IE**
*FRS-U20IE**


*FRN-U20BE**
*FRS-U20BE**

*FRN-U20DE**
*FRN-U20EE**
*FRS-U20DE**
*FRS-U20EE**


*FRN-U20FE**
*FRN-U20GE**
*FRS-U20FE**
*FRS-U20GE**

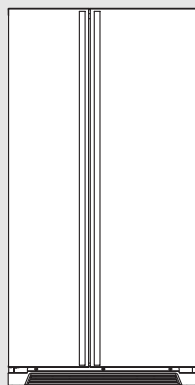


FRU-57BI~

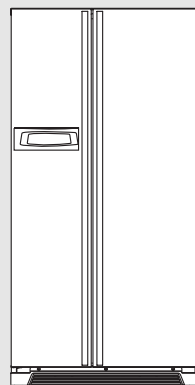

FRU-57BB~

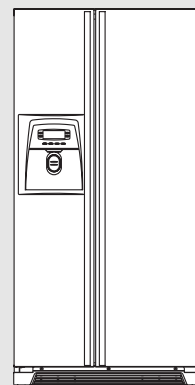

FRU-54BD~
FRU-54BE~

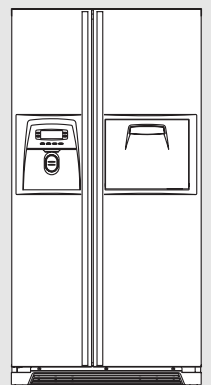

FRU-54BF~
FRU-54BG~

✓ Caution

: In this Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service Information Center

DAEWOO
ELECTRONICS



- Jan, 2007

DAEWOO

CONTENTS

1. WARNINGS AND PRECAUTIONS FOR SAFETY	-----2
2. EXTERNAL VIEW	
2-1. External Size	-----3
2-2. Name of Each Parts	-----6
2-3. Cold Air Circulation	-----8
3. SPECIFICATION	-----9
4. OPERATION AND FUNCTIONS	-----11
5. WIRING DIAGRAM	-----35
6. COMPONENT LOCATE VIEW	-----40
7. HOW TO CHECK EACH PARTS	
7-1. Hose Ice Maker Tube	-----42
7-2. Bracket Geared Motor	-----43
7-3. Dispenser Micro Switch	-----44
7-4. Dispenser Solenoid Valve	-----45
7-5. Main PCB	-----46
7-6. Ice Maker	-----48
8. TROUBLE DIAGNOSIS	
8-1. Power Failure	-----50
8-2. Freezer Compartment	-----51
8-3. Refrigerator Compartment	-----57
8-4. Operation Noise of Refrigerator	-----62
8-5. Door	-----68
9. COOLING CYCLE HEAVY REPAIR	
9-1. Summary of Heavy Repair	-----69
9-2. Precaution during Heavy Repair	-----70
9-3. Practical Work for Heavy Repair	-----71
9-4. Standard Regulations for Heavy Repair	-----73
9-5. Brazing Reference Drawing	-----74
10. INSTALLATION GUIDE	
10-1. Installation Preparation	----- 75
10-2. If the Refrigerator can not enter the Door	----- 76
10-3. Refrigerator Leveling & Door Adjustment	-----77
10-4. Water Line Installation	----- 79
10-5. Dispenser Water Flow	----- 81
11. EXPLODED VIEW & PARTS LIST	-----82

1. WARNINGS AND PRECAUTIONS FOR SAFETY


Please observe the following safety precautions in order to use safely and correctly the refrigerator and to prevent accident and danger during repair.

1. Be care of an electric shock. Disconnect power cord from wall outlet and wait for more than three minutes before replacing PCB parts.
Shut off the power whenever replacing and repairing electric components.
2. When connecting power cord, please wait for more than five minutes after power cord was disconnected from the wall outlet.
3. Please check if the power plug is pressed down by the refrigerator against the wall.
If the power plug was damaged, it may cause fire or electric shock.
4. If the wall outlet is over loaded, it may cause fire.
Please use its own individual electrical outlet for the refrigerator.
5. Please make sure the outlet is properly earthed, particularly in wet or damp area.
6. Use standard electrical components when replacing them.
7. Make sure the hook is correctly engaged.
Remove dust and foreign materials from the housing and connecting parts.
8. Do not fray, damage, machine, heavily bend, pull out or twist the power cord.
9. Please check the evidence of moisture intrusion in the electrical components.
Replace the parts or mask it with insulation tapes if moisture intrusion was confirmed.
10. Do not touch the icemaker with hands or tools to confirm the operation of geared motor.
11. Do not let the customers repair, disassemble and reconstruct the refrigerator for themselves.
It may cause accident, electric shock, or fire.
12. Do not store flammable materials such as ether, benzene, alcohol, chemicals, gas, or medicine in the refrigerator.
13. Do not put flower vase, cup, cosmetics, chemicals, etc., or container with full of water on the top of the refrigerator.
14. Do not put glass bottles with full of water into the freezer.
The contents shall freeze and break the glass bottles.
15. When you scrap the refrigerator, please disconnect the door gasket first and scrap it where children are not accessible.


2. EXTERNAL VIEWS

2-1. External Size


- FRS(N)-U20IE*

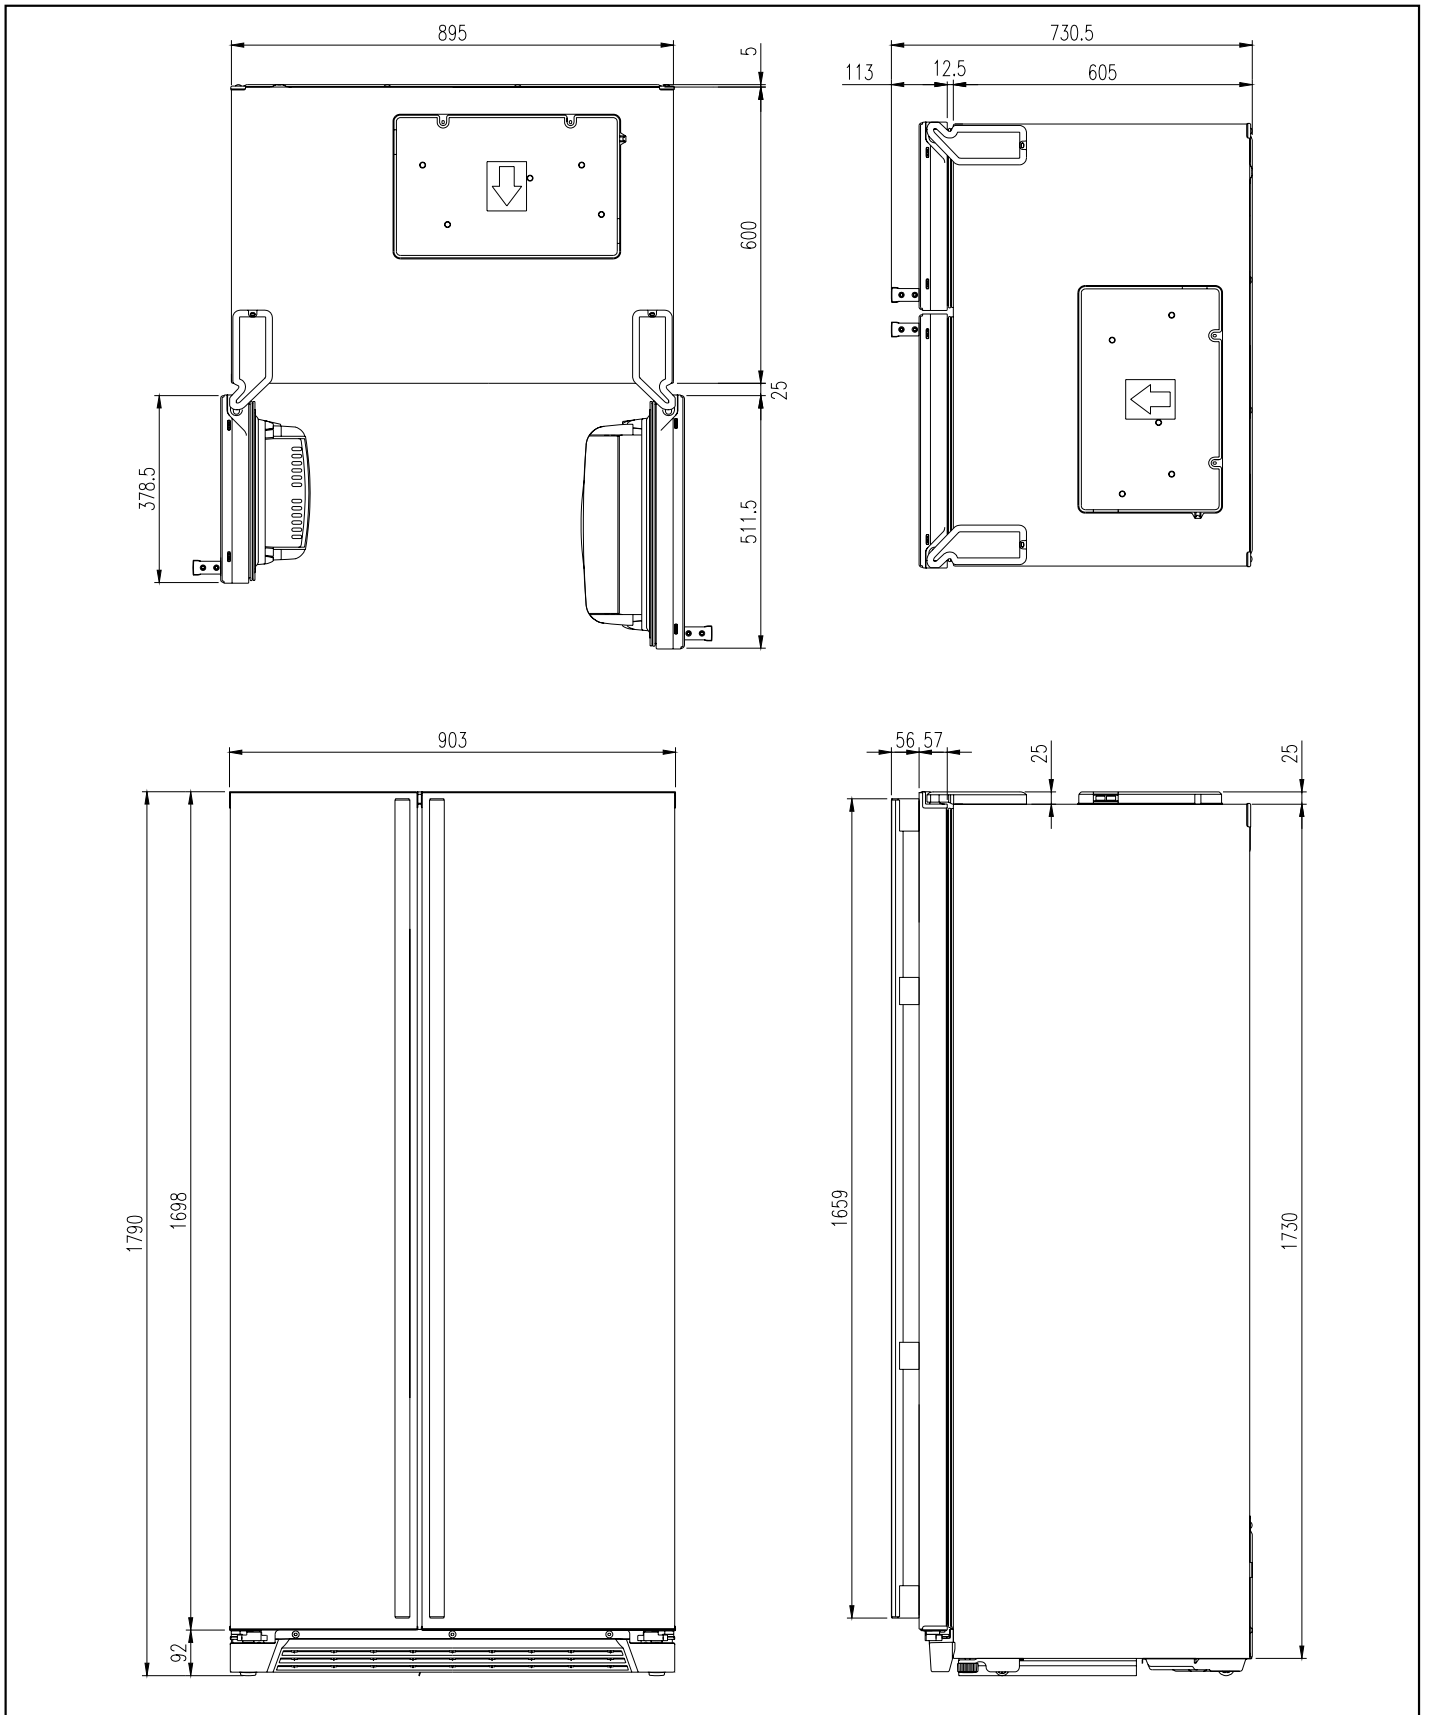

- FRS(N)-U20DE* / EE*

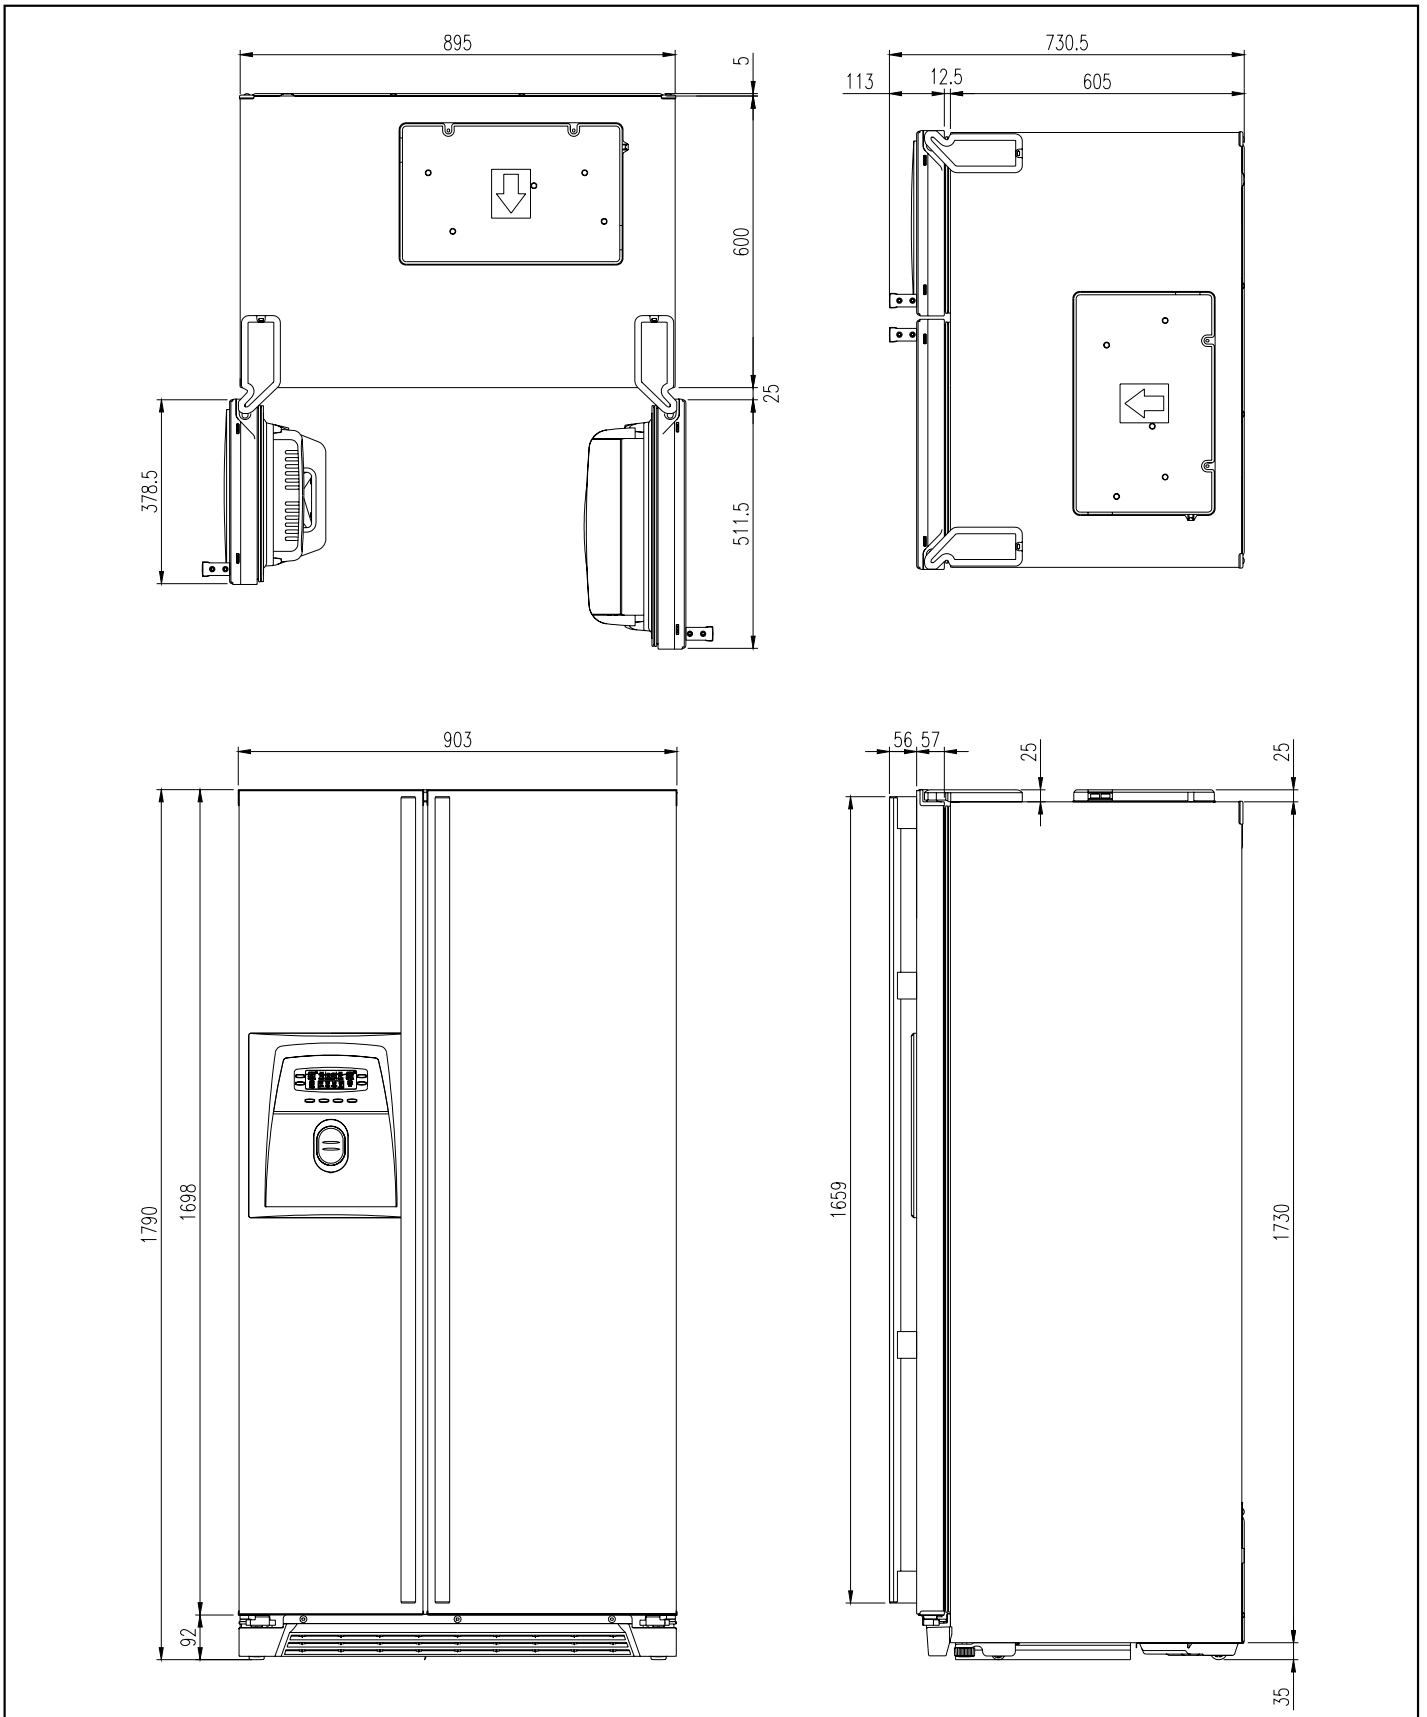


- FRS(N)-U20FE* / GE*

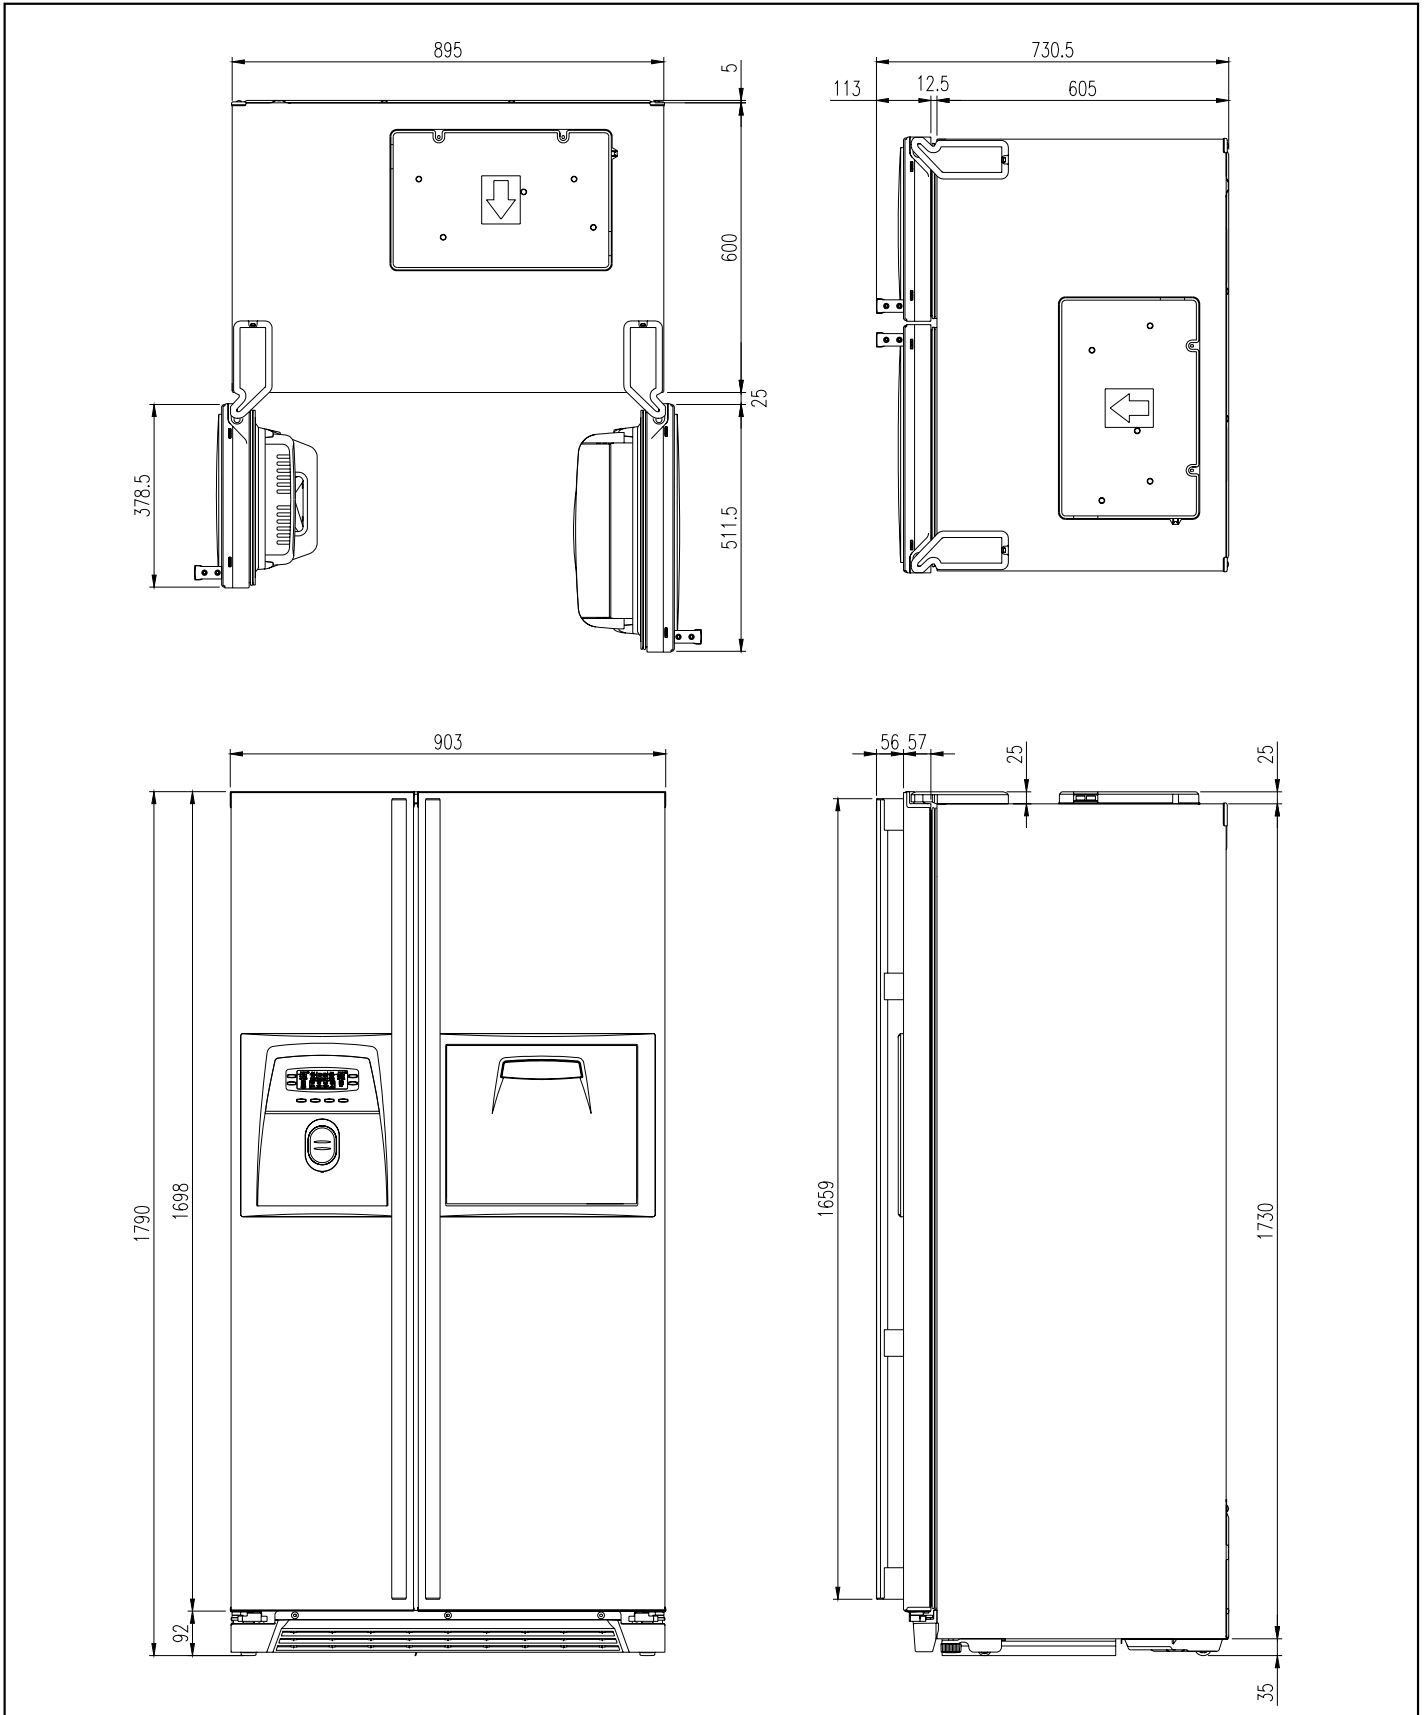

2-2. Name of Each Parts


- Basic Model

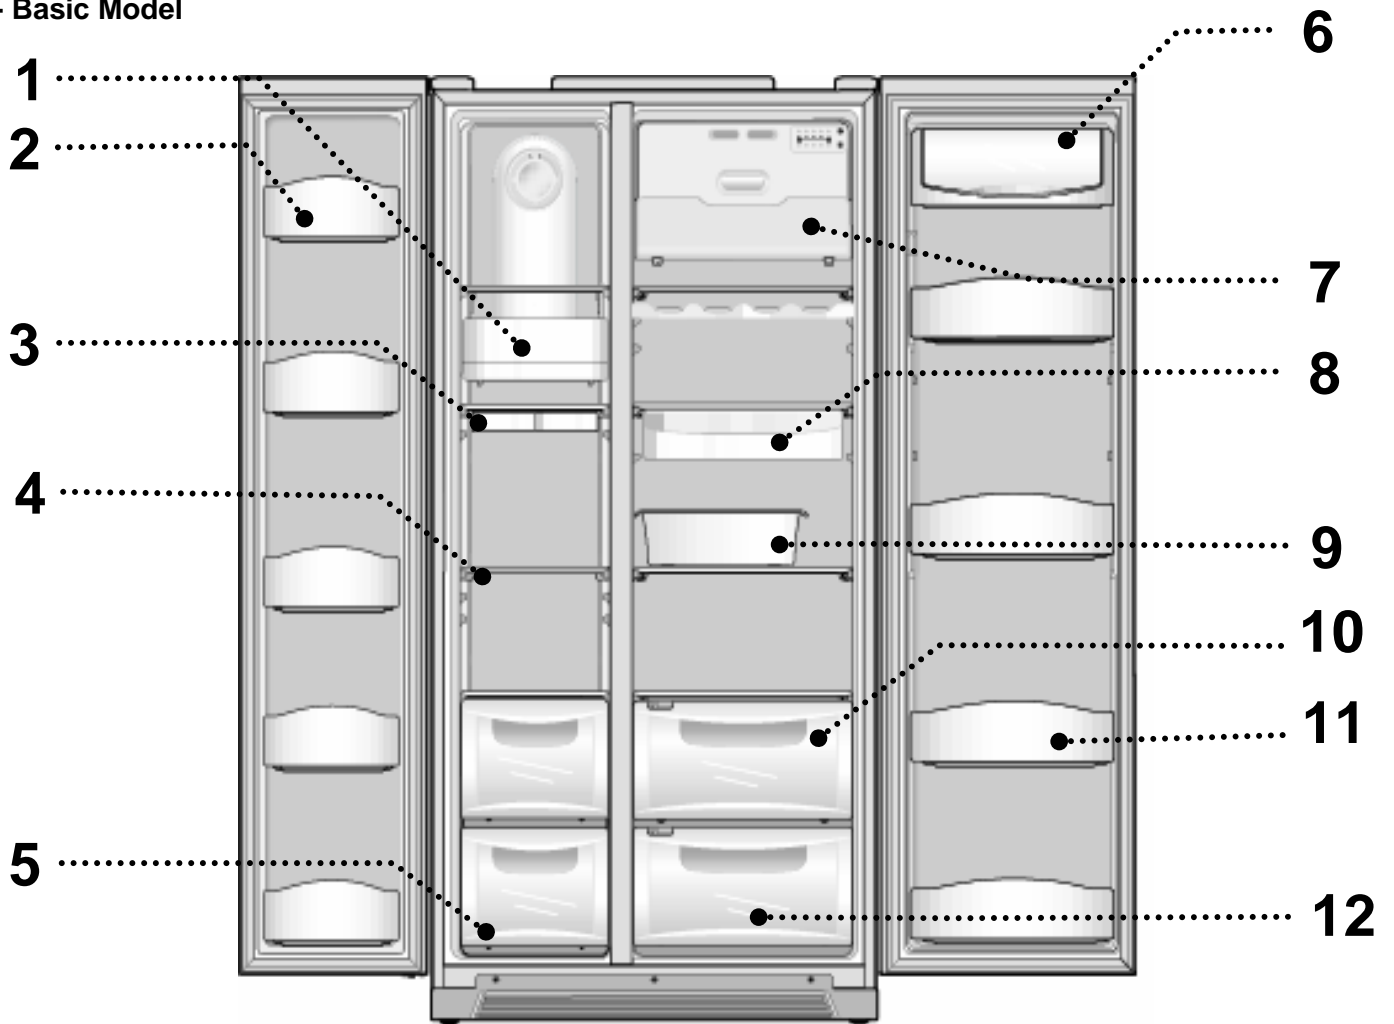

- Wine Rack is option

Freezer Compartment	Refrigerator Compartment
1. Freezer light	6. Dairy pocket
2. Freezer pocket	7. Refrigerator light
3. Ice tray	8. Chilled case
4. Freezer shelf	9. Movable Egg case
5. Freezer case	10. Refrigerator shelf
	11. Refrigerator pocket
	12. Refrigerator case

- Full option Model

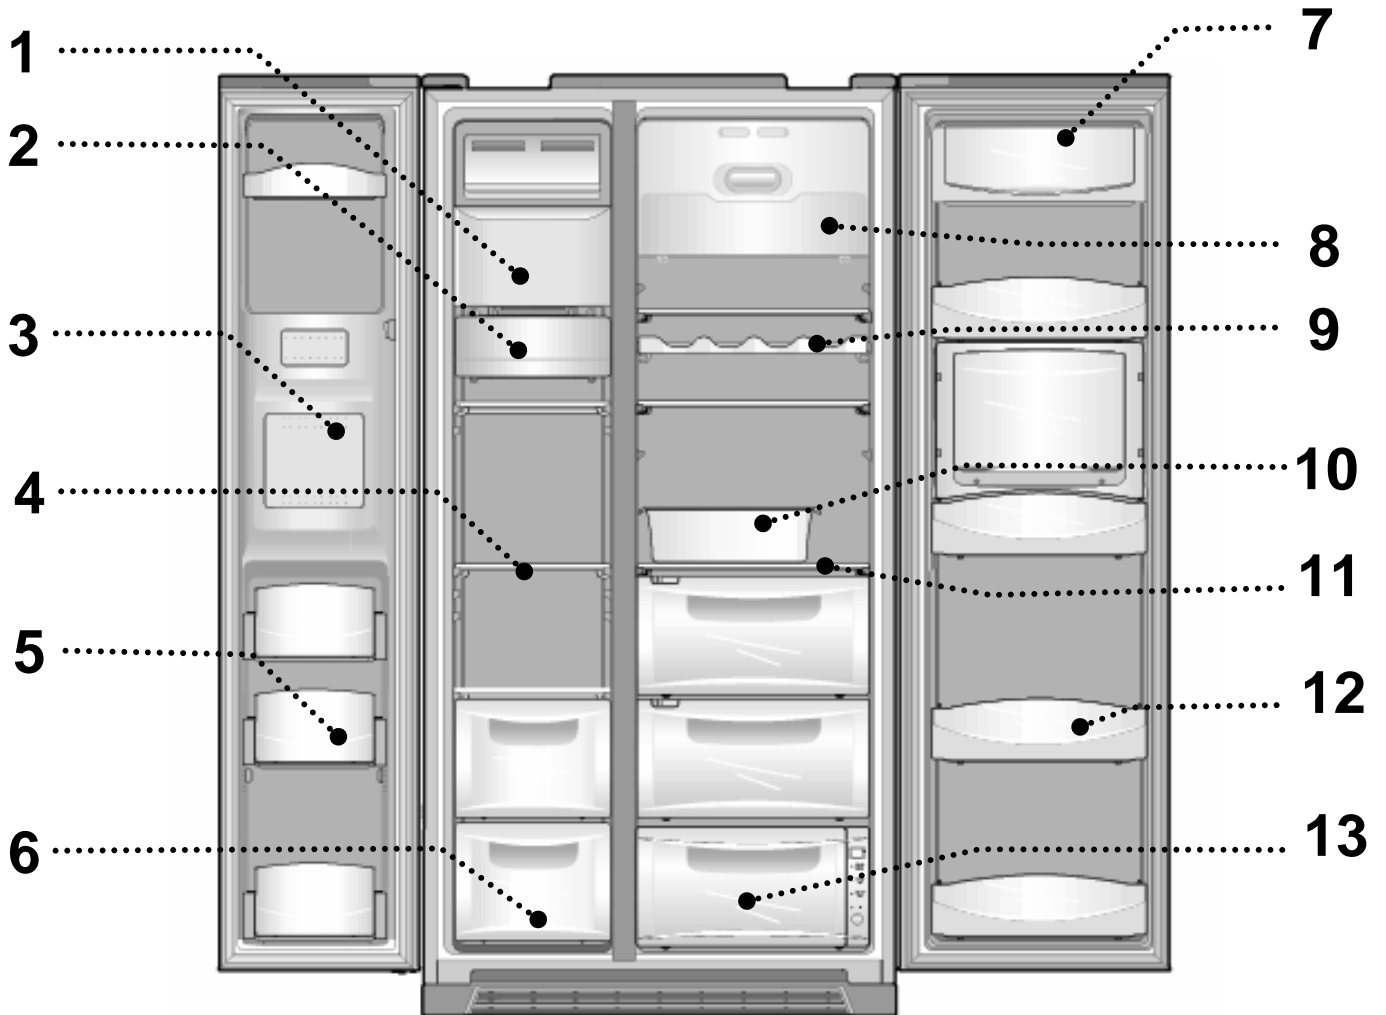


-Full option Model illustrated.
-Features are model dependent.


Freezer Compartment	Refrigerator Compartment
1. Ice cubes storage case	7. Dairy pocket
2. Freezer light	8. Refrigerator light
3. Water/Ice Dispenser	9. Wine Rack
4. Freezer shelf	10. Movable Egg case
5. Freezer pocket	11. Refrigerator shelf
6. Freezer case	12. Refrigerator pocket
	13. Magic room (option)

2-3. Cold Air Circulation

Freezer
Compartment

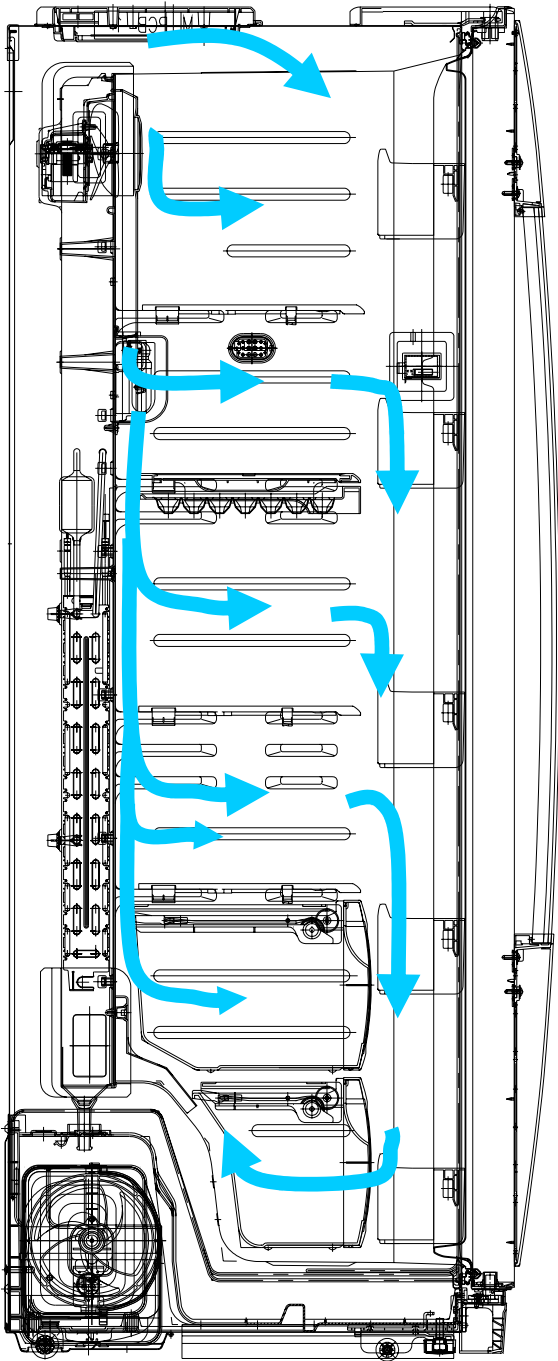

Refrigerator
Compartment

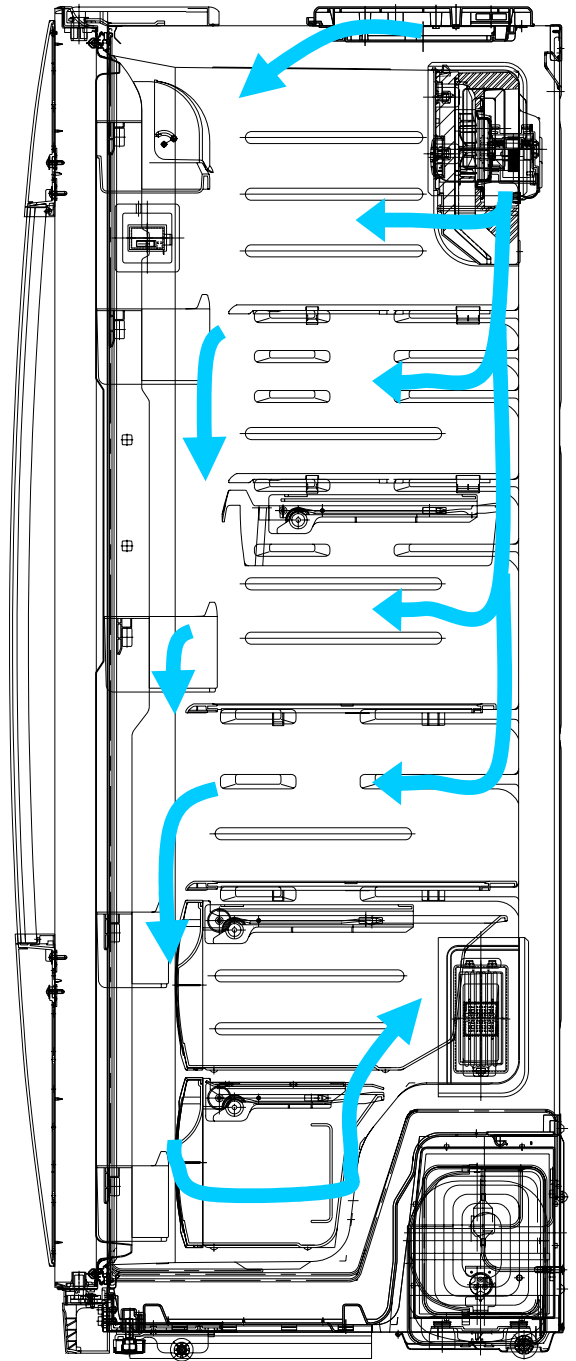

3. SPECIFICATION

3-1. Specification

Item		Specification					
Model Name		U20IE*	U20BE*	U20DE*	U20EE*	U20FE*	U20GE*
ISO Gross Volume (Li)	Total	570 Li	570 Li	541 Li	525 Li	541Li	536 Li
	Freezer	209 Li	209 Li	184 Li	178 Li	184 Li	184 Li
	Refrigerator	361 Li	361 Li	357 Li	337 Li	357 Li	352 Li
ISO Storage Volume (Li)	Total	537 Li	537 Li	504 Li	504 Li	504 Li	500 Li
	Freezer	198 Li	198 Li	170 Li	170 Li	170 Li	170 Li
	Refrigerator	339 Li	339 Li	334 Li	334 Li	334 Li	330 Li
Weight		104kg	104kg	113kg	115kg	115kg	117kg
External Dimension (Width x Depth x Height)		903 mm x 734.5mm x 1790 mm					
C Y C L E	Evaporator	Fin Type					
	Condenser	Fan Cooling System					
	Dryer	Molecular Sieve XH-9					
	Capillary Tube	ID Φ 0.7 × T0.55 × L2200					


Item		Specification (220~240V Models only)	
Model Name		Basic Model	Dispenser Model
D E F O R E S T	D-Sensor	PBN-43	
	F-Sensor	PBN-38	
	R-Sensor	PBN-43	
H E A T E R	Defrost Heater	AC220V / 192W	
	Main Duct Heater	AC220V / 7W	
	Louver Heater	AC220V / 8W	
	Dispenser Heater	-	AC220V / 5W
	Water Pipe Heater	-	AC220V / 5W
E L E C T R I C A L P A R T S	Main Fuse (Power cord)	AC250V 15A	
	Fuse Temp (Defrost)	AC250V , 10A , 77℃	
	F-Fan Motor	DC13V / 2050±100 rpm	
	R-Fan Motor	DC13V / 1950±100 rpm	
	Condenser Fan Motor	DC13V / 1100±100 rpm	
	F-Lamp	AC230~240V / 25W (2EA)	
	R-Lamp	AC230~240V / 25W (2EA)	
	Door Switch , F / R	SP201R-7DL / SP201R-7DR (SPF101B-2D / SPF101B-1D)	

※ () is the specification for the model which use R-600a(refrigerant)


4. OPERATION AND FUNCTIONS

4-1. Display

4-1-1. FRS(N)-U20IE* Type

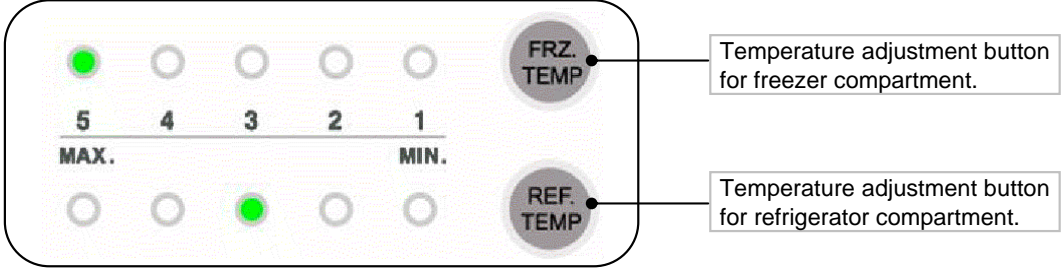INPUT	CONTROL OBJECT																								
FRZ.TEMP, REF.TEMP	Inner Control (Lamp-LED)																								
CONTENTS																									
																									
REMARKS																									
<p>1. "FRZ.TEMP" Button</p> <ol style="list-style-type: none"> 1) Temperature control of Freezer compartment 2) 5 step mode of successive temperature mode. 3) Initial mode by power input : "3" <p>※Whenever pressing button, setting is repeated in the order of Medium(3) → Medium Max(4) → Max(5) → Min(1) → Medium Min(2).</p> <table border="1" data-bbox="156 1205 1166 1323"> <tr> <td>Temperature Chang</td> <td>Min</td> <td>Medium Min</td> <td>Mid</td> <td>Medium Max</td> <td>Max</td> </tr> <tr> <td>Temp indication</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> </tr> </table> <p>2. "REF.TEMP" button.</p> <ol style="list-style-type: none"> 1) Temperature control of Refrigerator compartment 2) 5 step mode of successive temperature mode. 3) Initial mode by power input : "3" <p>※Whenever pressing button, setting is repeated in the order of Medium(3) → Medium Max(4) → Max(5) → Min(1) → Medium Min(2).</p> <table border="1" data-bbox="156 1619 1166 1738"> <tr> <td>Temperature Change</td> <td>Min</td> <td>Medium Min</td> <td>Mid</td> <td>Medium Max</td> <td>Max</td> </tr> <tr> <td>Temp indication</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> </tr> </table> <p>※ The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.</p> <p>※ Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum2~3 days.</p>		Temperature Chang	Min	Medium Min	Mid	Medium Max	Max	Temp indication	1	2	3	4	5	Temperature Change	Min	Medium Min	Mid	Medium Max	Max	Temp indication	1	2	3	4	5
Temperature Chang	Min	Medium Min	Mid	Medium Max	Max																				
Temp indication	1	2	3	4	5																				
Temperature Change	Min	Medium Min	Mid	Medium Max	Max																				
Temp indication	1	2	3	4	5																				

4-1-2. FRS(N)-U20BE* Type

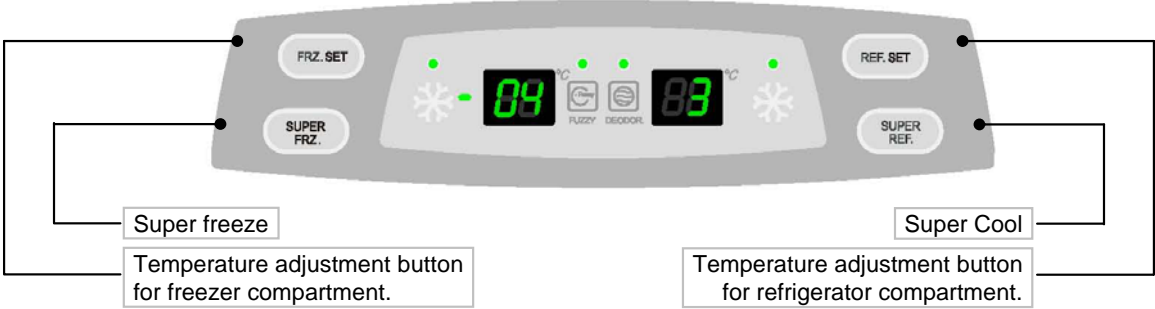INPUT	CONTROL OBJECT																
Front PCB button Freezer Set , Refrigerator Set Super Freeze , Super Cool	FCP LED																
CONTENTS																	
REMARKS																	
 <p>The diagram shows a control panel with four buttons: 'FRZ. SET' (top left), 'SUPER FRZ.' (bottom left), 'REF. SET' (top right), and 'SUPER REF.' (bottom right). In the center, there are two digital displays: the left one shows '-04' and the right one shows '03'. Above the displays are icons for 'FUZZY' and 'DEODOR.'. Below the displays are icons for 'Super Freeze' (snowflake) and 'Super Cool' (snowflake). Lines connect the 'SUPER FRZ.' and 'SUPER REF.' buttons to labels 'Super freeze' and 'Super Cool' respectively. Other lines connect the 'FRZ. SET' and 'REF. SET' buttons to labels 'Temperature adjustment button for freezer compartment.' and 'Temperature adjustment button for refrigerator compartment.'</p>																	
1. Display control																	
<table border="1"> <tr> <td>FCP-LED</td> <td>Control</td> </tr> </table>	FCP-LED	Control	<table border="1"> <tr> <td>88 Display (Set Temp.)</td> <td>Initial mode : Freezer & Refrigerator set → Normal (-19℃/4℃)</td> </tr> </table>	88 Display (Set Temp.)	Initial mode : Freezer & Refrigerator set → Normal (-19℃/4℃)												
FCP-LED	Control																
88 Display (Set Temp.)	Initial mode : Freezer & Refrigerator set → Normal (-19℃/4℃)																
<table border="1"> <tr> <td>Super Freeze , Super Cool Icon</td> <td>Dial</td> </tr> </table>	Super Freeze , Super Cool Icon	Dial	<table border="1"> <tr> <td>FUZZY,DEODOR LED</td> <td>ON</td> </tr> </table>	FUZZY,DEODOR LED	ON												
Super Freeze , Super Cool Icon	Dial																
FUZZY,DEODOR LED	ON																
<table border="1"> <tr> <td>Temperature Change</td> <td>Initially On</td> <td>1st Press</td> <td>2nd Press</td> <td>3th Press</td> <td>4th Press</td> <td>5th Press</td> <td>6th Press</td> </tr> <tr> <td>Temp indication</td> <td>-19℃ (Normal)</td> <td>-20℃</td> <td>-21℃</td> <td>-22℃ (Max)</td> <td>-16℃ (Min)</td> <td>-17℃</td> <td>-18℃</td> </tr> </table>		Temperature Change	Initially On	1st Press	2nd Press	3th Press	4th Press	5th Press	6th Press	Temp indication	-19℃ (Normal)	-20℃	-21℃	-22℃ (Max)	-16℃ (Min)	-17℃	-18℃
Temperature Change	Initially On	1st Press	2nd Press	3th Press	4th Press	5th Press	6th Press										
Temp indication	-19℃ (Normal)	-20℃	-21℃	-22℃ (Max)	-16℃ (Min)	-17℃	-18℃										
2. “Freezer Set” Button																	
<ol style="list-style-type: none"> 1) Temperature control of freezer compartment 2) 7 step mode of successive temperature mode. 3) Initial mode by power input : “-19℃” ※ Whenever pressing button, setting is repeated in the order of (-19℃) → (-20℃) → (-21℃) → (-22℃) → (-16℃) → (-17℃) → (-18℃). 																	
Letters are indicated on 88 Display LED																	
3. “Super Freeze” Button When this mode is chosen, the icon (Super Freeze) is ON.																	
4. “Refrigerator Set” button.																	
<ol style="list-style-type: none"> 1) Temperature control of Refrigerator compartment 2) 7 step mode of successive temperature mode. 3) Initial mode by power input : “4℃” ※ Whenever pressing button, setting is repeated in the order of (4℃) → (3℃) → (2℃) → (8℃) → (7℃) → (6℃) → (5℃). 																	
Letters are indicated on 88 Display LED																	
<table border="1"> <tr> <td>Temperature Change</td> <td>Initially On</td> <td>1st Press</td> <td>2nd Press</td> <td>3th Press</td> <td>4th Press</td> <td>5th Press</td> <td>6th Press</td> </tr> <tr> <td>Temp indication</td> <td>4℃ (Normal)</td> <td>3℃</td> <td>2℃ (Max)</td> <td>8℃ (Min)</td> <td>7℃</td> <td>6℃</td> <td>5℃</td> </tr> </table>		Temperature Change	Initially On	1st Press	2nd Press	3th Press	4th Press	5th Press	6th Press	Temp indication	4℃ (Normal)	3℃	2℃ (Max)	8℃ (Min)	7℃	6℃	5℃
Temperature Change	Initially On	1st Press	2nd Press	3th Press	4th Press	5th Press	6th Press										
Temp indication	4℃ (Normal)	3℃	2℃ (Max)	8℃ (Min)	7℃	6℃	5℃										
5. “Super Cool” button. When this mode is chosen, the icon (Super Cool) is ON.																	

4-1-3. Dispenser Model

INPUT	CONTROL OBJECT
Front PCB button FREEZER SET, REFRIGERATOR SET SUPER FREEZER, SUPER REFRIGERATOR RESET FILTER, WATER / ICE, ICE MAKER LOCK ,LOCK	FCP C-LED

CONTENTS	REMARKS
----------	---------



1. Display control

FCP-LED	Control
88 DISPLAY (SET TEMP.)	Initial mode : Freezer & Refrigerator set→ Medium (-19℃/4℃)
SUPER FREEZER, SUPER REFRIGERATOR ICON	Dial
FUZZY, DEODORIZER ICON	Always ON
WATER / CUBED ICE/ CRUSHED ICE ICON	Dial
LOCK ICON	Dial
ICE MAKER LOCK ICON	Dial
FILTER CHANGE ICON	After six month, LED ON

2. "FREEZER SET" Button

- 1) Temperature control of freezer compartment
- 2) 7 step mode of successive temperature mode.
- 3) Initial mode by power input : "Medium(-19℃)"
 ※ Whenever pressing button, setting is repeated in the order of
 Medium (-19℃) → Medium Max 1 (-20℃) → Medium Max 2 (-21℃) → Max (-22℃)
 → Min (-16℃) → Medium Min 2 (-17℃) → Medium Min 2 (-18℃).

Letters are indicated on 88 Display LED


Temperature Change	Min	Medium Min 1	Medium Min 2	Medium	Medium Max 1	Medium Max 2	Max
Temp indication	-16℃	-17℃	-18℃	-19℃	-20℃	-21℃	-22℃

3. "SUPER FREEZER" Button

When this mode is chosen, the icon (FREEZER QUICK) is ON.


CONTENTS	REMARKS												
<p>4. "REFRIGERATOR SET" button.</p> <p>1) Temperature control of Refrigerator compartment</p> <p>2) 5 step mode of successive temperature mode.</p> <p>3) Initial mode by power input : "Medium (4℃)"</p> <p>※ Whenever pressing button, setting is repeated in the order of Medium (4℃) → Medium Max (3℃) → Max (2℃) → Min (6℃) → Medium Min (5℃).</p> <p>Letters are indicated on 88 Display LED</p> <table border="1" style="width: 100%; text-align: center;"> <tr> <td>Temperature Change</td> <td>Min</td> <td>Medium Min</td> <td style="background-color: #ADD8E6;">Mid</td> <td>Medium Max</td> <td>Max</td> </tr> <tr> <td>Temp indication</td> <td>6℃</td> <td>5℃</td> <td style="background-color: #ADD8E6;">4℃</td> <td>3℃</td> <td>2℃</td> </tr> </table> <p>5. "SUPER REFRIGERATOR" button.</p> <p>When this mode is chosen, the icon (REFRIGERATOR QUICK) is ON.</p> <p>6. "WATER / ICE" button</p> <p>1) Select Water / Cubed Ice / Crushed Ice.</p> <p>2) Icon lights up to show your selection is on. Initial mode by power input : "Water" mode.</p> <p>3) The mode of Cubed Ice or Crushed Ice continues for 1 hour and then changes to Water. (Water icon turns ON)</p> <p>7. "ICE MAKER LOCK" button</p> <p>1) Start by pushing "ICE MAKER LOCK" button</p> <p>① "ICE MAKER LOCK" icon is on</p> <p>② "WATER" icon is always on</p> <p>2) Stop by pushing "ICE MAKER LOCK" button again</p> <p>① "ICE MAKER LOCK" icon is off</p> <p>② "WATER" icon is on</p> <p>8. "RESET WATER FILTER" button</p> <p>1) The normal (ICON OFF) is on for 6 month after are first power input.</p> <p>2) After six months, icon is ON.</p> <p>3) How to reset Filter information</p> <p>① Push the "RESET WATER FILTER" button for 3 seconds after change.</p> <p>9. "LOCK" button</p> <p>1) This button stops operation of different button.</p> <p>① "LOCK" icon is on</p> <p>② Press this button to lock out this case and to keep temperature and function setting.</p> <p>2) Push "LOCK" button again for more than a second to stop it.</p> <p>※ The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.</p> <p>※ Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.</p>	Temperature Change	Min	Medium Min	Mid	Medium Max	Max	Temp indication	6℃	5℃	4℃	3℃	2℃	<p>REFERENCE : Please wait for 2-3 seconds in order to take final ice or drops of water when taking out cup from the pressing switches after taking ice or water.</p>
Temperature Change	Min	Medium Min	Mid	Medium Max	Max								
Temp indication	6℃	5℃	4℃	3℃	2℃								

4-2. Defrost Mode

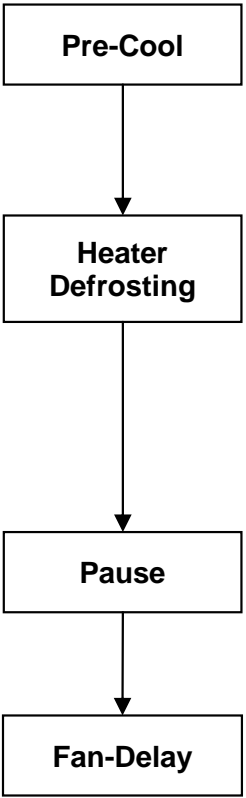INPUT	CONTROL OBJECT	
1. Defrosting Cycle	1. Comp 2. F-Fan 3. R-Fan 4. D-Heater	
CONTENTS		REMARKS
<p>1. Defrost Mode</p>  <pre> graph TD A[Pre-Cool] --> B[Heater Defrosting] B --> C[Pause] C --> D[Fan-Delay] </pre> <p>Pre-Cool 1) Time : 50 minutes 2) Comp , F-fan : ON R-fan : Control D-HTR : OFF 3) If F-sensor $\leq -27^{\circ}\text{C}$, then Pre-Cool becomes. OFF</p> <p>Heater Defrosting 1) Comp, F-fan, R-fan : OFF D-HTR : ON 2) Time limit 30 seconds : Heater is ON regardless of D-sensor temperature right after defrosting start 30 minutes : in case of D1- Error 80 minutes : in normal control state 3) If D-sensor $\geq 13^{\circ}\text{C}$, Heater Defrosting is OFF</p> <p>Pause Time : 7 minutes Comp, F-fan, R-fan, Heater etc. : OFF</p> <p>Fan-Delay Time : 5 minutes Comp : ON and F-fan, R-fan, Heater : OFF</p> <p>2.The defrost mode start with the following conditions</p> <p>1) Total operation time of comp. becomes : 6,8,10,..... 24 hours. ① Comp. operating rate : more 85% ② Total door open time : 2 minutes (Any door, F or R open time is over 2 minutes.) ③ Any error mode : R1, F1, D1, F3, RT/S, Door-switch etc.)</p> <p>2) Defrosting mode starts unconditionally as long as total comp. work time is 24 hours, even if the above conditions 1) are not satisfied.</p> <p>3) Defrosting mode starts immediately as long as total time of [comp. ON + comp. OFF] is over 60 hours, even if the above 1) and 2) conditions are not satisfied.</p> <p>3. In providing initial power (or returning power failure)</p> <p>If D-sensor temp. $\leq 3.5^{\circ}\text{C}$, defrosting mode starts .</p>		

CONTENTS	REMARKS
----------	---------

4. Flow Chart of Defrosting Start

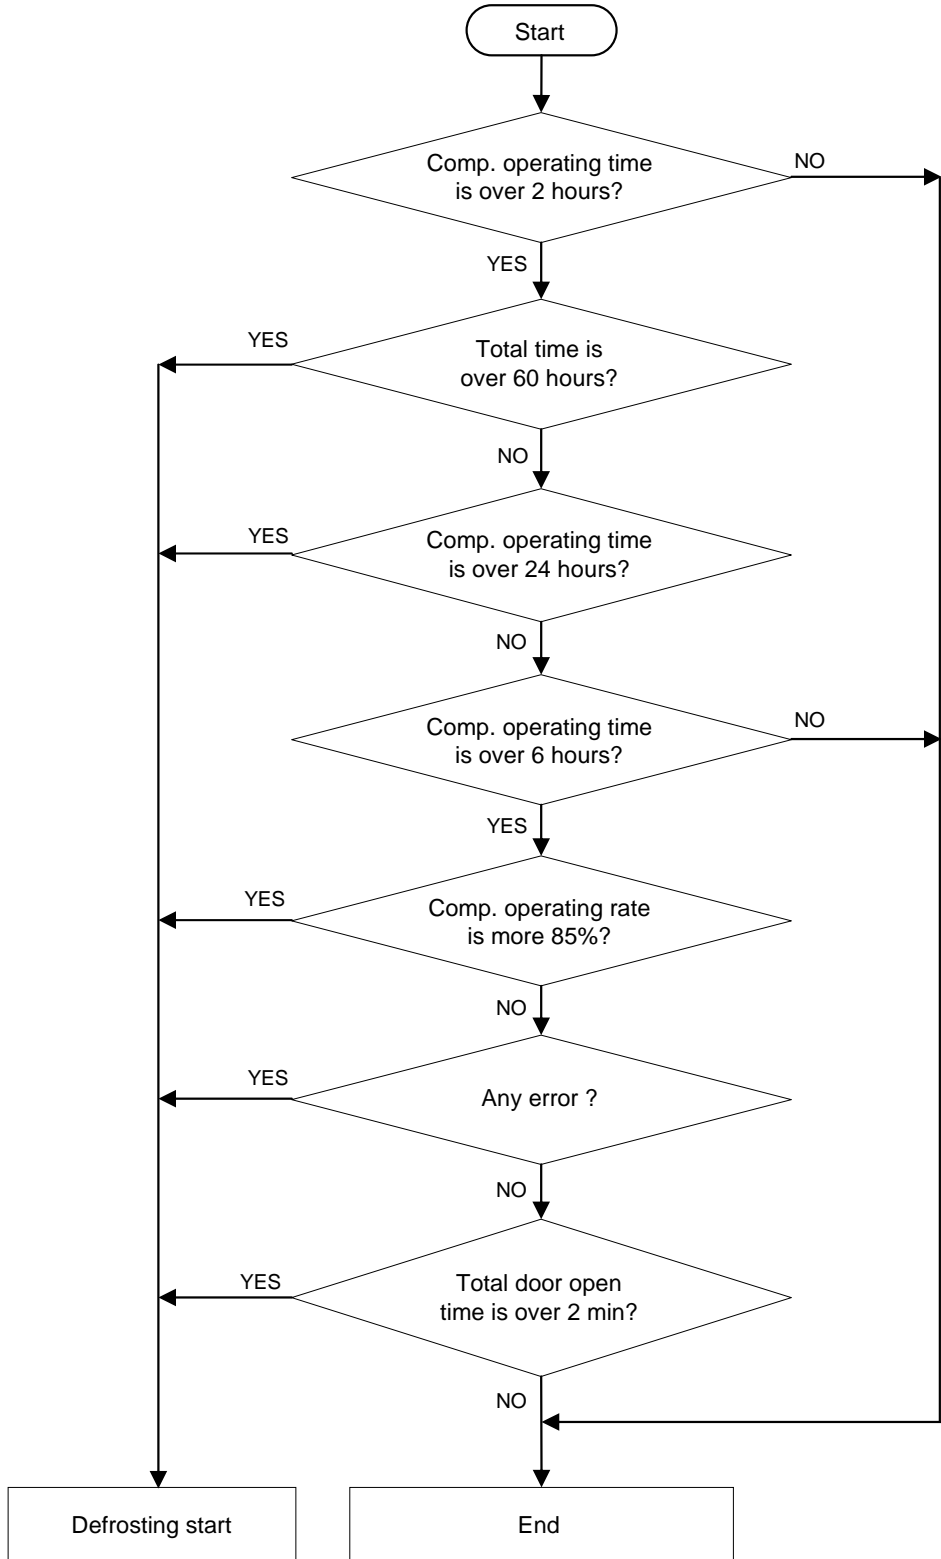

4-3. Forced Defrosting Mode

INPUT	CONTROL OBJECT	
1. Defrosting Cycle	1. Comp 2. F-Fan 3. R-Fan 4. D-Heater	
CONTENTS		REMARKS
<p>1. A/S Defrosting Mode (Heater defrost → Pause → Fan Delay)</p> <div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <pre> graph TD A[Heater Defrosting] --> B[Pause] B --> C[Fan-Delay] </pre> </div> <div style="flex: 2; padding-left: 20px;"> <p>Heater Defrosting</p> <p>1) Comp, F-fan, R-fan : OFF D-HTR : ON</p> <p>2) Time limit 30 seconds : Heater is ON regardless of D-sensor temperature right after defrosting start 30 minutes : in case of D1-Error 80 minutes : in normal control state</p> <p>3) If D-sensor $\geq 13^{\circ}\text{C}$, Heater Defrosting is OFF</p> <p>Pause</p> <p>Time : 7 minutes Comp, F-fan, R-fan, Heater etc. : OFF</p> <p>Fan-Delay</p> <p>1) Time : 5 minutes Comp : ON F-fan, R-fan, Heater : OFF</p> </div> </div> <p>2. How to start</p> <p>1) Basic Model Push "REF.TEMP (Set)" button 5 times while pushing "FRZ.TEMP (Set)" button simultaneously.</p> <p>2) Dispenser Model Push the 'LOCK' button. Push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button.</p> <p>3. How to proceed</p> <p>1) Delete Pre-cool mode. (Others are same as normal defrosting)</p> <p>2) Heater is ON regardless of D-sensor temp. at first 30 seconds. (Check of defrosting current)</p>		

4-4. Fan Voltage of Control Mode

INPUT	CONTROL OBJECT									
1. F-Sensor 2. R-Sensor	1. F-FAN, R-FAN, C-FAN									
CONTENTS		REMARKS								
<p>1. Fan voltage of control mode</p> <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>FAN</th> <th>F-FAN</th> <th>R-FAN</th> <th>C-FAN</th> </tr> </thead> <tbody> <tr> <td>Voltage</td> <td>13 V</td> <td>13 V</td> <td>13 V</td> </tr> </tbody> </table>		FAN	F-FAN	R-FAN	C-FAN	Voltage	13 V	13 V	13 V	
FAN	F-FAN	R-FAN	C-FAN							
Voltage	13 V	13 V	13 V							

4-5. Buzzer or Alarm Control

INPUT	CONTROL OBJECT	
1. Control (Inner or F-PCB) buttons 2. Door Switch 3. Initial Power Input	Buzzer	
CONTENTS		REMARKS
1. Buzzer sounds if any button of Inner Control is pushed. 2. Buzzer sounds 4 times 3 seconds after initial power input. 3. Buzzer sounds for 3 or 1 times in case of A/S forced defrosting and short (pull down) operation or explanation mode. 4. If door is open, buzzer sounds after every 1 minutes for 5 minutes (Door open alarm)		

4-6. Control of Interior Lights

INPUT	CONTROL OBJECT	
1. Refrigerator door switch 2. Freezer door switch	Lamp	
CONTENTS		REMARKS
1. Control refrigerator compartment lights R-Lights turn ON/OFF by R-door switch ON/OFF (※ For 10 minutes after sensing door open, the lights turn off automatically through door close is not sensed.) 2. Control of freezer compartment lights. F-Light turn ON/OFF by F-door switch ON/OFF (※ For 10 minutes after sensing door open, the lights turn off automatically through door close is not sensed.)		

4-7. Demonstration Mode

4-7-1. FRS(N)-U20IE* Type

INPUT	CONTROL OBJECT
1. FRZ. TEMP 2. Door Switch	F/R-Fan Door Switch
CONTENTS	
1. Start Open and close "Refrigerator Door switch" 5 times while pushing "FRZ. TEMP" button simultaneously. 2. Control 1) All other electrical components are OFF except for F-fan / R-fan 2) Fan Control Door open → Fan ON / Door close → Fan OFF. 3) Display control "Freezer LED" and "Refrigerator LED" are ON in good order 3. Stop 1) During Demo mode, push "Refrigerator Door switch" open and close 5 times while pushing "FRZ. TEMP" button simultaneously. 2) Power in again	REMARKS

4-7-2. FRS(N)-U20BE* Type

INPUT	CONTROL OBJECT
1. FRZ. SET 2. SUPER REF.	F/R-Fan Door Switch
CONTENTS	
1. Start Push "SUPER REF." button 5 times while pushing "REF. SET" button simultaneously. 2. Control 1) All other electrical components are OFF except for F-fan / R-fan 2) Fan Control Door open → Fan ON / Door close → Fan OFF. 3) Display control "Freezer LED" and "Refrigerator LED" are ON in good order 3. Stop 1) During Demo mode, push "SUPER REF" button 5 times while pushing "REF. SET" button simultaneously. 2) Power in again	REMARKS

4-7-3. Dispenser Model

INPUT	CONTROL OBJECT	
"REFRIGEATOR SET, WATER/ICE" Button	F/R-Fan Door Switch	
CONTENTS		REMARKS
<p>1. Start</p> <p>1-1. Push the "LOCK" button.</p> <p>1-2. Push "ICE/WATER" button 5 times while pushing "REFRIGERATOR SET" button simultaneously.</p> <p>2. Control</p> <p>1) All other electrical components are OFF except for F-fan / R-fan</p> <p>2) Fan Control Door OPEN → Fan ON / Door close → Fan OFF.</p> <p>3. Stop or termination</p> <p>1) During Demo mode, push "ICE/WATER" button 5 times while pushing "FREEZER SET" button simultaneously.</p> <p>2) Power in again</p>		








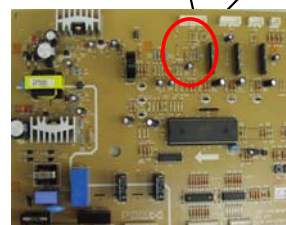
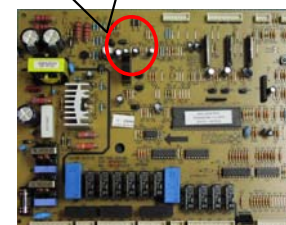
4-8. Compensation of R-sensor ON/OFF Temp.

INPUT	CONTROL OBJECT
Main PCB	Resistance of R-sensor ON/OFF Temp. of Refrigerator

CONTENTS

Compensation of R-sensor ON/OFF temp. (down)

In case temperature of refrigerator compartment is weak or insufficient, take the following action.

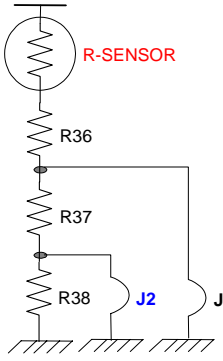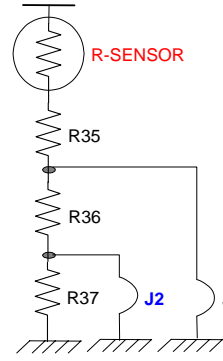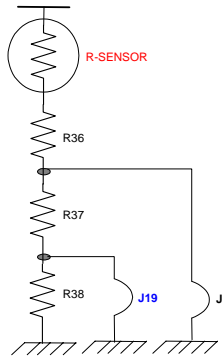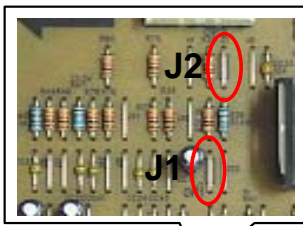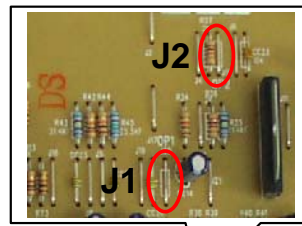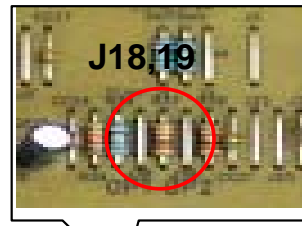FRS(N)-U20IE*	FRS(N)-U20BE*	Dispenser Model
		
		
		

※ R-SENSOR standard resistance in normal mode (31.4K)

- (1) In case of weak ref., cut J1 (or J18) to down the standard resistance by 1.5deg(2K)
- (2) In case of weak ref., cut J2 (or J19) to down the standard resistance by 1.5deg(2K)


M o d e l	FRS(N)-U20IE*	J1	-	cut	cut
		J2	-	-	cut
	FRS(N)-U20BE*	J1	-	cut	cut
		J2	-	-	cut
	Dispenser Model	J18	-	cut	cut
		J19	-	-	cut
Temperature compensation		0℃	-1.5℃	3℃	

4-9. Error Display

4-9-1. FRS(N)-U20IE* Type

INPUT	CONTROL OBJECT																								
Temperature Control Buttons	Lamp LED of Inner control																								
CONTENTS																									
<p>1. How to start</p> <p>1) Press "FRZ.TEMP" button 5 times while pressing "REF.TEMP" button at the same time.</p> <p>2. How to stop</p> <p>1) Push "FRZ.TEMP" button 1 time.</p> <p>2) It stops automatically in 4 minutes from the start.</p> <p>3. All the error codes are reset if they turn to be normal.</p> <p>4. Error display</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">CONTENTS</th> <th style="width: 50%;">Display</th> </tr> </thead> <tbody> <tr> <td>F-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "5" is on and off</td> </tr> <tr> <td>R-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "4" is on and off</td> </tr> <tr> <td>RT-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "3" is on and off</td> </tr> <tr> <td>D-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "2" is on and off</td> </tr> <tr> <td>R-Door Switch : defective</td> <td>FRZ. LED "1" is on and off</td> </tr> <tr> <td>F-Door Switch : defective</td> <td>REF. LED "5" is on and off</td> </tr> <tr> <td>Cycle : defective</td> <td>REF. LED "3" is on and off</td> </tr> <tr> <td>Return after defrosting : defective</td> <td>REF. LED "2" is on and off</td> </tr> <tr> <td>EEPROM : defective</td> <td>REF. LED "1" is on and off</td> </tr> <tr> <td>Full Down mode</td> <td>REF. LED "1" is on</td> </tr> <tr> <td>Forced defrost mode for A/S</td> <td>REF. LED "1" is on and off (twice)</td> </tr> </tbody> </table> <p>(Full down mode and forced defrost mode are displayed while pressing "REF.TEMP" button at the error display mode)</p> <div style="text-align: center;"> </div>		CONTENTS	Display	F-sensor : open ("Lo"), short ("Hi")	FRZ. LED "5" is on and off	R-sensor : open ("Lo"), short ("Hi")	FRZ. LED "4" is on and off	RT-sensor : open ("Lo"), short ("Hi")	FRZ. LED "3" is on and off	D-sensor : open ("Lo"), short ("Hi")	FRZ. LED "2" is on and off	R-Door Switch : defective	FRZ. LED "1" is on and off	F-Door Switch : defective	REF. LED "5" is on and off	Cycle : defective	REF. LED "3" is on and off	Return after defrosting : defective	REF. LED "2" is on and off	EEPROM : defective	REF. LED "1" is on and off	Full Down mode	REF. LED "1" is on	Forced defrost mode for A/S	REF. LED "1" is on and off (twice)
CONTENTS	Display																								
F-sensor : open ("Lo"), short ("Hi")	FRZ. LED "5" is on and off																								
R-sensor : open ("Lo"), short ("Hi")	FRZ. LED "4" is on and off																								
RT-sensor : open ("Lo"), short ("Hi")	FRZ. LED "3" is on and off																								
D-sensor : open ("Lo"), short ("Hi")	FRZ. LED "2" is on and off																								
R-Door Switch : defective	FRZ. LED "1" is on and off																								
F-Door Switch : defective	REF. LED "5" is on and off																								
Cycle : defective	REF. LED "3" is on and off																								
Return after defrosting : defective	REF. LED "2" is on and off																								
EEPROM : defective	REF. LED "1" is on and off																								
Full Down mode	REF. LED "1" is on																								
Forced defrost mode for A/S	REF. LED "1" is on and off (twice)																								

4-9-2. FRS(N)-U20BE* Type

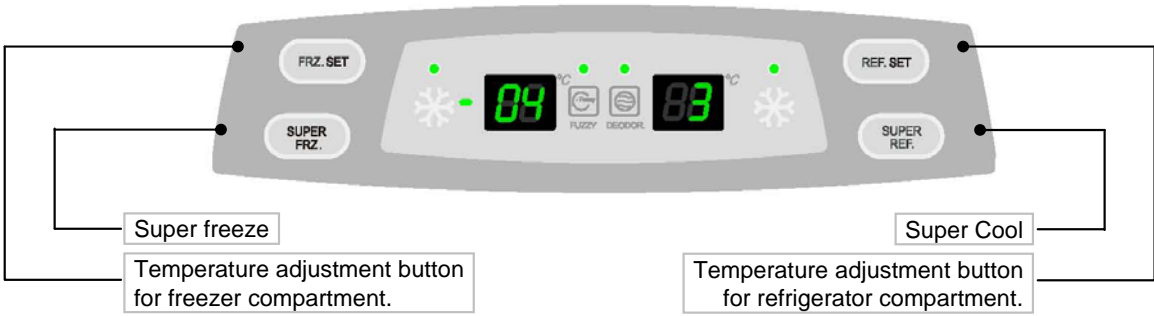INPUT	CONTROL OBJECT																					
Temperature Control Buttons	88 Display CLED																					
CONTENTS		REMARKS																				
<p>1. How to start</p> <ol style="list-style-type: none"> 1) Press "SUPER FRZ." button 5 times while pressing "FRZ. SET" button at the same time. 2) The front LED displays as the right diagram shows ([Ex.] Time Display of 0003 signifies 3 minutes of power on time.) 3) Press "FRZ. SET" button and the following value is displayed successively. <ol style="list-style-type: none"> ① Time ② F-Sensor temperature ③ D-Sensor temperature ④ R-Sensor temperature ⑤ RT-Sensor temperature 4) Error is displayed only if there is any ; it is skipped if no error. <p>2. How to stop</p> <ol style="list-style-type: none"> 1) Push "REF. SET" button 1 time. 2) It stops automatically in 4 minutes from the start. <p>3. All the error codes are reset if they turn to be normal.</p> <p>4. Error code</p>																						
<table border="1" data-bbox="175 1070 1134 1550"> <thead> <tr> <th data-bbox="178 1070 389 1115">ERROR CODE</th> <th data-bbox="389 1070 1131 1115">CONTENTS</th> </tr> </thead> <tbody> <tr> <td data-bbox="178 1115 389 1167"><i>F1</i></td> <td data-bbox="389 1115 1131 1167">F-sensor : disconnection ("Lo"), short ("Hi")</td> </tr> <tr> <td data-bbox="178 1167 389 1218"><i>r1</i></td> <td data-bbox="389 1167 1131 1218">R-sensor : disconnection ("Lo"), short ("Hi")</td> </tr> <tr> <td data-bbox="178 1218 389 1270"><i>rt</i></td> <td data-bbox="389 1218 1131 1270">RT-sensor : disconnection ("Lo"), short ("Hi")</td> </tr> <tr> <td data-bbox="178 1270 389 1321"><i>d1</i></td> <td data-bbox="389 1270 1131 1321">D-sensor : disconnection ("Lo"), short ("Hi")</td> </tr> <tr> <td data-bbox="178 1321 389 1373"><i>dr</i></td> <td data-bbox="389 1321 1131 1373">R-Door Switch : defective</td> </tr> <tr> <td data-bbox="178 1373 389 1424"><i>dF</i></td> <td data-bbox="389 1373 1131 1424">F-Door Switch : defective</td> </tr> <tr> <td data-bbox="178 1424 389 1476"><i>C1</i></td> <td data-bbox="389 1424 1131 1476">Cycle : abnormal or defective</td> </tr> <tr> <td data-bbox="178 1476 389 1527"><i>F3</i></td> <td data-bbox="389 1476 1131 1527">Return after defrosting : abnormal or defective</td> </tr> <tr> <td data-bbox="178 1527 389 1579"><i>D2</i></td> <td data-bbox="389 1527 1131 1579">Display forced defrost mode for A/S</td> </tr> </tbody> </table>		ERROR CODE	CONTENTS	<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")	<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")	<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")	<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")	<i>dr</i>	R-Door Switch : defective	<i>dF</i>	F-Door Switch : defective	<i>C1</i>	Cycle : abnormal or defective	<i>F3</i>	Return after defrosting : abnormal or defective	<i>D2</i>	Display forced defrost mode for A/S	
ERROR CODE	CONTENTS																					
<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")																					
<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")																					
<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")																					
<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")																					
<i>dr</i>	R-Door Switch : defective																					
<i>dF</i>	F-Door Switch : defective																					
<i>C1</i>	Cycle : abnormal or defective																					
<i>F3</i>	Return after defrosting : abnormal or defective																					
<i>D2</i>	Display forced defrost mode for A/S																					
 <p>The diagram shows a control panel with two digital displays. The left display shows '09' with a minus sign and a snowflake icon, labeled 'Super freeze' and 'Temperature adjustment button for freezer compartment.' The right display shows '83' with a plus sign and a snowflake icon, labeled 'Super Cool' and 'Temperature adjustment button for refrigerator compartment.' Buttons include 'FRZ.SET', 'SUPER FRZ.', 'REF.SET', and 'SUPER REF.'.</p>																						

CONTENTS	REMARKS																												
<p>5. Control way of Errors (if any)</p> <p>1) "F-sensor" error Cause : F-sensor open or short Control : Condition of ambient temperature How to reset : If F-sensor is normal, the error is terminal temperature.</p> <table border="1"> <tr> <td>RT-S</td> <td>~ 9℃</td> <td>~ 15℃</td> <td>~ 21℃</td> <td>~ 31℃</td> <td>~ 41℃</td> <td>Over 41℃</td> </tr> <tr> <td>ON/OFF (min)</td> <td>14 / 50</td> <td>16 / 41</td> <td>27 / 45</td> <td>26 / 22</td> <td>35 / 20</td> <td>35 / 20</td> </tr> </table> <p>2) "R-sensor" error Cause : R-sensor open or short Control : Condition of ambient temperature How to reset : If R-sensor is normal, the error is terminal temperature.</p> <table border="1"> <tr> <td>RT-S</td> <td>~ 9℃</td> <td>~ 15℃</td> <td>~ 21℃</td> <td>~ 31℃</td> <td>~ 41℃</td> <td>Over 41℃</td> </tr> <tr> <td>ON/OFF (min)</td> <td>OFF</td> <td>3 / 50</td> <td>2 / 10</td> <td>3 / 7</td> <td>4 / 6</td> <td>6 / 4</td> </tr> </table> <p>3) "RT-sensor" error Cause : RT-sensor open or short (full down) Control : Normal operation, deletion of control by RT-sensor If RT-sensor is normal, the error is terminated automatically.</p> <p>4) "D-sensor" error Cause : D-sensor open or short (full down) Control : Time limit (30 min) of defrosting return If D-sensor is normal, the error is terminated automatically.</p> <p>5) "Door" error Cause : in case it senses that door is open for more than 1 hour. Control : Deletion of function related door switch sensing If door switch (open & close) is sensed, the error is terminated automatically.</p> <p>6) "Cycle" error Cause : in case comp. works for over 3 hours when D-sensor temp. is over -5℃ Control : normal operation When D-sensor temp. is below -5℃ in comp. off it is terminated.</p> <p>7) "Return after defrosting" error Cause : in case defrosting return is done by time limit of 80 min Control : Deletion of Pre-cool mode in defrosting mode If defrosting return is done by D-sensor, it is terminated.</p> <p>8) A/S forced defrosting mode Push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button Simultaneously. Control : A/S forced defrosting control (Pre-cool is deleted) If D-sensor temp. is over 10℃, the mode is terminated automatically. When all error code is normal, the Refrigerator reset</p>	RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃	ON/OFF (min)	14 / 50	16 / 41	27 / 45	26 / 22	35 / 20	35 / 20	RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃	ON/OFF (min)	OFF	3 / 50	2 / 10	3 / 7	4 / 6	6 / 4	
RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃																							
ON/OFF (min)	14 / 50	16 / 41	27 / 45	26 / 22	35 / 20	35 / 20																							
RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃																							
ON/OFF (min)	OFF	3 / 50	2 / 10	3 / 7	4 / 6	6 / 4																							

4-9-3. Dispenser Model

INPUT	CONTROL OBJECT																																									
Temperature Control Buttons	88 Display CLED																																									
CONTENTS	REMARKS																																									
<p>1. How to start</p> <p>1) Under "LOCK" mode, press "SUPER FREEZER" button 5 times while pressing "FREEZER SET" button at the same time.</p> <p>2) The front CLED displays as the right diagram shows ([Ex.] Time Display of 0003 signifies 3 minutes of power on time.)</p> <p>3) Press "FREEZER SET" button and the following value is displayed successively.</p> <p>① Time</p> <p>② F-Sensor temperature</p> <p>③ D-Sensor temperature</p> <p>④ R-Sensor temperature</p> <p>⑤ RT-Sensor temperature</p> <p>⑥ P Factor display (Refer to water supply mode of automatic icemaker)</p> <p>⑦ Filter remaining time until change (First check ; 4,320Hr) Refer to Filter Information Reset of CLED of front control panel.</p> <p>4) Error is displayed only if there is any ; it is skipped if no error.</p> <p>2. How to stop</p> <p>1) Push "LOCK" button 1 time.</p> <p>2) It stops automatically in 4 minutes from the start.</p> <p>3. All the error Codes are reset if they turn to be normal.</p> <p>4. Error code</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">ERROR CODE</th> <th>CONTENTS</th> </tr> </thead> <tbody> <tr><td><i>F1</i></td><td>F-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>r1</i></td><td>R-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>rt</i></td><td>RT-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>d1</i></td><td>D-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>dr</i></td><td>R-Door Switch : defective</td></tr> <tr><td><i>dF</i></td><td>F-Door Switch : defective</td></tr> <tr><td><i>dH</i></td><td>Home bar Door Switch : defective</td></tr> <tr><td><i>El</i></td><td>l-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>EF</i></td><td>Flow sensor : defective</td></tr> <tr><td><i>Et</i></td><td>Horizontal switch : error</td></tr> <tr><td><i>Eg</i></td><td>Water supply : error</td></tr> <tr><td><i>ES</i></td><td>Micro switch : error</td></tr> <tr><td><i>EA</i></td><td>Drop the ice while Et</td></tr> <tr><td><i>Eu</i></td><td>Full ice switch : error</td></tr> <tr><td><i>C1</i></td><td>Cycle : abnormal or defective</td></tr> <tr><td><i>F3</i></td><td>Return after defrosting : abnormal or defective</td></tr> <tr><td><i>Co</i></td><td>Display Full Down mode</td></tr> <tr><td><i>D2</i></td><td>Display forced defrost mode for A/S</td></tr> </tbody> </table>			ERROR CODE	CONTENTS	<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")	<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")	<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")	<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")	<i>dr</i>	R-Door Switch : defective	<i>dF</i>	F-Door Switch : defective	<i>dH</i>	Home bar Door Switch : defective	<i>El</i>	l-sensor : disconnection ("Lo"), short ("Hi")	<i>EF</i>	Flow sensor : defective	<i>Et</i>	Horizontal switch : error	<i>Eg</i>	Water supply : error	<i>ES</i>	Micro switch : error	<i>EA</i>	Drop the ice while Et	<i>Eu</i>	Full ice switch : error	<i>C1</i>	Cycle : abnormal or defective	<i>F3</i>	Return after defrosting : abnormal or defective	<i>Co</i>	Display Full Down mode	<i>D2</i>	Display forced defrost mode for A/S		
ERROR CODE	CONTENTS																																									
<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")																																									
<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")																																									
<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")																																									
<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")																																									
<i>dr</i>	R-Door Switch : defective																																									
<i>dF</i>	F-Door Switch : defective																																									
<i>dH</i>	Home bar Door Switch : defective																																									
<i>El</i>	l-sensor : disconnection ("Lo"), short ("Hi")																																									
<i>EF</i>	Flow sensor : defective																																									
<i>Et</i>	Horizontal switch : error																																									
<i>Eg</i>	Water supply : error																																									
<i>ES</i>	Micro switch : error																																									
<i>EA</i>	Drop the ice while Et																																									
<i>Eu</i>	Full ice switch : error																																									
<i>C1</i>	Cycle : abnormal or defective																																									
<i>F3</i>	Return after defrosting : abnormal or defective																																									
<i>Co</i>	Display Full Down mode																																									
<i>D2</i>	Display forced defrost mode for A/S																																									

CONTENTS	REMARKS
<p>5. Control way of Error (if any)</p> <p>1) "F1" error Cause : F-sensor disconnection or short Check point : Measure the resistance between both terminals after separating CN8 (or CN15) of the Main PCB. (Refer to the 5-2.) If F-sensor is disconnected or shorted , change the F-sensor in the freezer compartment. How to reset : If F-sensor is normal, the error is terminal temperature.</p> <p>2) "R1" error Cause : R-sensor disconnection or short Check point : Measure the resistance between both terminals after separating CN7 (or CN14) of the Main PCB. (Refer to the 5-2.) If R-sensor is disconnected or shorted , change the F-sensor in the refrigerator compartment. How to reset : If R-sensor is normal, the error is terminal temperature.</p> <p>3) "rt" error Cause : RT-sensor disconnection or short (full down) Check point : Measure the voltage of "A" part on the Main PCB. If the voltage is 0.5V~4.5V, it is normal. If the voltage is 0V (short) or 5V (disconnected), change the RT-sensor on the Main PCB How to reset : If RT-sensor is normal, the error is terminated automatically.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div data-bbox="172 969 699 1120"> </div> <div data-bbox="708 969 1182 1120"> </div> </div> <p style="text-align: center; margin-top: 5px;">< Basic Model > < Dispenser Model ></p> <p>4) "d1" error Cause : D-sensor disconnection or short (full down) Check point : Measure the resistance between both terminals after separating CN8 (or CN15) of the Main PCB. (Refer to the 5-2.) If D-sensor is disconnected or shorted , change the D-sensor on the evaporator. How to reset : If D-sensor is normal, the error is terminated automatically.</p> <p>5) Door error ("dF" "dR" "dH" on display) Cause : in case it senses that door is open for more than 1 hour. Check point : F/R door is opened or not.</p> <p>6) "C1" error Cause : in case comp. works for over 3 hours when D-sensor temp. is over -5℃ Check point : Refrigerant leakage.</p> <p>7) "F3" error Cause : in case defrosting return is done by time limit of 80 min Check point : Measure the resistance between both terminals of the defrost heater. (Assembled with evaporator) If the resistance is ∞Ω (disconnected) or 0Ω (short) change the</p> <p>8) "d2" mode (A/S forced defrosting mode) Push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button simultaneously. Control : A/S forced defrosting control (Pre-cool is deleted) If D-sensor temp. is over 10℃, the mode is terminated automatically. Refer to the 4-3. .</p>	

CONTENTS	REMARKS
<p>9) "EI"ERROR Cause : I-SENSOR disconnection / short Check point : Measure the resistance between both terminals after separating CN11 of the Main PCB. (Refer to the 5-2.) If F-sensor is disconnected or shorted , change the I-sensor in the automatic ice maker.</p> <p>10) "EF" ERROR Cause : When Flow-sensor ERROR (There is no Pulse during some time) The number of pulse signal is below 10 by 1 sec during water supply. Check point : Water supply line</p> <p>11) "Eg" ERROR Cause : I-sensor temp (5min after water supply) doesn't go up. Check the I-sensor or water supply line.</p> <p>12) "ES" error (MICRO switch error) Cause : When it senses 1min continuously Check the MICRO switch of the dispenser.</p> <p>13) "Ea" error Cause : Malfunction of ice drop motor. Check the motor by pushing test switch.</p> <p>14) "Eu" error Cause : Switch (which senses if the ice is full or not) is in error. Control : When dropping the ice, the motor just rotates 90 degree. Termination : When the switch is in normal.</p> <p>15)"EA" ERROR Cause : When sensing Ice dropping by time 3 times in level sensor SW Error. Control : Stop of Ice Maker Termination : With normal level switch. Re-input of power or push if icemaker test switch.</p> <p>16)"Et" ERROR Cause : Level switch error (No pulse is sensed for some time) Control : By time (Supply mode is skipped) Termination : Normal condition.</p> <p>* When all ERROR CODE is normal, the Refrigerator reset</p>	

4-10. Summary of Function

4-10-1. FRS(N)-20IE* Type

INPUT		CONTROL OBJECT	
Each button			
CONTENTS			REMARKS
Element A/S Function			
Forced Defrosting	"FRZ. TEMP" + "REF. TEMP" 5 times		
Pull Down	"REF. TEMP"+ "Freezer Door Switch" OPEN/CLOSE 5 times		
Demo function	"FRZ. TEMP"+ "Refrigerator Door Switch" OPEN/CLOSE 5 times		
Error display	"REF. TEMP"+ "FRZ. TEMP" 5 times		

4-10-2. FRS(N)-20BE* Type

INPUT		CONTROL OBJECT	
Each button			
CONTENTS			REMARKS
Element A/S Function			
Forced Defrosting	"FRZ. SET" + "REF. SET" 5 times		
Pull Down	"SUPER REF." + "SUPER FRZ." 5 times		
Demo function	"REF. SET" + "SUPER REF." 5 times		
Error display	"FRZ. SET"+ "SUPER FRZ." 5 times		

4-10-3. Dispenser Model


INPUT		CONTROL OBJECT	
Each button			
CONTENTS			REMARKS
1. All the modes are started "LOCK" mode (except "FILTER RESET" mode)			
2. Element A/S Function			
Forced Defrosting	"FREEZER SET" + "REFRIGERATOR SET" 5 times		
Reset water filter	Push "RESET WATER FILTER" for 3 seconds		
Demo function	"REFRIGERATOR SET" + "WATER/ICE" 5 times		
Pull Down	"REFRIGERATOR SET"+ "FREEZER SET"+ "WATER/ICE"5 times		
Error display	"FREEZER SET"+ "SUPER FREEZER" 5 times		
EEPROM clear	"WATER/ICE"+ "RESET WATER FILTER" 5 times		
Ice maker test	"WATER/ICE" + "ICE MAKER LOCK" 5 times		

**4-11. Filter information & Function to adjust the amount of water
(Dispenser Model Only)**

INPUT	CONTROL OBJECT	
Temperature Control Buttons	88 Display CLED	
CONTENTS		REMARKS
<div data-bbox="113 506 376 562" style="border: 1px solid black; padding: 2px; margin-bottom: 10px;">Filter information</div> <p>1. Filter Exchange Information : Record a real-time from the point of power input.</p> <ul style="list-style-type: none"> - The filter is normal for 6 months after the first installation. - When the time comes to change or reset, press the "Water Filter Reset" button for 3 seconds. <p>2. Function of display of filter change time</p> <p>[step1] Press the "Lock" button (not "Ice maker lock" button).</p> <p>[step2] Press "Super Freezer" button 5 times while pressing "Freezer Set" button.</p> <p>[step3] Press "Freezer Set" button 6 times successively. ("Fi – Lt" is display)</p> <p>[step4] Remaining time is display if "Dispenser" button press. (ex. 40 : 12 means that 4012 minutes remains until the filter exchange.)</p> <p>[step5] Reset : Push "Lock" button or it is automatically reset after 4 minutes.</p>		
<div data-bbox="113 1070 528 1126" style="border: 1px solid black; padding: 2px; margin-bottom: 10px;">Adjust the amount of water</div> <p>Function to adjust the amount of water supply.</p> <p>[step1] Press the "Lock" button (not "Ice maker lock" button).</p> <p>[step2] Press "Super Freezer" button 5 times while pressing "Freezer Set" button.</p> <p>[step3] Press "Freezer Set" button 5 times successively. ("P100" is display) (Initial setting "P100" means "86cc" water supply.)</p> <p>[step4] Adjust the amount of water.</p> <ul style="list-style-type: none"> - If the amount is less than P100, press "Super Cool" button. ; P101 (87cc) , P102 (88cc), P103 (89cc) - If the amount is more than P100, press "Refrigerator Set" button. ; P99 (85cc), P98 (84cc), P97 (83cc) <p>[step5] Reset : Push "Lock" button or it is automatically reset after 4 minutes.</p>		


4-12. Automatic Icemaker (Dispenser Model Only)

INPUT	CONTROL OBJECT	
Full ice sensing switch Ice Maker Lock Sensors	Ice separating motor	
CONTENTS		REMARKS
<p>1. Flow of ice making</p> <pre> graph TD START([START]) --> IM[Ice making mode] IM --> WSB["(water supply stand by)"] WSB --> ISM[Ice separating mode] ISM --> WSM[Water supply mode] WSM --> WSCM[Water supply check mode] WSCM --> RETURN([RETURN]) </pre> <p>1) Press TEST switch under the Icemaker for more than 1 second and test starts. * Test mode starts from ice separating mode. * In case test switch has an error of short, test is done only once.</p>		

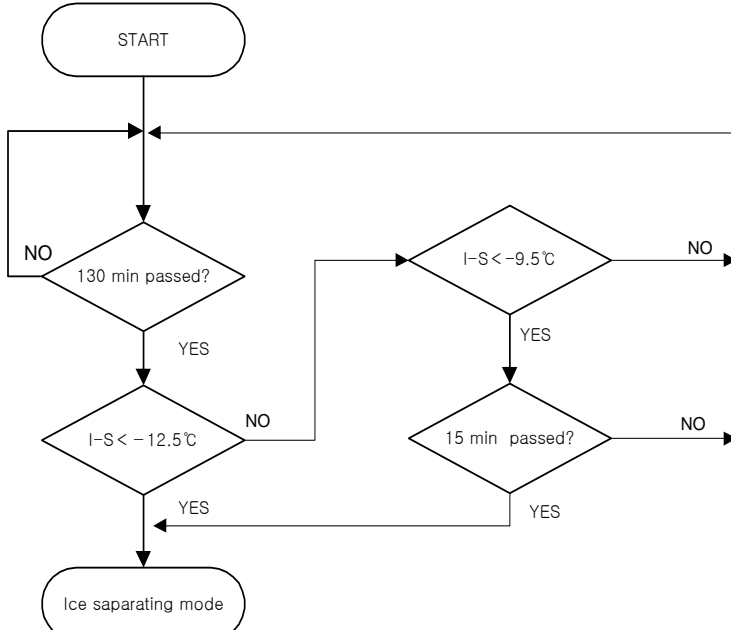CONTENTS	REMARKS
<p>2) With the initial power input, Ice tray turns to be horizontal and ice making mode starts.</p> <p>3) Control of water hose heater</p> <ul style="list-style-type: none"> * Heater is always ON if RT-sensor has an error or RT is below 15 degree. * Heater is always ON for 60 minutes (max. Limit time) if Flow-sensor has an error <p>4) Water supply stand-by</p> <p>Condition : if ice is sensed full</p> <p>Operation : proceeds to Ice making mode (Ice separating and water supply Modes stop)</p> <p>5) Crusher Function</p> <p>It stops operation when freezer door is open</p> <p>It operates if freezer door is closed.</p>	
<p>2 Ice making mode</p>  <pre> graph TD START([START]) --> D1{130 min passed?} D1 -- NO --> START D1 -- YES --> D2{I-S < -12.5°C} D2 -- NO --> D3{I-S < -9.5°C} D2 -- YES --> END([Ice separating mode]) D3 -- NO --> START D3 -- YES --> D4{15 min passed?} D4 -- NO --> START D4 -- YES --> END </pre> <p>1) Ice making stops if ice-sensor is below -12.5°C after 130 minutes.</p> <p>2) Ice making also stops if ice-sensor is below -9.5°C for 15 minutes, though ice-sensor is not below -12.5°C after 130 minutes.</p> <p>3) In case of ice sensor, ice making stops after 4.8 hours.</p>	


CONTENTS	REMARKS
----------	---------

3. Ice separating (drop) mode

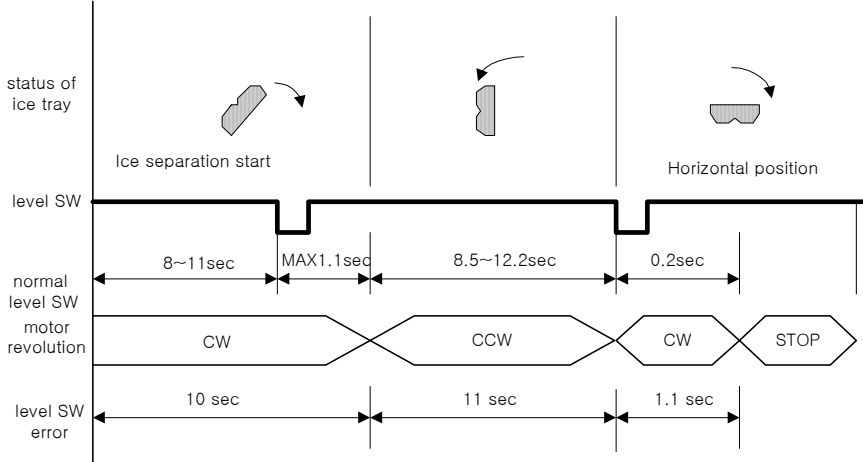

- 1) Time of each zone used to verify level switch error
- 2) The rotation of motor is sensed at each zone
- 3) In case of level switch error, ice separation is done by time.
- 4) If ice separating motor has error, the mode stop.

4. Water supply mode

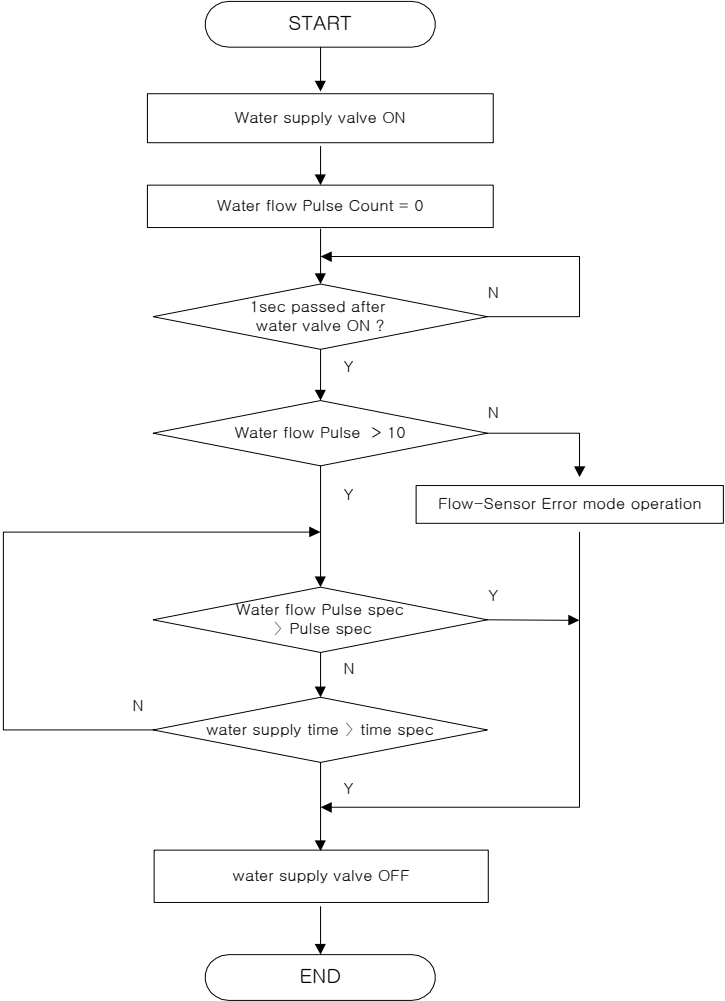


CONTENTS	REMARKS														
<p>1) Water supply valve is open when water supply mode starts after separation of ices.</p> <p>2) Water is supplied by time in case sensor has error.</p> <p>3) Factor valve is variable which can be useful in AS action</p> <p>① Water flow pulse is set to 238 if flow sensor is in normal condition. (If water is supplied by time, maximum water supply time 165 seconds)</p> <p>② In case water flow sensor has error, water time is 5.5 seconds.</p> <p>5. Water supply check mode 5 minutes after water supply the status can be checked by RT-sensor and increase of temp. Ice sensor.</p> <table border="1" style="width: 100%; text-align: center;"> <tr> <td>RT-S</td> <td>9℃ ↓</td> <td>~15℃</td> <td>~21℃</td> <td>~31℃</td> <td>~41℃</td> <td>41℃ ↑</td> </tr> <tr> <td>I-S</td> <td>-10℃</td> <td>-9℃</td> <td>-8℃</td> <td>-7℃</td> <td>-6℃</td> <td>-5℃</td> </tr> </table>	RT-S	9℃ ↓	~15℃	~21℃	~31℃	~41℃	41℃ ↑	I-S	-10℃	-9℃	-8℃	-7℃	-6℃	-5℃	
RT-S	9℃ ↓	~15℃	~21℃	~31℃	~41℃	41℃ ↑									
I-S	-10℃	-9℃	-8℃	-7℃	-6℃	-5℃									

4-13. Dispenser Control Function


INPUT	CONTROL OBJECT
Dispenser switch WATER/ICE Button ICE MAKER LOCK Button Freezer Door Switch	Dispenser Lamp Crusher Motor Flap Solenoid Crusher Solenoid Dispenser Water Valve
CONTENTS	REMARKS
<p>1) Initial mode : water (Mode change : Water → Cubed ice → Crushed ice) - Selected icon LED turns ON and others are OFF.</p> <p>2) ICE MAKER LOCK Button Icemaker Lock function and its ICON Turn ON/OFF by pressing the button.</p> <p>3) Display</p> <p>① Water ICON turns ON as default mode</p> <p>② The ICON of each mode turns ON by pressing its button. (If display switch makes error during operation of a mode, its ICON turns OFF)</p> <p>③ When Icemaker Lock ICON turns ON.</p> <p>- ICE MAKER LOCK ICON turns ON</p> <p>- If it is in the mode of Cubed Ice or Crushed Ice, the mode is changed to Water and Water ICON turns ON</p> <p>- If there is no button input for 1 hour after selecting Cubed Ice or Crushed Ice the mode turns to Water (default)</p>	

CONTENTS	REMARKS
----------	---------


4) Control Flow & Timing Chart
 ① Crushed Ice

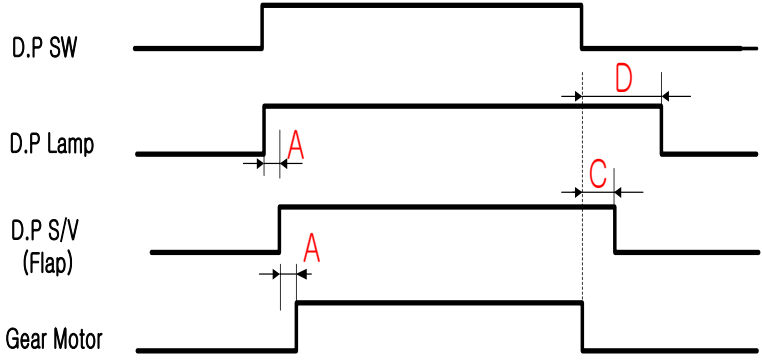

② Cubed Ice

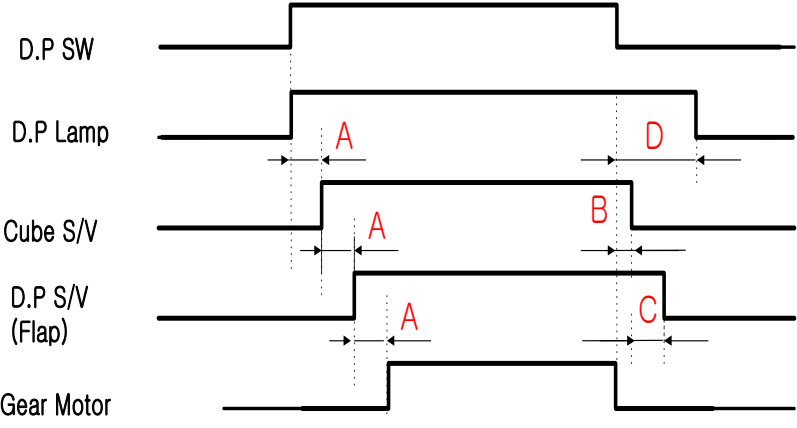


③ Water

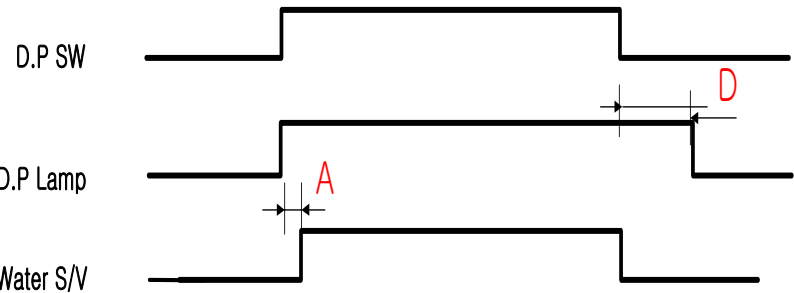


Delay time : A = 500ms, B = 500ms, C = 2.0s, D = 5.0s

5. WIRING DIAGRAM


5-1. FRS-U20IE* (R-134a)

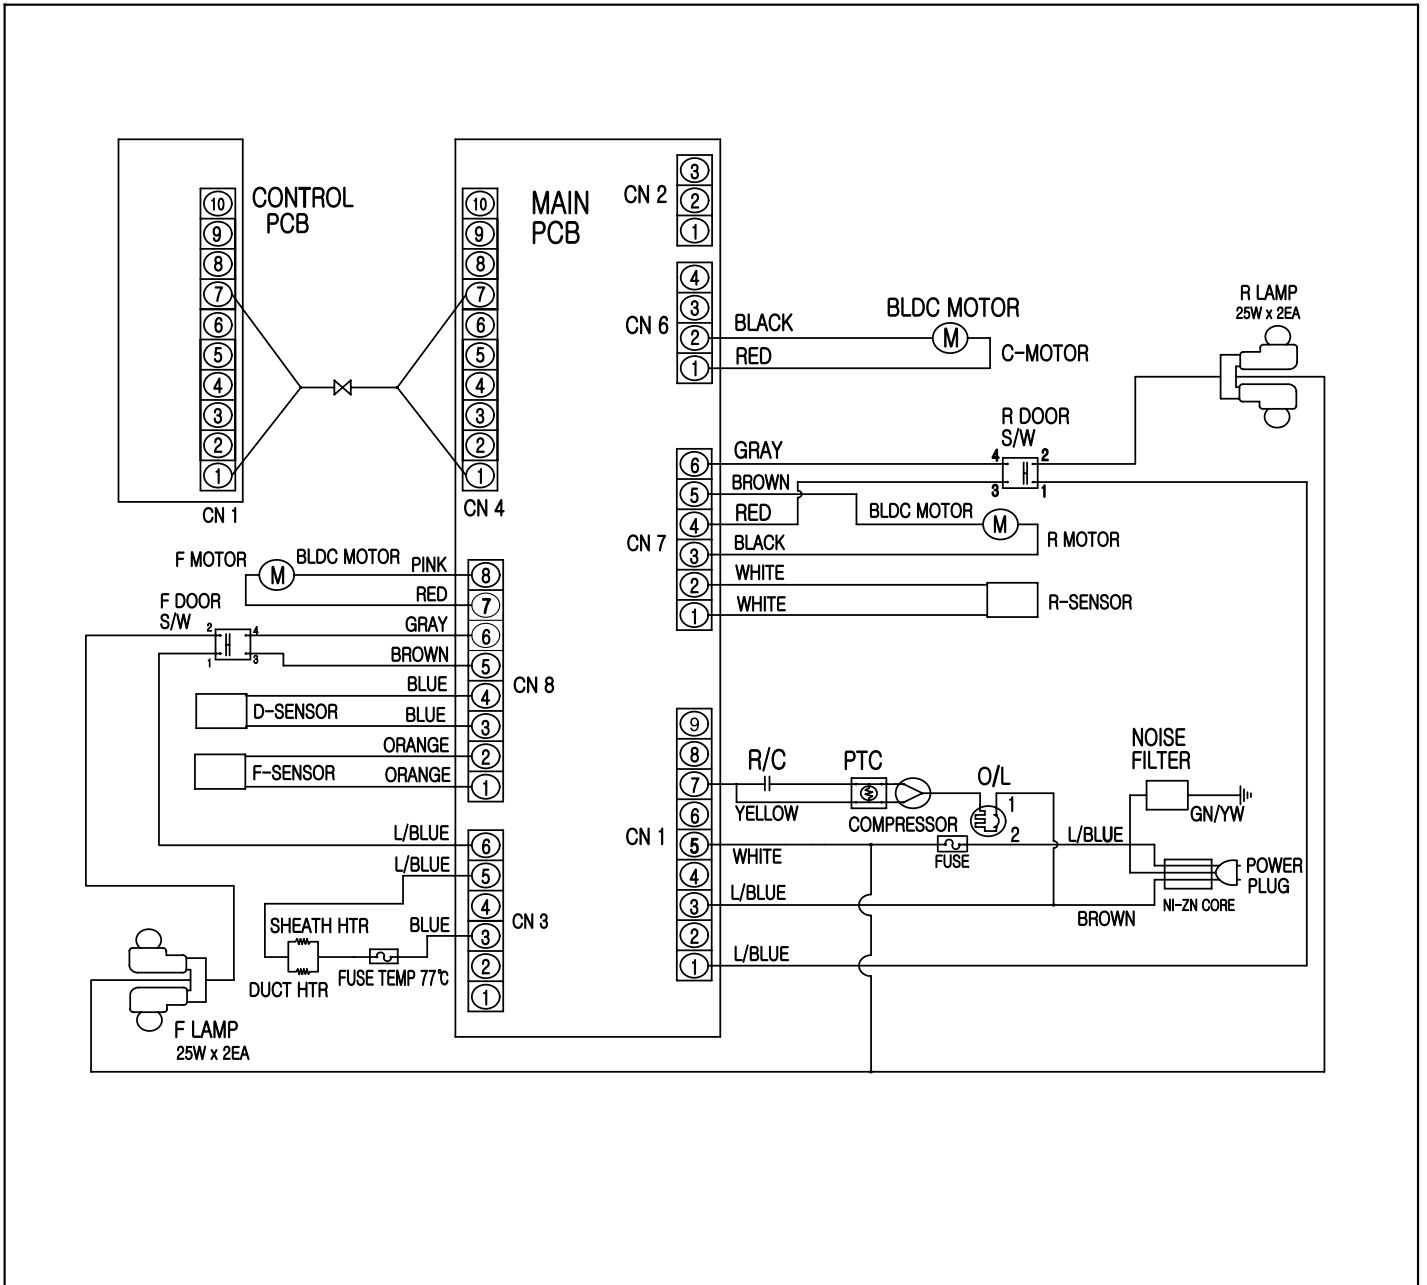


5-2. FRN-U20IE* (R-600a)

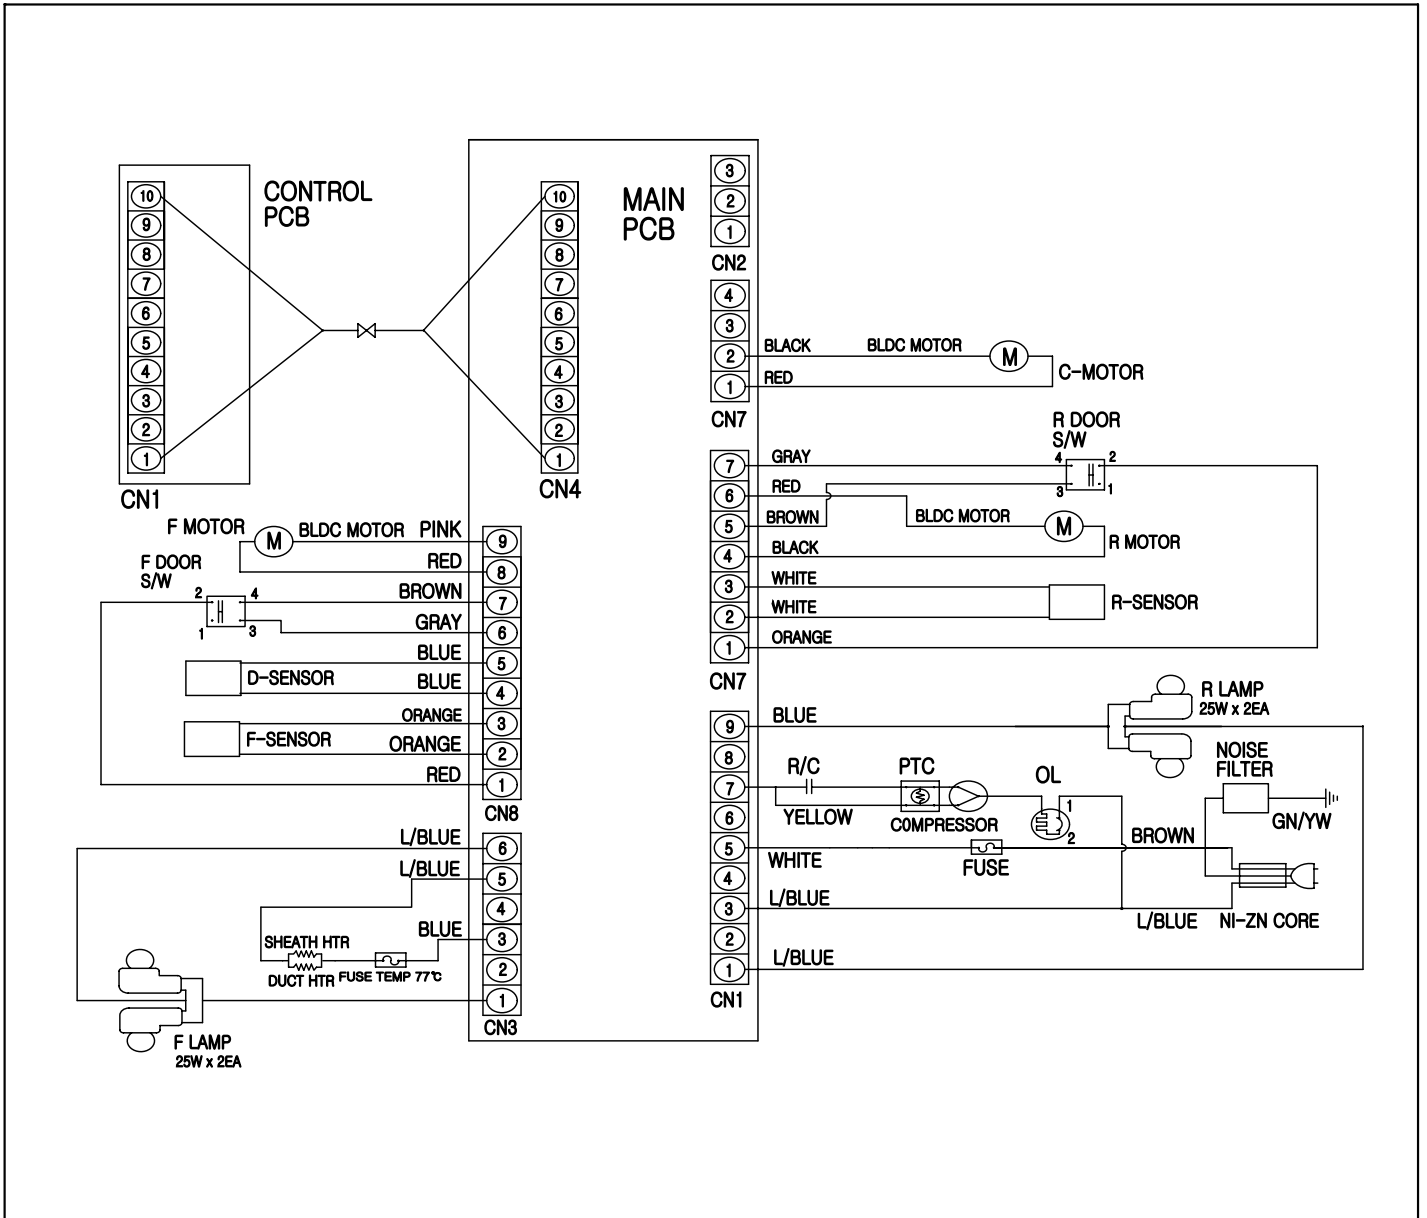


5-3. FRS-U20BE* (R-134a)

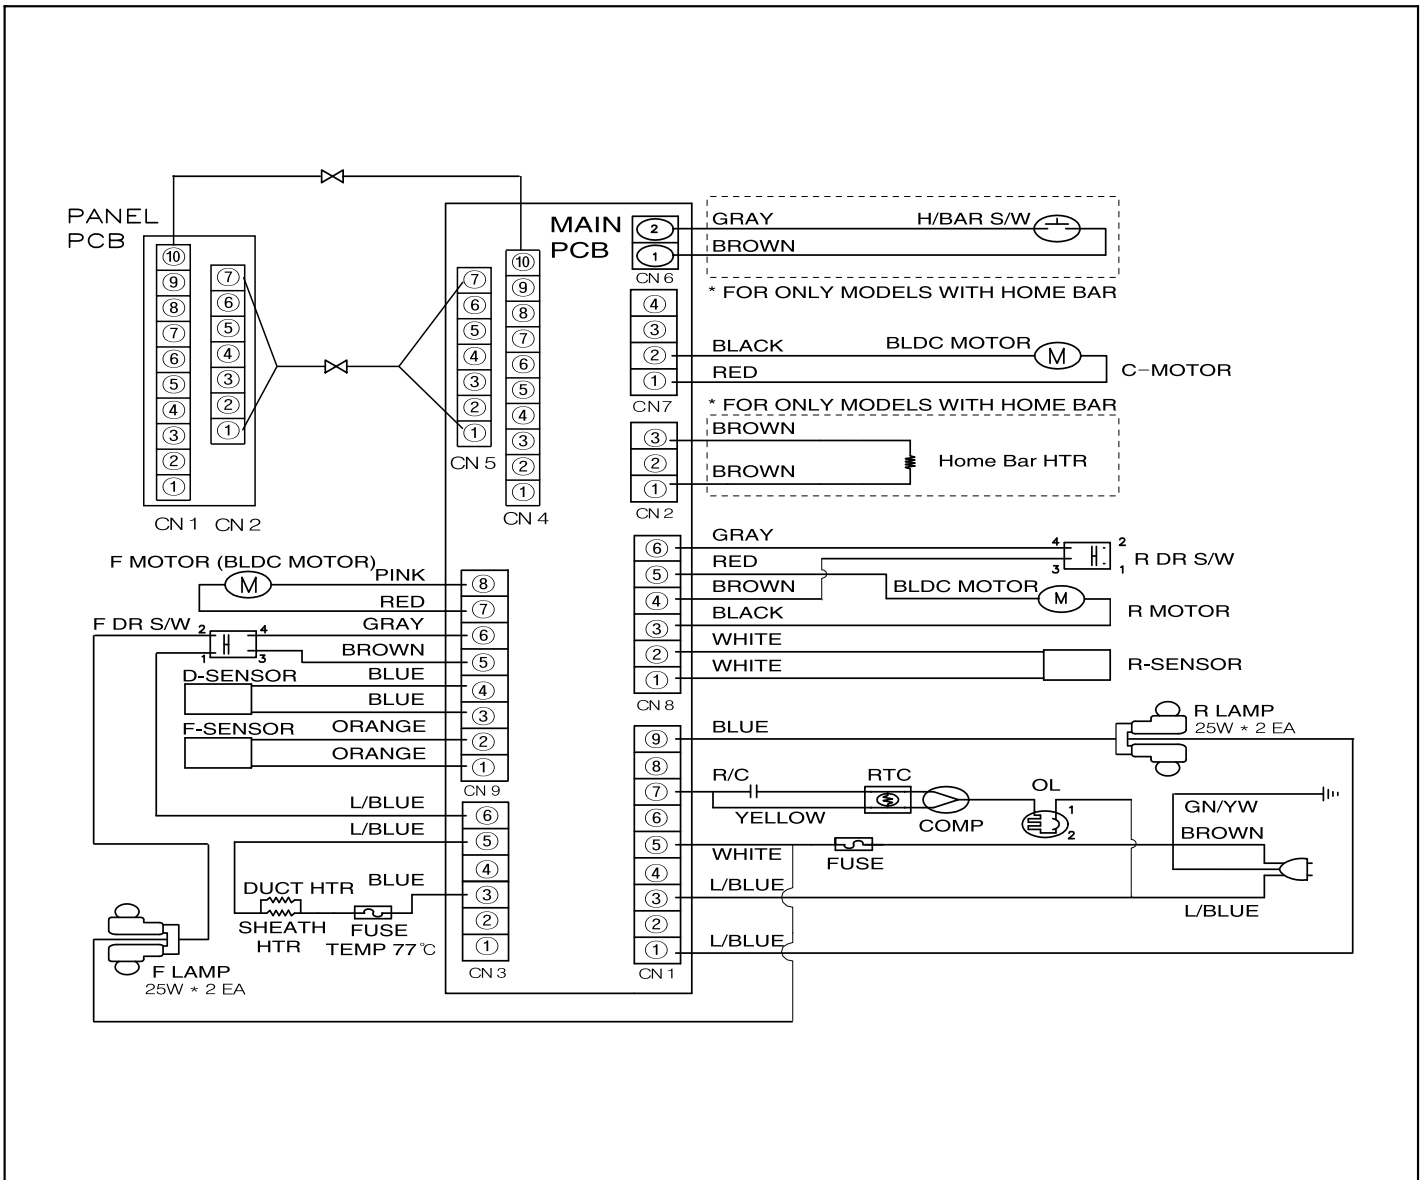

5-4. FRN-U20BE* (R-600a)

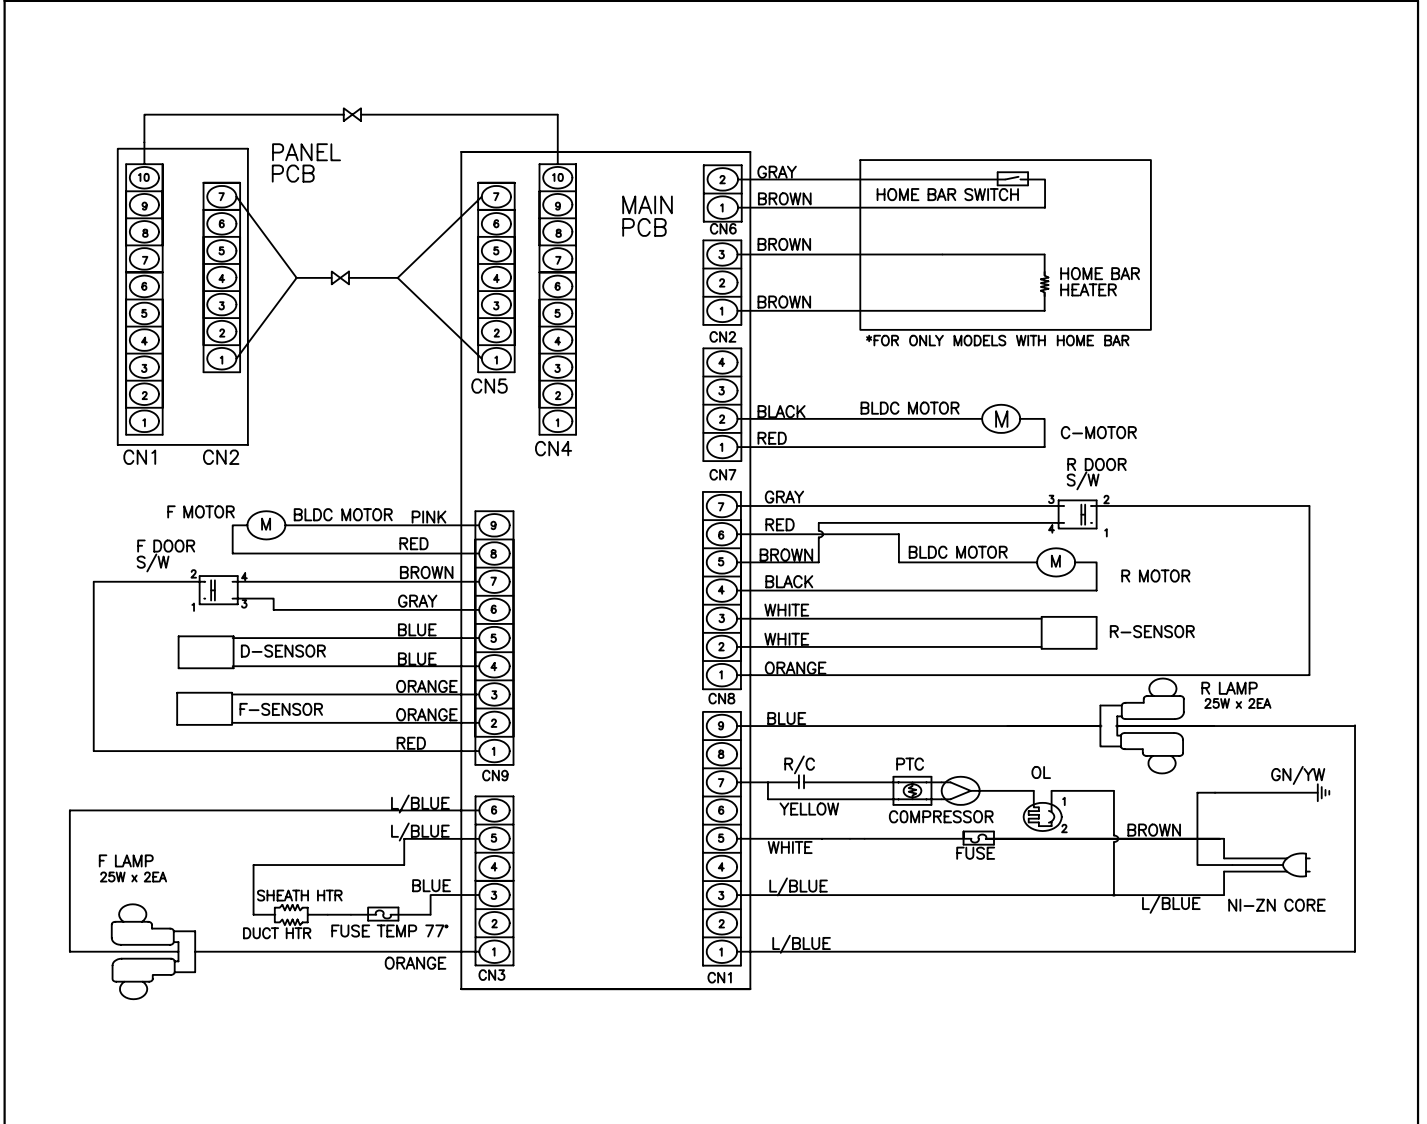

5-5. Dispenser Models (R-600a or R-134a)

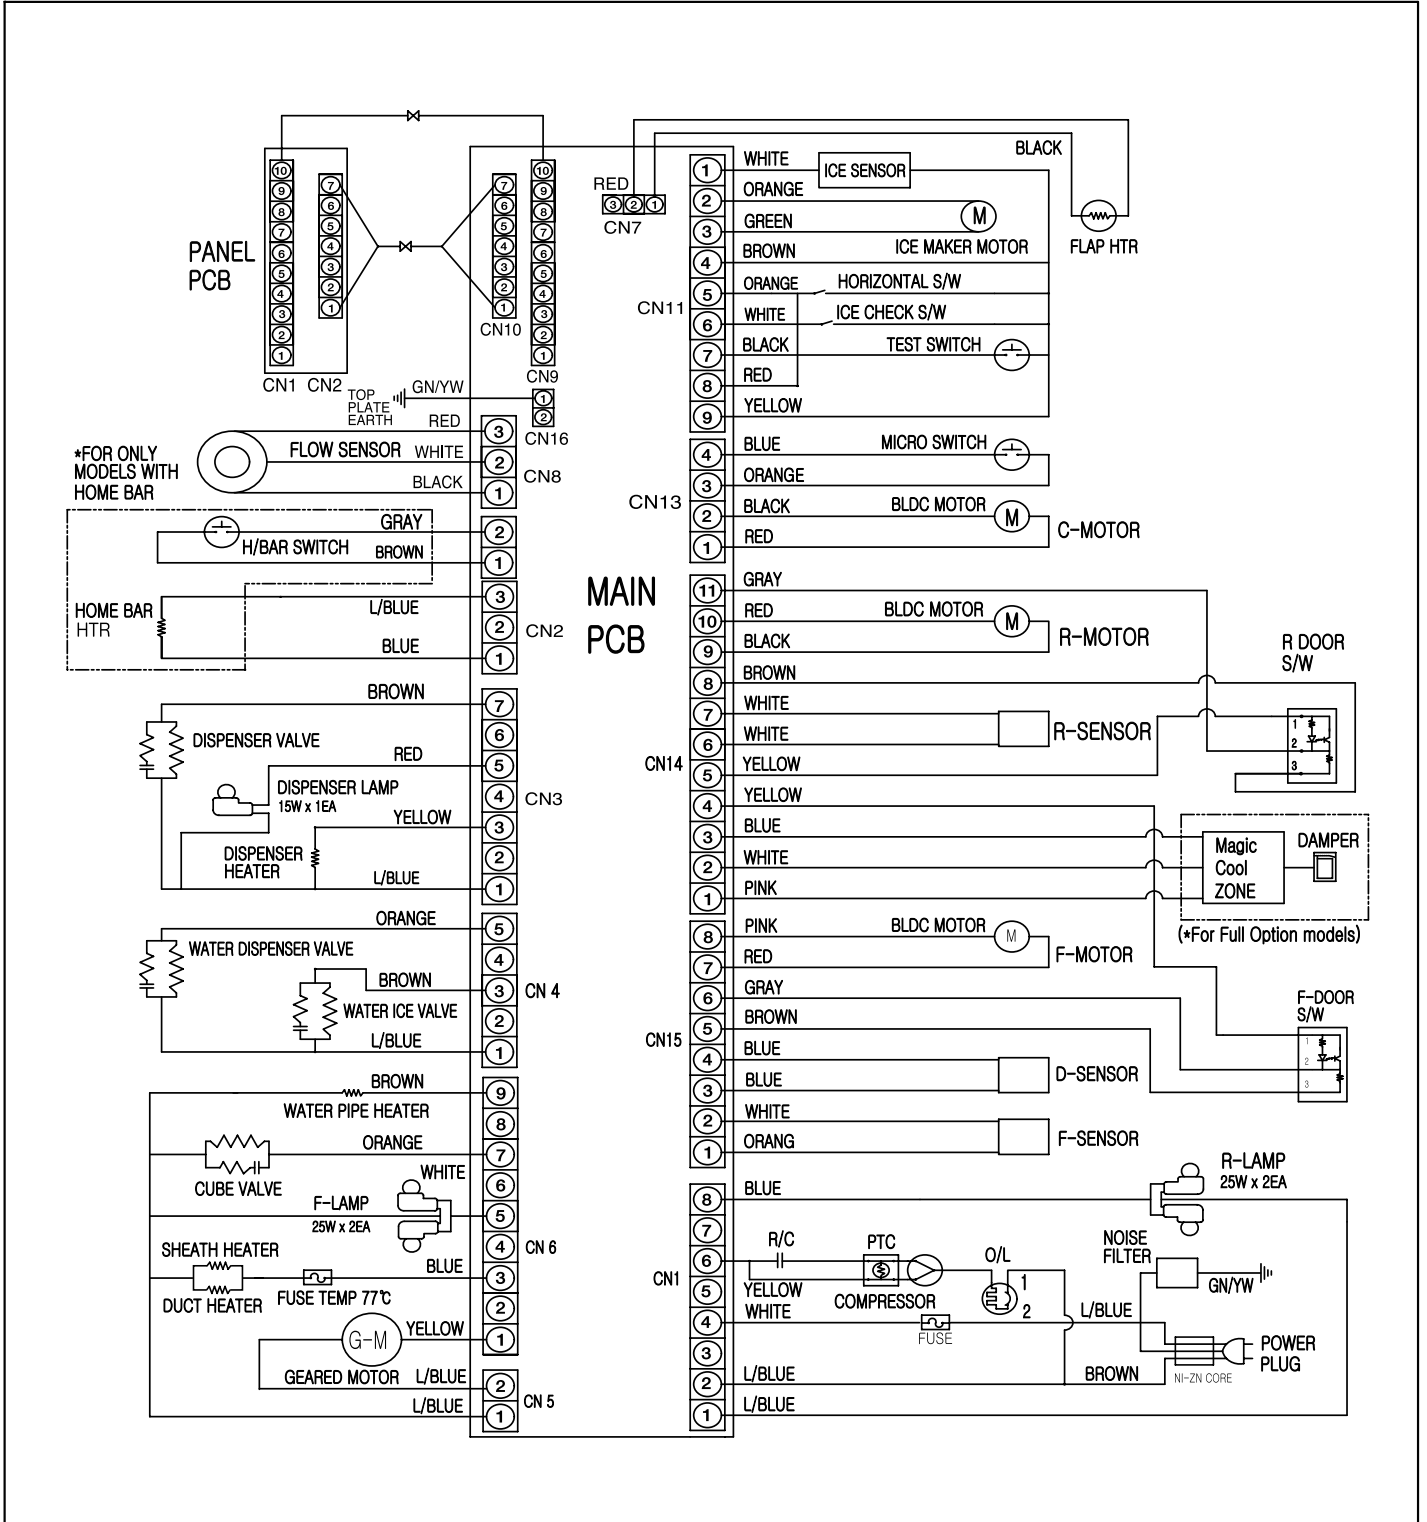


6. COMPONENT LOCATE VIEW

6-1. Front View (Dispenser + Home bar Model)




6-2. Inner View

Automatic Ice Maker F-Fan Motor Geared Motor

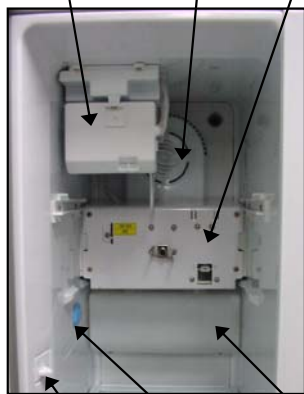


Freezer Compartment (Dispenser Model)

R-Fan Motor R-Sensor R-Lamp

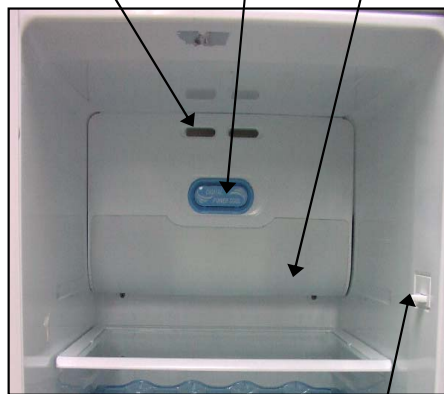


Refrigerator Compartment (Dispenser Model)

R-Sensor Inner Controller

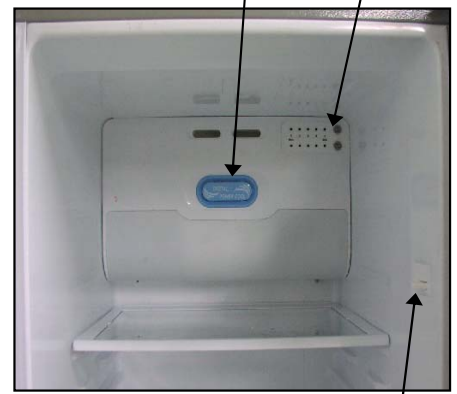


Refrigerator Compartment (Inner Basic Model)

6-3. Evaporator

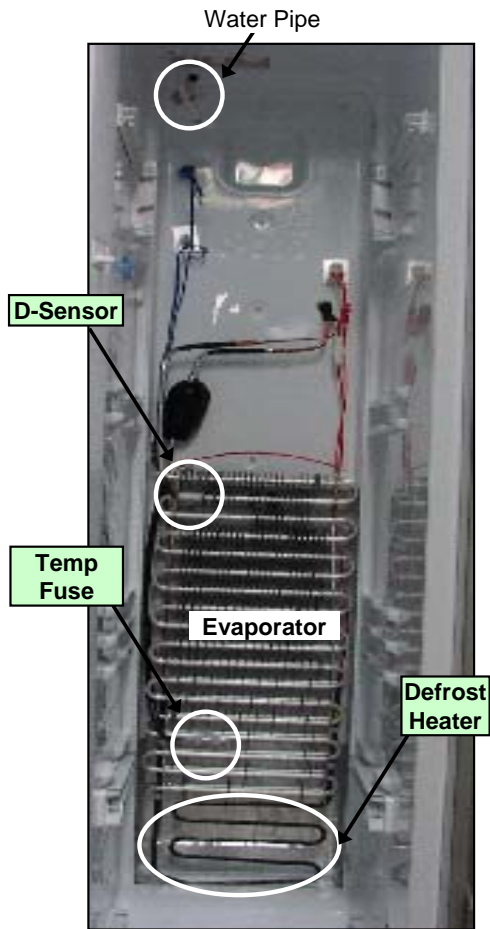



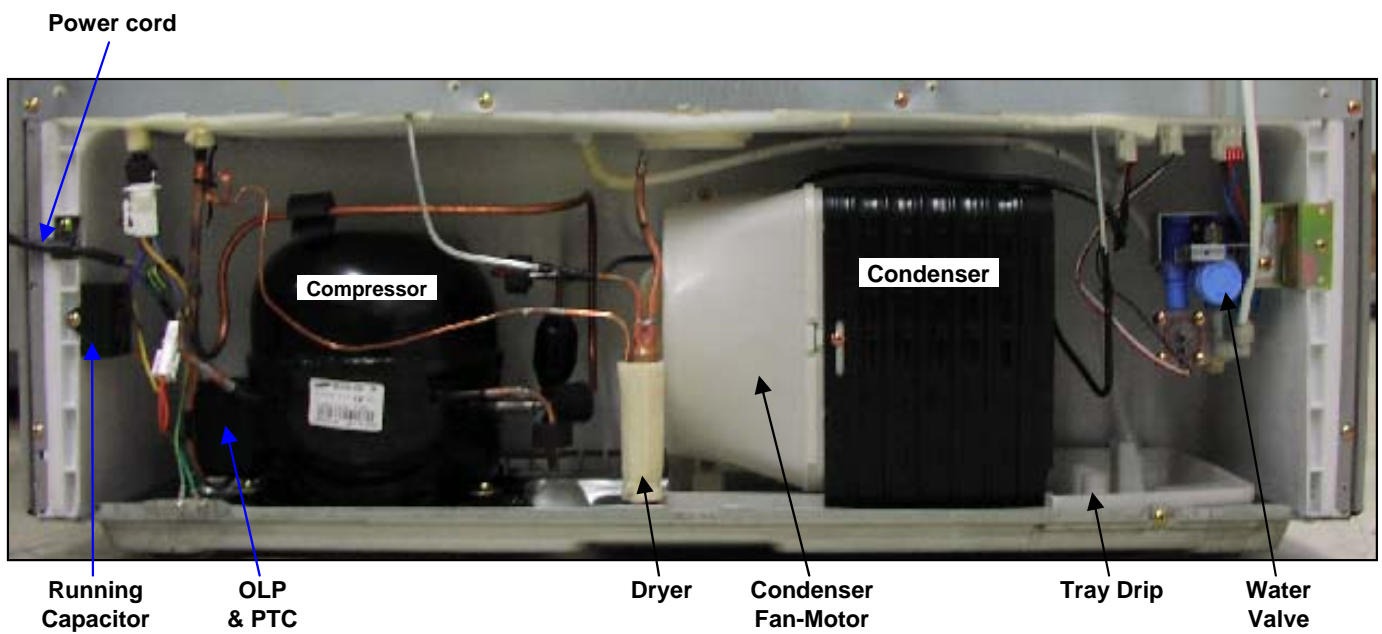





6-4. Machine Compartment




7. HOW TO CHECK EACH PARTS

7-1. Hose Ice Maker Tube Assembly

1) Disassembling Procedure




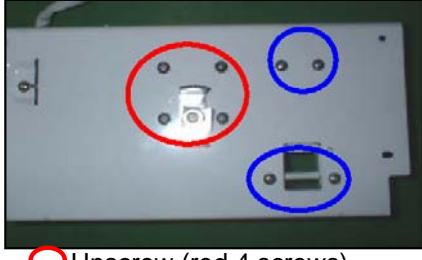




NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Pull forward Ice Storage Case</p>	5	 <p>▷ Remove 2 screws at the Cove Guide Cab W/Tube A.</p>
2	 <p>▷ Remove 2 screws.</p>	6	 <p>▷ Disassemble Cover Guide Cab W/Tube A</p>
3	 <p>▷ Pull forward Ice Maker.</p>	7	 <p>▷ Pull forward Hose Ice Maker Tube As.</p>
4	 <p>▷ Remove Water Hose Heater's 2P housing.</p>	8	 <p>▷ Check Hose Ice Maker Tube As.</p>

2) How to check Hose Ice Maker Tube As.



How to check	CRITERION
 <p>▷ Measure the resistance of two wire</p>	<p>▷ Good: $9680\Omega(\pm 8\%)$ ($8900 \sim 10456\Omega$)</p> <p>▷ If defective, change</p>

7-2. Bracket Geared Motor Assembly

1) Disassembling Procedure

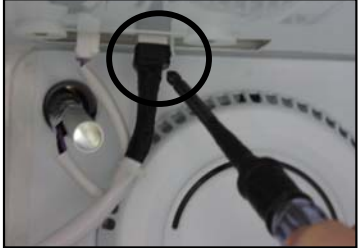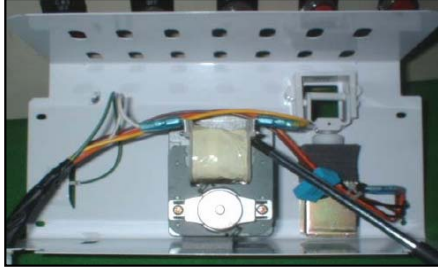

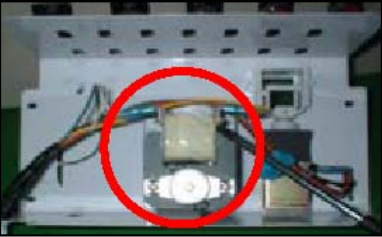

NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Remove 2 screws.</p>	4	 <p>▷ Pull forward Bracket Geared Motor.</p>
2	 <p>▷ Unscrew (4 points).</p>	5	 <p>  Unscrew (red 4 screws).  Unscrew (blue 4 screws). </p>
3	 <p>▷ Separate 6 pin housing of Bracket Geared Motor from the top connector.</p>	6	 <p>▷ Check Solenoid Valve and Geared Motor.</p>

2) How to Check Hose Ice Maker Tube Assembly


PARTS	SPEC.	HOW TO CHECK	CRITERION
Geared Motor	<p>▷ SPEC. NAME :DAG-6502DEC</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD : $11.3\Omega(\pm 10\%)$ (10.8 ~ 12.7Ω)</p> <p>▷ DEFECTIVE ; Change the Geared Motor.</p>
Cube Sol Valve	<p>▷ SPEC. NAME :Cube SN8</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD : $145\Omega(\pm 8\%)$ (133 ~ 156Ω)</p> <p>▷ DEFECTIVE ; Change the Cube Sol Valve.</p>

7-3. Dispenser Micro Switch

1) Disassembling Procedure


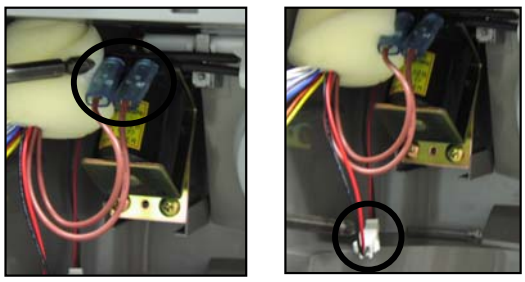
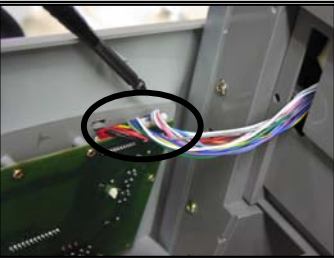

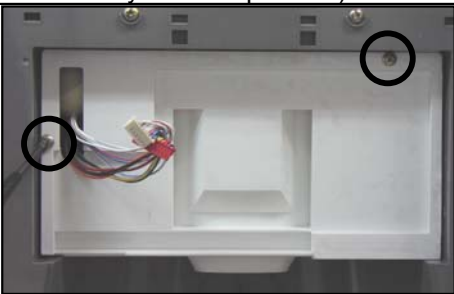
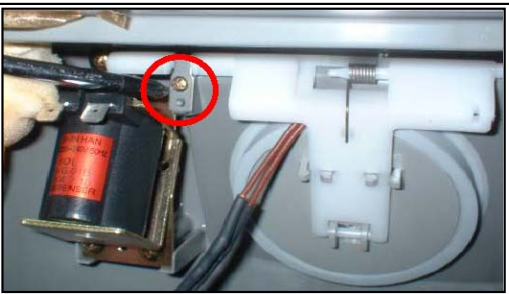
NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Insert (-) screw driver into bottom hole of Dispenser Button Guide. Pull up forward to remove the guide. (Be careful not to damage guide surface.)</p>	3	 <p>▷ Separate wire connectors from Micro Switch.</p>
2	 <p>▷ Remove Micro switch.</p>	4	 <p>▷ Check Micro Switch.</p>

2) How to Check Micro Switch


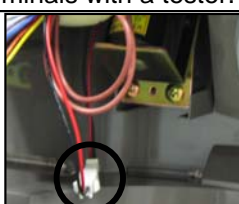
PARTS	HOW TO CHECK	CRITERION									
<p>SPEC. NAME : VP333A-OD-8</p> <p>VOLTAGE : 125V, 3A</p>	 <p>▷ Check both terminals (red circle) with a Multi Tester (Tester Mode : Resistance (Ω)).</p>	<p>▷ GOOD :</p> <table border="1"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change Micro Switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									

7-4. Dispenser Solenoid Valve

1) Disassembling Procedure


NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Insert (-) screw driver into bottom left groove of Cover Dispenser Box. Pull forward with a snap.(Be careful not to damage cover and door surface.)</p>	4	 <p>▷ Separate 2 terminals from Sol Valve and 2P Housings from Cover Ice Flap.</p>
2	 <p>▷ Separate 2 housings of 10P / 7P from Front PCB. (Do not hold only wires to pull out.)</p>	5	 <p>▷ Unscrew (3 points) to remove Sol Valve.</p>
3	 <p>▷ Unscrew (2 points) to remove Box Dispenser Shut.</p>	6	 <p>▷ Unscrew (1 point) to remove Cover Ice Flap.</p>




2) How to Check Micro Switch

PARTS	SPEC.	HOW TO CHECK	CRITERION
Dispenser Sol Valve	<p>▷ SPEC. NAME :SOL2003-01B</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of both terminals with a tester.</p>	<p>▷ Good : 215Ω(±10%) (193 ~ 236Ω)</p> <p>▷ DEFECTIVE : 0 Change Sol Valve.</p>
Flap Heater Assembly	<p>▷ VOLTAGE :DC 12V,1.5W</p>	 <p>▷ Check resistance value of both terminals with a tester.</p>	<p>▷ GOOD : 96Ω(±8%) (88 ~ 104Ω)</p> <p>▷ DEFECTIVE ; Change Flap Heater AS.</p>


7-5. Main PCB




- Basic Model

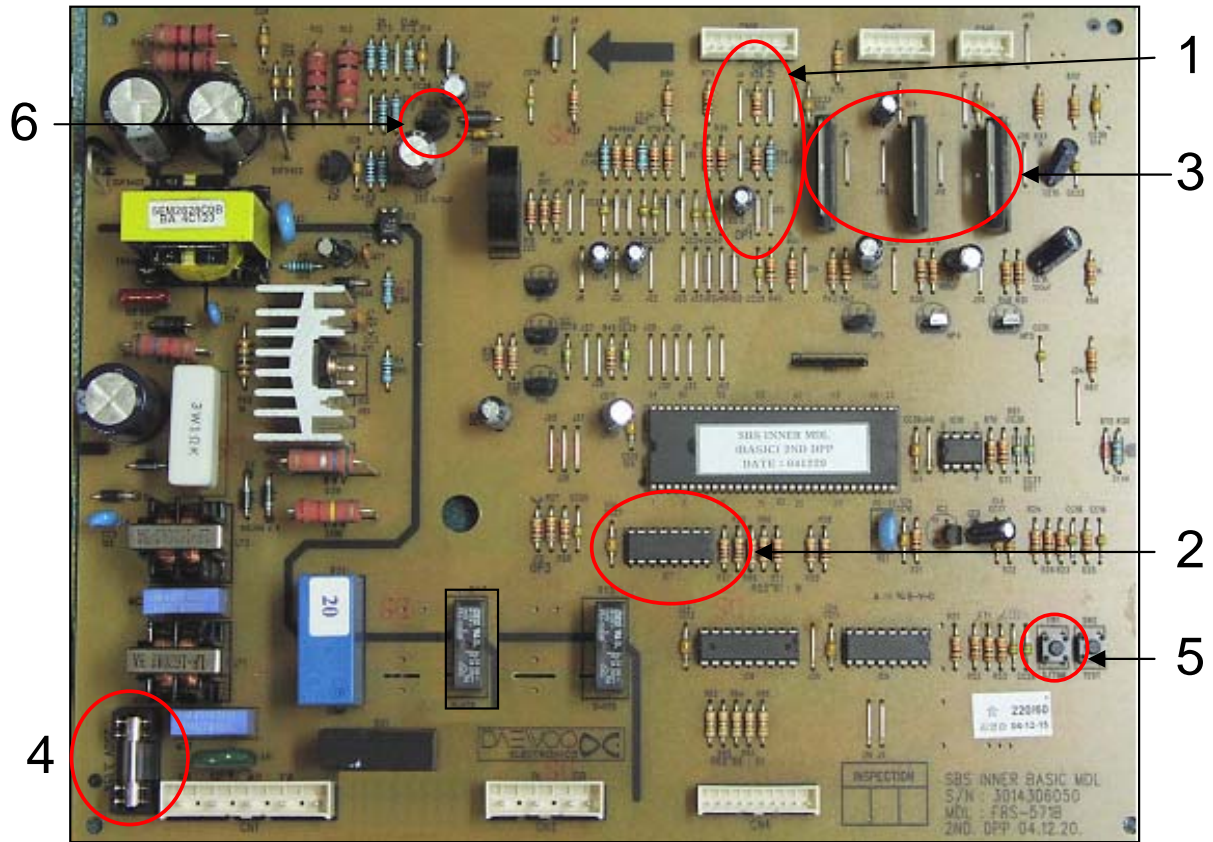

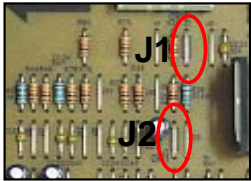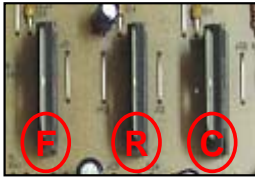NO	ITEM	CHECK POINT	REMARK
1	Compensation of Weak Refrigeration → Making R-temp cooler	 <p>* Used when making R-temp. down to compensate for weak refrigeration without changing FCP temp. setting. ▷ Cutting of J1 ; down by 1.5°C ▷ Cutting of J1, J2 ; down by 3°C</p>	
2	Relay Power Controller	<p>* To check normal voltage of each electrical devices to & from Mi-com. ▷ Check input & output voltage of MICOM and IC7</p>	
3	Fan Power Controller	  <p>* To check input & output voltage of Fan ▷ #2 : Input ▷ #5 : Output</p>	
4	Electric Current Fuse	<p>* To check when each device does not work (250V,3.15A)</p>	
5	Time Shortening Switch	<p>* To shorten time in PCB checkup (Pressing 1 time is regarded as 1 minute has passed.)</p>	
6	Regulator IC(5V)	<p>* To check voltage of MICOM and IC Voltage check of IC#6 (Input :12V,Output : 5V)</p>	


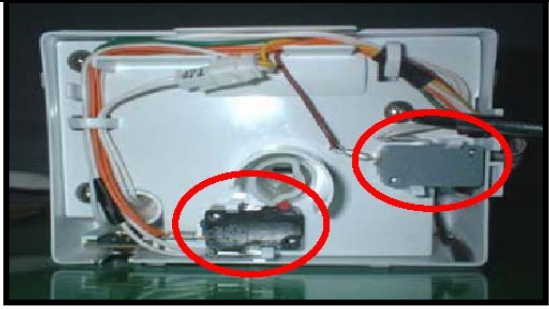

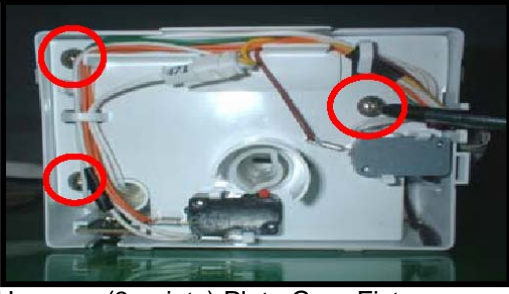
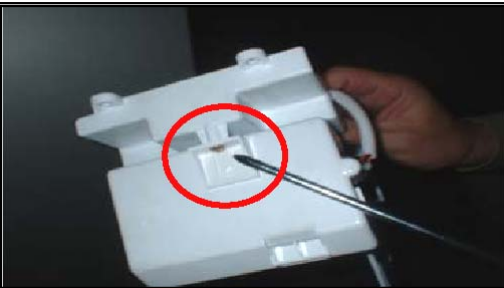
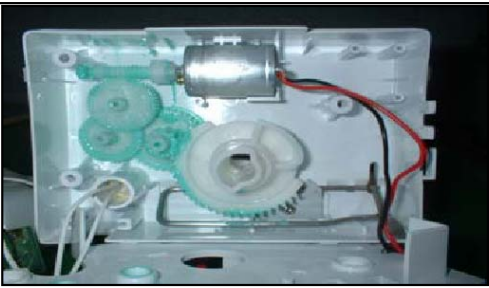

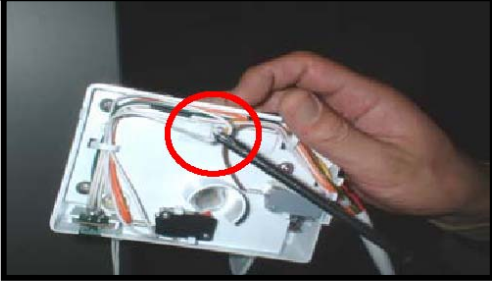

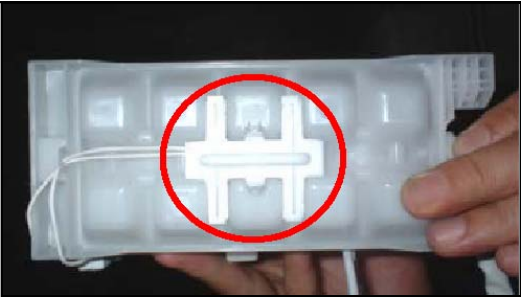
- Dispenser Model

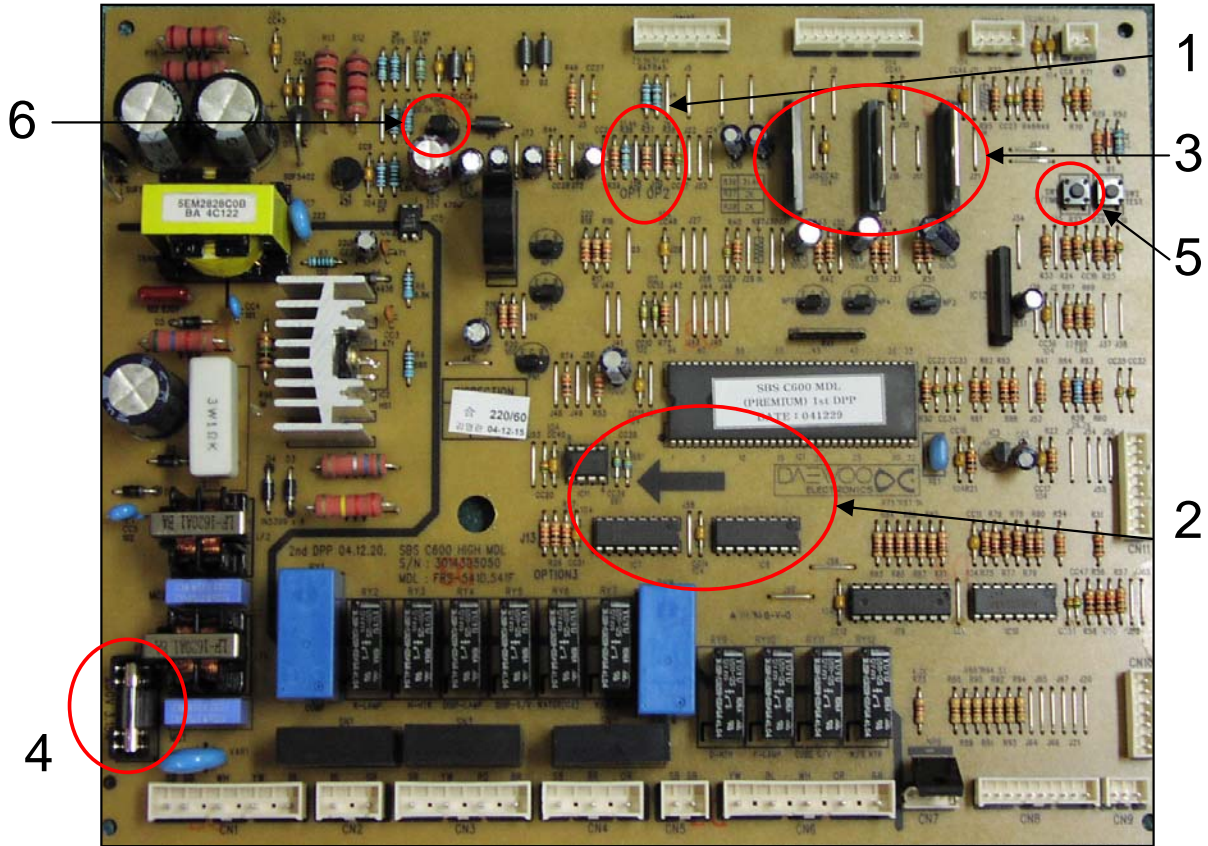

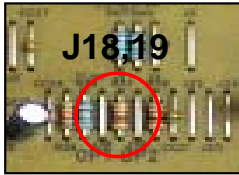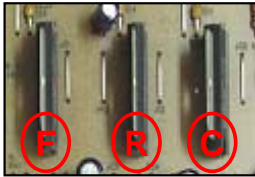NO	ITEM	CHECK POINT	REMARK
1	Compensation of Weak Refrigeration → Making R-temp cooler	 <p>* Used when making R-temp. down to compensate for weak refrigeration without changing FCP temp. setting. ▷ Cutting of J18 ; down by 1.5 °C ▷ Cutting of J18, J19 ; down by 3 °C</p>	
2	Relay Power Controller	<p>* To check normal voltage of each electrical devices to & from Mi-com. ▷ Check input & output voltage of MICOM and IC7, 8.</p>	
3	Fan Power Controller	  <p>* To check input & output voltage of Fan ▷ #2 : Input ▷ #5 : Output</p>	
4	Electric Current Fuse	<p>* To check when each device does not work (250V,3.15A)</p>	
5	Time Shortening Switch	<p>* To shorten time in PCB checkup (Pressing 1 time is regarded as 1 minute has passed.)</p>	
6	Regurator IC(5V)	<p>* To check voltage of MICOM and IC Voltage check of IC#6 (Input :12V,Output : 5V)</p>	




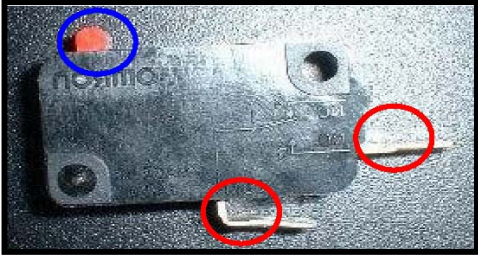
7-6. Ice Maker

1) Disassembling Procedure

NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p data-bbox="201 640 746 674">▷ Remove 2 screws on top front of ice maker.</p>	6	 <p data-bbox="882 640 1473 674">▷ Remove full ice sensing switch and level switch.</p>
2	 <p data-bbox="201 972 507 1005">▷ Pull forward ice maker.</p>	7	 <p data-bbox="882 972 1361 1005">▷ Unscrew (3 points) Plate Gear Fixture.</p>
3	 <p data-bbox="201 1323 659 1357">▷ Unscrew Fixture of Frame Ice Maker.</p>	8	 <p data-bbox="882 1323 1425 1357">▷ Check if ice dropping motor is normal (OK).</p>
4	 <p data-bbox="201 1637 639 1700">▷ Separate Ice Maker Assembly from Frame Ice Maker.</p>	9	 <p data-bbox="882 1653 1465 1686">▷ Remove 2 pin housing from Plate Gear Fixture.</p>
5	 <p data-bbox="201 2000 730 2063">▷ Separate Cover I/M (A) from Cover I/M (B) with a (-) screw driver.</p>	10	 <p data-bbox="882 2000 1326 2063">▷ Remove I-sensor (ice sensor) from Case Icing As.</p>


* Follow the reverse order when assembling.

2) How to Check Ice Maker

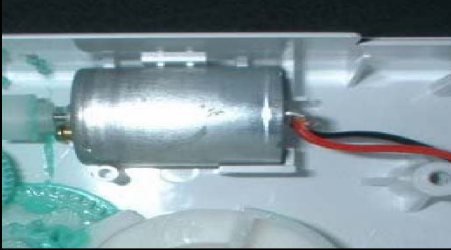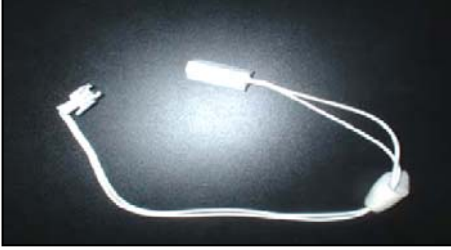PARTS	HOW TO CHECK	CRITERION									
Ice Dropping Motor	 <p>▷ Check resistance value of 2 wires with a Multi Tester.</p>	<p>▷ GOOD : RS-360RH-14250 : 6 ~ 14Ω</p> <p>▷ DEFECTIVE : Change the motor.</p>									
I-Sensor (Ice Sensor)	 <p>▷ Check resistance value of 2 wires with a Multi Tester.</p>	<p>▷ GOOD : 4.4 ~ 50kΩ (It depends on surround temp.)</p> <p>▷ DEFECTIVE : Change the sensor.</p>									
Full Ice Sensing Switch	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD :</p> <table border="1" data-bbox="906 1084 1513 1308"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change the switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									
Level Switch	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD :</p> <table border="1" data-bbox="906 1503 1513 1727"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change the switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									

8. TROUBLE DIAGNOSIS

8-1. Faulty Start (F/R lights OFF , F-PCB Power OFF)

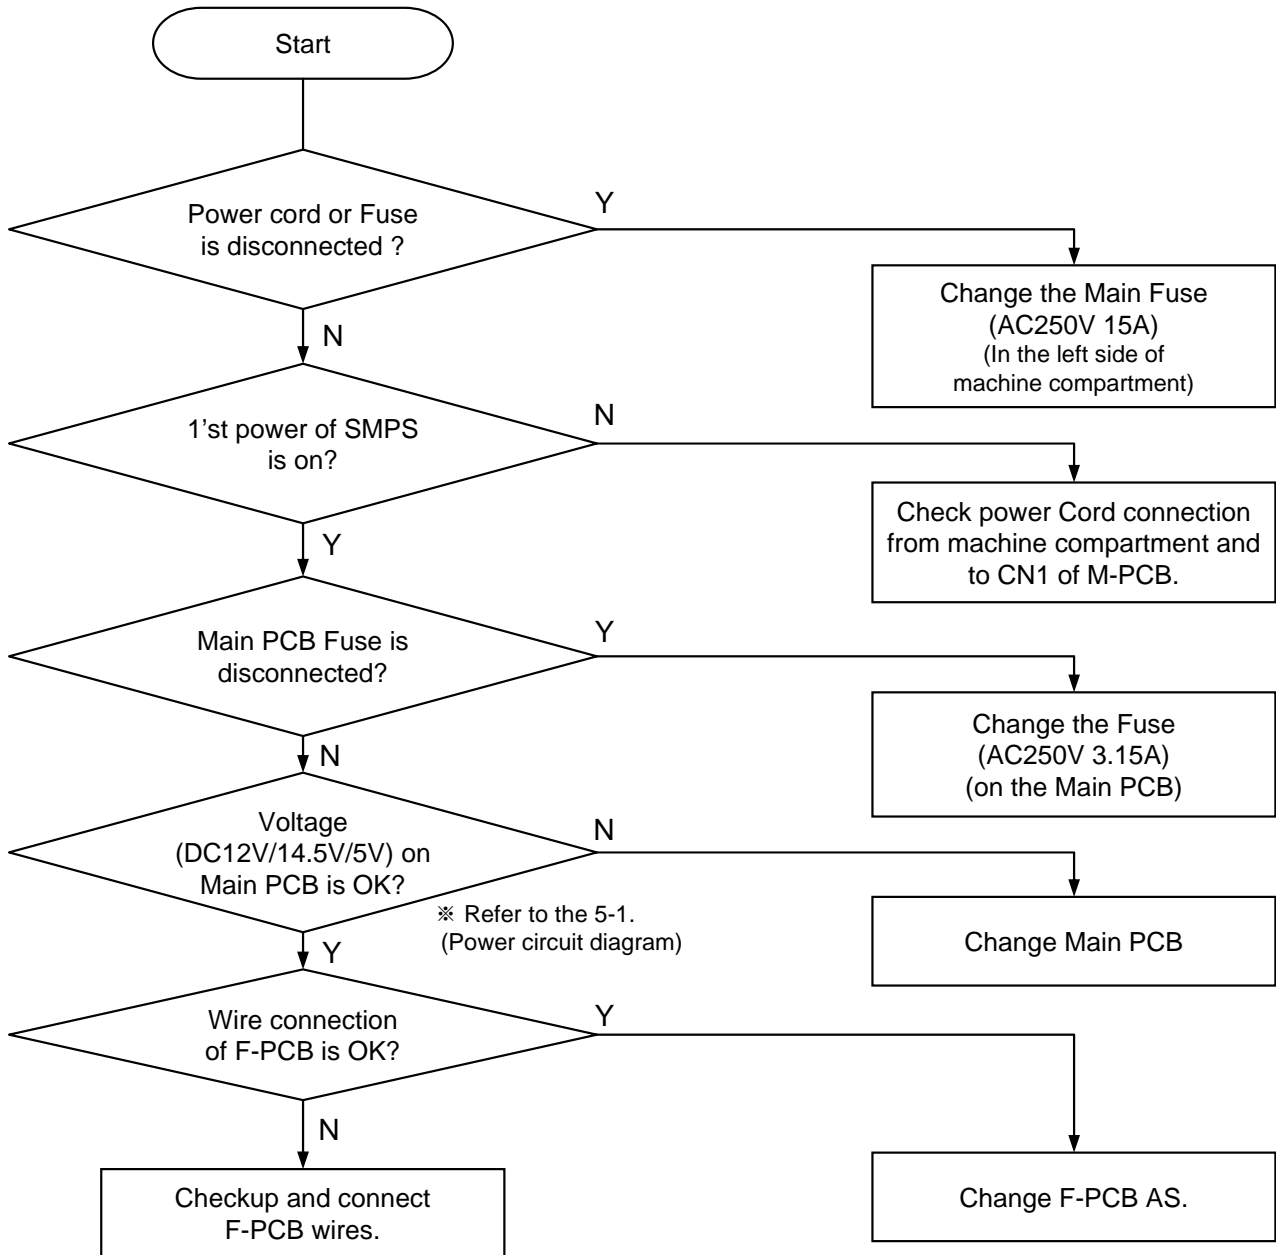

※ How to replace Front PCB




- 1) Insert a flat tip driver into the left down groove of panel frame and snap it out smoothly.
- 2) Separate 2 housings of 10P / 7P from Front PCB. (Do not hold only wires to pull out.)
- 3) Unscrew (7 points) to remove Front PCB.

* Follow the reverse order when assembling.

8-2. Freezer Compartment

8-2-1. Freezing failure . (Foods are not frozen / cold.)

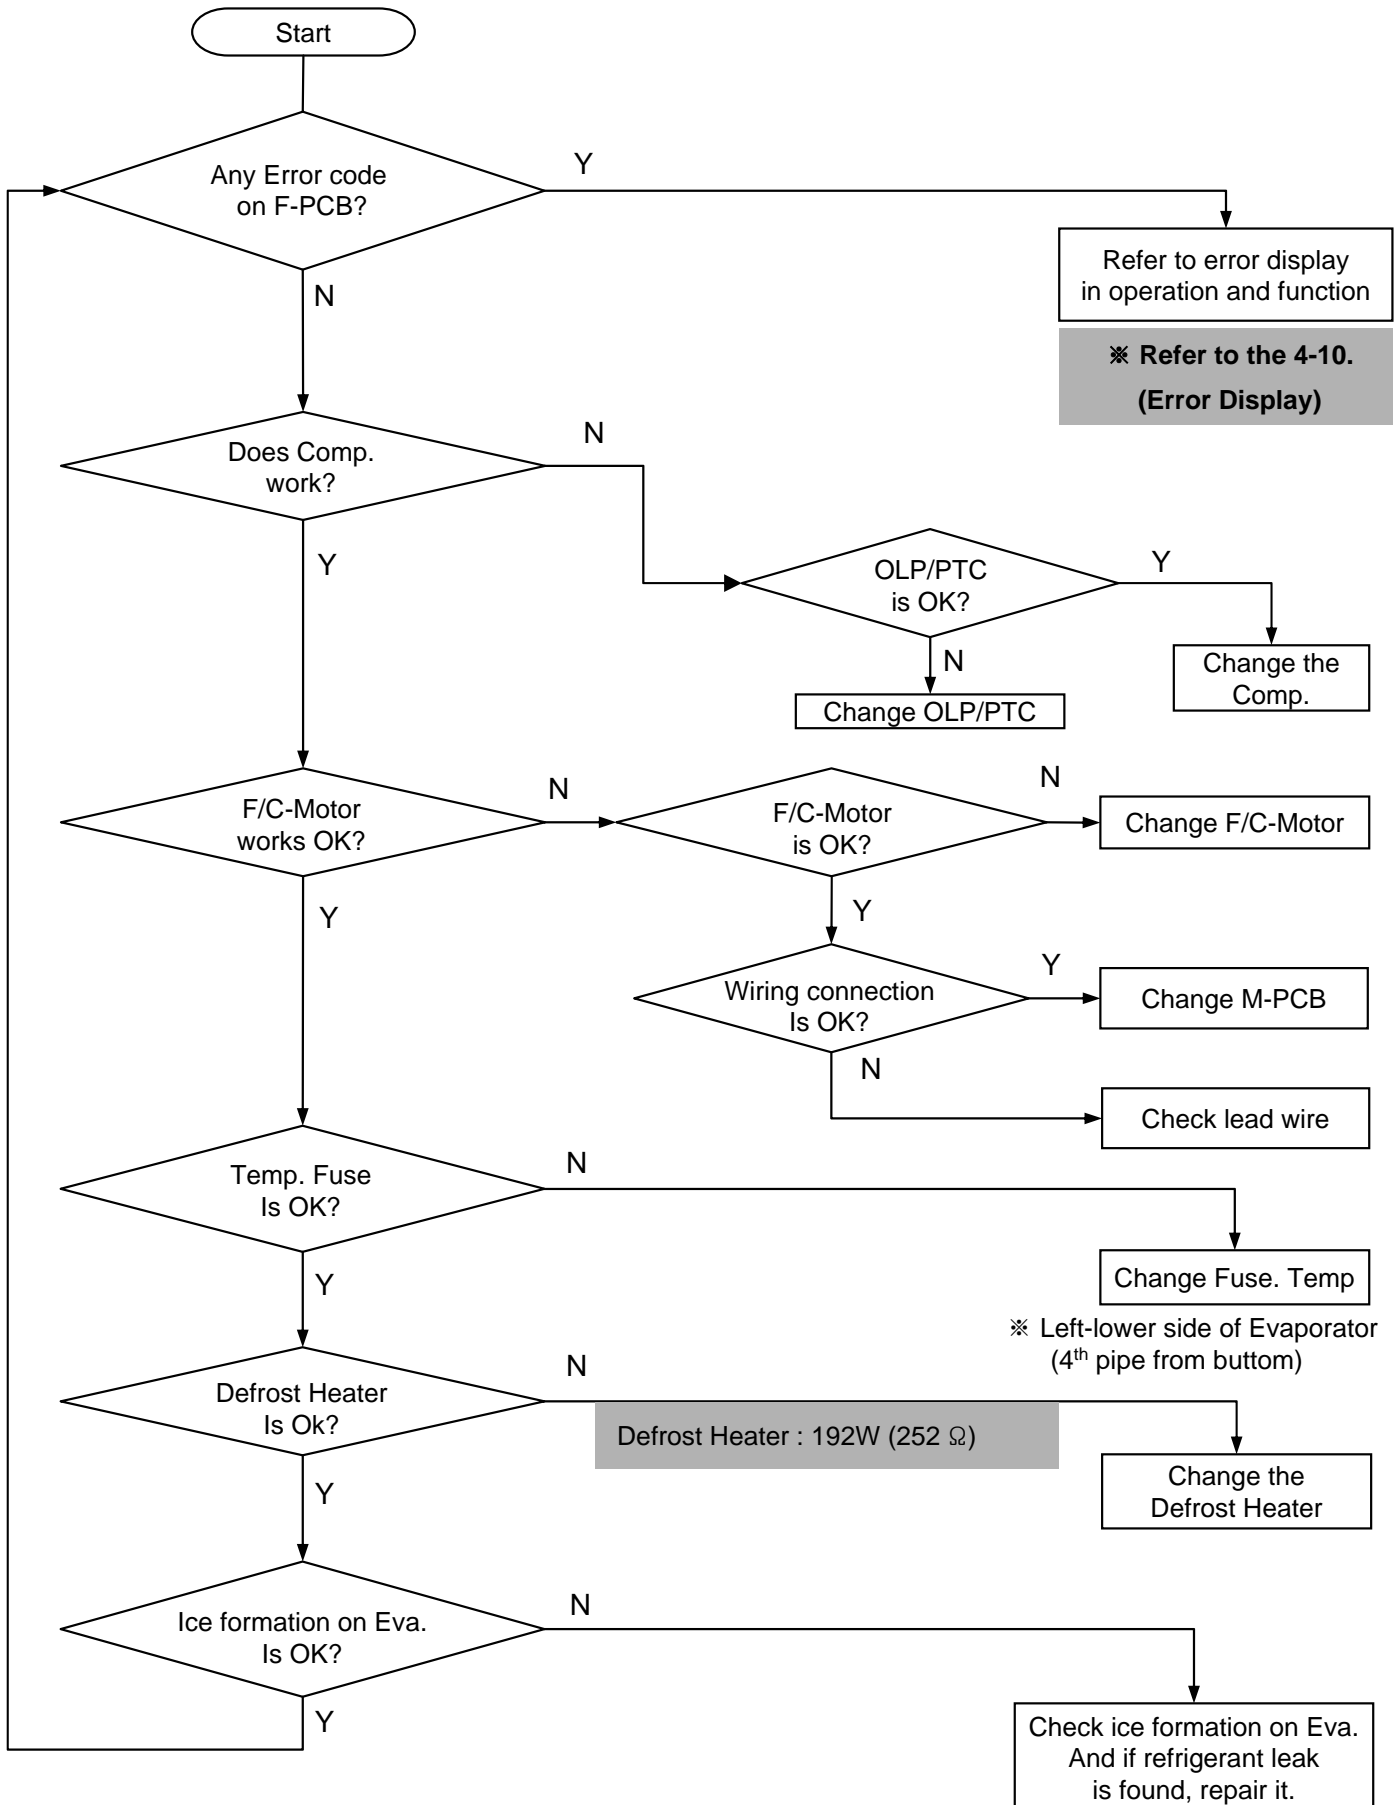


Removing and replacing Freezer parts

(1)



- 1) Remove foods.
- 2) Remove Ice Bucket, shelves and cases in Freezer compartment.

(2)

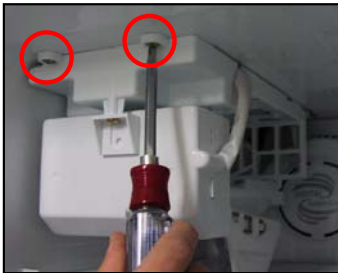

* Remove 2 screws of Ice Maker.

(4)



* Remove 4 screws of Geared Motor.

(3)



* Remove the Housing of Ice Maker AS. (Right side)


(5)



* Remove the Housing of Geared Motor AS. (Center)

Removing and replacing Freezer parts

(6)

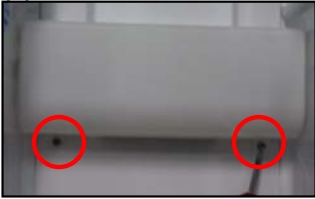

* Remove light cover screws.

(12)



* Remove the screw cap on the F-Louver A with a flat tip driver.

(7)




* Pull down smoothly the bottom of light cover to remove.

(13)



* Remove 3 screws of F-Louver A.

(8)

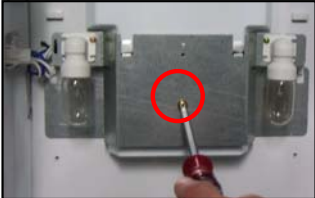

* Remove the screw of bracket F-Lamp.

(14)



* Hold the end of F-Louver A and pull forward slowly.

(9)




* Remove the left housing.

(15)



* Remove the housing.

(10)

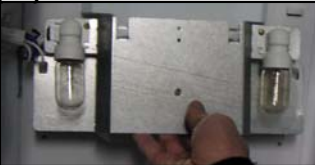

* Pull out smoothly the bracket F-Lamp AS. to remove.

(16)



* Remove the screw of F-Return cover and pull out cover.

(11)




* Hold the end of F-Fan cover and pull forward slowly.

(17)




* Hold the end of F-Louver B and pull forward slowly.


Removing and replacing Freezer parts

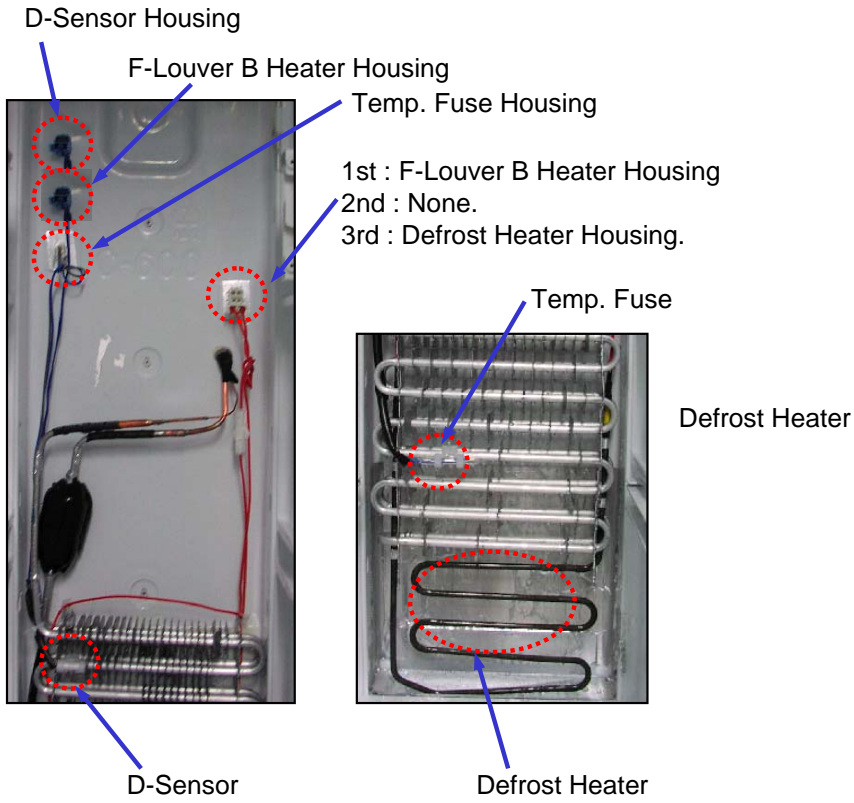

8-2-2. Ice Formation on F-Louver

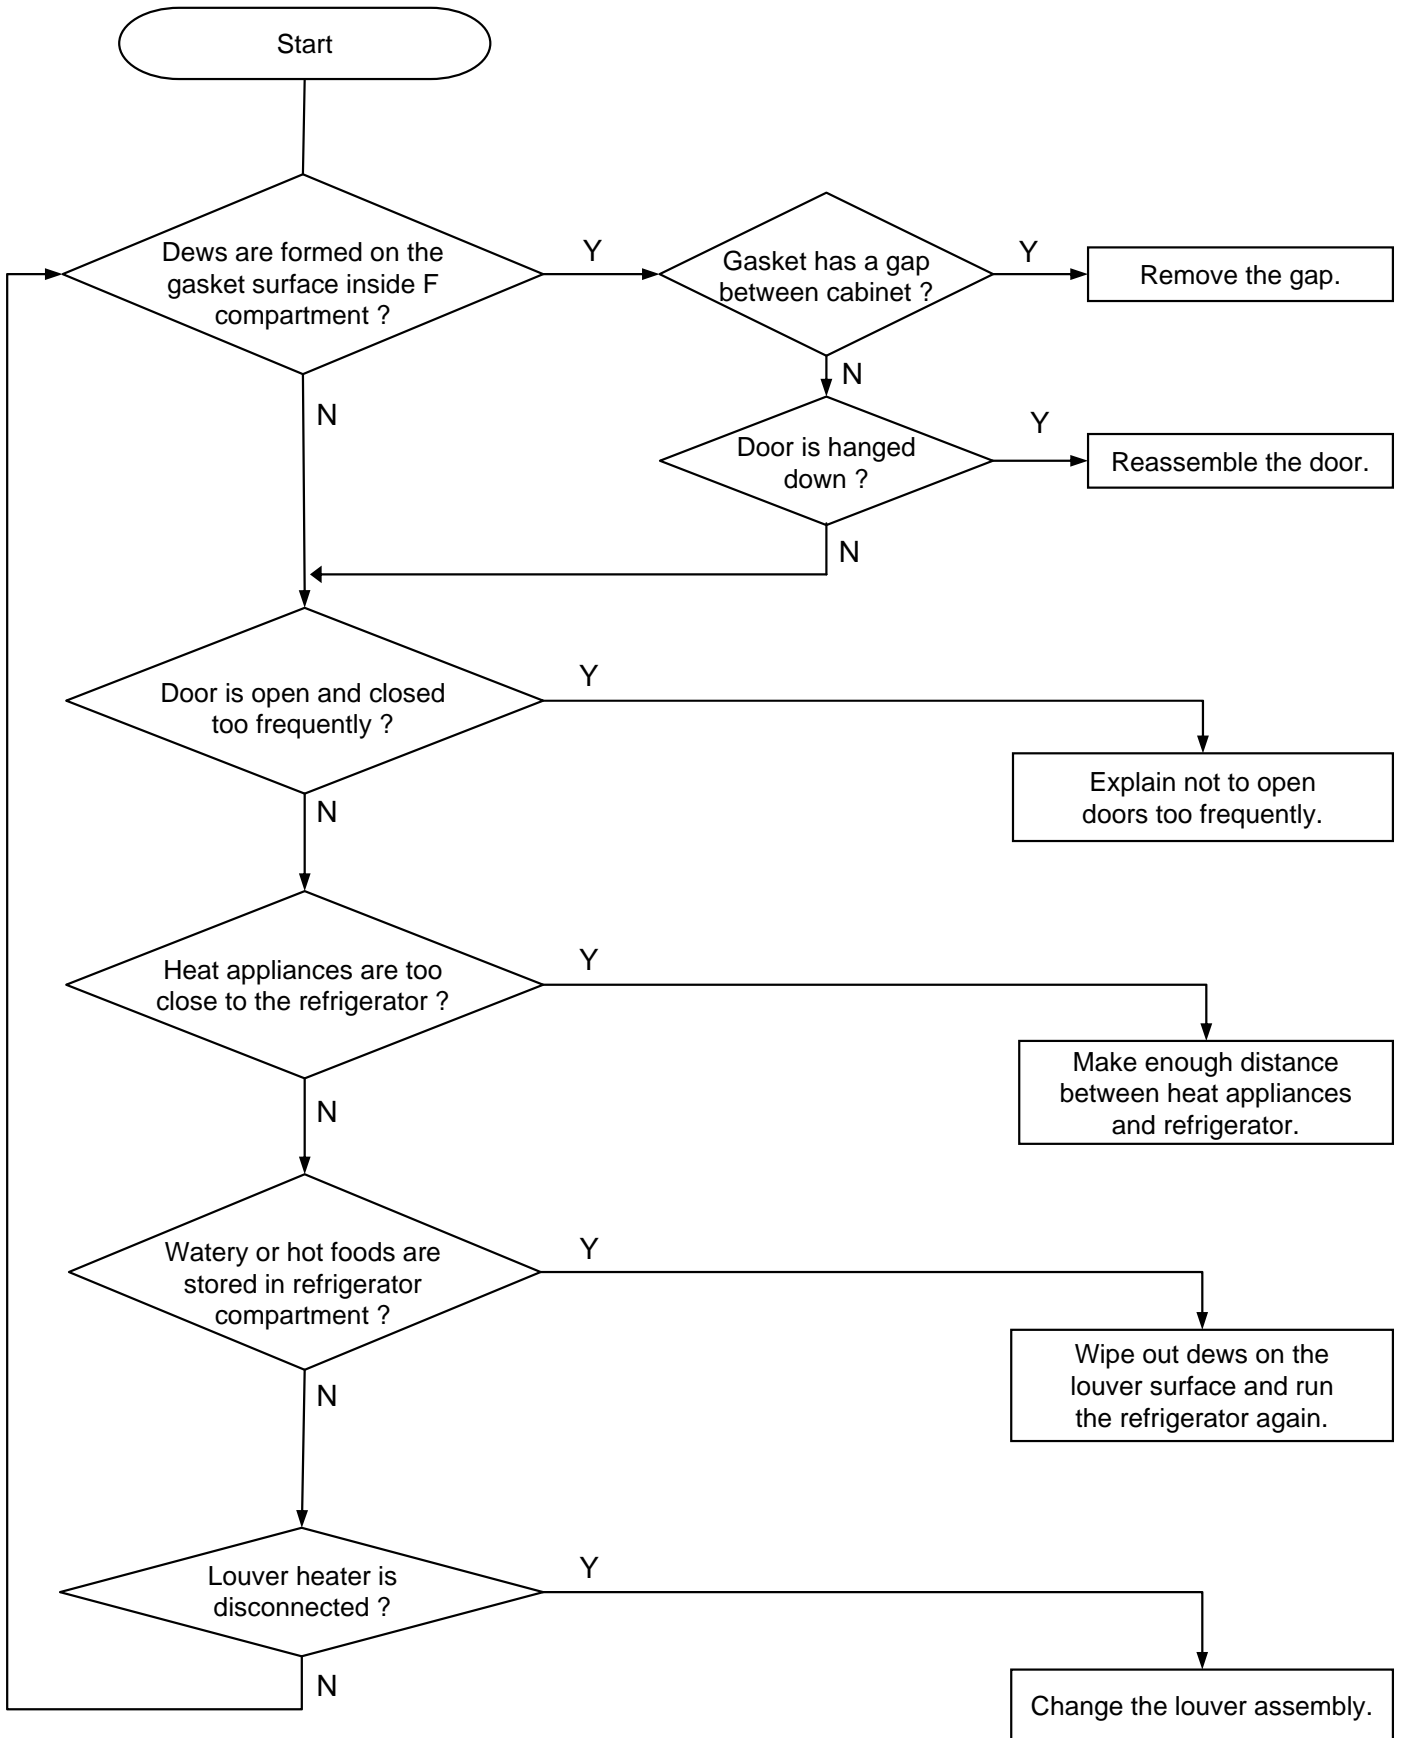

8-2-3. Disconnection / breaking of Freezer Lights Wires

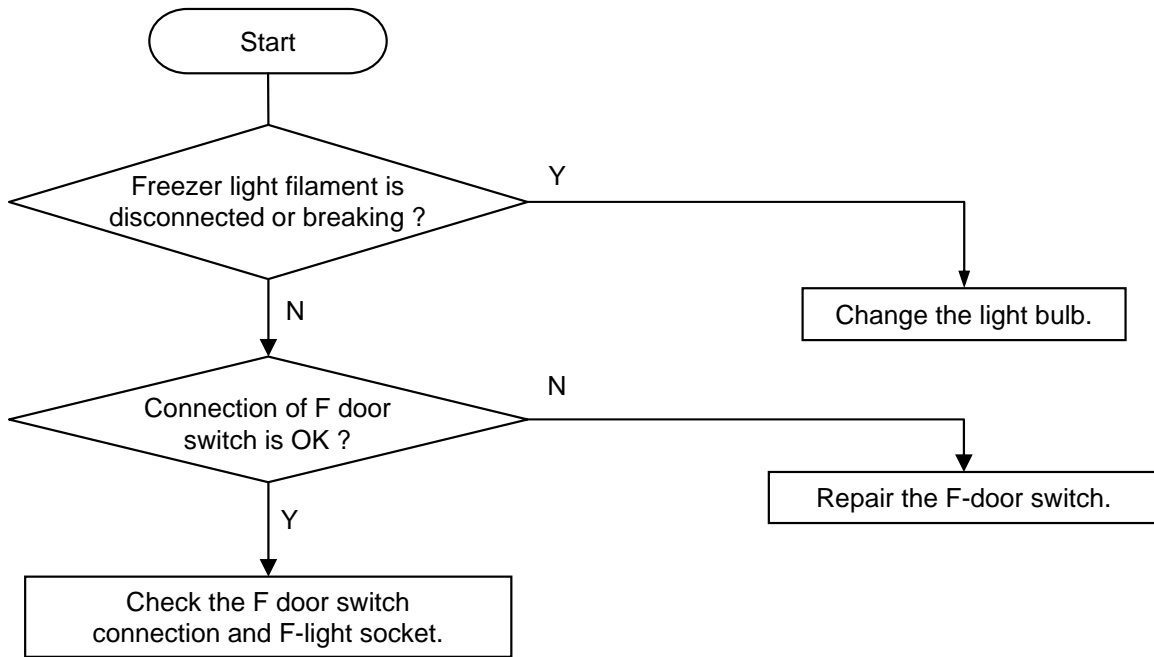

Change of F Lights

Change of F Door Switch



① * Remove 2 screws of light cover.



② * Hold the bottom of light cover and pull forward to remove.




③ * Change the light bulb. (AC240V 25W)

※ Follow the reverse order of disassembling after changing the light.



① * Insert a flat tip screw driver into a gap of door switch to pull forward.

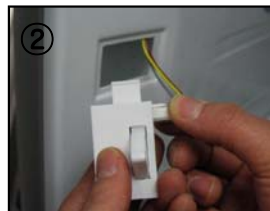


② * Disconnect the housing and change the switch for a new one.

※ Be careful when changing the switch. F and R door switch are different in type and shape.


※ Follow the reverse order of disassembling after changing the switch.

8-3. Refrigerator Compartment


8-3-1. Refrigeration failure (Foods does not get cool or cold soon.)

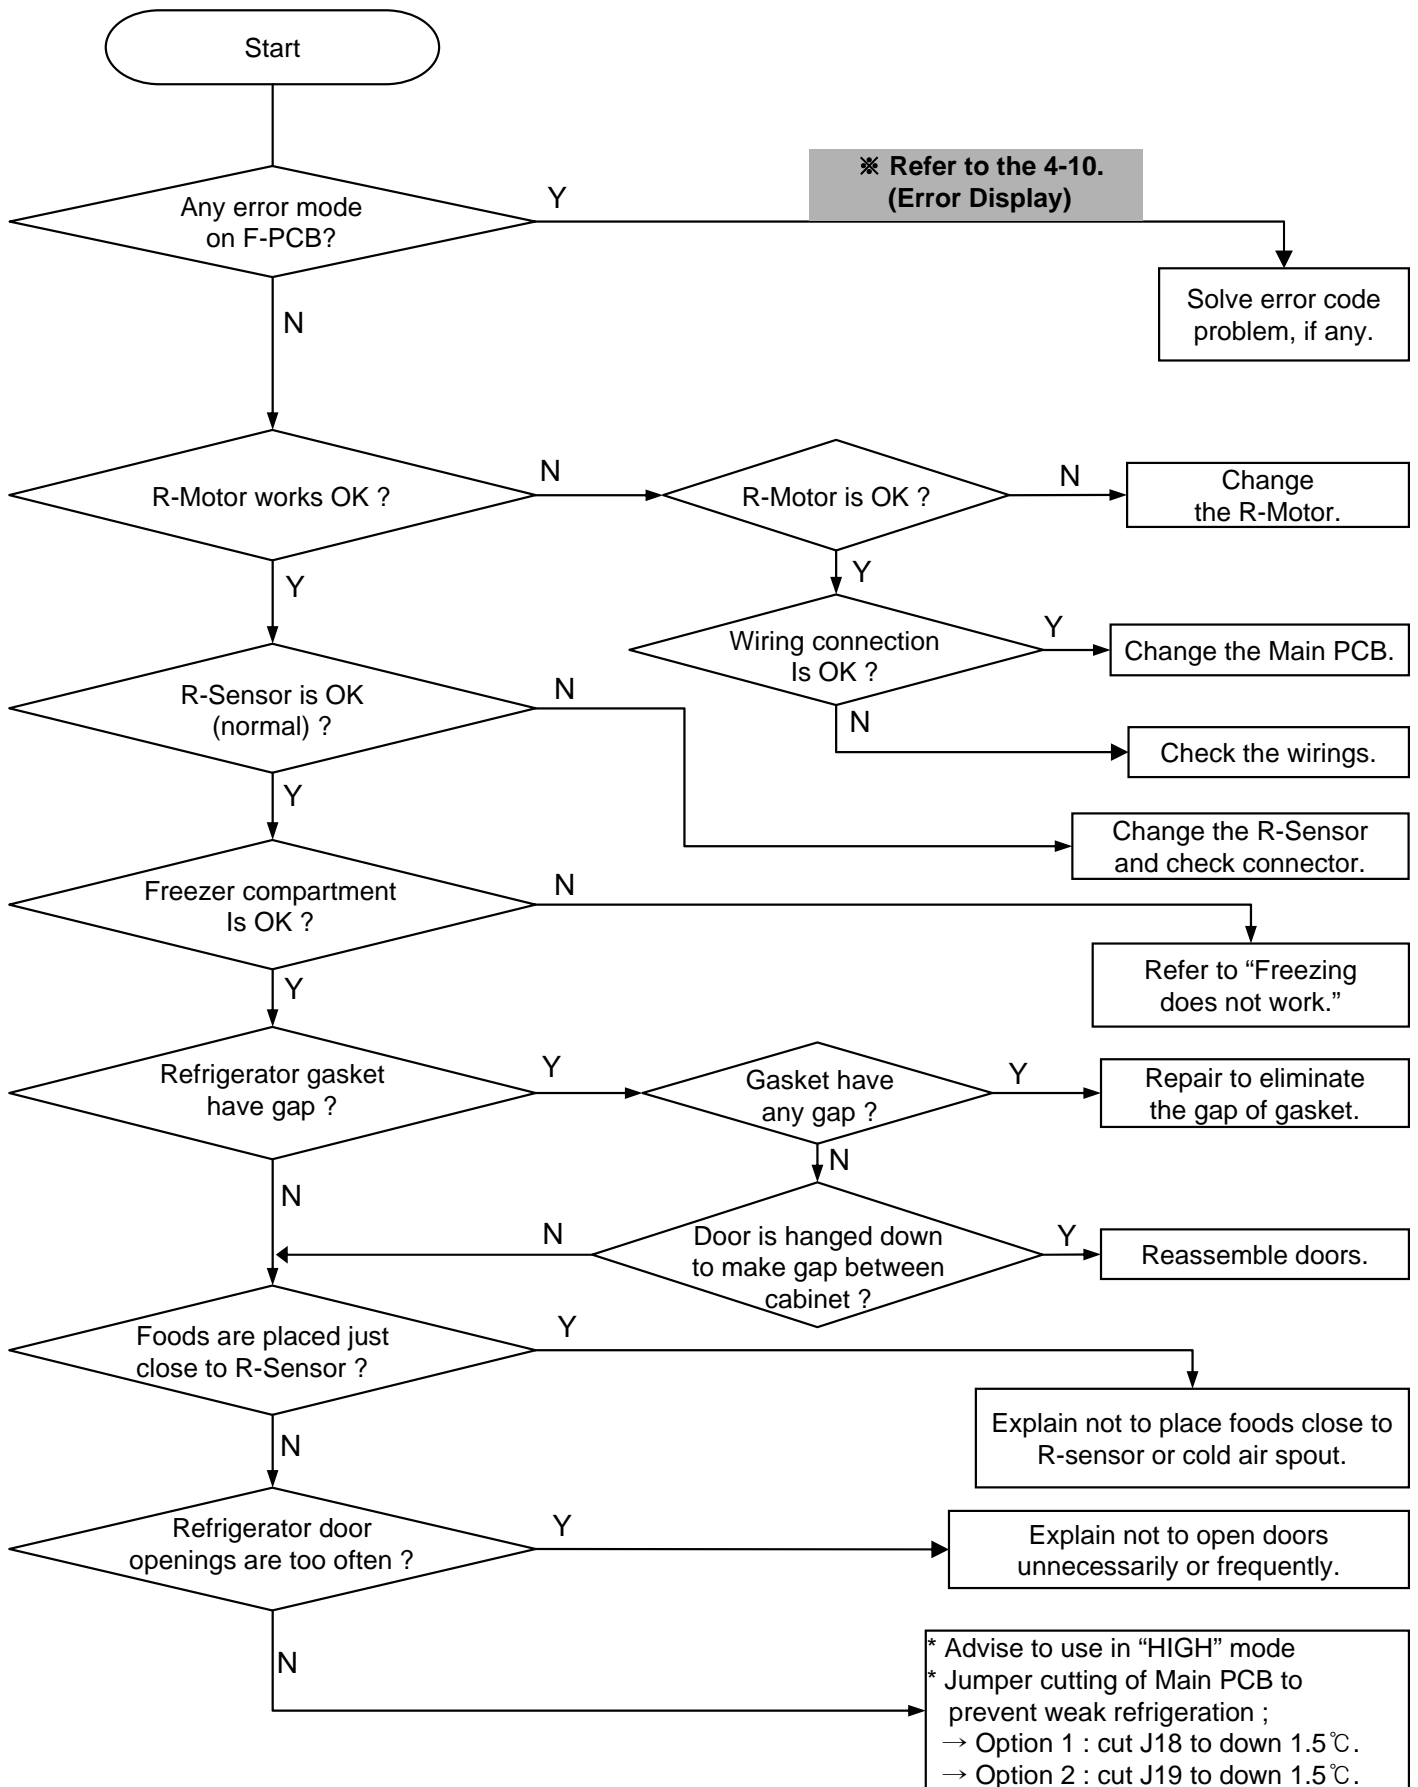

8-3-2. Disconnection / Breaking of Refrigerator Lights Wires

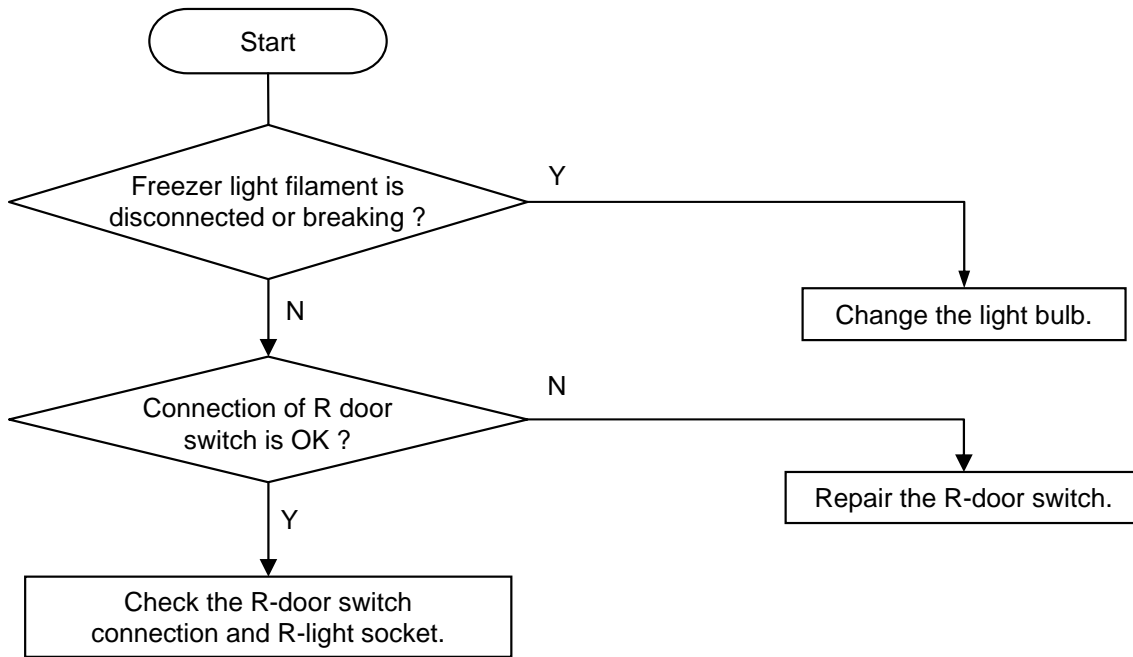

Change of R Lights

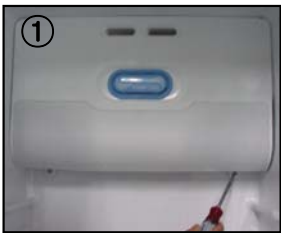

* Remove screws of light cover.



* Hold the bottom of cover and pull forward to remove.



* Change the light bulbs. (AC240V 25W)

※ Follow the reverse order of disassembling after changing the light.

Change of F Door Switch



* Insert a flat tip screw driver into a gap of door switch to pull forward.




* Disconnect the housing and change the switch for a new one.


※ Be careful when changing the switch. F and R door switch are different in type and shape.

※ Follow the reverse order of disassembling after changing the switch.


8-3-3. Dews on Refrigerator Compartment

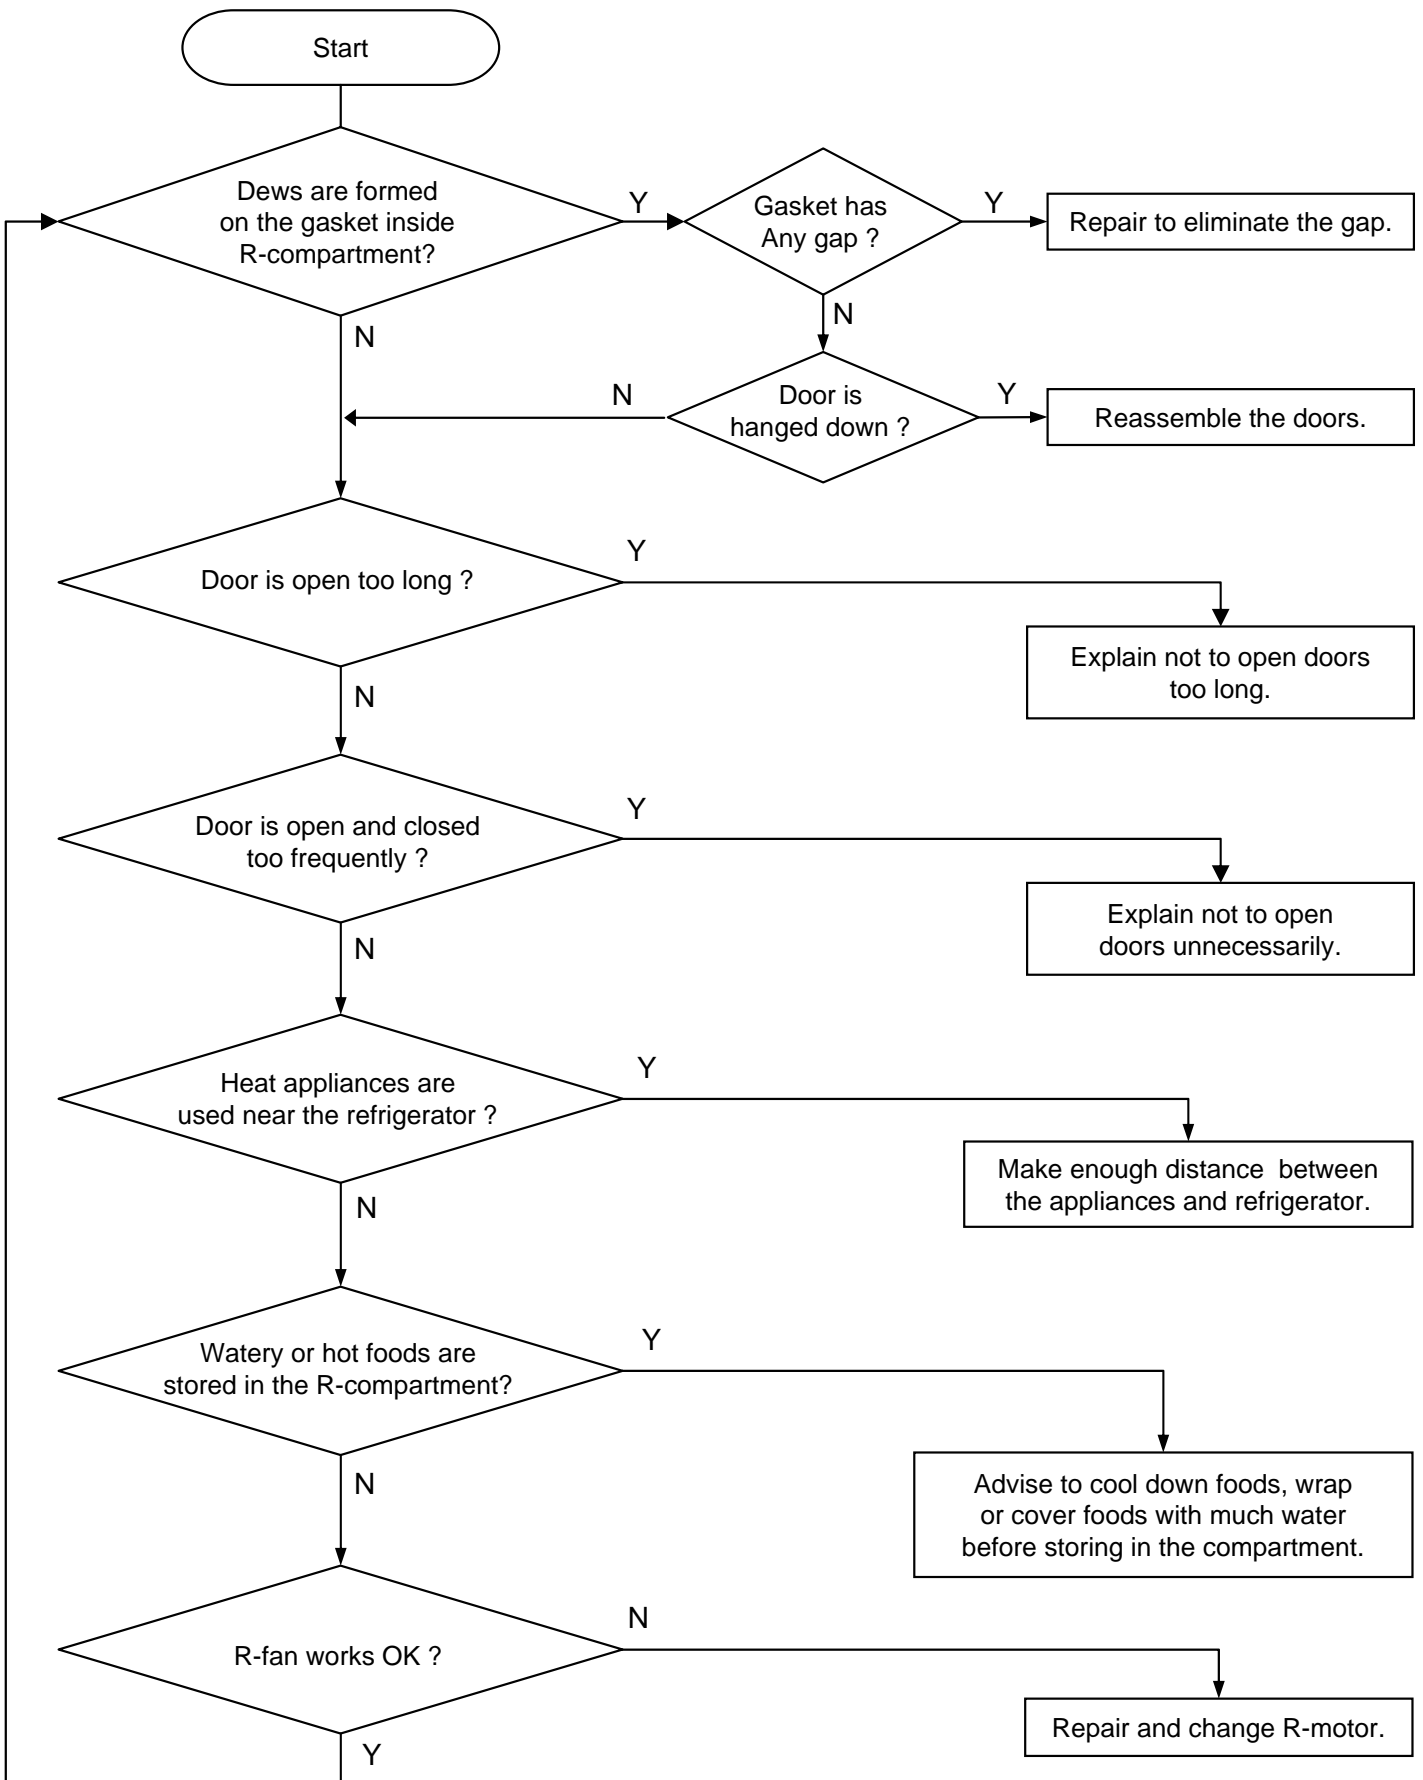

8-3-4. Excessive Refrigeration of Vegetable Case

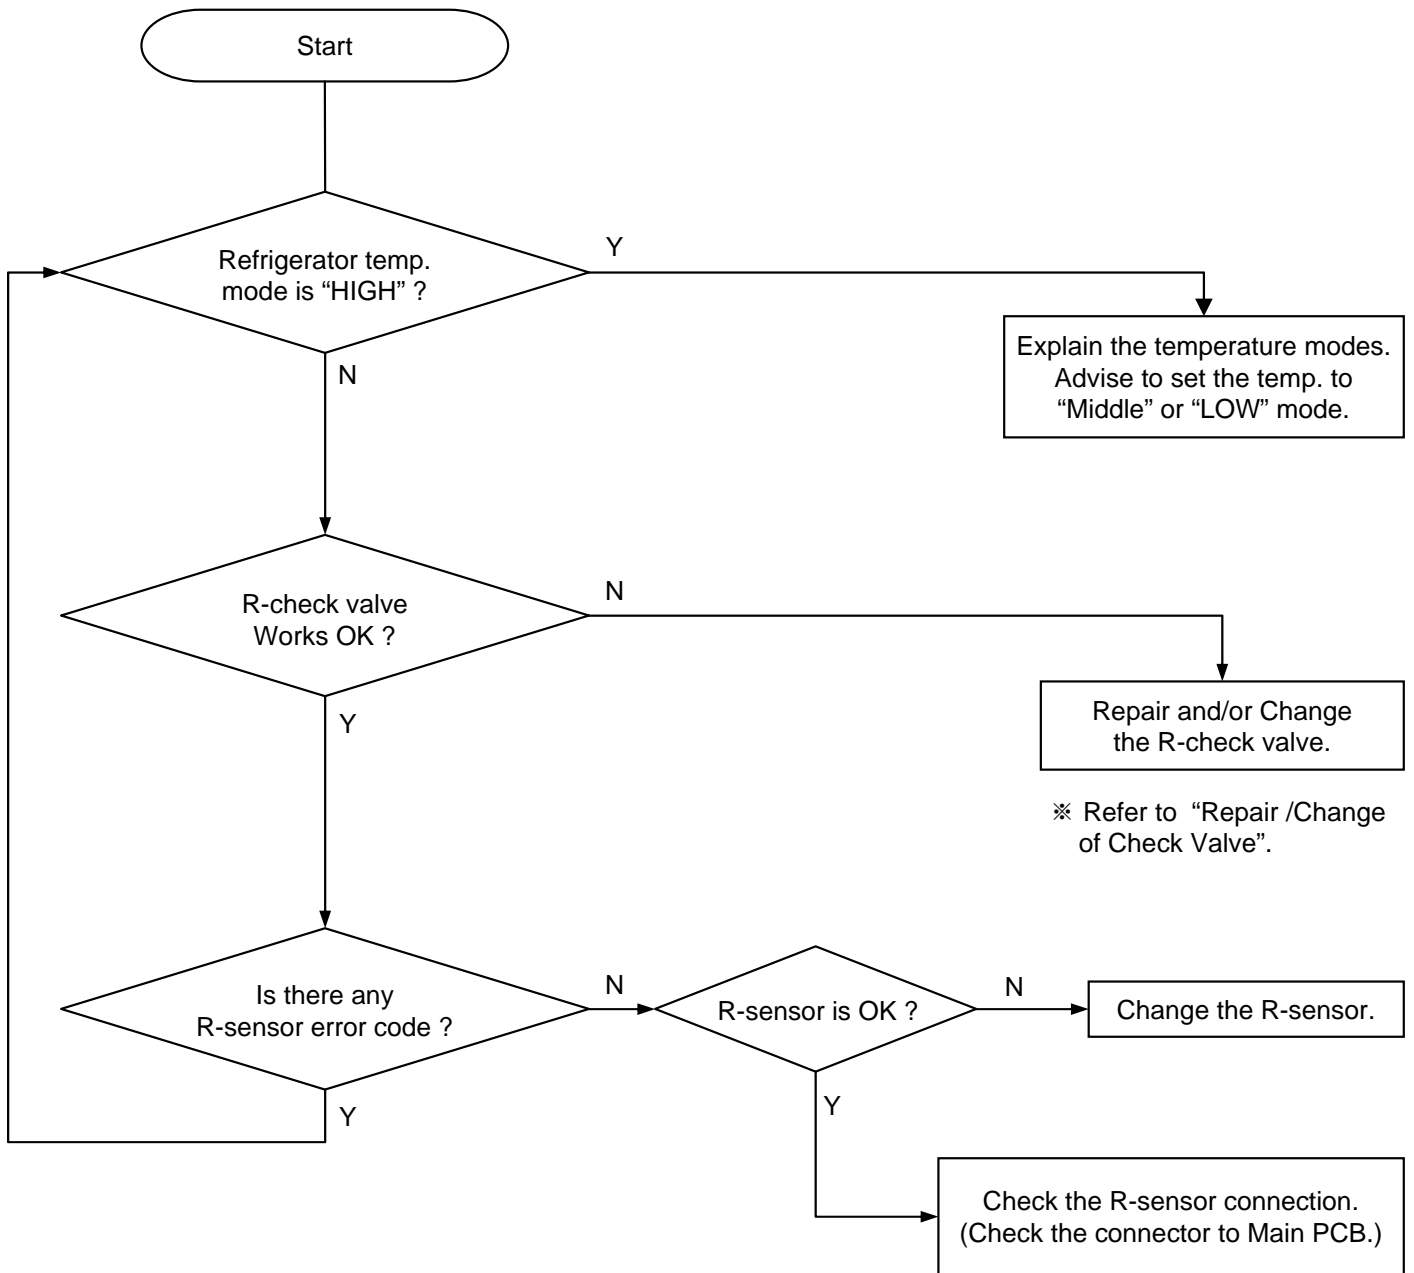

Removing of Check Valve

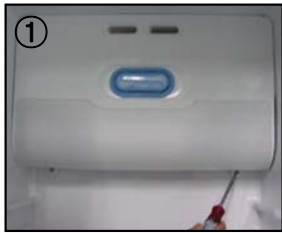

* Remove screws of light cover.



* Hold the bottom and right of damper to pull down to remove.



* Hold the bottom of cover and pull forward to remove.



* Lift up a piece of Check Valve Flap and insert a finger to the valve frame to hold out.



* Disconnect light housing.




* Remove screws with a (+)screw driver.



8-4. Operation Noise of Refrigerator


8-4-1. Comp. operation Noise

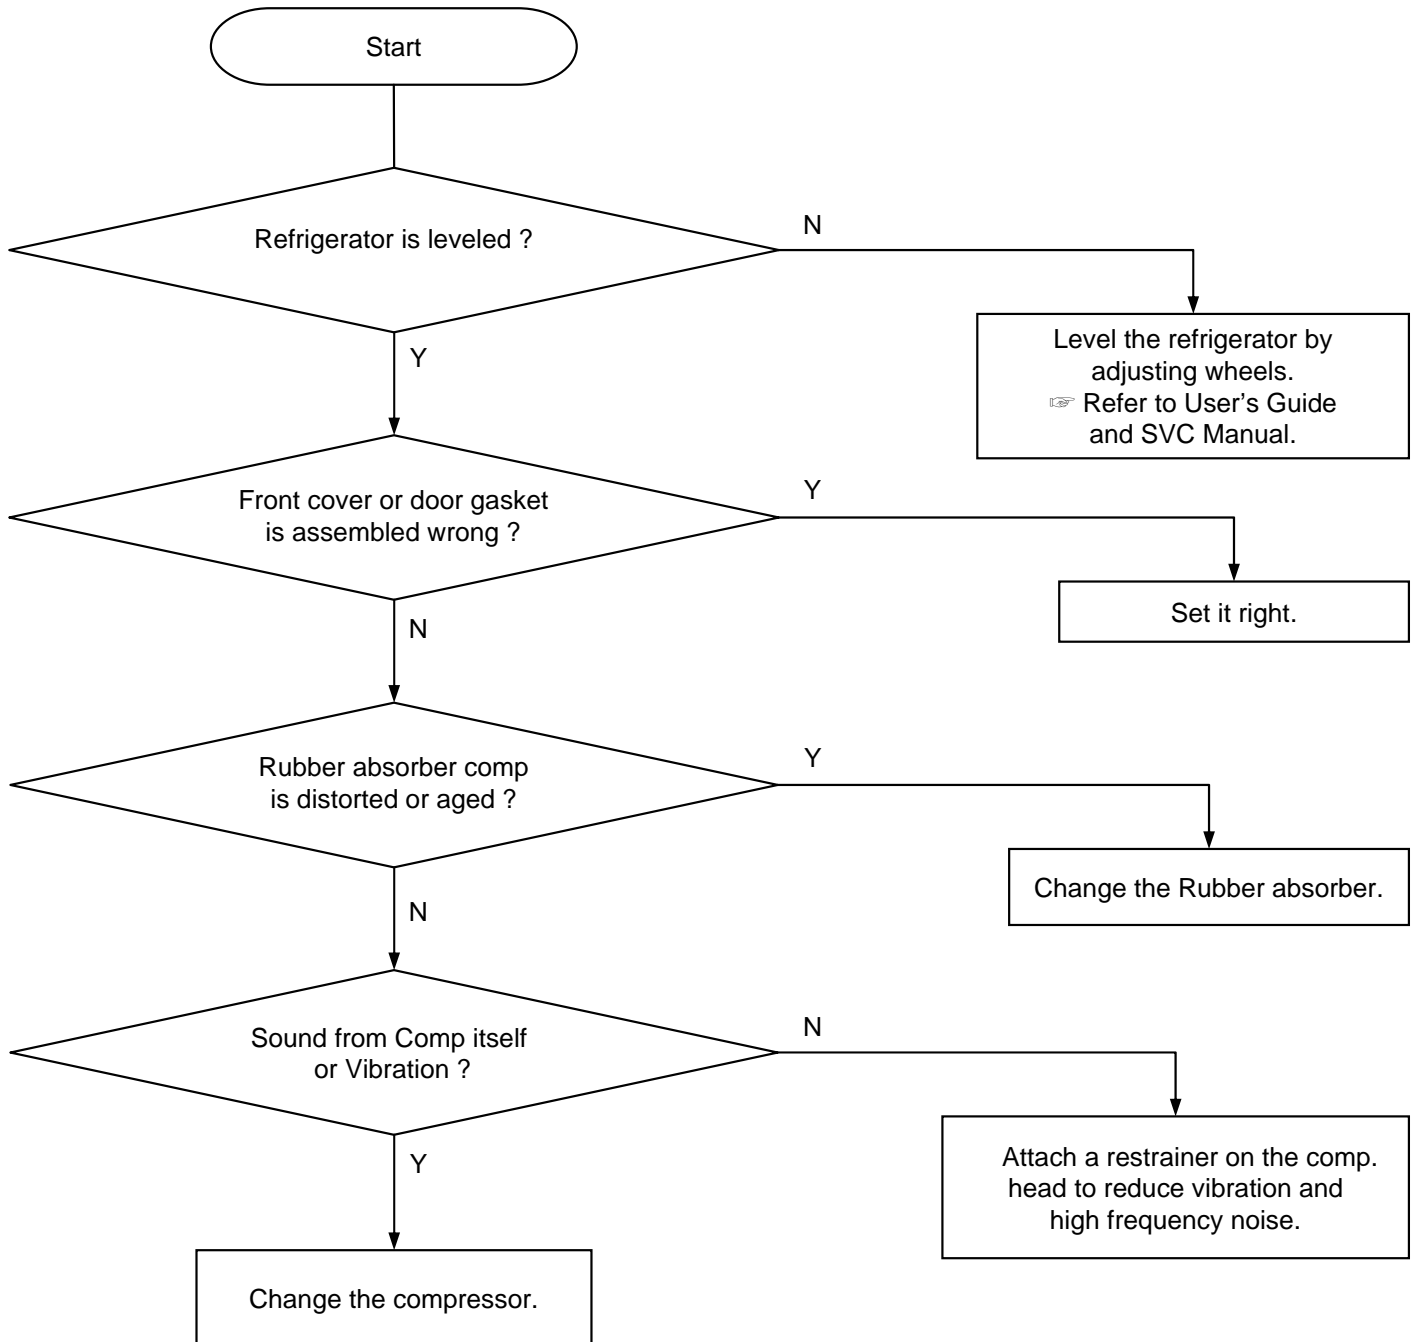

Remarks

- Compressor sound is somewhat normal because it works like a heart to circulate the refrigerant in the pipes during the refrigerator operation.
- Rattling or metallic touch sound of motor, piston of comp. can be heard when it starts or stops.

8-4-2. Refrigerant Flow Sound

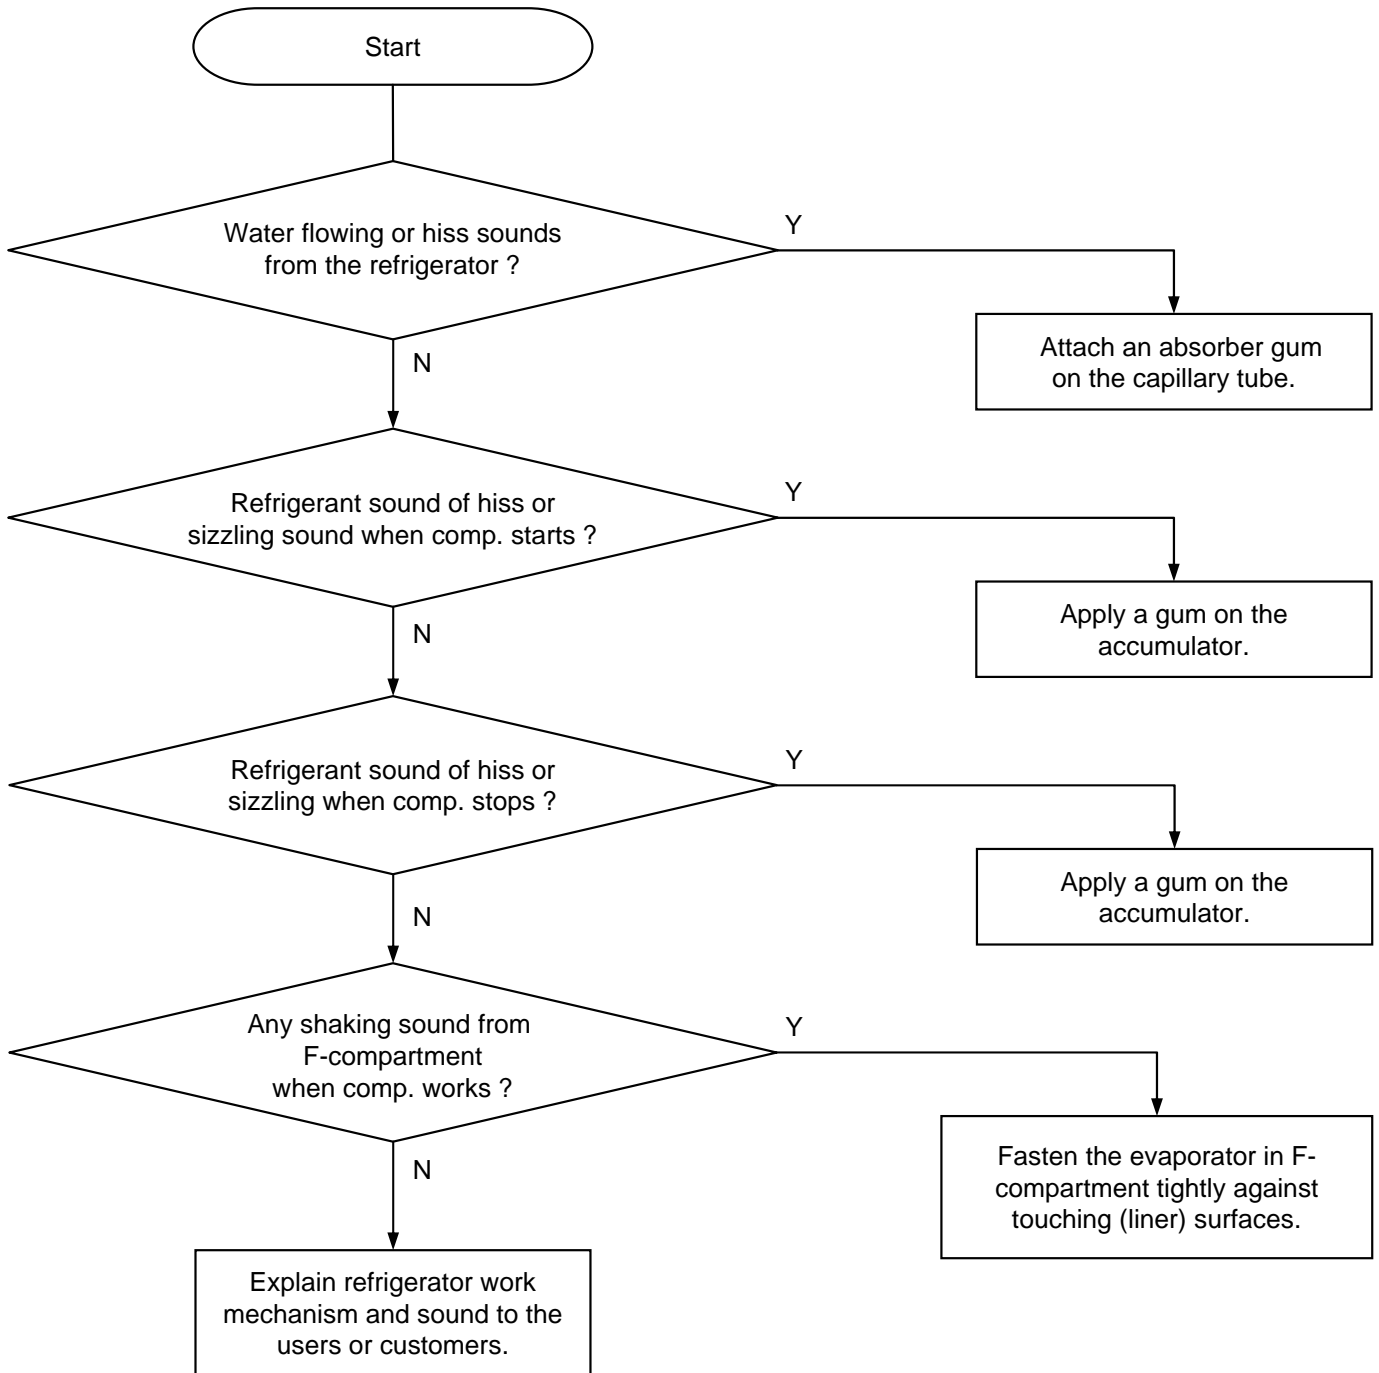


Remarks

● Water flowing sound, hiss or sizzling sound can make while refrigerant in the pipes is changing from liquid to gas state when comp. starts or stops. It is normal to the refrigerator.

Troubleshooting of Evaporator Sound

1. Hiss Sound from Capillary Tube

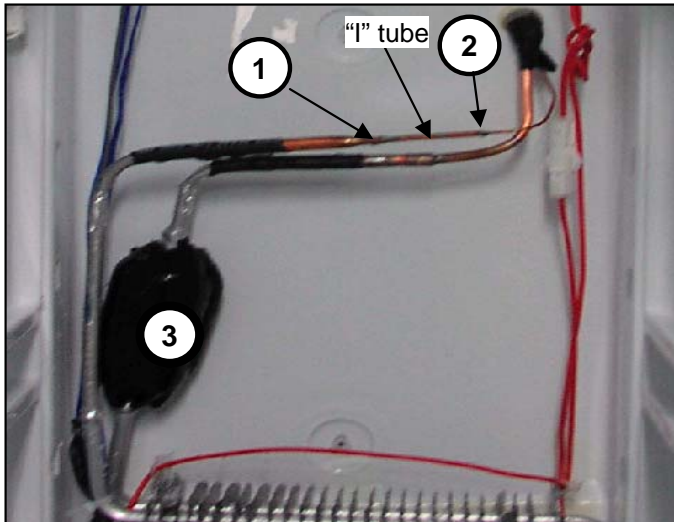


1) "I" tube is used to connect the capillary tube and evaporator.
(2 welding points : ①, ②)

2) When such a sound is made, attach a absorber on the tube including 2 welding points.

2. Sizzling Sound from Accumulator

Attach a absorber on point ③ (accumulator).


3. Shaking or trembling Sound of Evaporator

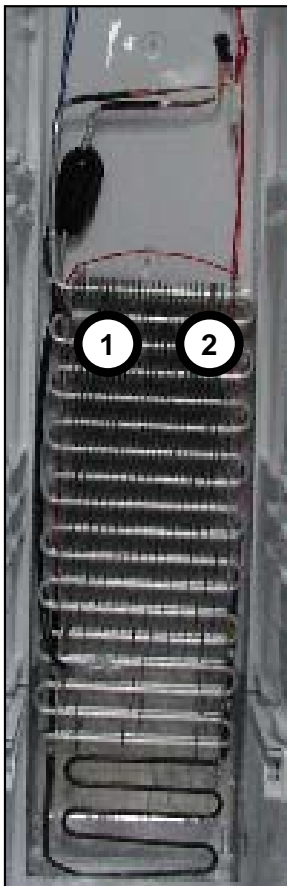

1) Check whether evaporator is fastened tight with the fasteners of ①, ②.

2) Insert a soft spacer (EPS) between left and right wall. Evaporator not to be shaken or trembled during refrigerator operation.

8-4-3. Fan Noise

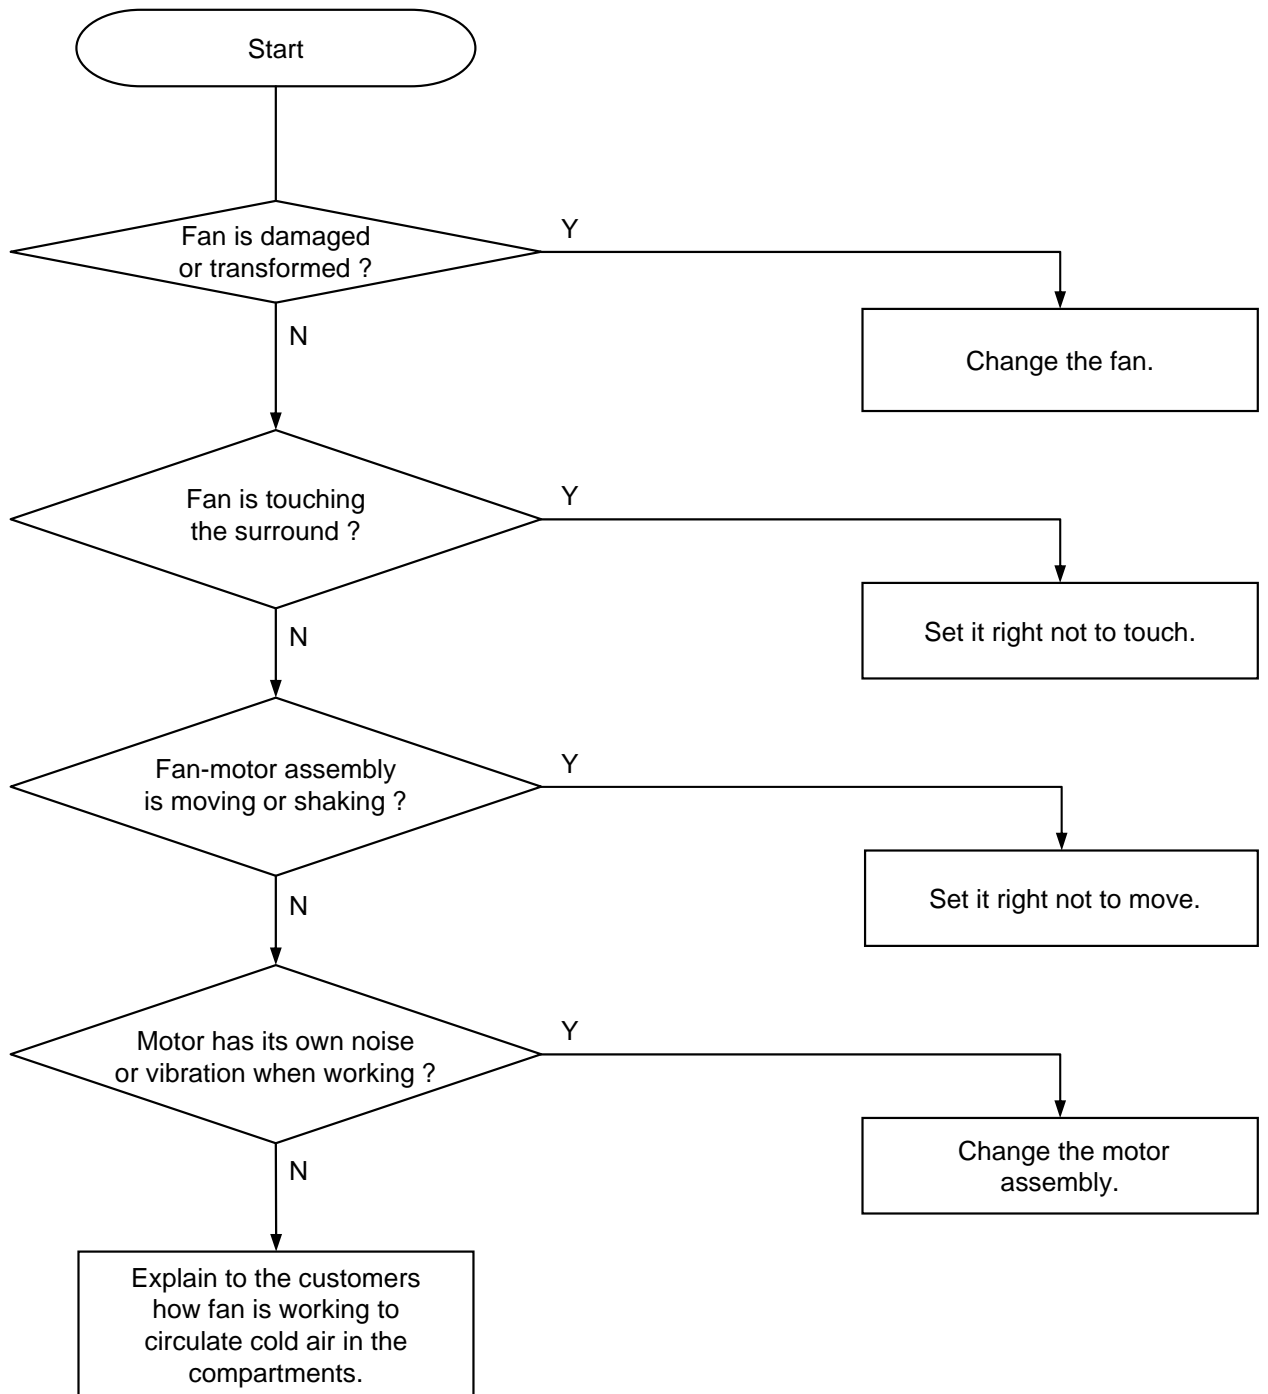

Remarks
<ul style="list-style-type: none"> ● The fan is sending out cold air to circulate it through the compartments. When the air is touching the surface of louver or liner wall, such sound can make.

Troubleshooting of Fan Noise

1. Fixing or Fastening of Fan Motor




- 1) Check if fan motor frame of the assembly is fastened tightly with screws to the liner wall. Unless it is tight, vibration of shaking can make.
- 2) Check if fan motor and fan are hanged down. Fan working sound can be louder if they are not set right.

2. Any Touch Sound from Fan



- 1) Check if sealing sponge on the insulator touches the fan. If so, set it again not to touch it.
- 2) If any damage on the insulator around the fan rotation is found, set the fan motor assembly right not to touch it.


8-4-4. Pipe Noise

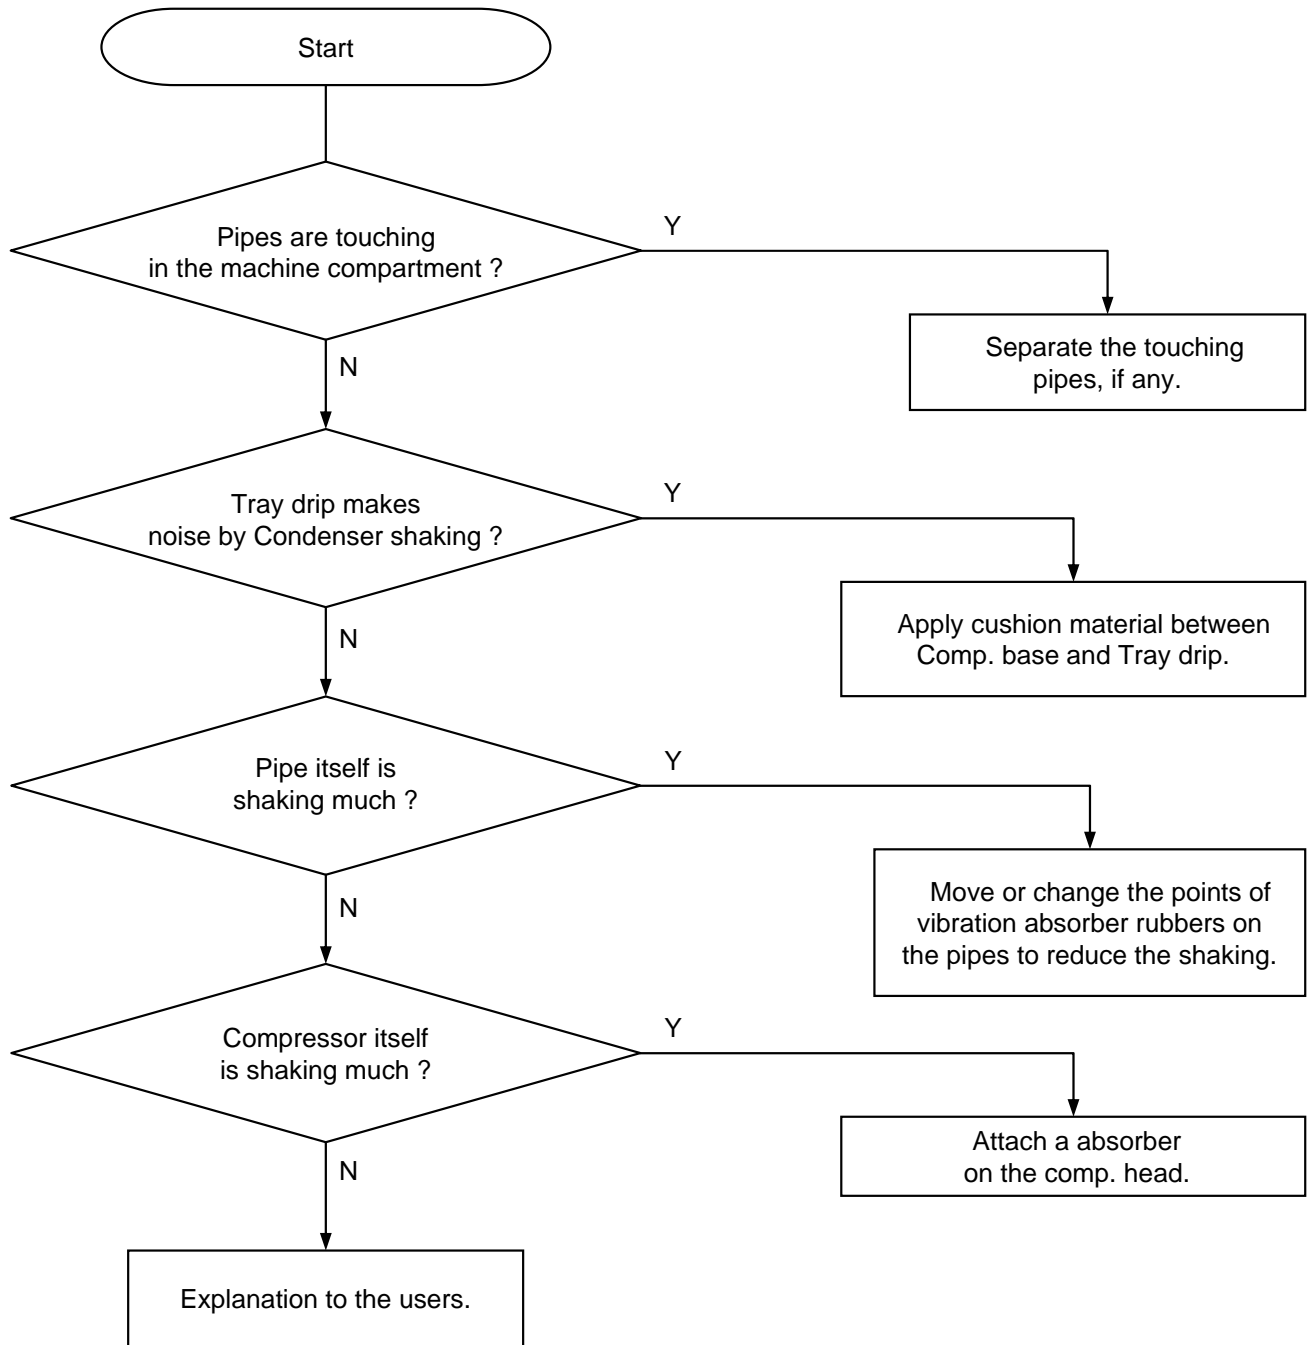

Remarks
<ul style="list-style-type: none"> ● Refrigerant is erupting rapidly from the compressor to circulate pipes, so pipe shaking noise can make to some degree. ● In case compressor vibration is sent to a pipe directly, apply vibration absorber rubbers to welding points of the pipe and comp. or to a much bent point on the pipe.

8-5. Door

8-5-1. Door Opening Alarm Continues though the door is closed.

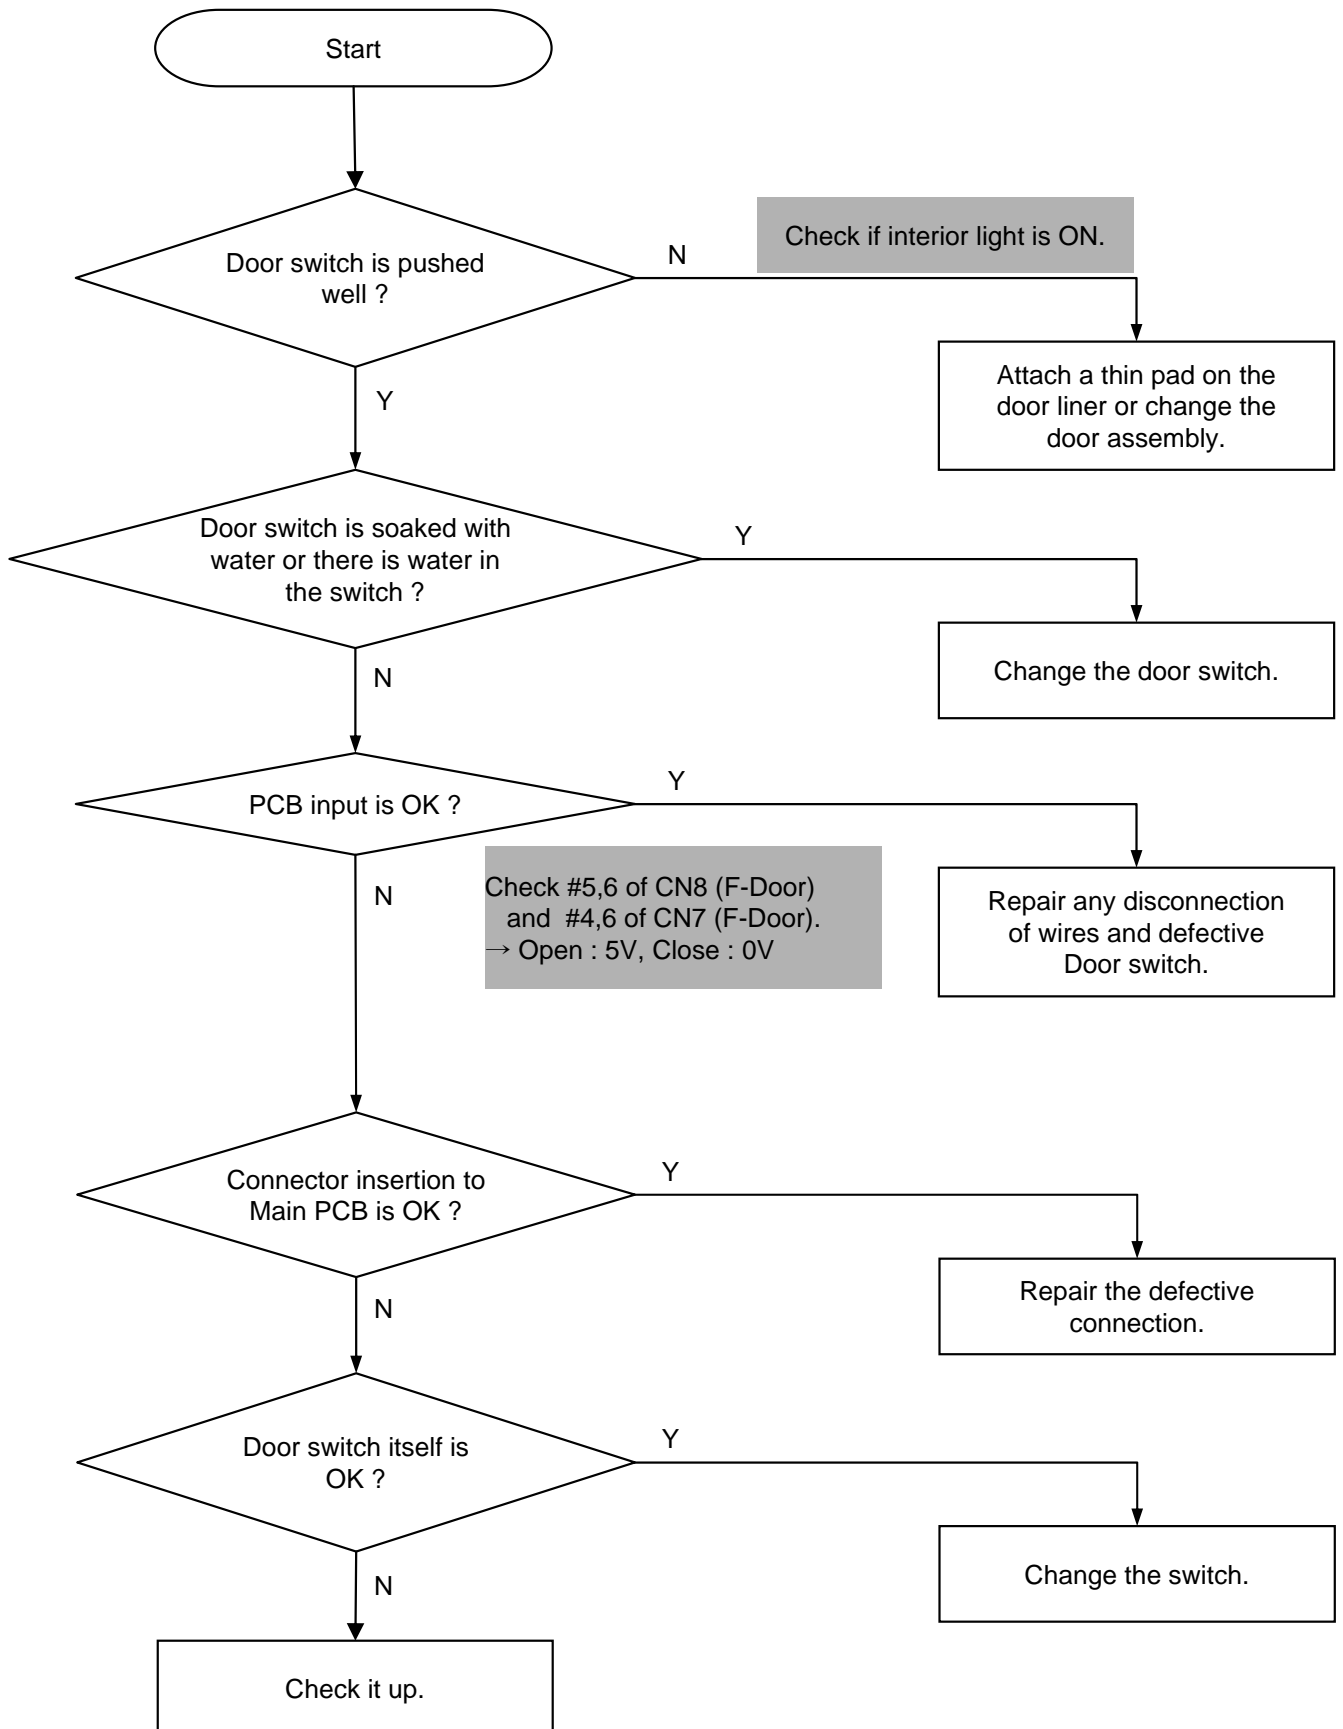


9. COOLING CYCLE HEAVY REPAIR



9-1. Summary of Heavy Repair



Process	Contents	Tools
Remove refrigerant Residuals	* Cut charging pipe ends (Comp. & Dryer) and discharge refrigerant from drier and compressor.	* Nipper, side cutters
Parts replacement and welding	* Confirm refrigerant (R-134a or R-600a) and oil for compressor and drier. * Confirm N2 sealing and packing conditions before use. Use good one for welding and assembly. * Weld under nitrogen gas atmosphere. * Repair in a clean and dry place.	* Pipe Cutter, Gas welder, N2 gas
Vacuum	* Evacuate for more than forty minutes after connecting manifold gauge hose and vacuum pump to high (drier) and low (compressor) pressure sides.	* Vacuum pump , Manifold gauge.
Refrigerant charging and charging inlet welding	* Weigh and control the bombe in a vacuum conditions with electronic scales and charge through compressor inlet (Process tube). * Charge while refrigerator operates). * Weld carefully after inlet pinching.	* Bombe (mass cylinder), refrigerant manifold gauge, electronic scales, punching off flier, gas welding machine
Check refrigerant leak and cooling capacity	* Check leak at weld joints. Note :Do not use soapy water for check. * Check cooling capacity → Check condenser manually to see if warm. → Check hot pipe manually to see if warm. → Check frost formation on the whole surface of the evaporator.	* Electronic Leak Detector, Driver.
Compressor compartment and tools arrangement	* Remove flux from the silver weld joints with soft brusher wet rag. (Flux may be the cause of corrosion and leaks.) * Clean tools and store them in a clean tool box or in their place.	* Copper brush, Rag, Tool box
Transportation and installation	* Installation should be conducted in accordance with the standard installation procedure. (Leave space of more than 5 cm from the wall for compressor compartment cooling fan mounted model.)	


9-2. Precautions During Heavy Repair

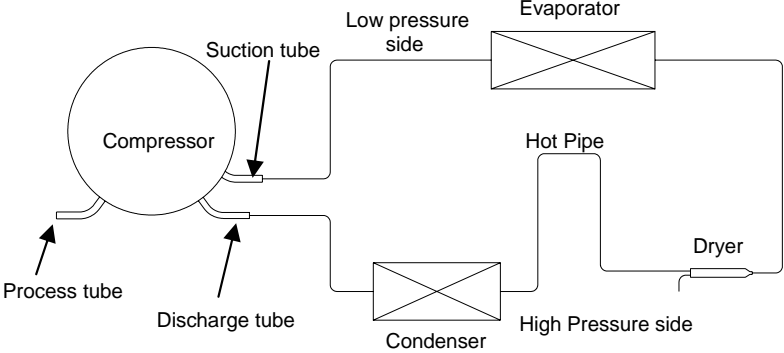Items	Precautions
Use of tools.	1) Use special parts and tools for R-134a or R-600a
Removal of retained refrigerant.	<p>1) Remove retained refrigerant more than 5 minutes after turning off a refrigerator. (If not, oil will leak inside.)</p> <p>2) Remove retained refrigerant by cutting first high pressure side (drier part) with a nipper and then cut low pressure side. (If the order is not observed, oil leak will happen.)</p> 
Replacement of drier.	1) Be sure to replace drier when repairing pipes and injecting refrigerant.
Nitrogen blowing welding.	1) Weld under nitrogen atmosphere in order to prevent oxidation inside a pipe. (Nitrogen pressure : 0.1~0.2 kg/cm ² .)
Others.	<p>1) Nitrogen only should be used when cleaning inside of cycle pipes inside and sealing.</p> <p>2) Check leakage with an electronic leakage tester.</p> <p>3) Be sure to use a pipe cutter when cutting pipes.</p> <p>4) Be careful not the water let intrude into the inside of the cycle.</p>

9-3. Practical Work for Heavy Repair

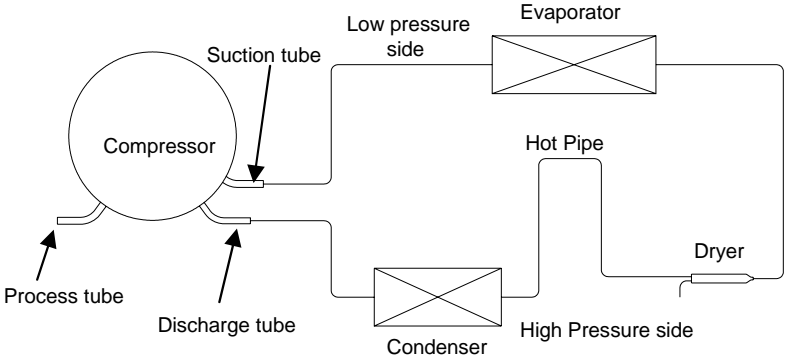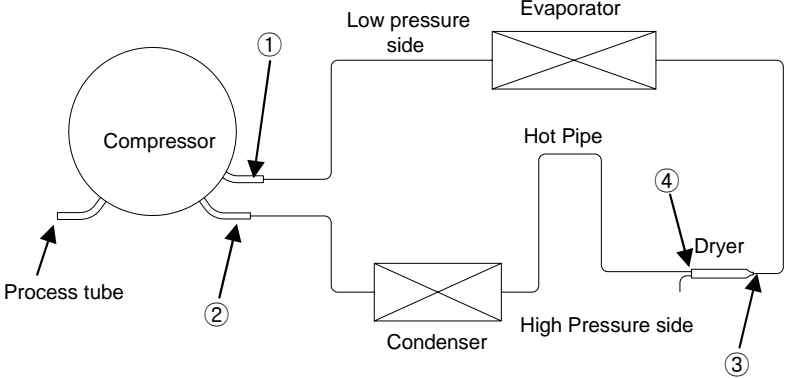Items	Precautions
<p>1. Removal of residual refrigerant.</p>	<p>1) Remove residual refrigerant more than 5 minutes later after turning off the refrigerator. (If not, compressor oil may leak inside.) 2) Remove retained refrigerant slowly by cutting first high pressure side (drier part) with a nipper and then cut low pressure side.</p> 
<p>2. Nitrogen blowing welding.</p>	 <p>* When replacing a drier: Weld ① and ② parts by blowing nitrogen (0.1~0.2kg/cm²) to high pressure side after assembling a drier.</p> <p>* When replacing a compressor: Weld ③ and ④ parts by blowing nitrogen to the low pressure side. Note) For other parts, nitrogen blowing is not necessary because it does not produce oxidized scales inside pipe because of its short welding time.</p> <p>※ KEYPOINTING Welding without nitrogen blowing produces oxidized scales inside a pipe, Which affect on performance and reliability of a product.</p>

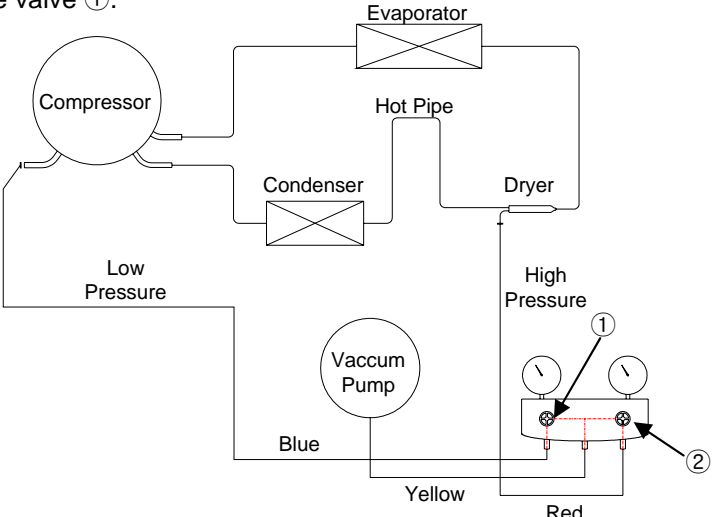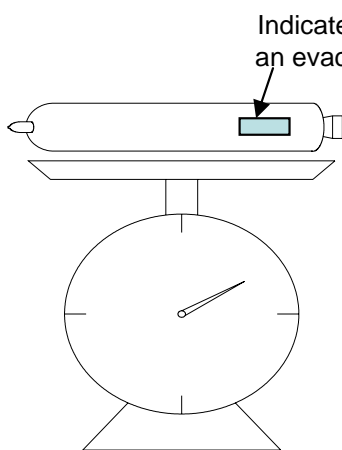
Items	Precautions
<p>3.Vacuum degassing.</p>	<p>* Pipe Connection Connect a red hose to the high pressure side and a blue hose to the low pressure side.</p> <p>* Vacuum Sequence Open ①,② valves and evacuate for 40 minutes. Close valve ①.</p>  <p>※ KEYPOINTING</p> <ol style="list-style-type: none"> 1) If power is applied during vacuum degassing, vacuum degassing shall be more effective. 2) Operate compressor while charging refrigerant. (It is easier and more certain to do like this.)
<p>4.Refrigerant charging.</p>	<p>* Charging sequence</p> <ol style="list-style-type: none"> 1) Check the amount of refrigerant supplied to each model after completing vacuum degassing. 2) Evacuate bombe with a vacuum pump. 3) Measure the amount of refrigerant charged. <ul style="list-style-type: none"> - Measure the weight of an evacuated bombe with an electronic scale. - Charge refrigerant into a bombe and measure the weight. Calculate the weight of refrigerant charged into the bombe by subtracting the weight of an evacuated bombe.  <p>※ KEYPOINTING</p> <ol style="list-style-type: none"> 1) Be sure to charge the refrigerant at around 25°C. 2) Be sure to keep -5g in the winter and +5g in summer. <p>Calculation of amount of refrigerant charged</p> <p>the amount of refrigerant charged = a weight after charging - a weight before charging (a weight of an evacuated cylinder)</p>

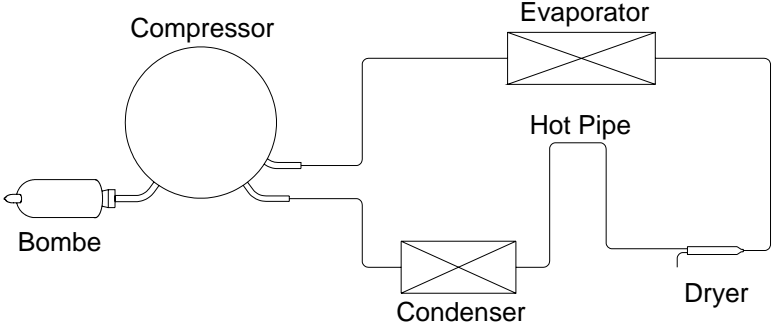Items	Precautions
4.Refrigerant charging.	<p>4) Refrigerant Charging Charge refrigerant while operating a compressor as shown above.</p> <p>5) Pinch a charging pipe with a pinch-off plier after completion of charging.</p> <p>6) Braze the end of a pinched charging pipe with copper brazer and take a gas leakage test on the welded parts.</p> 
5. Gas-leakage test	* Take a leakage test on the welded or suspicious area with an electronic leakage tester.
6. Pipe arrangement in each cycle	* Check each pipe is placed in its original place before closing a cover back-M/C after completion of work.

9-4. Standard Regulations for Heavy Repair

<ol style="list-style-type: none"> 1) Observe the safety precautions for gas handling. 2) Use JIG (or wet towel) in order to prevent electric wires from burning during welding. (In order to prevent insulation break and accident.) 3) The inner case shall be melted and insulation material (polyurethane) shall be burnt if not cared during welding inner case parts. 4) The copper pipe shall be oxidized by overheating if not cared during welding. 5) Not allow the aluminum pipes to contact to copper pipes. (In order to prevent corrosion.) 6) Make sure that the inner diameter should not be distorted while cutting a capillary tube. 7) Be sure that a suction pipe and a filling tube should not be substituted each other during welding. (High efficiency pump.)

9-5. Brazing Reference Drawings.

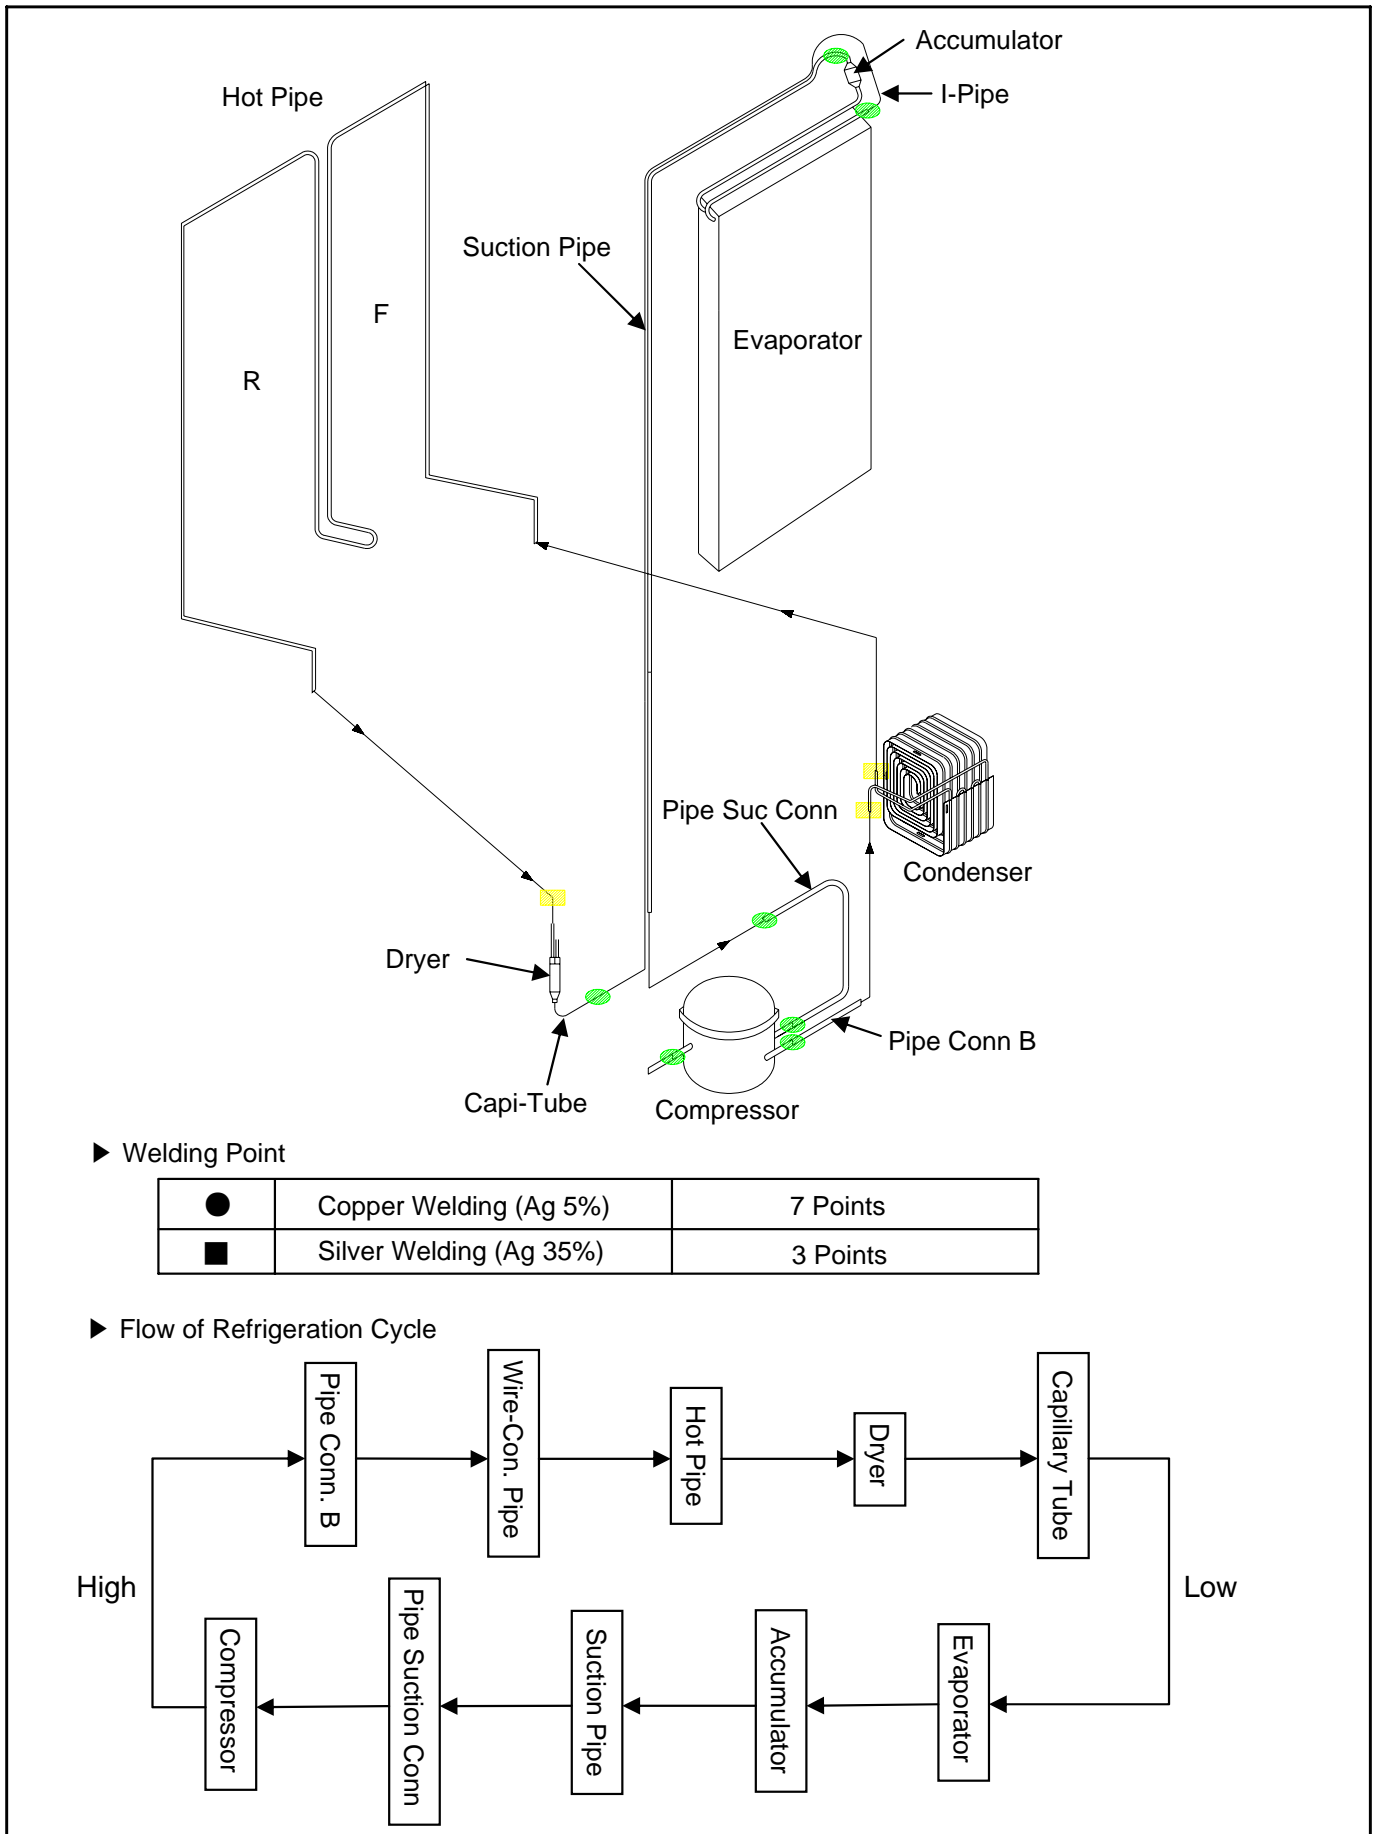


10. INSTALLATION GUIDE

10-1. Installation Preparation


Check if the refrigerator can pass a doorway or enter a door first.

Dimensions(including Door Handles)	
(Width*Depth*Height)	903mm X 734.5mm X 1790mm

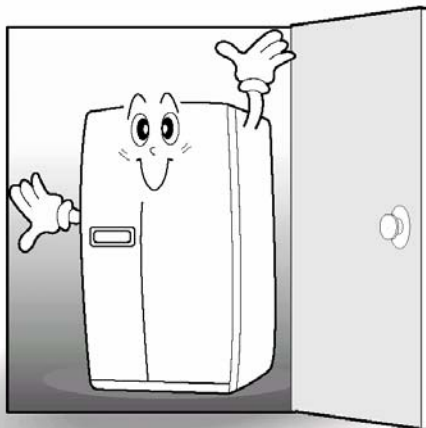


Find a suitable place to install

Sufficient space from refrigerator back to the
* wall for free air ventilation

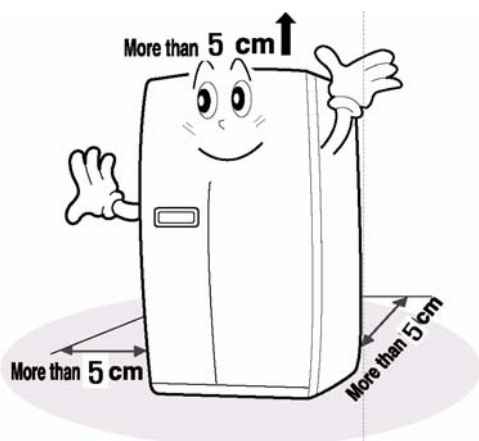

* Avoid direct sunlight.

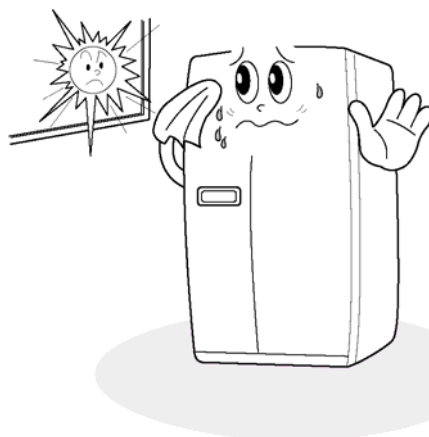
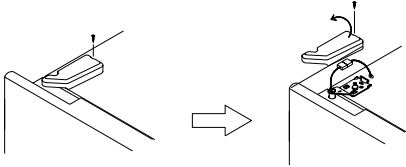
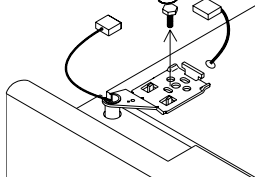
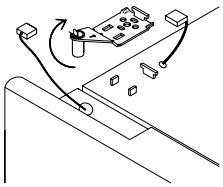
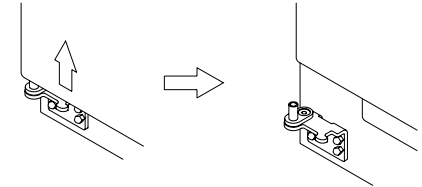


Once the installation place is ready follow the installation instructions.
If surround temperature of refrigerator is low (below 10°C)),
foods can be frozen or the refrigerator can work in abnormal way.





10-2. If the refrigerator can not enter the door

Removing Freezer Door

※ Remove front bottom cover first, if it is attached.


<p>1 Remove front bottom cover first, Pull out the left collar of the coupling first, then hold the coupling and pull out the left water tube. (Dispenser Models)</p> 	<p>2 Unscrew top hinge cover with a screw driver. Remove the hinge cover.</p> 	<p>3 Turn top hinge bolt counterclockwise. Disconnect the harness wires.</p> 
<p>4 Lift up the front of hinge to remove. (After the hinge is removed the door can fall down forward. Be careful !)</p> 	<p>5 Be careful not to damage the water line when removing the door.</p> 	

Removing Refrigerator Door

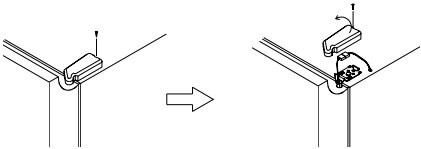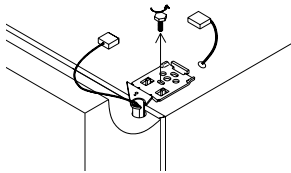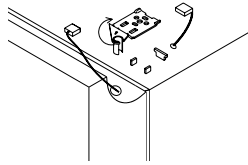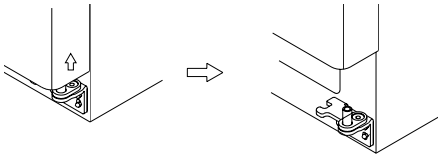
<p>1 Unscrew top hinge cover with a screw driver. Remove the hinge cover.</p> 	<p>2 Turn top hinge fastener counterclockwise. Disconnect harness wires.</p> 	<p>3 Lift up the front of hinge to remove. (After the hinge is removed the door can fall down forward. Be careful !)</p> 
<p>4 Lift the door straight up to remove.</p> 		

Replacing Freezer Door


- 1** Insert the water tube into the hole of the bottom hinge pin first (Dispenser Models). Insert the bottom of freezer door into the bottom hinge pin.

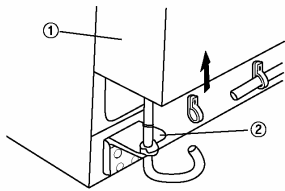


- 2** Insert the bottom hole of freezer door straight to the bottom hinge pin.

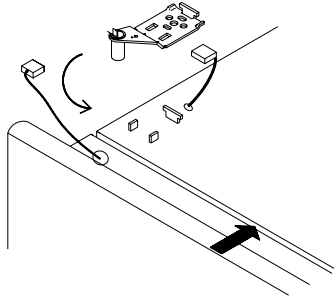

- 3** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of freezer door. (Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

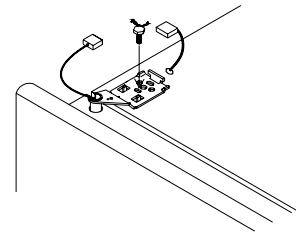

- 4** Turn the hinge fastener tightly to the end. Connect harness wire and screw ground wire.

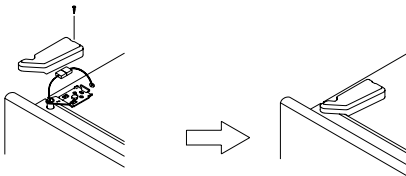


- 5** Insert the water tube far into the coupling. (Dispenser Model)




Replacing Refrigerator Door


- 1** Insert the bottom hole of refrigerator door straight to the bottom hinge pin.

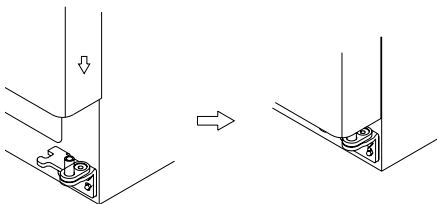

- 2** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of refrigerator door. (Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

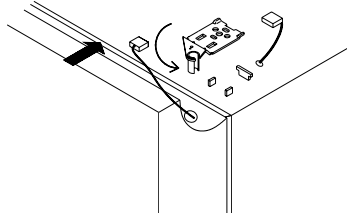

- 3** Turn the hinge fastener tightly to the end. Connect harness wirings and screw ground wire. Click and screw the top hinge cover.

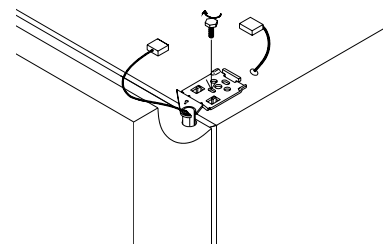


10-3. Refrigerator Leveling & Door Adjustment

※ Refrigerator must be level in order to maintain optimal performance and desirable front appearance.
(If the floor beneath the refrigerator is uneven, freezer and refrigerator doors look unbalanced.)


In case freezer door is lower than refrigerator door

Insert a screw driver (flat tip) into a groove of the left wheel (bottom of freezer) and turn it clockwise until the door is balanced.
(clockwise to raise freezer door ;
counterclockwise to lower)

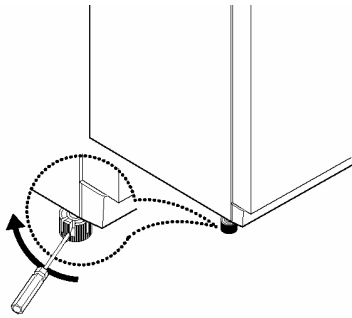

In case refrigerator door is lower than refrigerator door

Insert a screw driver (flat tip) into a groove of the right wheel (bottom of refrigerator) and turn it clockwise until the door is balanced.
(clockwise to raise refrigerator door ;
counterclockwise to lower)

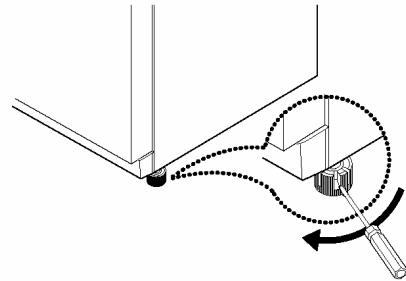

Caution

The front of refrigerator needs to be higher just a little than the back for easy door closing, but if the wheel is raised too much for door balance, i.e. front of refrigerator is too higher than the back, it can be difficult to open the door.

10-4. Water Line Installation

How to install Water Line

- The water pressure should be 3kgf/cm² or more to run the automatic icemaker.
 ※ Checkup your tap water pressure ; if a cup of 180cc is full within 10 seconds, the pressure is OK.
- When installing the water tubes, ensure they are not close to Any hot surface.
- The water filter only "filters" water ; it does not eliminate any bacteria or microbes.
- If the water pressure is not so high to run the icemaker, call the local plumber to get an additional water pressure pump.
- The filter life depends on the amount of use. We recommend you replace the filter at least once every 6months.
 ※ When attaching the filter, place it for easy access (removing & replacing)
- After installation of refrigerator and water line system, select [WATER] on your control panel and press it for 2~3 minutes to supply water into the water tank and dispense water.
- Use sealing tape to every connection of pipes/tubes to ensure there is no water leak.
- The water tube should be connected to the cold water line.

WATER SUPPLY KIT

※ Check the parts below for installing water supply. Some other necessary parts are available at your local service agents.



Connector
(3014454520)



Holder
(3012020700)



Screw x 4ea
(7112401211)



Fastener A x 3ea
(3011202000)





Filter Box
(3019974100)



Water tube A/B
(A:3019503200
B:3019503300)

Installation Procedure

- Join connector to water tap

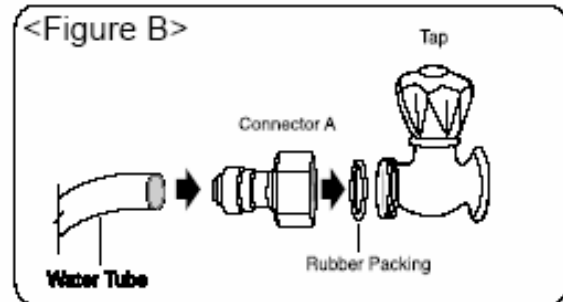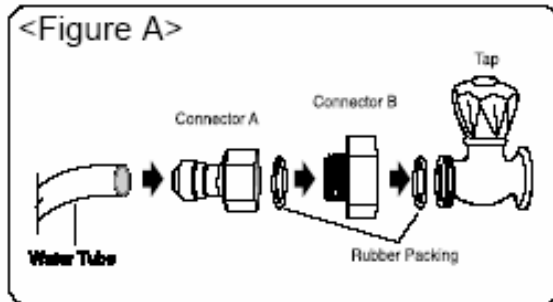


Place the rubber washer inside the tap connector and screw onto the water tap.

- Get ready to install water line


- 1) Measure an approximate distance between the filter and the Water Tube and cut the tube off filter vertically.
- 2) Connect the tubes to the filter as the figure shows.

Leave a sufficient distance when cutting the tubes.

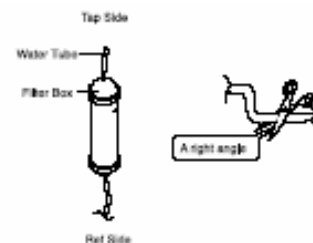


3. Remove any substance from filter

- 1) Open the main tap water valve and check if water comes out of the Water Tube.
- 2) Check if the Water Valve is open in case water does not come out.
- 3) Leave the valve open until clean water is coming out.
※ Initial water may contain some substances out of filter (manufacturing process).

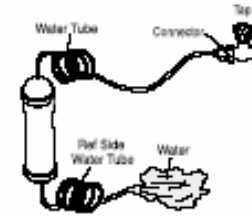

4. Attach the filter box


- 1) Screw and fasten the filter holder to the left/right side of the back of refrigerator.
※ In case the holder is not fastened well, remove the back paper of the tape on the filter holder and attach it.
- 2) Insert the filter box into the holder.

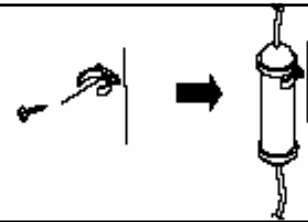

5. Connect water tube


- 1) Remove the rear cover at the bottom back of the refrigerator.
- 2) Insert the fastening ring into the Water tube.
(Be careful to follow the direction of the nut.)
- 3) Insert the Water Tube into the top of Water Valve, turn the nut clockwise to fasten it. (The Water valve is to the right of the motor.)
- 4) Check for any bent tubes or water leaks; if so, re-check installation procedure.
- 5) Replace the rear cover. (The Water Tube should be placed between the groove of the refrigerator back and motor cover.)

Set the tube upright as the figure shows.

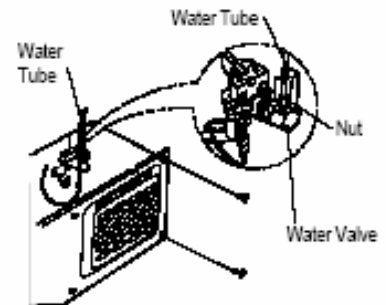


6. Fasten water tube

- 1) Fasten the Water Tube with the [Fastener A].
- 2) Check if the tube is bent or squeezed. If so, set it right to prevent any water leak.

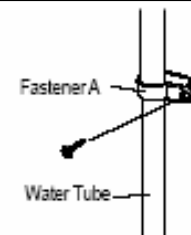



7. After installation

- 1) Plug the refrigerator, press the [WATER] button on the control panel for 2~3 minutes to remove any air (bubble) in the pipes and drain out the initial water.
- 2) Check the water leak again through the water supply system (tubes, connectors and pipes) Rearrange the tubes again and do not move the refrigerator.

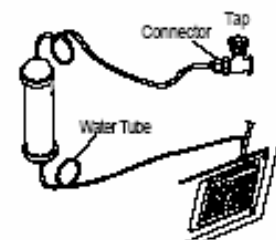

10-5. Dispenser Water Flow


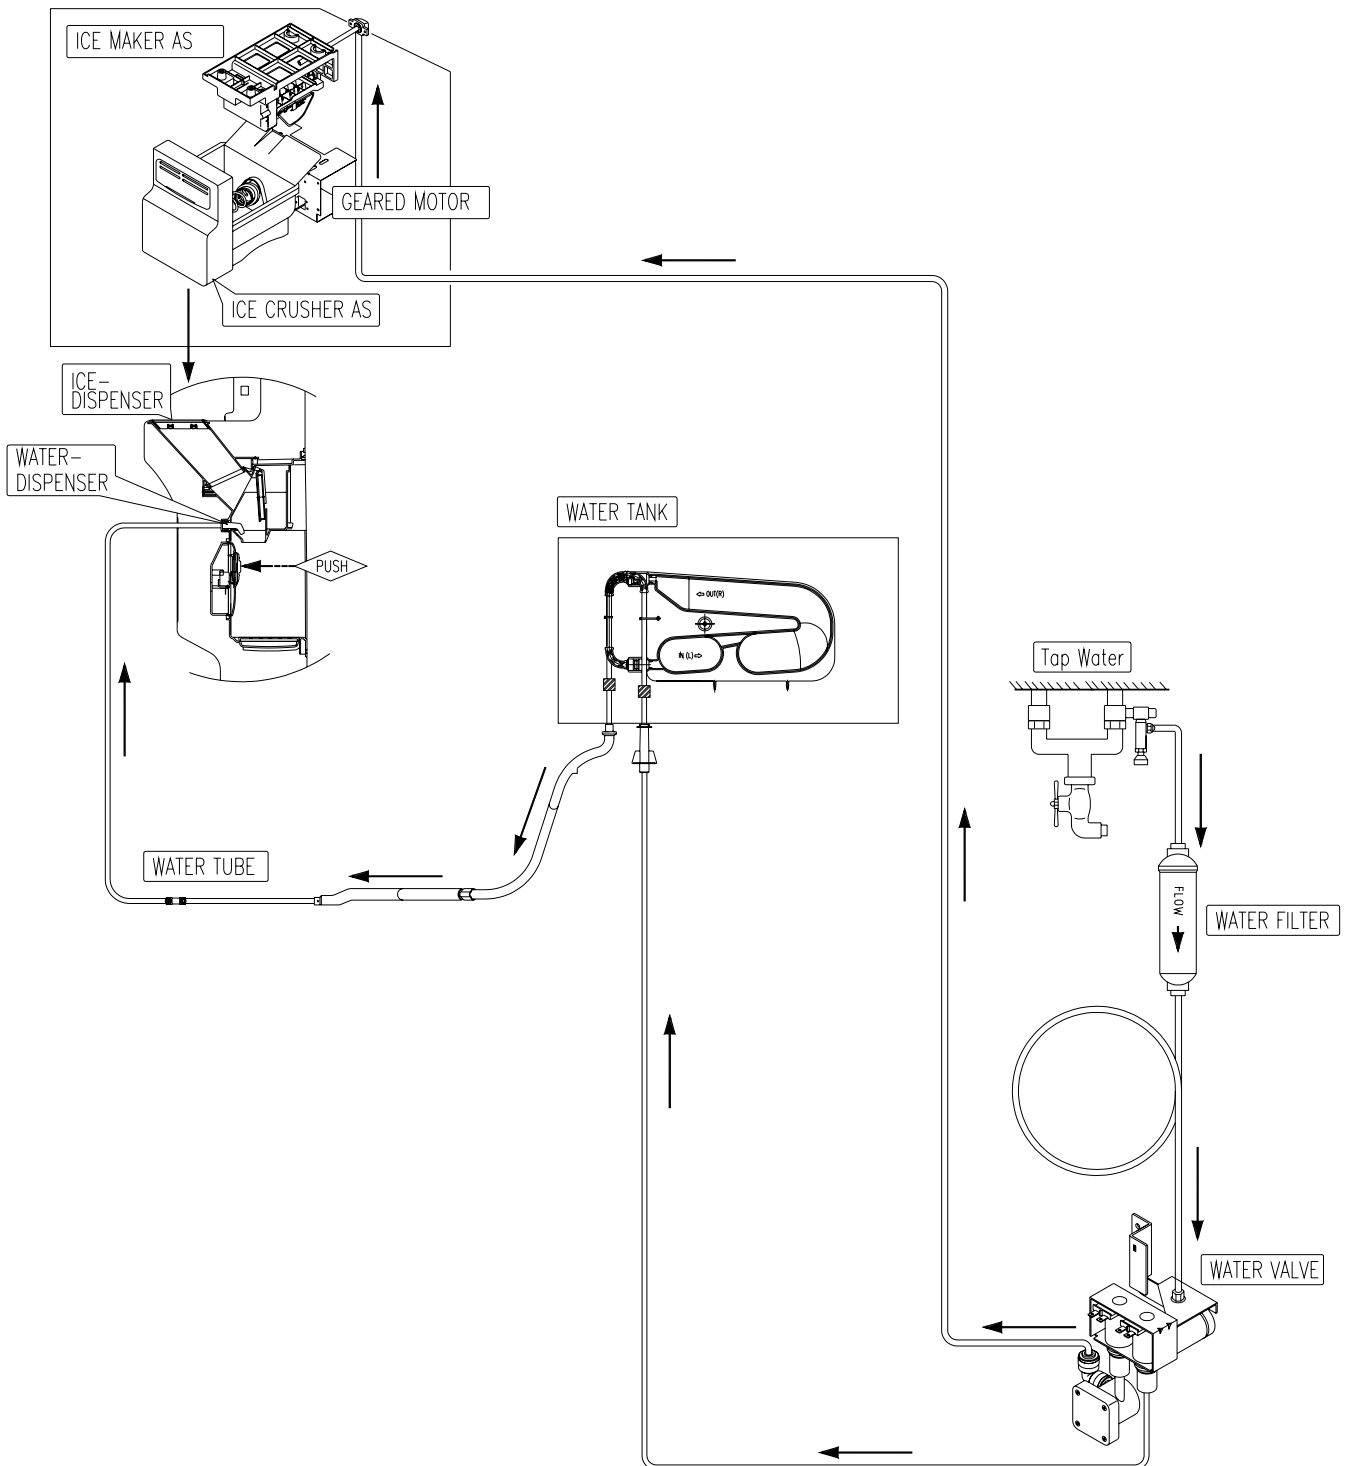


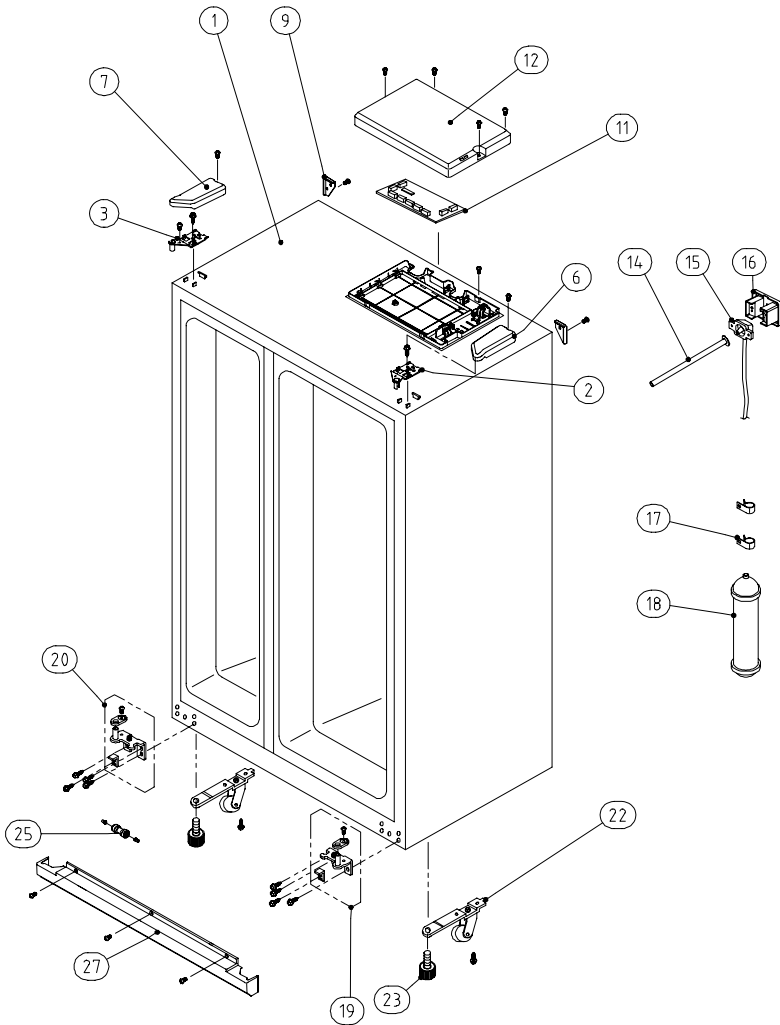

NO	PART-CODE	PART NAME	SPEC.	Q'ty			
				201E	20BE	20D(E)E	20F(G)E
1		ASSY CAB URT		1	1	1	1
2	3012924400	HINGE *T *R AS	PO T3.0+PAINT	1	1	1	1
3	3012924300	HINGE *T *L AS	PO T3.0+PAINT	1	1	1	1
6	3011446200	COVER HI *T *R	PP	1	1	1	1
7	3011446100	COVER HI *T *L	PP	1	1	1	1
9	3010968400	CAP CAB COVER	PP	2	2	2	2
11	30143D6061	PCB MAIN AS	INNER BASIC (R-134a)	1	X	X	X
	30143E1020		BASIC (R-134a)	X	1	X	X
	30143E1060		BASIC (R-600a)	X		X	X
	30143D5072		FRU-541F (R-134a)	X	X	1	1
	30143D5062		FRU-541F (R-600a)	X	X		
12	3011446001	COVER M/PCB BOX	PP(FB-72)	1	1	1	1
14	3013224800	HOSE I/MAKER TUBE AS	FRU-541D			1	1
15	3012519210	GUIDE CAB W/TUBE A AS	L1525			1	1
16	3011444100	COVER GUIDE CAB W/TUBE A	PP	X	X	1	1
17	3011202000	CLAMP TUBE	PA-66,5N			2	2
18	3019974800	S/PART FILT WATER AS	FR-S660CW/CD			1	1
19	3012924003	HINGE *U *R AS	P/O T5.0+PAINT	1	1	1	1
20	3012923902	HINGE *U *L AS	P/O T5.0+PAINT	1	1	1	1
22	3010657201	BRACKET ADJ FOOT	SPCC T2.6	2	2	2	2
23	3012105100	FOOT ADJ AS	PP	2	2	2	2
25	3013064200	HOLDER TUBE A	A5UC5	X	X	1	1
27	3011447200	COVER CAB BRKT	PP	1	1	1	1

- Some parts can be chaged for improving their perfomance without notice.
 - Above parts number doesn't describe your own colour & printing. Please remind!


Date	A mendment Note

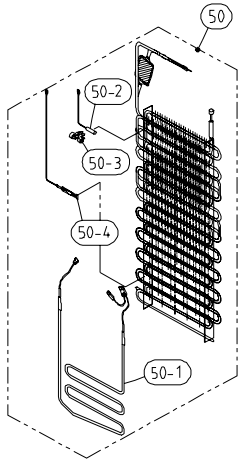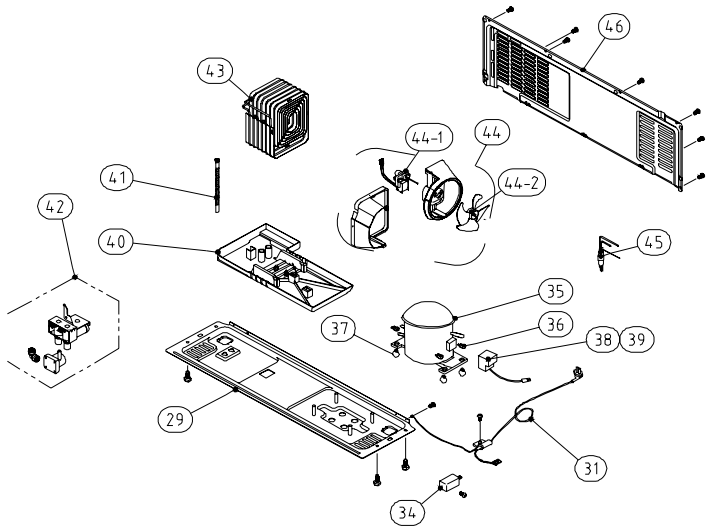

NO	PART-CODE	PART NAME	SPEC.	Q'ty			
				201E	20BE	20D(E)E	20F(G)E
29	3010340400	BASE COMP AS	FRU-5711	1	1	1	1
31	Page 88	CORD POWER AS		1	1	1	1
34	Page 88	CAPACITOR RUN		1	1	1	1
35	Page 88	COMPRESSOR		1	1	1	1
36	3016002500	SPECIAL WASHER	SK-5, T0.8	3	3	3	3
37	3010101600	ABSORBER COMP	NBR (R-134a)	4	4	4	4
	3010101480	ABSORBER COMP AS	FRU-541D (R-600a)				
38	Page 88	SWITCH P RELAY AS		1	1	1	1
39	Page 88	COVER RELAY		1	1	1	1
40	3011181300	CASE VAPORI AS	PP	1	1	1	1
41	3013201710	HOSE DRN B	PE FRB-5350NT	1	1	1	1
42	3015402800	VALVE WATER AS	110~127V 60Hz	x	x	1	1
	3015402300		220~240V 50,60Hz				
43	3014461510	PIPE WICON AS	TSW OD4.76XT0.7	1	1	1	1
44	3018500500	M/BELL AS	FRU-5711	1	1	1	1
44-1	3015916100	MOTOR C FAN AS	DC-2213DWCA-3	1	1	1	1
44-2	3011834700	FAN	ABS OD3.17XD150	1	1	1	1
45	3016808100	DRYER AS	C1220T	1	1	1	1
46	3011497000	COVER MACH ROOM AS	SBHG T0.35	1	1	1	1
50	3017053500	EVA AS	FRU-5711	1	1	1	1
50-1	3012818300	HEATER SHEATH AS	AC220V/ 192W	1	1	1	1
	3012818400		AC115V/ 192W				
50-2	3014806900	SENSOR D AS	PBN-43	1	1	1	1
50-3	3012023600	FIXTURE D SENS	PP	1	1	1	1
50-4	301720200	FUSE TEMP AS	AC250V 10A 77C	1	1	1	1

- Some parts can be chaged for improving their perfomance without notice.
 - Above parts number doesn't describe your own colour & printing. Please remind!


Date	A mendment Note

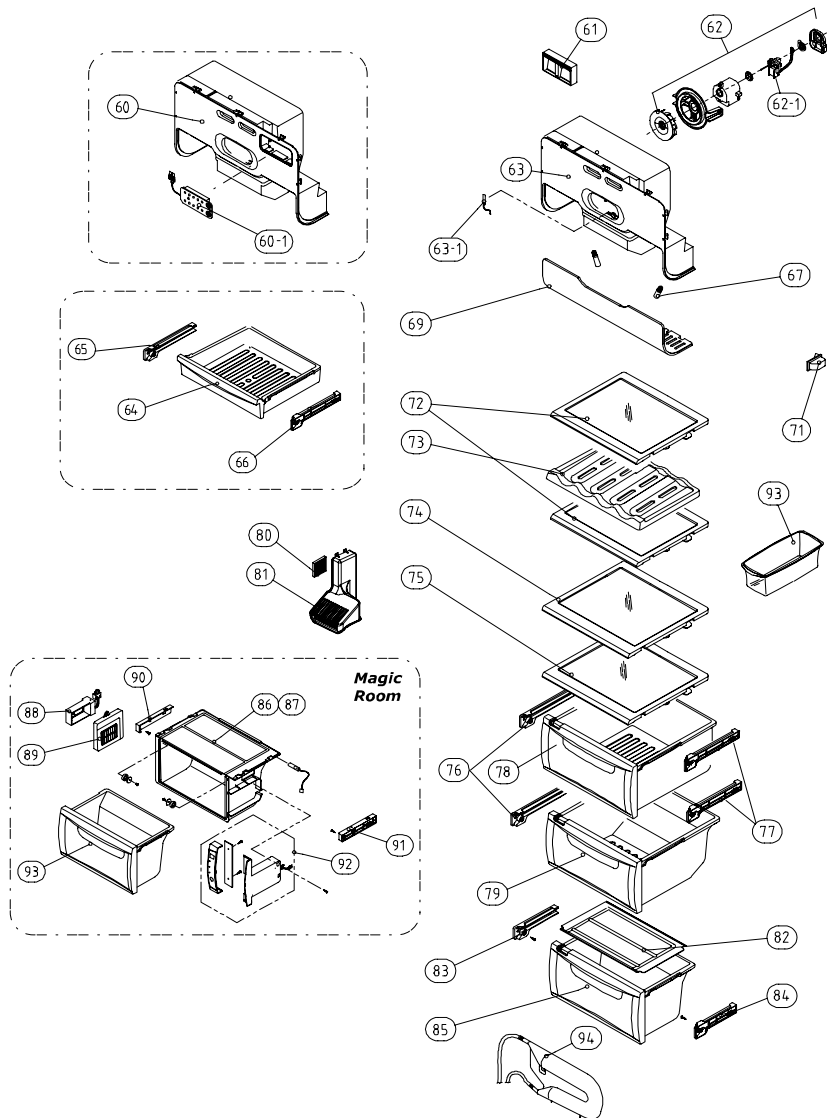

NO	PART-CODE	PART NAME	SPEC.	Q'ty						
				201E	20BE	20DE	20EE	20FE	20GE	
60	3011492800	COVER DAMP AS	FRU-5711	1						
60-1	3014235200	PANEL CONTL *I AS		1						X
61	3012205001	FRAME CHECK VALV AS	FR-S580CG	1	1	1	1	1	1	1
62	3012024200	FIXTURE MOTR AS		1	1	1	1	1	1	1
62-1	3015916000	MOTOR R FAN	D4612AAA20	1	1	1	1	1	1	1
63	3011495100	COVER DAMP AS	FRU-541D	X	1	1	1	1	1	1
63-1	3014807100	SENSOR R AS	PBN-43B	1	1	1	1	1	1	1
64	3011185710	CASE CHILD	FRU-571 (NANO)	1	1					
65	3012514511	GUIDE CASE A *L AS	FR-S580EG(HIPS)	1	1					X
66	3012514611	GUIDE CASE A *R AS	FR-S580EG(HIPS)	1	1					
67	3013602500	LAMP F/R	AC 240V 25W	2	2	2	2	2	2	2
	3013602800		AC 125V 25W							
69	3015510800	WINDOW R LAMP	MIPS	1	1	1	1	1	1	1
71	3018124000	SWITCH DR	SP201R-7DR (R-134a)	1	1	1	1	1	1	1
	3018128600	SWITCH DR	SPF101B-1D (R-600a)							
72	3017842820	SHELF INMOLDING R A AS	FRAME+PRINTED GLASS	2	2	2	2	2	2	2
73	3017842500	SHELF WINE	GPPS							OPTION
74	3017843320	SHELF INMOLDING R C AS	FRAME+PRINTED GLASS	1	1					X
75	3017842920	SHELF INMOLDING R B AS	FRAME+PRINTED GLASS	1	1	1	1	1	1	1
76	3012514511	GUIDE CASE A *L AS	FR-S580EG(HIPS)	1	1	2	2	2	2	2
77	3012514611	GUDIE CASE A *R AS	FR-S580EG(HIPS)	1	1	2	2	2	2	2
78	3011109230	CASE VEGETB A AS	CASE (NANO) +FRAME		X					
	3011109200		CASE +FRAME			1	1	1	1	1
79	3011114630	CASE VEGETB B AS	CASE (NANO) +FRAME	1	1	1	1	1	1	1
	3011114600		CASE +FRAME							
80	3018701800	DEO ANTI AS	W40XT5XL40	1	1	1	1	1	1	1
81	3011445900	COVER RETURN DUCT	PP	1	1	1	1	1	1	1
82	3011446700	COVER VEGETB CASE B	GPPS	1	1	1				1
83	3012529711	GUIDE CASE C *L AS	FRU-5711(HIPS)	1	1	1				1
84	3012529811	GUIDE CASE C *R AS	FRU-5711(HIPS)	1	1	1	X			1
85	3011114730	CASE VEGETB C AS	CASE (NANO) +FRAME	1	1	1				1
	3011114700		CASE +FRAME							
86	3011446800	COVER CHANGE RM	GPPS							1
87	3010548200	BOX CHANGE RM	HIPS							1
88	3016767100	DAMPER AS	DU24-012							1
89	3011450901	COVER DUCT CH RM AS	PP+SEAL							1
90	3012529500	GUDIE CHANGE RM *L	ABS	X	X	X				1
91	3012529600	GUDIE CHANGE RM *R	ABS							1
92	3010551000	BOX CONTL CHANGE RM AS								1
93	3011115021	CASE CHANGE RM AS	CASE (NANO) +FRAME+GAS							1
	3011115001		FRU-541E							
93	3011171310	CASE EGG AS	CASE+VINYL	1	1	1	1	1	1	1
94	3018201000	TANK WATER AS	FRU-541D	X	X	1	1	1	1	1

- Some parts can be changed for improving their performance without notice.


- Above parts number doesn't describe your own colour & printing. Please remind!

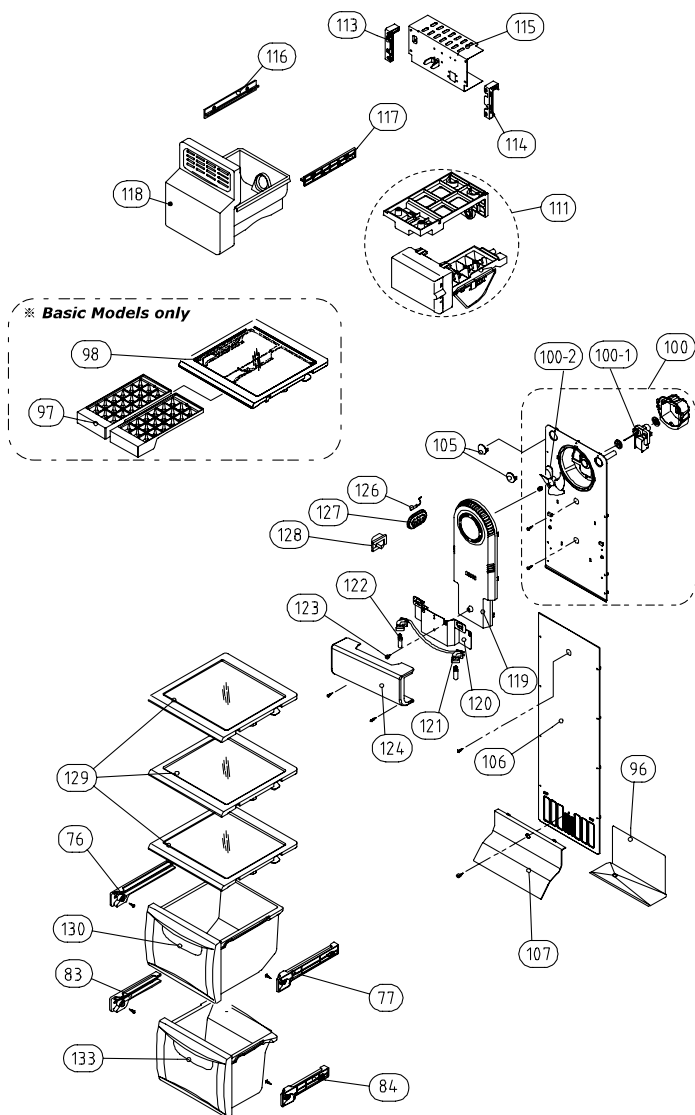


NO	PART-CODE	PART NAME	SPEC.	Q'ty			
				20IE	20BE	20D(E)E	20F(G)E
76	3012514511	GUIDE CASE A *L AS	FR-S580EG(HIPS)	1	1	1	1
77	3012514611	GUIDIE CASE A *R AS	FR-S580EG(HIPS)	1	1	1	1
83	3012529711	GUIDE CASE C *L AS	FRU-571I(HIPS)	1	1	1	1
84	3012529811	GUIDE CASE C *R AS	FRU-571I(HIPS)	1	1	1	1
96	3012529000	GUIDE DRN	GA	1	1	1	1
97	3011186300	CASE ICE	PP	2	2	x	
98	3017842710	SHELF F ICE AS	FRAME+PRINTED GLASS+FIXTURE	1	1		
100	3018921710	LOUVER F A AS	FRU-571I	1	1	1	1
100-1	3015915900	MOTOR F FAN	D4612AAA21	1	1	1	1
100-2	3011834500	FAN	ABS OD3.17XD130	1	1	1	1
105	3010968600	CAP F LOUVER B	HIPS	2	2	2	2
106	3018921501	LOUVER F B AS	HIPS	1	1	1	1
107	3011443200	COVER F RETURN	HIPS	1	1	1	1
111	3012205810	FRAME ICE MAKER AS	FRU-541D (R-134a)	x	x	1	1
	3012205820		FRU-541D (R-600a)			1	1
113	3012517800	GUIDE G/MOTR BRKT *L	ABS			1	1
114	3012517900	GUIDE G/MOTR BRKT *R	ABS			1	1
115	3010658220	BRACKET GEARED MOTR AS	(MOLD/DY) 110~127V/60Hz			1	1
	3010658150		(MOLD/DY) 220V/60Hz			1	1
	3010658110		(MOLD/DY) 220~240V/50Hz			1	1
116	3012520510	GUIDE ICE CRUSHER *L	ABS			1	1
117	3012517710	GUIDE ICE CRUSHER *R	ABS			1	1
118	3011115202	CASE I/CRUSHER AS	FRU-541D			1	1
119	3001401701	COVER F FAN AS	FRU-571I	1	1	x	
	3001401711	COVER F FAN AS	FRU-541D	x	x	1	1
120	3014531900	PLATE F LAMP	SGCC T0.8	1	1	1	1
121	3017906600	SOCKET F LAMP AS	FRU-571I	1	1	1	1
122	3013602500	LAMP F/R	AC 240V 25W(S)	2	2	2	2
	3013602800		AC 125V 25W				
124	3015510700	WINDOW F LAMP	MIPS	1	1	1	1
126	3014807000	SENSOR F AS	PT-38	1	1	1	1
127	3011442600	COVER F SENS	ABS	1	1	1	1
128	3018124010	SWITCH DR	SP201R-7DR (R-134a)	1	1	1	1
	3018128500		SPF101B-1D (R-600a)				
129	3017842600	SHELF F AS	PRINTED GLASS	3	3	3	3
130	3011114800	CASE F A AS	CASE+FRAME	1	1	1	1
	3011114830		CASE (NANO)+FRAME				
133	3011114900	CASE F B AS	CASE+FRAME	1	1	1	1
	3011114930		CASE (NANO)+FRAME				

- Some parts can be chaged for improving their performace without notice.
 - Above parts number doesn't describe your own colour & printing. Please remind!

※ Basic Model

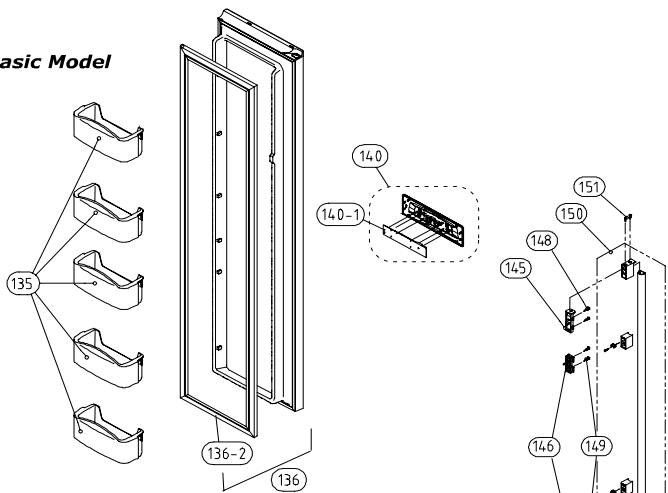


※ Dispenser Model

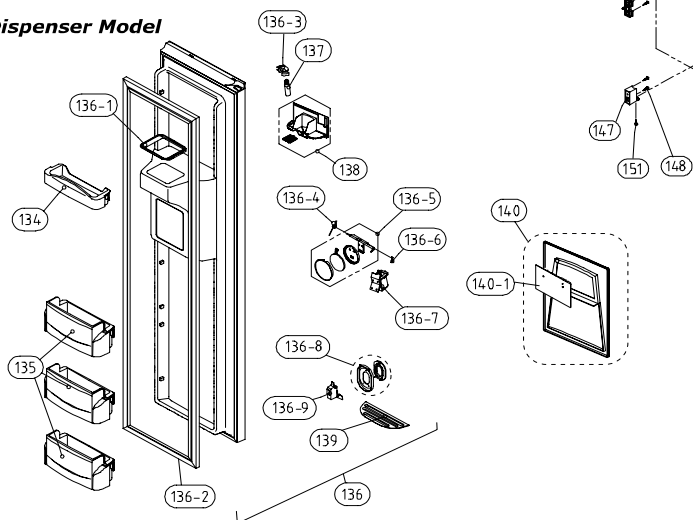

NO	PART-CODE	PART NAME	SPEC.	Q'ty			
				201E	20BE	20D(E)E	20F(G)E
134	3019026700	POCKET F *T	HIPS	X	X	1	1
135	3019026600	POCKET F	HIPS	5	5	X	X
	3019027401	POCKET F AS	FRU-541D	X	X	3	3
136	3000067610	ASSY F DR	FRU-577I, SUH5E	1	X	X	X
	3000067620		FRU-577I, ISG3E	X	1	X	X
	3000067660		FRU-57BB, TSG5H	X	X	1	1
	3000067670		FRU-57BB, MWH4L	X	X	1	1
	3000067600		FRU-547F, SUH5E	X	X	1	1
	3000067650		FRU-54B, TSH5L	X	X	1	1
136-1	3010964601	CAP ICE PATH FRAME	PP(FRS-551F)	X	X	1	1
136-2	3012318810	GASKET F DR AS	PVC+MAGNET	1	1	1	1
136-3	3017903702	SOCKET LAMP AS	220V 15W	X	X	1	1
136-4	3015102200	SPRING ICE D LEVR	SUS	X	X	1	1
136-5	3011495300	COVER I/FLAP AS	FRU-541D	X	X	1	1
136-6	3012019700	FIXTURE I/SHUT LUVR	FR-S650CD	X	X	1	1
136-7	3015402100	VALVE SOL DISP	220V 60HZ	X	X	1	1
	3015403110		127V 60HZ	X	X		
	3015403200		AC 110-115V 60HZ	X	X		
	3015404100		220-240V/50Hz	X	X		
136-8	3016304900	BUTTON DISPNS AS	FRU-541D	X	X	1	1
136-9	3018125800	SWITCH MICRO	VP333A-2D	X	X	1	1
137	3013600020	LAMP AS	240V/15W	X	X	1	1
	3013600050		110V/15W	X	X		
138	3010544000	BOX DISPNS I/SHUT AS	FRU-541D	X	X	1	1
139	3012406900	GRILLE DISPNS	ABS	X	X	1	1
140	3001401040	COVER F PCB AS	EXPORT(FRU-579B/H)	X	1	X	X
	3011494700	COVER DISPNS BOX AS	FRU-541D	X	X	1	1
140-1	30143E1110	PCB FRONT AS	FR-S570ERB	X	1	X	X
	30143D5160		FRU-541F	X	X	1	1
145	3012027200	FIXTURE HNDL SUPORT *T	HIPS			1	
146	3012018700	FIXTURE HNDL SUPORT *M	HIPS			2	
147	3015311500	SUPPORTER HNDL *U	ABS+SPRAY			1	
148	7002401011	SCREW MACHINE	TRS 4X10 MFZN			4	
149	3016040100	SPECIAL SCREW HNDL	M5X20			4	
150	3012645300	HANDLE BAR AS	FRU-547F/SPRAY			1	
151	3016040200	SPECIAL SCREW FRAME	4X14, S18C			2	

- Some parts can be chaged for improving their performace without notice.
- Above parts number doesn't describe your own colour & printing. Please remind!

Date	A mendment Note

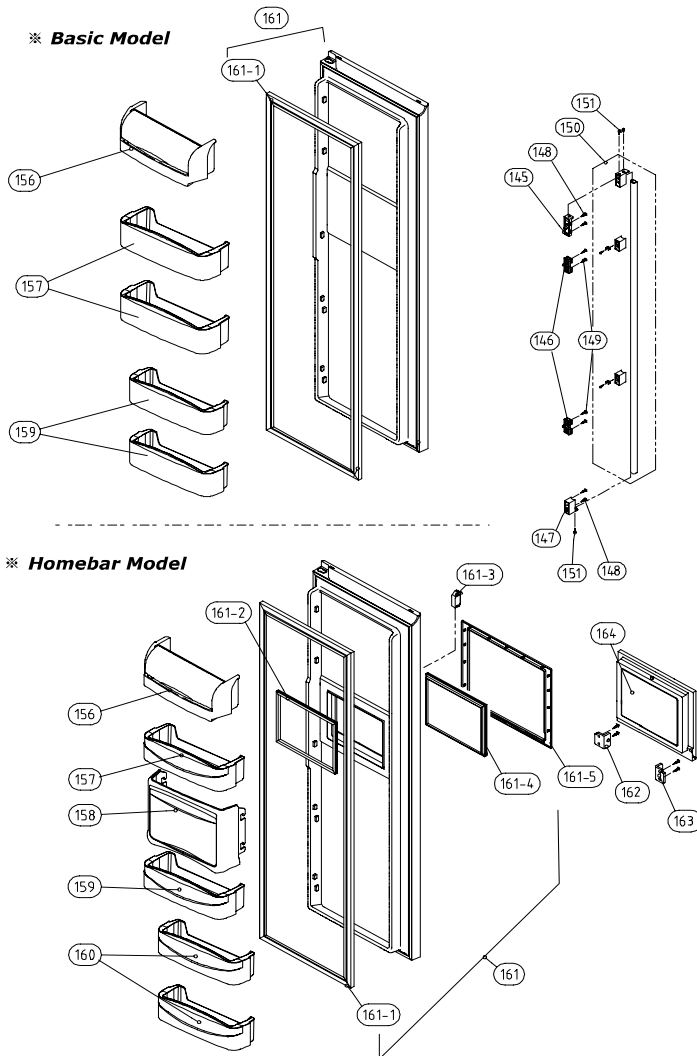

NO	PART-CODE	PART NAME	SPEC.	Q'ty					
				20I/E/BE	20D(E)E	20F(G)E			
145	3012027200	FIXTURE HNDL SUPORT *T	HIPS		1				
146	3012018700	FIXTURE HNDL SUPORT *M	HIPS		2				
147	3015311500	SUPPORTER HNDL *U	ABS+SPRAY		1				
148	7002401011	SCREW MACHINE	TRS 4X10 MFZN		4				
149	3016040100	SPECIAL SCREW HNDL	M5X20		4				
150	3012645300	HANDLE BAR AS	FRU-547F/SPRAY		1				
151	3016040200	SPECIAL SCREW FRAME	4X14, S18C		2				
156	3019027500	POCKET DAIRY AS	FRU-571I	1	1	1			
157	3019026800	POCKET R	HIPS	2	x	x			
	3019027200	POCKET R *M AS	FRU-541D	x	2	1			
158	3011187000	CASE H/BAR AS	FRU-541F	x	x	1			
159	3019027700	POCKET R H/BAR AS	FRU-541F	x	x	1			
160	3019026900	POCKET R *S	HIPS	2	x	x			
	3019027300	POCKET R *S AS	FRU-541D	x	2	2			
161	3000067710	ASSY R DR	FRU-577I, SUH5E	1	1	x			
	3000067720		FRU-577I, ISG3E						
	3000067770		FRU-577B, TSG5H						
	3000067780		FRU-57B, MWH4L						
	3000067760		FRU-54BD, TSH5L						
	3000067700		FRU-547F, SUH5E				x	x	1
	3000067750		FRU-54BF, TSH5L						
161-1	3012318910	GASKET R DR AS	PVC+MAGNET	1	1	1			
161-2	3012319300	GASKET H/BAR B AS	PVC	x	x	1			
161-3	3018125600	SWITCH H/BAR DR AS	SP101B-2D1(T)	x	x	1			
161-4	3012319400	GASKET H/BAR A AS	PVC	x	x	1			
161-5	3011497200	COVER FRAME H/BAR	ABS	x	x	1			
162	3015204500	STOPPER H/BAR DR *R	PO T4.0	x	x	1			
163	3015204400	STOPPER H/BAR DR *L	PO T4.0	x	x	1			
164	3011767900	DOOR H/BAR AS	FRU-541F, AL	x	x	1			








- Some parts can be chaged for improving their performace without notice.
 - Above parts number doesn't describe your own colour & printing. Please remind!

Date	A mendment Note

1. Electric Device

Compressor		Capacitor Run		Realy Cover		Switch P Relay AS		Remark
Specification	Part Code	Specification	Part Code	Part code	Specification	Specification	Part Code	
HPL30YG-5	395S130R50	400VAC/5 μ F	3016401920	3811400503	PP(SW5101SW)	308NHB, S330	3018129810	220~240V/50Hz
MK183Q-L2U	3956183D50	350VAC/5 μ F	3016401170	3811402100	DS3-3NORYL S/S	265RHB, S330	3018129600	220~240V/50Hz
MK183C-L2U	3956183D10	250VAC/12 μ F	3016405000	3811402100	DS3-3NORYL S/S	445PHB, 4R7M	3018129610	110~15V/60Hz
MK4A5Q-R1U	3956145250	350VAC/5 μ F	3016401170	3811402200	S/S (R600A)	265RHB, S330	3018129600	220~240V/50Hz(R-600a)
EGZ90CLC	3956190M50	350VAC/5 μ F	3016401170	3001409900	EMBRACO	213PFB, S220	3018129630	220~240V/50Hz(R-600a)

2. Power Cord

Shape	Description	Part Code	Shape	Description	Part Code
	CP-2PIN	3011304100		KP-550 (China)	3011301070
	CP-2PIN(Ferrite)	3011346701		KP-550 (Australia)	3011301080
	KP-30	3011348300		MP5004 (SINGAPORE)	3011302870
	KP-211			ISRAEL	3011301280
	SA16A (South Africa)	3011302170			
	BS-1363 (U.K)	3011347300			