



Website <http://biz.lgservice.com>

MICROWAVE OVEN **SERVICE MANUAL**

MODEL: MC-806BLR

CAUTION

BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

P/NO : 3828W5S3936

August, 2004
Printed in Korea

SAFETY PRECAUTIONS

This device is to be serviced only by properly qualified service personnel. Consult the service manual for proper service procedures to assure continued safety operation and for precautions to be taken to avoid possible exposure to excessive microwave energy.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- A) Do not operate or allow the oven to be operated with the door open.
- B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary; (1) interlock operation, (2) proper door closing, (3) seal and sealing surfaces (arcing, wear, and other damage), (4) damage to or loosening of hinges and latches, (5) evidence of dropping or abuse.
- C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity, and connections.
- D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.
- E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CAUTION MICROWAVE RADIATION


DO NOT BECOME EXPOSED TO RADIATION FROM THE MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

CONTENTS

(Page)

SAFETY PRECAUTIONS	Inside front cover
SPECIFICATIONS	1-1
CAUTIONS	2-1
INSTALLATIONS	3-1
OPERATING INSTRUCTIONS	4-1
FEATURES.....	4-1
CONTROL PANEL.....	4-1
OPERATING SEQUENCE.....	4-2
SCHEMATIC DIAGRAM	4-3
CIRCUIT DESCRIPTION	4-4
SERVICE INFORMATION	5-1
TOOLS AND MEASURING INSTRUMENTS.....	5-1
MICROWAVE LEAKAGE TEST	5-1
MEASUREMENT OF MICROWAVE POWER OUTPUT	5-3
DISASSEMBLY AND ADJUSTMENT.....	5-3
INTERLOCK CONTINUITY TEST.....	5-8
COMPONENT TEST PROCEDURE	5-9
TROUBLE SHOOTING GUIDE.....	5-14
EXPLODED VIEW	6-1
REPLACEMENT PARTS LIST	7-1


SPECIFICATIONS

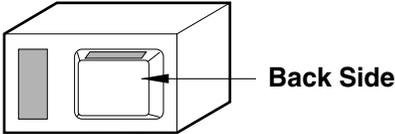ITEM	DESCRIPTION		
MODEL	MC-806BLR		
Power Requirement	230V AC50Hz Single phase, 3 wire grounded Microwave 1350W Grill 1250W Convection 1350W (MAX. 2550W) Combination 2650W		
Power Output	850W full microwave power (IEC60705)		
Microwave Frequency	2450 MHz		
Magnetron	2M214 - 39F, 2M254J, 2M218J		
Timer	99min. 50sec.		
Outside Dimensions	530 (W)x 322 (H)x 500 (D)mm		
Cavity Dimensions	348 (W)x 232 (H)x 374 (D)mm		
Net Weight	23.0 kg		
Shipping weight	25.5 kg		
Control Complement	Microwave Power for Variable Cooking Power level HIGH Full power throughout the cooking time(100%) MED.-HIGH) approx. 80% of Full power MEDIUM approx. 60% of Full power DEFROST approx. 40% of Full power LOW approx. 20% of Full power <ul style="list-style-type: none"> • Convection - Max. 250°C • Grill • Combination 		
Nameplate Location			
Accessories	<table style="width: 100%; border: none;"> <tr> <td style="width: 50%; border: none;"> Owner's manual Rotating ring Grill rack Rotisserie-Bar Rotisserie-Handle </td> <td style="width: 50%; border: none;"> Glass tray Convection rack Metal tray </td> </tr> </table>	Owner's manual Rotating ring Grill rack Rotisserie-Bar Rotisserie-Handle	Glass tray Convection rack Metal tray
Owner's manual Rotating ring Grill rack Rotisserie-Bar Rotisserie-Handle	Glass tray Convection rack Metal tray		
This microwave oven is designed for household use only. It is not recommended for commercial purposes.			

CAUTIONS

Unlike other appliances, the microwave oven is high-voltage and high-current appliance. Though it is free from danger in ordinary use, extreme care should be taken during repair.

- DO NOT operate on a 2-wire extension cord during repair and use.
- NEVER TOUCH any oven components or wiring during operation.
- BEFORE TOUCHING any parts of the oven, always remove the power plug from the outlet.
- For about 30 seconds after the oven stop, an electric charge remains on the high voltage capacitor. When replacing or checking, you must discharge the capacitor by shorting across the two terminals with an insulated screwdriver.

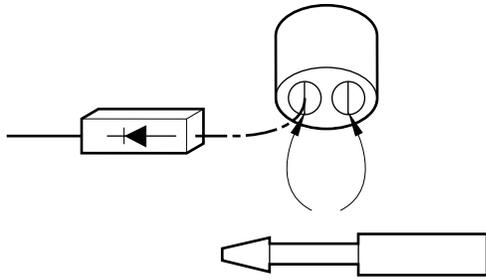

- Remove your watches whenever working close to or replacing the Magnetron.
- NEVER operate the oven with no load.
- NEVER damage the door seal or front plate of the oven cavity.
- NEVER put iron tools on the magnetron.
- NEVER put anything into the latch hole and the interlock switches area.


MICROWAVE RADIATION

Personnel should not be exposed to the microwave energy which may radiate from the magnetron or other microwave generating device if it is improperly used or connection.

All input and output microwave connections, waveguide, flange and gasket must be secure never operate the device without a microwave energy absorbing load attached.

Never look into an open waveguide or antenna while the device is energized.

- Proper operation of the microwave oven requires that the magnetron be assembled to the waveguide and cavity. Never operate the magnetron unless it is properly installed.
- Be sure that the magnetron gasket is properly installed around the dome of the tube whenever installing the magnetron.

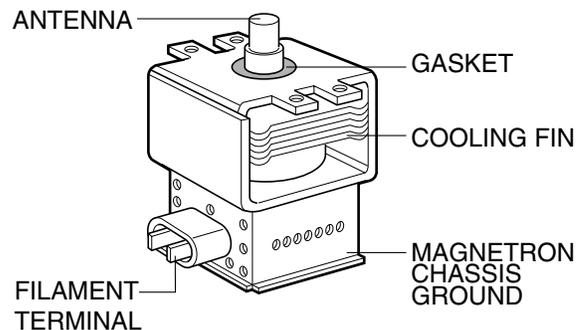

MAGNETRON

THE OVEN IS TO BE SERVICED ONLY BY PROPERLY QUALIFIED SERVICE PERSONNEL.

INSTALLATIONS

BEFORE YOU BEGIN, READ THE FOLLOWING INSTRUCTIONS COMPLETELY AND CAREFULLY.

Installing microwave oven

1. Empty the microwave oven and clean inside it with a soft, damp cloth. Check for damage such as misaligned door, damage around the door or dents inside the cavity or on the exterior.
2. Put the oven on a counter, table, or shelf that is strong enough to hold the oven, food and utensils you put in it. (The control panel side of the oven is the heavy side. Use care when handling.)
3. Do not block the vent and the air intake openings. Blocking vent or air intake openings can cause damage to the oven and poor cooking results. Make sure the microwave oven legs are in place to ensure proper air flow.
4. The oven should not be installed in any area where heat and steam are generated, because they may damage the electronic or mechanical parts of the unit.
Do not install the oven next to a conventional surface unit or above a conventional wall oven.
5. Use the microwave oven in an ambient temperature of less than 104°F (40°C).
6. Place the microwave oven on a sturdy and flat surface, at least 10cm(4 inches) from the wall.
7. Place the microwave oven as far away as possible from TV, RADIO, COMPUTER, etc., to prevent interference.
8. This oven must be plugged into a 15A outlet.
9. Do not touch the front glass during or after cooking of the Grill, Convection and Combination mode. This glass is very hot during heater operating.
10. Do not operate oven at microwave and combination mode with the Convection rack or Grill rack placed in the cavity when the oven is empty.

Earthing Instructions

This microwave oven is designed to be used in a fully earthed condition. It is imperative, therefore, to make sure it is properly earthed before servicing

**WARNING-
THIS APPLIANCE
MUST BE EARTHED**

IMPORTANT

The wires in this mains lead are colored in accordance with the following code:

Green-and-yellow:	Earth
Blue:	Neutral
Brown:	Live

As the colors of the wires in the mains lead of this appliance may not correspond with the colored markings identifying the terminals in your plug, proceed as follows.

The wire which is colored **green-and-yellow** must be connected to the terminal in the plug which is marked with the letter **E** or by the **earth symbol** (\perp) or colored **green** or **green-and-yellow**.


The wire which is colored **blue** must be connected to the terminal in the plug which is marked with the letter **N** or colored **black**.

The wire which is colored **brown** must be connected to the terminal in the plug which is marked with the letter **L** or colored **red**.


* **Power cord type: "Y" Type**

OPERATING INSTRUCTIONS

Features

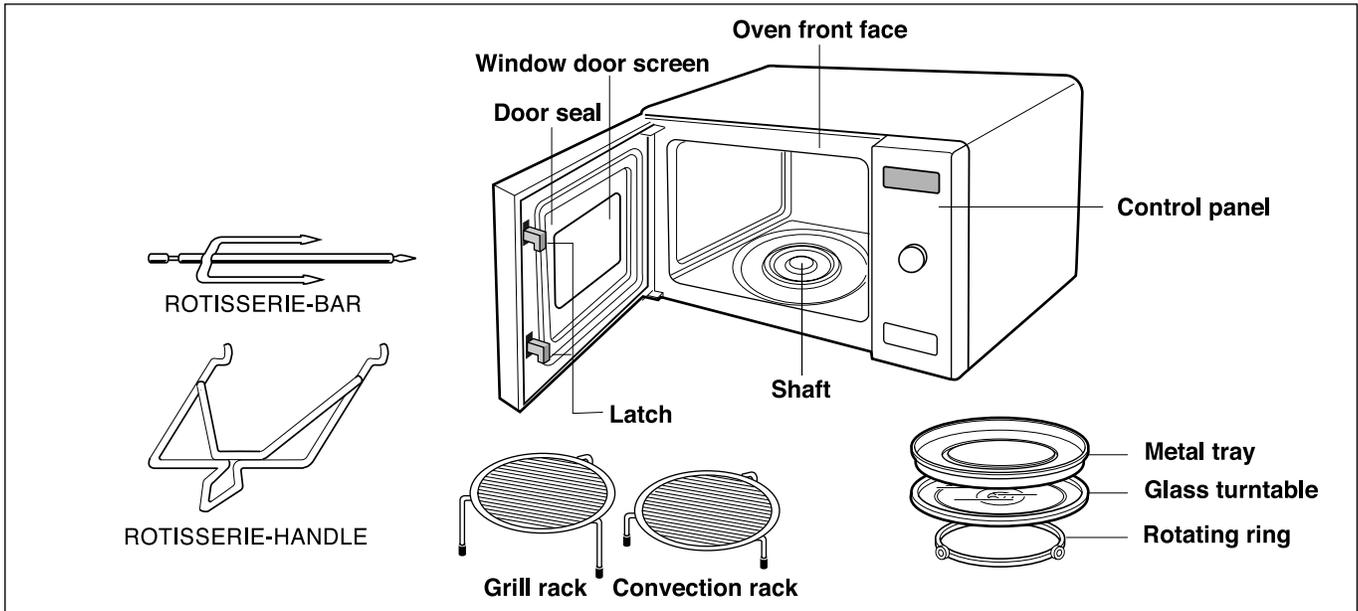

Control Panel

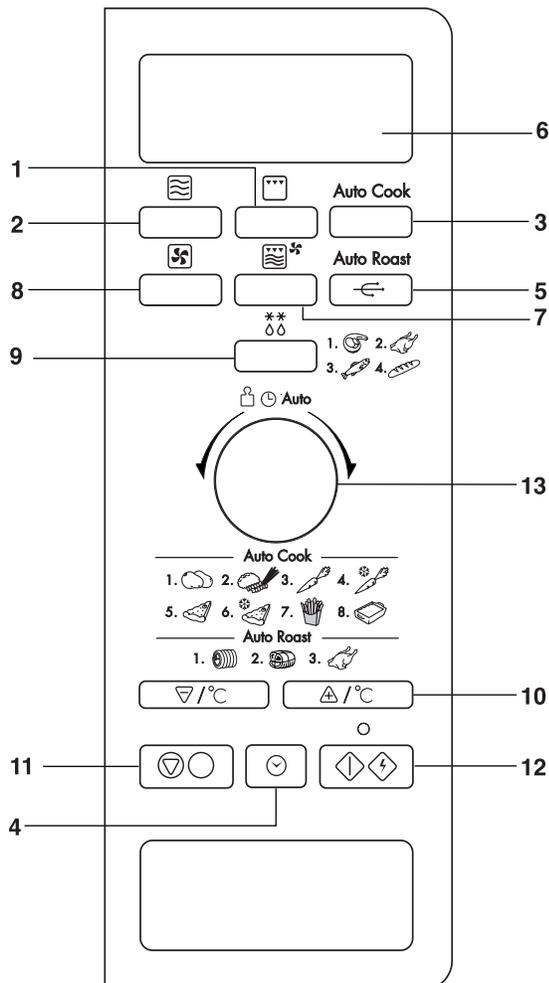


1. Grill: To select grill cooking.
2. MICRO POWER: To select micro power cooking and cooking power levels.
3. AUTO COOK: To select auto cook.
4. CLOCK: To set the time of day.
5. AUTO ROAST
6. DISPLAY WINDOW: Used to show Time of day, Cooking of day, Cooking power level, Cooking category.
7. COMBINATION: To select combination cooking.
8. CONVECTION: To select convection cooking.
9. AUTO WEIGHT DEFROST: To select auto weight defrost.
10. LESS/MORE: To select convection temperature, and change auto cook time and auto reheat time.
11. STOP/CLEAR, CHILD LOCK: Stops the oven and clear all entries except the time of day.
12. START/QUICK START: To quickly set the cooking time directly.
13. DIAL: To select convection temperature, change cooking time, and weight.


Operating Sequence

The following is a description of component functions during oven operation.


1. Setting the clock

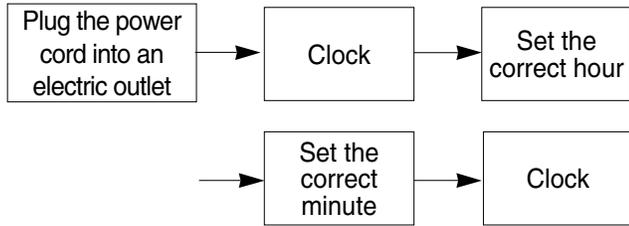


2. Cooking(Microwave power)

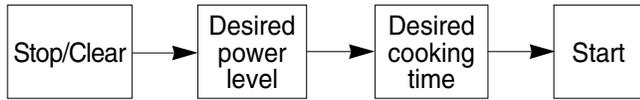

3. Multi stage cooking

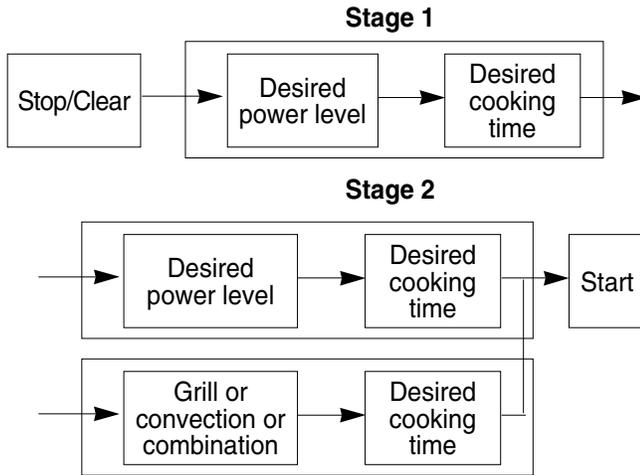


4. Grill cooking

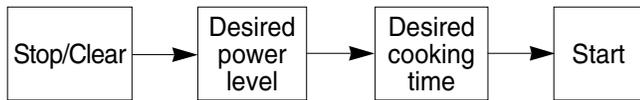

5. Convection cooking


To pre-heat

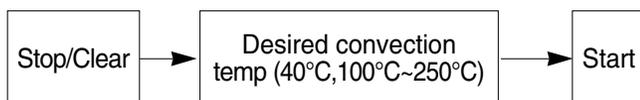


To cook




6. Combination cooking

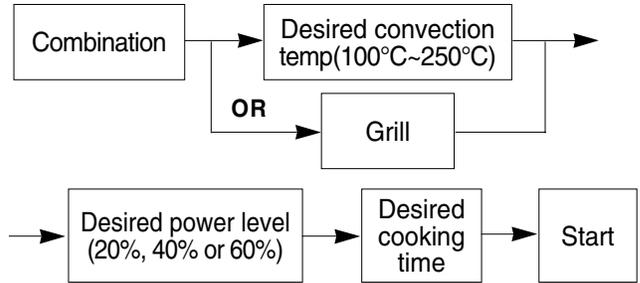


7. Auto weight defrost

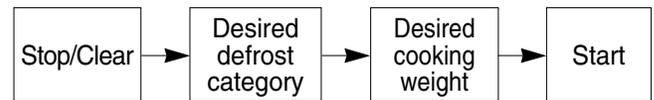

8. Auto roast

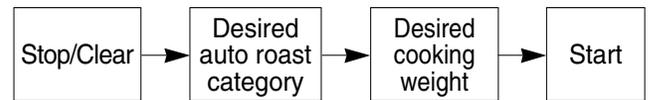


9. Auto cook

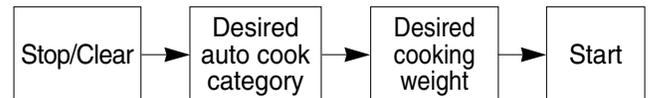


10. Child lock

This oven has a CHILD LOCK feature.


To Set CHILD LOCK

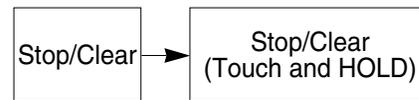


To Cancel CHILD LOCK

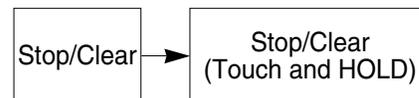


11. Quick start

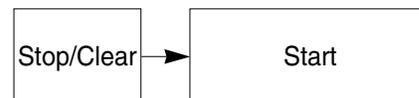

12. More and Less

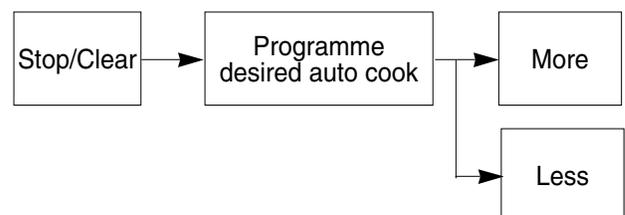

SCHEMATIC DIAGRAM

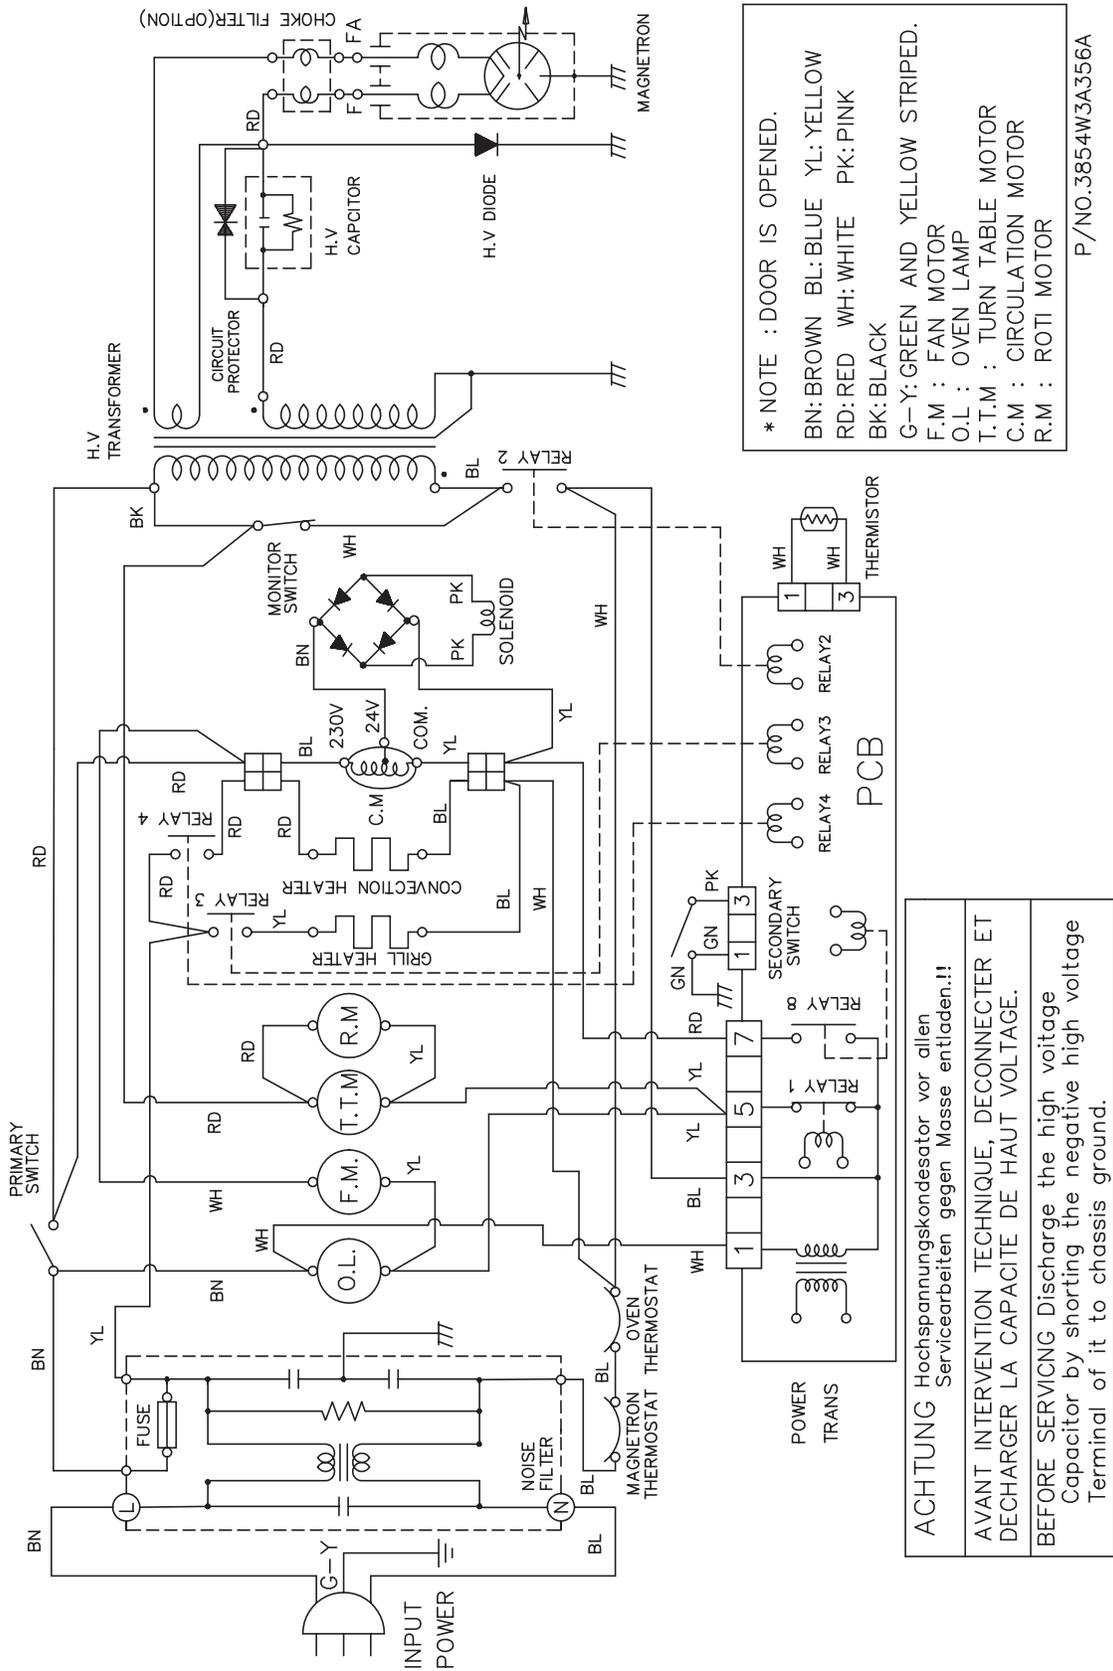


Circuit Description

- As the door is closed, the contact of MONITOR SWITCH opens. This switch creates the short circuit to blow 10 A fuse during operation under abnormal condition.(ie, should the contacts of primary fail to open the circuit)
- The latches are secured by latch board. The oven light turns on while the oven is in operation.

WHEN COOKING POWER LEVEL AND COOKING TIME ARE SET

- The contacts of the primary switch and the secondary switch close the circuit.
- 230V A.C. is applied to the high voltage transformer through power control switch as shown by the solid line.
- Turntable and circulation motor rotate.

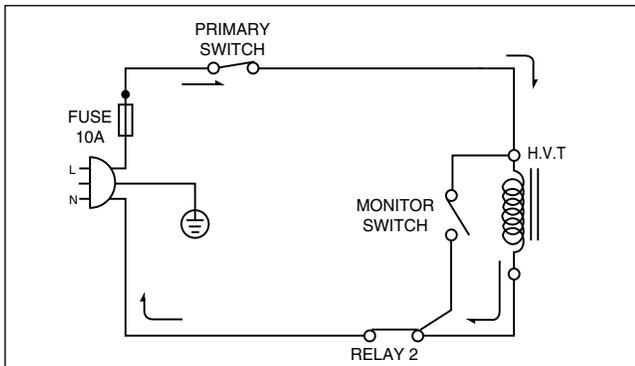


- The fan motor rotates and cools the magnetron by blowing the air (coming from the intake on the backplate) over the magnetron.
- The air is also directed into the oven to exhaust the vapor in the oven through the base plate and back plate.
- 3.5V A.C. is generated from the filament winding of the high voltage transformer. This 3.5V is applied to the magnetron to heat the magnetron filament through two noise preventing choke coils. A high voltage of approximately 2100V A.C. is generated in the secondary of the high voltage transformer which is increased by the action of the diode and charging of the high voltage capacitor. The negative D.C. voltage is then applied to the filament of the magnetron.

WHEN THE DOOR IS OPEN DURING COOKING


- Both primary switch and secondary switch open to cut off the primary winding voltage to the high voltage transformer to stop microwave oscillation.
- Turntable and fan motor stop.
- As the door is opened, if the contact of primary switch

and relay 2 and/or secondary switch fail to open, the 10A fuse opens due to the large current surge caused by the monitor switch activation which in turn stops magnetron, oscillation.

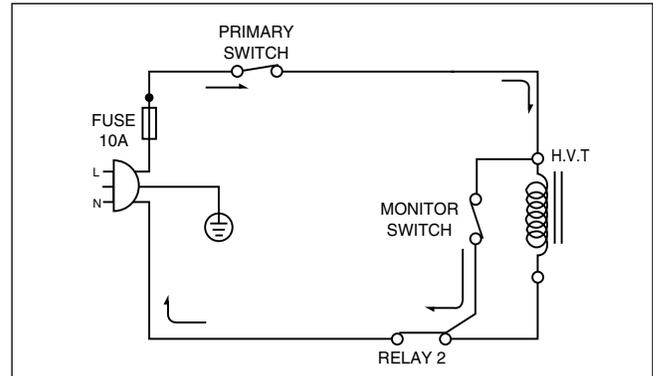


WHEN TOUCHING THE START KEY WITH THE CONVECTION/GRILL COOKING FUNCTION SELECTED.

- The contacts of the primary switch and the secondary switch close the circuit.
- 230V A.C. is applied to the grill heater through grill thermostat as shown by the solid line.

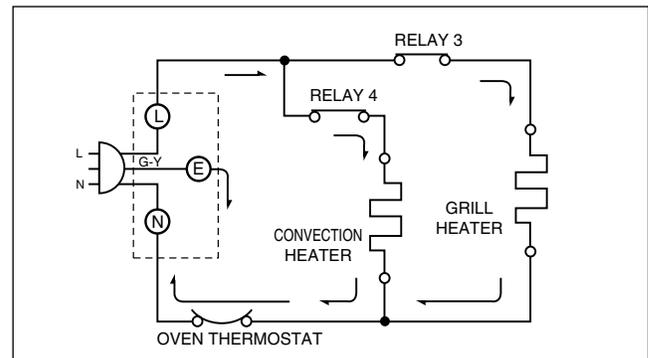

- Turntable rotates.
- The fan motor and circulation motor rotate.
- The air is also directed into the oven to exhaust the vapor in the oven through the base plate and back plate.

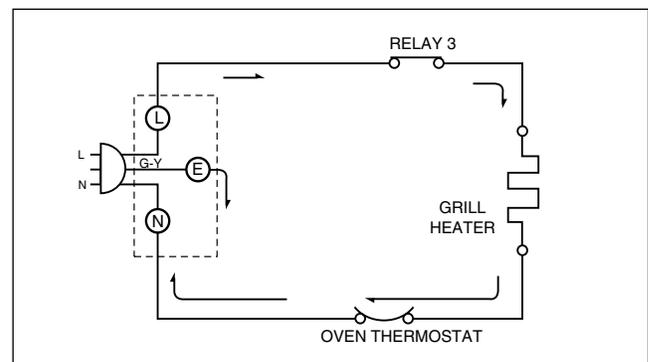

SERVICE INFORMATION

Tools and Measuring Instruments

NECESSARY TOOLS

Tools normally used for TV servicing are sufficient. Standard tools are listed below.

- Diagonal pliers
- Long nose pliers
- Cross head screwdriver
- Wrench (size 5 mm)
- Nutdriver (size 5 mm)
- Adjustable wrench
- Soldering iron
- Solder
- Vinyl insulation taper
- Polishing cloth

NECESSARY MEASURING INSTRUMENTS

- TESTER (VOLTS-DC, AC, Multimeter)
- Microwave survey meter
 - Holaday H1-1500, Hi-1501
 - Narda 8100, 8200
- Inch scale
- 600 cc non conductive material beaker (glass or plastic), inside diameter: approx. 8.5cm (3¹/₂ in.)
- Cylindrical and made of borosilicate glass vessel max. thickness: 3 mm
 - outside diameter: approx. 190mm
 - height: approx. 90mm
- Glass thermometer: 100°C or 212°F (1 deg scale)

Microwave Leakage Test

CAUTIONS

- Be sure to check a microwave emission prior to servicing the oven if the oven is operative prior to servicing.
- If the oven operates with door open, the service personnel should;
 - Tell the user not to operate the oven
- The service personnel should check all surface and vent openings for microwave emission testing.
- Check for microwave energy leakage after every servicing. The power density of the microwave radiation leakage emitted by the microwave oven should not exceed 4 mW/cm².
And always start measuring of an unknown field to assure safety for operating personnel from radiation leakage.


NOTE: The standard is 5 mW/cm² while in the customer's home. 4 mW/cm² stated here is manufacturer's own voluntary standard for units in customer's home.

EQUIPMENT

- Microwave Survey Meter
- 600cc glass beaker
- Glass thermometer 100°C

MEASURING MICROWAVE ENERGY LEAKAGE

- Pour 275 ± 15cc of 20°C ± 5°C water in a beaker which is graduated to 600 cc, and place the beaker on the center of the turntable.
- Set the energy leakage monitor to 2450 MHz and use it following the manufacturer's recommended test procedure to assure correct result.
- When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
- Operate the oven at its maximum output.
- Measure the microwave radiation using and electromagnetic radiation monitor by holding the probe perpendicular to the surface being measured

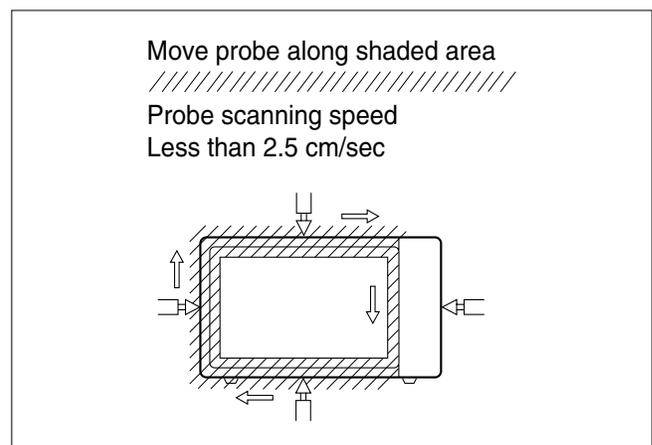


MEASUREMENT WITH THE OUTER CASE REMOVED

- When you replace the magnetron, measure microwave energy leakage before the out case is installed and after all necessary components are replaced or adjusted.

Special care should be taken in measuring the following parts. (Shaded area of below Fig.)

- Around the magnetron
- The waveguide

WARNING : AVOID CONTACTING ANY HIGH VOLTAGE PARTS

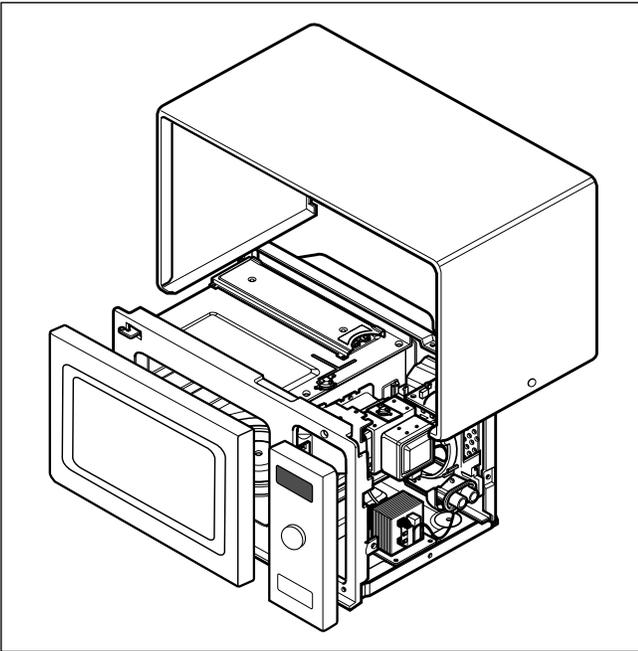

MEASUREMENT WITH A FULLY ASSEMBLED OVEN

- After all components, including the outer case, are fully assembled, measure for microwave energy leakage around the door viewing window, the exhaust opening, and air inlet openings.
- Microwave energy leakage must not exceed the values prescribed below.

NOTE:

Leakage with the outer case removed - less than 5 mW/cm².

Leakage for a fully assembled oven ("Before the latch switch (primary) is interrupted") with the door in a slightly opened position - less than 4 mW/cm².

NOTES WHEN MEASURING

- Do not exceed meter full scale deflection.
- The test probe must be removed no faster than 1 inch/sec (2.5 cm/sec) along the shaded area, otherwise a false reading may result.
- The test probe must be held with the grip portion of the handle.
A false reading may result if the operator's hand is between the handle and the probe.
- When testing near a corner of the door, keep the probe perpendicular to the surface making sure the probe horizontally along the oven surface, this may possibly cause probe damage.

RECORD KEEPING AND NOTIFICATION AFTER MEASUREMENT

- After adjustment and repair of any microwave energy interruption or microwave energy blocking device, record the measured values for future reference. Also enter the information on the service invoice.
- Should the microwave energy leakage not be more than 4 mW/cm² after determining that all parts are in good condition, functioning properly and genuine replacement parts which are listed in this manual have been used.
- At least once a year, have the electromagnetic energy leakage monitor checked for calibration by its manufacture.

Measurement of Microwave Power Output


- Microwave power output measurement is made with the microwave oven supplied at its rated voltage and operated at its maximum microwave power setting with a load of (1000 ± 5)g potable water.
- The water is contained in a cylindrical borosilicate glass vessel having a maximum material thickness of 3 mm and an outside diameter of approximately 190 mm.
- The oven and the empty vessel are at ambient temperature prior to the start of the test.
- The initial temperature (±1) of the water is (10±2)°C. It is measured immediately before the water is added to the vessel. After addition of the water to the vessel, the load is immediately placed on the center of the shelf which is in the lowest position and the microwave power switched on.
- The time T for the temperature of the water to rise by a value ΔT of (10 ±2)°K is measured, where T is the time in seconds and ΔT is the temperature rise. The initial and final water temperatures are selected so that the maximum difference between the final water temperature and the ambient temperature is 5 °K.

- The microwave power output P in watts is calculated from the following formula :

$$P = \frac{4187 \times (\Delta T)}{T}$$

is measured while the microwave generator is operating at full power. Magnetron filament heat-up time is not included. (about 2 sec.)

- The water is stirred to equalize temperature throughout the vessel, prior to measuring the final water temperature.
- Stirring devices and measuring instruments are selected in order to minimize addition or removal of heat.

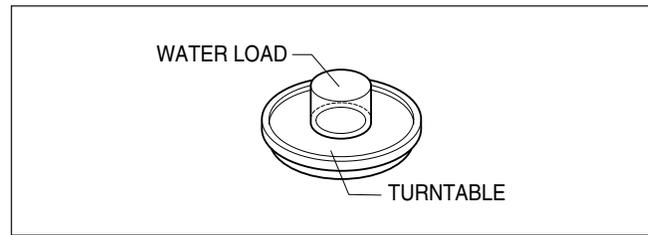

Disassembly and Adjustment

A. OUT CASE REMOVAL

- 1) Disconnect power supply cord from the outlet.
- 2) Remove the screws from the rear and side section.
The out case must be moved backward to the lifted off.

B. POWER SUPPLY CORD

- 1) Remove the out case.
- 2) Disconnect two terminals from the noise filter assy and remove one screw of the earth terminal.


CAUTION: DISCHARGE HIGH VOLTAGE CAPACITOR BEFORE SERVICING (refer to page 5)

C. REMOVING CONTROL PANEL ASSEMBLY AND PCB ASSEMBLY

- 1) Disconnect the leadwire from the PCB SUB ASM.
- 2) Remove the screws for the earth and securing the control panel.
- 3) Lift control panel assembly from the oven by the tab unhooked.

- 4) Remove three screws securing the PCB SUB ASM from the control panel.
- 5) Remove the digitron window.

NOTE : Remove the leadwire and connector VERY CAREFULLY. Be sure to grasp the connector and not the wires.

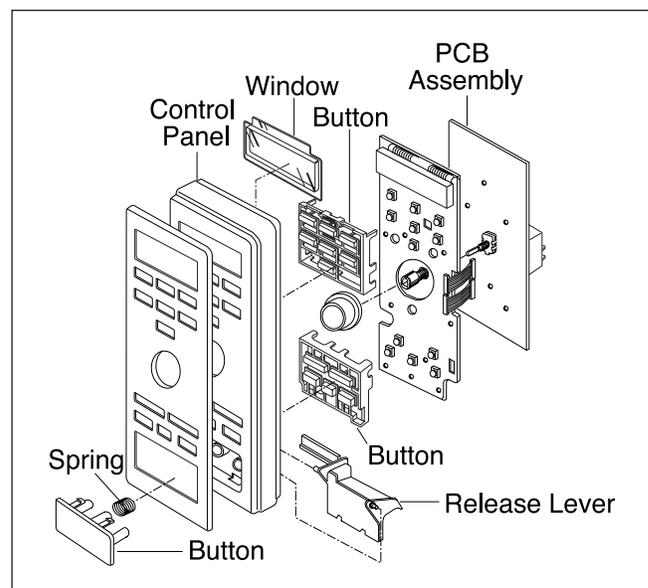

D. DOOR GROSS ASSEMBLY REMOVAL



- 1) Open the door.
- 2) Remove the choke cover cap very carefully with a flat-blade screwdriver.

CAUTION : Be careful not to damage door seal plate with the screwdriver.

- 3) Lift up and push the door.

NOTE:

1. After replacing the door, be sure to check that the primary switch, monitor switch, and secondary switch operate normally.
2. After replacing the door, check for microwave energy leakage with a survey meter. Microwave energy must be below the limit of 4 mW/cm². (with a 275 ml water load)
3. When mounting the door assembly to the oven assembly, be sure to adjust the door assembly parallel to the chassis. Also adjust so the door has no play between the inner door surface and oven frame assembly. If the door assembly is not mounted properly, microwaves may leak from the clearance between the door and the oven.

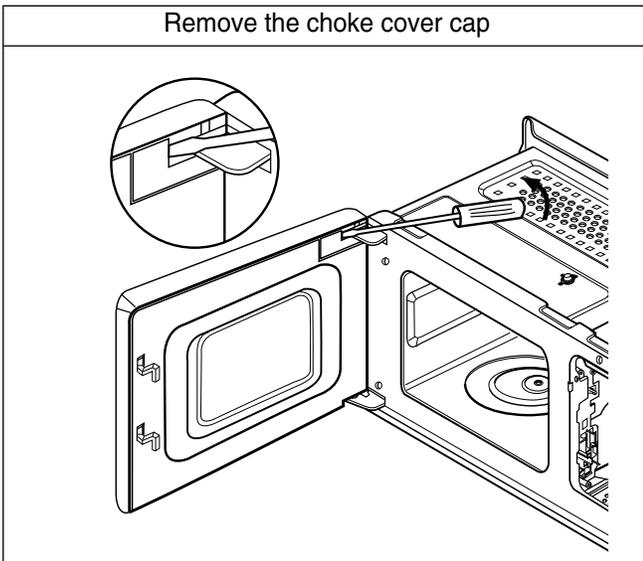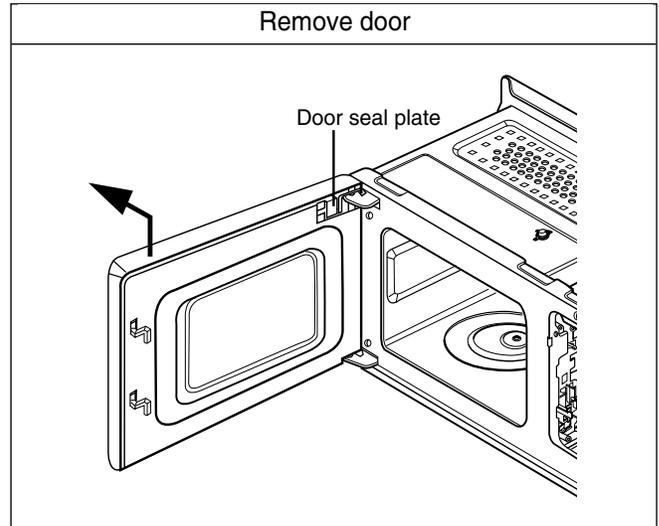


E. MAGNETRON REMOVAL

- 1) Disconnect the leadwire from high voltage transformer and high voltage capacitor.
- 2) Carefully remove the mounting screws holding the magnetron and the waveguide.
- 3) Remove the magnetron assembly until the tube is clear from the waveguide.

NOTE:

1. When removing the magnetron, make sure its dome does not hit any adjacent parts, or it may be damaged.

2. When replacing the magnetron, be sure to install the magnetron gasket in the correct position and be sure that the gasket is in good condition.
3. After replacing the magnetron, check for microwave energy leakage with a survey meter around the magnetron. Microwave energy must be below the limit of $5\text{mW}/\text{cm}^2$. (With a 275 ml. water load). Make sure that gasket is rigidly attached to the magnetron. To prevent microwave leakage, tighten the mounting screws properly making sure there is no gap between the waveguide and the magnetron.

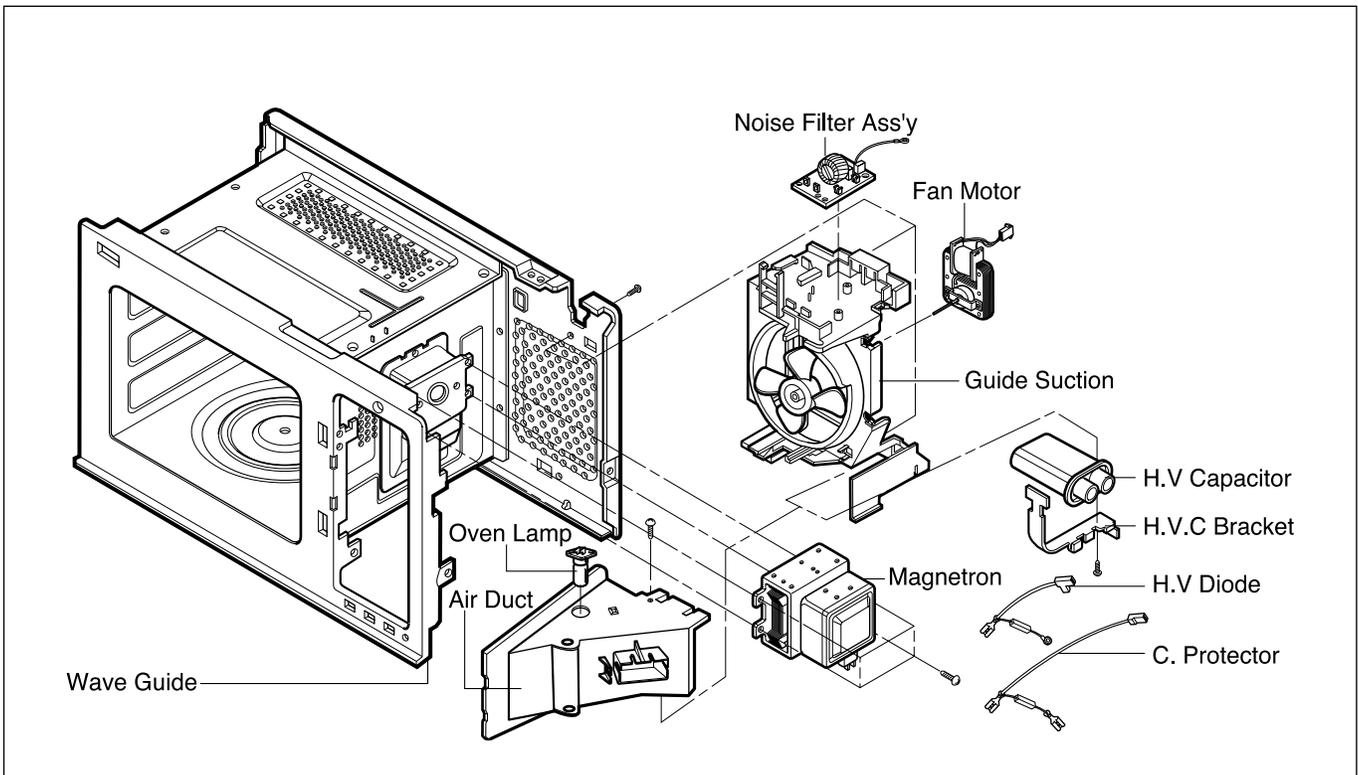

F. NOISE FILTER ASS'Y HIGH VOLTAGE DIODE, HIGH VOLTAGE CAPACITOR, AND COOLING FAN MOTOR REMOVAL


- 1) Disconnect lead wires from the noise filter ass'y and remove screw securing the noise filter earth wire to the back plate.
- 2) Push two hook of the guide suction and lift up the rear of noise filter ass'y.
- 3) Disconnect lead wires from H.V. capacitor and remove screw securing the H.V. diode earth wire to the back plate.
- 4) Disconnect each lead wires from the AC relay and the fan motor.
- 5) Remove two screws securing the guide suction ass'y to the back plate and lift up the guide suction ass'y.
- 6) Remove one screw from H.V. capacitor bracket.
- 7) Pull H.V. capacitor bracket from the guide suction.
- 8) Remove the fan from the fan motor.
- 9) Remove two screws securing the fan motor to the guide suction and lift it up.

G. OVEN LAMP REMOVAL

- 1) Disconnect the wire leads from oven lamp.
- 2) Remove one screw securing the Air Duct to the magnetron.
- 3) Push hook to Right and Left of Air Duct, with Drive.
- 4) Lift the oven Lamp up.


H. HIGH VOLTAGE TRANSFORMER REMOVAL

- 1) Disconnect the wire leads from the transformer to the magnetron, C. Protector ASS'Y assembly.
- 2) Remove four screws securing the H.V. transformer to the base plate.
- 3) Lift the H.V. transformer up.

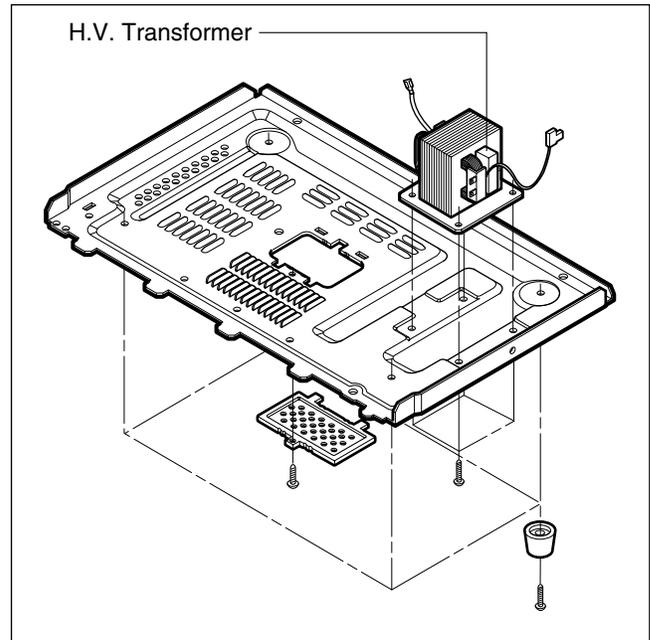


I. C-MOTOR, THERMISTOR AND SHEATH HEATER REMOVAL

- 1) Remove the two screws securing the cover assembly to the oven cavity.
- 2) Disconnect the leadwire from the circulation motor terminal and the sheath heater.
- 3) Remove the screws of the thermistor, guide assy-chamber and lift up the guide assy-chamber.
- 4) Remove a hex nut securing the circulation fan to shaft of the C-motor.
- 5) Remove screws securing the motor bracket to the guide assy-chamber.
- 6) Remove two hex nuts securing the C-motor to the motor bracket.

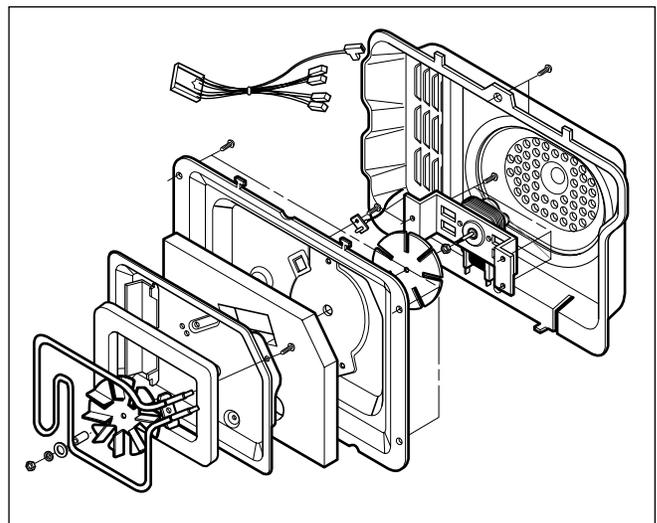

J. TURNTABLE MOTOR REMOVAL

- 1) Remove the turntable.
- 2) Remove the turntable shaft VERY CAREFULLY with a slotted screw driver.
- 3) Lay the set down on its back.
- 4) Remove the turntable motor cover. The turntable motor base cover is easily removed by pinching the six parts with a wire cutting.
- 5) Disconnect the lead wires from the turntable motor terminals.
- 6) Remove two screws securing the turntable motor to the oven cavity assembly.
- 7) Lift the turntable motor and mount turntable motor.
- 8) After repairing the motor, fit the turntable motor cover's projecting part to the base plate's slit.

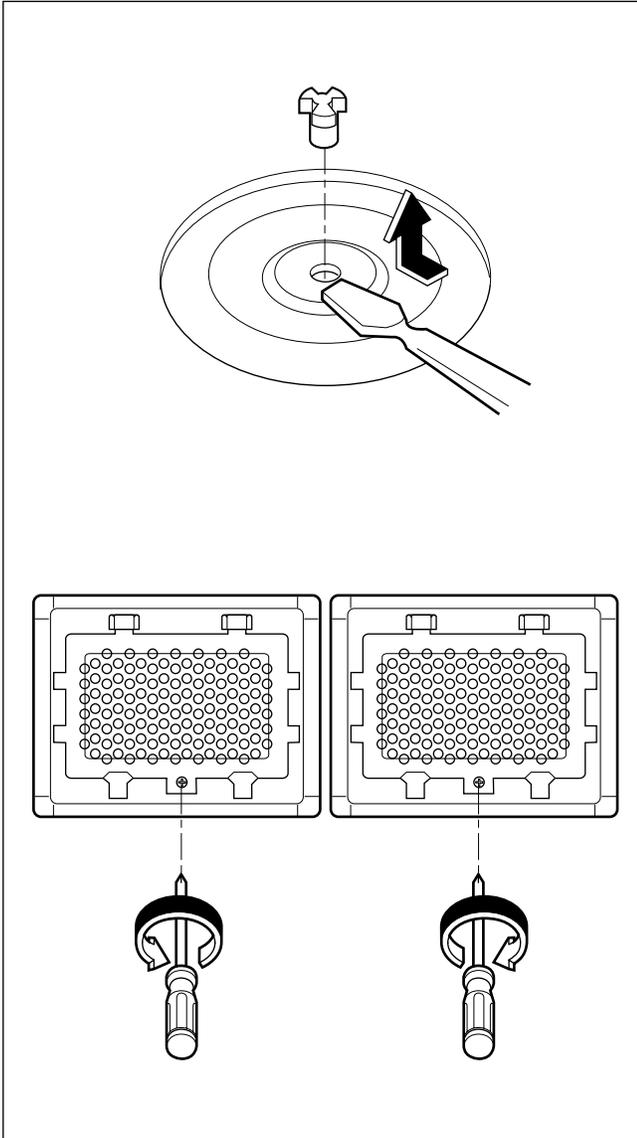


K. INTERLOCK SYSTEM

1) INTERLOCK MECHANISM

The door lock mechanism is a device which has been specially designed to completely eliminate microwave activity when the door is opened during cooking and thus to prevent the danger resulting from the microwave leakage.

2) MOUNTING OF THE PRIMARY, MONITOR AND SECONDARY SWITCH TO THE LATCH BOARD

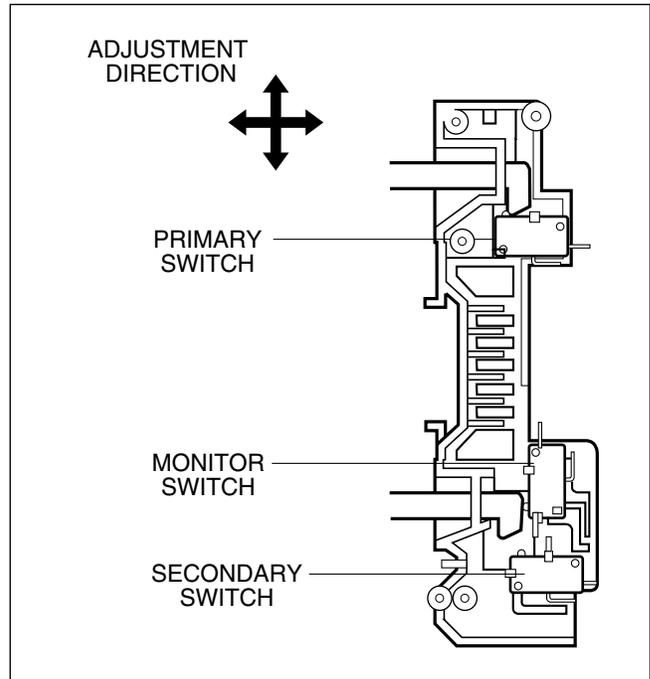

3) INSTALLATION AND ADJUSTMENT OF THE LATCH BOARD TO THE OVEN ASSEMBLY

- Mount the latch board to the oven assembly.
- Adjust the latch board in the arrow direction so the oven door will not have any play in it when the door is closed.
- Tighten the mounting screw.
- Check for play in the door by pushing the door release button. Door movement should be less than 0.5mm. (1/64inch)

Don't push the door release button while making adjustment. Make sure that the latch moves smoothly after adjustment are completed and that the screws are tight. Make sure the primary/monitor/secondary switch operate properly by following the continuity test procedure.

Interlock continuity Test

WARNING : FOR CONTINUED PROTECTION AGAINST EXCESSIVE RADIATION EMISSION, REPLACE ONLY WITH IDENTICAL REPLACEMENT PARTS.

TYPE NO.SZM-V 16-FA-63 OR VP-533A-OF FOR PRIMARY SWITCH
 TYPE NO.SZM-V 16-FA-62 OR VP-532A-OF FOR MONITOR SWITCH
 TYPE NO.SZM-V 16-FA-63 OR VP-533A-OF FOR SECONDARY SWITCH

A. PRIMARY INTERLOCK SWITCH TEST




When the door button is slowly depressed with the door closed, an audible "click" should be heard at the same time or successively at intervals. When the button is slowly released, the latches should activate the switches with an audible "click". If the latches do not activate the switches when the door is closed, the switches should be adjusted in accordance with adjustment procedure. Disconnect the wire lead from the primary switch. Connect the multimeter leads to the common (COM) and normally open (NO) terminal of the switch. The meter should indicate an open circuit in the door open condition.
 When the door is closed, the meter should indicate a closed circuit.
 When the primary switch operation is abnormal, make the necessary adjustment or replace the switch only with the same type of switch.

B. SECONDARY INTERLOCK SWITCH

Disconnect the wire lead from the secondary switch. Connect the multimeter leads to the common (COM) and normally open (NO) terminals of the switch. The meter should indicate a open condition. When the door is closed, meter should indicate an closed circuit. When the secondary switch operation is abnormal, make the necessary adjustment or replace the switch only with the same type of switch.

C. MONITOR SWITCH TEST


Disconnect the wire lead from the monitor switch. Connect the multimeter leads to the common (COM) and normally close (NC) terminals of the switch. The meter should indicate closed circuit in the door open condition. When the door is closed, meter should indicate an closed circuit. When the monitor switch operation is abnormal, replace the same type of switch.



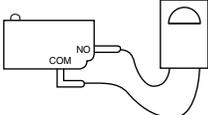
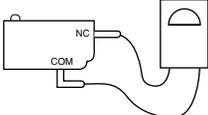
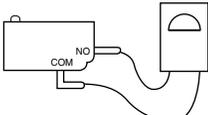
COMPONENTS	TEST PROCEDURE		RESULTS	
SWITCHES (Wire leads removed)	Check for continuity of the switch with a Multi-meter		Door open	Door close
	Primary Switch			
	Monitor Switch			
	Secondary Switch			
<p>NOTE : After checking for the continuity of switches, make sure that are correctly connected.</p>				





Component Test Procedure





CAUTIONS




1. DISCONNECT THE POWER SUPPLY CORD FROM THE OUTLET WHENEVER REMOVING THE OUT CASE FROM THE UNIT. PROCEED WITH THE TEST ONLY AFTER DISCHARGING THE HIGH VOLTAGE CAPACITOR AND REMOVING THE WIRE LEADS FROM THE PRIMARY WINDING OF THE HIGH VOLTAGE TRANSFORMER. (SEE PAGE 5)
2. ALL OPERATIONAL CHECKS WITH MICROWAVE ENERGY MUST BE DONE WITH A LOAD (1 LITER OF WATER IN CONTAINER) IN THE OVEN.

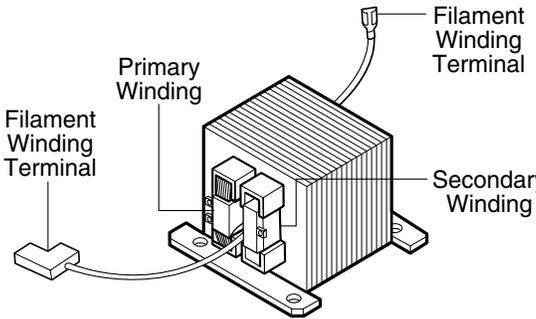COMPONENTS	TEST PROCEDURE	RESULTS
<p>HIGH VOLTAGE TRANSFORMER (Wire leads removed)</p>	 <p>1. Measure the resistance. (Multi-meter scale: R X 1)</p> <ul style="list-style-type: none"> • Primary winding • Secondary winding • Filament winding <p>2. Measure the resistance. (Multi-meter scale: Rx1000)</p> <ul style="list-style-type: none"> • Primary winding to ground • Filament winding to ground 	<p>Approx.: 1.4 Ω Approx.: 90 Ω Less than: 0.1 Ω</p> <p>Normal: ∞ Normal: ∞</p>
<p>MAGNETRON (Wire leads removed)</p>	<p>1. Measure the resistance. (Multi-meter scale: R X 1)</p> <ul style="list-style-type: none"> • Between filament terminals <p>2. Measure the resistance. (Multi-meter scale: R X 1000)</p> <ul style="list-style-type: none"> • Filament to chassis. 	<p>Normal: Less than 1 Ω</p> <p>Normal: ∞</p>

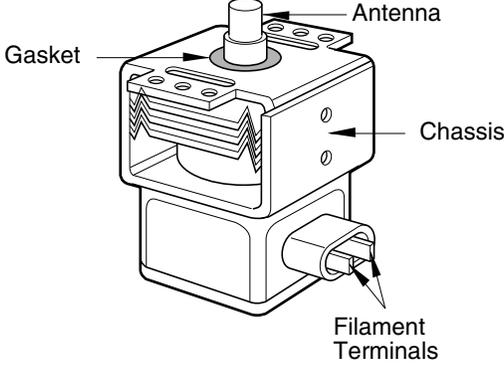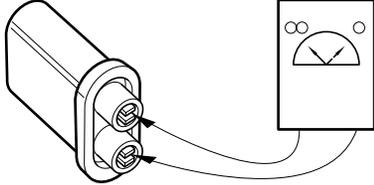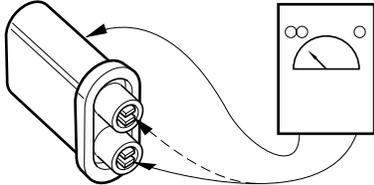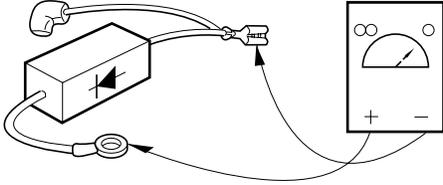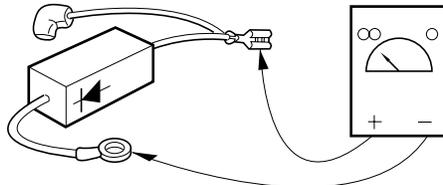COMPONENTS	TEST PROCEDURE	RESULTS
	 <p>NOTE: When testing the magnetron, be sure to install the magnetron gasket in the correct position and be sure that the gasket is in good condition.</p>	
HIGH VOLTAGE CAPACITOR	<p>Measure the resistance. (Multi-meter scale : R x 1000) • Terminal to terminal.</p> 	Normal: Momentarily indicates several ohms, and then gradually returns to infinite.
	<p>Measure the resistance. (Multi-meter scale : R x 1000) • Terminal to case.</p> 	Normal: ∞
HIGH VOLTAGE DIODE	<p>Measure the continuity (Forward). (Multi-meter scale : R x 10000)</p> 	Normal: Continuity. Abnormal: ∞
NOTE : Some inexpensive meter may indicate infinite resistance in both direction.	<p>Measure the continuity (Reverse). (Multi-meter scale : R x 10000)</p> 	Normal: ∞ Abnormal: Continuity.

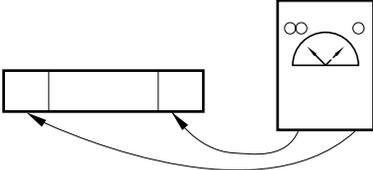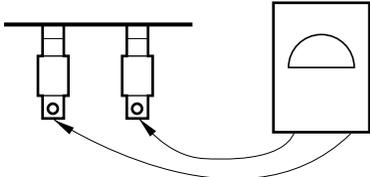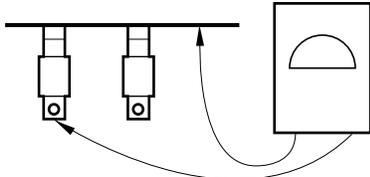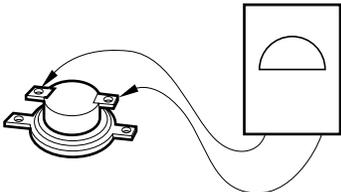COMPONENTS	TEST PROCEDURE	RESULTS	
		Normal	Abnormal
FUSE (Wire leads removed.)	Check for continuity of the switch with a Multi-meter. 		
		NOTE : If the fuse is blown, check the primary, the secondary, and the monitor switches, H.V.D. and H.V.C. before replacing the fuse. If the fuse is blown by improper switch operation replace the defective switch and the fuse at the same time. Replace just the fuse if the switches operate normally.	
HEATER ELEMENT (Wire leads removed.)	Measure the resistance. (Multi-meter scale: R x 1) 	Normal: *Grill heater Approx. 40.7 Ω (at 20 ~ 30°C)	
	Measure the resistance with 500V-100M Ω insulation resistance meter. 	Normal: more than 0.5M Ω	
	NOTE: Make sure heater is fully cooled when tested.		
OVEN THERMOSTAT MAGNETRON THERMOSTAT		0°C~Approx 150°C	Approx 150°C
			

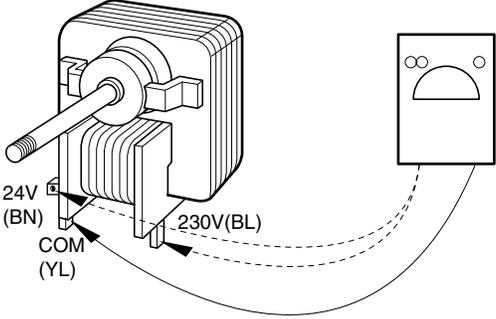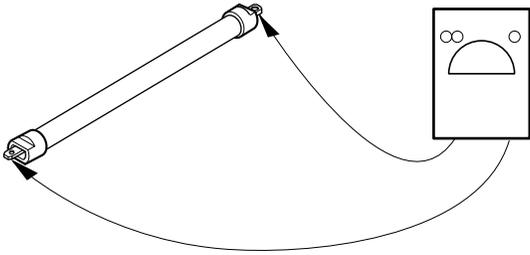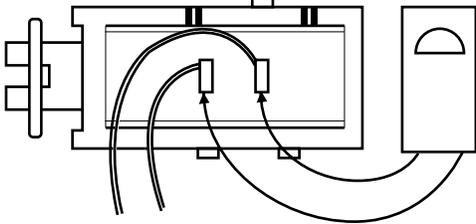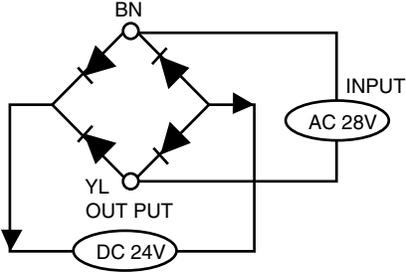COMPONENTS	TEST PROCEDURE	RESULTS
<p>CIRCULATION MOTOR (Wire leads removed)</p> <p>NOTE: *() = WIRE COLOR</p>	<p>Measure the resistance. (Multi-meter scale : R x 1)</p> 	<p>Normal : COM-230V : Approx. 150 Ω COM-24V : Approx. 20 Ω Abnormal : Infinite or several ohm.</p>
<p>GRILL HEATER (Wire leads removed)</p>	<p>Measure the resistance. (Multi-meter scale : R x 1)</p> 	<p>Normal : Approx. 200~300 Ω Abnormal : Infinite or several ohm.</p>
<p>SOLENOID</p>		<p>Normal : Approx. 134 Ω Abnormal : Infinite or several ohm. DC : 24V</p>
<p>RECTIFIRE ASM: VOLTAGE FOR SOLENOID</p>		

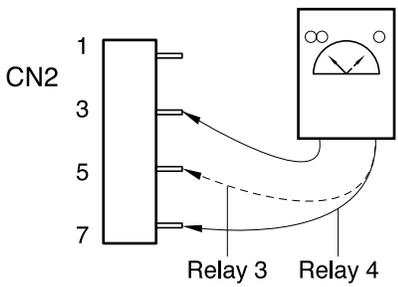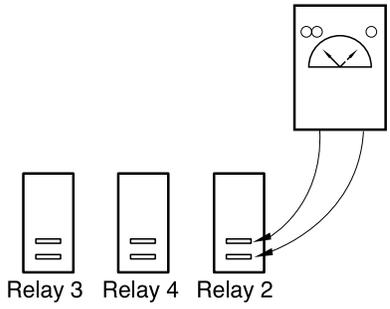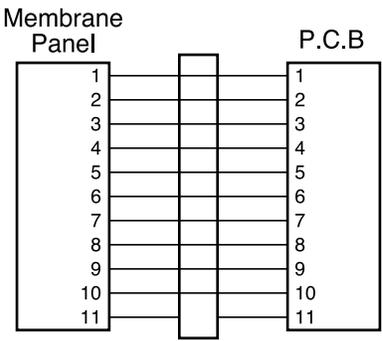COMPONENTS	TEST PROCEDURE	RESULTS	
<p>RELAY 3,4 OF P.C.B (Disconnect the 7 pin connector from P.C.B) See Schematic Diagram on page 9)</p>		Cooking Start	OFF
<p>RELAY 2,3,4 OF P.C.B (Wire leads removed.) RY2 : Microwave RY3 : Grill RY5 : Convection</p>		Cooking Start	OFF
<p>MEMBRANE KEY</p>		<p>Check continuity between switch terminals, by pressing an appropriate pad on key board. The contacts assignment of the respective pads on the key board is as shown left figures.</p>	
<p>NOTE : A MICROWAVE ENERGY LEAKAGE TEST MUST ALWAYS BE PERFORMED WHEN THE UNIT IS SERVICED FOR ANY REASON. MAKE SURE THE WIRE LEADS ARE CORRECT POSITION. WHEN REMOVING THE WIRE LEAD FROM THE PARTS, BE SURE TO GRASP THE CONNECTOR, NOT THE WIRES.</p>			

Trouble Shooting Guide

CAUTIONS

1. Check grounding before checking for other trouble.
2. Be careful of the high voltage circuit.
3. When checking the continuity of the switches or transformer, disconnect one lead wire from these parts and then check continuity without turning the power source on.
4. Do not touch any part of the circuitry on the control circuit board, since static electric discharge may damage this control circuit.
Always touch yourself to ground while working on this circuit to discharge any static charge built up in your body.
5. First operate the microwave oven following the correct operating.
6. If the oven become inoperative because of a fuse, check the primary, the secondary and the monitor switches before replacing the fuse.

(TROUBLE 1) Oven does not operate all.

CONDITION	CAUSE	TEST PROCEDURE OR CORRECTION
OFF CONDITION		
The fuse blows when power cord is plugged into wall receptacle.	Shorted lead wise assy or wire hardness.	Replace lead wire or check and repair wire hardness.
	Defective monitor switch or out of adjustment.	Test procedure switches.
": 0" does not appear in display window when power cord is first plugged into wall outlet.	Microwave oven plug is not inserted tightly.	Insert microwave oven plug securely.
	No power at outlet.	Check home fuse.
	Blown fuse.	Test procedure fuse.
	Open wire in power cord, wiring harness, or wiring between control panel assembly units.	Replace or repair wiring.
Display does not operate properly when CLOCK is touched.	Defective tact switch key of P.C.B.	Test procedure tact switch key.

(TROUBLE 2) Oven does not at all even thought MOTOR and P.C.B program.

CONDITION	CAUSE	TEST PROCEDURE OR CORRECTION
No input can be programmed.	Defective tact switch key of P.C.B.	Test procedure tact switch key of P.C.B.
Some inputs can not be programmed.	Loose connection.	Connect them tightly.
Display shows a number or figure different from one touched.	Incorrect touch key.	Touch key again after closing.
Random programming when pressing other than touch keys.		
Display fixes some figure and can not accept any input.		
Set time does not count down when touched START.	Defective secondary switch or out of adjustment	Test procedure secondary switch.
	Defective tact switch key of P.C.B.	Test procedure tact switch key of P.C.B.
	Loose connection.	Test tact switch key of P.C.B.

(TROUBLE 3) Oven does not operating microwave cooking

CONDITION	CAUSE	TEST PROCEDURE OR CORRECTION
Oven does not go into a cook cycle when START key is touched.	Primary and secondary interlock switches defective or out of adjustment.	Test procedure primary and secondary switches.
	Defective flat cable of P.C.B.	Test procedure flat cable of P.C.B.
	Defective tact switch key of P.C.B.	Test procedure tact switch key of P.C.B.
	Open or loose wiring to above components.	Check and repair wiring.
Ouput power is too low.	Defective fan motor.	Test procedure fan motor.
	Low AC input voltage.	Use the microwave oven at adequate line voltage.
	Food temperature is too low.	This may not be a defect. It is possible that the food should be cooked for a longer period.
Output is too high when you set lower power level.	Defective relay 2 of P.C.B.	Test procedure relay 2 of P.C.B.
	High AC input voltage.	Use the microwave oven at adequate line voltage.
Uneven cooking.	Inconsistent intensity of microwave by their characteristics.	<ol style="list-style-type: none"> 1. Wrap the thinner part with aluminum foil. 2. Use plastic wrap or with a lid. 3. Stir once or twice while cooking soup, cocoa or milk etc.
	Food does not turn during cook cycle.	Food or cookware extending oven edges of turntable prevents turning rearrange food.
	Turntable motor does not operate.	Refer to preceding turntable motor problem.


(TROUBLE 3) Oven does not operating microwave cooking

CONDITION	CAUSE	TEST PROCEDURE OR CORRECTION
No microwave oscillation.	Defective relay 2 of P.C.B.	Test procedure relay 2 of P.C.B.
	Defective high voltage transformer.	Test procedure high voltage transformer.
	Defective high voltage capacitor.	Test procedure high voltage capacitor.
	Defective high voltage diode.	Test procedure high voltage diode.
	Defective magnetron.	Test procedure magnetron.
	Low AC input voltage.	Use the microwave oven at adequate line voltage.
	Open or loose wiring to above components.	Check and repair wiring.
	Blown fuse	Check fuse
Spark occurring.	Using metallic ware and allowing it to touch the oven wall.	Do not use metallic ware for cooking except where noted in the cookbook.
	Ceramic ware trimmed in gold or silver powder is used.	Do not use any type of cook ware with metallic trimming.
	Grill rack is using in no load condition.	Do not use the oven at microwave and combination mode with the grill rack placed in the cavity when the oven is empty.

(TROUBLE 4) Oven does not operate convection cooking

CONDITION	CAUSE	TEST PROCEDURE OR CORRECTION
Convection indicator lights but oven does not go into cook cycle when START key is touched.	Defective circulation motor wire ass'y.	Check and repair C-Motor wire ass'y. (COM:YL, 24V:BN, 230V:BL)
	Defective circulation MOTOR.	Check and replace C-Motor.
	Defective thermistor.	Test procedure thermistor.
	Defective Relay 4, 8.	Test procedure relay 4, 8 of P.C.B.
F1, F2, F5 is Fail display	Thermistor short (F1)	Replace thermistor
	No sensing of thermistor (F2)	
	High initial temperature of oven cavity. (F5)	Wait until low temperature of oven cavity.
Temperature in the oven cavity is lower or higher than preset.	Defective relay 3, 4 or relay 8.	Test procedure relay 3, 4 or relay 8 of P.C.B.
	Defective convection heater element.	Test procedure convection heater.
	Defective grill heater element.	Test procedure grill heater.
	Defective circulation Motor.	Check the rotating of circulation fan.
	Defective or disconnected thermistor.	Test or replace thermistor.
	Defective Solenoid	Test or Replace Solenoid
	Defective Rectifire ASM	Check Diode(4pcs) or Replace Rectifire ASM
	Defective DAMPER of Airduct	Check or Repair Damper Pin and spring.

(TROUBLE 5) Oven does not operating Grill cooking

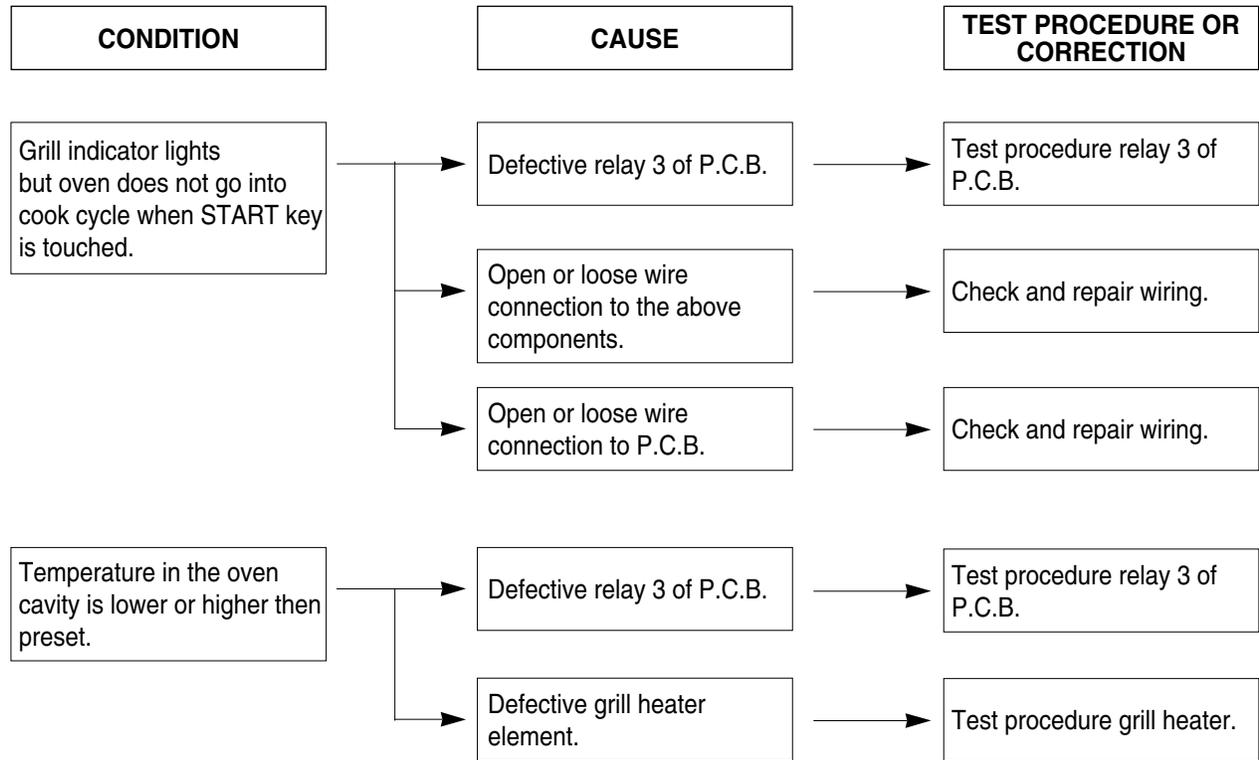


NOTE : • MAKE SURE THE WIRE LEADS CORRECT POSITION.


- WHEN REMOVING THE WIRE LEADS FROM THE PARTS, BE SURE TO GRASP THE CONNECTOR, AND NOT THE WIRES.
- WHEN REMOVING THE MAGNETRON, BE SURE TO INSTALL THE MAGNETRON GASKET IN THE CORRECT POSITION AND GOOD CONDITION.

EXPLODED VIEW


INTRODUCTION

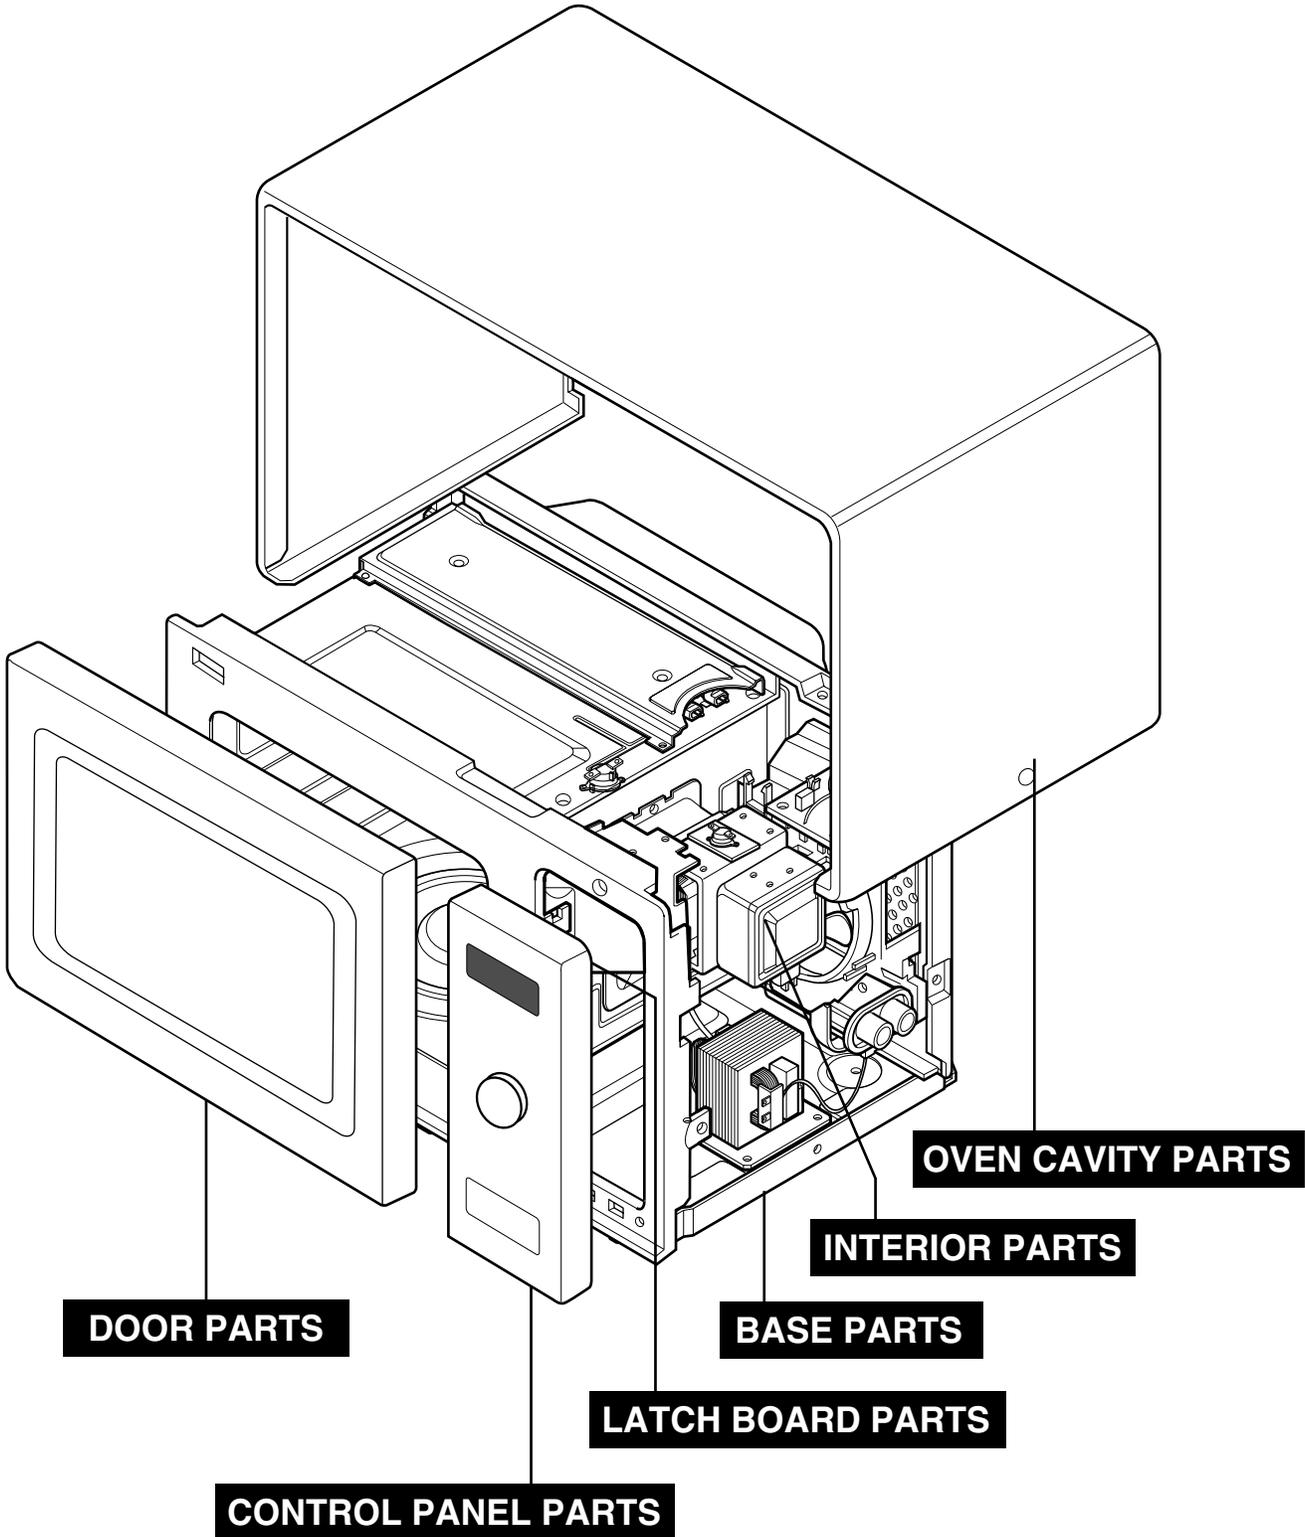


DOOR PARTS

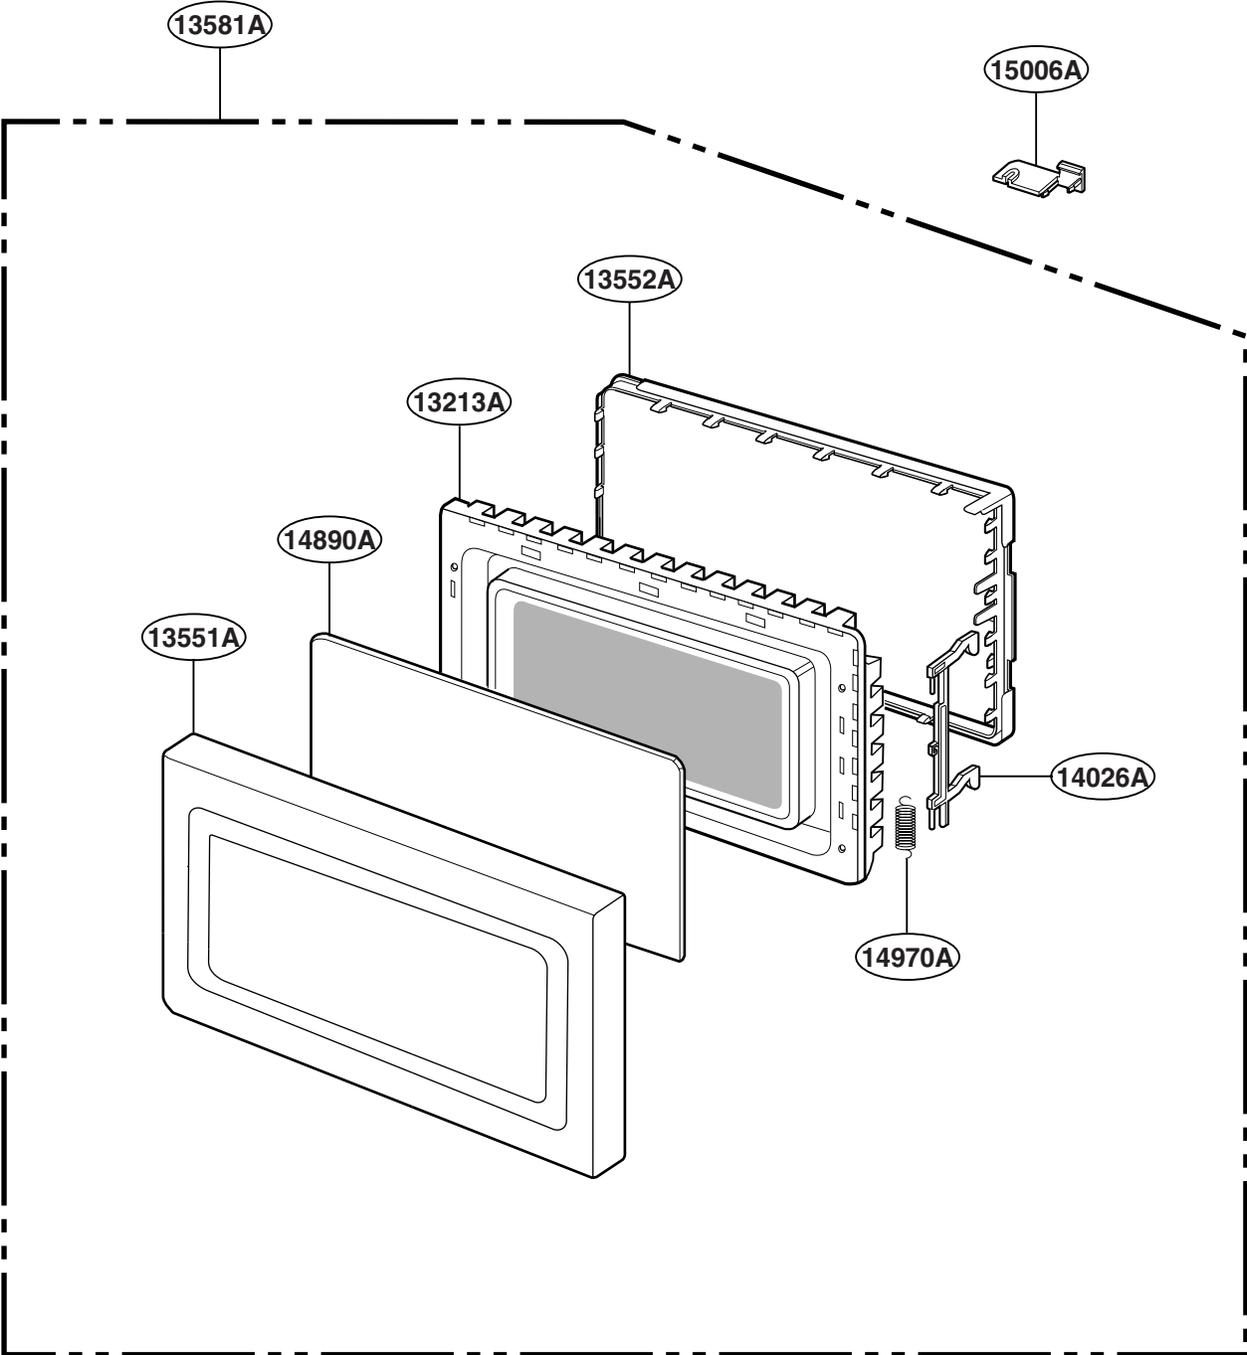


CONTROL PANEL PARTS

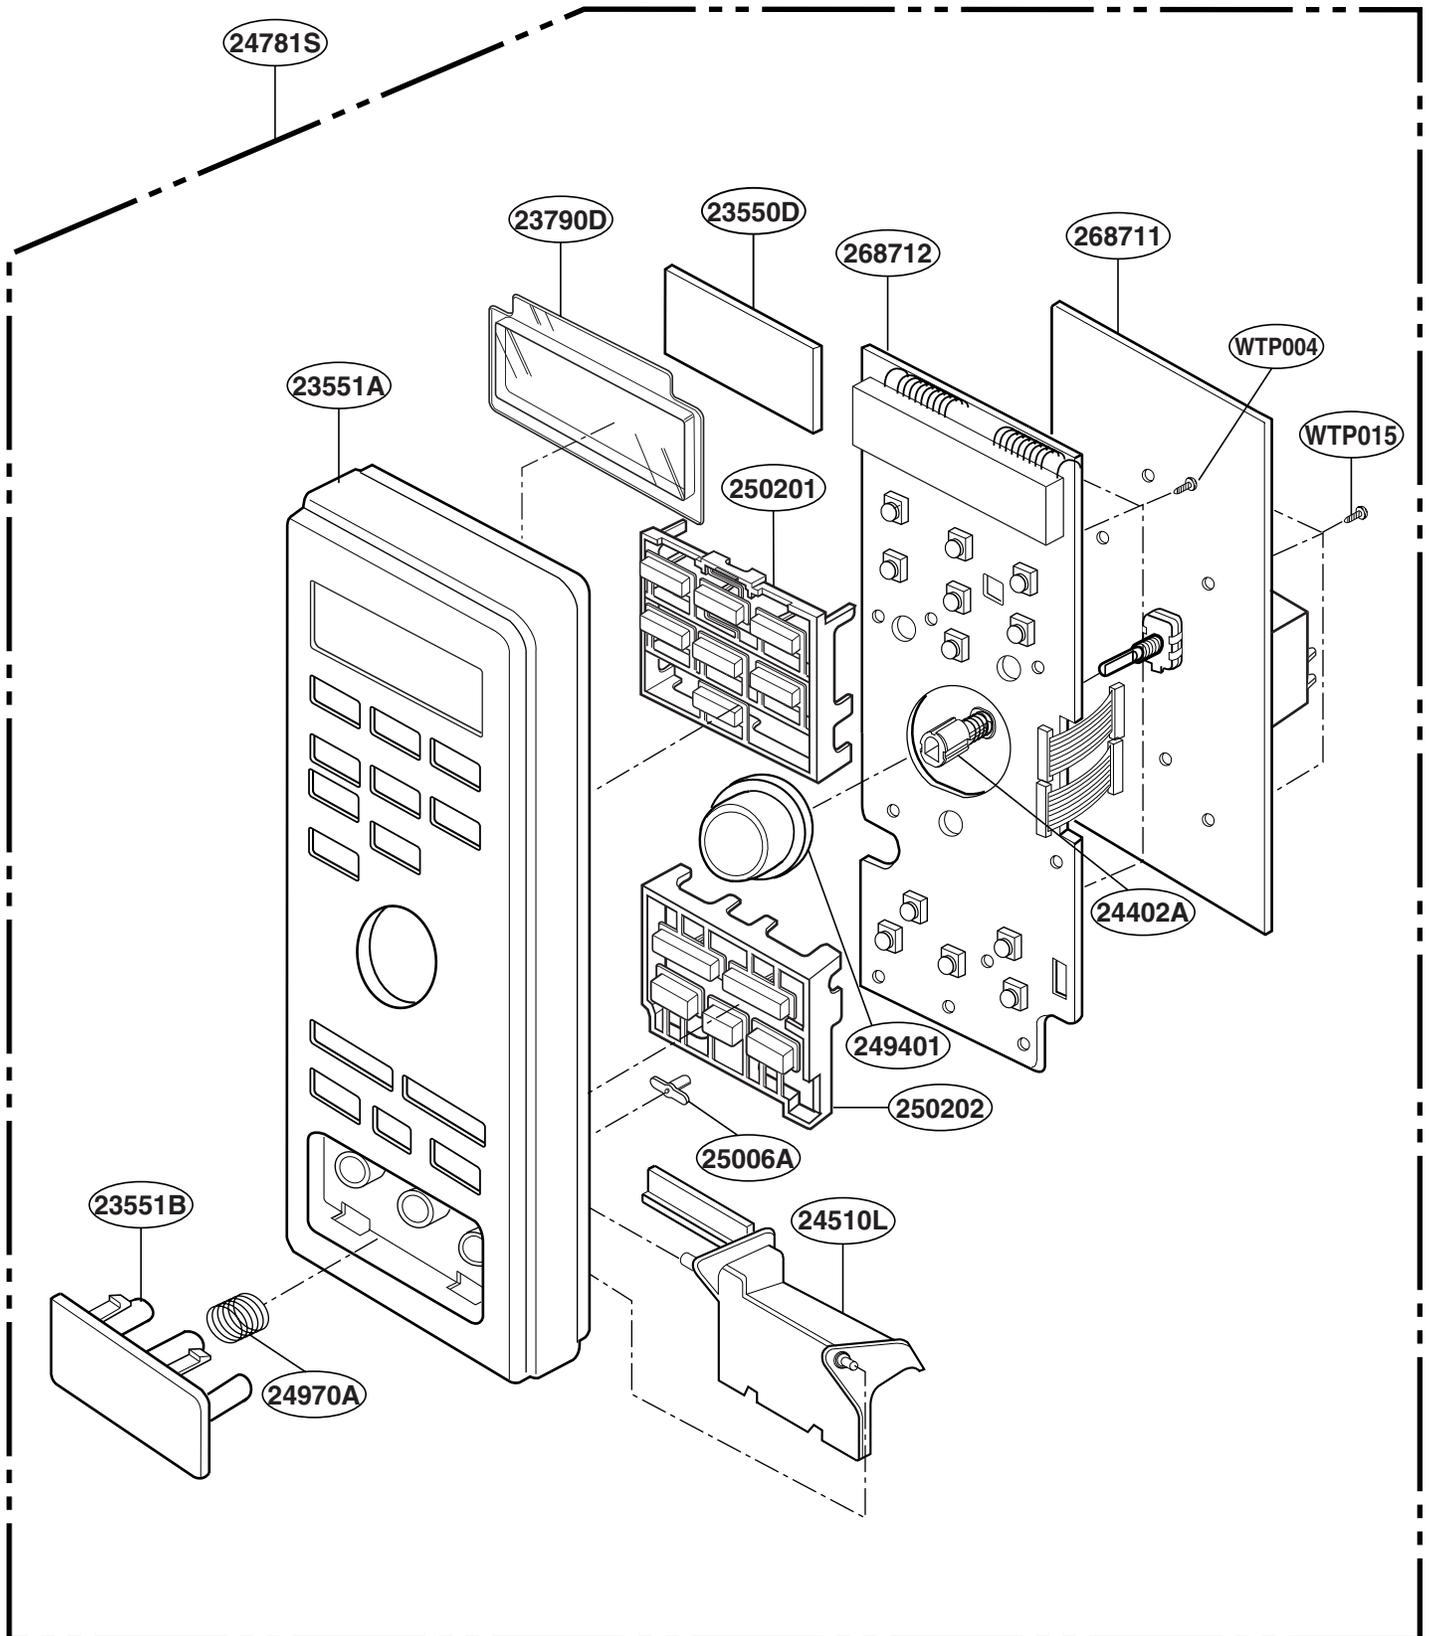


OVEN CAVITY PARTS

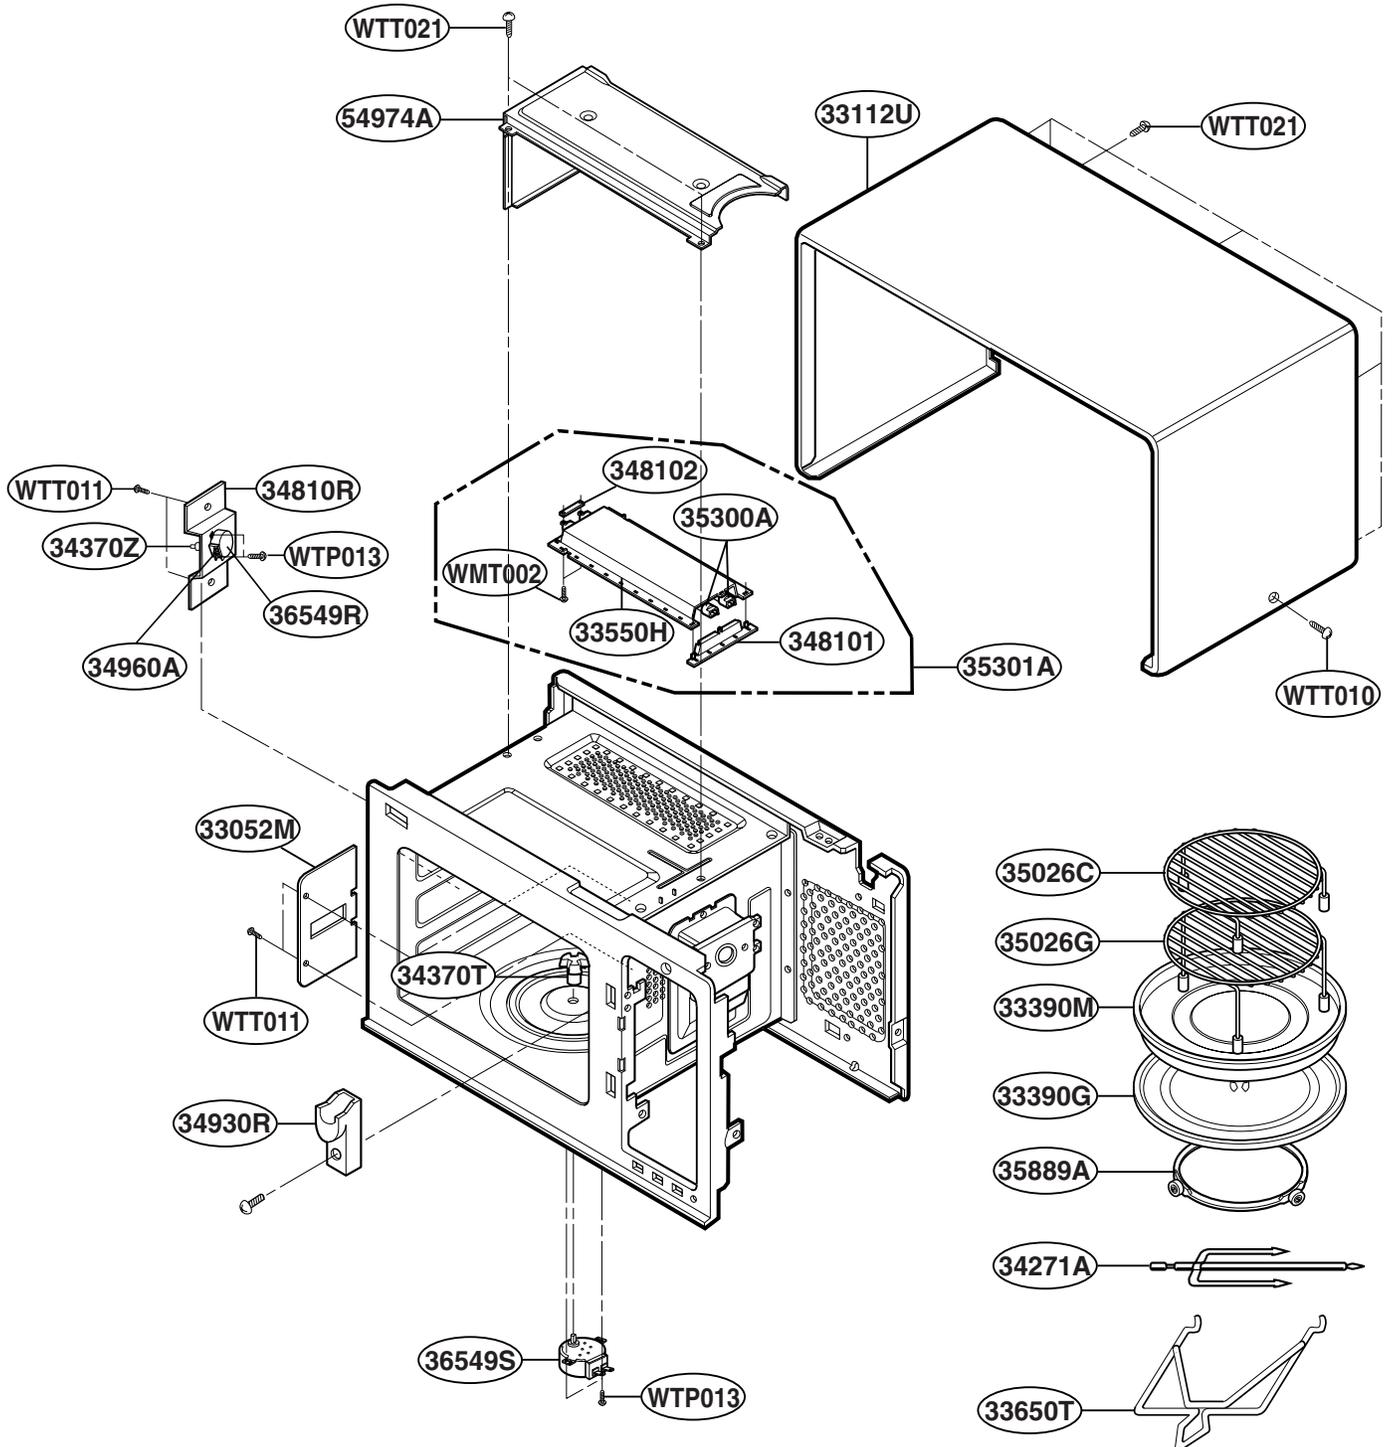

LATCH BOARD PARTS

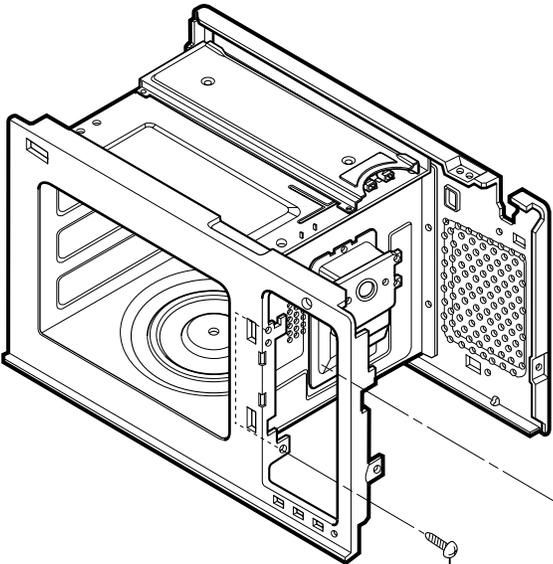

WSZ085

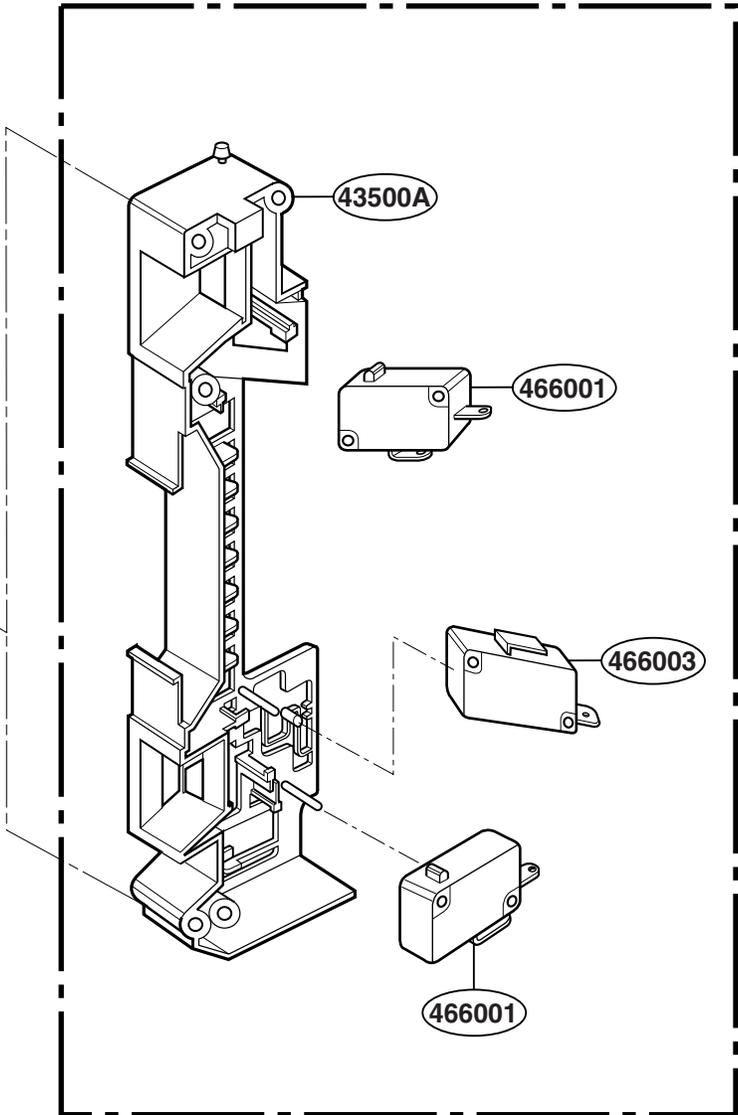

43500A


466001

466003

466001

43501A

INTERIOR PARTS

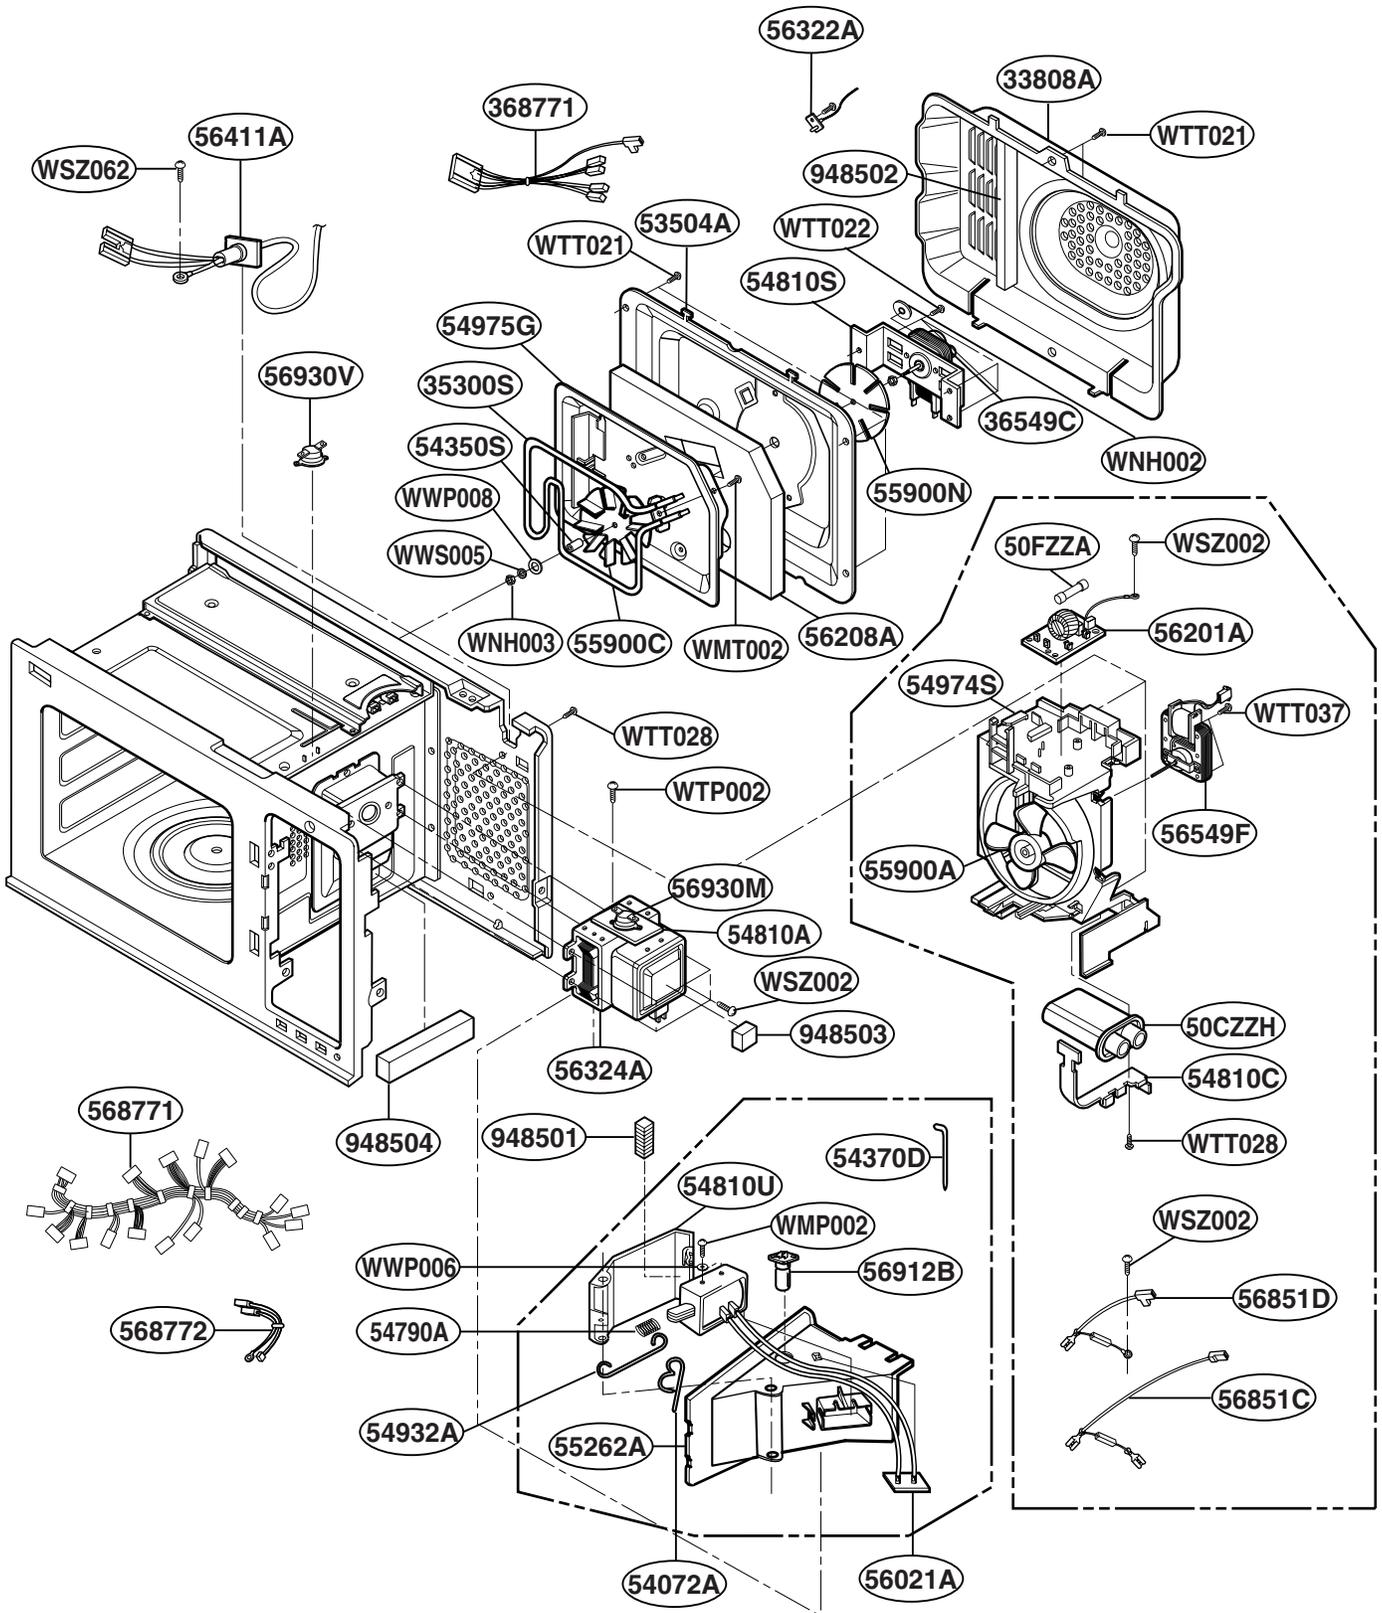

BASE PLATE PARTS

